# SKI-III

Operator's Guide

Includes Safety, Vehicle and Maintenance Information

SUPPLE/MENT

®™ TRADEMARKS OF BOMBARDIER INC. OR ITS SUBSIDIARIES. ©2003 BOMBARDIER INC. ALL RIGHTS RESERVED. PRINTED IN CANADA.

This Supplement must be used in conjunction with 2004 ZX<sup>™</sup> Series REV<sup>™</sup> Series Operator's Guide (P/N 520 000 361).

REV™ SDI manual start

# **⚠ WARNING**

Read this supplement thoroughly. It contains important safety information.

Minimum recommended operator's age: 16 years old. Minimum recommended passenger's age (if applicable): 16 years old.

Do not remove this Operator's Guide supplement from the vehicle.

BOMBARDIER

# SAFETY WARNING

Disregarding any of the safety precautions and instructions contained in this *Operator's Guide Supplement, Safety Videocassette* or on-product warnings may result in injury, including the possibility of death.

This Operator's Guide Supplement and Safety Videocassette should remain with the unit at time of resale.




Dear 2004 REV SDI Manual Start owner, in addition to the informations in the 2004 ZX $^{\text{TM}}$  Series REV $^{\text{TM}}$  Series Operator's Guide (P/N 520 000 361), the following also applies to your model.

## **ON-VEHICLE IMPORTANT INSTRUCTIONS**

The following instruction is also on your snowmobile. If missing or damaged, this decal can be replaced free of charge. See an authorized SKI-DOO dealer.

Please read the following instruction carefully before operating this snowmobile.

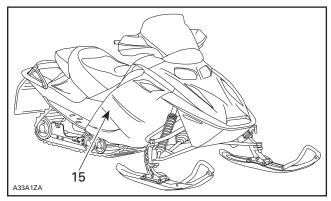

 $\begin{array}{l} \mathit{TYPICAL} - \mathit{LOCATION} \ \mathit{OF} \ \mathit{A} \ \mathit{SPECIFIC} \ \mathit{DECAL} \ \mathit{ON} \ \mathit{REV} \ \mathit{SDI} \ \mathit{MANUAL} \ \mathit{START} \\ \mathit{MODELS} \end{array}$ 

#### Instruction 15

# AVERTISSEMENT Le condensateur peut

produire une étincelle si court-circuité.

- Une étincelle peut enflammer les vapeurs d'essence.
- Garder tout objet éloigné des bornes.
- des bornes.

   Si démonté du véhicule, touiours décharger

adéquatement.

### A33A20A

## **A** WARNING

# Capacitor May Spark If Shorted.

- Spark can ignite fuel vapors.
- Keep objects away from poles.
- When removing from vehicle, always discharge properly.



REV SDI MANUAL START MODELS