



⚠ WARNING

For safety reasons, this kit must be installed by an authorized Ski-Doo® snowmobile dealer. Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser. This kit is designed for specific applicable models only. It is not recommended for units other than those for which it was sold.

NOTE: Installation time is approximately 0.5 hour.

Refer to following photos.


PARTS TO BE INSTALLED

Kit consists of:


- 1. Cover (P/N 510 003 866) (not illustrated)

INSTRUCTION

Remove tail/stop lamp lens and housing.
Disconnect wiring connector and set lamp aside.
Remove seat and place it on a clean working bench.
Remove existing cover; pull out anchor belt by twisting its retaining plate from inside storage compartment.
Draw a first line on foam at 13 mm (1/2 in) from most forward edge of backrest and a second line at 38 mm (1-1/2 in) further rear, parallel to first line.
Draw another line, vertically, in line with top of seat foam, crossing the 2 previously drawn lines.

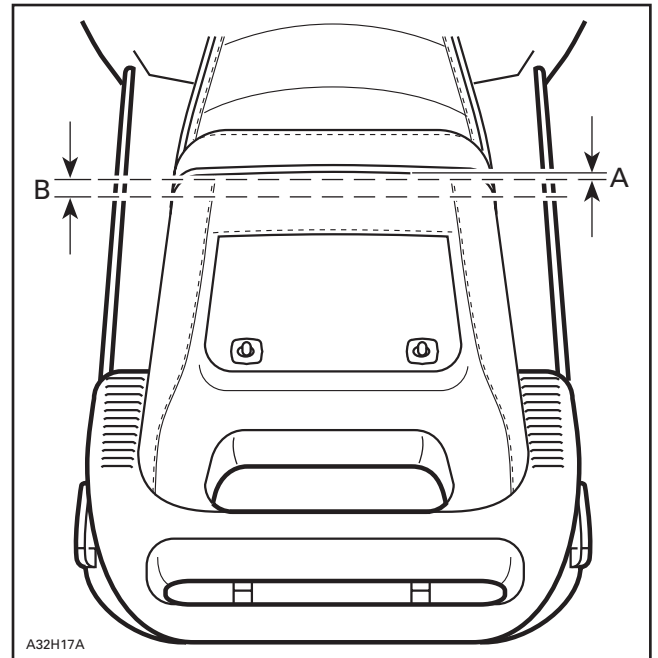

A. 13 mm (1/2 in)
B. 38 mm (1-1/2 in)

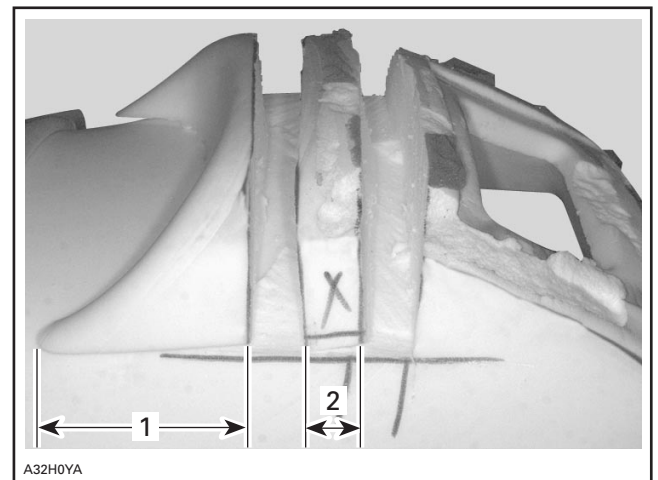


ALREADY CUT AND SEPARATED

- 1. Front part
- 2. Rear part

Using a hacksaw blade, cut foam on the 2 first lines and then on the vertical line; keep front part and discard rear part.

Glue front part to remaining foam using Lepage[†] Pres-tite or equivalent contact glue applied on the entire surface; refer to following photo.

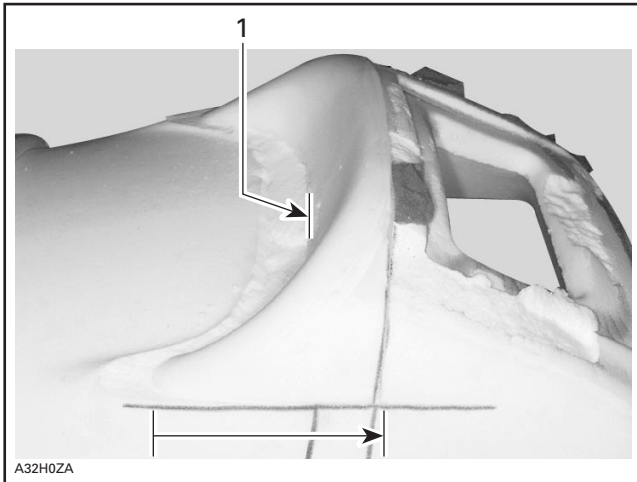

FRONT PART GLUED ON REMAINING FOAM

1. Cut here 152 mm (6 in) long

Allow drying period as recommended on supplier's glue container.

Cut bottom rear corner of foam 152 mm (6 in) in length to insert anchor belt.

Install new cover and insert anchor belt through the 152 mm (6 in) cut; working from inside storage compartment, twist retaining plate so it locks belt in place.

Staple cover all around.

Install seat.

Connect tail/stop lamp wiring connectors.

Secure housing and lens.

Installation is now complete.

⚠ WARNING

Sled does not become a two-up seater after this installation.

[†] Trademark of Henkel.