

SAFETY NOTICE

This manual has been prepared as a guide to correctly service and repair 2013 Ski-Doo® snowmobiles described in the list in the *INTRODUCTION*.

This edition was primarily published to be used by technicians who are already familiar with service procedures relating to Bombardier Recreational Products Inc. (BRP) products. Mechanical technicians should attend continuous training courses given by BRPTI.

Please note that the instructions will apply only if proper hand tools and special service tools are used.

NOTE: Indicates supplementary information needed to fully complete an instruction.

Although the mere reading of such information does not eliminate the hazard, your understanding of the information provided will promote its correct use. Always use common shop safety practice.

It is understood that this manual may be translated into another language. In the event of any discrepancy, the English version shall prevail.

BRP disclaims liability for all damages and/or injuries resulting from the improper use of the con-

INTRODUCTION

This Shop Manual covers the following BRP made 2013 snowmobiles:

CHASSIS	ENGINE
REV-XS	600 HO E-TEC
	800R E-TEC
REV-XM	600 HO E-TEC
	800R E-TEC


The information and component/system descriptions contained in this manual are correct at time of writing. BRP however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured.

Due to late changes, there may be some differences between the manufactured product and the description and/or specifications in this document.

BRP reserves the right at any time to discontinue or change specifications, designs, features, models or equipment without incurring obligation.


VEHICLE INFORMATION

VEHICLE IDENTIFICATION NUMBER (VIN)

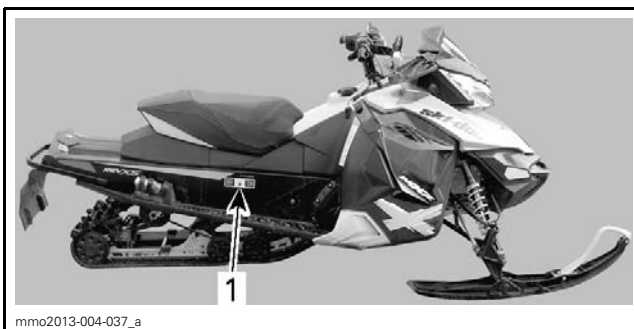

TYPICAL
1. Vehicle identification number


Identification Number Description

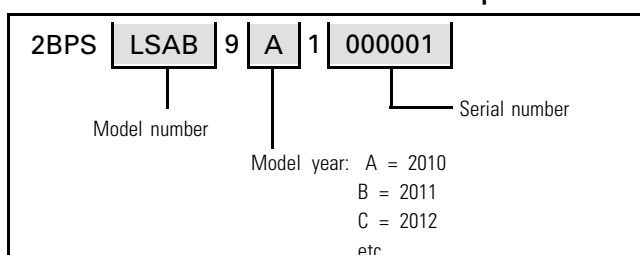

ENGINE SERIAL NUMBER



TYPICAL — 600 HO E-TEC
1. Engine serial number

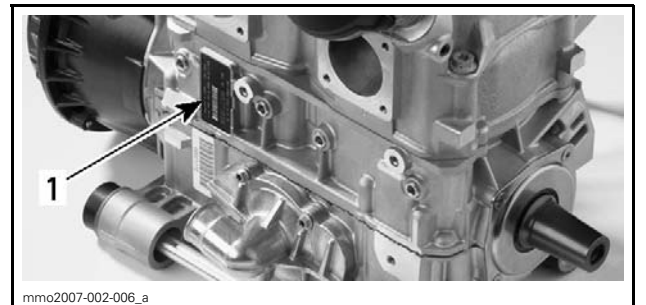

TYPICAL — 800R E-TEC
1. Engine serial number

SNOWMOBILE LIFTING


To lift the snowmobile securely, it is important to use the reinforced footrest holes.



1. Reinforced holes in footrest

Install lifting tool hooks in holes as shown.

INTRODUCTION

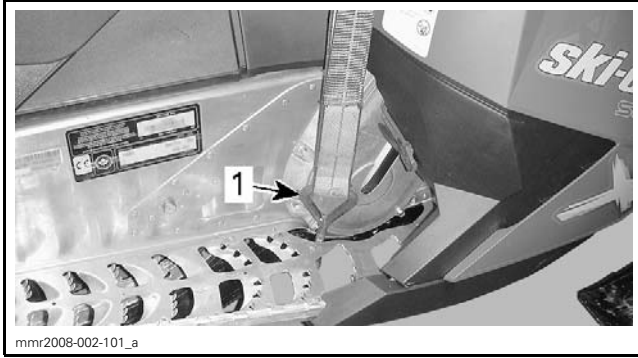

1. Hook of lifting tool

NOTICE Do not use footrest opening or steering column to lift the snowmobile. Frame or steering system could be seriously damaged.

ENGINE EMISSIONS INFORMATION

Manufacturer's Responsibility

Manufacturers of engines must determine the exhaust emission levels for each engine horsepower family and certify these engines with the United States of America *ENVIRONMENTAL PROTECTION AGENCY (EPA)*. An emissions control information label, showing emission levels and engine specifications, must be placed on each vehicle at the time of manufacture.

Dealer Responsibility

When servicing any snowmobile that carries an emissions control information label, adjustments must be kept within published factory specifications.

Replacement or repair of any emission related component must be executed in a manner that maintains emission levels within the prescribed certification standards.

Dealers are not to modify the engine in any manner that would alter the engine power or allow emission levels to exceed their predetermined factory specifications.

Exceptions include manufacturer's prescribed changes, such as altitude adjustments for example.

Owner Responsibility

The owner/operator is required to have engine maintenance performed to maintain emission levels within prescribed certification standards.

The owner/operator is not to, and should not allow anyone else to modify the engine in any manner that would alter the engine power or allow emissions levels to exceed their predetermined factory specifications.

EPA Emission Regulations

Snowmobiles manufactured by BRP are certified to the EPA standards as conforming to the requirements of the regulations for the control of air pollution emitted from new snowmobiles engines. This certification is contingent on certain adjustments being set to factory standards. For this reason, the factory procedure for servicing the product must be strictly followed and, whenever practicable, returned to the original intent of the design.

The responsibilities listed above are general and in no way a complete listing of the rules and regulations pertaining to the EPA requirements on exhaust emissions for snowmobiles products. For more detailed information on this subject, you may contact the following locations:

FOR ALL COURIER SERVICES:

U.S. Environmental Protection Agency
Office of Transportation and Air Quality
1310 L Street NW
Washington D.C. 20005

REGULAR US POSTAL MAIL:

1200 Pennsylvania Ave. NW
Mail Code 6403J
Washington D.C. 20460

INTERNET: <http://www.epa.gov/otaq/>

E-MAIL: otaqpublicweb@epa.gov


MANUAL INFORMATION

MANUAL PROCEDURES

Many of the procedures in this manual are inter-related. Before undertaking any task, you should read and thoroughly understand the entire section or subsection in which the procedure is contained.

A number of procedures throughout the book require the use of special tools. Before starting any procedure, be sure that you have on hand all required tools, or their approved equivalents.

The use of RIGHT and LEFT indications in the text are always referenced to the driving position (sitting on the vehicle).

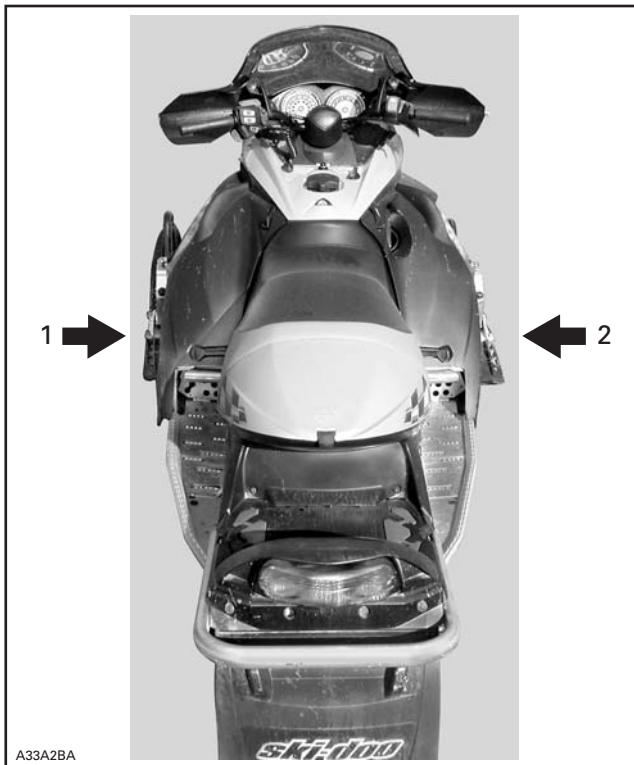

A33A2BA

TYPICAL
1. Left
2. Right

This manual uses technical terms which may be different from the ones of the *PARTS CATALOGS*. When ordering parts always refer to the specific model *PARTS CATALOGS*.

MANUAL LAYOUT

This manual is divided into many major sections as can be seen in the main table of contents at the beginning of the manual.

Each section is divided into various subsections, and again, each subsection has one or more divisions.

Illustrations and photos show the typical construction of various assemblies and, in all cases, may not reproduce the full detail or exact shape of the parts used in a particular model vehicle. However, they represent parts which have the same or a similar function.




Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

INTRODUCTION

TYPICAL PAGE

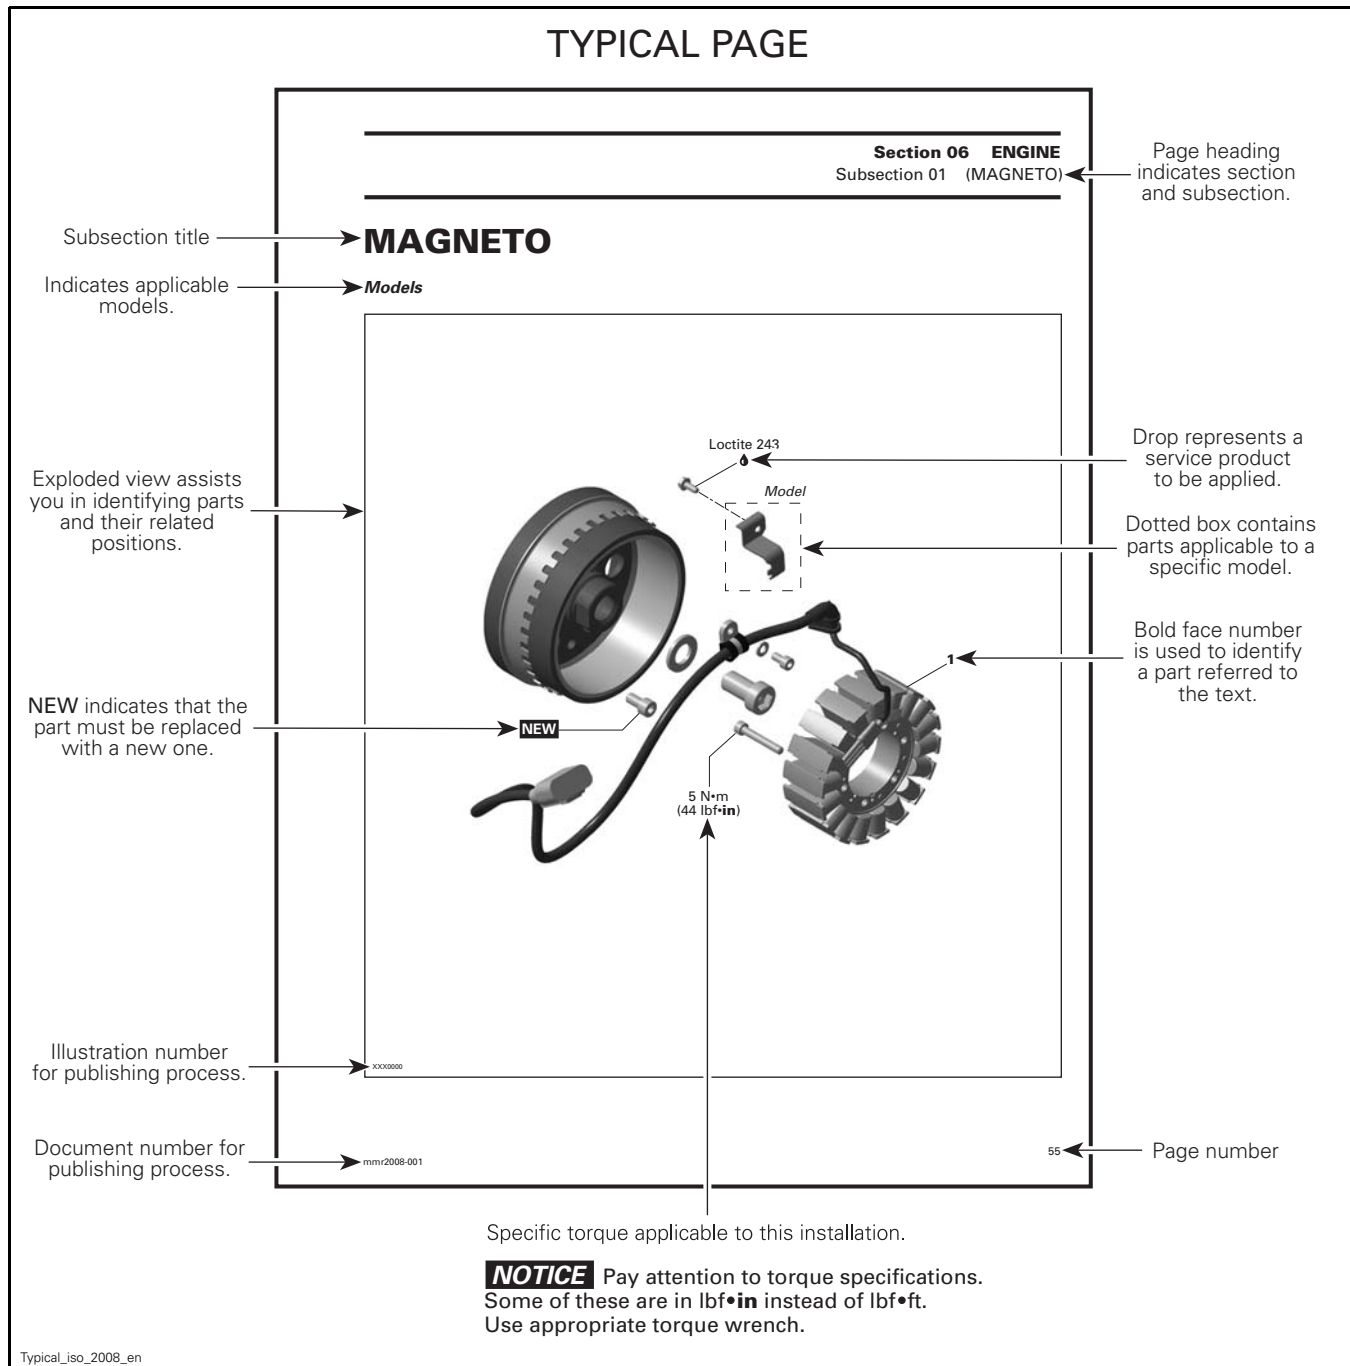

Typical_iso_2008_en

TYPICAL PAGE

Section 03 ENGINE
Subsection 09 (MAGNETO SYSTEM)

GENERAL

NOTE: The following procedures can be done without removing the engine. During assembly/installation, use the torque values and service products as in the exploded views. Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* sections at the beginning of this manual for complete procedure.

WARNING


Torque wrench tightening specifications must be strictly adhered to. Locking devices (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, etc.) must be replaced with new ones.

PROCEDURES

MAGNETO FLYWHEEL

Magneto Flywheel Cleaning
Clean all metal components in a non-ferrous metal cleaner.
CAUTION: Clean magneto flywheel using only a clean cloth.


Magneto Flywheel Removal
Remove muffler, refer to the *EXHAUST SYSTEM* section.
Remove acoustic panel.
Remove rewind starter.
Remove starting pulley no. 2.

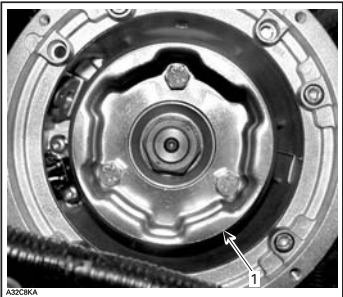

A33208KA

TYPICAL
1. Starting pulley

NOTE: To remove starting pulley bolts, hold magneto flywheel with a socket as shown.



mnr2007-016-002

TYPICAL

Models
Remove the connecting flange retaining the rewind starter to the engine housing.

mnr2008-001

57

Bold face number following part name refers to exploded view at beginning of subsection.

typical_txt_2008_en

Title in bold indicates category of information to be carried out.

Reference to a specific section or subsection.

Indicates component procedures apply to.

Indicates specific procedure to be carried out.

"TYPICAL" indicates a general view which may not represent exact details.

Call-outs pertaining to above illustration.

Illustration always follows text to which it applies.

Italic bold face type-setting indicates a procedure applicable to a specific model(s).

INTRODUCTION

TIGHTENING TORQUE

Tighten fasteners to the torque specified in the exploded view(s) and/or in the written procedure. When a torque is not specified, refer to the following table.

WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.) must be replaced.









In order to avoid a poor assembly, tighten screws, bolts, or nuts in accordance with the following procedure:

1. Manually screw all screws, bolts and/or nuts.
2. Apply half the recommended torque value.
3. Tighten fastener to the recommended torque value.

NOTICE Be sure to use the recommended tightening torque for the specified fastener used.

NOTE: When possible, always apply torque on the nut.

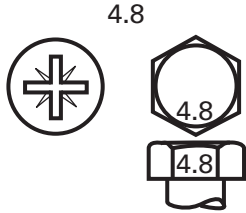NOTE: Always torque screws, bolts and/or nuts using a crisscross pattern when multiple fasteners are used to secure a part (eg. a cylinder head). Some parts must be torqued according to a specific sequence and torque pattern as detailed in the installation procedure.

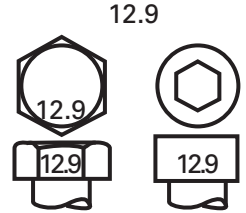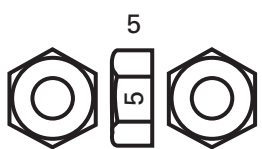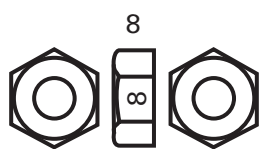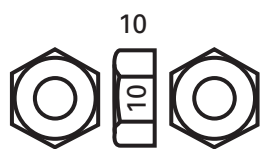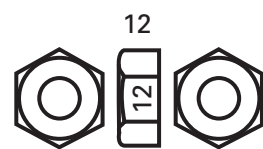
Property class and head markings				
Property class and nut markings				

FASTENER SIZE	FASTENER GRADE/TORQUE			
	5.8 Grade	8.8 Grade	10.9 Grade	12.9 Grade
M4	1.5 – 2 N•m (13 – 18 lbf•in)	2.5 – 3 N•m (22 – 27 lbf•in)	3.5 – 4 N•m (31 – 35 lbf•ft)	4 – 5 N•m (35 – 44 lbf•ft)
M5	3 – 3.5 N•m (27 – 31 lbf•ft)	4.5 – 5.5 N•m (40 – 47 lbf•ft)	7 – 8.5 N•m (62 – 75 lbf•ft)	8 – 10 N•m (71 – 89 lbf•ft)
M6	6.5 – 8.5 N•m (58 – 75 lbf•ft)	8 – 12 N•m (71 – 106 lbf•ft)	10.5 – 15 N•m (93 – 133 lbf•in)	16 N•m (142 lbf•in)
M8	15 N•m (133 lbf•in)	25 N•m (18 lbf•ft)	32 N•m (24 lbf•ft)	40 N•m (30 lbf•ft)
M10	29 N•m (21 lbf•ft)	48 N•m (35 lbf•ft)	61 N•m (45 lbf•ft)	73 N•m (54 lbf•ft)
M12	52 N•m (38 lbf•ft)	85 N•m (63 lbf•ft)	105 N•m (77 lbf•ft)	128 N•m (94 lbf•ft)
M14	85 N•m (63 lbf•ft)	135 N•m (100 lbf•ft)	170 N•m (125 lbf•ft)	200 N•m (148 lbf•ft)

FASTENER INFORMATION

NOTICE Most components in the vehicles are built with parts dimensioned in the metric system. Most fasteners are metric and must not be replaced by customary fasteners or vice-versa. Mismatched or incorrect fasteners could cause damage to the vehicle or possible personal injury.

SELF-LOCKING FASTENERS PROCEDURE

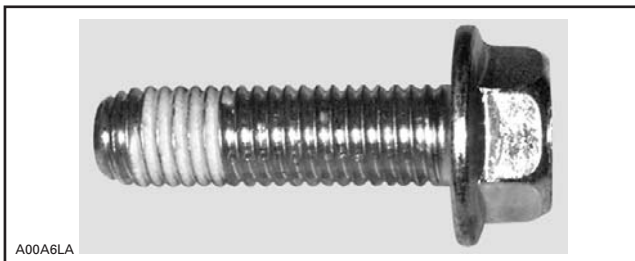

TYPICAL — SELF-LOCKING FASTENER

The following describes common procedures used when working with self-locking fasteners.


Use a metal brush or a tap to properly clean a threaded hole, then use a solvent. Allow the solvent time to act, approximately 30 minutes, then wipe off. Solvent utilization is to ensure proper adhesion of the product used for locking the fastener.

LOCTITE® APPLICATION PROCEDURE

The following describes common procedures used when working with Loctite products.

NOTE: Always use proper strength Loctite product as recommended in this Shop Manual.


Threadlocker Application for Uncovered Holes (Bolts and Nuts)

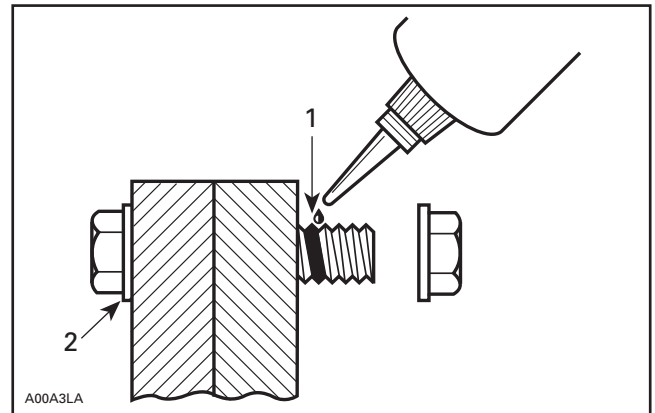

1. Apply here
2. Do not apply

1. Clean threads (bolt and nut) with solvent.
2. Apply LOCTITE PRIMER N (P/N 293 800 041) on threads and allow to dry.
3. Choose proper strength Loctite threadlocker.
4. Fit bolt in the hole.
5. Apply a few drops of threadlocker at proposed tightened nut engagement area.
6. Position nut and tighten as required.

Threadlocker Application for Blind Holes

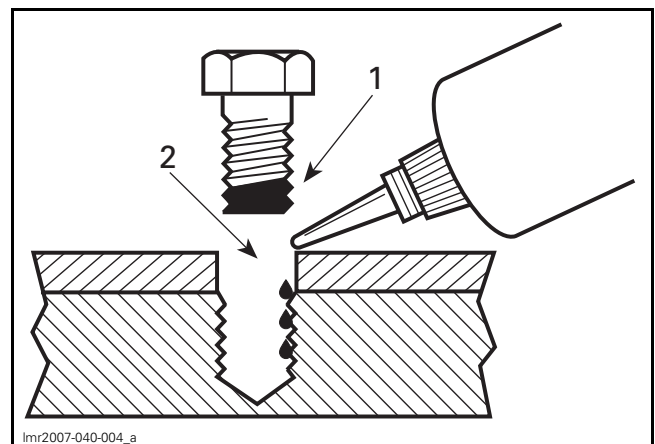


1. On fastener threads
2. On threads and at the bottom of hole

1. Clean threads (bolt and hole) with solvent.
2. Apply LOCTITE PRIMER N (P/N 293 800 041) on threads (bolt and nut) and allow to dry for 30 seconds.
3. Choose proper strength Loctite threadlocker.

INTRODUCTION

4. Apply several drops along the threaded hole and at the bottom of the hole.
5. Apply several drops on bolt threads.
6. Tighten as required.

Threadlocker Application for Stud Installation in Blind Holes

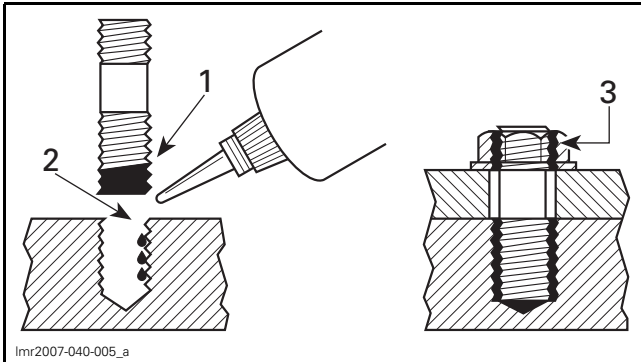


1. On stud threads
2. On threads and in the hole
3. On retaining nut threads

1. Clean threads (stud and hole) with solvent.
2. Apply LOCTITE PRIMER N (P/N 293 800 041) on threads and allow to dry.
3. Put 2 or 3 drops of proper strength Loctite threadlocker on female threads and in hole.

NOTE: To avoid a hydro lock situation, do not apply too much Loctite.

4. Apply several drops of proper strength Loctite on stud threads.
5. Install stud.
6. Install cover, part, etc.
7. Apply a few drops of proper strength Loctite on uncovered stud threads.
8. Install and tighten retaining nut(s) as required.

Threadlocker Application for Pre-Assembled Parts

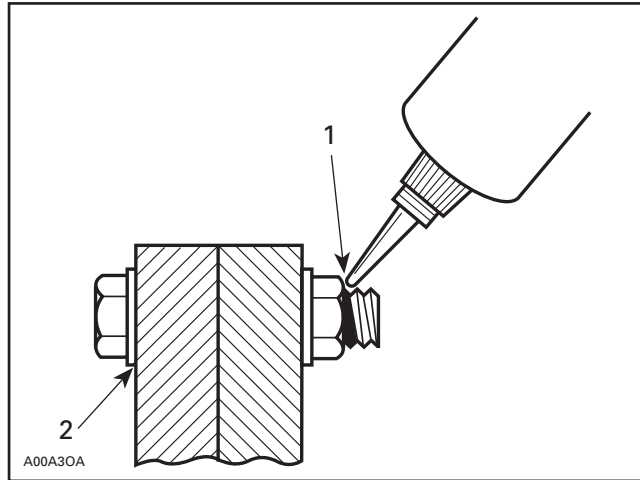


1. Apply here
2. Do not apply

1. Clean bolts and nuts with solvent.
2. Assemble components.
3. Tighten nuts.
4. Apply a few drops of proper strength Loctite on bolt/nut contact surfaces.
5. Avoid touching metal with tip of flask.

NOTE: For preventive maintenance on existing equipment, retighten nuts and apply proper strength Loctite on bolt/nut contact surfaces.

Threadlocker Application for an Adjustment Screw

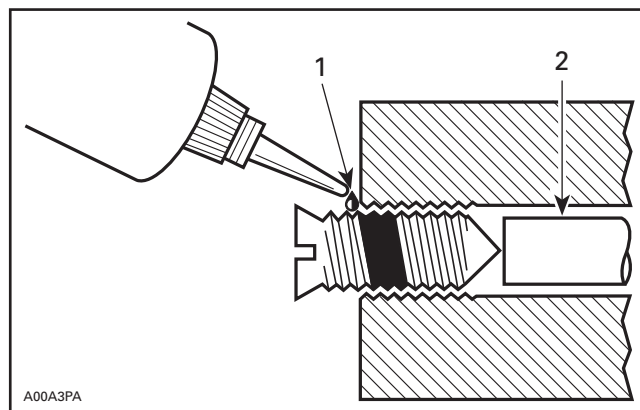


1. Apply here
2. Plunger

1. Adjust screw to proper setting.
2. Apply a few drops of proper strength Loctite threadlocker on screw/body contact surfaces.
3. Avoid touching metal with tip of flask.

NOTE: If it is difficult to readjust, heat screw with a soldering iron (232°C (450°F)).

Application for Stripped Thread Repair

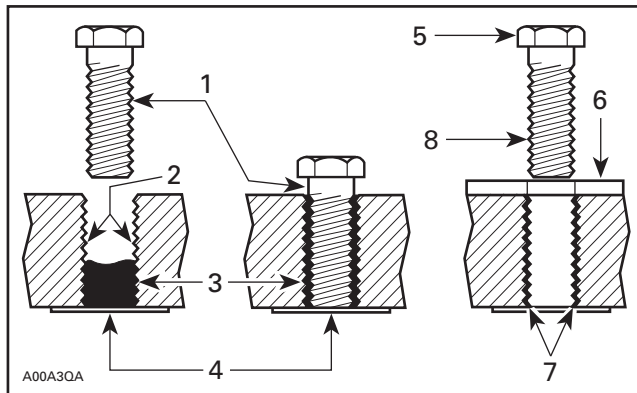

1. Release agent
2. Stripped threads
3. Form-A-Thread
4. Tapes
5. Cleaned bolt
6. Plate
7. New threads
8. Threadlocker

Standard Thread Repair

Follow instructions on Loctite FORM-A-THREAD 81668 package.

If a plate is used to align bolt:

1. Apply release agent on mating surfaces.
2. Put waxed paper or similar film on the surfaces.
3. Twist bolt when inserting it to improve thread conformation.

NOTE: NOT intended for engine stud repairs.

Repair of Small Holes/Fine Threads


Option 1: Enlarge damaged hole, then follow *STANDARD THREAD REPAIR* procedure.

Option 2: Apply FORM-A-THREAD on the screw and insert in damaged hole.

Permanent Stud Installation (Light Duty)

1. Use a stud of the desired thread length.
2. DO NOT apply release agent on stud.
3. Follow Standard Thread Repair procedure.
4. Allow 30 minutes for Loctite FORM-A-THREAD to cure.
5. Complete part assembly.

Gasket Compound Application

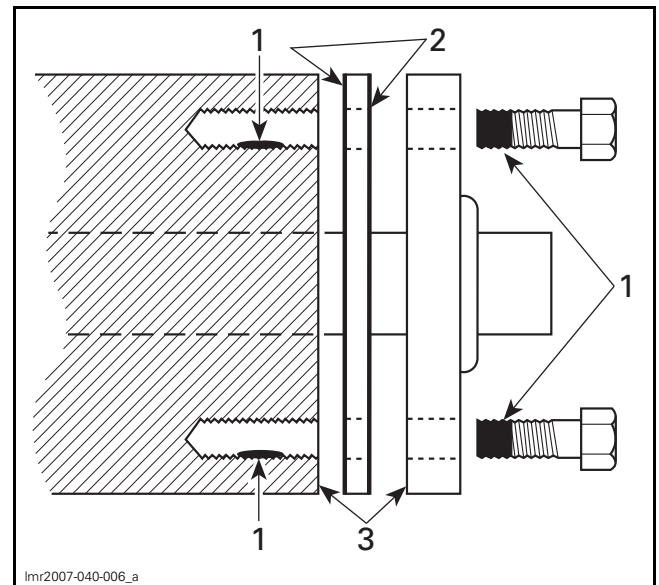

1. Proper strength Loctite
2. Loctite Primer N (P/N 293 800 041) and Gasket Eliminator 518 (P/N 293 800 038) on both sides of gasket
3. Loctite Primer N only

1. Remove old gasket and other contaminants using LOCTITE CHISEL (GASKET REMOVER) (P/N 413 708 500). Use a mechanical means only if necessary.

NOTE: Avoid grinding.

2. Clean both mating surfaces with solvent.
3. Spray Loctite Primer N on both mating surfaces and on both sides of gasket and allow to dry 1 or 2 minutes.
4. Apply LOCTITE 518 (P/N 293 800 038) on both sides of gasket, using a clean applicator.
5. Place gasket on mating surfaces and assemble parts immediately.

NOTE: If the cover is bolted to blind holes, apply proper strength Loctite in the hole and on threads. Tighten fastener.


If holes are sunken, apply proper strength Loctite on bolt threads.

6. Tighten as usual.

INTRODUCTION

Threadlocker Application for Mounting on a Shaft

Mounting with a Press

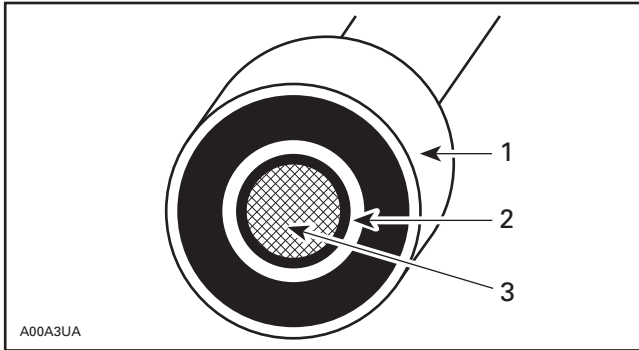

1. Bearing
2. Proper strength Loctite
3. Shaft

1. Clean shaft external contact surface.
2. Clean internal contact surface of part to be installed on shaft.
3. Apply a strip of proper strength Loctite on circumference of shaft contact surface at insertion or engagement point.


NOTE: Retaining compound is always forced out when applied on shaft.

4. DO NOT use antiseize Loctite or any similar product.
5. No curing period is required.

Mounting in Tandem

1. Apply retaining compound on internal contact surface (bore) of parts to be installed.
2. Continue parts assembly as per previous illustration.

Threadlocker Application for Case-In Components (Metallic Gaskets)

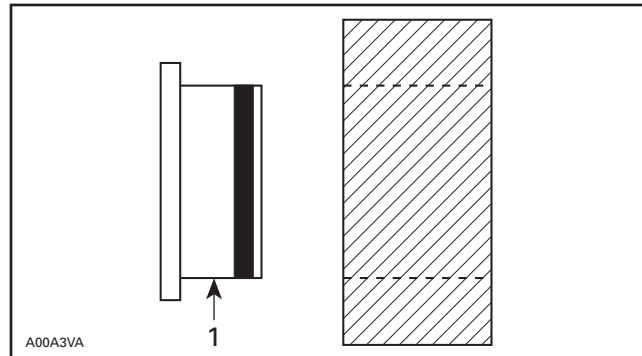

1. Proper strength Loctite

1. Clean inner housing diameter and outer gasket diameter.
2. Spray housing and gasket with LOCTITE PRIMER N (P/N 293 800 041).
3. Apply a strip of proper strength Loctite on leading edge of outer metallic gasket diameter.

NOTE: Any Loctite product can be used here. A low strength liquid is recommended as normal strength and gap are required.

4. Install according to standard procedure.
5. Wipe off excess product.
6. Allow 30 minutes for product to cure.

NOTE: Normally used on worn-out housings to prevent leaking or sliding.

It is generally not necessary to remove gasket compound applied on outer gasket diameter.



If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

SERVICE TOOLS INDEX

12 V BATTERY SUPPLY CABLE
(P/N 529 035 997)



Page: 192, 194-195, 291,
299-300, 326, 333

BEARING HEATER
(P/N 529 035 969)



Page: 158, 175

BUSHING REMOVER/INSTALLER
(P/N 529 035 931)



Page: 372, 374

AMP DIE
(P/N 529 035 908)



Page: 553

BEARING INSTALLER (PTO)
(P/N 529 035 990)



Page: 159-160

CALIPER PULLER
(P/N 529 036 145)



Page: 400

BALL JOINT EXTRACTOR
(P/N 529 035 827)



Page: 430

BEARING PULLER/PUSHER
(P/N 529 036 111)



Page: 411

CERAMIC SEAL INSTALLER
(P/N 529 036 014)



Page: 153-154, 169-170

BALL JOINT INSTALLER
(P/N 529 035 975)



Page: 433

BEARING PULLER/PUSHER
(P/N 529 036 112)



Page: 411

CONSOLE NUT WRENCH
(P/N 529 036 183)




Page: 511

BALL JOINT REMOVER SUPPORT
(P/N 529 036 121)




Page: 433

BUSHING PULLER/INSTALLER
(P/N 529 031 200)

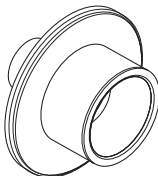

Page: 372

COUNTERSHAFT BEARING
INSTALLER
(P/N 529 036 066)

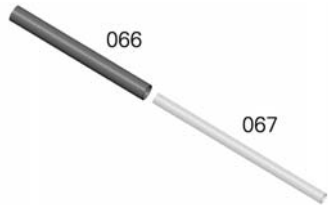

Page: 393


SERVICE TOOLS INDEX

COUNTERSHAFT BEARING
REMOVER
(P/N 529 036 065)



Page: 392

COUNTERSHAFT SUPPORT
(P/N 529 036 067)

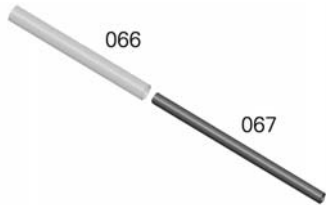

Page: 393

CRANKSHAFT BEARING PULLER
(P/N 529 036 004)



Page: 157, 174

CRANKSHAFT DISTANCE GAUGE
(P/N 529 035 968)



Page: 159

CRANKSHAFT PROTECTOR (MAG)
(P/N 420 876 557)



Page: 98, 157

CRANKSHAFT PROTECTOR (PTO)
(P/N 420 876 552)



Page: 157

CRIMPING TOOL (HEAVY GAUGE
WIRE)
(P/N 529 035 730)




Page: 554

CRIMPING TOOL (KOSTAL)
(P/N 529 035 909)



Page: 553

DEGREE WHEEL
(P/N 529 035 607)

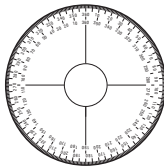

Page: 55

DIAL INDICATOR ADAPTER
(P/N 529 036 132)



Page: 281

DISTANCE GAUGE
(P/N 529 036 060)



Page: 177

DRIVE PULLEY HOLDER
(P/N 529 035 674)



Page: 367-368, 379

DRIVE PULLEY PULLER
(P/N 529 000 064)



Page: 368

DRIVEN PULLEY SPRING
COMPRESSOR
(P/N 529 036 182)



Page: 387

ENGINE LIFTING HOOK
(P/N 529 035 829)



Page: 39, 42-43

ENGINE LIFTING TOOL
(P/N 529 036 131)




Page: 39, 42–43

HALF-RINGS
(P/N 420 977 479)



Page: 157

LARGE HOSE PINCHER
(P/N 529 032 500)

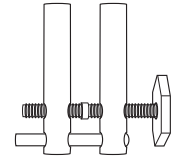

Page: 91–92

EXTRACTOR ADAPTOR
(P/N 529 036 136)



Page: 239

HANDLE
(P/N 420 877 650)



Page: 153, 168

LEAK TEST KIT
(P/N 529 033 100)



Page: 78, 210

FLUKE 115 MULTIMETER
(P/N 529 035 868)



Page: 85, 100, 221, 235–236, 248, 260–261, 265, 267, 286, 289, 302–303, 327, 336, 342, 349, 352

IGNITION TIMING TOOL
(P/N 529 036 129)



Page: 280

MAGNETO PULLER RING
(P/N 420 876 081)



Page: 97

FUEL HOSE ADAPTER
(P/N 529 036 023)



Page: 211

INJECTOR RETAINER PLATE
(P/N 529 036 137)



Page: 233

MAGNETO PULLER
(P/N 529 035 547)



Page: 98

FUEL PUMP NUT TOOL
(P/N 529 036 214)



Page: 216–217

INTAKE PLUG
(P/N 529 036 203)



Page: 47

MANIFOLD PLUG 63 MM (2-1/2")
(P/N 529 035 961)



Page: 47

SERVICE TOOLS INDEX

MPI-2 DIAGNOSTIC CABLE
(P/N 710 000 851)




Page: 192, 194–195, 326

MPI-2 INTERFACE CARD
(P/N 529 036 018)



Page: 192–193, 326

OETIKER PLIERS
(P/N 295 000 070)

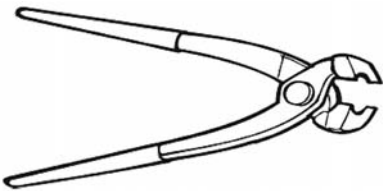

Page: 17, 213, 228

OIL SEAL GUIDE
(P/N 529 035 822)



Page: 153, 169

OIL SEAL PUSHER
(P/N 529 035 757)



Page: 153, 168

PISTON CIRCLIP INSTALLER 21MM
(P/N 529 036 138)



Page: 144

PISTON CIRCLIP INSTALLER
(P/N 529 035 686)



Page: 134

PISTON PROJECTION
(P/N 529 036 215)



Page: 56

POWER INTERFACE
(P/N 515 177 223)



Page: 192–194, 286, 291, 299–300,
326, 333

PRESSURE GAUGE
(P/N 529 035 709)



Page: 211

PROTECTIVE CAP
(P/N 529 036 150)



Page: 400

PULLER RING
(P/N 420 977 494)



Page: 157

PULLEY SPRING COMPRESSOR
TOOL
(P/N 529 036 012)




Page: 369, 372, 374, 376

RMOTION SUSPENSION TOOL
(P/N 529 036 234)



Page: 446, 459


RUBBER PAD PROTECTOR
(P/N 529 023 400)



Page: 132, 143

SERVICE TOOLS INDEX

SHOCK ABSORBER SUPPORTS
(P/N 529 036 186)

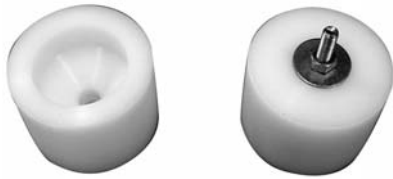

Page: 457

SUCTION PUMP
(P/N 529 035 880)



Page: 213

TDC DIAL INDICATOR
(P/N 295 000 143)



Page: 56, 281

SLIDER SHOE FORK
(P/N 529 005 500)




Page: 369, 375

SUPERTANIUM DRILL BIT 3/16"
(P/N 529 031 800)




Page: 512-515, 522

TDC DIAL INDICATOR
(P/N 414 104 700)



Page: 281

SMALL HOSE PINCHER
(P/N 295 000 076)

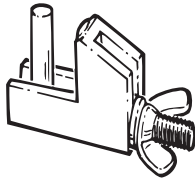

Page: 39, 47, 69, 122, 210, 257

SUPPORT PLATE
(P/N 529 035 976)




Page: 159

TEMPERATURE INDICATOR STICK
(P/N 529 035 970)



Page: 159, 176

SPRING COMPRESSOR
(P/N 529 036 184)



Page: 429

SUSPENSION ARM SUPPORT
(P/N 529 035 637)



Page: 431

TENSIOMETER
(P/N 414 348 200)



Page: 21, 363

SPRING INSTALLER/REMOVER
(P/N 529 035 983)



Page: 62, 64

T-HARNESS
(P/N 529 035 869)



Page: 124

TEST CAP
(P/N 529 035 991)



Page: 91

TRACK CLEAT INSTALLER
(P/N 529 036 044)



Page: 421

SERVICE TOOLS INDEX

UPPER GEAR RETAINING TOOL
(P/N 529 036 110)



Page: 385

VACUUM/PRESSURE PUMP
(P/N 529 021 800)



Page: 47, 79, 86, 91-92, 112,
115-116, 122-123, 125, 210-211

BREAK-IN INSPECTION

Procedures are detailed in *PERIODIC MAINTENANCE PROCEDURES* subsection.

BREAK-IN INSPECTION
Inspect exhaust system and check for leaks
Check coolant level
Inspect fuel lines and connections
Inspect throttle cable
Inspect drive belt
Visually inspect drive pulley
Tighten drive pulley retaining screw to specified torque
Inspect driven pulley
Adjust and align track
Change chaincase oil
Adjust drive chain
Check brake fluid level
Inspect brake hose, pads and disk
Inspect steering mechanism
Inspect skis and runners
Inspect front suspension
Inspect rear suspension and slider shoes

PERIODIC MAINTENANCE SCHEDULE

Procedures are detailed in *PERIODIC MAINTENANCE PROCEDURES* subsection.

EVERY 1 500 KM (1,000 MI)
Adjust drive chain
Check chaincase oil level
EVERY 3 000 KM (2,000 MI) OR 1 YEAR (WHICHEVER COMES FIRST)
Inspect engine rubber mounts
Inspect exhaust system and check for leaks
Adjust engine stopper
Visually inspect and clean drive pulley
Tighten drive pulley retaining screw to specified torque
Clean driven pulley
Adjust and align track
Inspect brake hose, pads and disc
Inspect steering mechanism
Inspect front suspension
Inspect rear suspension and stopper strap
Lubricate rear suspension (lubricate whenever the vehicle is used in wet conditions (rain, puddles))
EVERY 6 000 KM (4,000 MI) OR 2 YEARS (WHICHEVER COMES FIRST)
Inspect fuel pump strainer and replace if necessary
Replace brake fluid
Inspect throttle cable
Clean and lubricate rewind starter
Replace the following drive pulley wear parts: slider shoes, O-rings and sliding sheave bushing (800R E-TEC)
EVERY 10 000 KM (6,000 MI) OR 3 YEARS (WHICHEVER COMES FIRST)
Replace spark plugs
Inspect oil injection pump strainer and clean if needed
Replace the following drive pulley wear parts: spring cover bushing and ramps (800R E-TEC)
3D RAVE valves cleaning
EVERY 5 YEARS
Replace engine coolant
Replace in-line fuel filter

PERIODIC MAINTENANCE PROCEDURES

SERVICE TOOLS

Description	Part Number	Page
OETIKER PLIERS.....	295 000 070	7
TENSIOMETER.....	414 348 200	11

SERVICE PRODUCTS

Description	Part Number	Page
BRAKE FLUID.....	293 600 131	13
BRP PREMIXED COOLANT	219 700 362	4
PULLEY FLANGE CLEANER	413 711 809	7, 10
SUSPENSION GREASE.....	293 550 033	16
XPS SYNTHETIC CHAINCASE OIL	413 803 300	10
XPS SYNTHETIC GREASE.....	293 550 010	15



If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

Subsection XX (PERIODIC MAINTENANCE PROCEDURES)

GENERAL

This subsection provides general maintenance instructions. Where detailed instructions for disassembly or reassembly is required, refer to the applicable subsection.

PROCEDURES

ENGINE

Crankshaft PTO Seal Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
			✓

Check PTO seal for cracks, leaks or other damages.

Rewind Starter Cleaning and Lubrication

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

Refer to *REWIND STARTER ASSEMBLY* in *REWIND STARTER* subsection.

3D RAVE Valve Cleaning

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

Clean carbon deposits as required.

Thoroughly clean all *RAVE VALVES* components and cylinder slots.

No special solvents or cleaners are required when cleaning the valve.

ENGINE (SUPPORTS)

Engine Rubber Mount Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		✓

Check rubber mounts for cracks or other damages.

Engine Stopper Adjustment

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.

ENGINE (EXHAUST SYSTEM)

Exhaust System Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

Check the following components for leaks, cracks, or other damages:

- Springs and retainers
- Exhaust system mounts
- Muffler
- Tuned pipe
- Shields
- Manifold.

ENGINE (LUBRICATION SYSTEM)

Oil Injection Pump Strainer Inspection and Cleaning

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

Refer to *OIL INJECTION PUMP* in *LUBRICATION SYSTEM* subsection.

Engine Lubrication


Break-In	Scheduled Maintenance	Storage	Preseason
		✓	

Engine Storage Mode

Like other engines, the E-TEC has to be properly lubricated at storage for internal parts protection. The E-TEC system offers a built-in engine storage lubrication function (summerization) that can be initiated by the operator.


To engage procedure, do the following:

1. Place the vehicle in a well ventilated area.
2. Start the engine and let it run at idle speed until it reaches its operating temperature (watch the coolant temperature on the display or verify that the rear heat exchanger becomes warm).
3. Push the SET (S) button to select odometer mode.

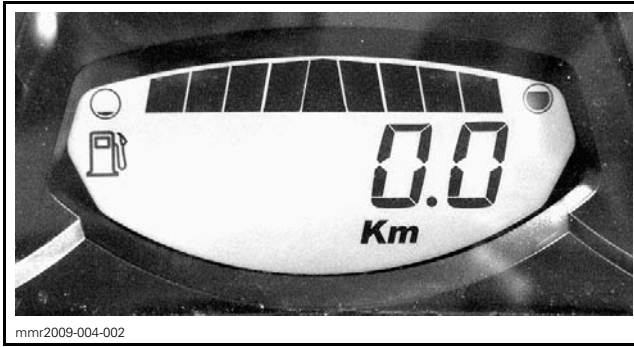

NOTE: The storage mode does not function in other modes (trip A, trip B and hr trip).


- Repeatedly depress the HI/LOW beam switch rapidly, then, **while doing this**, press and hold the **SET** button until PUSH S appears on the display.

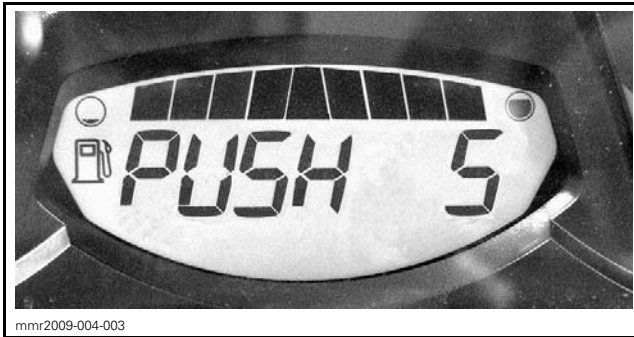

- Release all buttons when gauge displays **PUSH "S"** appears.
- Again, press and hold the SET (S) button for 2 - 3 seconds.

NOTE: The gauge will display OIL when the storage procedure is initiated.

- When gauge displays **OIL**, release button and wait for the lubrication function to end.

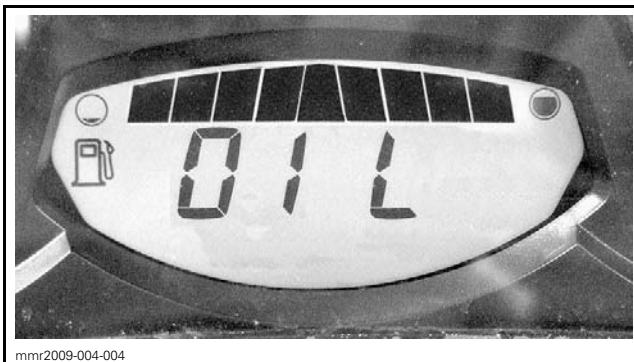

Do not touch anything during engine lubrication cycle.

The engine lubrication function takes approximately 1 minute. During this time, engine RPM will increase slightly to approximately 1600 RPM and the oil pump will "oil flood" the engine.

At the end of engine lubrication function, the ECM will stop the engine.

- Remove tether cord cap from engine cut-off switch.

NOTICE Do not start the engine during storage period.

ENGINE (COOLING SYSTEM)

⚠ WARNING


Never open coolant tank cap when engine is hot.

Engine Coolant Level Verification

Break-In	Scheduled Maintenance	Storage	Preseason
✓			

Check coolant level at room temperature with the cap removed. Liquid should be at cold level line (engine cold) of coolant tank.

NOTE: When checking level at low temperature it may be slightly lower than the mark.

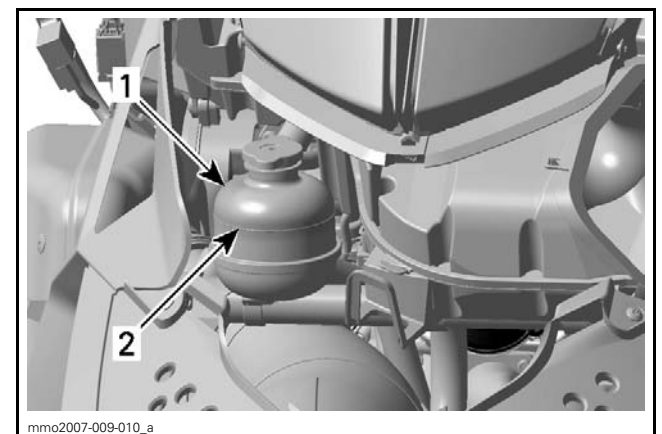

TYPICAL
 1. Coolant tank
 2. COLD LEVEL line

Engine Coolant Strength Verification

Break-In	Scheduled Maintenance	Storage	Preseason
			✓

Remove pressure cap.

Use an antifreeze tester to test coolant strength.

Subsection XX (PERIODIC MAINTENANCE PROCEDURES)

MINIMUM RECOMMENDED COOLANT STRENGTH

-30°C (-22°F)

Engine Coolant Replacement

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

Recommended Engine Coolant

RECOMMENDED SERVICE PRODUCT	ACCEPTABLE
BRP PREMIXED COOLANT (P/N 219 700 362)	A blend of 50% distilled water with 50% antifreeze (especially formulated for aluminum engines)

To prevent antifreeze deterioration, always use the same brand. Never mix different brands unless cooling system is completely flushed and refilled.

NOTICE To prevent rust formation or freezing condition, always replenish the system with the BRP premixed coolant or with 50% antifreeze and 50% distilled water. Do not use tap water, straight antifreeze or straight water in the system. Tap water contains minerals and impurities which build up in the system. During cold weather, straight water causes the system to freeze while straight antifreeze thickens (like slush ice) and does not have the same efficiency. Always use ethylene glycol antifreeze containing corrosion inhibitors specifically recommended for aluminum engines.

Cooling System Draining

⚠ WARNING


Never drain or refill the cooling system when engine is hot.

Remove RH side panel and hood. Refer to *BODY* subsection.

Remove muffler and tuned pipe. Refer to *EXHAUST SYSTEM* subsection.

Place a large drain pan under the vehicle bottom pan.

Unplug coolant hose from water pump to drain coolant.

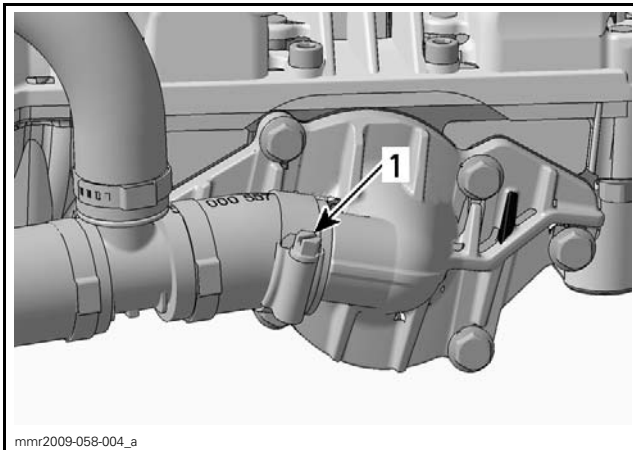


mnr2009-058-004_a

WATER PUMP

1. Unscrew clamp

When coolant level is low enough, lift the rear of vehicle to drain the heat exchangers.

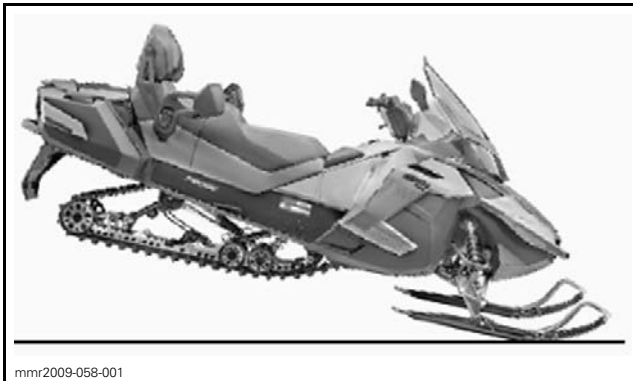

mnr2009-058-001

TYPICAL VIEW


Install and tighten coolant hose clamp on water pump.

TIGHTENING TORQUE

Coolant hose clamp	5.5 N•m (49 lbf•in)
--------------------	---------------------

Cooling System Refill and Bleeding


1. Apply parking brake.
2. Lift front of vehicle as shown and support it safely.

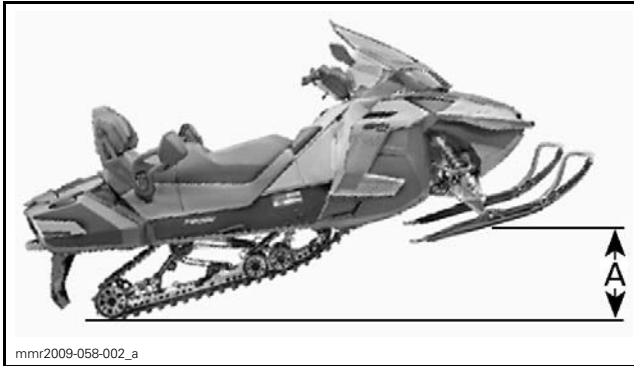

mmr2009-058-002_a

TYPICAL VIEW


A. 25 cm ± 5 cm (10 in ± 2 in)

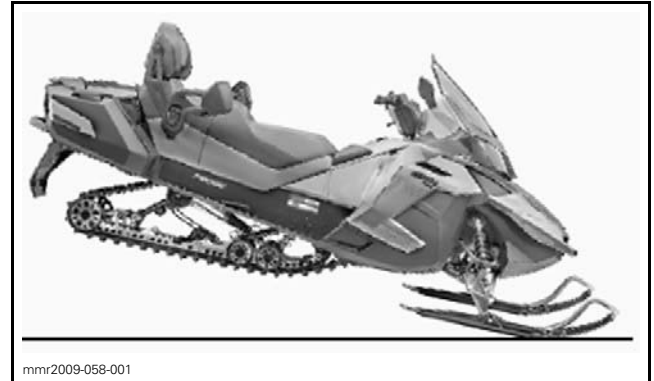

mmr2009-058-001

TYPICAL VIEW

3. With engine cold, slowly fill coolant tank up to COLD LEVEL line allowing time for the air in the cooling system to seep out.

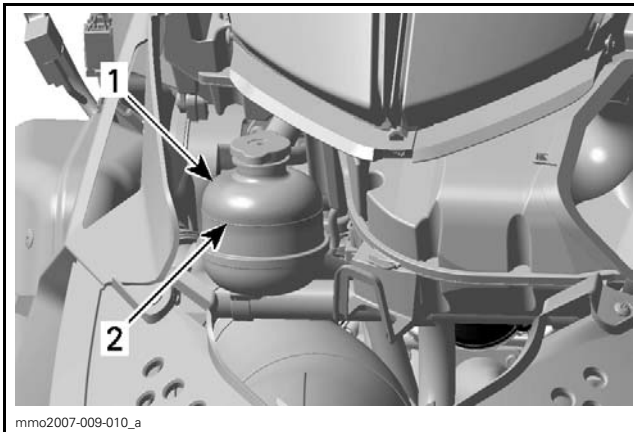

mmo2007-009-010_a

TYPICAL

1. Coolant tank
2. COLD LEVEL line

4. Start engine.
 5. Refill coolant tank up to COLD LEVEL line while engine is idling until rear heat exchangers are warm to the touch (about 4 to 5 minutes).
- NOTE:** Always monitor coolant level while filling coolant tank to avoid emptying and thus allowing air to enter the system.
6. Install pressure cap.
 7. Lower vehicle back to the ground.



mmr2009-058-003

8. Lift rear of vehicle and support it safely.

⚠ WARNING

Before revving engine, ensure that the track is free of particles which could be thrown out while track is rotating. Keep hands, tools, feet and clothing clear of track. Always lift the snowmobile on a wide-base stand with a rear deflector panel. Ensure no one is standing in close proximity to the snowmobile, especially at the rear of the track. Centrifugal force could cause debris, damaged or loose studs, pieces of torn track, or an entire track to be violently thrown backwards out of the frame with tremendous force, possibly resulting in the loss of a leg or other serious injury.


9. Remove parking brake.
10. Activate throttle lever 3 - 4 times to bring engine speed to 7000 RPM.
11. Apply the brake.
12. Lower vehicle back to ground.
13. Stop engine.



mmr2009-058-003

14. Add coolant up to 15 mm (1/2 in) above the COLD LEVEL line.

Subsection XX (PERIODIC MAINTENANCE PROCEDURES)

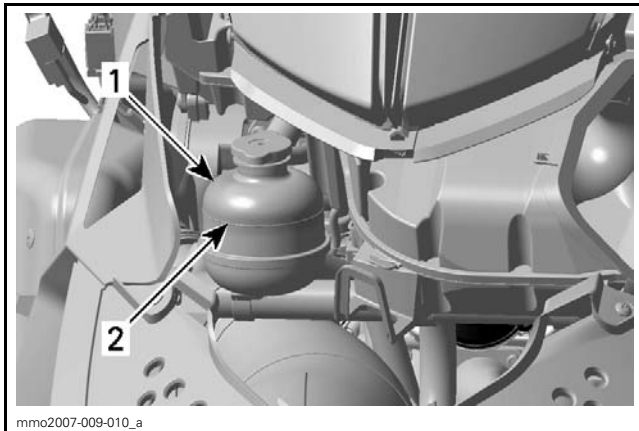

TYPICAL

1. Coolant tank
2. Coolant 15 mm (1/2 in) above COLD LEVEL line

15. When engine has completely cooled down, recheck coolant level in coolant tank and refill up to line if needed.
16. Perform *ENGINE COOLANT STRENGTH VERIFICATION*. See procedure in this subsection.
17. Adjust mixture as necessary.
18. Reinstall removed parts.

FUEL SYSTEM

Fuel Lines and Connection Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓			✓

Visually inspect fuel lines and connections for cracks or leaks.

Fuel Pump Strainer Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

Remove fuel pump, refer to *FUEL TANK AND FUEL PUMP* subsection.

Inspect strainer for trapped foreign particles, clogging or damages. Replace if necessary.

In-Line Fuel Filter Replacement


Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

In-line Fuel Filter Removal

⚠ WARNING

Work in a well ventilated area. Wipe up all spilled fuel.


1. Release fuel pressure in the system. Refer to *FUEL TANK AND FUEL PUMP* subsection.
2. Remove the upper body module. Refer to *BODY* subsection.
3. Disconnect magneto connector.

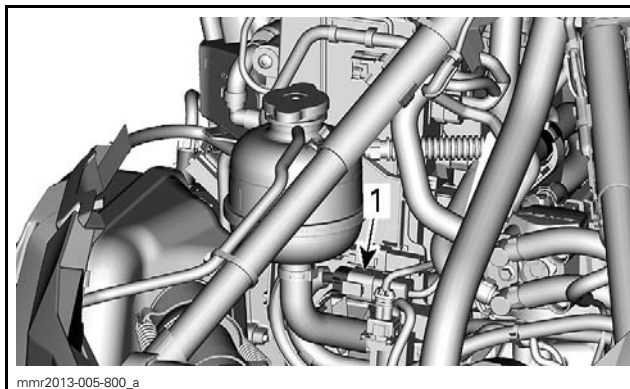

⚠ WARNING

The magneto connector must be disconnected to prevent any spark in the engine compartment and to remove power from the fuel pump. Otherwise, if the engine is cranked, fuel vapors may ignite in presence of a spark creating a fire hazard.

4. Place a rag between fuel filter and oil injection tank.
5. Cut both Oetiker clamps securing the fuel filter.

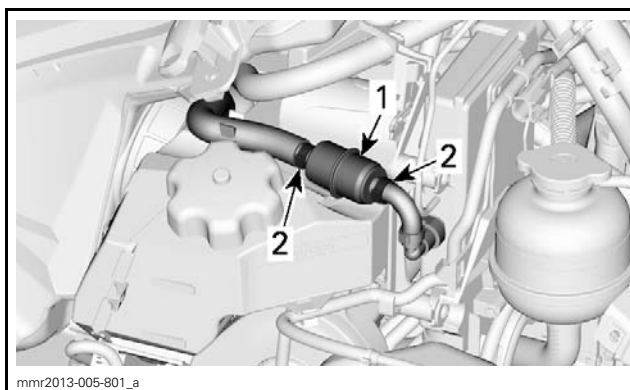

1. Fuel filter
2. Oetiker clamps

6. Remove fuel filter from vehicle. Dispose fuel filter as per your local environmental regulations.

In-Line Fuel Filter Installation

The installation is the reverse of the removal procedure however, pay attention to the following.

Insert new Oetiker clamps on both hoses.

Install the new filter. Make sure printed arrow pointed towards the ECM.

Using OETIKER PLIERS (P/N 295 000 070), close Oetiker clamps to secure the fuel filter.

⚠ WARNING
 Ensure hose clamp is tight and that hose cannot turn on the fitting.

When installation is complete, carry out a fuel system leak test, refer to *FUEL SYSTEM PRESSURIZATION* in *FUEL TANK AND FUEL PUMP* subsection.

⚠ WARNING
 After working on the fuel system, carry out a fuel system pressurization test to check for leaks. Failure to carry out a fuel system leak test could result in severe injury or a life threatening situation should a leak occur.

Reinstall all removed parts.

Throttle Body Inspection and Cleaning

Break-In	Scheduled Maintenance	Storage	Preseason
			✓

Clean throttle plates and throttle body bores using PULLEY FLANGE CLEANER (P/N 413 711 809).

Throttle Cable Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

Visually inspect cable sheath for kinks, wear or other damage.

Visually inspect cable at throttle body/carburetor and at throttle lever for fraying or other damage.

Make sure the throttle cable operates smoothly.

ELECTRICAL SYSTEM (CHARGING)

Battery Charging

Break-In	Scheduled Maintenance	Storage	Preseason
			✓


To charge battery, refer to *CHARGING SYSTEM* subsection.

ELECTRICAL SYSTEM (IGNITION)

Spark Plug Replacement

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

NOTE: Use only an approved spark plug socket for removal and installation. Extra care should be taken to avoid side stresses which could result in a broken spark plug.

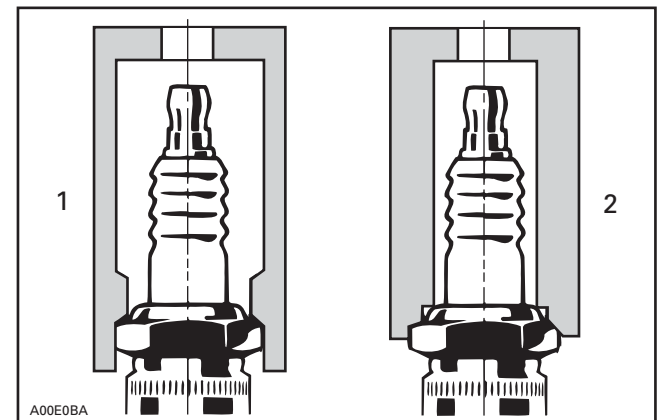


TYPICAL
 1. Approved socket
 2. Improper socket

Spark Plug Removal

1. Disconnect the magneto connector.


⚠ WARNING
 Cranking engine with spark plug removed and without disconnecting the magneto connector may ignite fuel vapors creating a fire hazard.

Subsection XX (PERIODIC MAINTENANCE PROCEDURES)

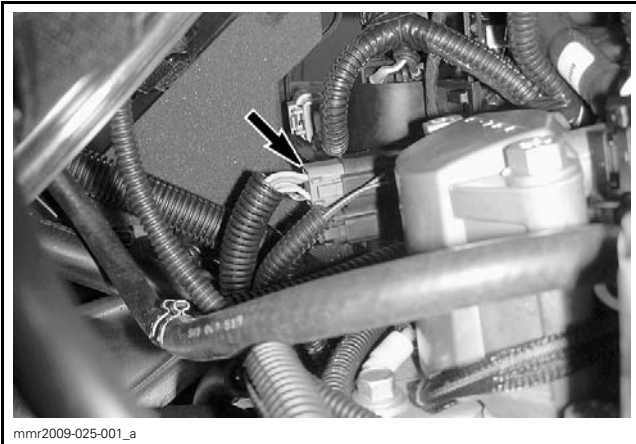

TYPICAL — MAGNETO CONNECTOR

2. Remove the primary air intake silencer.
3. Remove spark plug cables by gently rotating the cap and pulling it off the plug.

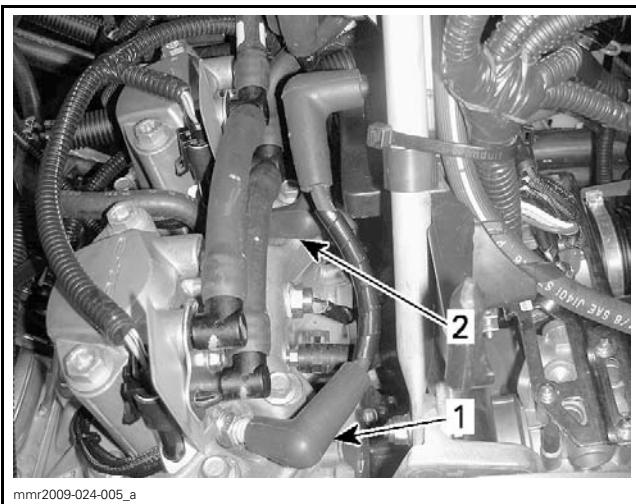

TYPICAL
1. PTO spark plug
2. MAG spark plug


4. Clean the spark plug and cylinder head with pressurized air.

⚠ WARNING


Whenever using compressed air, always wear protective eye wear.

5. Unscrew the spark plug sufficiently to break the applied torque using the appropriate tools.

CYLINDER IDENTIFICATION	REQUIRED TOOLS
MAG side	<ul style="list-style-type: none"> – Spark plug socket (16 mm (5/8 in)) – Crowfoot (19 mm (3/4 in)) – Ratchet wrench – Extension
PTO side	<ul style="list-style-type: none"> – Spark plug socket (16 mm (5/8 in)) – Wrench (19 mm (3/4 in))

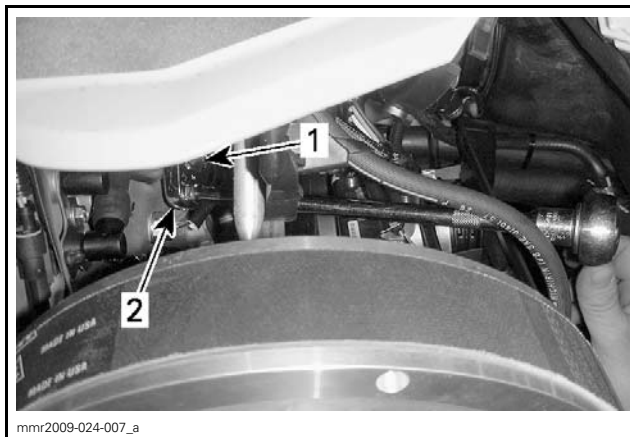

MAG SIDE
1. Spark plug socket (16 mm (5/8 in))
2. Crowfoot (19 mm (3/4 in))

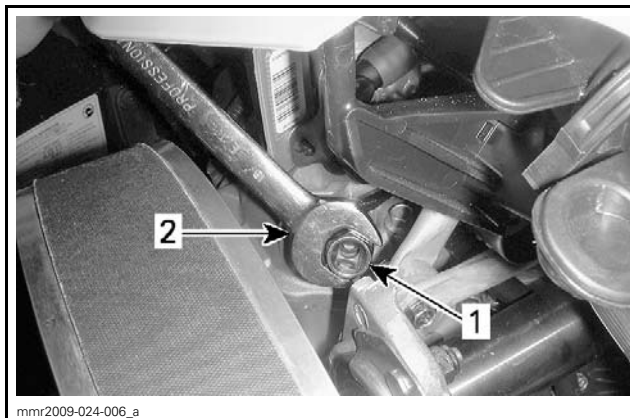

PTO SIDE
1. Spark plug socket (16 mm (5/8 in))
2. Wrench (19 mm (3/4 in))

6. Remove spark plugs by hand.

Spark Plug Installation (OEM)

1. Prior to installation, ensure the contact surfaces of the cylinder head and spark plug are free of grime.
2. Using a feeler gauge, confirm electrode gap is as specified.

NOTE: If spark plug gap is incorrect, use another spark plug.

REQUIRED SETTING	
Spark plug gap	0.7 mm to 0.8 mm (.028 in to .031 in)

3. Hand screw spark plug into cylinder head until it bottoms out.
4. Apply specific torque using a torque wrench, crow foot, and approved spark plug socket.

NOTE: Spark plug tightening torque is particularly important on this engine as it contributes to the proper positioning of the negative electrode.


TIGHTENING TORQUE	
Spark plug	28 N•m (21 lbf•ft)

Spark Plug Installation (Non-OEM)

NOTE: When using a non-OEM spark plug on **800R E-TEC**, it must be correctly indexed or engine may experience rough idling and higher emissions.

1. Using a marker, mark the open end of the negative electrode on the plug shell (above threads).
2. Ensure the contact surfaces of the cylinder head and spark plug are free of grime.
3. Install and torque the spark plug, refer to previous table for specific torque.
4. Visually check to ensure the open end of the negative electrode is facing the injector nozzle within 90° each side of nozzle.

NOTE: The following illustration uses the point of attachment of the negative electrode to depict the angle. The injector is illustrated above the spark plug.

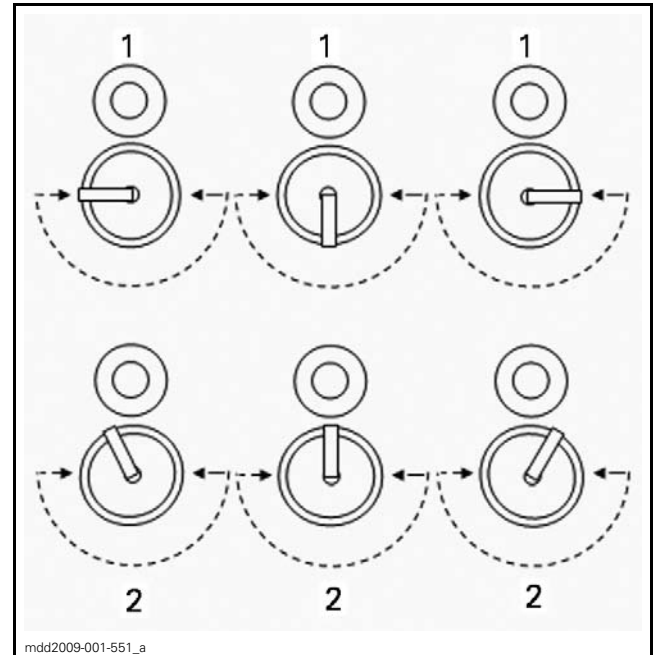

SPARK PLUG INDEXING

1. Acceptable installation
2. Unacceptable installation

If the plug indexing angle is not within specification, repeat procedure with another spark plug until correct indexing is achieved.

ELECTRICAL SYSTEM (LIGHTS)

Headlights Beam Aiming Adjustment

Break-In	Scheduled Maintenance	Storage	Preseason
			✓

Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection.

DRIVE SYSTEM (CLUTCHES)

Drive Belt Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓			✓

Refer to *DRIVE BELT* subsection.

Drive Pulley Inspection and Cleaning

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

Refer to *DRIVE PULLEY* subsection.

Subsection XX (PERIODIC MAINTENANCE PROCEDURES)

Drive Pulley Retaining Screw Tightening

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		

TIGHTENING TORQUE

Drive pulley screw	120 N•m (89 lbf•ft)
--------------------	---------------------

Drive Pulley Wear Parts Replacement

800R E-TEC Engines

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

Replace drive pulley wear parts as per *PERIODIC MAINTENANCE SCHEDULE*. Refer to *DRIVE PULLEY* subsection.

Driven Pulley Inspection and Cleaning

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

Inspect pulley sheave for dirt, marks or scratches. Test sliding sheave operation.

Use the PULLEY FLANGE CLEANER (P/N 413 711 809) and a clean rag to clean pulley sheaves as necessary.

DRIVE SYSTEM (CHAINCASE)

Recommended Chaincase Oil


RECOMMENDED SERVICE PRODUCT
XPS SYNTHETIC CHAINCASE OIL (P/N 413 803 300)

NOTICE Use only the recommended type oil when servicing. Do not mix synthetic oil with other types of oil.

Chaincase Oil Level Verification

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

1. Place vehicle on a level surface.
2. Remove magnetic check plug on the left side of chaincase. Oil level must be equal with the lower edge.

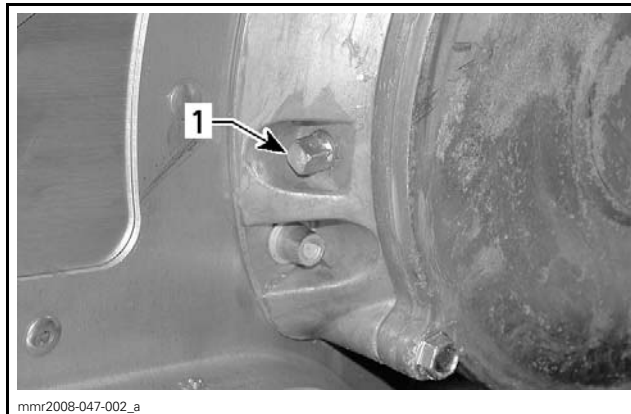


TYPICAL

1. Magnetic check plug

3. Remove metal particles from magnetic check plug.

NOTE: It is normal to find metallic particles stuck to magnetic check plug. If bigger pieces of metal are found, remove the chaincase cover and inspect the chaincase parts.

4. To add oil, remove the filler cap on top of chaincase cover.

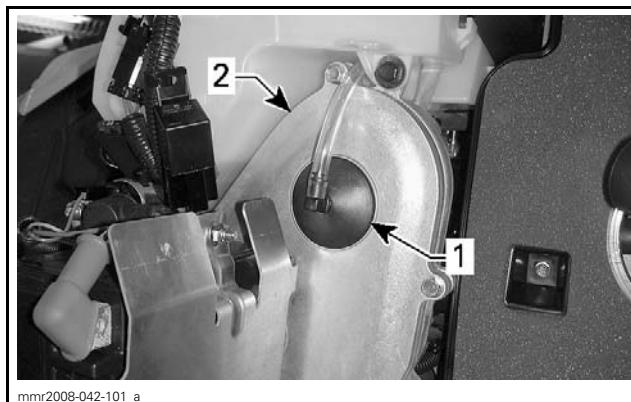

TYPICAL

1. Filling plug
2. Chaincase cover

5. Pour recommended oil in chaincase by the filler hole until oil comes out by the magnetic check plug hole.
6. Reinstall magnetic check plug and torque to specification.

TIGHTENING TORQUE

Magnetic check plug	6 N•m (53 lbf•in)
---------------------	-------------------

Chaincase Oil Replacement

Break-In	Scheduled Maintenance	Storage	Preseason
✓			✓


1. Place vehicle on a level surface.

2. Proceed with *CHAINCASE COVER REMOVAL* to allow oil to flow out of chaincase. See procedure in *CHAINCASE* subsection.
3. Proceed with *CHAINCASE COVER INSTALLATION*, see procedure in *CHAINCASE* subsection.
4. Pour approximately 350 ml (12 U.S. oz) of recommended oil in chaincase through the filler hole until oil comes out by the magnetic check plug hole.
5. Proceed with *CHAINCASE OIL LEVEL VERIFICATION*, see procedure in this subsection.

Drive Chain Adjustment

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

1. Remove muffler. Refer to *EXHAUST SYSTEM* subsection.
2. Unscrew the lock nut on tensioner adjustment screw.

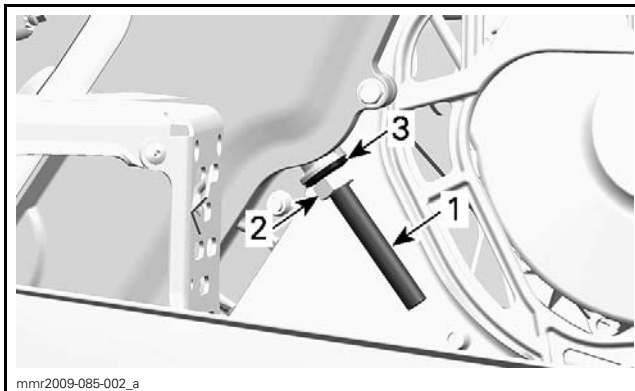

1. Tensioner adjustment screw
2. Lock nut
3. Washer with rubber surface

3. Push back washer with rubber surface.
4. Tighten tensioner adjustment screw **BY HAND**.
NOTE: Turn adjustment screw until resistance is strong enough that it can not be turned by hand.
5. Hold tensioner adjustment screw and tighten lock nut to specification.

TIGHTENING TORQUE	
Lock nut	36 N•m (27 lbf•ft)

DRIVE SYSTEM (TRACK)


Track Adjustment and Alignment

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

Track tension and alignment are interrelated. Do not adjust one without checking the other. Track tension procedure must be carried out prior to track alignment.

Track Tension Verification

1. Lift rear of vehicle and support it off the ground.
2. Allow rear suspension to fully extend.
3. Use a tensiometer.


REQUIRED TOOL	
TENSIOMETER (P/N 414 348 200)	

4. Set deflection to 3.2 cm (1.26 in) using bottom O-ring.




DEFLECTION SETTING

1. Bottom O-ring
5. Place upper O-ring to 0 kgf (0 lbf).
6. Position the tensiometer on track, halfway between front and rear idler wheels.
7. Push the tensiometer downwards until bottom O-ring (deflection) is aligned with the bottom of slider shoe.

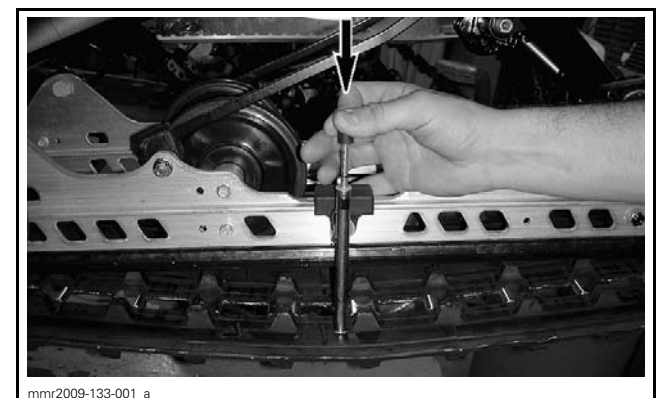

Subsection XX (PERIODIC MAINTENANCE PROCEDURES)

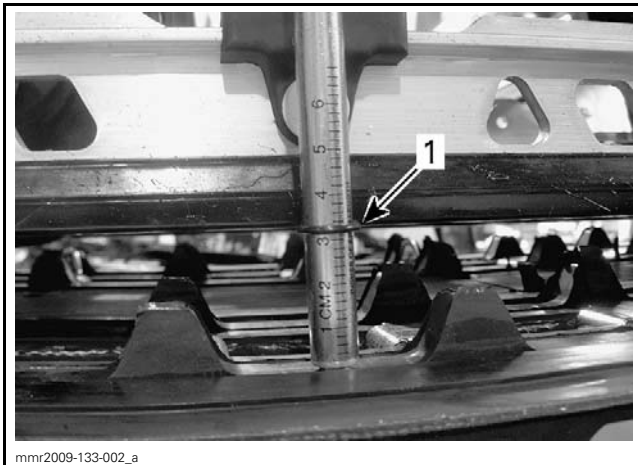

mnr2009-133-002_a

1. Deflection O-ring aligned with slider shoe

8. Read load recorded by the upper O-ring on the tensiometer.



mnr2009-133-003_a

LOAD READING

1. Upper O-ring

Load reading must be as per the following table.

TRACK ADJUSTMENT SPECIFICATION	
Track deflection setting	3.2 cm (1.26 in)
Track load reading	6.0 kgf to 8.5 kgf (13 lbf to 19 lbf)


9. If load reading is not in accordance with the specification, adjust track tension. Refer to *TRACK TENSION ADJUSTMENT*.

NOTICE Too much tension will result in power loss and excessive stresses on suspension components.

Track Tension Adjustment

NOTE: After track tension adjustment, ride the snowmobile in snow about 15 to 20 minutes and recheck track tension.


1. Lift rear of vehicle and support it off the ground.
2. Remove rear idler wheel caps.

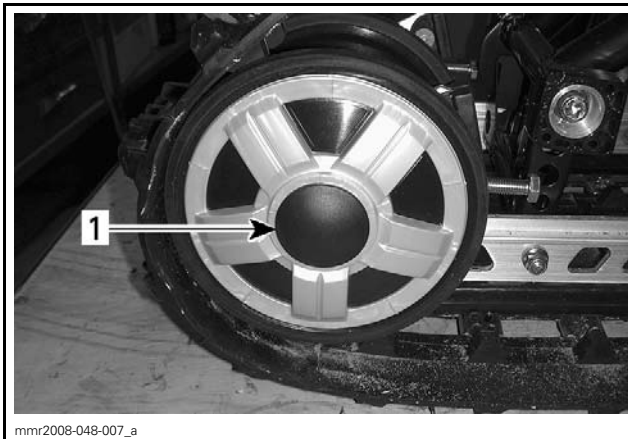

mnr2008-048-007_a

1. RH rear idler wheel cap


3. Loosen rear axle screws (one each side).

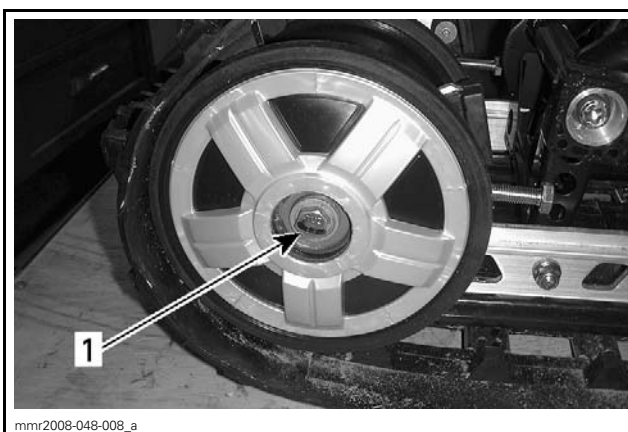

mnr2008-048-008_a

1. RH rear axle screw

4. Tighten or loosen both adjustment screws to increase or decrease track tension.

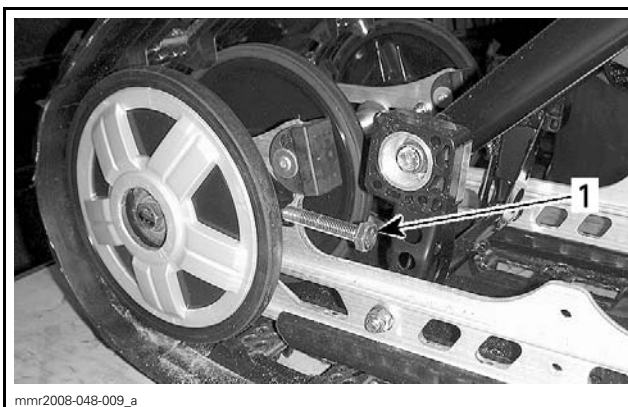

mnr2008-048-009_a

1. RH adjustment screw

5. Verify track tension, refer to *TRACK TENSION VERIFICATION*.


6. Ensure track is properly aligned, refer to *TRACK ALIGNMENT*.

Track Alignment

⚠ WARNING


Before checking track alignment, ensure that the track is free of all particles which could be thrown out while track is rotating. Keep hands, tools, feet and clothing clear of track. Ensure no one is standing in close proximity to the vehicle. Never rotate at high speed.

1. Lift rear of vehicle and support it off the ground.
2. Start engine and accelerate slightly so that track barely turns. This must be done in a short period of time (1 to 2 minutes).
3. Check that the track is well centered; equal distance on both sides between edges of track guides and slider shoes.

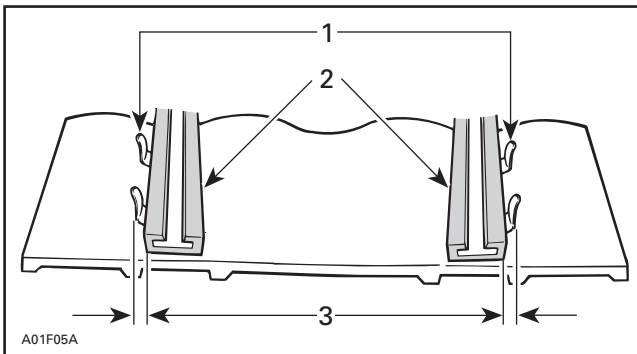

1. Guides
2. Slider shoes
3. Equal distance

4. To correct track alignment:
 - 4.1 Stop engine.
 - 4.2 Loosen rear wheel screws.
 - 4.3 Tighten adjustment screw on side where the slider shoe is the farthest from the track insert guides.

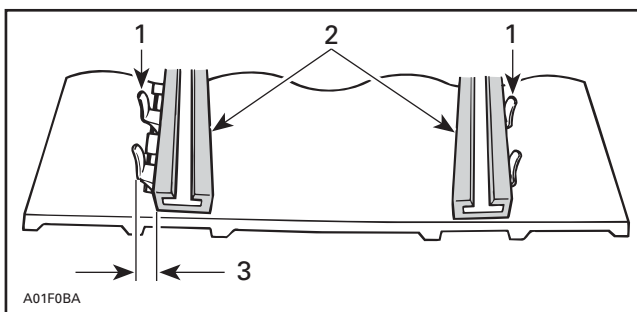

1. Guides
2. Slider shoes
3. Tighten on this side

5. Restart engine.
6. Rotate track slowly and recheck alignment.

7. If satisfactory track alignment is achieved:
 - 7.1 Torque idler wheel retaining screws to specification.

TIGHTENING TORQUE	
Idler wheel retaining screws	48 N•m (35 lbf•ft)

- 7.2 Reinstall wheel caps.

BRAKE

Recommended Brake Fluid

Always use brake fluid meeting the DOT 4 specification.


RECOMMENDED SERVICE PRODUCT
BRAKE FLUID (P/N 293 600 131) meeting DOT 4 specification

Brake Fluid Level Verification

Break-In	Scheduled Maintenance	Storage	Preseason
✓			✓

With the vehicle on a level surface, position steering in the straight-ahead position to ensure reservoir is level.

Brake fluid must always be above the MIN. line when brake lever is squeezed.

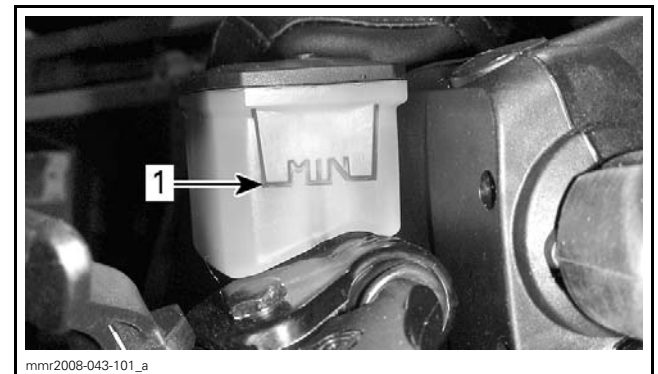

1. MINIMUM line

Add fluid as required. Do not overfill.

NOTE: A low level may indicate leaks or worn brake pads.


Brake Fluid Replacement

Break-In	Scheduled Maintenance	Storage	Preseason
	✓		

Subsection XX (PERIODIC MAINTENANCE PROCEDURES)


Brake Fluid Draining

1. Place vehicle on a level surface.
2. Remove reservoir cover with its diaphragm.

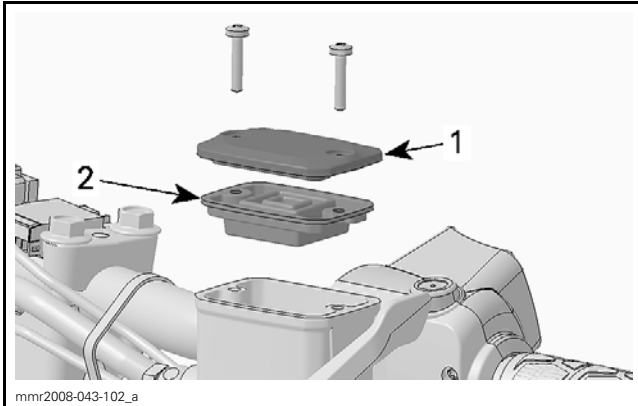

1. Reservoir cover
2. Diaphragm

3. Connect a clear hose to caliper bleeder.
4. Place the other end of hose in a container.
5. Loosen bleeder and pump brake lever until no more fluid flows out of bleeder.

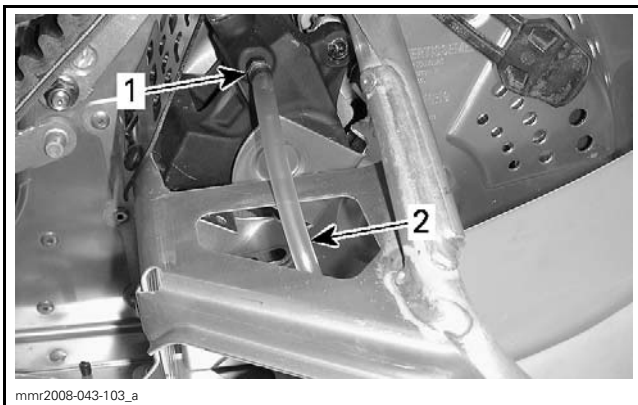

1. Bleeder
2. Clear hose to catch used brake fluid

Brake Fluid Filling

To fill brake circuit when it is empty do the following:

1. Ensure reservoir cover is removed.
2. Using a large syringe and a suitable tube, push brake fluid slowly into the caliper.



3. Continue to push brake fluid until master cylinder reservoir is half full.
4. Close bleeder.
5. Fill up reservoir and install cover.
6. Squeeze brake lever.
 - 6.1 If brake lever is firm, the brake system does not require bleeding. Torque bleeder as specified.

TIGHTENING TORQUE	
Brake caliper bleeder	9N•m (80lb•in)

- 6.2 If brake lever is spongy, bleed brake system as per following procedure.

Brake System Bleeding

1. Install a clear hose on bleeder.
2. Place the other end in a container partially filled with clean brake fluid.
3. Pump up circuit pressure with brake lever until lever resistance is felt.
4. Squeeze brake lever and open bleeder. When lever touches the handlebar, do not release lever and close bleeder.
5. Release brake lever slowly.
6. Repeat the procedure until no more air bubbles appear in hose.

NOTE: Check fluid level often to prevent air from being pumped into the circuit.

7. Install cover on reservoir.
8. Squeeze brake lever.
 - 8.1 If brake lever is firm, bleeding procedure is completed. Torque bleeder as specified.
 - 8.2 If brake lever is still spongy, go to step 9.
9. Push back brake pads with caliper in place and squeeze brake lever.
10. Repeat step 2 to step 5.

11. Torque bleeder as specified.

TIGHTENING TORQUE	
Brake caliper bleeder	9 N•m (80 lbf•in)

12. Refill reservoir.

13. Install diaphragm and cover on reservoir.

Brake Hose, Pads and Disc Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

Break-In Inspection

Visually inspect the brake hose for leaks or any damage.

Visually inspect pads and disc for abnormal wear or any damage.

Scheduled Maintenance and Preseason

Visually inspect the brake hose for leaks or any damage.

Refer to *BRAKE* subsection and carry out:


- *BRAKE PAD INSPECTION*
- *BRAKE DISC INSPECTION*.

Brake Lever Pivot Lubrication

Break-In	Scheduled Maintenance	Storage	Preseason
		✓	

1. Remove brake lever pivot.
2. Lubricate brake lever pivot using recommended product.

SERVICE PRODUCT	
Brake lever pivot	XPS SYNTHETIC GREASE (P/N 293 550 010)

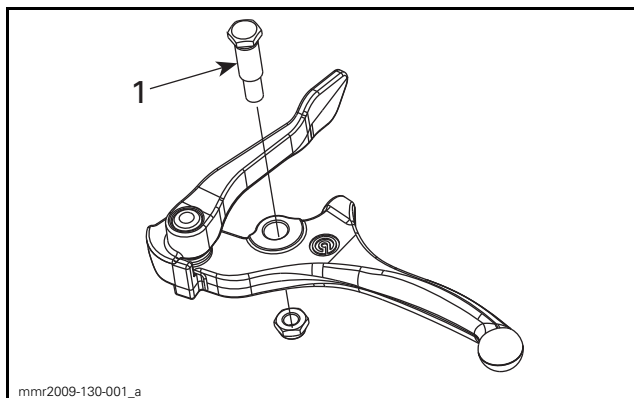

1. Lubricate this surface

3. Install brake lever pivot.

4. Torque pivot nut of brake lever as specified.

TIGHTENING TORQUE	
Brake lever pivot nut	6 N•m (53 lbf•in)

CHASSIS (SUSPENSION)

Front Suspension Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

Visually inspect front suspension for tightness of components:

- Arms
- Stabilizer bar
- Shock absorbers
- Ball joints.

Rear Suspension, Stopper Strap and Slider Shoes Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

Rear Suspension Mechanism and Stopper Strap Inspection


1. Inspect rear suspension components for wear, deterioration or damage, replace defective parts if necessary.
2. Inspect stopper strap(s) for wear or cracks.
3. Check bolt and nut securing strap(s) for tightness. If loose, inspect strap holes for deformation. Replace strap if necessary.

Slider Shoe Inspection

Slider shoes are worn out and must be replaced when remaining material exceeding the 2 molding lines is as specified.

MINIMUM SLIDER SHOE THICKNESS
1 mm (.04 in) material remaining exceeding the 2 molding lines

Subsection XX (PERIODIC MAINTENANCE PROCEDURES)

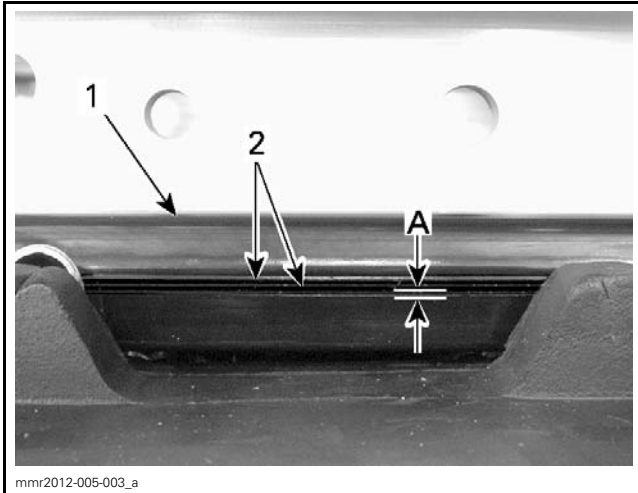

1. Slider shoe
 2. Molding lines
 A. Minimum thickness: 1 mm (.04 in)


NOTICE Slider shoes must always be replaced in pairs.

Rear Suspension Lubrication

Break-In	Scheduled Maintenance	Storage	Preseason
	✓	✓	


Lubricate the following suspension pivots at grease fittings using SUSPENSION GREASE (P/N 293 550 033).

Lubrication (SC-5)

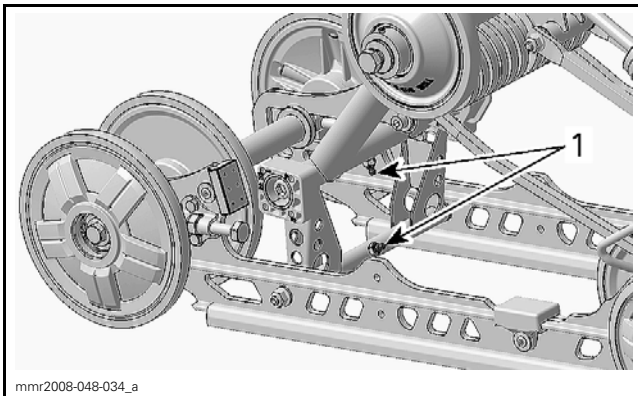


REAR ARM PIVOT AND PIVOT ARM
 1. Grease fittings


Lubrication (SC™-5M)

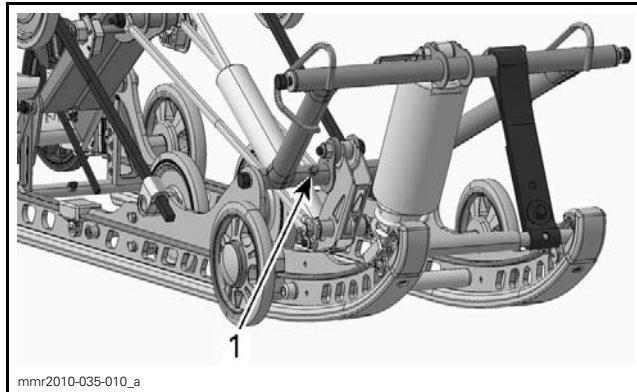

FRONT ARM PIVOT
 1. Grease fitting

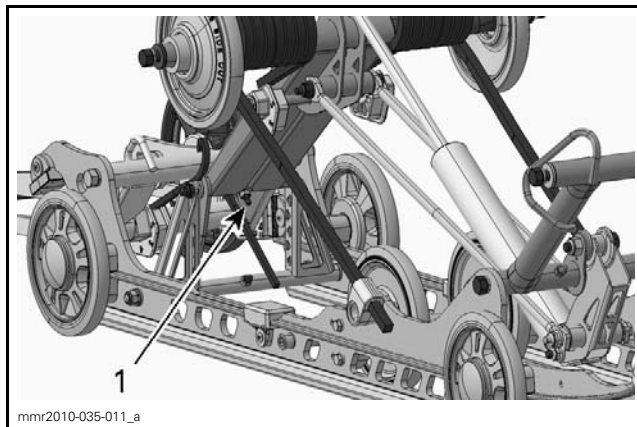


REAR ARM PIVOT
 1. Grease fitting

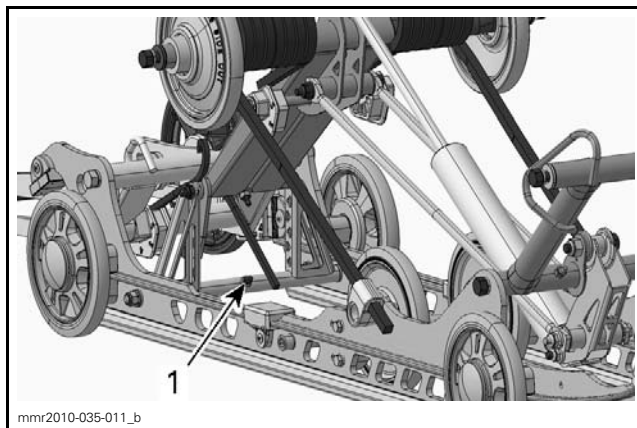


PIVOT ARM
 1. Grease fitting

Lubrication (rMotion)

Visually inspect steering mechanism for tightness of components (steering arms, tie rods, ski bolts, ski legs, etc.).

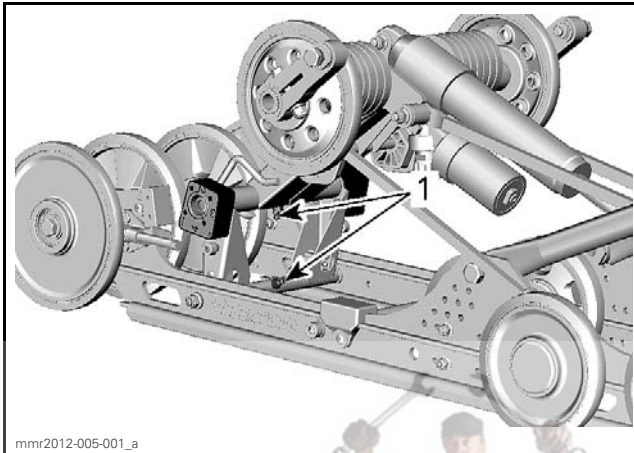

mmr2012-005-001_a
REAR ARM PIVOT AND PIVOT ARM (WITHOUT QUICK ADJUST)
 1. Grease fittings

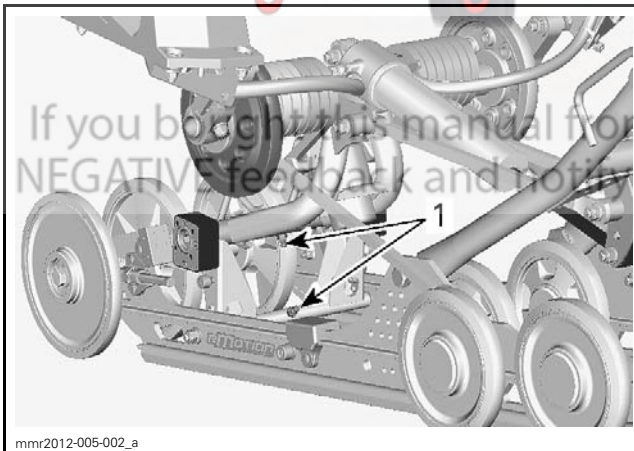

mmr2012-005-002_a
REAR ARM PIVOT AND PIVOT ARM (WITH QUICK ADJUST)
 1. Grease fittings



Paperless Manuals
 For a Better Tomorrow

If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

CHASSIS (STEERING)

Ski and Runner Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓			✓

Lift the front of vehicle and check ski runners for wear or damage (missing or broken carbide). Replace if necessary.

Inspect ski for excessive wear or other damage. Replace if necessary.

Steering Mechanism Inspection

Break-In	Scheduled Maintenance	Storage	Preseason
✓	✓		✓

STORAGE PROCEDURE

During summer, or when a snowmobile is not in use for more than three months, proper storage is a necessity.

Procedures are detailed in *PERIODIC MAINTENANCE PROCEDURES* subsection.

STORAGE
Clean the vehicle
Add fuel stabilizer to fuel following the product manufacturer recommendations. Run the engine after adding the product to the fuel
Lubricate engine
Lubricate brake lever pivot
Inspect and lubricate rear suspension
Charge battery monthly to keep it fully charged during storage
Block muffler outlet with rags
Lift rear of vehicle until track is clear of the ground. Do not release track tension

⚠ CAUTION Use appropriate lifting device or have assistance to share lifting stress. If a lifting device is not used, use proper lifting techniques, notably using your legs force. Do not attempt to lift the rear of vehicle if it is above your limits.

NOTICE The snowmobile has to be stored in a cool and dry place and covered with an opaque but ventilated tarpaulin. This will prevent sun rays and grime from affecting plastic components and vehicle finish.

PRESEASON PREPARATION

Proper vehicle preparation is necessary after the summer months or when a vehicle has not been used for more than three months.

Procedures are detailed in *PERIODIC MAINTENANCE PROCEDURES* subsection.

PRESEASON PREPARATION
Inspect engine rubber mounts
Check exhaust system condition and check for leaks
Tighten exhaust manifold screws or nuts to specified torque
Inspect cooling system cap, hoses and clamps
Check coolant density
Inspect crankshaft PTO seal
Inspect fuel lines and connections
Clean and inspect throttle body
Inspect throttle cable
Inspect drive belt (adjust at every drive belt replacement)
Clean and visually inspect drive pulley
Clean and inspect driven pulley
Inspect, adjust and align track
Adjust drive chain
Change chaincase oil
Check brake fluid level
Inspect brake hose, pads and disc
Inspect steering mechanism
Inspect skis and runners
Inspect front suspension
Inspect rear suspension stopper strap
Charge battery (if so equipped)
Adjust headlight beam aiming

ENGINE REMOVAL AND INSTALLATION

SERVICE TOOLS


Description	Part Number	Page
ENGINE LIFTING HOOK.....	529 035 829	7, 10-11
ENGINE LIFTING TOOL	529 036 131	7, 10-11
SMALL HOSE PINCHER	295 000 076	7

SERVICE PRODUCTS


Description	Part Number	Page
LOCTITE 243 (BLUE).....	293 800 060	10

Subsection XX (ENGINE REMOVAL AND INSTALLATION)

600 HO E-TEC and 800R E-TEC

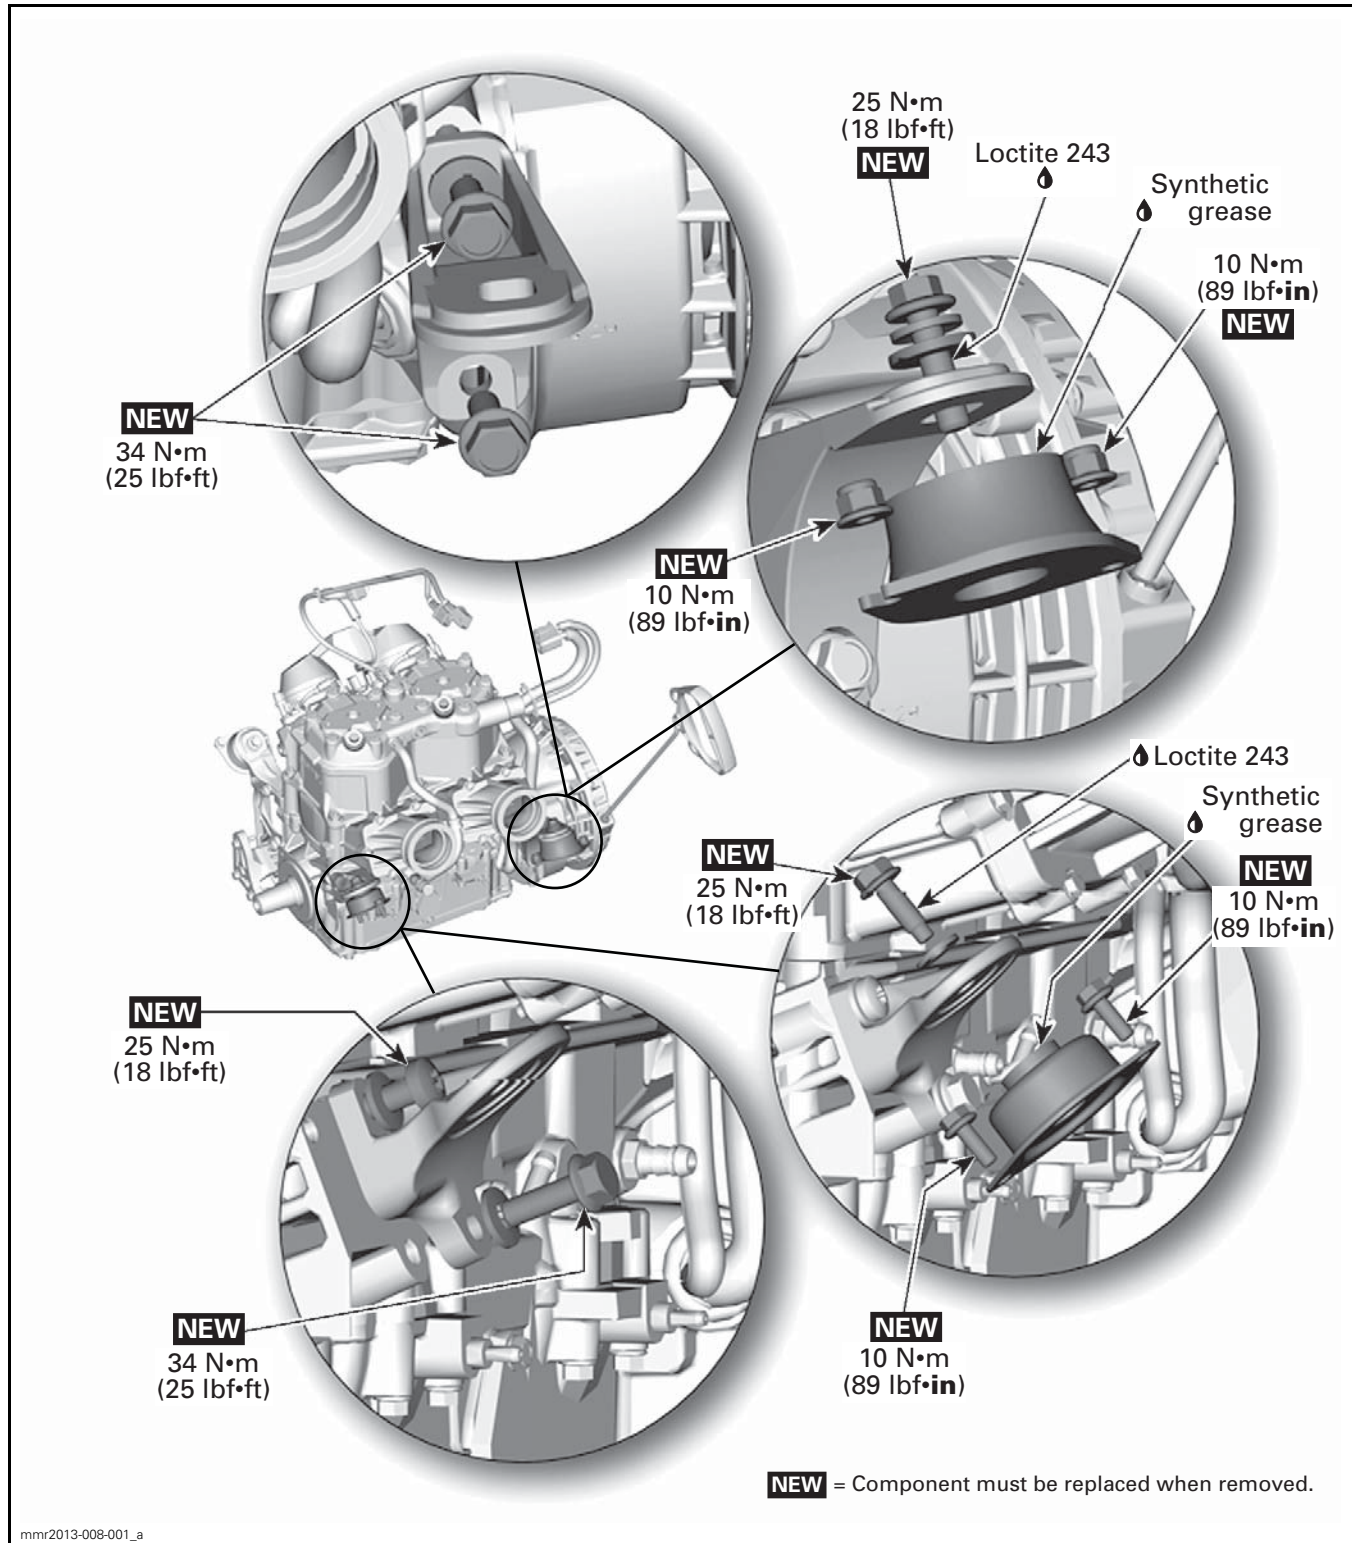

mnr2013-008-001_a

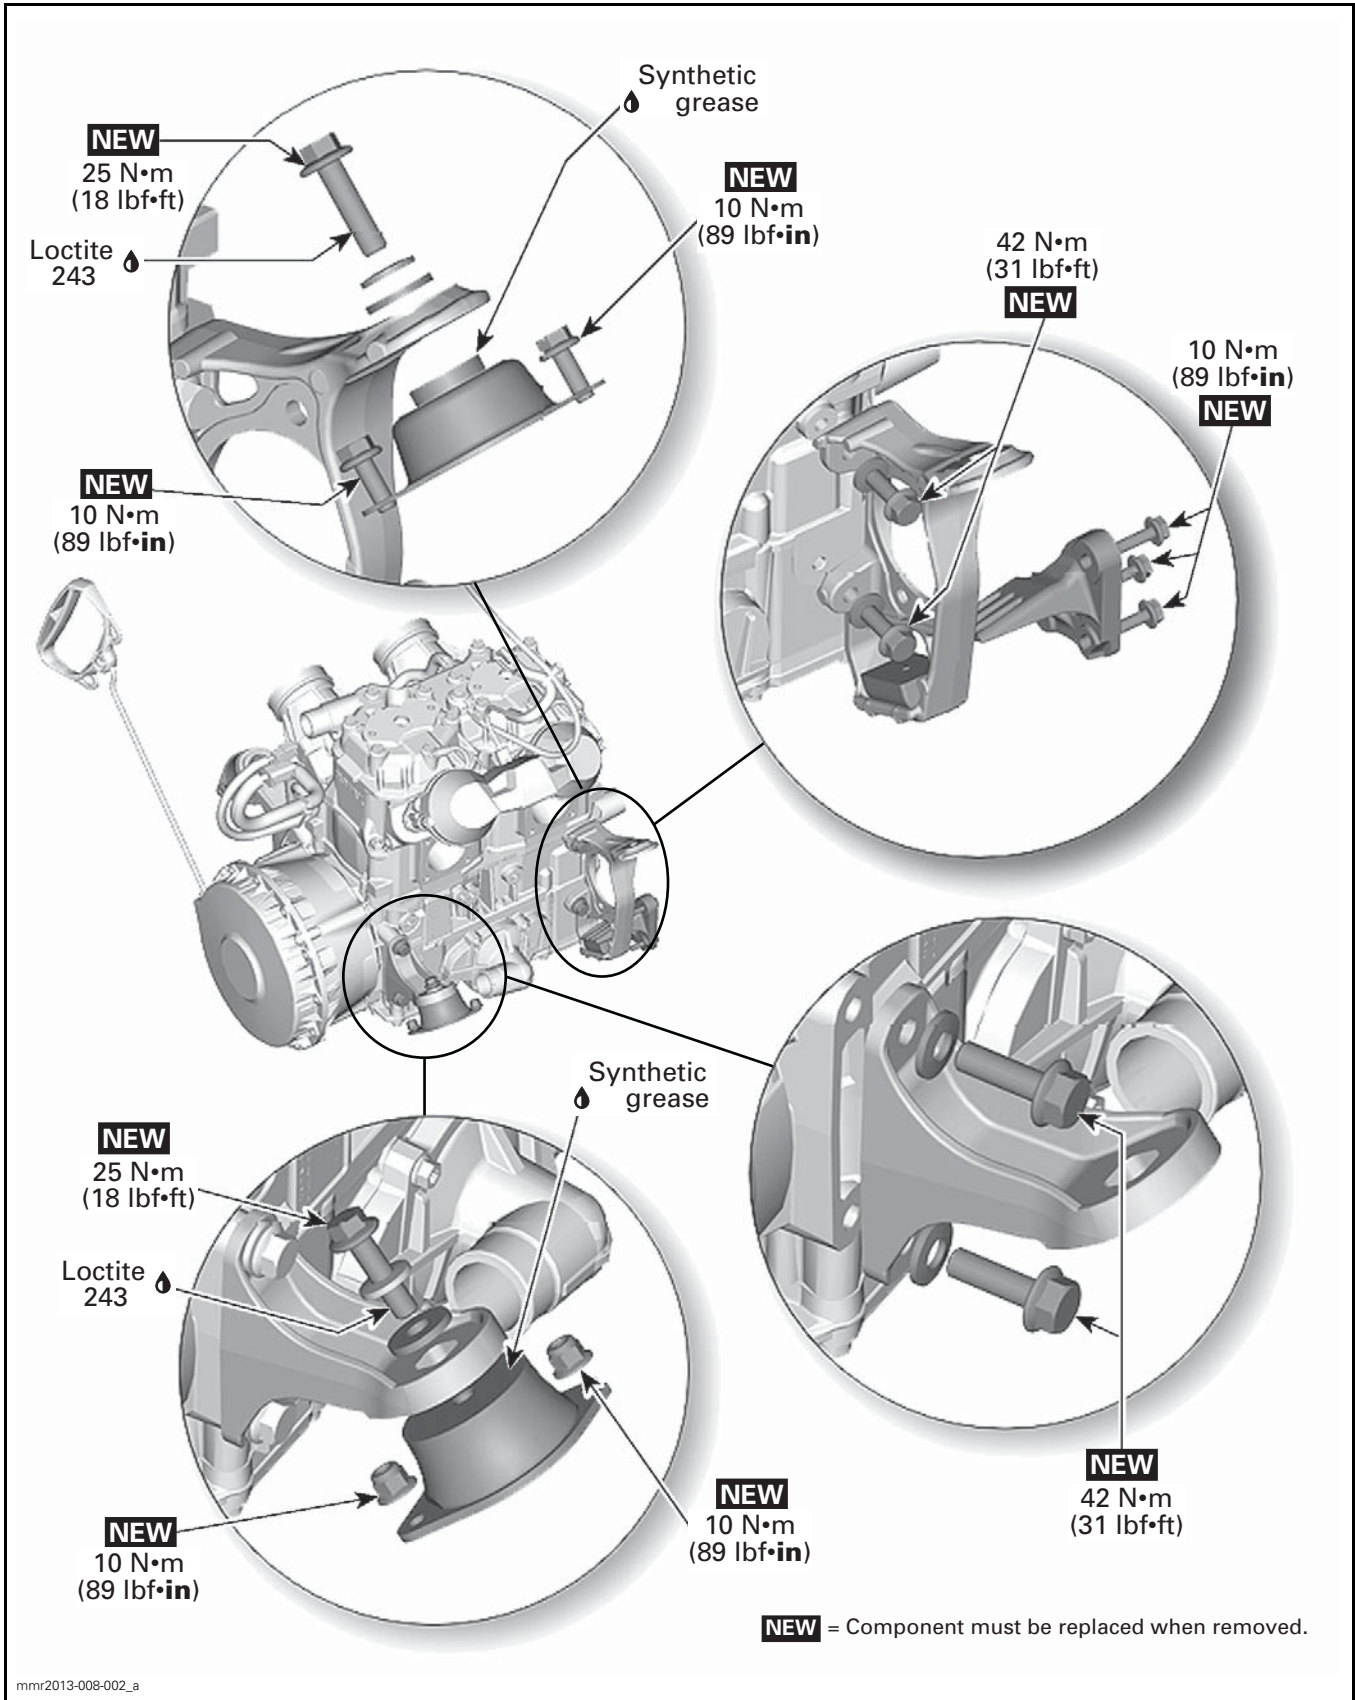

mmr2013-008-002_a

GENERAL

During assembly/installation, use the torque values and service products as shown in the exploded views.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, elastic stop nuts, cotter pin, etc.) must be replaced with new ones.


NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

PROCEDURES

ENGINE

Engine Removal

1. Place vehicle at workstation that will have access to an engine-lifting hoist.
2. Remove fuel pressure using B.U.D.S. software. Refer to *ELECTRIC FUEL PUMP* in *FUEL TANK AND FUEL PUMP* subsection.
3. Refer to *BODY* subsection and remove:
 - LH and RH side panels
 - Upper body module
 - Front bottom pan cover.
4. Refer to *AIR INTAKE SYSTEM* subsection and remove the primary air intake silencer.
5. Refer to *EXHAUST SYSTEM* subsection and remove:
 - Muffler
 - Tuned pipe.
6. Remove drive pulley. Refer to *DRIVE PULLEY* subsection.
7. Refer to *DRIVEN PULLEY AND COUNTER-SHAFT* subsection and remove:
 - Driven pulley
 - Countershaft bearing support.
8. Place a drain pan under engine compartment.
9. Disconnect water pump hose to drain engine coolant.

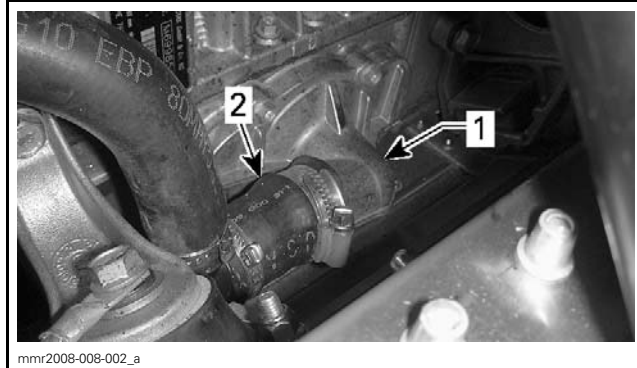

- mmr2008-008-002_a
1. Water pump cover
 2. Remove this hose

10. On applicable models, disconnect electric starter wire.




- mmr2011-008-001_a
11. On applicable models, remove rewind starter cover screws and place rewind starter housing aside.




- mmr2008-008-004_a
- TYPICAL**
1. Rewind starter cover

12. Disconnect 3D RAVE solenoid connector.
13. Remove screws securing 3D RAVE solenoid.
14. Disconnect CPS sensor and magneto connectors.

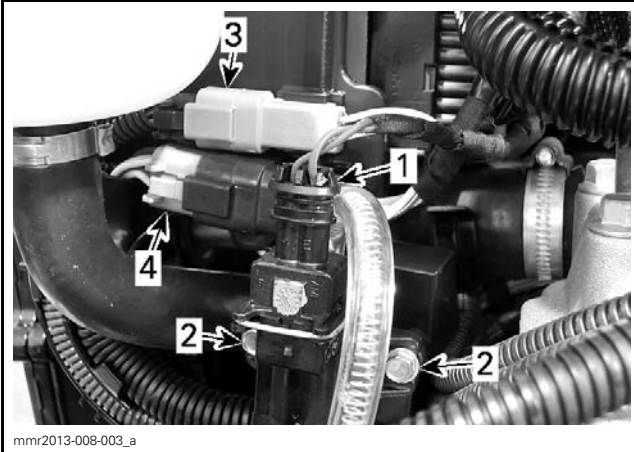

- 1. 3D RAVE solenoid connector
- 2. 3D RAVE solenoid retaining screws
- 3. CPS sensor connector
- 4. Magneto connector

15. Remove and discard screw securing front MAG engine support to front rubber mount.

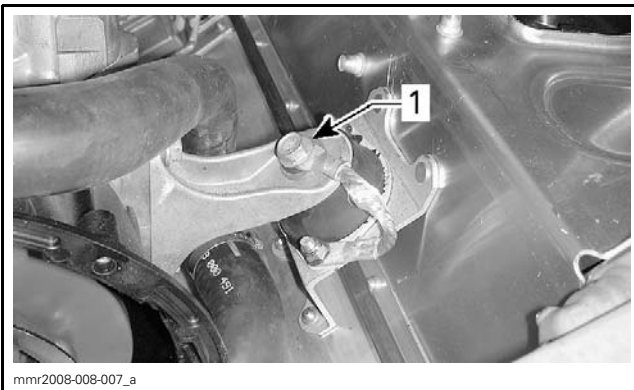


- 1. Front engine support screw

16. Remove throttle body heater hose from the cylinder head.



- 1. Heater hose


17. Unscrew clamps securing throttle body to intake adapters.

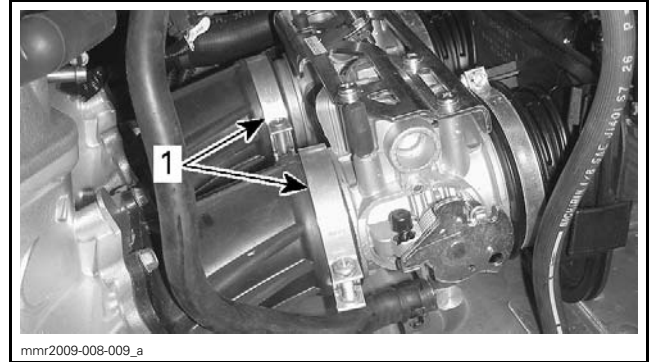


- 1. Throttle body clamps

18. Move and attach throttle body aside.

19. Disconnect spark plug cables.

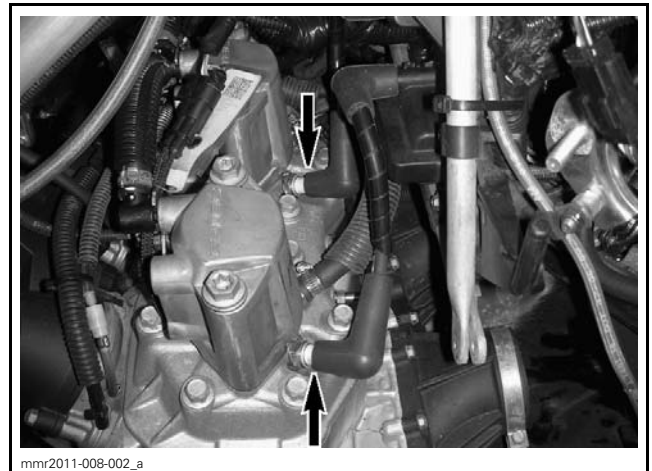

20. Disconnect coolant temperature sensor (CTS) connector (at the RH of ignition coil).

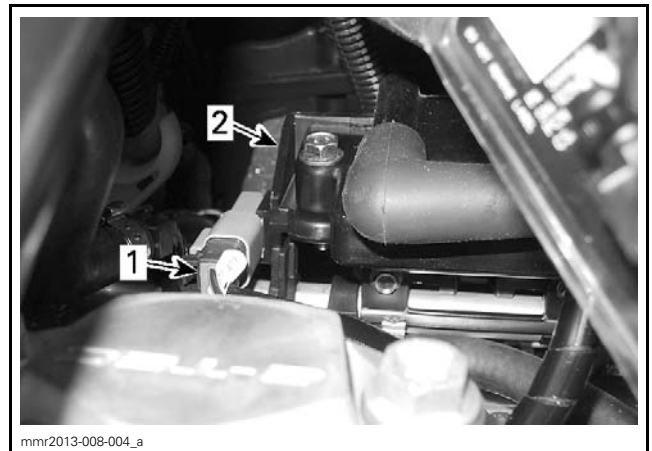

- 1. CTS connector
- 2. Ignition coil

21. Remove and discard screw securing rear MAG engine support to rear rubber mount.

Subsection XX (ENGINE REMOVAL AND INSTALLATION)



22. Disconnect coolant hose from cylinder head.



TYPICAL

1. Coolant hoses from coolant reservoir



1. Coolant hose

23. Disconnect fuel injector connectors.


24. Remove screws that attach fuel injector hose retainers to fuel injectors.



1. Knock sensor

28. Remove spark plugs from engine.

29. Disconnect 3D RAVE connector.

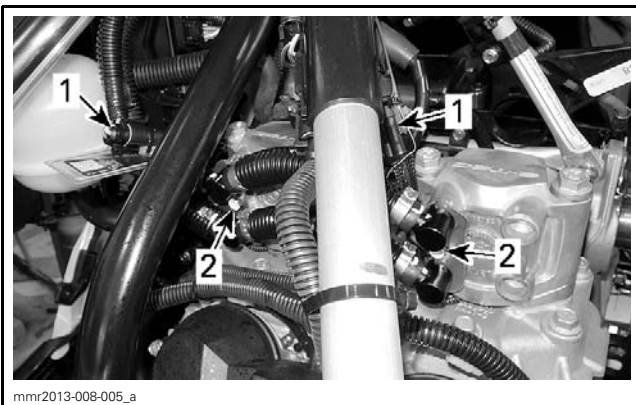

1. Fuel injector connectors

2. Fuel injector hose retainer screws


25. Place a rag at the bottom of fuel injectors and unplug fuel hoses from fuel injectors.

26. Disconnect coolant hoses on the top of cylinder head.



30. Disconnect oil hoses from 3D RAVE valves.

Subsection XX (ENGINE REMOVAL AND INSTALLATION)

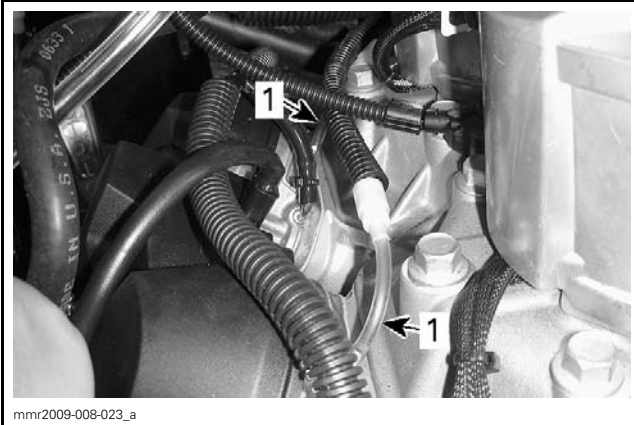

TYPICAL


1. 3D RAVE valve oil hoses

31. Install engine lifting tool into knock sensor retaining hole.


REQUIRED TOOL	
ENGINE LIFTING TOOL (P/N 529 036 131)	

NOTE: Use knock sensor screw to secure lifting tool on cylinder head.

32. Place engine lifting hook into lifting tool rings.


REQUIRED TOOL	
ENGINE LIFTING HOOK (P/N 529 035 829)	

33. Remove engine stopper. Discard screws.

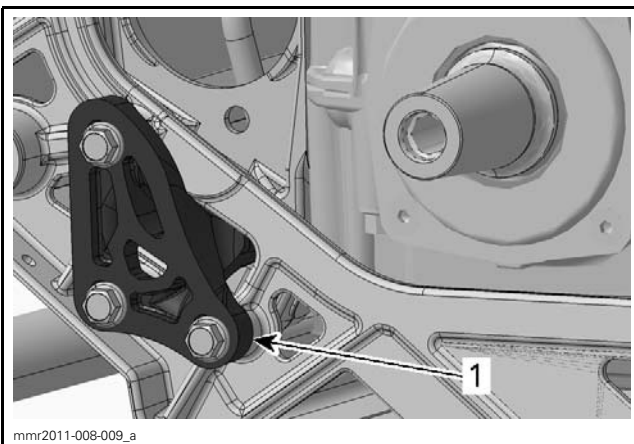

1. Engine stopper


34. Remove and discard screws securing PTO engine supports to front and rear rubber mounts.

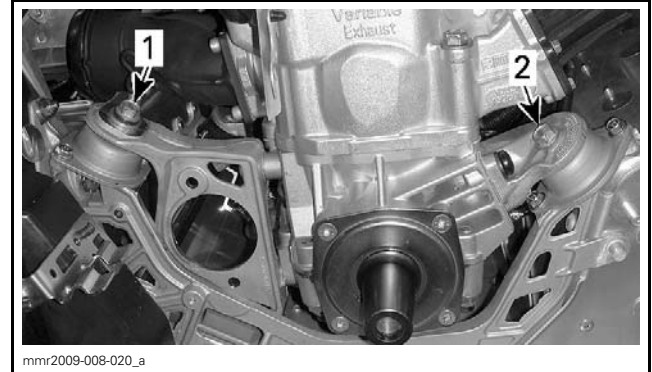

1. Front engine support screw
2. Rear engine support screw


35. Slightly lift the engine.

36. Remove PTO rear rubber mount.

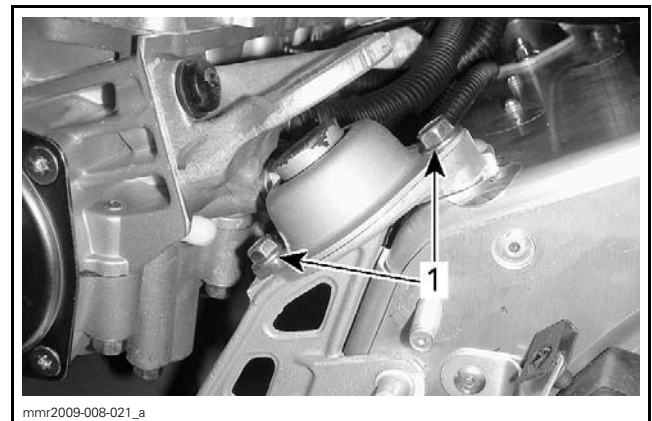


1. Rubber mount screws

37. Clear coolant hose from MAG front engine support.

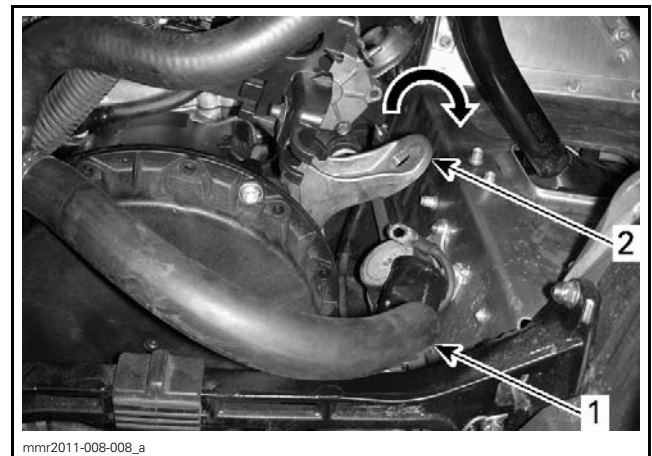


1. Coolant hose
2. Front MAG engine support

38. Block the oil return hose.

REQUIRED TOOL	
SMALL HOSE PINCHER (P/N 295 000 076)	


Subsection XX (ENGINE REMOVAL AND INSTALLATION)

39. Disconnect oil return hose.

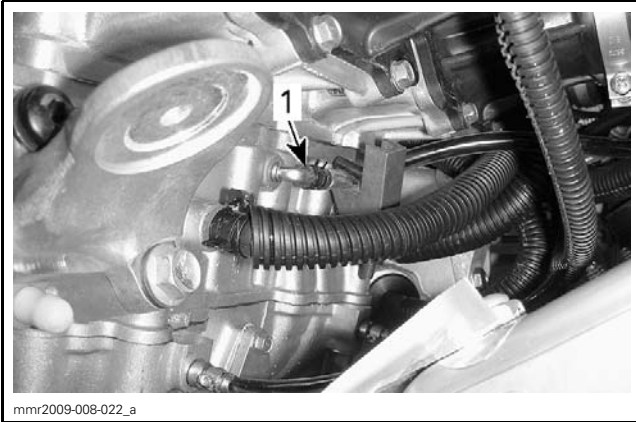

1. Oil return hose

40. Disconnect oil inlet hoses from crankcase. Discard Oetiker clamps.

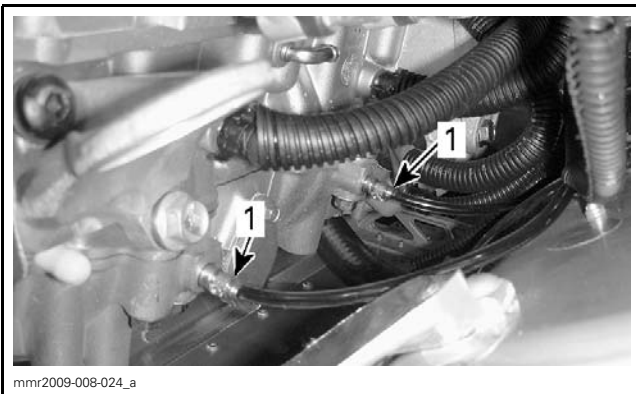

1. Inlet hoses

41. Lift engine and slide it out of vehicle.

NOTICE Pay attention not to damage fuel hoses or adapters.

Engine Installation

To install engine, reverse the removal procedure. However, pay attention to the following.

- Install **NEW** self-locking screws where required, refer to exploded views at the beginning of this subsection.
- Install **NEW** Oetiker clamps when installing oil inlet hoses.
- Install and tighten engine support bolts. Refer to *ENGINE SUPPORT INSTALLATION* in this subsection.
- Install and adjust engine stopper. Refer to *ENGINE STOPPER ADJUSTMENT* in this subsection.

- Oil hoses must be routed correctly to avoid lubrication problems. To route hoses correctly, refer to *OIL INJECTION PUMP HOSES CONNECTION* in *LUBRICATION SYSTEM* subsection.
- When engine installation is completed, bleed oil system. Refer to *LUBRICATION SYSTEM* subsection.
- If a new engine is installed or the engine was repaired, restart the break-in procedure in B.U.D.S..

ENGINE STOPPER

Engine Stopper Adjustment


Summit Models

On these models, there is no play between engine stopper and rubber stop block (on engine).

All Other Models


The engine stopper is located on the LH front engine support, in front of the drive pulley.

1. Remove LH side panel, refer to *BODY* subsection.
2. Remove drive belt guard, refer to *DRIVE BELT* subsection.
3. Loosen the three screws retaining engine stopper to engine support just enough to allow a vertical play (1/2 to one turn).

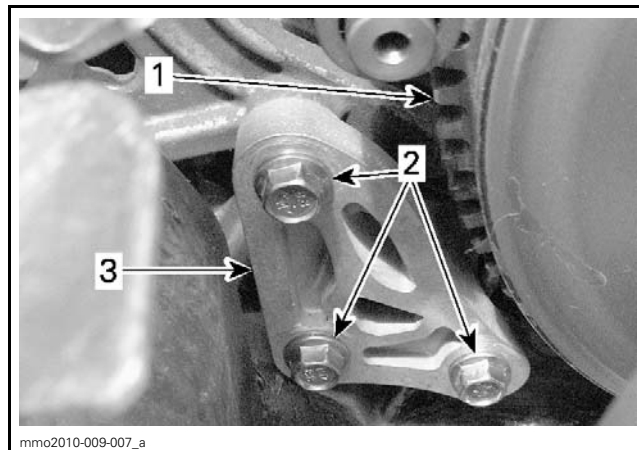

1. Drive pulley
2. Engine stopper screws
3. Engine stopper


4. Insert a 0.5 mm (.02 in) feeler gauge in the engine stopper opening (see illustration).

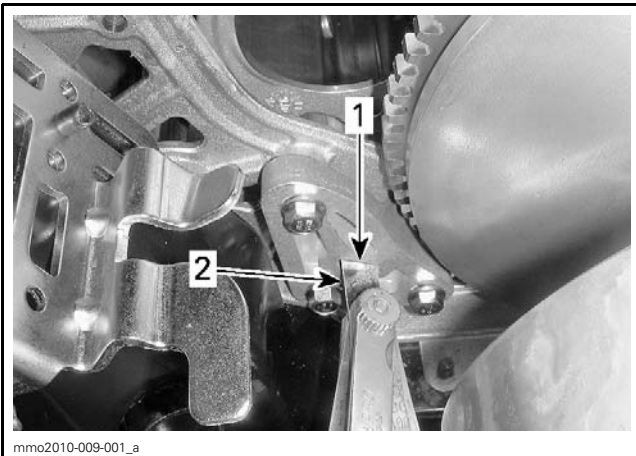

1. Opening
2. Feeler gauge

5. Place feeler gauge between engine stopper and rubber stop block (on engine).


NOTE: Do not insert the feeler gauge too deep, as it will pass over the bump at the surface of the rubber stop block and alter adjustment. See illustration.

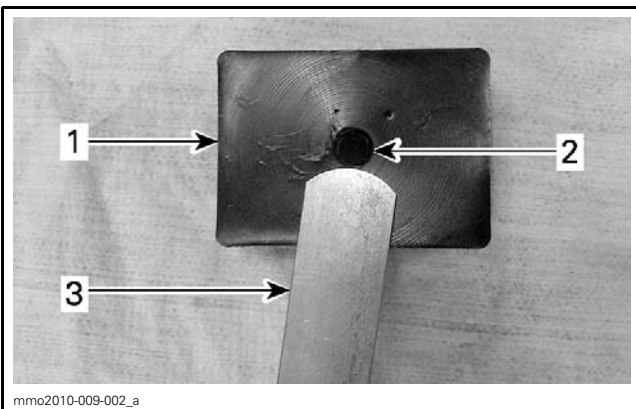

- TYPICAL**
1. Rubber stop block
 2. Bump
 3. Feeler gauge

6. Tighten engine stopper screws to specification following the illustrated sequence.

TIGHTENING TORQUE	
Engine stopper screws	10 N•m (89 lbf•in)

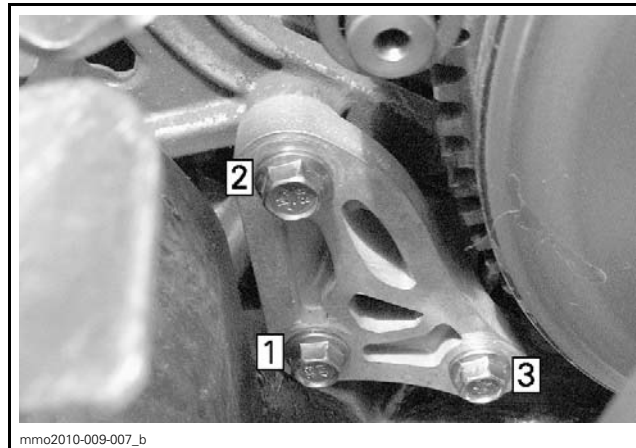

TIGHTENING SEQUENCE

NOTE: Take care not to pinch the feeler gauge.

NOTICE Serious pulley damage can occur if the engine stopper and its screws are not properly installed.

ENGINE SUPPORT

Engine Support Inspection

Check if engine supports are cracked, bent or damaged. Replace if necessary.


PTO Side Engine Support Removal (Engine not Removed)

NOTE: On vehicle with electric starter, remove the electric starter. Refer to *STARTING SYSTEM* subsection.

Remove drive and driven pulleys. Refer to *DRIVE PULLEY* and *DRIVEN PULLEY AND COUNTER-SHAFT* subsections.

Remove tuned pipe. Refer to *EXHAUST SYSTEM* subsection.

Remove and discard screws securing PTO engine supports to front and rear rubber mount adapters.

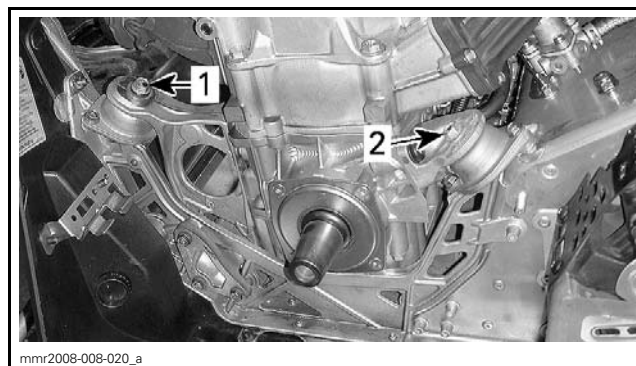

1. Front engine support screw
2. Rear engine support screw

Subsection XX (ENGINE REMOVAL AND INSTALLATION)

Insert a pry bar over the LH frame member and gently raise the engine just enough to remove engine weight from support.

Remove and discard screws retaining engine support to engine.

Remove engine support.

MAG Side Engine Support Removal (Engine not Removed)

Remove muffler and tuned pipe. Refer to *EXHAUST SYSTEM* subsection.

Remove driven pulley. Refer to *DRIVEN PULLEY AND COUNTERSHAFT* subsection.


Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.

Unscrew clamps retaining throttle body to intake adapters.

Move and attach throttle body aside.


Remove knock sensor.

Install the engine lifting tool into knock sensor retaining hole.

REQUIRED TOOL	
ENGINE LIFTING TOOL (P/N 529 036 131)	

NOTE: Use knock sensor screw to secure lifting tool on cylinder head.

Place the engine lifting hook into lifting tool rings.

REQUIRED TOOL	
ENGINE LIFTING HOOK (P/N 529 035 829)	

Remove and discard screws securing engine supports to rubber mount adapters.

Lift engine.

Remove and discard screws retaining engine support to engine.

Remove engine support.


Engine Support Installation

The installation is the reverse of the removal procedure, however pay attention to the following.

NOTICE Engine stopper must be adjusted after installing engine support.

Apply LOCTITE 243 (BLUE) (P/N 293 800 060) on the first two threads of the engine support screws.

Front engine supports (PTO and MAG sides) are secured using a conical washer and a flat washer.

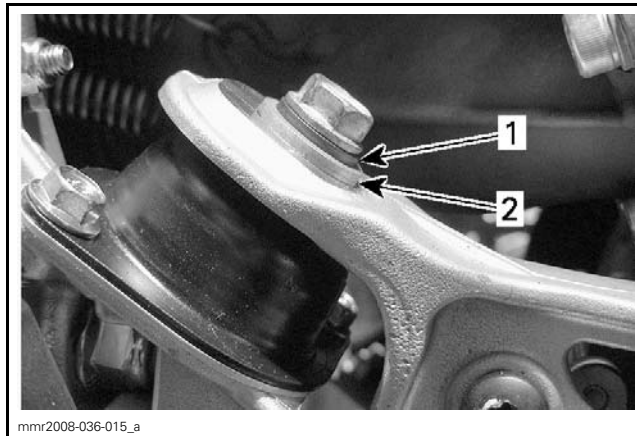


FRONT ENGINE MOUNT (PTO SIDE)

1. Conical washer
2. Flat washer


Tighten engine supports screws to specification.

ENGINE SUPPORT SCREWS	
Tightening Torque	25 N•m (18 lbf•ft)
Tightening Sequence	1 = Rear engine support (PTO side)
	2 = Front engine support (PTO side)
	3 = Rear engine support (MAG side)
	4 = Front engine support (MAG side)

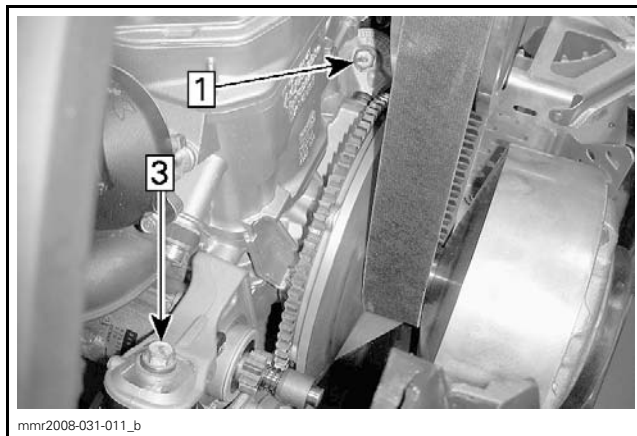

TYPICAL — PTO SIDE

- Step 1: Rear engine support (PTO side)
- Step 3: Front engine support (PTO side)

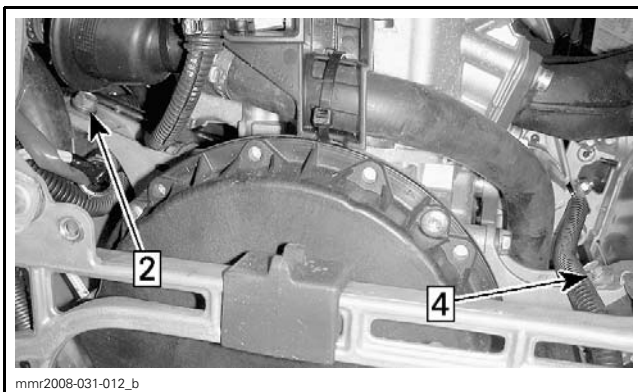

TYPICAL — MAG SIDE
 Step 2: Rear engine support (MAG side)
 Step 4: Front engine support (MAG side)

Lift engine.

Unscrew screws or nuts securing engine rubber mounts to frame.

Engine Rubber Mount Installation

The installation is the reverse of the removal procedure.

Adjust engine stopper, refer to *ENGINE STOPPER ADJUSTMENT* in this subsection.

ENGINE RUBBER MOUNTS

Engine Rubber Mount Inspection

Check rubber mounts. Replace them if brittle, cracked or damaged.

Engine Rubber Mount Removal

Remove muffler and tuned pipe. Refer to *EXHAUST SYSTEM* subsection.

Remove driven pulley. Refer to *DRIVEN PULLEY AND COUNTERSHAFT* subsection.


Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.

Unscrew clamps retaining throttle body to intake adapters.

Move and attach throttle body aside.


Remove knock sensor.

Install the engine lifting tool into knock sensor retaining hole.

REQUIRED TOOL	
ENGINE LIFTING TOOL (P/N 529 036 131)	

NOTE: Use knock sensor screw to secure lifting tool on cylinder head.

Place the engine lifting hook into lifting tool rings.

REQUIRED TOOL	
ENGINE LIFTING HOOK (P/N 529 035 829)	

Remove and discard screws securing engine supports to rubber mount adapters.

ENGINE LEAK TEST

SERVICE TOOLS


Description	Part Number	Page
INTAKE PLUG	529 036 203	3
MANIFOLD PLUG 63 MM (2-1/2")	529 035 961	3
SMALL HOSE PINCHER	295 000 076	3
VACUUM/PRESSURE PUMP	529 021 800	3



If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

PROCEDURES


NOTE: This flow chart must be used as a visual reference during the engine leak test procedure.

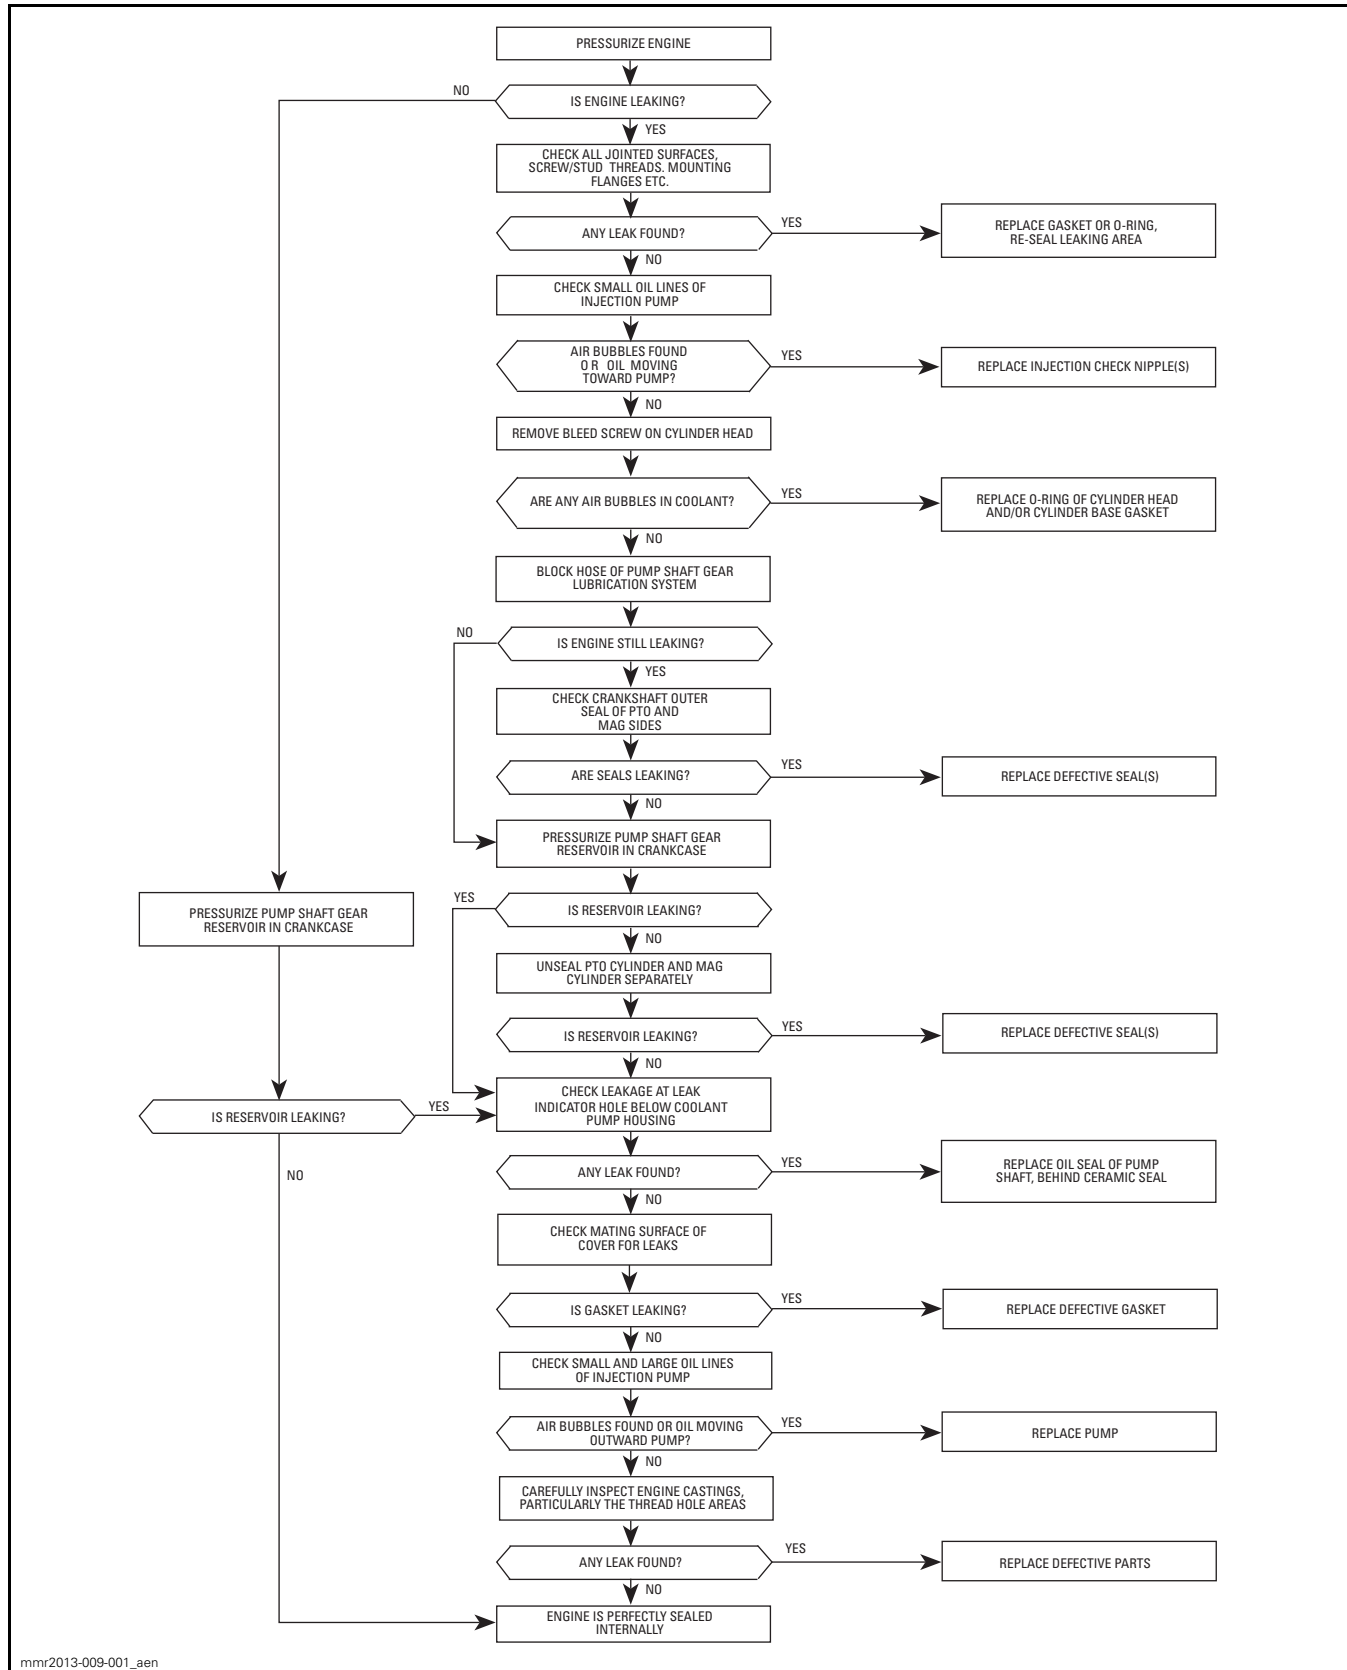


ENGINE LEAK TEST

Prior to take apart an engine, it is important to proceed with a leak test to diagnose engine problems. Whenever the engine is disassembled, a leak test should be performed after reassembly.

1. Remove engine. Do not remove the exhaust manifold. Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.
2. Install appropriate plug over exhaust manifold and secure with a clamp.

REQUIRED TOOL	
MANIFOLD PLUG 63 MM (2-1/2") (P/N 529 035 961)	

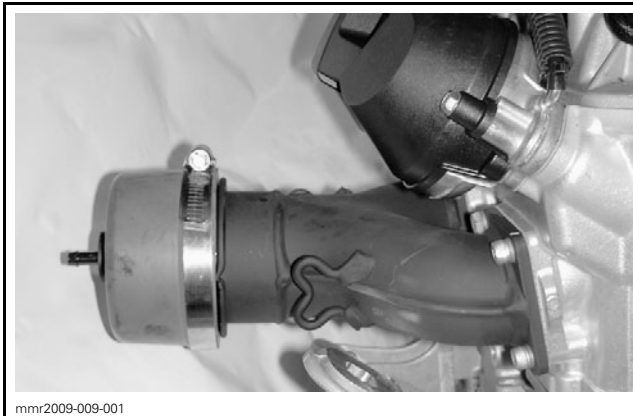


TYPICAL

3. Insert an intake plug in each intake adapters.

REQUIRED TOOL	
INTAKE PLUG (P/N 529 036 203)	


4. Tighten with existing clamps.

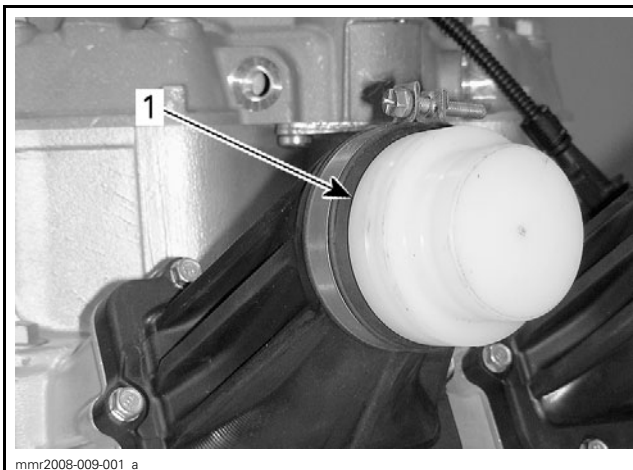


TYPICAL

1. Intake plug

5. Block each impulse hose as applicable.

REQUIRED TOOL	
SMALL HOSE PINCHER (P/N 295 000 076)	

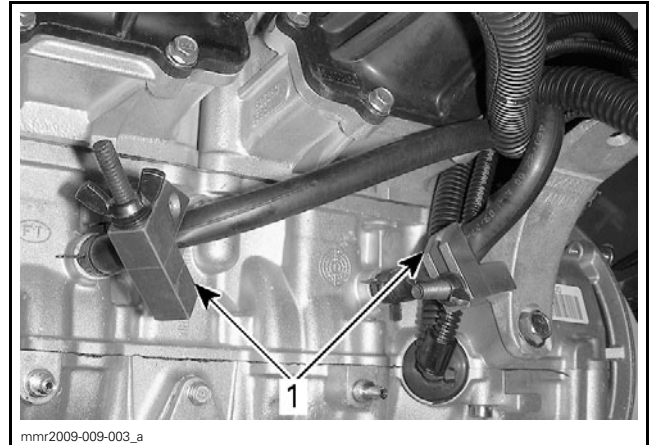


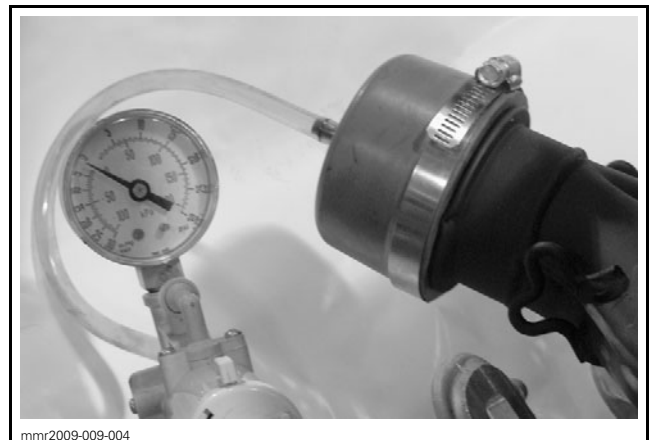
TYPICAL

1. Small hose pinchers

NOTICE Pay attention not to squeeze hose nipples.

6. Pressurize engine.

REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	



TYPICAL

ENGINE LEAK TEST	
PRESSURE	TIME (without pressure drop)
34 kPa (5 PSI)	3 minutes

NOTICE Do not exceed the specified pressure.

Subsection XX (ENGINE LEAK TEST)

7. If pressure drops before 3 minutes, spray a soapy solution on tester kit (manifold and intake plugs, vacuum/pressure pump and its hose).

7.1 If tester kit (manifold and intake plugs, hoses and pump) is leaking, bubbles will indicate where leak comes from.

7.2 If tester kit is not leaking, check engine, see *ENGINE COMPONENTS TO BE VERIFIED*.


Engine Components to be Verified

If air is escaping from engine check all jointed surfaces and screw or stud threads of engine:

- Spark plug base, insulator
- Cylinder head
- RAVE valve bellows, piston and housing
- Cylinder
- Crankcase halves (joint)
- Crankshaft outer seals (PTO and MAG)
- Water pump cover.
- Coolant bleed nipples on cylinder head
- Fuel injector gaskets.

Troubleshooting Tips

Air bubbles or oil column going toward pump may indicate a defective check valve in injection nozzle.

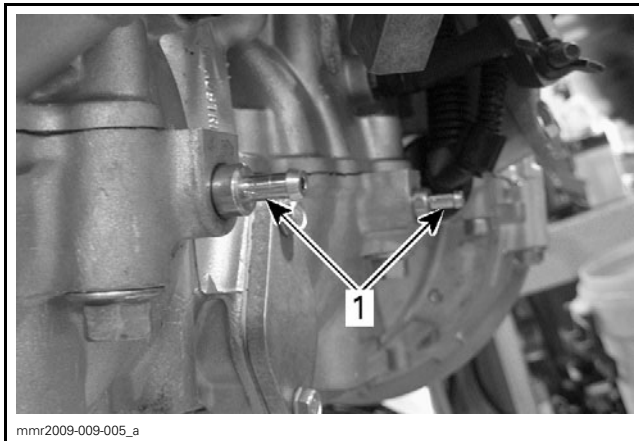

600 HO E-TEC ENGINE SHOWN

1. Injection nipples

Air bubbles in cooling system indicate a defective cylinder head O-ring or cylinder base gasket.


Check leak indicator hole for oil or coolant. ,

Leaking coolant indicates:

- A defective ceramic seal (on water pump side)
- Defective O-ring on bearing carrier, see appropriate *BOTTOM END* subsection.

Leaking oil indicates:

- A defective oil seal (behind ceramic seal).
- Defective O-ring on bearing carrier, see appropriate *BOTTOM END* subsection.

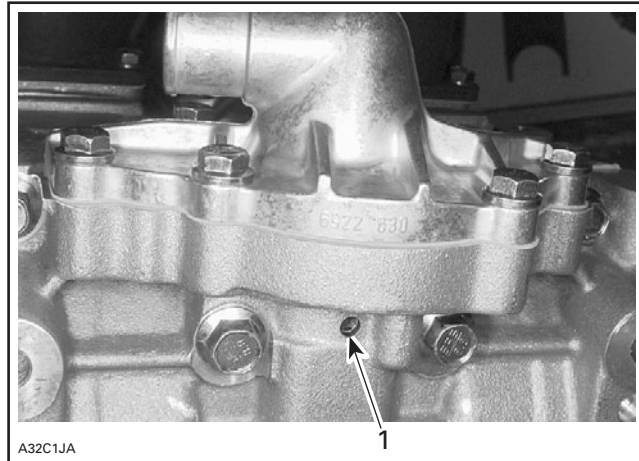


1. Leak indicator hole

PUMP SHAFT OIL GEAR RESERVOIR LEAK TEST

Install air pump on reservoir fitting and pressurize engine.

PUMP SHAFT OIL GEAR RESERVOIR LEAK TEST	
PRESSURE	TIME (without pressure drop)
34 kPa (5 PSI)	3 minutes

NOTICE Do not exceed the specified pressure.

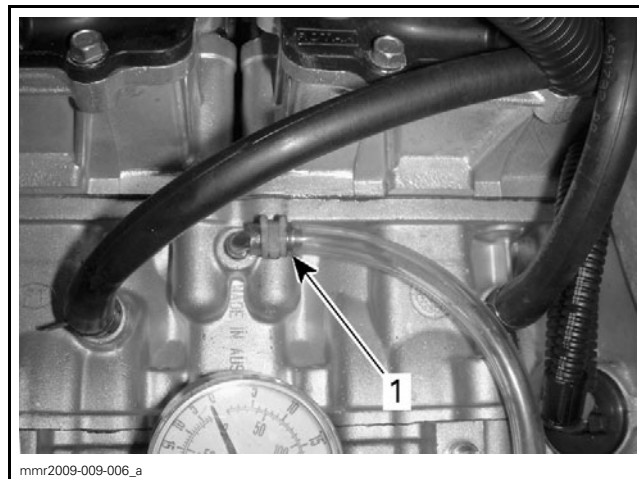


TYPICAL

1. Air pump hose on fitting

If pressure drops check for:


- Leaking cover plate gasket

- Defective O-ring on bearing carrier (see appropriate *BOTTOM END* subsection)
- Defective oil seal on water pump side
- Defective crankshaft inner seal.

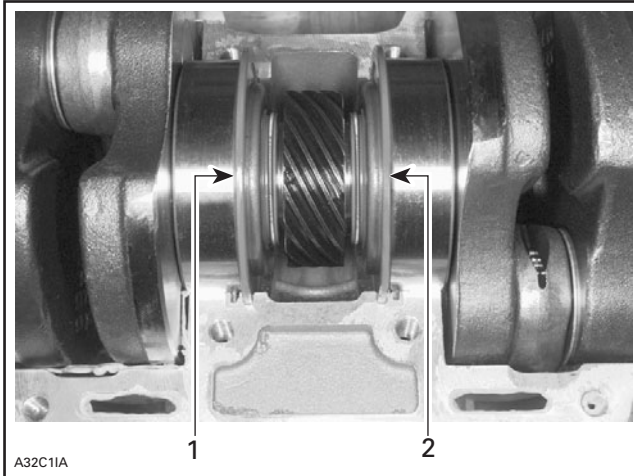

TYPICAL — CRANKCASE INSIDE VIEW

1. Leakage through inner seal on PTO side
2. Leakage through inner seal on MAG side

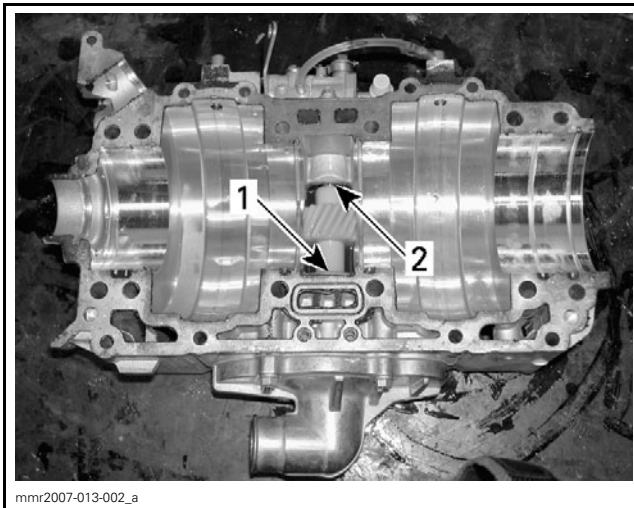

TYPICAL — CRANKCASE INSIDE VIEW

1. Leakage through water pump oil seal (reservoir side)
2. Leakage on cover plate side (gasket)

ENGINE MEASUREMENT

SERVICE TOOLS


Description	Part Number	Page
DEGREE WHEEL.....	529 035 607	5
PISTON PROJECTION	529 036 215	6
TDC DIAL INDICATOR	295 000 143	6

PROCEDURES

NOTE: This subsection explains the procedures to correctly measure engine components. For the engine technical specifications, refer to *INSPECTION* in the appropriate *ENGINE* subsection.

CYLINDER HEAD WARPAGE

1. Check gasket mating surface of the cylinder head with a straight edge and a feeler gauge. Make sure part is within the given specification.
2. If cylinder head is out of specification, replace it.

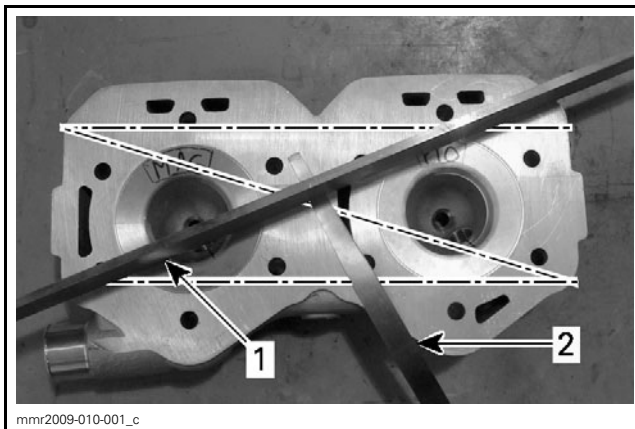


1. Straight edge
2. Feeler gauge

CYLINDER TAPER

1. Measure cylinder diameter in the following locations:
 - Above exhaust port
 - Below intake port.
2. Compare cylinder diameters.
3. If the difference exceeds the specified dimension, the cylinder should be rebored and honed or should be replaced. Nikasil cylinder can be honed using diamond hone but can not be rebored.

NOTE: Be sure to restore the chamfer around all cylinder sleeve port openings.

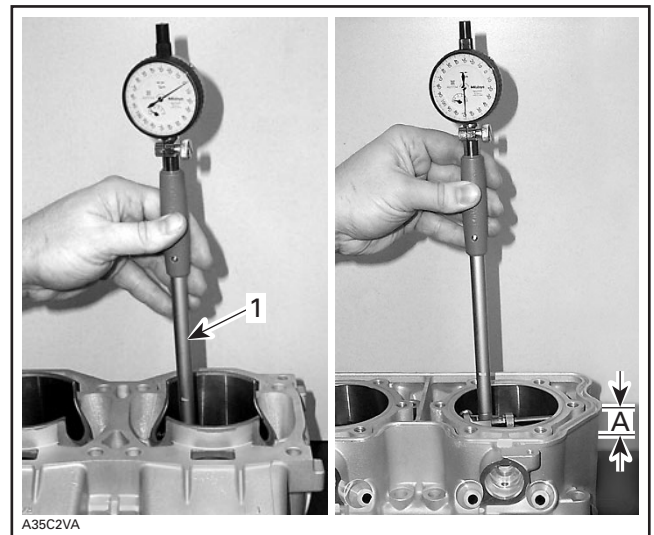


1. Below the intake port
- A. Above exhaust port

CYLINDER OUT OF ROUND


1. Measuring above exhaust port with a cylinder gauge, check if the cylinder out of round is more than the specified dimension.
2. If larger, cylinder should be rebored and honed or should be replaced. Nikasil cylinder can be honed using diamond hone but cannot be rebored.

NOTE: Be sure to restore the chamfer around all cylinder sleeve port openings.

Subsection XX (ENGINE MEASUREMENT)

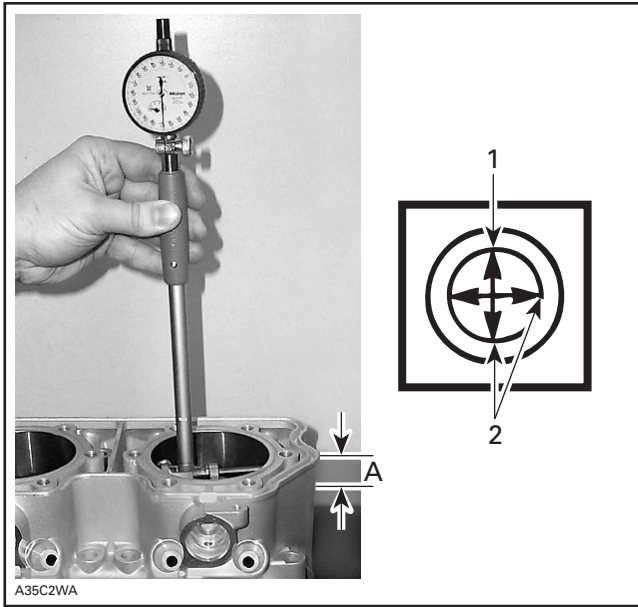

1. Piston pin position
2. Measures to be compared
- A. Above exhaust port

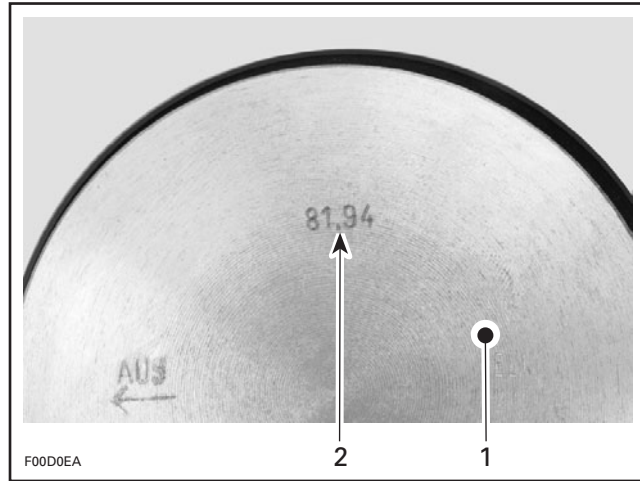


TYPICAL

1. Piston dome
2. Piston diameter marking

2. If piston is out of tolerance, install a new piston.
3. If piston is within tolerance, adjust and lock a micrometer to the piston diameter.


CYLINDER/PISTON CLEARANCE

1. Using a micrometer, measure piston diameter at "A" perpendicularly (90°) to piston pin.

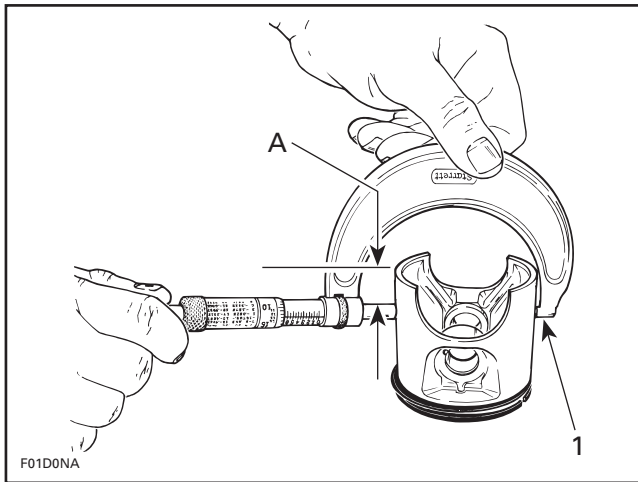

TYPICAL

1. Measuring diameter perpendicularly (90°) to piston pin axis
- A. 15 mm (.591 in)

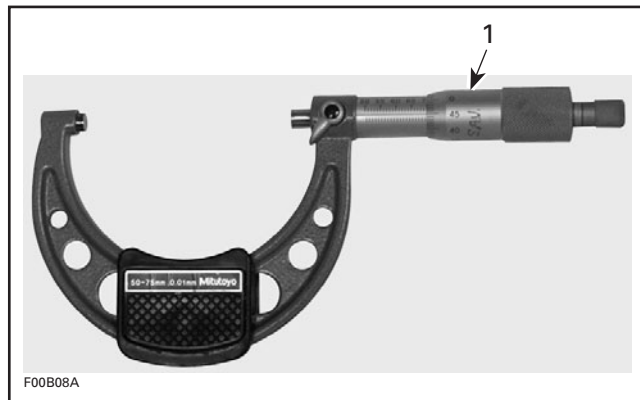


1. Micrometer set to the piston diameter

4. With the micrometer set to the piston diameter, adjust a cylinder bore gauge to the micrometer dimension and set the indicator to 0.


PISTON DIAMETER

SERVICE LIMIT

Measured diameter must not be less than 0.15 mm (.006 in) of the diameter stamped on piston dome

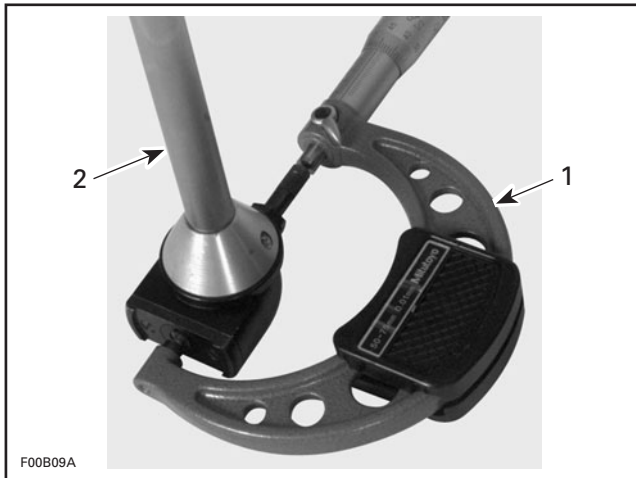


1. Use the micrometer to set the cylinder bore gauge
2. Dial bore gauge

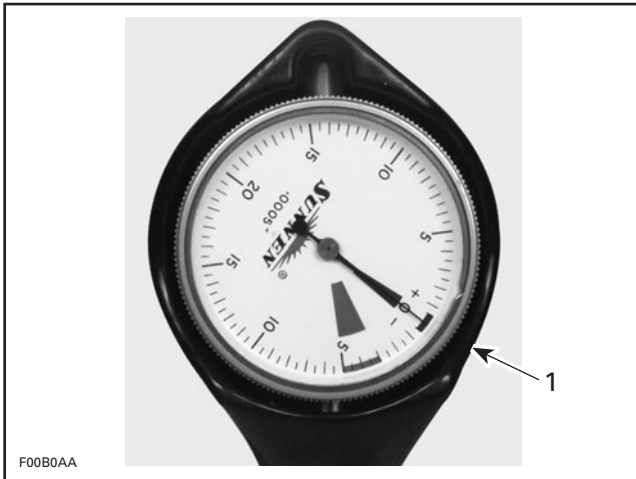

1. Indicator set to 0 (zero)

NOTE: Make sure the cylinder bore gauge indicator is set exactly at the same position as with the micrometer, otherwise the reading will be false.

5. Position the dial bore gauge above the exhaust port.
6. **IMPORTANT:** Always remove cylinder-block from crankcase before measuring.

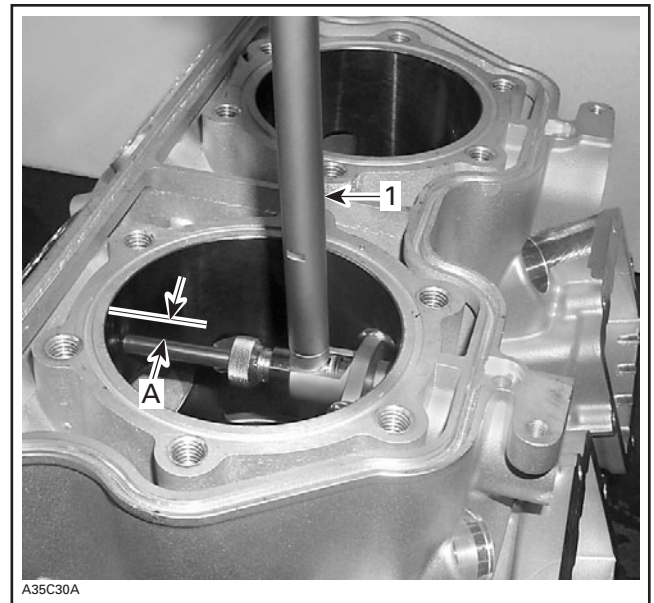

1. Measuring perpendicularly (90°) to piston pin axis
- A. Above exhaust port

7. Read the measurement on the cylinder bore gauge. The result is the exact piston/cylinder wall clearance.

8. If clearance exceeds specified tolerance, replace cylinder and piston.

RING/PISTON GROOVE CLEARANCE

1. Using a feeler gauge check clearance between rectangular ring and groove.
2. Replace piston if clearance exceeds specified tolerance.




RING END GAP

1. Position ring halfway between transfer ports and intake port.

NOTE: In order to correctly position the ring in the cylinder, use piston as a pusher.

2. Using a feeler gauge, check ring end gap. Replace ring if gap exceeds specified tolerance.

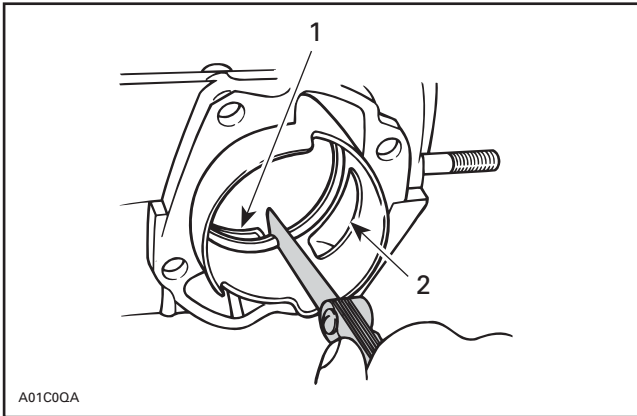


TYPICAL
1. Transfer port
2. Intake port


CRANKSHAFT DEFLECTION

Measuring in Crankcase

1. Using a dial indicator, check deflection with crankshaft in crankcase.

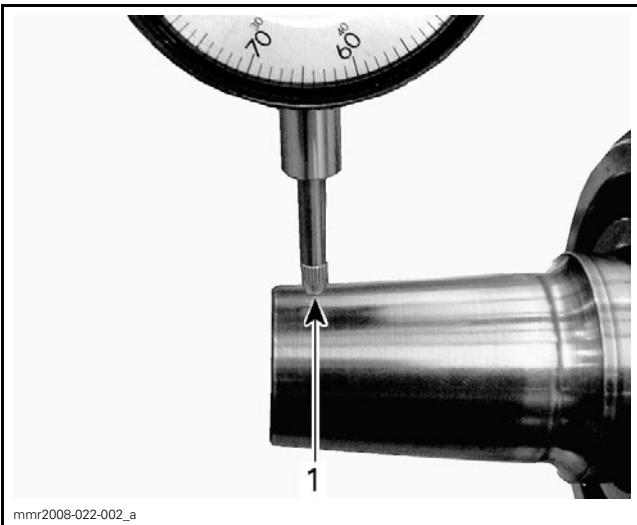

TYPICAL — PTO SIDE
1. Measure deflection 3 mm (1/8 in) from crankshaft end

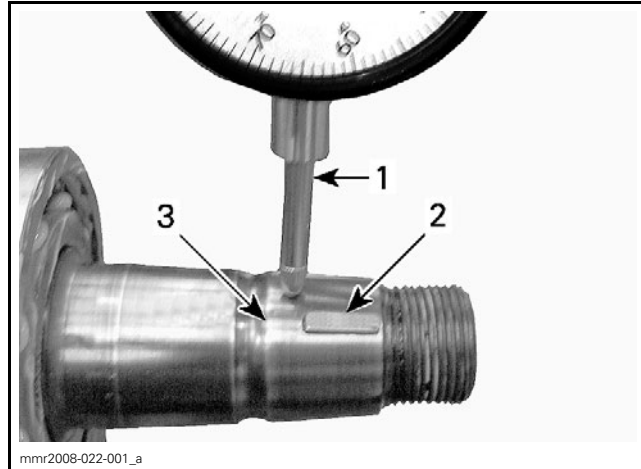


TYPICAL — MAG SIDE
1. Measure deflection at mid point between key and groove
2. Key
3. Groove

2. If deflection exceeds the specified tolerance, recheck deflection using V-shaped blocks to determine the defective part(s). See *MEASURING ON BENCH*.

Measuring on Bench


1. Once engine is disassembled, check crankshaft deflection on V-shaped blocks.

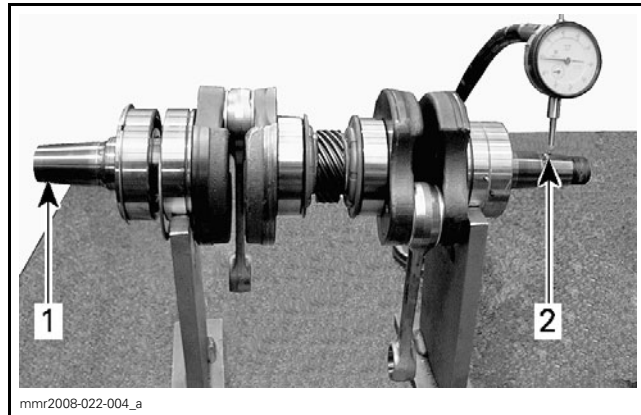

TYPICAL — V-SHAPED BLOCKS POSITION WITH BEARINGS
1. Measure deflection 3 mm (1/8 in) from crankshaft end
2. Measure deflection at mid point between key and groove

NOTE: Crankshaft deflection cannot be correctly measured between centers of a lathe.

2. If deflection exceeds the specified tolerance, it can be worn bearings or a bent crankshaft.
3. Remove crankshaft bearings and check deflection again on V-shaped blocks to determine the defective part(s).

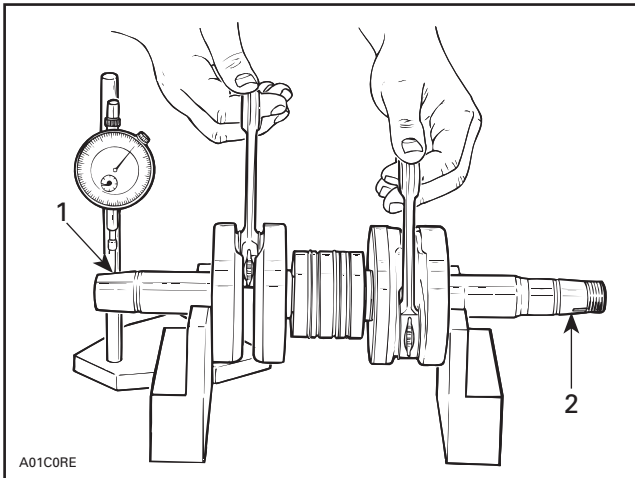


TYPICAL — V-SHAPED BLOCKS POSITION WITHOUT BEARINGS

1. Measure deflection 3 mm (1/8 in) from crankshaft end
2. Measure deflection at mid point between key and groove

4. If the deflection exceeds the specified tolerance, crankshaft should be repaired or replaced.

CONNECTING ROD BIG END AXIAL PLAY

1. Using a feeler gauge, measure distance between thrust washer and crankshaft counterweight.
2. If the distance exceeds specified tolerance, repair or replace the crankshaft.

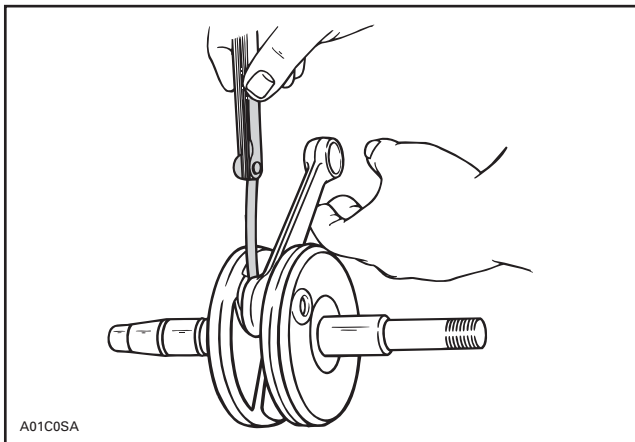


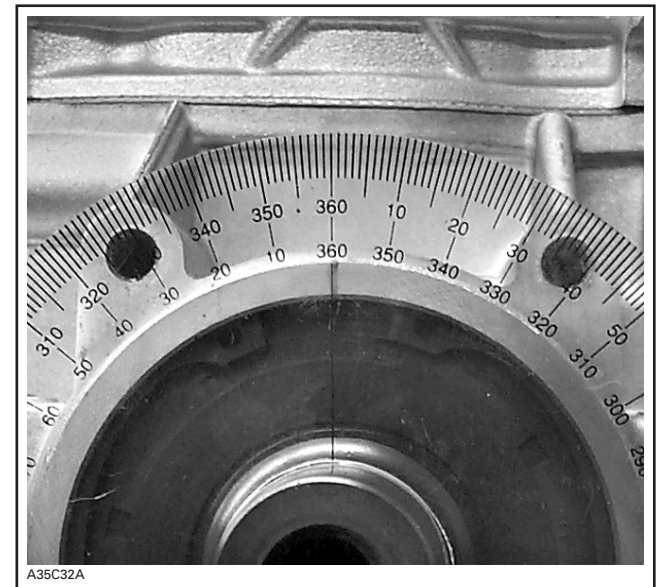
TYPICAL

CRANKSHAFT ALIGNMENT

1. Remove injectors. Refer to *E-TEC DIRECT FUEL INJECTION* subsection.
2. Bring MAG piston at top dead center. Refer to *IGNITION SYSTEM* subsection.
3. Scribe a mark on crankcase (see illustration).

4. Install a degree wheel on crankshaft end so that 360° mark aligns with the mark on crankcase. Do not rotate crankshaft.

REQUIRED TOOL	
DEGREE WHEEL (P/N 529 035 607)	



5. Remove dial indicator and install it in spark plug hole on PTO side.
6. Bring PTO piston to top dead center. Degree wheel must rotate with crankshaft.
7. Interval between cylinders must be $180^\circ \pm 0.5$.
8. Any other reading indicates a misaligned (twisted) crankshaft.

PISTON PROJECTION MEASUREMENT


NOTE: The piston projection measurement is used to determine the correct cylinder base gasket thickness when engine components are replaced.

Engine Preparation

NOTE: As a troubleshooting step, It is possible to measure piston projection without removing engine from vehicle.

1. Bring PTO piston to TDC.



Subsection XX (ENGINE MEASUREMENT)

REQUIRED TOOL	
TDC DIAL INDICATOR (P/N 295 000 143)	

- Remove cylinder head from engine. Refer to *TOP END* subsection.
- Remove O-rings from cylinder block.
- Clean top surface of cylinder block.
- Ensure piston dome is clean and free of any carbon deposits.
- Ensure cylinder block screws are properly tightened.

Measurement

- Place piston projection tool on a flat steel surface.

REQUIRED TOOL	
PISTON PROJECTION (P/N 529 036 215)	
TDC DIAL INDICATOR (P/N 295 000 143)	

- Rotate dial indicator face to position the **0** in line with needle.



SETTING THE ZERO

- Install tool on PTO cylinder.
- Center tool with cylinder to ensure that dial indicator reads piston dome.



TOOL PROPERLY CENTERED

- Ensure that PTO piston is set to TDC.
- Read dial indicator then note measurement.



TYPICAL

NOTE: Convert dial indicator measurement to millimeter.


- Check if piston projection is according to specification. Refer to *TOP END* subsection.

NOTICE Take care to use the proper specification according to the type of engine and the model of vehicle.

- Repeat procedure for MAG cylinder.
- If piston projection is out of specification, replace base gasket.

NOTE: A thicker base gasket will lower the piston projection measurement.

AIR INTAKE SYSTEM

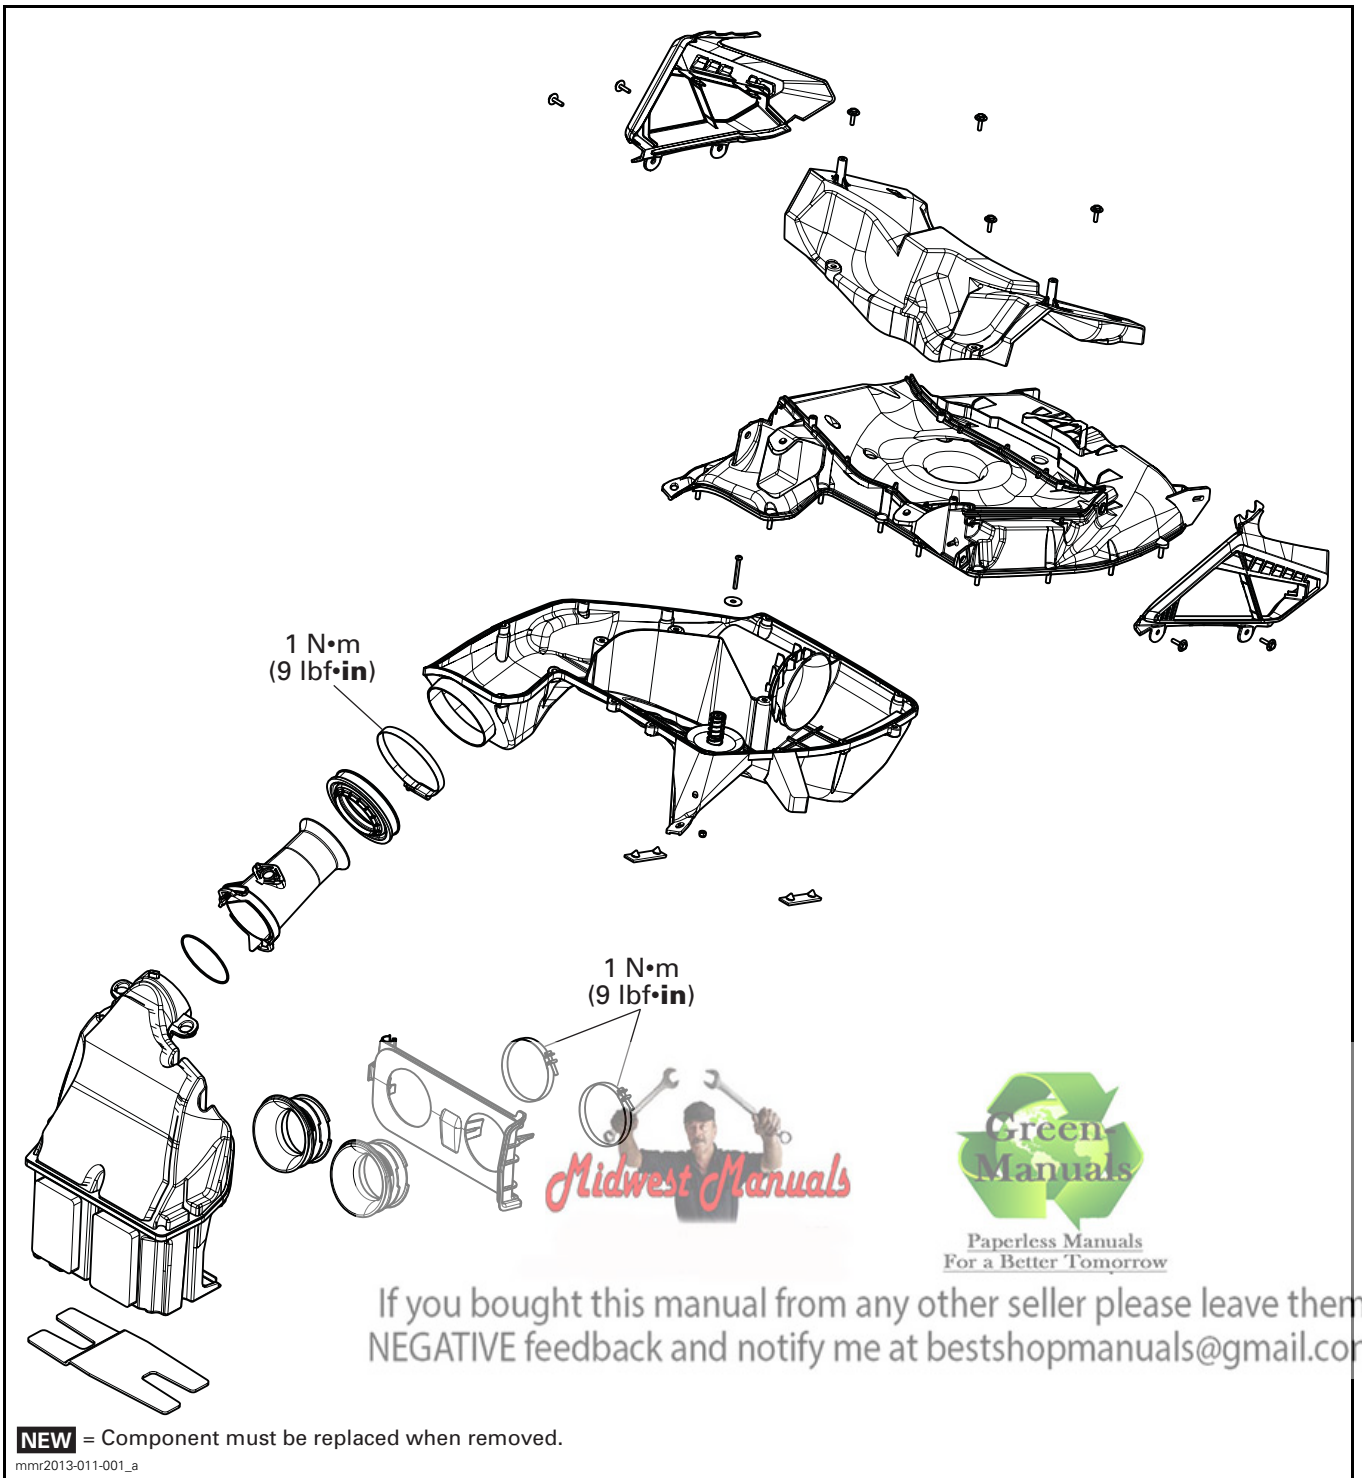

Subsection XX (AIR INTAKE SYSTEM)

GENERAL

During assembly/installation, use the torque values and service products as shown in the exploded views.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.


⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices must be replaced with a new ones when removed (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.).

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

PROCEDURES


AIR FILTER (MESH)

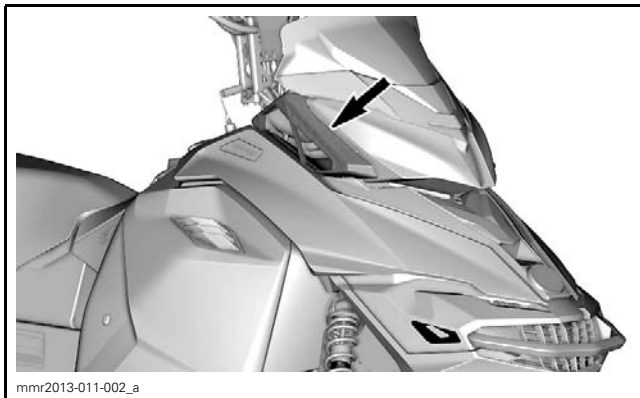

Air Filter Removal


NOTE: The same procedure applies for RH and LH side. Only one side is described in this procedure.

1. Refer to *BODY* subsection and remove:
 - Upper body module
 - Hood
 - Gauge support
2. Remove screws from mesh filter housing.

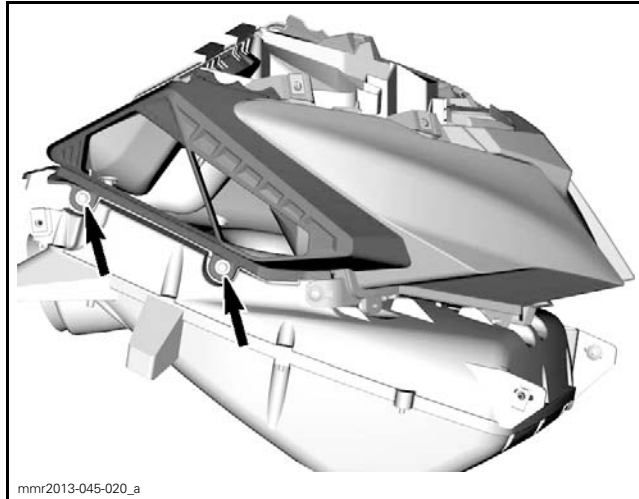


RH SIDE SHOWN

3. From top of upper body module, carefully release mesh filter housing tabs.
4. Detach connector from air intake silencer.

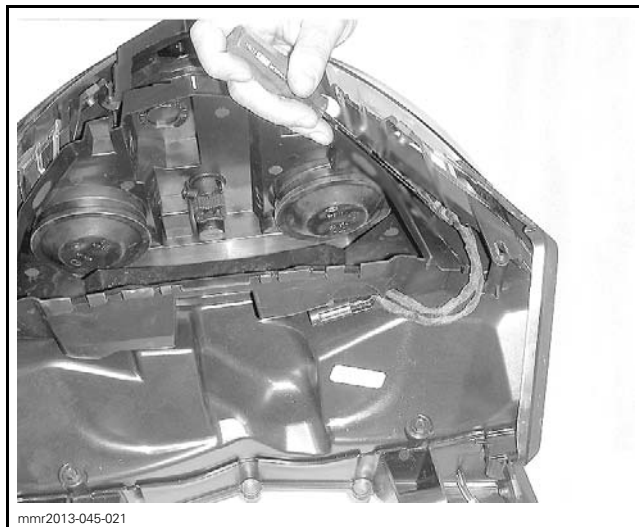

TOP OF UPPER BODY MODULE — RH SIDE TABS SHOWN

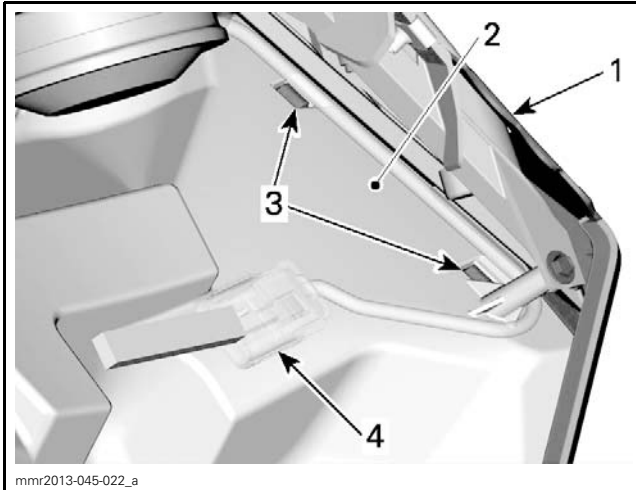

mmr2013-045-022_a
RH SIDE TABS SHOWN — RELEASE AND PUSH OUT BOTH TABS

1. Headlight housing
2. Air intake silencer
3. Mesh filter housing tabs
4. Connector

Air Filter Cleaning

Clean with fresh water and mild soap.

Replace air filter if required.

NOTE: If the filter is very dirty, clean the interior of secondary air intake silencer at the same time.


Air Filter Installation

The installation is the reverse of the removal procedure.

PRIMARY AIR INTAKE SILENCER


Primary Air Intake Silencer Removal

1. Remove LH side panel.
2. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
3. Unlock connector tube as follows:
 - 3.1 Lift tab on rear section of connector tube.
 - 3.2 Twist tube counter clockwise and pull slightly forward.

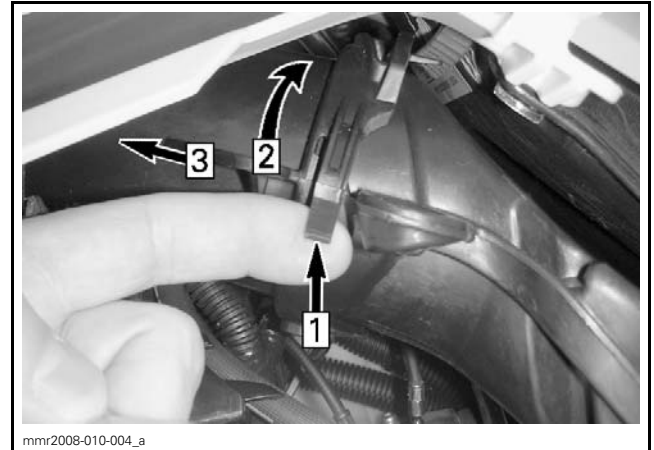

mmr2008-010-004_a
 Step 1: Lift tab
 Step 2: Twist tube
 Step 3: Pull forward

4. Push retaining tab of primary air intake silencer forward and pull silencer out of adapter plate.

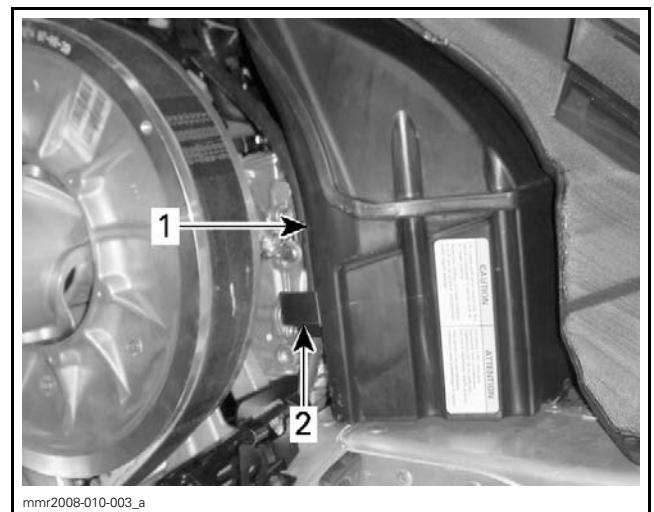

mmr2008-010-003_a
 1. Primary air intake silencer
 2. Retaining tab

Primary Air Intake Silencer Installation


The installation is the reverse of the removal procedure. However, pay attention to the following. Guide primary air intake silencer into the adapter plate groove.

Ensure primary air silencer is pushed to the end of adapter plate.

Ensure retaining tab is fully engaged.

NOTICE Be careful not to damage foam during installation.

SECONDARY AIR INTAKE SILENCER

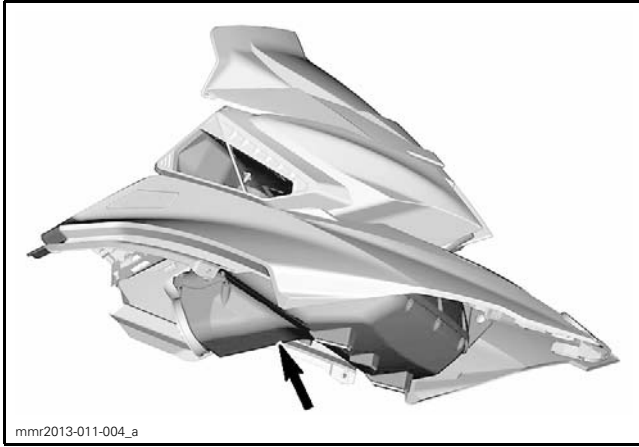

Secondary Air Intake Silencer Removal

1. Remove multifunction gauge. Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection.
2. Refer to *BODY* subsection and remove:
 - Upper body module
 - Hood
 - Gauge support
 - Air filters (mesh)
 - Headlight housing


Secondary Air Intake Silencer Installation

The installation is the reverse of the removal procedure.

EXHAUST SYSTEM

SERVICE TOOLS

Description	Part Number	Page
SPRING INSTALLER/REMOVER	529 035 983	2, 4

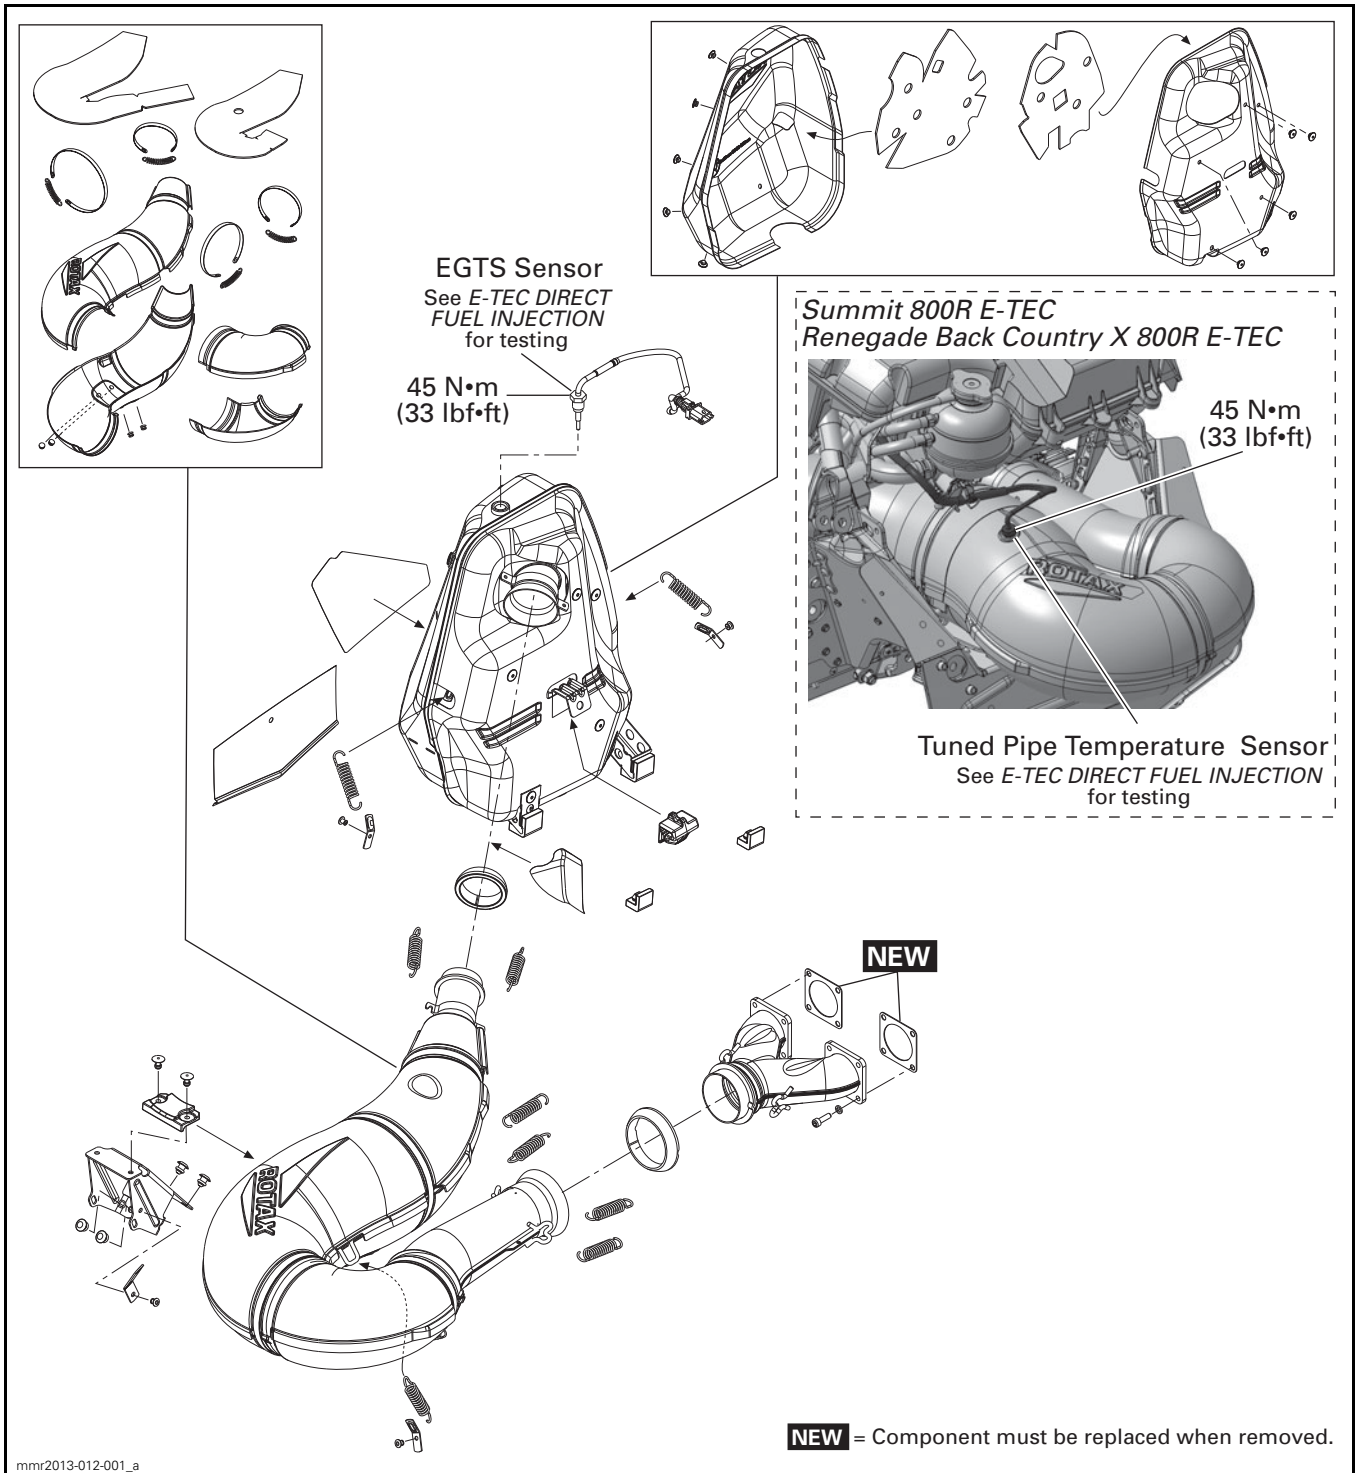

GENERAL

⚠ WARNING

To avoid potential burns, never touch exhaust system components immediately after the engine has been running because these components are very hot. Let engine and exhaust system cool down before performing any servicing.

During assembly/installation, use the torque value and service products as shown in the exploded view.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.) must be replaced with new ones.

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

PROCEDURES

MUFFLER

Muffler Removal


1. Remove RH side panel.
2. Remove screw securing the lower panel.



1. Lower panel
2. Retaining screw
3. Battery

3. Remove all springs retaining the muffler.

REQUIRED TOOL

SPRING INSTALLER/REMOVER (P/N 529 035 983)	
---	---



For vehicle servicing:

- **600 HO E-TEC**: Unplug EGTS connector and remove muffler.
- **800R E-TEC**: Unscrew the EGTS from the muffler.

For muffler replacement: unscrew the EGTS from the muffler.

Muffler Inspection

Check muffler for cracks or other damages.

Muffler Installation

For installation, reverse the removal procedure.

EGTS SENSOR

EGTS Sensor Test


Refer to *E-TEC DIRECT FUEL INJECTION* subsection for EGTS sensor (Exhaust Gas Temperature Sensor) testing.

EGTS Sensor Replacement

NOTE: New EGTS sensors have paraffin wax on their tip to protect the sensor during shipping. Paraffin will melt at first engine operation.


600 HO E-TEC

1. Remove RH side panel.
2. Disconnect EGTS sensor connector.

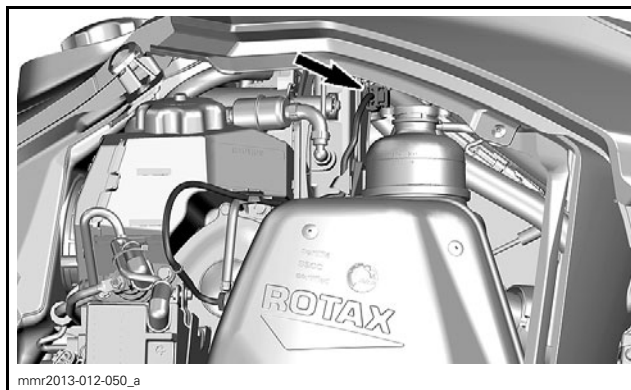

3. Remove *MUFFLER*. See procedure in this subsection.
4. Remove EGTS sensor from muffler.
5. Install **NEW** EGTS sensor in the following specific position for optimum efficiency.

NOTICE Do not use the sensor if it was dropped and never use an impact wrench to install it.

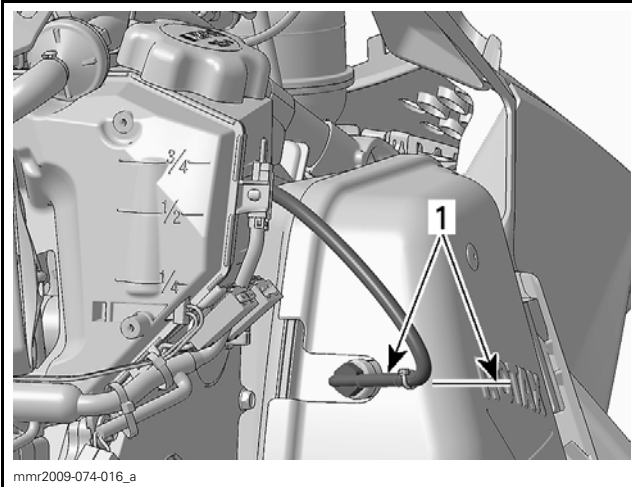


1. EGTS sensor positioned horizontally

6. Tighten EGTS sensor to specification while holding sensor to prevent turning.

EGTS SENSOR TORQUE	
	45 N•m (33 lbf•ft)

7. Install muffler as the reverse of removal.

NOTICE Make sure the positive battery cable is not in contact with the EGTS wire.

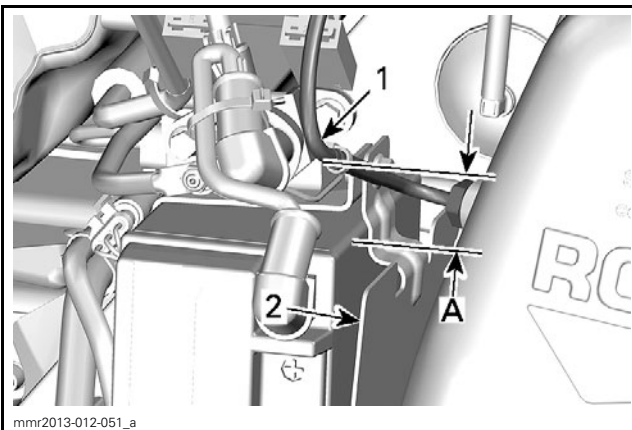

1. EGTS wire
2. Battery support
A. 30 mm (1-3/16 in)


8. Connect EGTS sensor connector.

9. Install RH side panel.

800R E-TEC

NOTE: EGTS sensor, tuned pipe temperature sensor (if so equipped) and THCM module must be replaced as an assembly.

1. Remove the primary air intake silencer, refer to *AIR INTAKE SYSTEM*.
2. Unclip THCM module from oil injection tank.

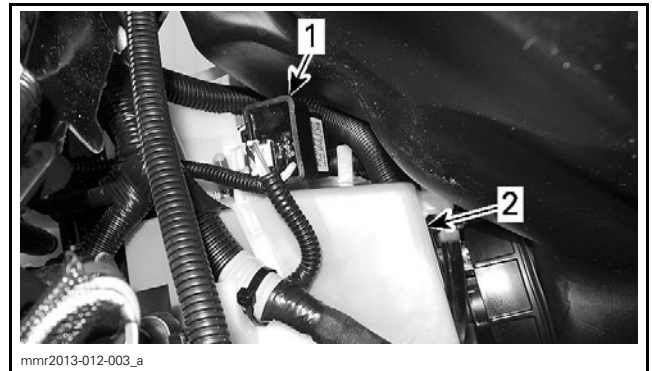


1. THCM module
2. Oil injection tank

3. Remove EGTS sensor from muffler.

NOTE: On Renegade Back Country X and Summit, unscrew the tuned pipe temperature sensor from the tuned pipe. Both sensors must be replaced at the same time with the THCM module.

4. Install NEW EGTS sensor in the following specific position for optimum efficiency.

NOTICE Do not use an impact wrench for installation or if it was dropped.

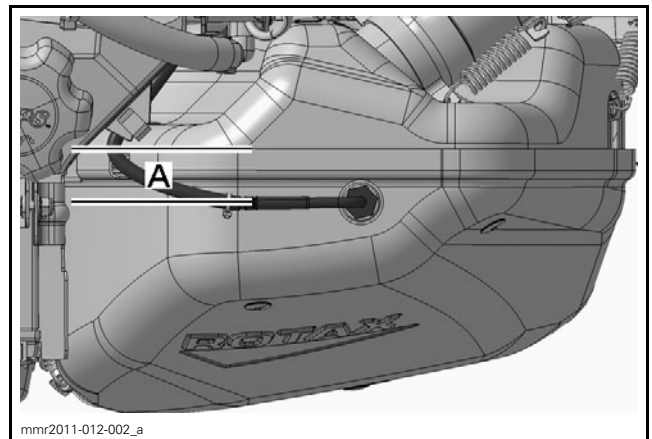

A. EGTS sensor positioned parallel with muffler seam

5. Tighten EGTS sensor to specification while holding sensor to prevent turning.

TIGHTENING TORQUE	
EGTS sensor	45 N•m (33 lbf•ft)

6. Install muffler as the reverse of removal.


Subsection XX (EXHAUST SYSTEM)

7. Clip the THCM module to oil injection tank.
8. Install RH side panel.

TUNED PIPE

Tuned Pipe Removal

1. Refer to *BODY* subsection and remove:
 - Upper body module
 - Bottom pan cover.
2. On **Renegade Back Country X** and **Summit**, unscrew the tuned pipe temperature sensor from the tuned pipe.
3. Detach exhaust retaining springs.

REQUIRED TOOL	
SPRING INSTALLER/REMOVER (P/N 529 035 983)	


4. Remove muffler. Refer to *MUFFLER REMOVAL* in this subsection.
5. Remove tuned pipe.
6. Remove doughnut-shaped exhaust gaskets.

Tuned Pipe Inspection

1. Check tuned pipe and shields for:
 - Damages
 - Cracks.
2. Inspect gaskets condition. Replace if required.

Tuned Pipe Installation

1. Install doughnut shaped exhaust gasket with both of its notches aligned with Y-manifold protrusions.

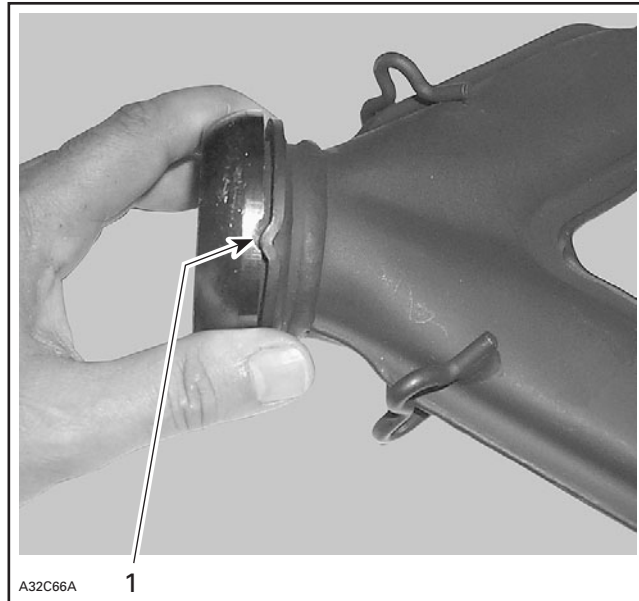

TYPICAL

1. Align notches

2. Install exhaust on vehicle.
3. Install exhaust springs.
4. Install all other removed parts as the reverse of removal.

TUNED PIPE TEMPERATURE SENSOR

Tuned Pipe temperature Sensor Test

Refer to *E-TEC DIRECT FUEL INJECTION* for tuned pipe temperature sensor testing.

Tuned Pipe Temperature Sensor Replacement


NOTE: EGTS sensor, tuned pipe temperature sensor and THCM module must be replaced as an assembly.

1. Remove tuned pipe temperature sensor from tuned pipe.
2. Detach tuned pipe temperature sensor wires from coolant tank support.




1. Tuned pipe temperature sensor
2. Coolant tank support

3. Remove the primary air intake silencer, refer to *AIR INTAKE SYSTEM*.
4. Unclip THCM module from oil injection tank.

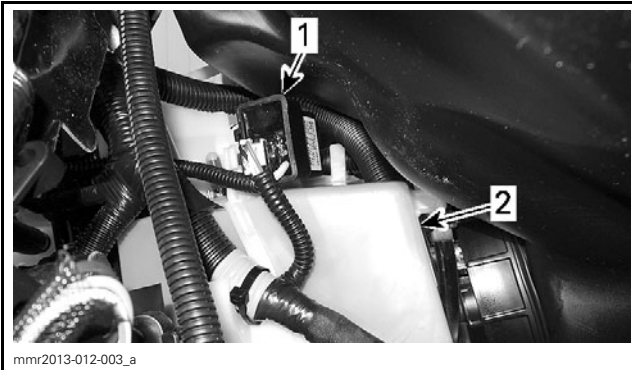

1. THCM module
2. Oil injection tank

5. Cut locking tie that secure tuned pipe temperature sensor wires to oil injection tank.

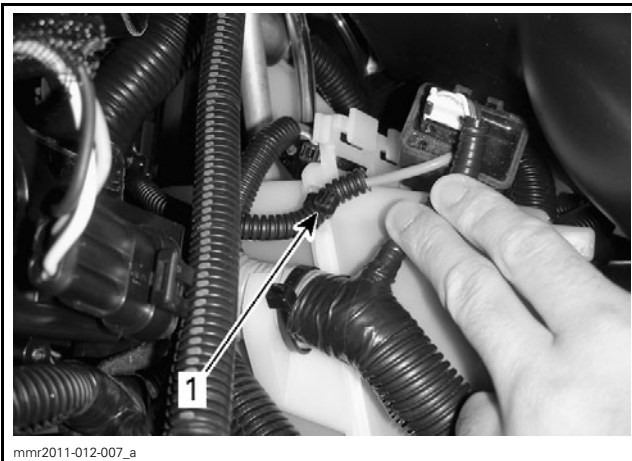

1. Locking tie

6. Remove THCM module and sensors (EGTS and tuned pipe temperature sensor) as an assembly by carefully moving them towards LH side.
7. Install **NEW** THCM module and sensors as the reverse of removal.

NOTICE Do not use an impact wrench for installation.

8. Tighten tuned pipe temperature sensor to specification while holding sensor to prevent turning.


TIGHTENING TORQUE	
Tuned pipe temperature sensor	45 N•m (33 lbf•ft)

9. Install body panels as the reverse of removal.
- NOTE:** Ensure that tuned pipe temperature sensor is properly configured using B.U.D.S. Refer to *E-TEC DIRECT FUEL INJECTION* subsection.

MANIFOLD

Manifold Removal

1. Remove tuned pipe. Refer to *TUNED PIPE REMOVAL* in this subsection.
2. Remove and discard manifold screws.

REQUIRED TOOL	
ALLEN SPHERICAL SOCKET	

NOTICE Heat screws for 30 seconds before loosening to prevent screw breakage.

3. Remove manifold.
4. Remove and discard gaskets.

Manifold Inspection


Check if manifold is cracked or damaged. Replace if necessary.

Manifold Installation

1. Install manifold with **NEW** gaskets.
2. Install **NEW** manifold screws.
3. Tighten manifold screws to specification using the following pattern.

NOTICE Do not use an impact wrench to tighten manifold screws.

Subsection XX (EXHAUST SYSTEM)

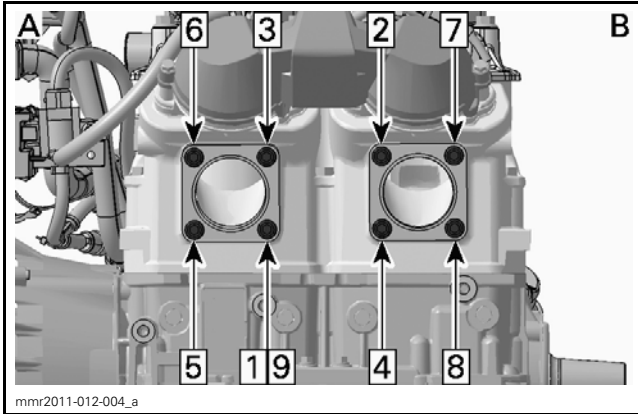

A. MAG side
B. PTO side

MANIFOLD SCREWS	
ENGINE	TIGHTENING TORQUE
600 HO E-TEC	17 N•m (150 lbf•in)
800R E-TEC	34 N•m (25 lbf•ft)

4. Install tuned pipe as the reverse of removal.



If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

REWIND STARTER


SERVICE TOOLS

Description	Part Number	Page
SMALL HOSE PINCHER	295 000 076	3

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE 243 (BLUE)	293 800 060	7
MOLYKOTE PG 54	420 899 763	5-7

Subsection XX (REWIND STARTER)

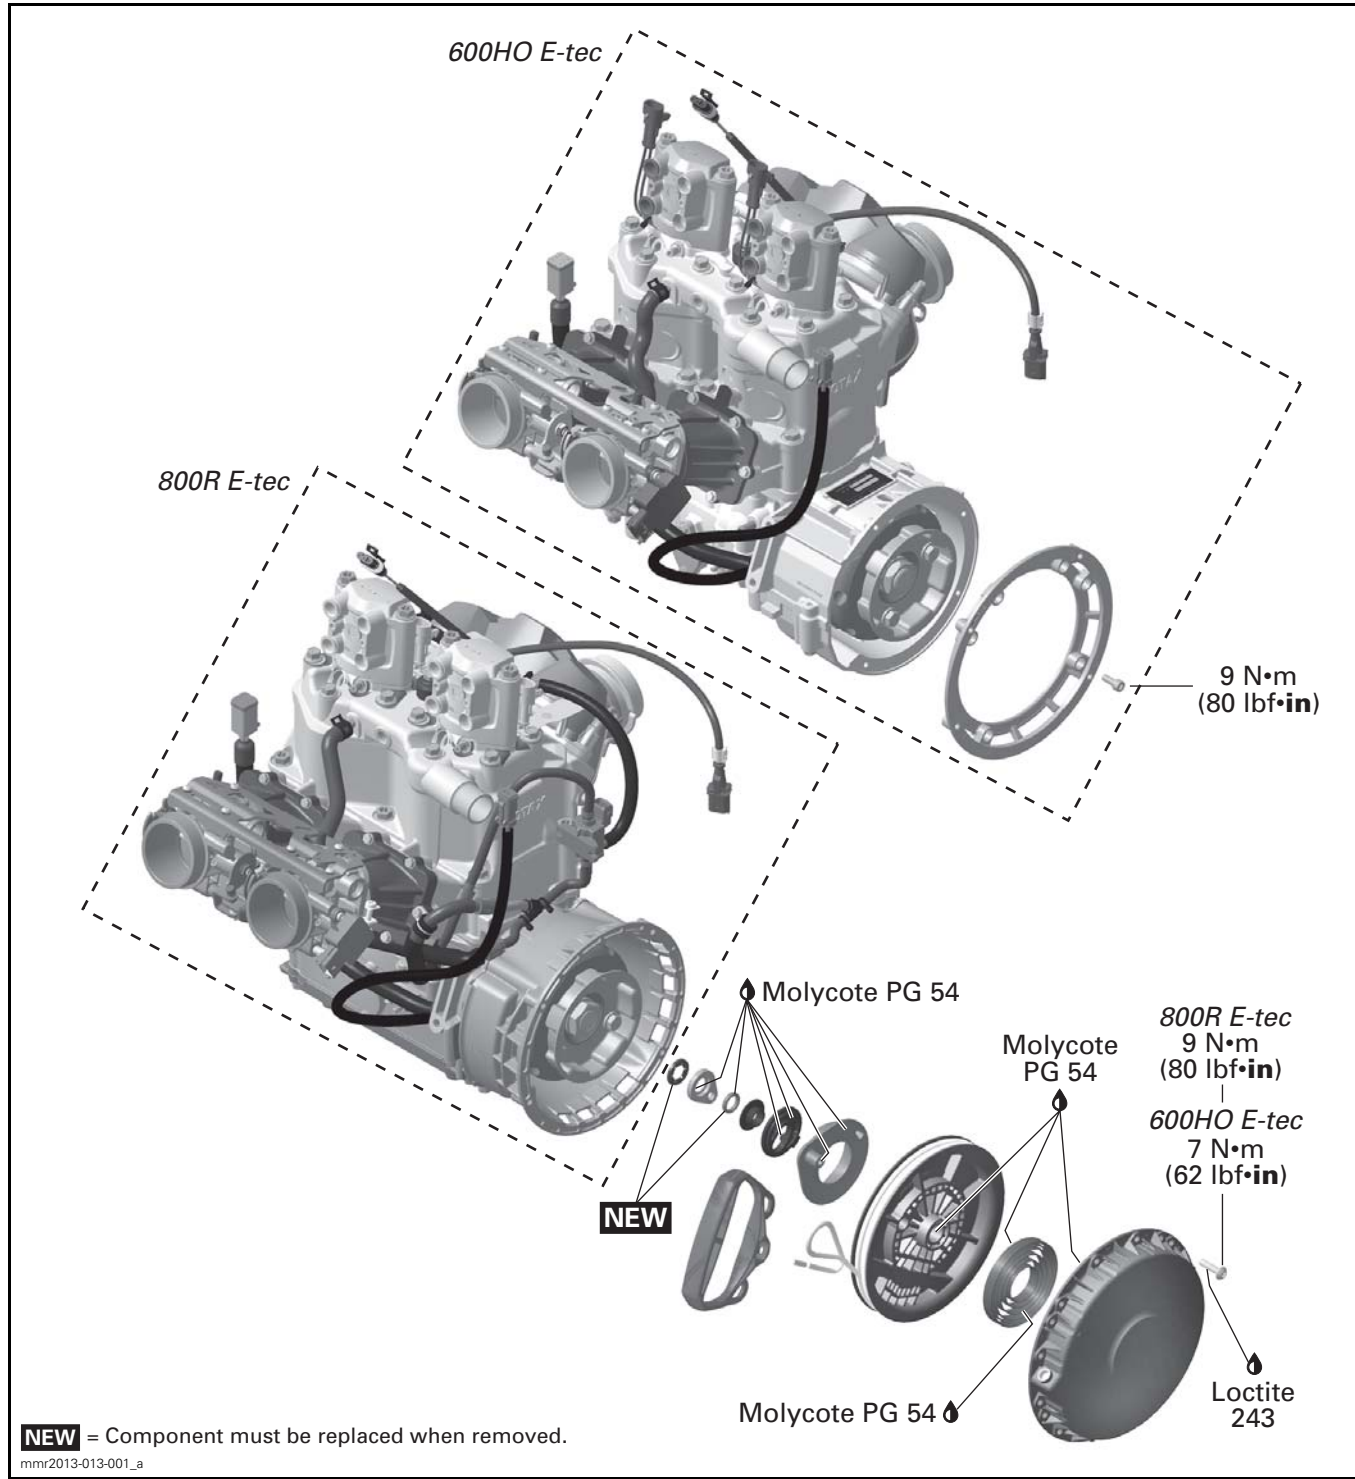

INSPECTION

Due to dust accumulation, rewind starter must be periodically cleaned, inspected and lubricated. Refer to *MAINTENANCE* section.

NOTICE It is of the utmost importance that the rewind starter spring be lubricated periodically using specific lubricant. Otherwise, rewind starter component life will be shortened and/or rewind starter will not operate properly under very cold temperatures.

Check if starter rope is fraying, replace if necessary.

When pulling starter handle, starter mechanism must engage within 30 cm (1 ft) of rope pull length. If not, disassemble rewind starter, clean and check for damaged plastic parts. Replace as required, lubricate, reassemble and recheck.

When releasing starter handle, it must return to its stopper and stay against it. If not, check for proper spring preload or damage. Readjust or replace as required.


When pulling starter handle 10 times in a row, it must return freely. If not, check for damaged parts or lack of lubrication. Replace parts or lubricate accordingly.

PROCEDURES

REWIND STARTER HANDLE

Rewind Starter Handle Removal

Pull out starter handle/rope for 50 cm (20 in) approximately and lock rope near rewind starter.


REQUIRED TOOL	
SMALL HOSE PINCHER (P/N 295 000 076)	



Using a small screwdriver, extract rope knot from stater handle. Cut rope close to knot.

Rewind Starter Handle Installation

Before installing starter handle on the rope, it is necessary to fuse the rope end with a lit match. Pass rope through starter handle and tie a knot on the rope end, see picture.

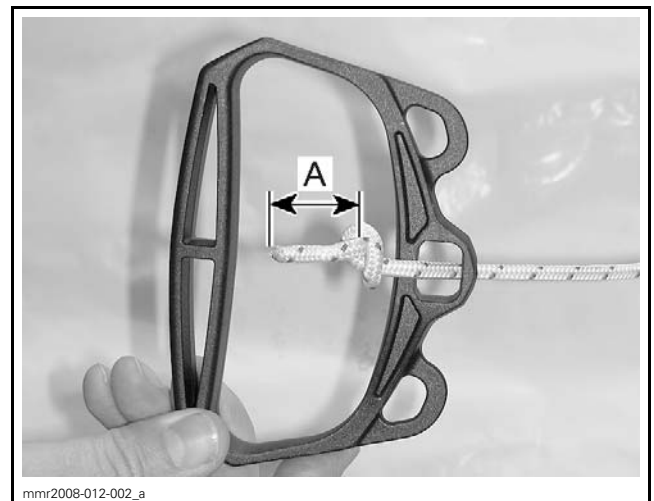

A. 30 mm ± 5 mm (1 in ± 1/4 in)

Fuse the knot with a lit match then insert rope end down and pull the starter handle over the knot.

Subsection XX (REWIND STARTER)



mmr2008-012-003_a

REWIND STARTER

Rewind Starter Access

Remove the following parts:

- RH side panel
- Muffler

Rewind Starter Removal

Remove starter handle.


Remove:

- Rewind starter retaining screws
- Rewind starter.

Rewind Starter Rope Replacement


Remove rewind starter.

Completely pull out rope. Hold rewind starter in a vise. Slide rope and untie the knot. Remove rope from starter sheave.

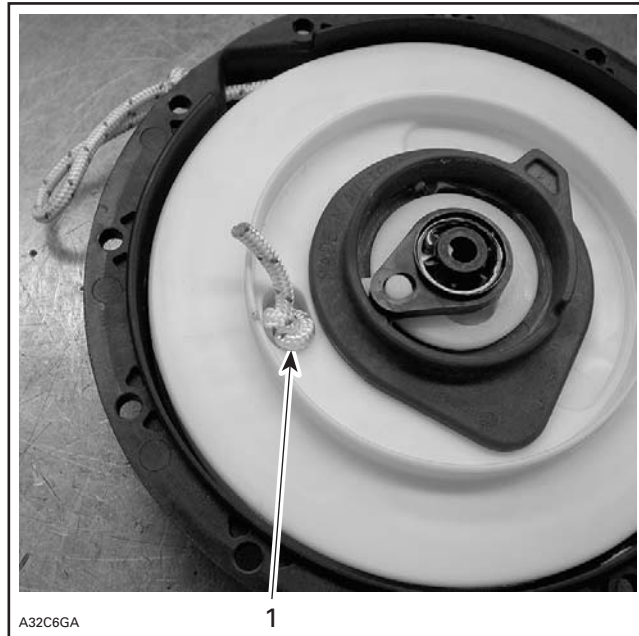

1. *Knot to be untied*

Insert rope in starter sheave orifice and lock it by making a knot, leaving behind a free portion of about 25 mm (1 in) in length.

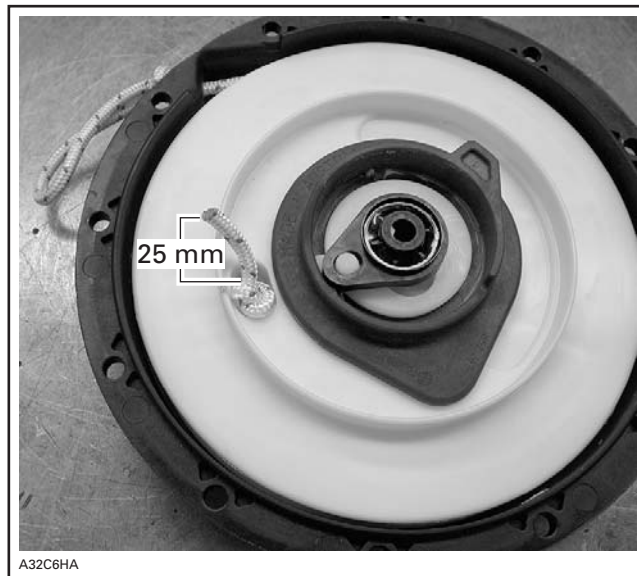

FREE PORTION

Fuse rope end with a lit match and insert it into sheave.



FREE PORTION INSERTED INTO SHEAVE

NOTE: When rope is completely pulled out, spring preload is 4-1/2 turns.


Rewind Starter Disassembly

Remove the hose pincher previously installed on rope at rewind starter removal. Let sheave get free to release spring preload.

Cut push nut and discard.


Remove:

- Lock lever
- O-ring
- Collar sleeve
- Pawl lock
- Pawl.

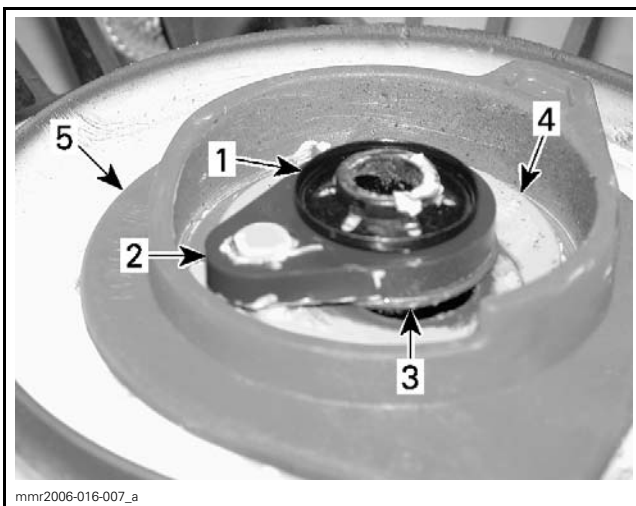

1. Push nut
2. Lock lever
3. Collar sleeve
4. Pawl lock
5. Pawl


Remove sheave with rope from starter housing. Hold spring in starter housing using a screwdriver.

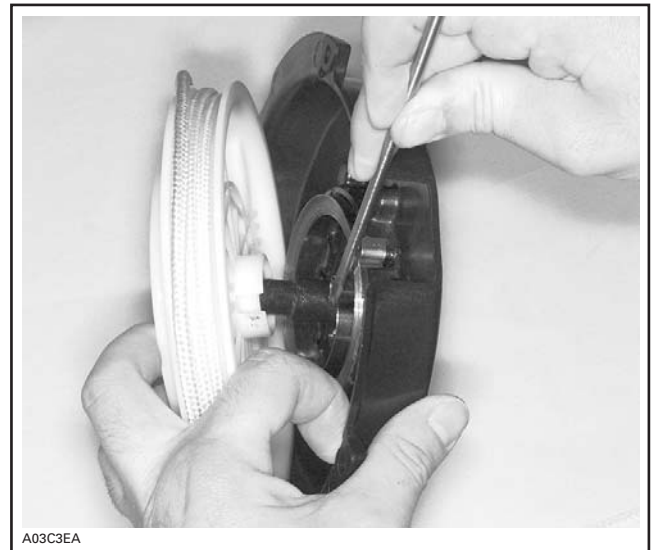

Take out the knot and then rope.

Rewind Starter Assembly

Lubricate spring contact area and spring guide inside housing with MOLYKOTE PG 54 (P/N 420 899 763).

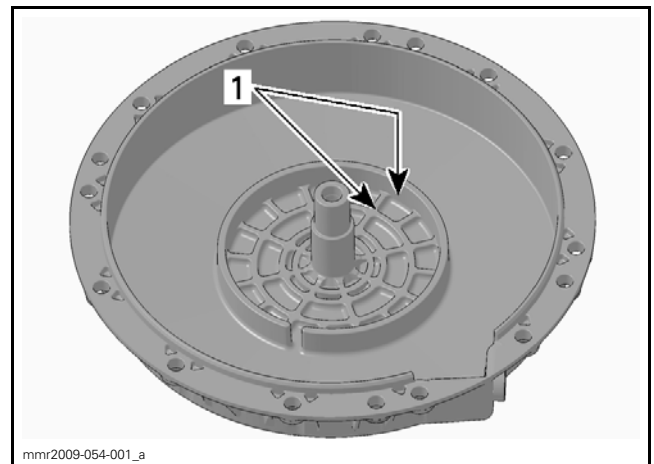

1. Molykote PG 54

At assembly, position spring outer end in spring guide notch then wind the spring counterclockwise in the guide.

⚠ WARNING

Since the spring is tightly wound inside the guide it may fly out when rewind is handled. Always handle with care.


Subsection XX (REWIND STARTER)



TYPICAL

1. Outer end into guide notch


Lubricate spring assembly and 1 cm (1/2 in) wide on bottom of housing with MOLYKOTE PG 54 (P/N 420 899 763).

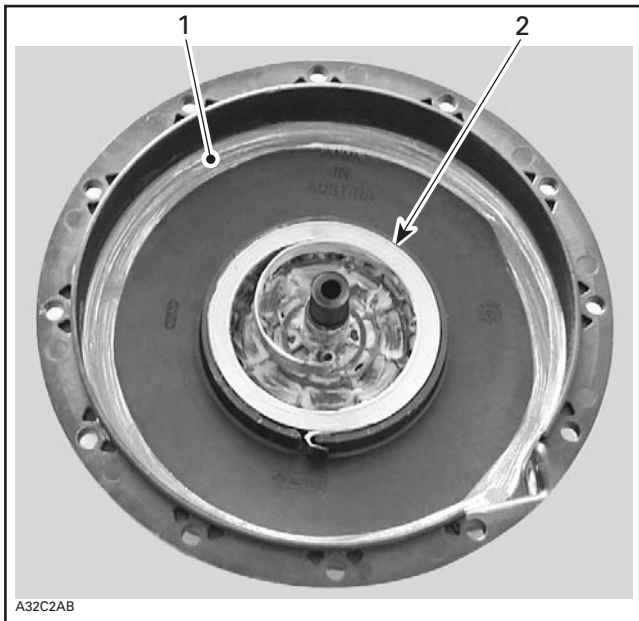

1. Molykote PG 54 applied 1 cm (1/2 in) wide on bottom of housing
2. Molykote PG 54 on spring

NOTICE It is of the utmost importance that the rewind starter spring be lubricated periodically using MOLYKOTE PG 54 (P/N 420 899 763). The use of standard multipurpose grease could result in rewind starter malfunction under very cold temperatures and component life will be shortened.

Lubricate housing post with MOLYKOTE PG 54 (P/N 420 899 763). Install sheave.

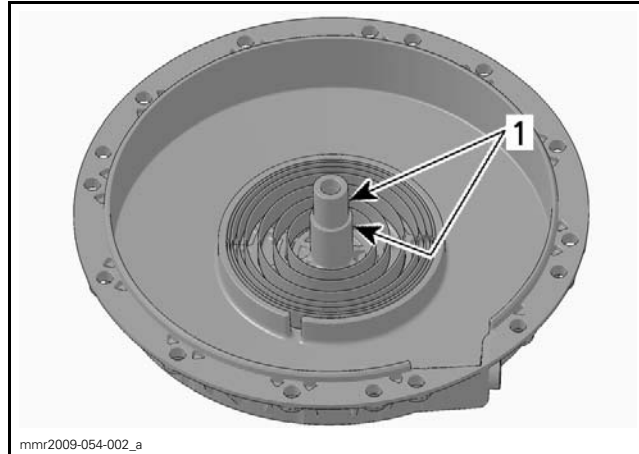


1. Molykote PG 54

To adjust spring tension:

Wind rope on sheave and place rope sheave in starter housing making sure the sheave hub notch engages in the rewind spring hook.

Rotate the sheave counterclockwise until rope end is accessible through rope exit hole. This will provide 1/2 turn of preload.

Pull rope out of starter housing and temporarily make a knot to hold it.

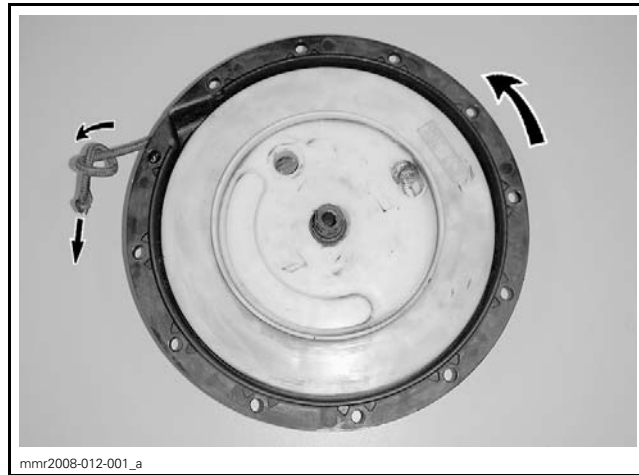


Lubricate pawl with MOLYKOTE PG 54 (P/N 420 899 763) then install over rope sheave.



Lubricate pawl lock with MOLYKOTE PG 54 (P/N 420 899 763). Install over pawl.



Install collar sleeve with its collar first. Lubricate a **NEW** O-ring and lock lever with MOLYKOTE PG 54 (P/N 420 899 763). Install over pawl lock.

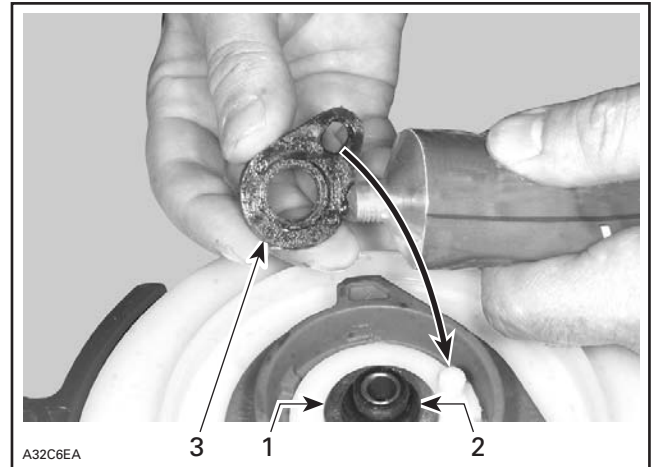

1. Collar sleeve
2. O-ring
3. Lock lever

Secure lock lever with a **NEW** push nut.

Rewind Starter Installation

Thread starter rope through console.

Install handle, refer to *STARTER HANDLE INSTALLATION*.

Reinstall rewind starter assembly on engine.

SERVICE PRODUCT	
Rewind starter retaining screws	LOCTITE 243 (BLUE) (P/N 293 800 060)


TIGHTENING TORQUE	
600HO E-Tec	7 N•m (62 lbf•in)
800R E-Tec	9 N•m (80 lbf•in)

CONNECTING FLANGE (600HO E-TEC)

Connecting Flange Removal

Remove rewind starter housing (magneto cover on electric start models).

Remove connecting flange retaining screws.

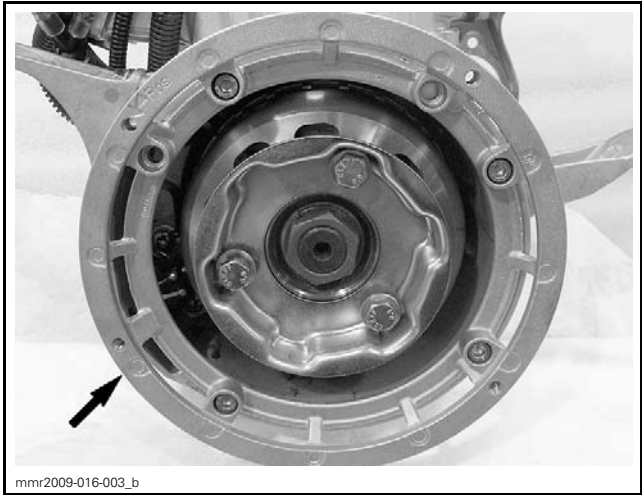

TYPICAL - CONNECTING FLANGE

Connecting Flange Installation

When reinstalling the connecting flange, torque screws as specified.

TIGHTENING TORQUE	
Connecting flange retaining screws	9 N•m (80 lbf•in)

LUBRICATION SYSTEM

SERVICE TOOLS

Description	Part Number	Page
FLUKE 115 MULTIMETER	529 035 868	11
LEAK TEST KIT	529 033 100	4
VACUUM/PRESSURE PUMP	529 021 800	5, 12

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE 648 (GREEN)	413 711 400	12
PULLEY FLANGE CLEANER	413 711 809	12
XPS INJECTION OIL.....	293 600 117	4
XPS SYNTHETIC 2-STROKE OIL.....	293 600 132	4
XPS SYNTHETIC BLEND 2-STROKE OIL.....	293 600 100	4



If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

GENERAL

During assembly/installation, use the torque values and service products as shown in the exploded view.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, etc.) must be replaced with new ones.

⚠ WARNING

Wipe off any oil spills. Oil is highly flammable.


NOTICE Do not use a hose pincher on outlet hose. This would damage the spring inside hose.

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

SYSTEM DESCRIPTION

An electronic oil injection pump with a mechanical positive displacement type is used. An electronic pump is more accurate and injection rate can be changed according to engine requirements. This results in a greatly reduced oil consumption.


The electronic oil injection pump is directly attached under oil injection tank.

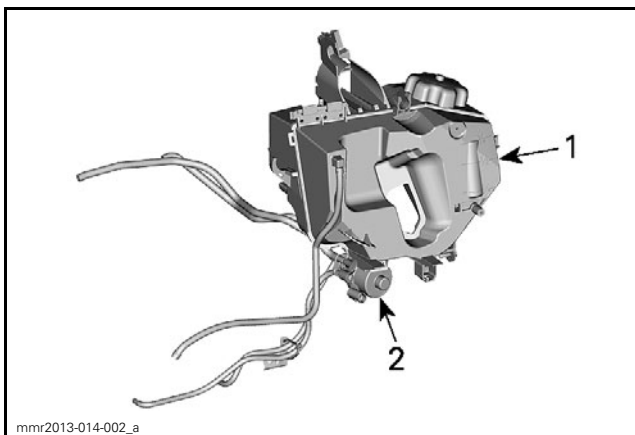

1. Oil injection tank
2. Electronic oil injection pump


The E-TEC pump features a total of 4 outlets:

- 2 large outlets to the crankcase to lubricate engine internal parts.
- 2 small outlets to the 3D RAVE valves to lubricate valves to prevent carbon deposits.

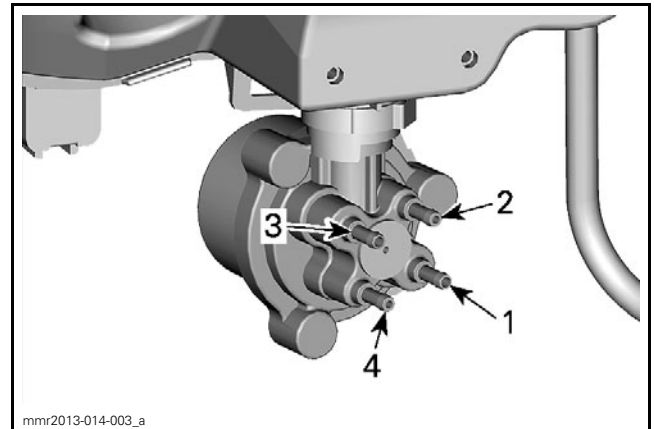

1. To engine PTO side
2. To 3D RAVE valve PTO side
3. To engine MAG side
4. To 3D RAVE valve MAG side

The 4 plungers in the pump work synchronized. They pump all at the same time.

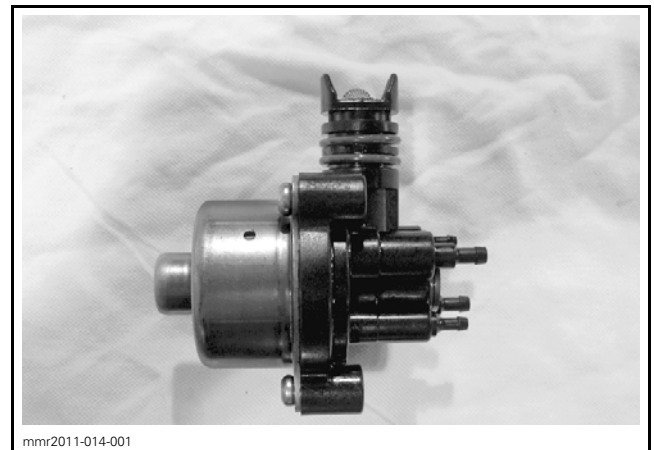

mmr2011-014-001
TYPICAL

The ECM controls the pump to inject a variable amount of oil through the entire engine operating range and conditions.

Oil injection Pump Operation

For the first 6 hours of engine break-in period, oil delivery is increased.

Oil/fuel ratio can go up to approximately 70:1 after the break-in period.

At idle, pump works at approximately less than 1 pulse per minute. A very low quantity of oil is injected to reduce engine smoke and to reduce engine emissions.

Subsection XX (LUBRICATION SYSTEM)

As engine speed increases, oil flow increases but not proportionally. It varies according to the specific engine requirements.

At 8000 RPM, pump works at approximately 120 pulses per minute for 600 HO E-TEC engine and approximately 180 pulses per minute for 800R E-TEC engine.

When operating vehicle in high altitude area, oil flow is reduced proportionally as altitude increases.

Oil Warm-Up Mode

When injection oil is very cold and engine is above idle speed, the oil warm-up mode is active.

To warm-up the oil, the oil injection pump is kept ON after the oil delivery stroke, as long as possible, to then turn OFF for the return stroke. The extra time the pump is ON generates more heat that is dissipated through the oil.

NOTE: The premium gauge displays WARM UP whenever the oil warm-up or engine warm-up modes are active

To determine if injection oil is cold, the ECM uses a feedback switch, located in oil injection pump, that closes at the end of the oil delivery stroke and opens when the oil injection pump coil is de-energized. Thus, the ECM can calculate the time it takes to deliver the oil which is related to the oil viscosity.

The ECM uses a complex algorithm to vary the warm-up time and the rev limiter according to oil pump requirements based on engine speed and TPS position. Therefore, the rev limiter is set dynamically as per the driver inputs.

NOTE: If a fault code related to the feedback switch is active (P1233, P1234), the oil injection warm-up mode uses data from the ATS but it uses the following parameter values. Engine lubrication does not change, only the warm-up time may be longer than usual.

OIL WARM-UP MODE STRATEGY WHEN FEEDBACK SWITCH IS FAULTY		
AIR TEMPERATURE	WARM-UP TIME	ENGINE SPEED LIMITATION
Warm-up starts below -20°C (-4°F)	Within approximately 8 and 11 minutes	Within approximately 4000 - 6000 RPM

Automated Engine Oil Fogging

An automated engine oil fogging has been implemented to automatically inject the required oil to protect the engine during vehicle storage. Engine speed will be increased to approximately 1600 RPM and excess oil will be injected for approximately 30 seconds then, the engine will automatically be stopped.

The storage mode can be activated either by using B.U.D.S. or the multifunction gauge on the vehicle. Refer to *STORAGE PROCEDURE* subsection.

RECOMMENDED INJECTION OIL


RECOMMENDED INJECTION OIL			
ENGINES	XPS INJECTION OIL (P/N 293 600 117)	XPS SYNTHETIC BLEND 2-STROKE OIL (P/N 293 600 100)	XPS SYNTHETIC 2-STROKE OIL (P/N 293 600 132)
600 HO E-TEC	-	✓	✓
800R E-TEC	-	✓	✓


NOTICE These engines have been developed and validated using the XPS™ 2-stroke oils. BRP strongly recommends the use of the applicable XPS 2-stroke oils at all times. Damages caused by oil which is not suitable for the engine will not be covered by the BRP limited warranty.

INSPECTION

OIL SYSTEM LEAK TEST


1. Install the test cap on oil tank.

REQUIRED TOOL	
LEAK TEST KIT (P/N 529 033 100)	

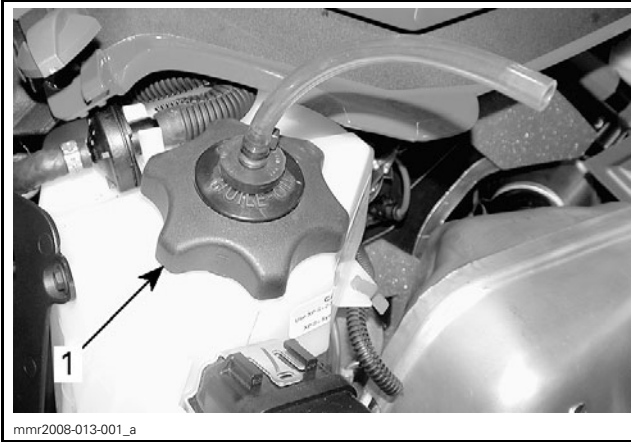

TYPICAL
1. Test cap on tank

2. Connect the pressure pump to test cap.

REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	


3. Pressurize oil system as follows.

PRESSURE	TIME TO HOLD PRESSURE
18 kPa (2.6 PSI)	3 minutes

If pressure drops, locate leak(s) and repair or replace leaking component(s).

If pressure does not drop, this validate the oil injection tank and the oil pump for leakage.

TROUBLESHOOTING

SYMPTOM	CAUSE	ACTION
	Damaged or disconnected oil injection pump.	Check oil injection pump wires and connectors on oil injection pump.
	Circuit wires, connectors or ECM output pins.	Check WHITE/RED wire on oil injection pump connector for 55/60 volts.
		Check system circuit J1B-23.
		Repair or replace defective part(s).

SYMPTOM	CAUSE	ACTION
Engine seizure (PTO or MAG side)	Damaged, kinked or obstructed inlet hose.	Repair or replace hose and test oil injection pump (oil outflow).
	Damaged oil injection pump inner piston.	Replace oil injection pump.
	Mechanical engine problem.	Repair or replace engine defective part(s).

PROCEDURES

OIL INJECTION PUMP

Oil Injection Pump Identification

Every pump is bench tested. Its electrical and flow characteristics are registered throughout all its operating range and are associated to a compensation number.

When a pump is replaced, the compensation number must be entered in B.U.D.S. so that the ECM properly controls the pump according to its optimized characteristics.


The compensation number is located on a label on the pump as shown.




Oil injection pump bleeding is done with B.U.D.S. Refer to *OIL INJECTION PUMP BLEEDING* in this subsection.

Subsection XX (LUBRICATION SYSTEM)


Oil Injection Pump Hoses Connection

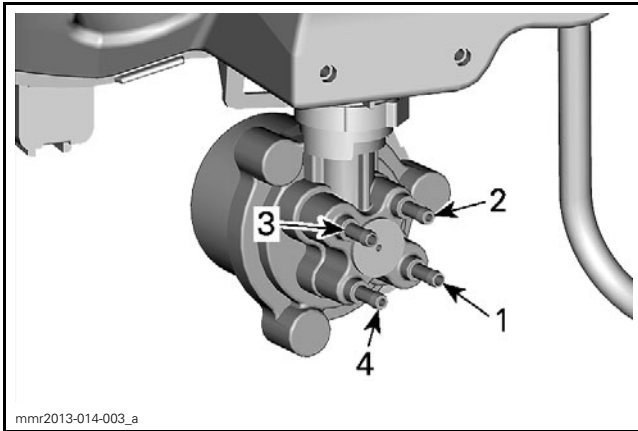

- mmr2013-014-003_a
1. To engine PTO side
 2. To 3D RAVE valve PTO side
 3. To engine MAG side
 4. To 3D RAVE valve MAG side

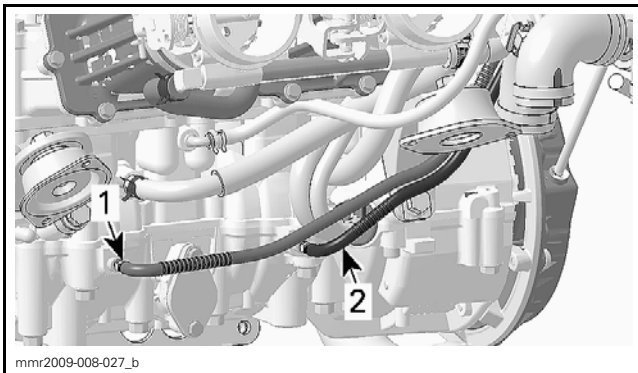

- mmr2009-008-027_b
- TYPICAL**
1. Oil inlet hose (PTO side)
 2. Oil inlet hose (MAG side)

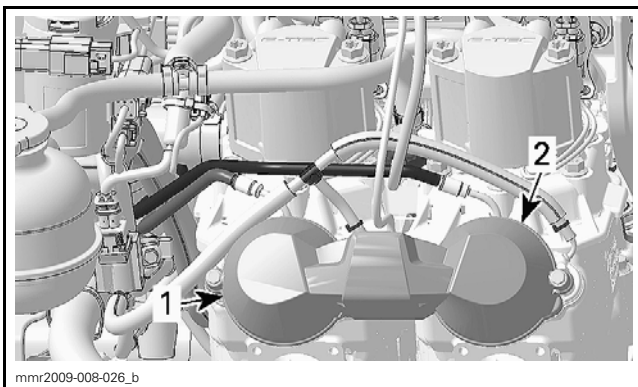


- mmr2009-008-026_b
- TYPICAL**
1. MAG 3D RAVE valve
 2. PTO 3D RAVE valve

Oil Injection Pump Test with B.U.D.S.

1. Connect B.U.D.S. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. In B.U.D.S., press Read Data.
3. Select **Activation** tab then the **ECM** tab.
4. Start engine.

5. Press on oil pump.

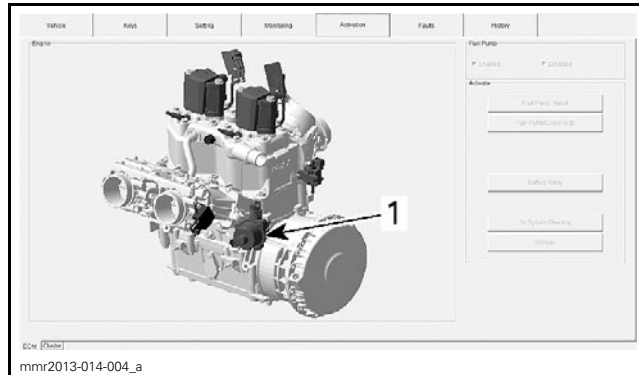

1. Press here to activate oil pump


6. Listen if oil injection pump is activated.

NOTE: Touching the oil injection pump may help to feel if pump is activated.

7. If test fails, check wires and connector.


Oil Injection Pump Removal

1. Remove oil tank from vehicle. Refer to *OIL TANK* in this subsection.
2. Remove and discard Oetiker clamp securing oil injection pump to oil tank.

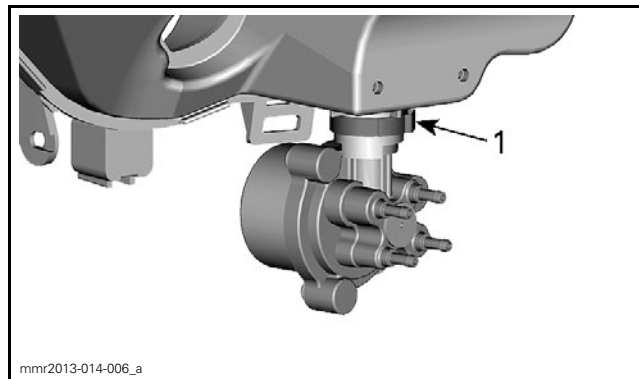


1. Oetiker clamp

3. Rotate oil injection pump from 90 degrees as illustrated.

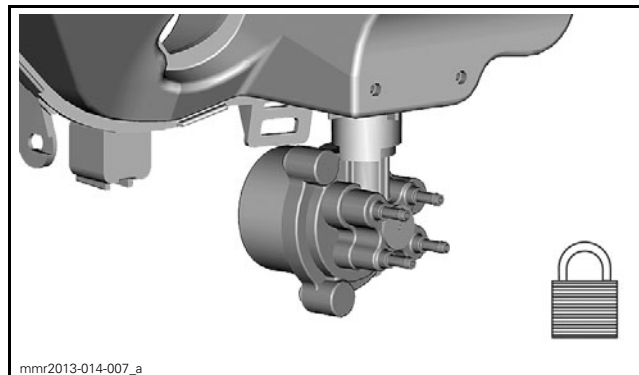


mmr2013-014-007_a

PUMP LOCKED INTO OIL TANK

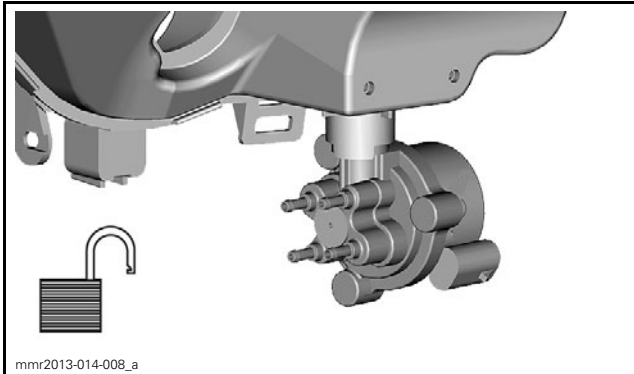


PUMP RELEASED FROM OIL TANK

4. Move oil injection pump downward to remove it from oil tank.

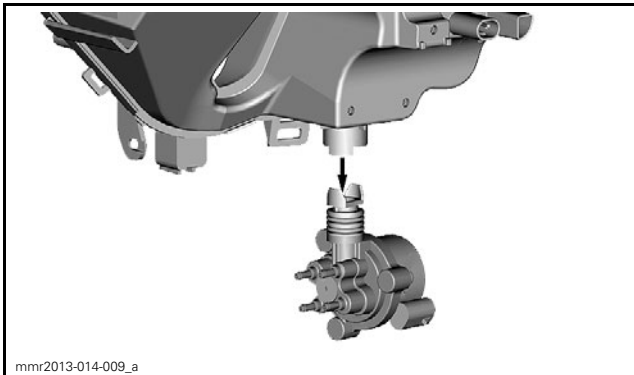

Oil Injection Pump Inspection

1. Check the strainer on the top of oil injection pump. Replace oil injection pump if the strainer is clogged.

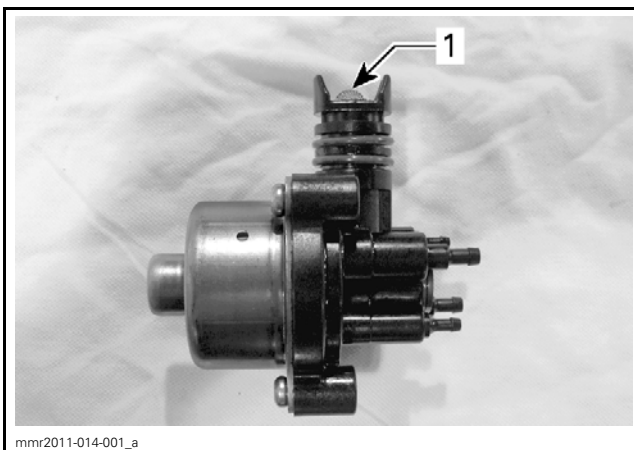

1. Oil injection pump strainer


NOTE: Do not replace oil injection pump needlessly. If strainer is slightly dented, oil injection pump is still functional.

Oil Injection Pump Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

Install **NEW** Oetiker clamp to secure oil injection pump.

Ensure Oetiker clamp makes contact with oil tank ribs.

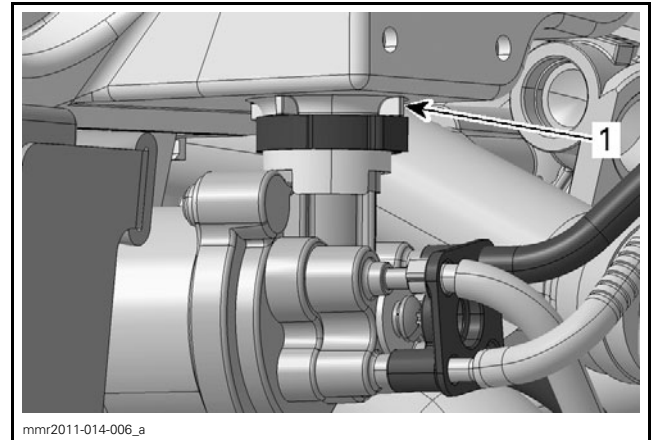


1. Oil tank rib

Refer to *OIL TANK INSTALLATION* to properly re-install oil tank.

Oil Injection Pump Bleeding

1. Connect B.U.D.S. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. In B.U.D.S., press **Read Data**.
3. Select **Setting** tab then the **ECM** tab.
4. Compare oil pump codes in B.U.D.S. and on oil injection pump sticker.

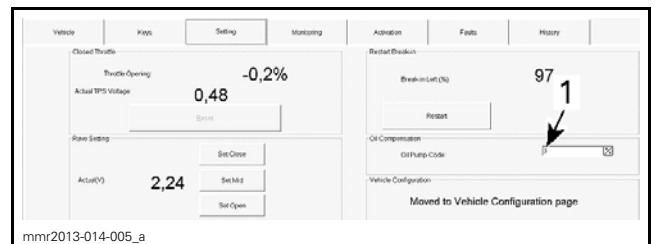

1. B.U.D.S. oil pump code



BACK OF OIL INJECTION PUMP

1. Oil injection pump code (0 to 9)

5. Correct oil injection pump code in B.U.D.S. if required.

6. Select **Activation** tab then **ECM** tab.

Subsection XX (LUBRICATION SYSTEM)

7. Press **Oil System Bleeding** button.
8. Start engine.
9. Check for air into hoses. If so, the bleeding procedure must be repeated once more.

OIL INJECTION TANK

Oil Injection Tank Removal

1. Remove fuel tank. Refer to *FUEL TANK AND FUEL PUMP* subsection.
2. Remove driven pulley. Refer to *DRIVEN PULLEY AND COUNTERSHAFT* subsection.
3. Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.
4. Remove housing of rewind starter handle (if applicable). Refer to *BODY* subsection.
5. On **800R E-TEC**, detach THCM module from oil injection tank. Refer to *EXHAUST SYSTEM* subsection.
6. Remove the 25 A fuse.
7. Detach fuse holders from oil injection tank.



1. 25 A fuse location


8. Empty oil injection tank completely by siphoning injection oil.
9. Disconnect crankcase vent hose on oil injection tank side.



TYPICAL

1. Crankcase vent hose


10. Cut locking tie retaining wires as necessary.
11. Disconnect oil level sensor connector.
12. Detach diagnostic connector from oil injection tank.

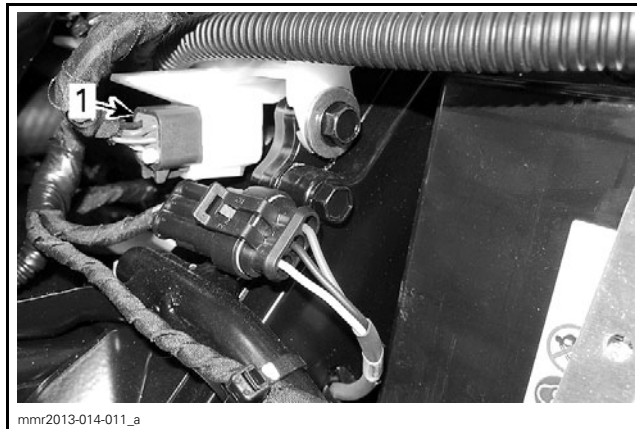

TYPICAL

1. Diagnostic connector


13. Detach ECM support from oil injection tank by pressing upper tab and sliding support outwards.

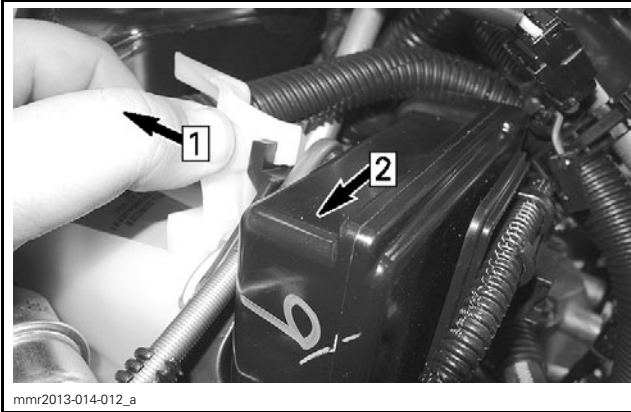

mnr2013-014-012_a

Step 1: Press tab rearwards
Step 2: Slide the ECM out of its support


14. Detach wires from capacitor.
15. Cut locking tie that secure oil hoses to engine.

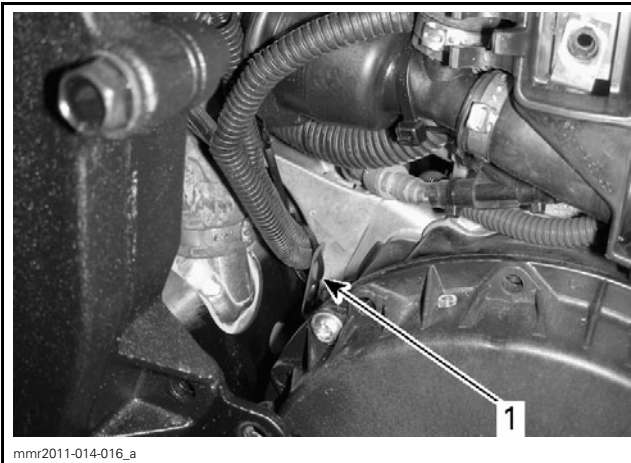

mnr2011-014-016_a

1. Locking tie

16. Pull pump hoses manifold by threading a M12 x 1.75 bolt.

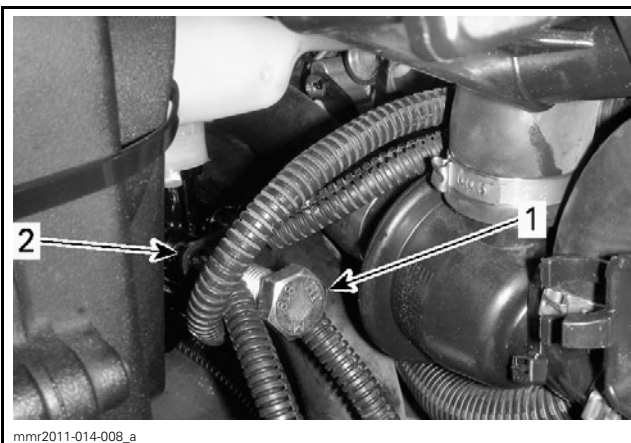


mnr2011-014-008_a

1. M12 x 1.75 bolt
2. Hoses manifold

17. Place a rag under oil injection pump to catch oil spillage.


18. Using metal scissors, remove and discard Oetiker clamps securing oil hoses to oil injection pump fittings.

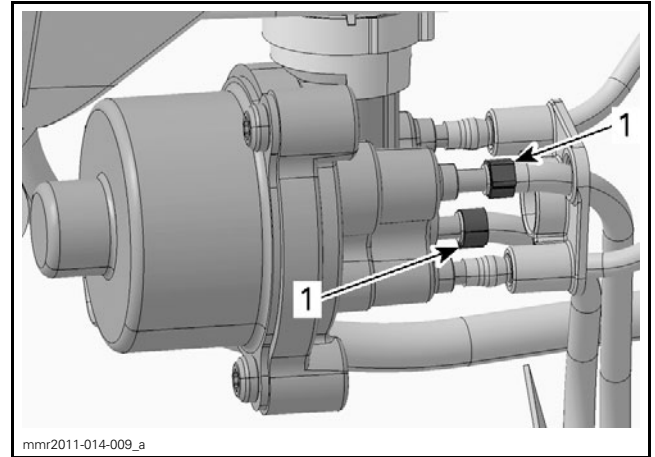

mnr2011-014-009_a

SOME PARTS REMOVED FOR CLARITY PURPOSE
1. Oetiker clamps (2x)

19. Carefully disconnect hoses from oil injection pump using a small screwdriver.

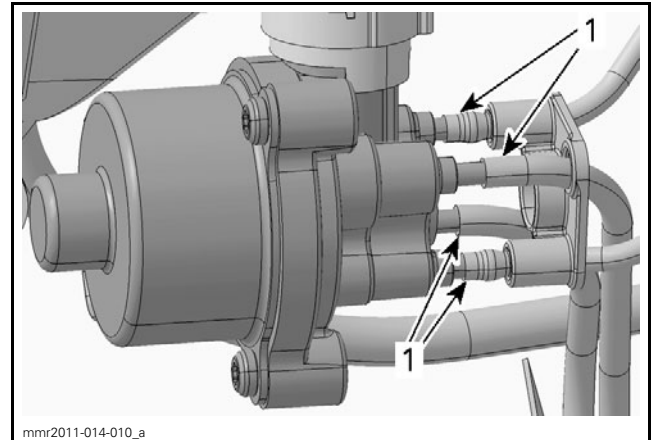


mnr2011-014-010_a

SOME PARTS REMOVED FOR CLARITY PURPOSE
1. Oil hoses (4x)

NOTICE Oil injection pump fittings are very fragile, care must be taken when removing hoses from oil injection pump.


20. Disconnect oil injection pump connectors.

Subsection XX (LUBRICATION SYSTEM)

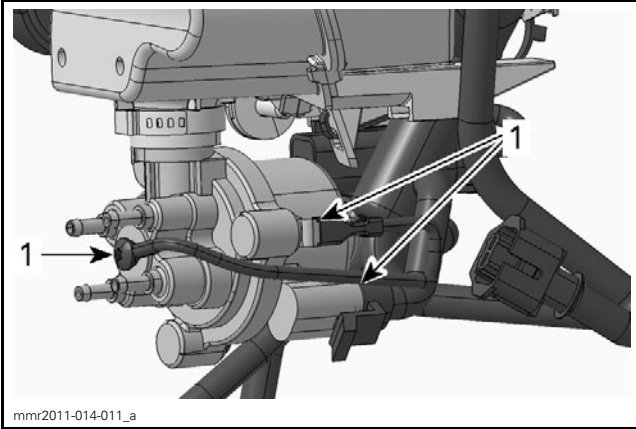


SOME PARTS REMOVED FOR CLARITY PURPOSE
1. Oil injection pump connectors

21. Remove RH side frame member.

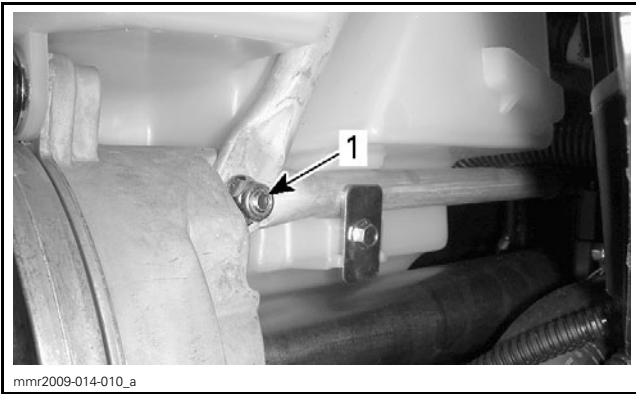

BEHIND THE TOP OF CHAINCASE
1. Lower bolt on side frame member

22. Remove holder retaining oil tank to side frame member brace.

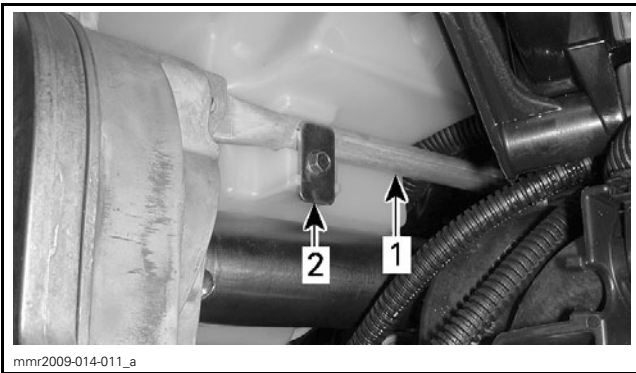

TYPICAL
1. Side frame member brace
2. Oil tank holder

23. Remove screws securing oil tank to chaincase.



TYPICAL
1. Oil tank screws


24. Remove oil tank from vehicle.

25. Remove oil injection pump from oil injection tank. Refer to *OIL INJECTION PUMP REMOVAL* in this subsection.

Oil Injection Tank Installation

Before tightening oil injection tank on vehicle, proceed as follows.

1. Install oil injection pump on oil injection tank. Refer to *OIL INJECTION PUMP INSTALLATION*.
2. Apply injection oil on oil injection pump hoses.

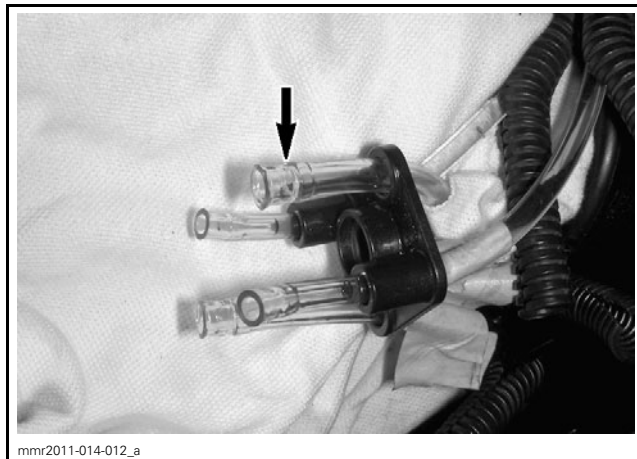

APPLY INJECTION OIL

3. Install manifold sleeves onto both hoses routed towards 3D RAVE valves.
4. Properly route and connect oil hoses into oil injection pump. Refer to *OIL INJECTION PUMP HOSES CONNECTION* in this subsection.
5. Install **NEW** Oetiker clamp to secure hose routed towards PTO and MAG oil inlet.

NOTICE Oil injection pump fittings are very fragile, care must be taken when installing hoses on oil injection pump.

6. Manually push hoses manifold against oil injection pump.
7. Use a large jaws locking pliers then **carefully** push manifold until it clips onto oil injection pump.



mnr2011-014-013


MANIFOLD INSTALLATION



mnr2011-014-014

MANIFOLD INSTALLATION

8. Ensure hoses manifold is properly clipped onto oil injection pump.

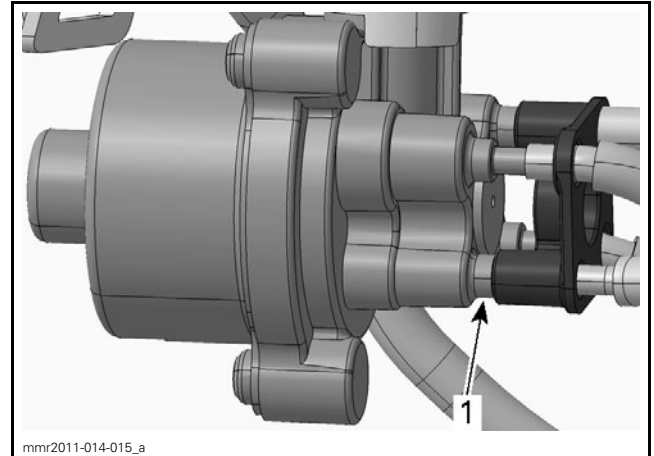

mnr2011-014-015_a

MANIFOLD PROPERLY CLIPPED

1. Normal gap

NOTE: A slight gap is normal between oil injection pump and hoses manifold.

Position oil injection tank on vehicle.

Tighten oil injection tank screws to specification.

TIGHTENING TORQUE	
Oil tank SIDE screws	8 N•m (71 lbf•in)
Oil tank FRONT screw	1 N•m (9 lbf•in)

Reinstall all remaining components as the reverse of removal procedure.

Fill up oil injection tank using recommended oil. See *RECOMMENDED INJECTION OIL* in this subsection.

Bleed oil injection system. Refer to *OIL INJECTION PUMP BLEEDING* in this subsection.

⚠ WARNING

Make sure fitting of the fuel inlet hose at ECM is not leaking.

OIL LEVEL SENSOR

Oil Level Sensor Test

1. Measure resistance by probing sensor connector.

REQUIRED TOOL	
FLUKE 115 MULTIMETER (P/N 529 035 868)	


SENSOR TEST CONDITION		RESISTANCE
Empty oil tank	LOW float position	Closed circuit (close to 0 Ω)
	HIGH float position	Open circuit infinite (OL)



Paperless Manuals
For a Better Tomorrow


If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

Subsection XX (LUBRICATION SYSTEM)

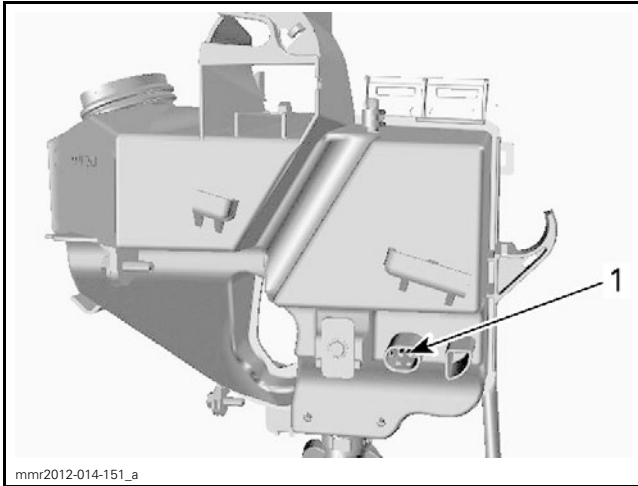

mmr2012-014-151_a

1. Probe sensor connector here

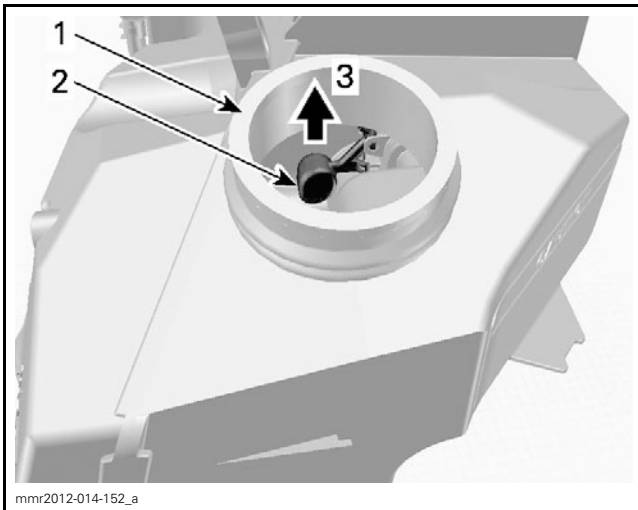

mmr2012-014-152_a

MEASURING RESISTANCE WITH FLOAT HELD IN HIGH POSITION

1. Oil tank cap removed
2. Float
3. Use a locking tie to lift float

If test fails, replace oil tank.

If test succeeds check float condition in oil tank.

Oil Level Sensor Removal


Oil level sensor is part of the oil tank and is not removable.

INJECTION NOZZLE

Injection Nozzle Inspection

Lift engine to access the injector nozzles.

Test check valve of injection nozzle as follows.

REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	

PUMP SETTING	SET TO VACUUM	SET TO PRESSURE
TO DO	Activate pump several times	Slowly activate pump and listen to check valve
RESULT	Air must not flow through check valve	You should hear it release pressure at approximately 20.7 kPa (3 PSI)
ACTION	Success: Perform next test	Success: Check valve is good
	Failed: Replace injection nozzle	Failed: Replace injection nozzle


Injection Nozzle Removal

NOTICE Do not remove injection nozzle needlessly. It is likely to be damaged.

1. To gain access to the injector nozzles, engine must be lifted. Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.
2. Clean injection nozzle area to remove oil or dirt.
3. Heat injection nozzle then pull it out of crankcase.

Injection Nozzle Installation

1. Prior to coating it with Loctite, make sure check valve body is clean and dry. If necessary, clean from dirt or oil, with PULLEY FLANGE CLEANER (P/N 413 711 809).
2. Apply LOCTITE 648 (GREEN) (P/N 413 711 400) on the outer diameter of the check valve (machined section). Take care that Loctite is ONLY in this area.

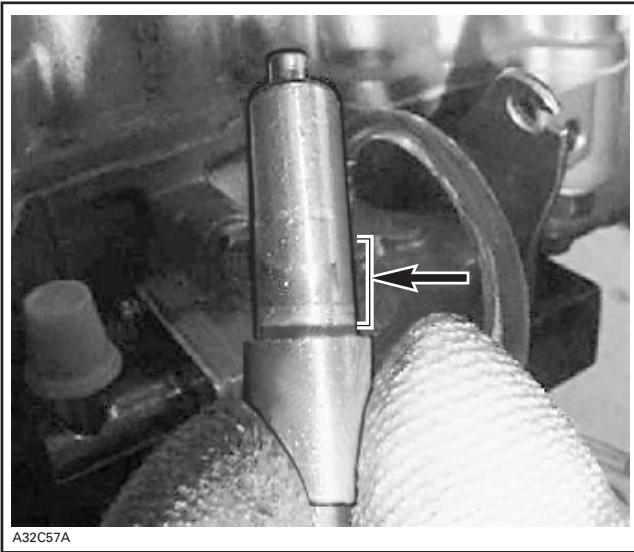

APPLY LOCTITE ON THIS AREA ONLY


3. Punch in the injection nozzle carefully with a plastic hammer.
4. Clean crankcase from surplus of Loctite 648 with a rag.
5. Reinstall engine into vehicle. Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.

COOLING SYSTEM

SERVICE TOOLS

Description	Part Number	Page
LARGE HOSE PINCHER.....	529 032 500	3-4
TEST CAP.....	529 035 991	3
VACUUM/PRESSURE PUMP	529 021 800	3-4

Subsection XX (COOLING SYSTEM)

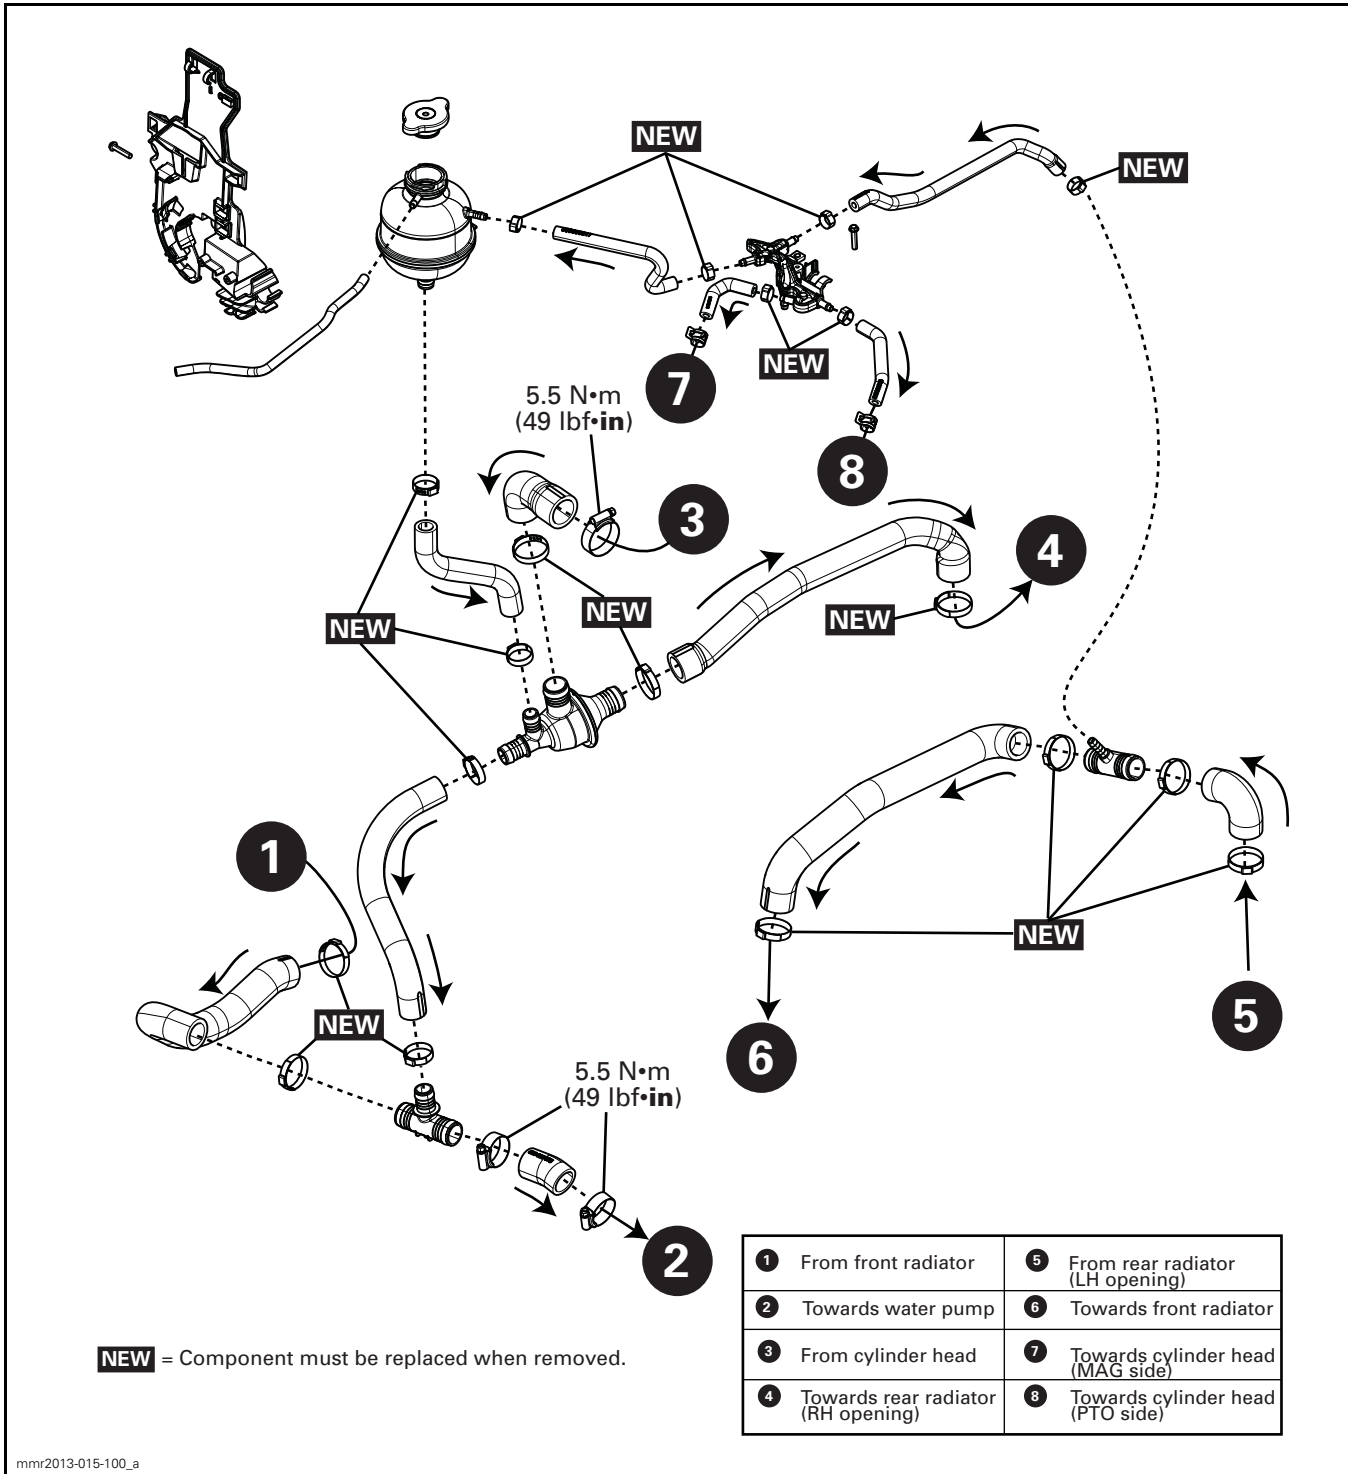

mnr2013-015-100_a

GENERAL

NOTE: It is a good practice to check for fault codes using B.U.D.S. software as a first troubleshooting step. Refer to the *DIAGNOSTIC AND FAULT CODES* subsection.

During assembly/installation, use torque values and service products as shown in the exploded views.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices must be replaced with new ones when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.).

INSPECTION

COOLING SYSTEM LEAK TEST

NOTE: This test confirms if there is a leak in the cooling system, including the engine.



⚠ WARNING

To prevent potential burns, do not remove the coolant tank cap if the engine is hot.

Remove upper body module.

Remove coolant tank cap.

Pressurize system through coolant tank.

REQUIRED TOOL	
TEST CAP (P/N 529 035 991)	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	
TEST PRESSURE	
100 kPa (15 PSI)	



mnr2008-014-005

TYPICAL


If pressure drops, check all hoses and engine for coolant leaks. Spray a soap/water solution and look for air bubbles.


If no external leak is found and pressure drops, carry out the *ENGINE COOLING CIRCUIT LEAK TEST* to find a potential engine internal leak.

ENGINE COOLING CIRCUIT LEAK TEST

NOTE: An engine leak test should be performed prior to installing engine in vehicle each time the engine is disassembled.

Install a suitable hose on the water pump cover and block it.

REQUIRED TOOL	
LARGE HOSE PINCHER (P/N 529 032 500)	

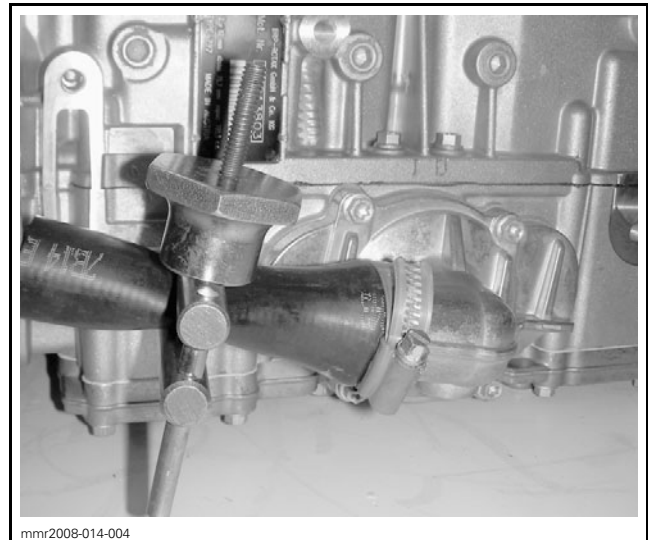



mnr2008-014-004

TYPICAL


Subsection XX (COOLING SYSTEM)

Install a suitable hose on the water pump cover and block it.


REQUIRED TOOL	
LARGE HOSE PINCHER (P/N 529 032 500)	

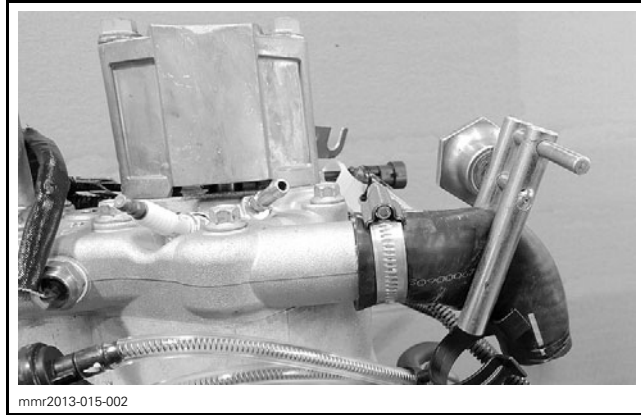


Block coolant fittings on cylinder head using plugs from vacuum/pressure pump kit.

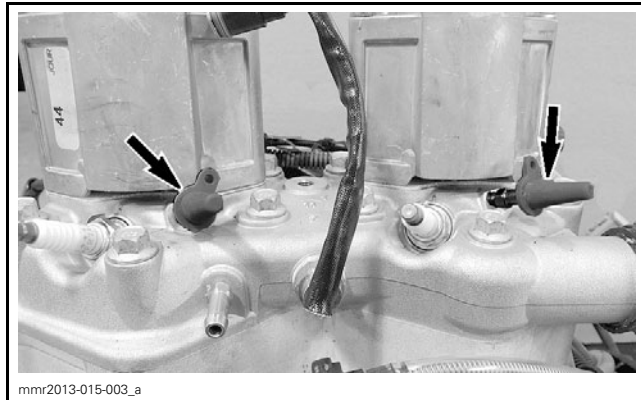

Install the pressure pump on the straight fitting for throttle body heating.

REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	

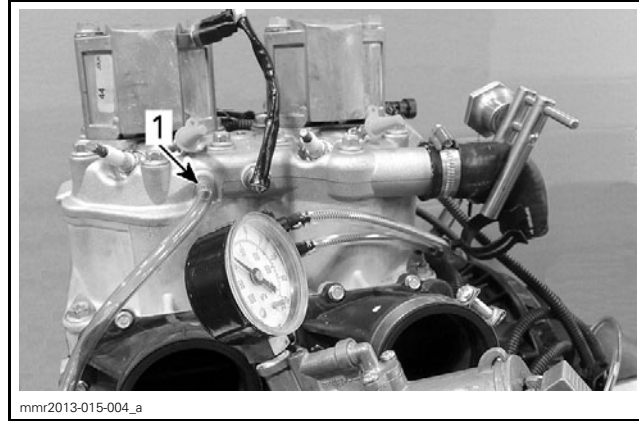

1. Straight fitting for throttle body heating

Pressurize the engine.

TEST PRESSURE
100 kPa (15 PSI)

If pressure drops, spray a soap/water solution onto engine jointed surfaces and look for air bubbles.

PROCEDURES

WATER PUMP


Refer to appropriate *BOTTOM END* subsection.

THERMOSTAT

Thermostat Removal

To remove thermostat:

- Block all four thermostat hoses with hose pinchers or
- Drain cooling system.

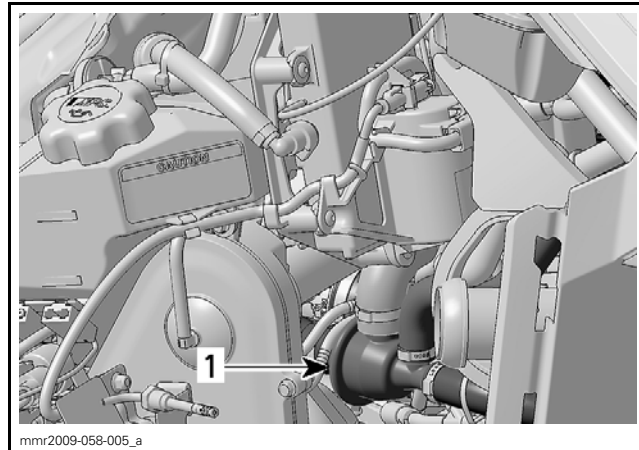

TYPICAL

1. Thermostat

Remove LH and RH panels. Refer to *BODY* subsection.


Remove drive belt guard. Refer to *DRIVE BELT* subsection.

Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.

Remove muffler. Refer to *EXHAUST SYSTEM* subsection.

Cut Oetiker clamps then unplug hoses.

Remove thermostat housing.

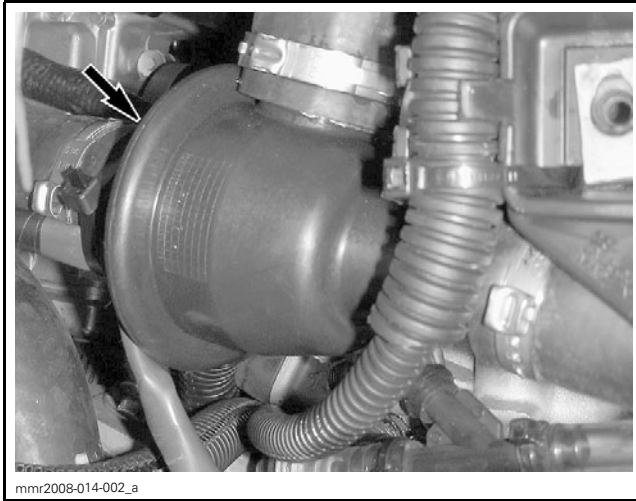

mnr2008-014-002_a

TYPICAL - THERMOSTAT HOUSING

Thermostat Test

To check thermostat, put in water and heat water.

THERMOSTAT TEMPERATURE	
Starts to open	37°C (99°F)
Fully open	55°C (131°F)

Thermostat Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

Properly refill cooling system. Refer to *COOLING SYSTEM REFILL AND BLEEDING* in *PERIODIC MAINTENANCE PROCEDURES* subsection.

COOLANT TANK CAP

Using a pressure cap tester, check the relief pressure of coolant tank cap.

If the test failed, install a new 90 kPa (13 PSI) cap.

NOTICE Do not install a tank cap exceeding the recommended pressure.

COOLANT TANK

Coolant Tank Removal

1. Remove upper body module, refer to *BODY* subsection.
2. Siphon coolant tank and block the three lower hoses with pinchers.
3. Cut Oetiker clamps and remove all hoses from coolant tank.
4. Remove retaining screws to disengage coolant tank from frame.

Coolant Tank Inspection

Check if the tank is cracked or melted. Replace if necessary.

Coolant Tank Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

Properly refill cooling system. Refer to *COOLING SYSTEM REFILL AND BLEEDING* in *PERIODIC MAINTENANCE PROCEDURES* subsection.

COOLANT TEMPERATURE SENSOR (CTS)

To test and replace the CTS, refer to *E-TEC DIRECT FUEL INJECTION* subsection.



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

MAGNETO SYSTEM


SERVICE TOOLS

Description	Part Number	Page
CRANKSHAFT PROTECTOR (MAG).....	420 876 557	4
FLUKE 115 MULTIMETER	529 035 868	6
MAGNETO PULLER RING	420 876 081	3
MAGNETO PULLER	529 035 547	4

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE 243 (BLUE).....	293 800 060	5, 8-9
LOCTITE 5910	293 800 081	7-8

Subsection XX (MAGNETO SYSTEM)

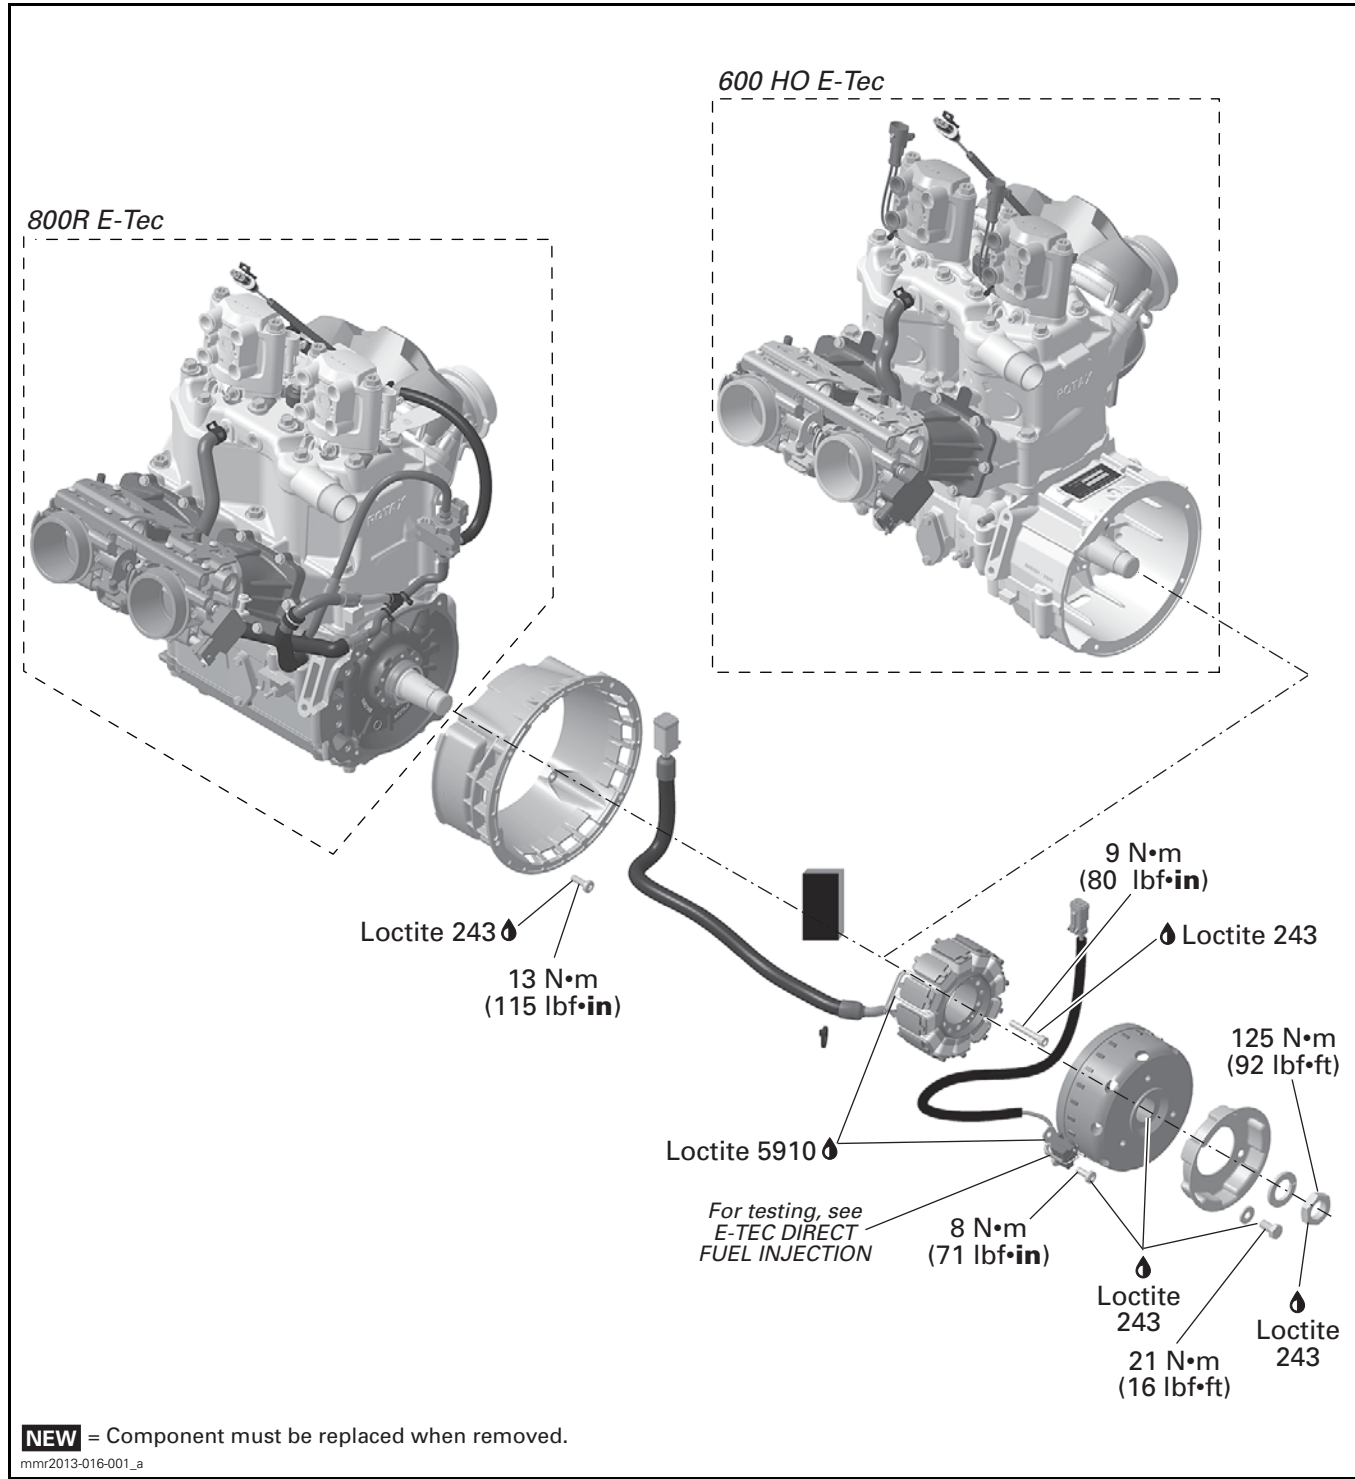

GENERAL

NOTE: The following procedures can be carried out without removing the engine.

During assembly/installation, use the torque values and service products as shown in the exploded views.

Clean threads before applying a threadlocker. Refer to the *SELF-LOCKING FASTENERS* and *LOC-TITE APPLICATION* subsections at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to.

Locking devices must be replaced with new ones when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, etc.).

PROCEDURES

MAGNETO FLYWHEEL

Magneto Flywheel Access

1. Remove muffler. Refer to *EXHAUST SYSTEM* subsection.

Magneto Flywheel Removal

1. Remove rewind starter assembly (or magneto cover for electric start models). Refer to *REWIND STARTER* subsection.

600 HO E-TEC Models

2. Remove rewind starter connecting flange. Refer to *REWIND STARTER* subsection.

All Models

3. Hold magneto flywheel with a socket then remove starting pulley retaining screws.




mmr2012-016-001_a
TYPICAL - STARTING PULLEY (800R E-TEC ILLUSTRATED)



mmr2012-016-002
TYPICAL - STARTING PULLEY SCREWS REMOVAL


4. Remove magneto flywheel retaining nut, using an appropriate socket.

REQUIRED TOOL	
MAGNETO PULLER RING (P/N 420 876 081)	
30 mm socket with the outside diameter machined to 40 mm (1.575 in)	

NOTICE Use only the following screw lengths to fasten puller ring to magneto flywheel. If other screw lengths are used, the stator behind the magneto flywheel may be damaged.


ENGINE	SCREW LENGTH
600 HO E-TEC, 800R E-TEC	M8 x 25 mm

Subsection XX (MAGNETO SYSTEM)

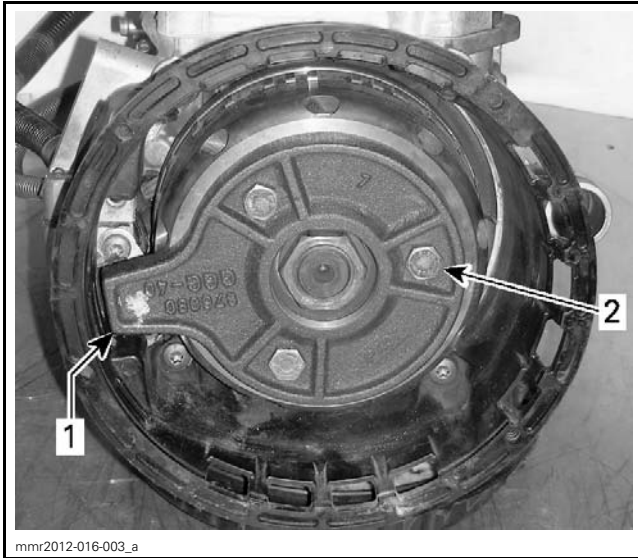


TYPICAL - 800R ENGINES

1. Tab in magneto housing opening
2. M8 screws of appropriate length (x3)

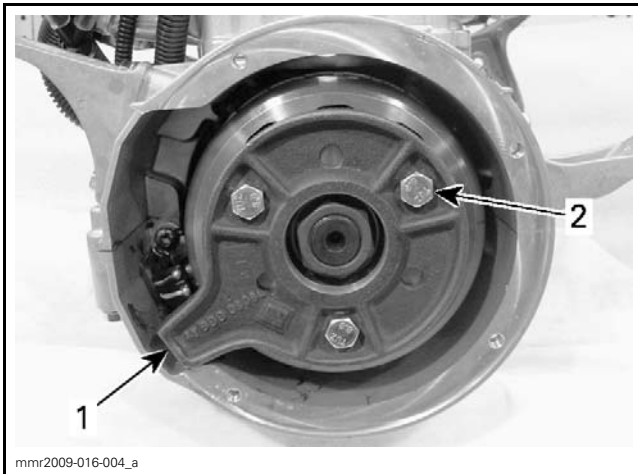

TYPICAL 600 HO E-TEC

1. Tab in magneto housing opening
2. M8 screws of appropriate length

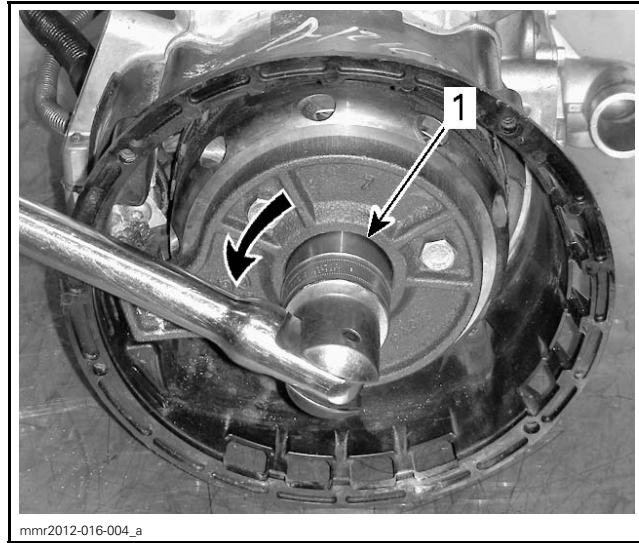



TYPICAL

1. Machined 30 mm socket

NOTE: To correctly remove a fastener with threadlocker, first tap on the fastener to break threadlocker bond. This will prevent the thread from breaking.

5. Remove magneto flywheel.

REQUIRED TOOL	
CRANKSHAFT PROTECTOR (MAG) (P/N 420 876 557)	
MAGNETO PULLER (P/N 529 035 547)	

NOTE: Apply a small amount of grease on the end of the crankshaft to hold crankshaft protector in place.

Install the magneto puller into the magneto puller ring.

Tighten puller bolt, while tapping on puller bolt head with a hammer to release magneto flywheel from crankshaft.



TYPICAL

Magneto Flywheel Cleaning

NOTICE Clean magneto flywheel using only a clean cloth.

Magneto Flywheel Inspection

Inspect magneto flywheel for abnormal coloration (brown or blue) that would indicate overheating condition.

If overheating condition is suspected, carry out the following:

- Check flywheel magnetic field using a piece of metal. If magnetic field is not felt or weak, replace flywheel.
- Inspect flywheel for cracks, pay particular attention to the inside circumference (magnets), and the tapered center portion.
- Check if magneto housing ventilation holes are clean.
- Check stator for signs of overheating.
- Test stator, see procedures further in this subsection.

Magneto Flywheel Installation

1. Clean crankshaft extension (taper) and apply LOCTITE 243 (BLUE) (P/N 293 800 060) on tapered surface.
2. Position Woodruff key, magneto flywheel and lock washer on crankshaft.
3. Clean threads in magneto flywheel nut.
4. Install nut on crankshaft and tighten to specification.


MAGNETO FLYWHEEL NUT	
Service Product	LOCTITE 243 (BLUE) (P/N 293 800 060)
Tightening Torque	125 N•m (92 lbf•ft)

NOTICE Do not apply silicone dielectric grease or any other product on Deutsch waterproof housings as housing seal may be damaged.


STATOR

Stator Connector Access

1. Remove upper body module. Refer to *BODY* subsection.
2. Remove muffler. Refer to *EXHAUST SYSTEM* subsection.
3. Detach coolant tank from its support.

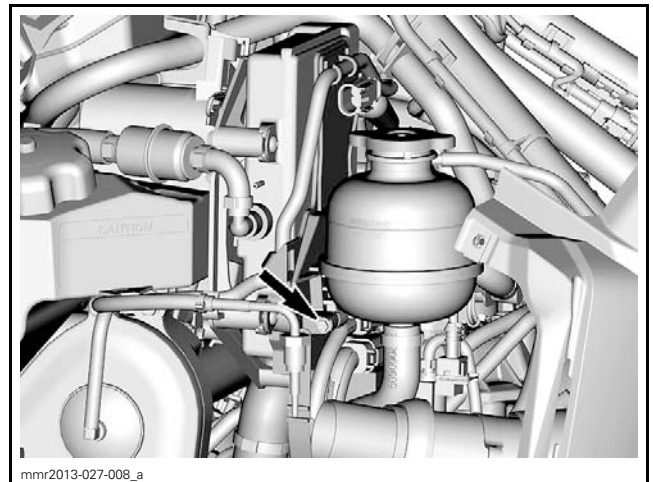

4. Disconnect stator connector (6-pin connector).

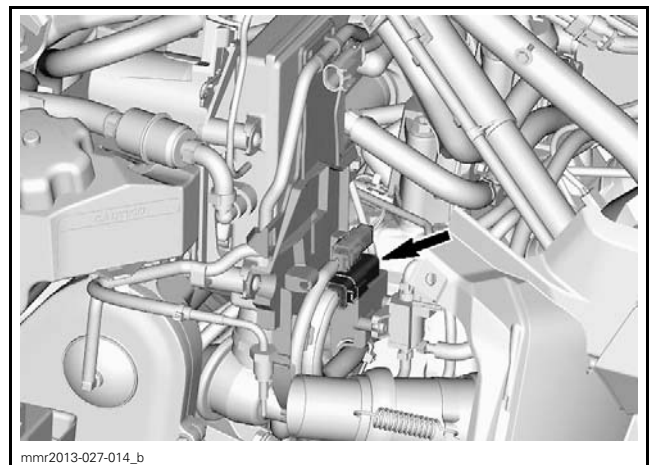


Stator Continuity Test

1. Disconnect stator connector.


Subsection XX (MAGNETO SYSTEM)

2. Set multimeter to Ω .

REQUIRED TOOL	
FLUKE 115 MULTIMETER (P/N 529 035 868)	

3. Measure resistance of each stator coil as follows.

STATOR CONTINUITY TEST		
TEST PROBES		RESISTANCE @ 20°C (68°F)
Pin 1	Pin 6	0.63 ± 0.03 Ω
Pin 2	Pin 5	
Pin 3	Pin 4	

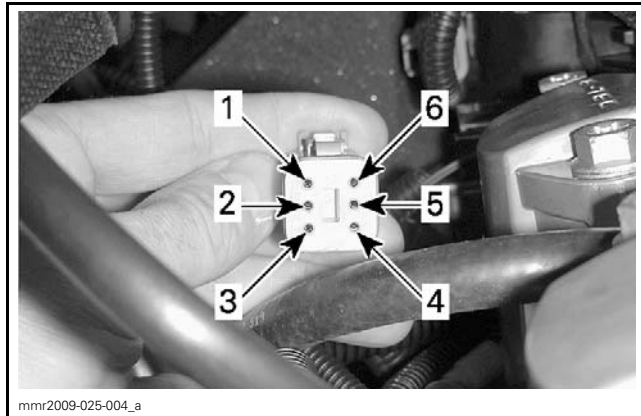


STATOR CONNECTOR PIN-OUT

NOTE: The stator resistance values mentioned in the table are manufacturers specifications under ideal conditions. If stator coil resistance is less than 1 Ω , consider stator to be in good working condition.

If resistance is out of specification, replace stator.


Stator Insulation Test

1. Disconnect stator connector.
2. Set multimeter to Ω .

REQUIRED TOOL	
FLUKE 115 MULTIMETER (P/N 529 035 868)	

3. Measure resistance as follows.

STATOR INSULATION TEST		
TEST PROBES		RESISTANCE @ 20°C (68°F)
Pin 1	Engine ground	OL (open circuit)
Pin 2		
Pin 3		
Pin 1	Pin 4	
Pin 1	Pin 5	
Pin 2	Pin 4	

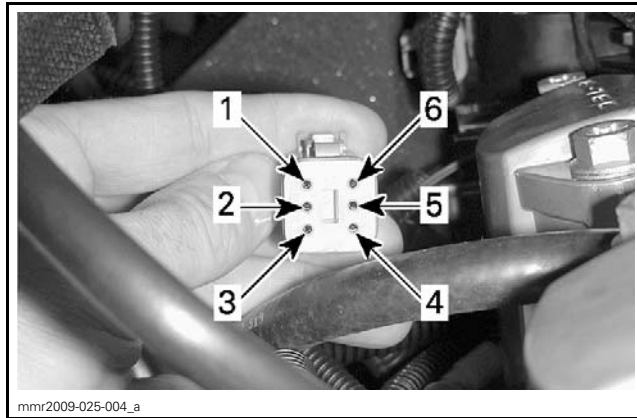


STATOR CONNECTOR PIN-OUT

If results are out of specification, the stator and/or the wiring need to be repaired/replaced.


Stator Voltage Output Test

1. Disconnect stator connector.
2. Set multimeter to Vac and manually set a scale capable of reading at least 20 Vac.

REQUIRED TOOL	
FLUKE 115 MULTIMETER (P/N 529 035 868)	

3. Manually crank engine and read voltage from each winding as follows.
4. Repeat the test 3 times for each winding.

STATOR OUTPUT VOLTAGE TEST		
TEST PROBES		VOLTAGE
Pin 1	Pin 6	Approximately 15 - 20 Vac
Pin 2	Pin 5	
Pin 3	Pin 4	

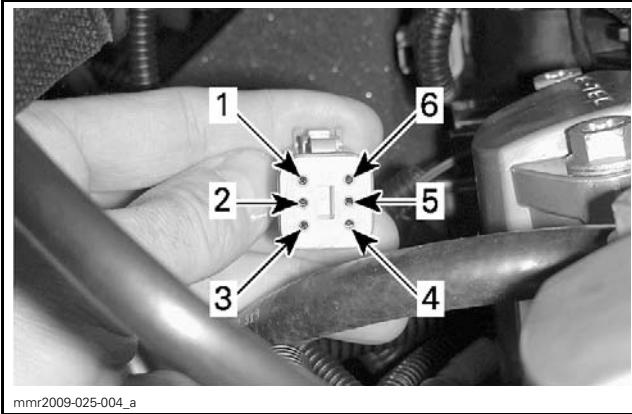

mnr2009-025-004_a

STATOR CONNECTOR PIN-OUT

5. If voltage is lower than specification, remove and inspect magneto flywheel and stator. Refer to *MAGNETO FLYWHEEL* in this subsection.
6. Replace magneto flywheel and/or stator if applicable.

Stator Removal

1. Lift engine for access to stator harness. Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.
2. Remove *MAGNETO FLYWHEEL*, see procedure in this subsection.
3. Remove Allen socket screws retaining stator to magneto housing.
4. Remove grommet from crankcase where CPS sensor and stator wires exit magneto housing.
5. Disconnect stator connector. Refer to *STATOR CONNECTOR ACCESS* in this subsection.

NOTE: To ease harness routing at installation, tie a string on the connector and let the string follow through as you pull on the harnesses.

6. Remove stator and carefully pull wires through the grommet.

NOTE: It will be necessary to break the silicone sealant behind the left side of the stator. Proceed carefully to avoid wire damage.

Stator Cleaning


NOTICE Clean stator using only a clean cloth.

Stator Inspection

Refer to *MAGNETO FLYWHEEL INSPECTION* in this subsection.

Stator Installation

1. Install adhesive pad on crankcase as illustrated.

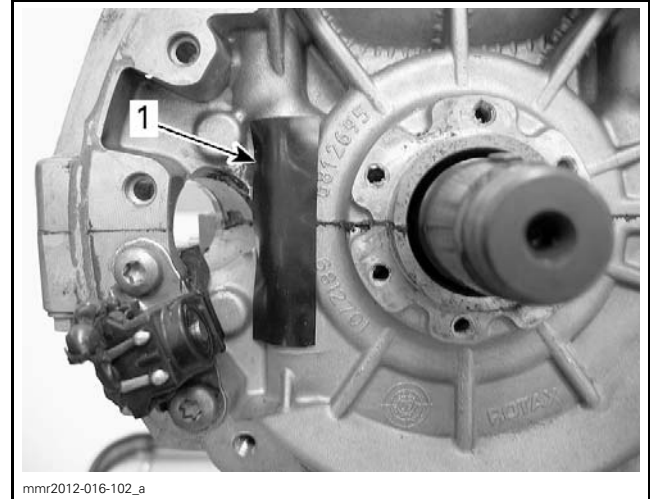

mnr2012-016-102_a


TYPICAL - 800R E-TEC SHOWN

MAGNETO HOUSING REMOVED FOR CLEARNESS PURPOSE

1. Adhesive pad to install

NOTE: It is important to remove the old sealant behind the LH side of the stator then apply new sealant specified on stator wires.

STATOR WIRES	
Service Product	LOCTITE 5910 (P/N 293 800 081)

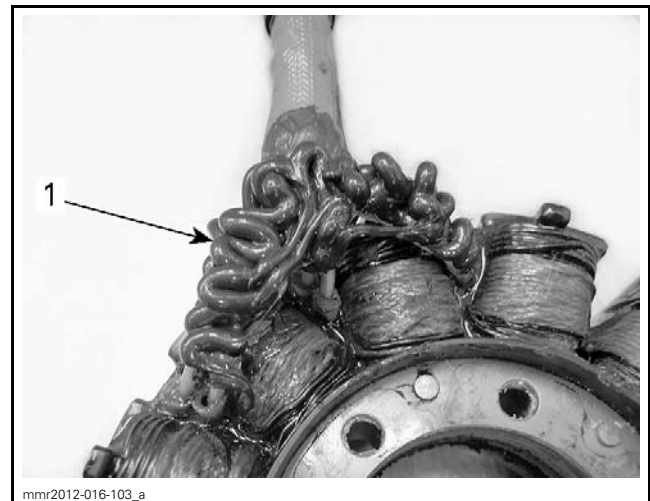

mnr2012-016-103_a

1. New sealant LOCTITE 5910 (P/N 293 800 081)

2. Insert stator connector through the crankcase and grommet.
3. Install grommet on crankcase.

NOTE: During installation, ensure stator harness is located on the left side.

4. Tighten stator retaining screws to specification.

Subsection XX (MAGNETO SYSTEM)

STATOR RETAINING SCREWS	
Service Product	LOCTITE 243 (BLUE) (P/N 293 800 060)
Tightening Torque	9 N•m (80 lbf•in)

5. Tie the string on the connector used during removal of the stator connector, then pull on him to route the harness up to his original locations.
6. Reinstall all other removed parts.

CRANKSHAFT POSITION SENSOR (CPS)

CPS Test

Refer to *E-TEC DIRECT INJECTION* subsection.

CPS Removal

CAUTION Ensure tether cord is removed from D.E.S.S. post and engine shut-off switch is in the OFF position.

1. Lift engine for access to CPS harness. Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.
2. Remove magneto flywheel, refer to *MAGNETO FLYWHEEL REMOVAL* in this subsection.

800R E-TEC Models

3. Remove magneto housing, refer to *MAGNETO HOUSING* in this subsection.

All Models

4. Remove CPS retaining screws.
5. Remove grommet from crankcase where CPS harness exits magneto housing.
6. Disconnect CPS connector, refer to *STATOR CONNECTOR ACCESS* in this subsection.

NOTE: To ease harness routing at installation, tie a string to the CPS connector and guide it through as you pull on the CPS harness.

7. Remove CPS and carefully pull harness through from crankcase.
8. Remove the old silicon at CPS sensor location

CPS Installation

The installation is the reverse of the removal procedure, however pay attention to the following.


Tie the string used during removal on the CPS connector, then pull on it to route the harness to its original location.

Tighten CPS retaining screws to specification.

CPS RETAINING SCREWS	
Service Product	LOCTITE 243 (BLUE) (P/N 293 800 060)
Tightening Torque	8 N•m (71 lbf•in)

NOTE: It is important to remove the old silicon at CPS location then apply new silicon. Screw CPS then stick the CPS harness.

CPS HARNESS	
Service Product	LOCTITE 5910 (P/N 293 800 081)

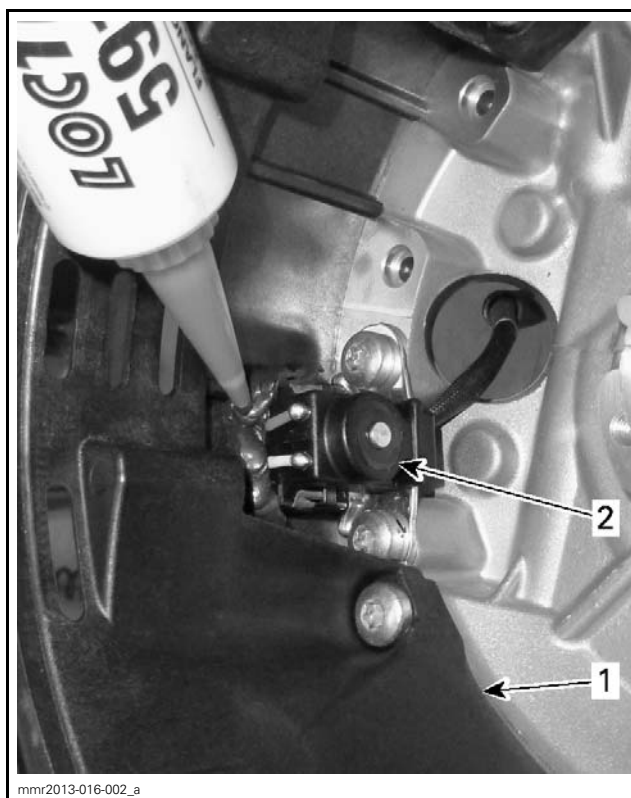

TYPICAL - 800R E-TEC SHOWN

1. Magneto housing
2. CPS

MAGNETO HOUSING (800R E-TEC)


Magneto Housing Inspection

Inspect housing for cracks or other apparent damage. Replace if necessary.

Magneto Housing Removal


⚠ CAUTION Ensure tether cord is removed from D.E.S.S. post and engine shut-off switch is in the OFF position.

1. Remove magneto flywheel, refer to *MAGNETO FLYWHEEL REMOVAL* in this subsection.
2. Remove magneto housing screws.

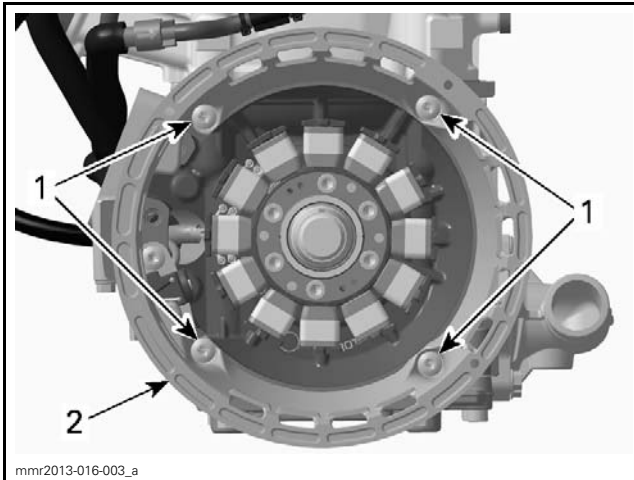

1. Magneto housing screws
2. Magneto housing

3. Slightly pull magneto housing and cut silicone sealer from between CPS and crankcase.

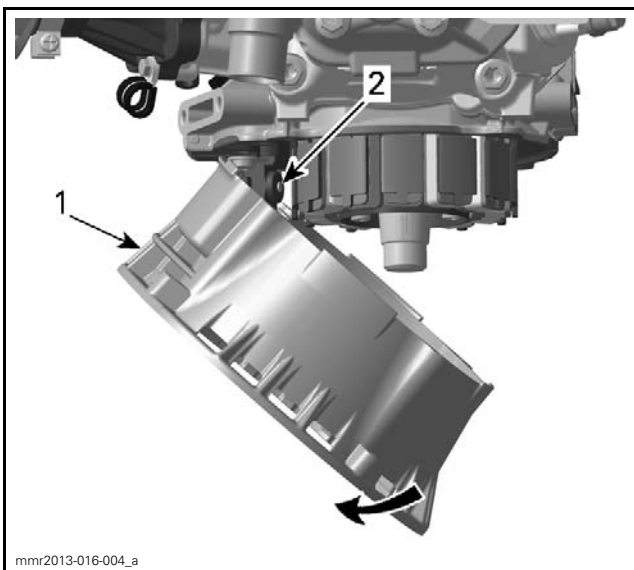

PULL MAGNETO COVER

1. Magneto cover
2. CPS

4. Remove magneto housing.

Magneto Housing Installation

The installation is the reverse of the removal procedure, however pay attention to the following.

Remove the old silicon at CPS location then apply new silicon. Refer to *CPS INSTALLATION* in this subsection.

Tighten magneto housing screws to specification.

MAGNETO HOUSING SCREWS	
Service Product	LOCTITE 243 (BLUE) (P/N 293 800 060)
Tightening Torque	13 N•m (115 lbf•in)



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

RAVE


SERVICE TOOLS

Description	Part Number	Page
SMALL HOSE PINCHER	295 000 076	18
T-HARNESS	529 035 869	20
VACUUM/PRESSURE PUMP	529 021 800	8, 11-12, 18-19, 21

SERVICE PRODUCTS


Description	Part Number	Page
DREI BOND SEALING COMPOUND	420 297 906	16
LOCTITE 243 (BLUE)	293 800 060	9, 18
MOLYKOTE G-N	420 297 433	16
XPS SYNTHETIC BLEND 2-STROKE OIL	293 600 100	14

RAVE VALVE

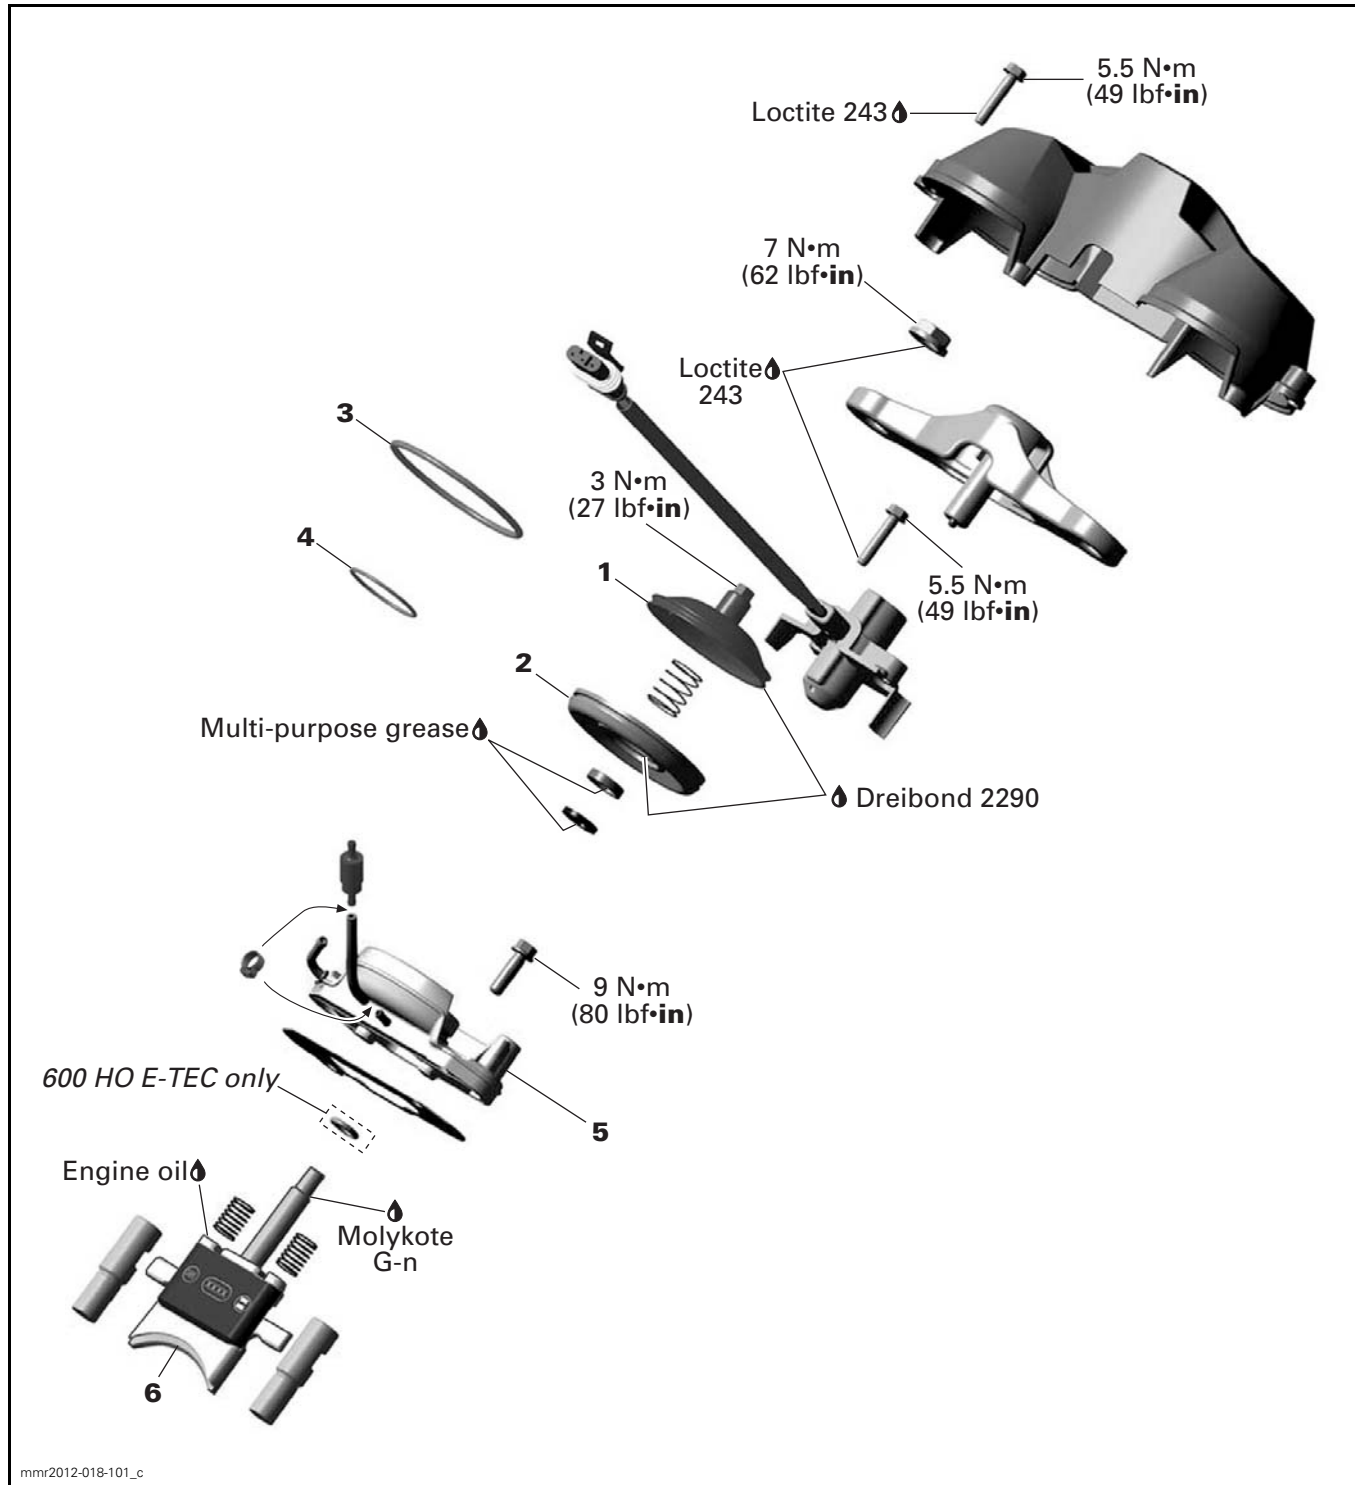

mnr2012-018-101_c

SOLENOID AND CHECK VALVES

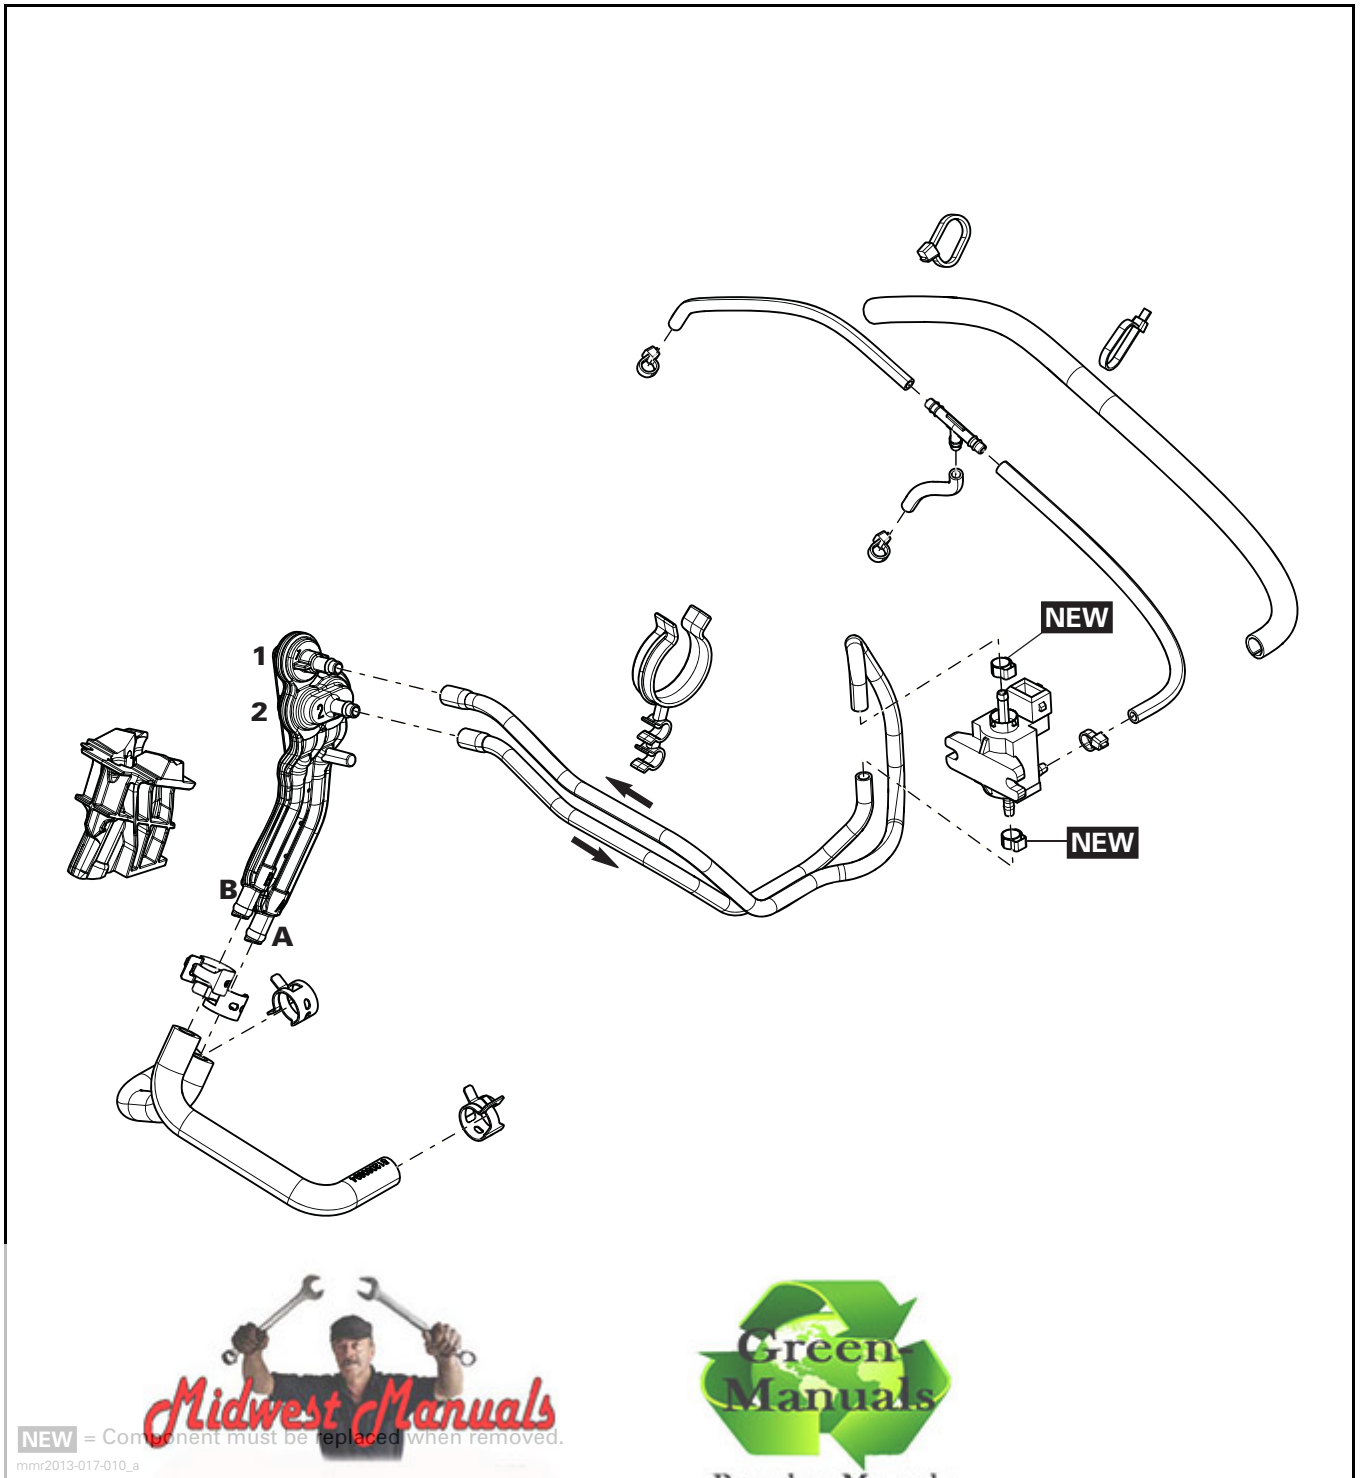

Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

GENERAL

During assembly/installation, use torque values and service products as shown in the exploded view.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS PROCEDURE* and *LOCTITE APPLICATION PROCEDURE* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.) must be replaced with new ones.

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

SYSTEM DESCRIPTION

3D RAVE Basic Operation

3-step RAVE valves are used. Their positions vary according to engine operating condition.

The RAVE valve steps are:


- Fully closed
- Partially opened
- Fully opened.

RAVE valves are moved to the desired position by using vacuum or pressure via a solenoid that is controlled by the ECM through mappings.

Many different mappings are used by the ECM to control the 3D RAVE valves. The mappings are based on current engine RPM, crankshaft rate of acceleration or deceleration and the following inputs: intake temperature, TPS, knock sensor, engine coolant temperature and APS.


NOTE: 3D RAVE valves may go through all 3 positions or skip the partially open position and go directly to either the fully open or closed positions depending how quickly the throttle is depressed and the engine load.

The solenoid directs pressure and/or vacuum towards the RAVE valves to open or close them.

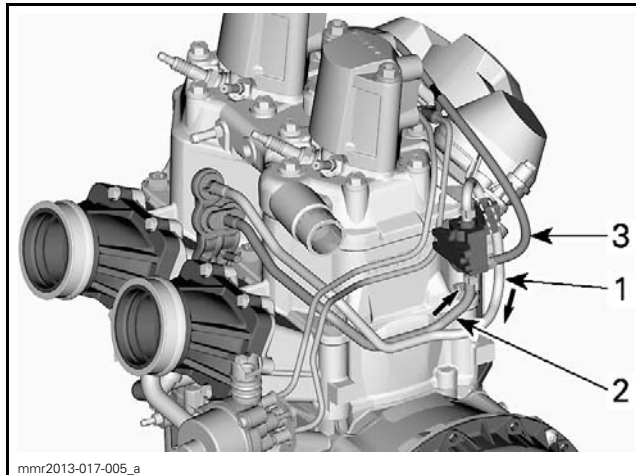


- mmr2013-017-005_a
1. Vacuum hose
 2. Pressure hose
 3. Hose towards RAVE valves


An arrangement of check valves within the check valve manifold allows to separate the crankcase vacuum pulses from the pressure pulses.

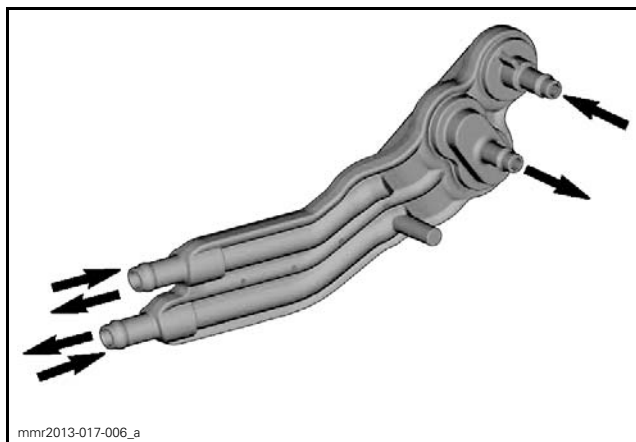

mmr2013-017-006_a
CHECK VALVE MANIFOLD

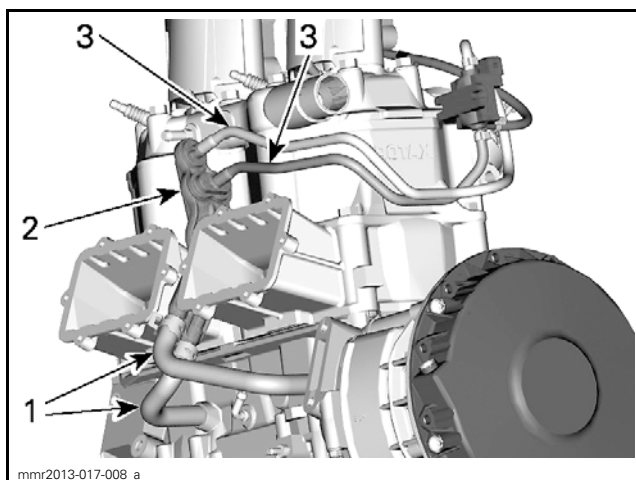

- mmr2013-017-008_a
1. Crankcase hoses
 2. Check valve manifold
 3. Hoses to solenoid

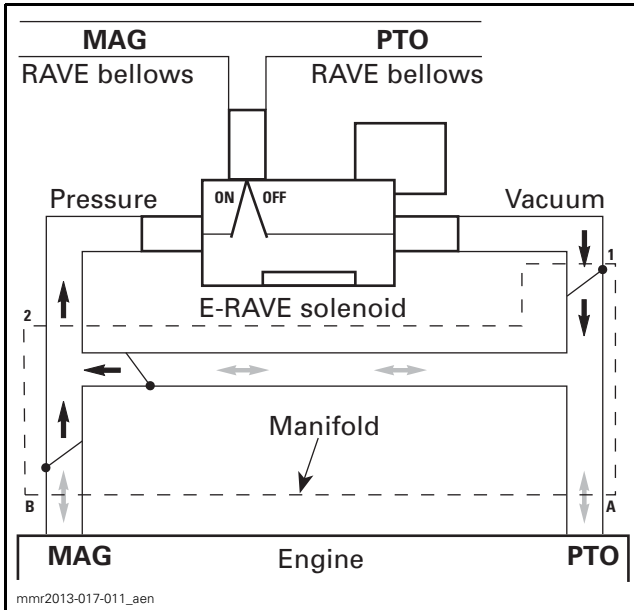


SOLENOID VACUUM/PRESSURE SEPARATION

The ECM controls the solenoid as follows.

RAVE VALVES POSITION	SOLENOID STATE	SOLENOID VALVE OPERATION
FULLY OPENED	ON	Pressure
MIDDLE	Switched between ON and OFF repeatedly by the ECM (pulse width modulation with a variable DC) (duty cycle from 10 to near 50%).	Near atmospheric pressure (floating position). A constant switching between pressure and vacuum to keep the RAVE in the mid position as set in the ECM.
CLOSED	OFF	Vacuum

A hall-effect position sensor (RPS: RAVE position sensor) is used to provide RAVE valve position feedback to the ECM.

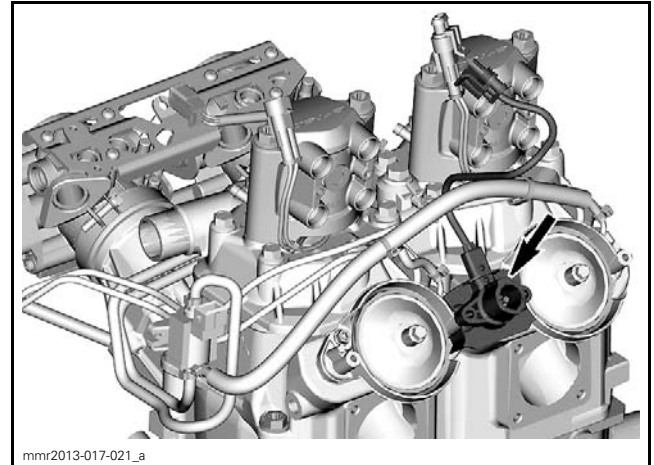


PARTS REMOVED FOR CLARITY

The RAVE position sensor (RPS) provides the ECM its actual position. Either closed, mid-position or open. This informs the ECM that the RAVE valves are really at the expected position so that the proper amount of fuel is injected as well as other required operating parameters are applied.

RAVE valves are lubricated by the electronic oil injection pump.

RAVE valves movement is synchronized and monitored with a link bar.

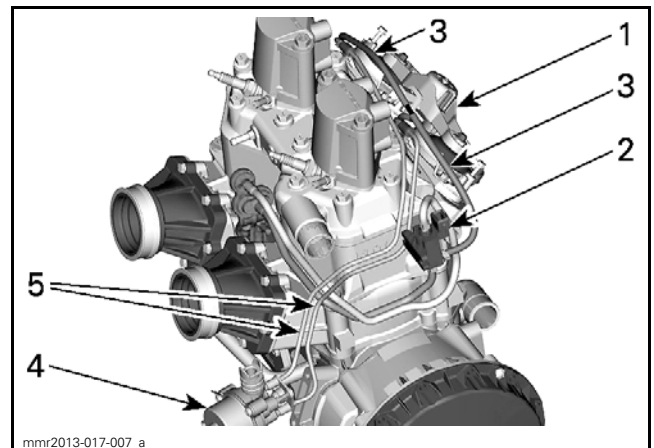


LINK BAR COVER REMOVED

1. Linked RAVE valves
2. RAVE solenoid
3. Inlet hoses (vacuum and pressure to RAVE valves)
4. Electronic oil injection pump
5. Oil lines to RAVE valves



The link bar is used to keep RAVE valves opening and closing synchronized one with each other. This provides a more consistent engine operation.



Subsection XX (RAVE)

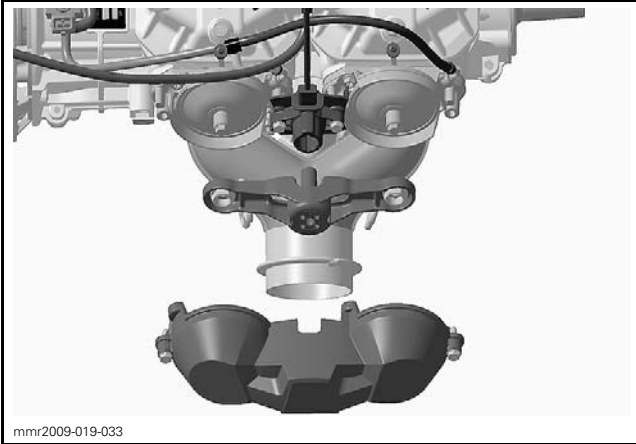

If link bar is removed, a particular adjustment is required at the assembly. Also, B.U.D.S. needs to be used to set the RAVE positions.

3D RAVE Position According to Engine Operation

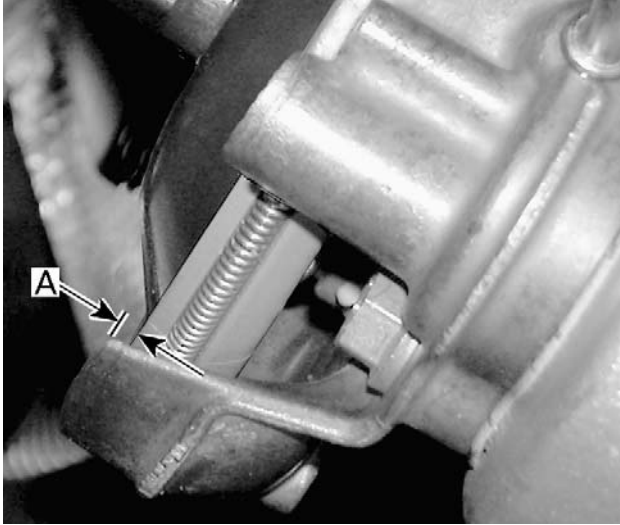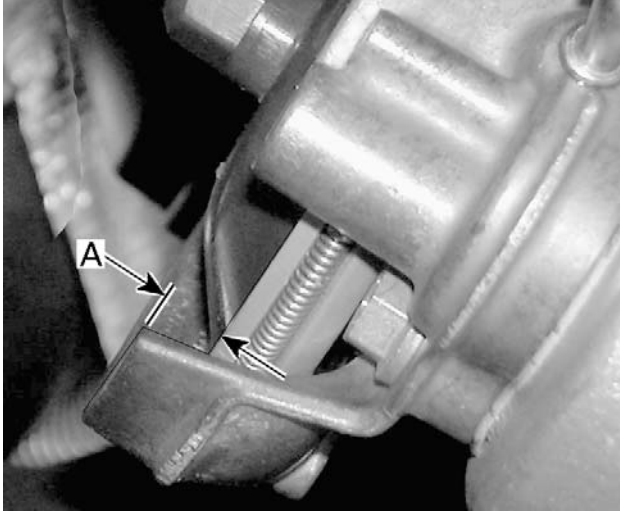ENGINE OPERATION	RAVE VALVE POSITION MEASURED FROM TOP OF GREEN BELLOW TO EDGE OF RAVE HOUSING	
Engine stopped	Partially open	 <p>mbs2007-015-002_a</p> <p>A: Approximately 1 mm (1/32 in) down</p>
Idle to approximately 6200 RPM	Fully closed	 <p>mbs2007-015-001_a</p> <p>A: Approximately 6 mm (1/4 in) down</p>

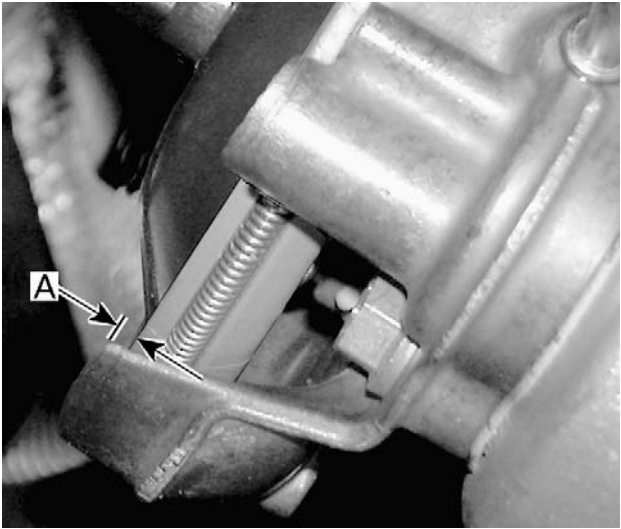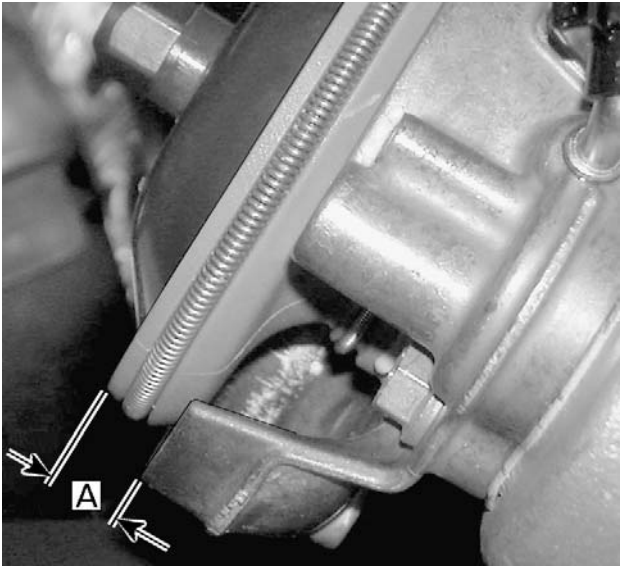ENGINE OPERATION	RAVE VALVE POSITION MEASURED FROM TOP OF GREEN BELLOW TO EDGE OF RAVE HOUSING	
<p>Approximately 6200 to 7900 RPM (typical trail riding)</p>	<p>Partially opened</p>	<p>NOTE: Same as engine stopped position.</p>  <p>mbs2007-015-002_a A: Approximately 1 mm (1/32 in) down</p>
<p>Approximately 7900 RPM to top RPM</p>	<p>Fully opened</p>	 <p>mbs2007-015-003_a A: Approximately 8 mm (5/16 in) up</p>

TROUBLESHOOTING

DIAGNOSTIC TIPS

As a first troubleshooting step, perform the following procedures to ensure RAVE system is properly adjusted.

1. *3D RAVE VALVE SYNCHRONIZATION*
2. *3D RAVE VALVES POSITION SENSOR SETTING*
3. *3D RAVE VALVES POSITION VALIDATION.*

TROUBLESHOOTING GUIDELINES

RAVE Valves Position Sensor Fault Code

The ECM may generate a **position sensor fault code** if the RAVE valve is not reaching the desired position.

If a position sensor fault code is generated by the ECM, check for the following:

Subsection XX (RAVE)

Defective Position Sensor

- Test position sensor operation.
- Check position sensor wiring.

Excessive Carbon Build-up in RAVE Valves

- Use the recommended oil quality, refer to *LUBRICATION*.
- Check for damaged, kinked or obstructed inlet hoses (vacuum and pressure).
- Check for proper oil injection pump code in B.U.D.S., refer to *LUBRICATION*.

NOTE: Insufficient oil delivery to RAVE valves may result in a carbon build-up.

RAVE System Leaking

- Perform a *3D RAVE VALVE LEAK TEST*.
- Check for damaged or loose Oetiker clamp.
- Check for damaged hose or fitting.
- Check for a faulty check valve, refer to *CHECK VALVES*.
- Check for a faulty solenoid, refer to *SOLENOID*.

PROCEDURES

3D RAVE VALVES POSITION SENSOR


3D RAVE Valves Position Sensor Setting

1. Ensure RAVE valve are properly synchronized as per *3D RAVE VALVE SYNCHRONIZATION* procedure.
2. Remove upper body module. Refer to *BODY*.
3. Disconnect inlet hoses (vacuum/pressure) at the T-fitting.



INLET HOSE AT T-FITTING

4. Connect pressure pump onto T-fitting.

REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	



5. Connect vehicle to B.U.D.S., Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
6. In B.U.D.S.:
 - 6.1 Select **Setting** tab.
 - 6.2 Select **ECM** tab.
7. Apply -34 kPa (10 in Hg) of vacuum.
 - 7.1 Press **Set Close** button in **Rave Setting** area.
 - 7.2 Confirm that **Actual (V)** is within B.U.D.S. specification.



TYPICAL

8. Apply 69 kPa (10 PSI) of pressure.
 - 8.1 Press **Set Open** button in **Rave Setting** area.
 - 8.2 Confirm that **Actual (V)** is within B.U.D.S. specification.



TYPICAL

9. Disconnect vacuum/pressure pump from T-fitting.
 - 9.1 Press **Set Mid** button in **Rave Setting** area.
 - 9.2 Confirm that **Actual (V)** is within B.U.D.S. specification.




TYPICAL

10. Validate that position sensor is properly set. Refer to *3D RAVE VALVES POSITION VALIDATION* in this subsection.

3D Rave Valves Position Sensor Removal

1. Remove upper body module. Refer to *BODY*.
2. Disconnect position sensor connector.
3. Remove RAVE valves cover and link bar, see *3D RAVE VALVES REMOVAL* in this subsection.
4. Remove RAVE valves position sensor.

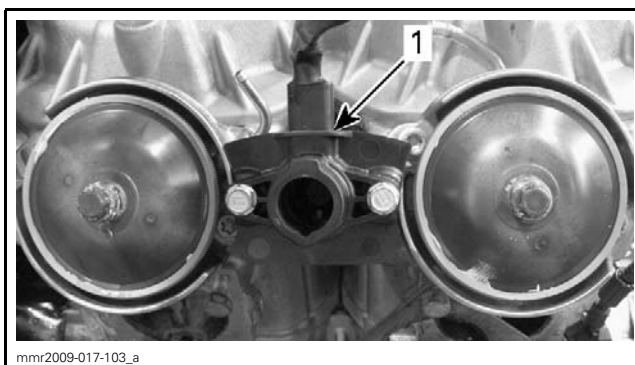

1. Position sensor

NOTICE It is very important to perform *3D RAVE VALVES SYNCHRONIZATION* whenever link bar is removed.

3D Rave Valves Position Sensor Installation

1. Install position sensor with wiring upwards.

POSITION SENSOR RETAINING SCREWS	
Service Product	LOCTITE 243 (BLUE) (P/N 293 800 060)
Tightening Torque	5.5 N•m (49 lbf•in)

2. Install connector.
3. Position link bar on RAVE valve pistons.
4. Install nuts on piston threads but do not tighten yet.
5. Perform *3D RAVE VALVE SYNCHRONIZATION* procedure in this subsection to complete link bar installation.


NOTICE It is very important to perform *3D RAVE VALVES SYNCHRONIZATION* whenever link bar is removed.

3D RAVE VALVES

3D RAVE Valve Synchronization

Synchronization Adjustment Procedure


1. Disconnect inlet hose (vacuum/pressure) at the T-fitting.

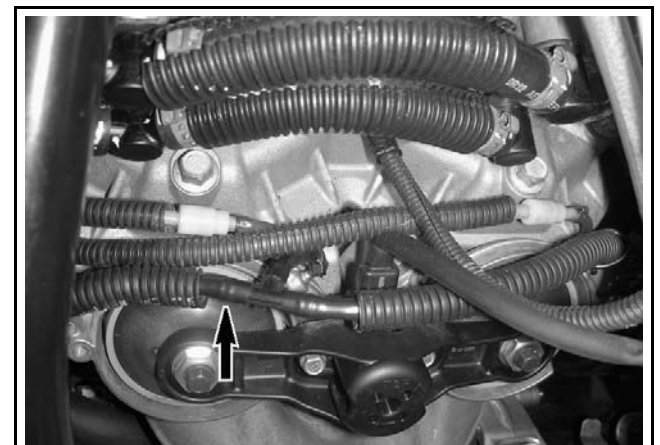


INLET HOSE AT T-FITTING

2. Ensure that retaining nuts are loosened.
3. Move link bar toward MAG side.
4. Tighten PTO nut by hand.


Subsection XX (RAVE)

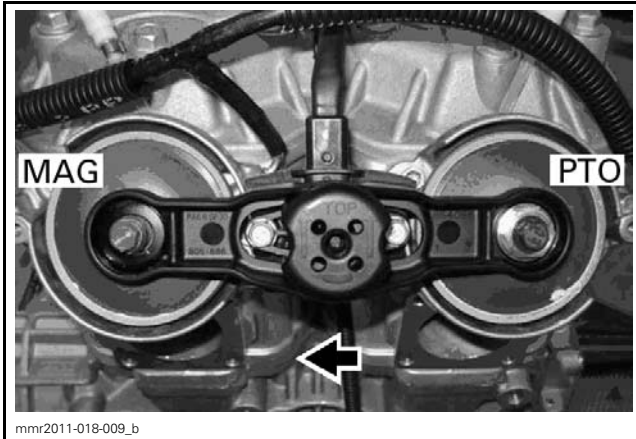

5. Check if a gap is visible between MAG valve piston and link bar.

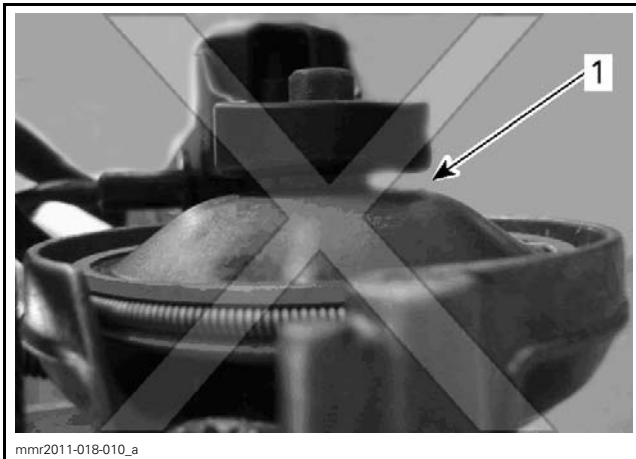

WRONG ADJUSTMENT
1. Gap on MAG side

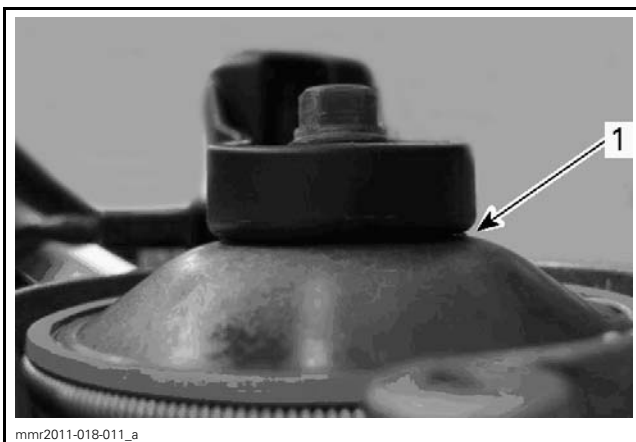

CORRECT ADJUSTMENT
1. No gap on MAG side

6. If a gap is visible:
 - 6.1 Unscrew PTO nut then slightly move link bar toward PTO side.
 - 6.2 Tighten PTO nut by hand and recheck gap.

- 6.3 Repeat above sequence until no gap is visible.
7. Push the center of link bar downwards in order to seat both RAVE valves on their fully closed position.
8. Firmly hold link bar downwards.
9. Tighten both retaining nuts while holding RAVE valve pistons with a wrench.



NOTICE To prevent RAVE valve piston breakage, proceed with care and make sure piston does not turn to avoid inducing torsional force to piston rods.

10. Adjust position sensor using B.U.D.S. Refer to *3D RAVE VALVES POSITION SENSOR SETTING*.

Synchronization Validation Procedure

1. Push and pull link bar to force RAVE valves to pass through their 3 positions.
 - 1.1 Ensure that only **one** step is felt at mid position.
 - 1.2 If out of specification, repeat the *ADJUSTMENT PROCEDURE*.
2. With B.U.D.S., check position sensor voltage as follows:
 - 2.1 Difference from fully opened to mid position.
 - 2.2 Difference from closed to mid position.
 - 2.3 Confirm that voltage is within **0.15 volts**.
 - 2.4 If out of specification, repeat the *ADJUSTMENT PROCEDURE*.

3. Start engine and check RAVE valves operation.
 - Pistons should move freely.
 - If not, look for excessive friction due to torsional force applied on the piston rods during installation.

⚠ WARNING
 Prior to starting engine, ensure vehicle is properly lifted with the track off the ground.

3D RAVE Valves Position Validation

1. Ensure RAVE valves are properly synchronized as per *3D RAVE VALVE SYNCHRONIZATION*.
2. Ensure position sensor is properly set as per *3D RAVE VALVES POSITION SENSOR SETTING*.
3. Remove upper body module. Refer to *BODY*.
4. Disconnect inlet hoses (vacuum/pressure) at the T-fitting.



INLET HOSE AT T-FITTING

5. Connect pressure pump onto T-fitting.

REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	



6. Connect vehicle to B.U.D.S., Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
7. In B.U.D.S.:
 - 7.1 Select **Monitoring** tab.
 - 7.2 Select **ECM** tab.
8. Apply -34 kPa (10 in Hg) of vacuum.
 - 8.1 Check **Rave Actual Position** value.
 - 8.2 Confirm that actual position is within specification.

RAVE ACTUAL POSITION SPECIFICATION	
Closed	Below 2%



TYPICAL

9. Apply 69 kPa (10 PSI) of pressure.
 - 9.1 Check **Rave Actual Position** value.
 - 9.2 Confirm that actual position is within specification.

RAVE ACTUAL POSITION SPECIFICATION	
Fully opened	Above 98%


Subsection XX (RAVE)



TYPICAL

10. Disconnect vacuum/pressure pump from T-fitting.
11. Manually locate RAVE valves at the middle position to overcome friction.
 - 11.1 Check **Rave Actual Position** value.
 - 11.2 Confirm that actual position is within specification.

RAVE ACTUAL POSITION SPECIFICATION		
600 HO E-TEC	Middle	48 ± 2 %
800R E-TEC	Middle	40 ± 2 %

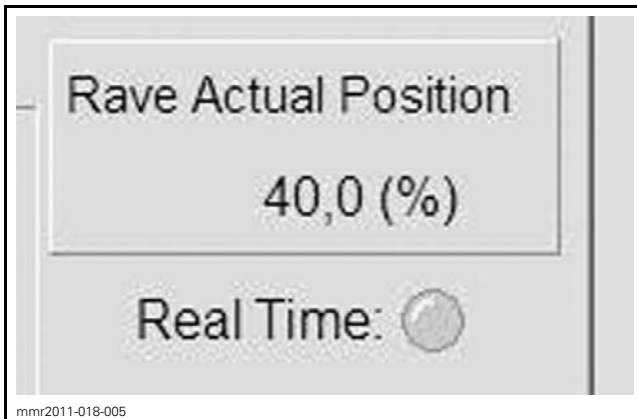


TYPICAL - 800R E-TEC

If RAVE valves actual position are out of specification, check the following:


- RAVE valves cleanliness
- RAVE valves for leaks. Refer to *3D RAVE VALVE LEAK TEST* in this subsection.

3D RAVE Valve Leak Test

NOTE: Test each RAVE individually.


REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	

1. Refer to *3D RAVE VALVES REMOVAL* in this subsection and remove.
 - Valves cover
 - Link bar
2. Disconnect RAVE inlet hose (vacuum/pressure).
3. Install test pump on nipple and apply pressure.
4. Check if piston fully rises.

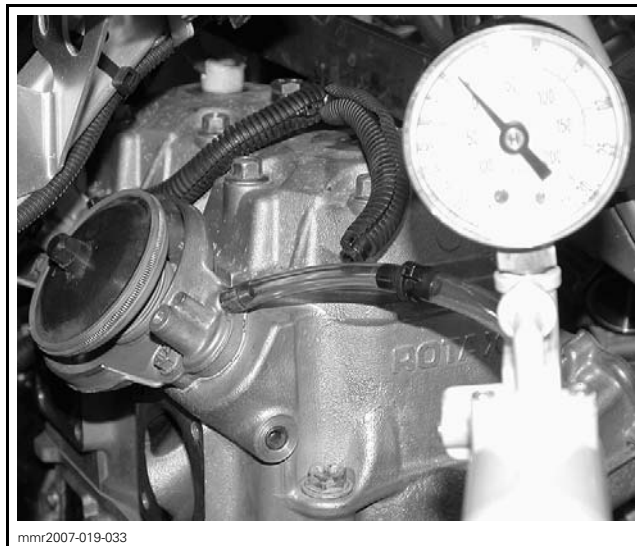

TYPICAL

5. Apply vacuum.
6. Check if piston fully lowers.

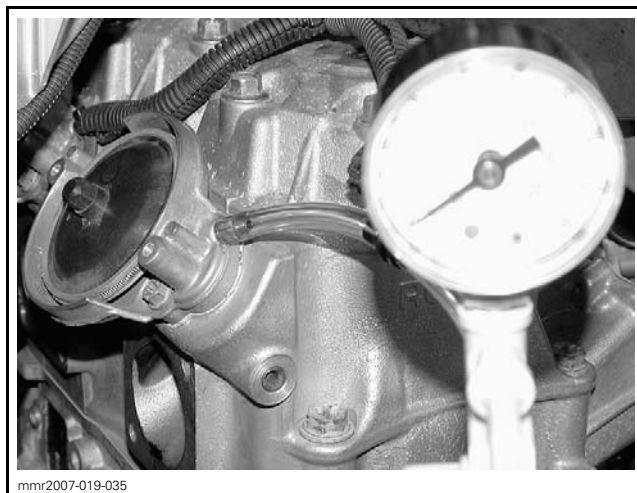

TYPICAL

7. If a leak is detected, check the following:

- Cracked or damaged bellows
- Damaged seal inside RAVE valve.


8. Install RAVE valve link bar and cover.

NOTICE To prevent RAVE valve piston breakage, proceed with care and make sure piston does not turn.

NOTICE It is very important to perform *3D RAVE VALVES SYNCHRONIZATION* whenever link bar is removed. See procedure in this subsection.

3D RAVE Valves Removal

1. Remove upper body module. Refer to *BODY*.
2. Remove RAVE valves cover.
3. Remove RAVE valves link bar as follows.
 - 3.1 Hold RAVE valve pistons with a wrench then remove the retaining nuts.

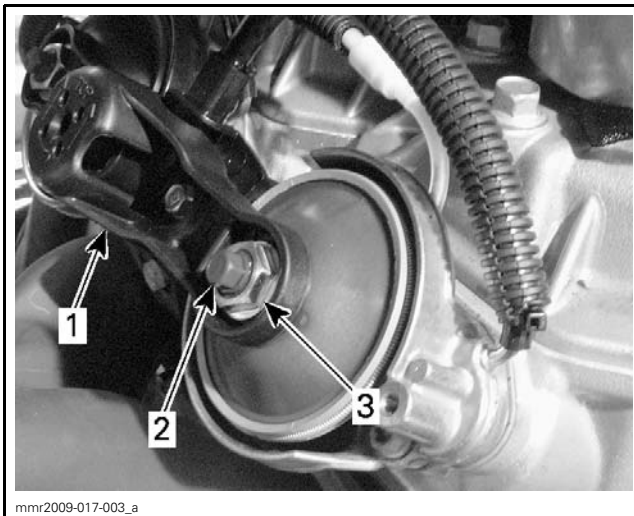


1. Link bar
2. RAVE valve piston
3. Retaining nut



mnr2011-018-008

NOTICE To prevent RAVE valve piston breakage, proceed with care and make sure piston does not turn.

4. Remove RAVE valves position sensor.

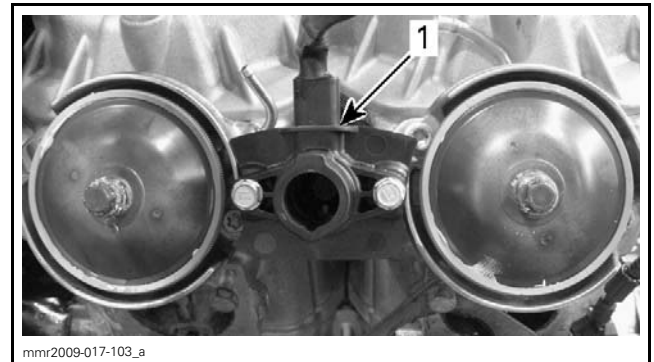

1. Position sensor

5. Disconnect RAVE valve oil lines and inlet hoses (vacuum/pressure).
6. Remove screws retaining RAVE valve housing no. 5 to the cylinder.
7. Pull RAVE valve assembly out.



mnr2007-019-015

NOTE: Be careful not to loose springs underneath housing.

3D RAVE Valve Disassembly


1. Carefully remove spring no. 3 retaining bellow no. 2 to RAVE valve piston no. 1.



TYPICAL

2. Free bellow from RAVE valve piston.
3. Carefully unscrew RAVE valve piston then remove compression spring.

⚠ CAUTION Firmly hold RAVE valve piston. The compression spring inside the valve applies pressure against the piston.

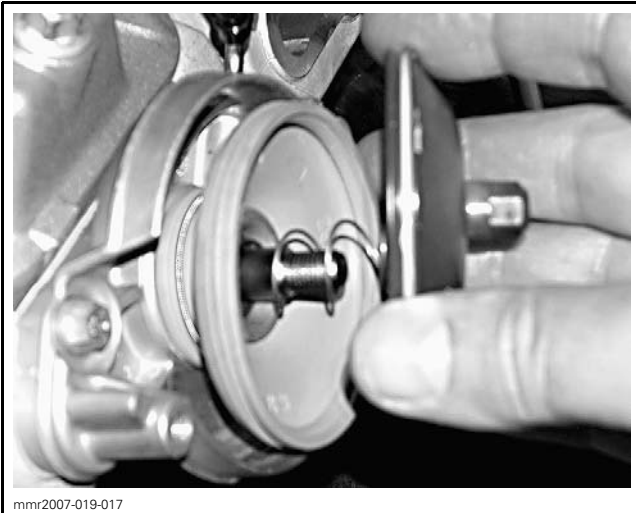

TYPICAL

4. Carefully remove bellow no. 2 from RAVE valve housing no. 5.

NOTE: If oil is found in housing area, replace seals.

5. Extract RAVE valve from housing.
6. Take note of seals orientation and carefully pry them out.



TYPICAL

3D RAVE Valve Cleaning

Thoroughly clean all RAVE VALVES components and cylinder slots.

No special solvents or cleaners are required when cleaning the valve.

RAVE Valves Frequently Gummed


If the valves are getting gummed more frequently than usual, do the following:

- Check if XPS SYNTHETIC BLEND 2-STROKE OIL (P/N 293 600 100) is used.
- Check lubrication hoses for restriction.
- Check lubrication hoses for presence of air. Bleed system if needed.
- Check lubrication hose check valves as explained in this section.

3D RAVE Valve Inspection

Check valves no. 6 for breakage.

Check valves for wear at sliding points and straightness.

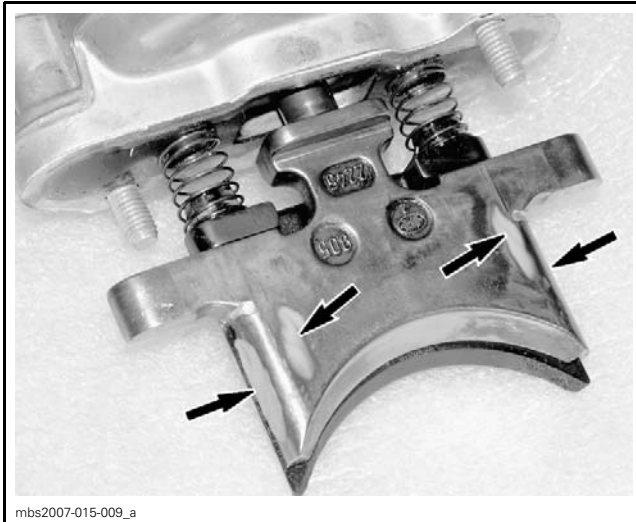

mbs2007-015-009_a

SIGNS OF WEAR

Check spring condition and straightness.


NOTE: Oil dripping from draining hole indicates a defective seal and a loosen retaining spring or damaged bellows.

Check for cracked, dried or perforated bellows no. 2.

NOTE: Make sure hoses are not leaking, kinked or damaged.

3D RAVE Valve Assembly

Position parts as per illustrations.

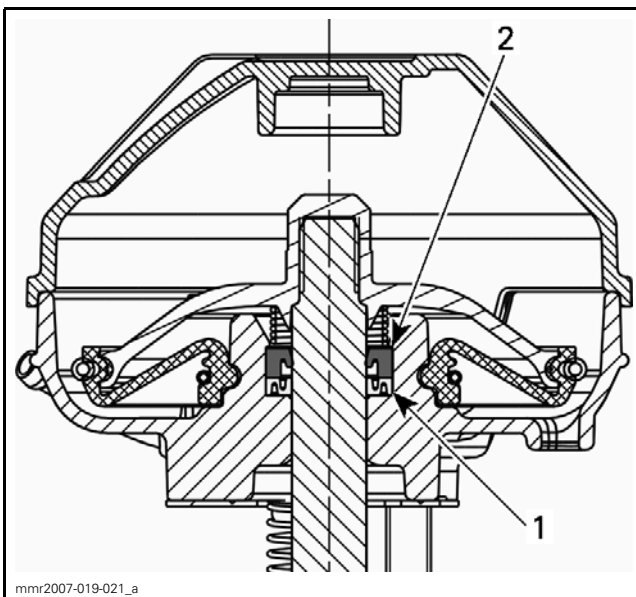

mmr2007-019-021_a

- 1. Oil seal
- 2. Gasket ring


Use an appropriate pusher to reinstall seals.



mmr2007-019-022


TYPICAL

1. Assemble together the main and side valves.

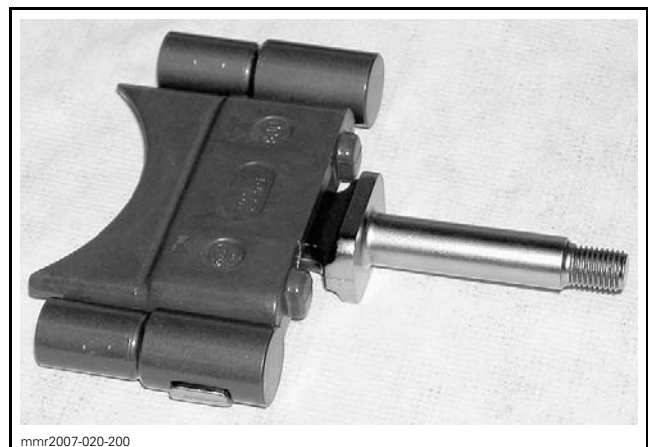

mmr2007-020-200

2. Insert valves together in cylinder. Install gasket.

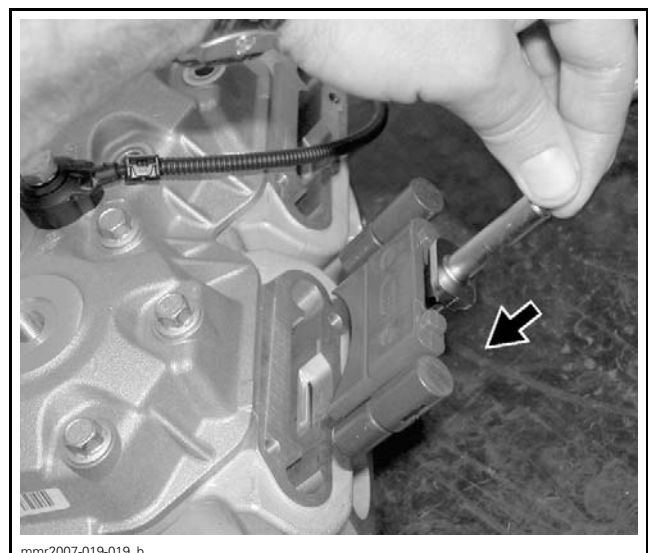


mmr2007-019-019_b

TYPICAL

3. Align springs on stud ends of valves.

Subsection XX (RAVE)

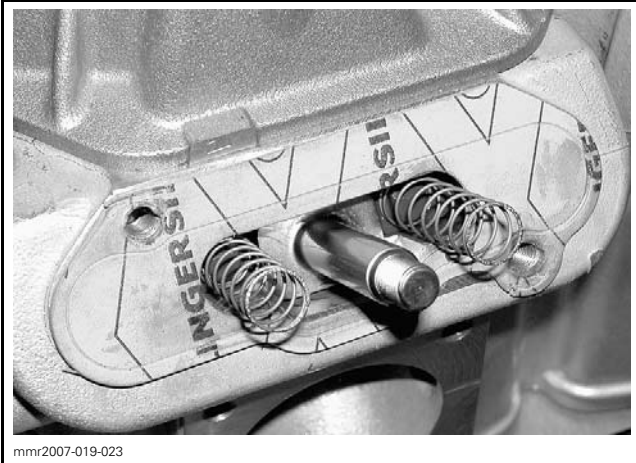


4. Apply MOLYKOTE G-N (P/N 420 297 433) to valve shaft and on seals in housing.
5. Install housing and carefully align springs on stud ends of housing.



TYPICAL

6. Install lower spring **no. 4** on bellow.
7. Apply DREI BOND SEALING COMPOUND (P/N 420 297 906) on bellow lower rib, then install bellow and spring.

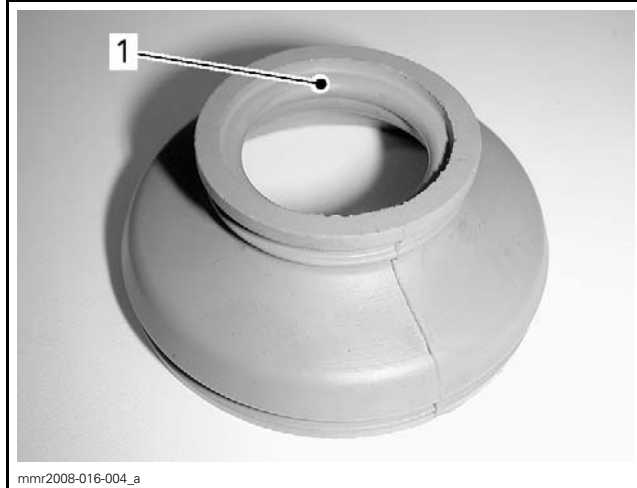


1. Apply *Drei Bond* here

8. Install compression spring then tighten valve piston.

VALVE PISTON	
Tightening Torque	3 N•m (27 lbf•in)


9. Apply DREI BOND SEALING COMPOUND (P/N 420 297 906) on valve piston groove.

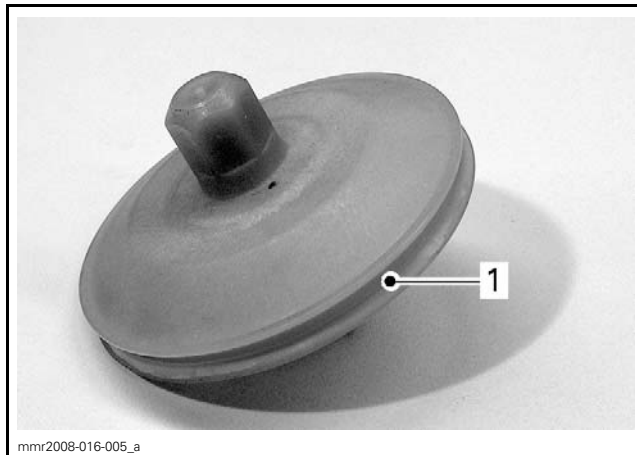


1. Apply *Drei Bond* here

10. Position bellow on valve piston then secure top retaining spring **no. 3** as follows.

- 10.1 Attach a locking tie to spring.

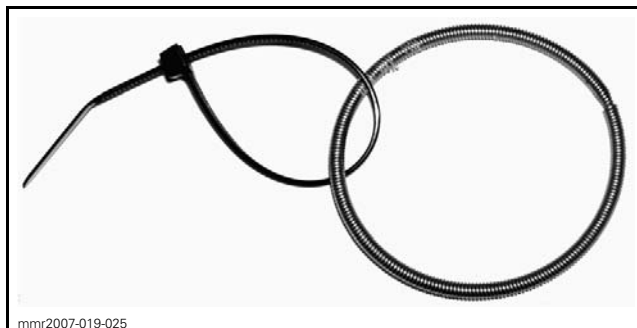


10.2 Block valve piston in the open position with a suitable socket.

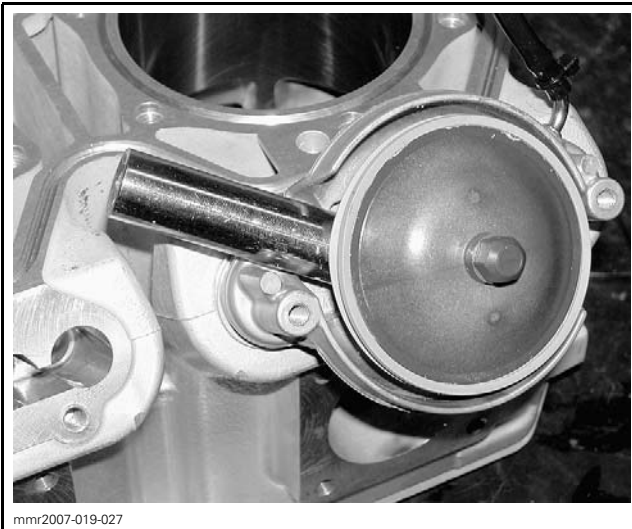

10.3 Position joint of spring under your thumb.

10.4 Hold spring with your thumb while sliding spring on the other side using the locking tie.

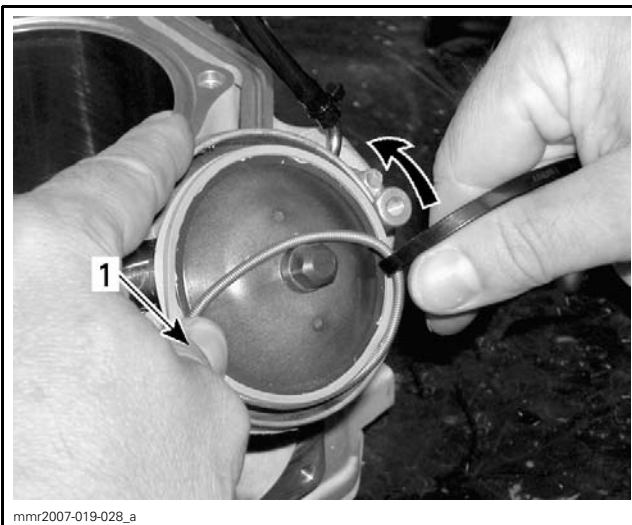

1. Joint of spring under thumb

10.5 Continue sliding locking tie all around the edge of valve piston.



NOTE: Take care there is no strain in the bellow that could apply some bending force or torsion to the 3D RAVE valve. That may contribute to a RAVE valve jam.

11. Push and pull valve piston to make sure it moves freely.




12. When installing valve assembly in its housing, center valve horizontally and longitudinally then hand tighten screws.



CHECK VALVE MANIFOLD (ACTUATOR CIRCUIT)

Check Valve Manifold Location (Actuator Circuit)

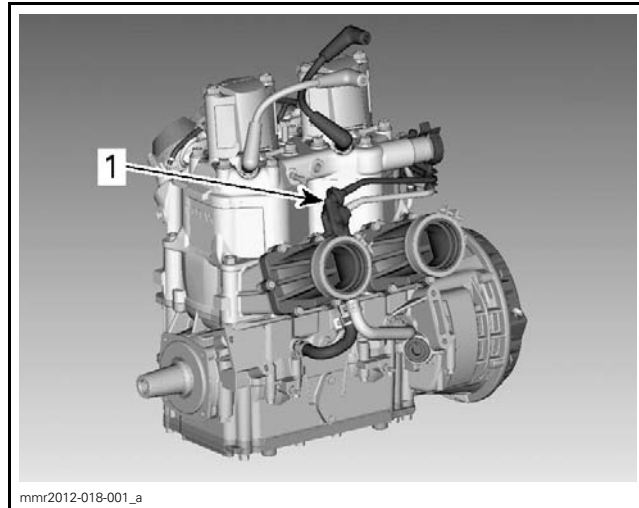

TYPICAL - 800R E-TEC
1. Check valve manifold

13. Tighten screws and check valve for free movement again. If some friction is felt, slightly loosen screws and readjust housing then retighten screws.
14. Repeat the process until a free movement is obtained.
15. Install position sensor.
16. Position link bar on valve pistons.
17. Apply LOCTITE 243 (BLUE) (P/N 293 800 060) on valve piston threads.
18. Install retaining nuts but do not tighten yet.
19. Install lubrication and inlet hoses (vacuum/pressure).
20. Perform *3D RAVE VALVE SYNCHRONIZATION*. See procedure in this subsection.

NOTICE It is very important to perform *3D RAVE VALVES SYNCHRONIZATION* whenever link bar is removed.

21. Bleed oil lines. Refer to *OIL INJECTION PUMP* in the *LUBRICATION SYSTEM* subsection.

Check Valve Manifold Leak Test (Actuator Circuit)

1. Test check valve according to tables and illustration.


REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	
SMALL HOSE PINCHER (P/N 295 000 076)	




Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

CHECK VALVE MANIFOLD LEAK TEST					
Test no	INLET/OUTLET IDENTIFICATION				RESULT
	A	B	1	2	
1	Apply 34 kPa (5 PSI)	Pinch hose	Pinch hose	Pinch hose	Check valve must stand pressure
2	Pinch hose	Apply 34 kPa (5 PSI)	Pinch hose	Pinch hose	Check valve must stand pressure
3	Pinch hose	Apply 34 kPa (5 PSI)	Disconnect hose	Pinch hose	Check valve must stand pressure
4	Disconnect hose	Disconnect hose	Disconnect hose	Apply 34 kPa (5 PSI)	Check valve must stand pressure

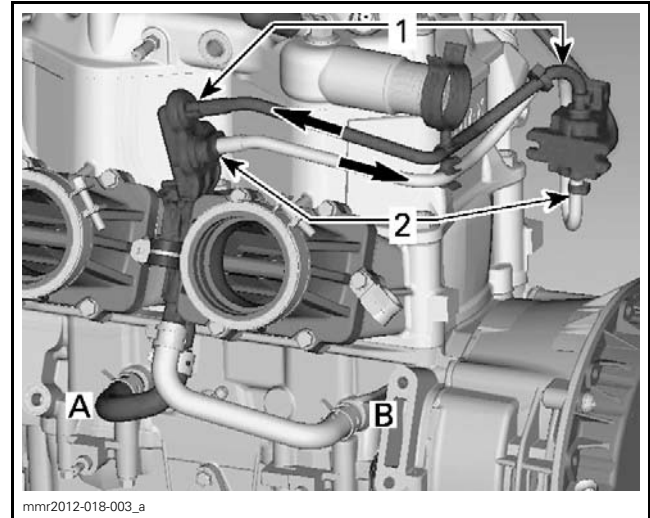

CHECK VALVE MANIFOLD
 1. To RAVE solenoid port 1 (Vacuum)
 2. To RAVE solenoid port 2 (Pressure)
 A. To crankcase (PTO)
 B. To crankcase (MAG)

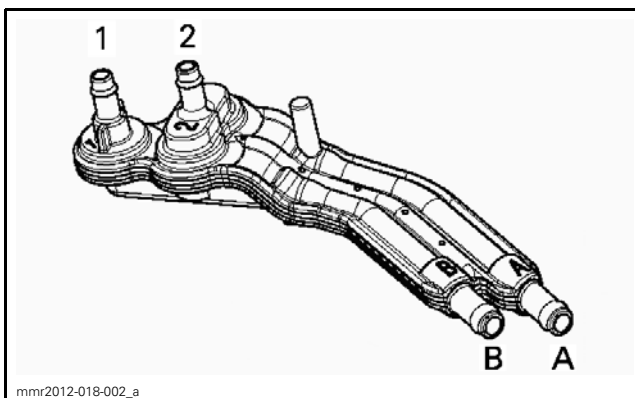

CHECK VALVE MANIFOLD
 1. To RAVE solenoid port 1 (Vacuum)
 2. To RAVE solenoid port 2 (Pressure)
 A. To crankcase (PTO)
 B. To crankcase (MAG)

2. Replace check valve manifold if any test failed.

Check Valve Manifold Installation (Actuator Circuit)

Install hoses to check valve manifold as per following illustration.

CHECK VALVES (LUBRICATION CIRCUIT)

Check Valve Test (Lubrication Circuit)

1. Disconnect check valve.
2. Pressurize check valve to specification.

REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	
CHECK VALVE LEAK TEST (LUBRICATION CIRCUIT)	
10 kPa (1.5 PSI)	Valve must stand pressure

Subsection XX (RAVE)




TYPICAL

3. Install test pump on the opposite side.
 4. Check that air starts to flow between 14 kPa and 24 kPa (2 PSI and 3 PSI).
- Replace valve if any test failed.

SOLENOID

Solenoid Location

The solenoid is located on the RH side of the vehicle.

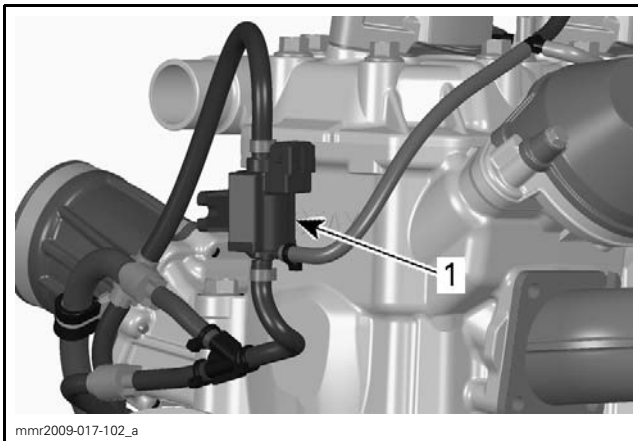


TYPICAL - 600 HO E-TEC SHOWN
1. RAVE solenoid

Solenoid Test with B.U.D.S.

Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection for proper connection to vehicle.

Using B.U.D.S. software (E-TEC version), energize RAVE solenoid from **Activation** tab.

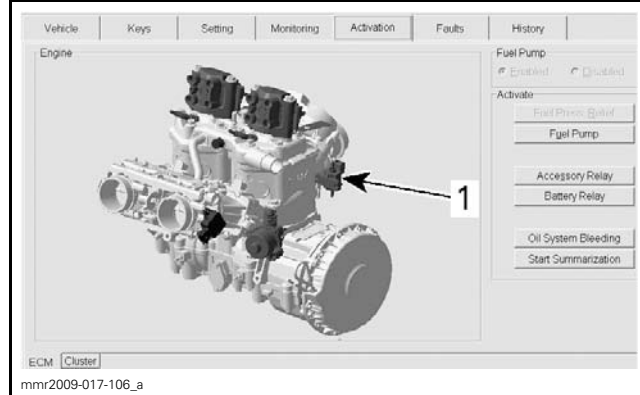


1. Activate here


This will validate the RAVE solenoid mechanical and electrical operation.

If the solenoid does not work or works only when T-HARNESS (P/N 529 035 869) is connected, proceed with *SOLENOID INPUT VOLTAGE TEST* in this subsection.

Solenoid Leak Test

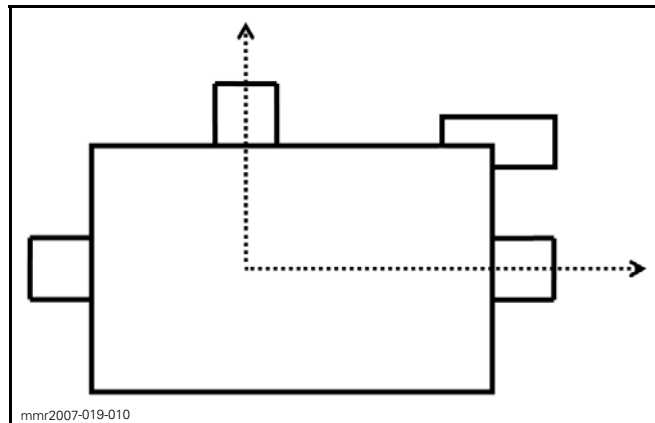

SOLENOID OPERATION (OFF)

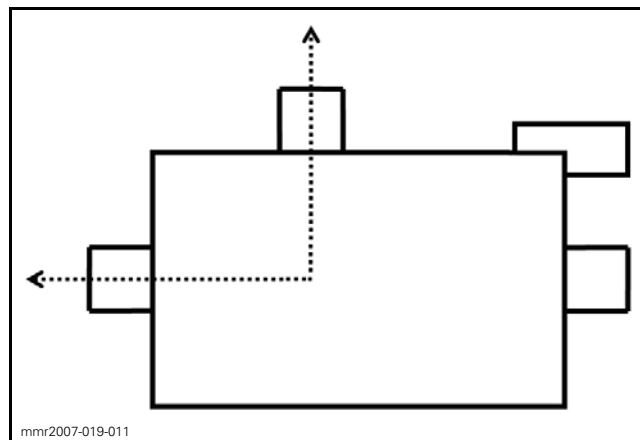


SOLENOID OPERATION (ON)

NOTE: B.U.D.S. may be used to activate solenoid when performing the following tests but the activation lasts less than one second.


Supply Hose

1. Disconnect supply hose from solenoid.
2. Install pressure pump on solenoid nipple.

REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	


3. Supply 12 Vdc to solenoid terminals. Ensure to respect polarity.
4. Pressurize solenoid to specification.

SOLENOID LEAK TEST (SUPPLY)	
69 kPa - 103 kPa (10 PSI - 15 PSI)	Solenoid must stand pressure

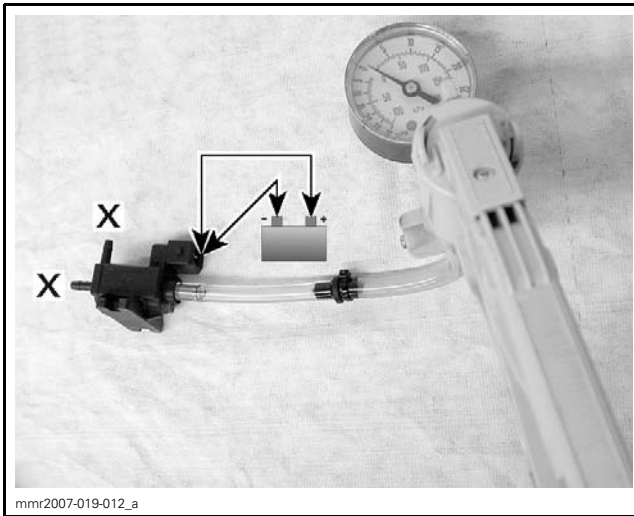

SUPPLY HOSE TESTING

5. Disconnect 12 Vdc supply from solenoid.
6. Check that solenoid evacuates pressure.

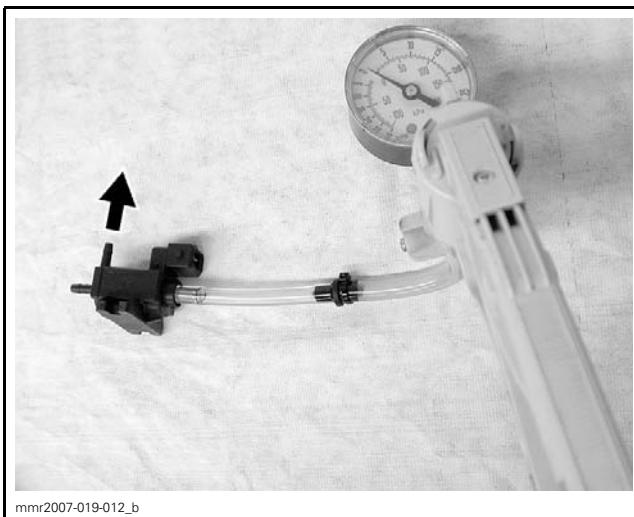


SUPPLY HOSE TESTING


If any test failed, replace solenoid.

Outlet Hose

1. Disconnect outlet hose from solenoid.
2. Pressurize solenoid to specification.


REQUIRED TOOL	
VACUUM/PRESSURE PUMP (P/N 529 021 800)	

SOLENOID LEAK TEST (OUTLET)	
69 kPa - 103 kPa (10 PSI - 15 PSI)	Solenoid must stand pressure

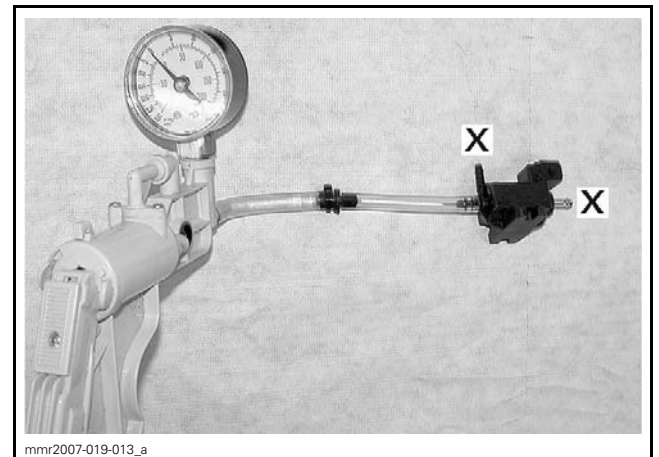

OUTLET HOSE TESTING

3. Supply 12 Vdc to solenoid terminals. Ensure to respect polarity.
4. Check that solenoid evacuates pressure.


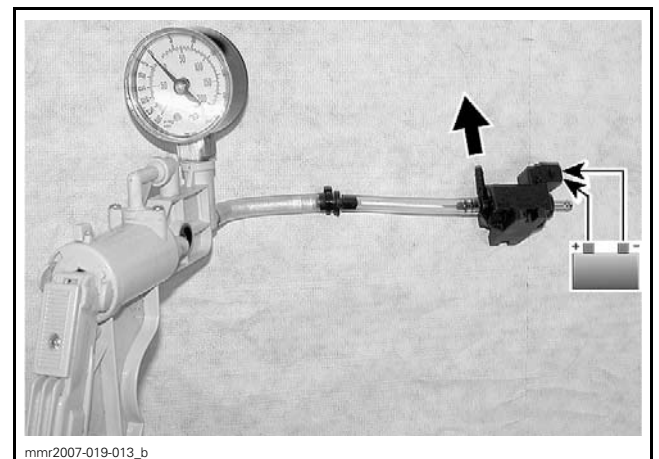


OUTLET HOSE TESTING

If any test failed, replace solenoid.

Solenoid Input Voltage Test


1. Remove upper body module. Refer to *BODY* subsection.
2. Disconnect the connector from the solenoid.

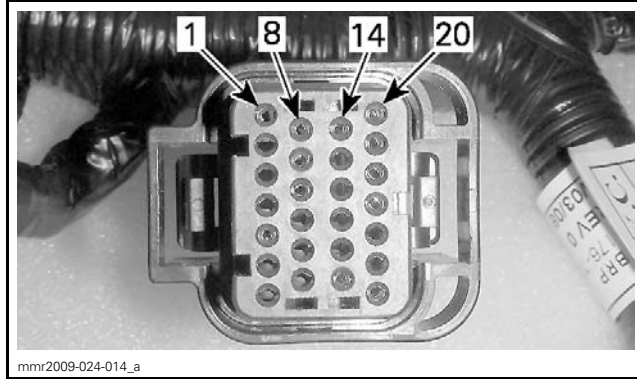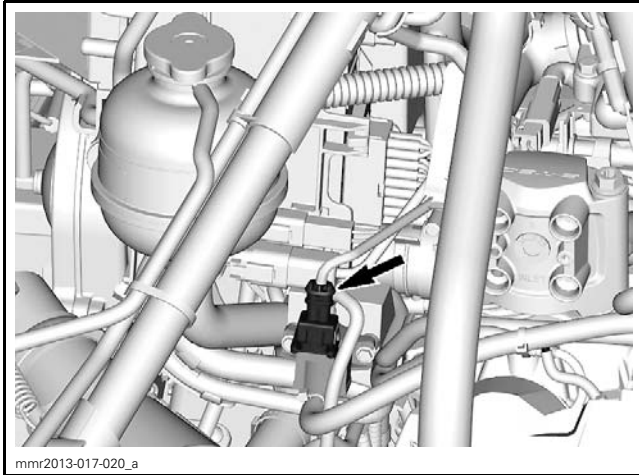

ECM J1B CONNECTOR PIN OUT

If the solenoid circuit test failed, repair/replace wiring/connector.

Solenoid Replacement

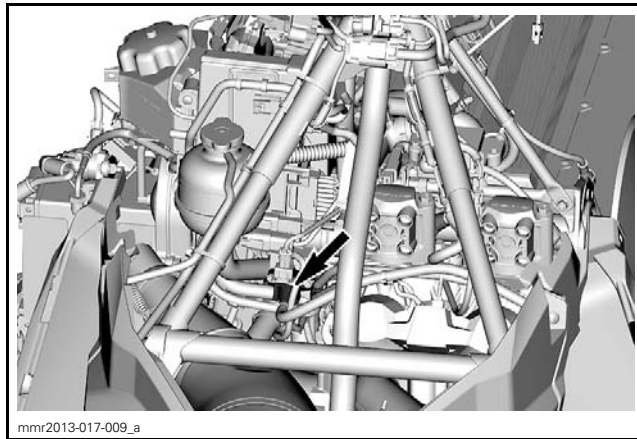

3. Install a suitable jumper wire on pin 2 (harness side) taking care not to damage terminal.
4. Start engine and measure voltage on jumper wire as follows.

TEST PROBE		MEASUREMENT
Pin 2 (extended with jumper wire)	Engine ground	Battery voltage

If reading is not as per specification repair/replace wiring/connector.

If solenoid does not work but the voltage supply is good, perform *SOLENOID CIRCUIT TEST*.

Solenoid Circuit Test

1. Disconnect ECM connector.
2. Measure wiring resistance between solenoid connector and ECM connector as follows.

SOLENOID CONNECTOR PIN	ECM CONNECTOR PIN	RESISTANCE
1	Connector J1B pin 22	Close to 0 Ω

1. Remove upper body module. Refer to *BODY* subsection.

NOTE: Mark hose locations of RAVE solenoid for reinstallation.

2. Disconnect solenoid.
3. Remove solenoid screws.
4. Cut the small Oetiker clamps securing the hoses to the solenoid.

For installation, reverse the removal procedure.

TOP END (600 HO E-TEC)


SERVICE TOOLS

Description	Part Number	Page
PISTON CIRCLIP INSTALLER.....	529 035 686	8
RUBBER PAD PROTECTOR.....	529 023 400	6

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE CHISEL (GASKET REMOVER)	413 708 500	5

Subsection XX (TOP END (600 HO E-TEC))

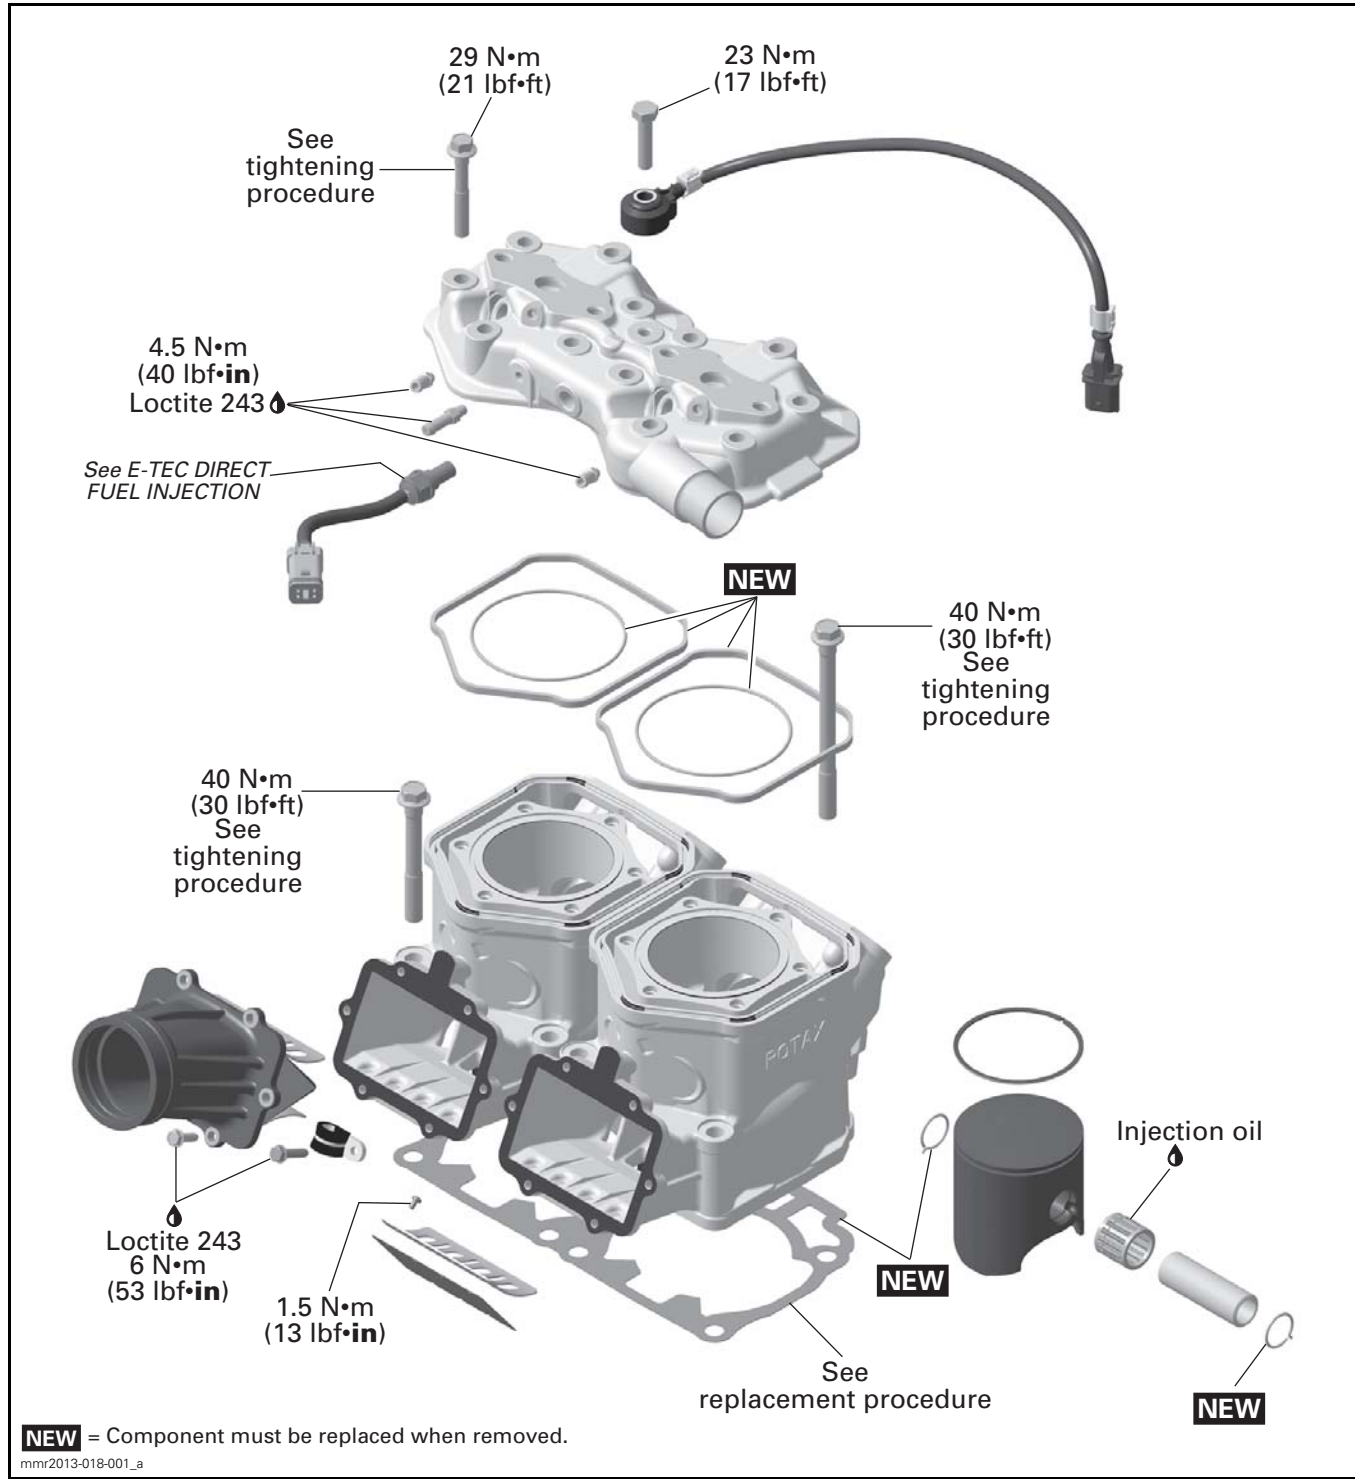

GENERAL

Before completely disassembling the engine, check airtightness. Refer to *ENGINE LEAK TEST* subsection.

To measure internal parts, refer to *ENGINE MEASUREMENT* subsection.

During assembly or installation:

- Use torque values and service products as shown in the exploded view.
- Clean threads before applying a threadlocker. Refer to the *INTRODUCTION* subsection.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.) must be replaced with new ones.

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

⚠ WARNING

Always disconnect the magneto connector prior to:


- Disconnecting any fuel hose.
- Removing a fuel injector.
- Removing a spark plug cable or spark plug.

Otherwise, if the engine is cranked, fuel vapors may ignite in presence of a spark creating a fire hazard.

ENGINE BREAK-IN

NOTICE After a repair involving major parts replacement, a break-in period must be observed.

1. Follow *OPERATOR'S GUIDE* recommendation relating to break-in.
2. Restart break-in period in B.U.D.S. as follows:
 - 2.1 Ensure to use the latest B.U.D.S. software specific to the E-TEC engine.
 - 2.2 Select **Setting** tab.
 - 2.3 Click on **Restart** button in **Restart Break-in** box.

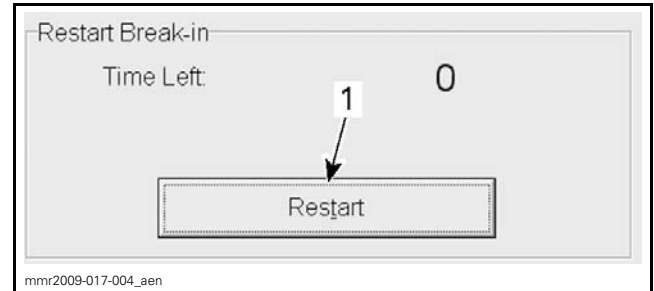

1. Click on **Restart**

INSPECTION


ENGINE COMPRESSION TEST

1. Remove body parts as required to access to the spark plugs.
2. Lift rear of vehicle to clear track from the ground. Support it with a wide base stand.

⚠ WARNING

Prior to measuring engine compression, ensure vehicle is properly lifted with the track off the ground.

3. Safely warm up engine.
4. Remove a spark plug.
5. Disconnect RAVE inlet hoses.
6. Install an appropriate ENGINE COMPRESSION TOOL on engine.

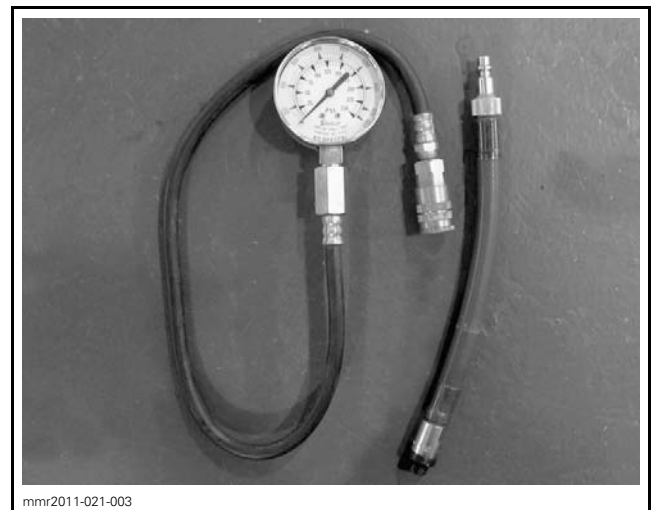

ENGINE COMPRESSION TOOL

Manual Start Models

Place emergency engine stop switch to OFF position.

Pull rewind starter several times.

Subsection XX (TOP END (600 HO E-TEC))

Electric Start Models

Depress throttle lever to wide open position.

Press start button for a few seconds.

All Models

Check if engine compression is according to specification.

SERVICE LIMIT	
ENGINE COMPRESSION SPECIFICATION	7.5 bar (110 PSI)

PROCEDURES

REED VALVES

Reed Valve Removal

1. Remove throttle bodies, refer to *FUEL SYSTEM* subsection.
2. Remove screws retaining intake adapters.
3. Remove reed valves.

Reed Valve Inspection


Check reed valve for proper tightness.

There must not be any play between blade and valve body when exerting finger pressure on blade at blade stopper location.

If there is play, turn blade upside down and recheck.

If there is still a play, replace blade and/or valve body.

Check distance from blade stopper outer edge to center of reed valve block.

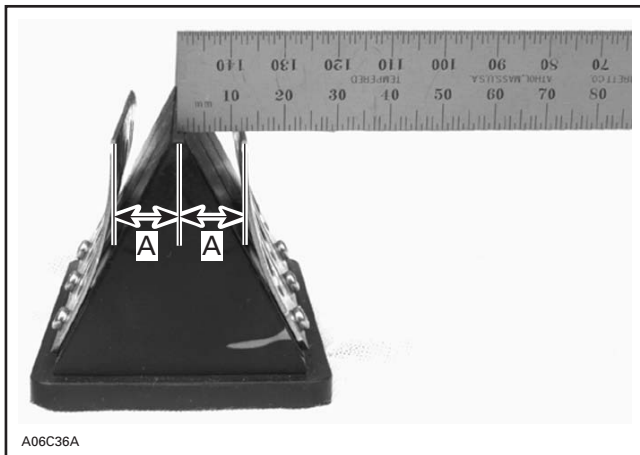

TYPICAL
A. Blade stopper distance

SERVICE LIMIT	
BLADE STOPPER DISTANCE	17.5 mm to 18.25 mm (.689 in to .719 in)

NOTE: Bend the blade stopper as required to obtain the proper distance.

Reed Valve Installation

The installation is the reverse of the removal procedure. However, pay attention to the following: Blades have a curved shape. Install with their curve facing reed block.

NOTE: Blade stoppers may slightly interfere with cylinder during installation. Adjusted distance will be reduced automatically upon installation.

CYLINDER HEAD

Cylinder Head Removal

1. Release fuel pressure using B.U.D.S. software. Refer to *ELECTRIC FUEL PUMP (E-TEC)* in *FUEL TANK AND FUEL PUMP* subsection.
2. Remove upper body module, refer to *BODY* subsection.
3. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
4. Drain coolant, refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.
5. Disconnect fuel lines. Refer to *FUEL SYSTEM* subsection.
6. Disconnect injectors electrical connectors.
7. Remove spark plugs.
8. Remove knock sensor.
9. Disconnect temperature sensor connector.
10. Disconnect coolant hoses at cylinder head.
11. Disconnect throttle body heater inlet hose at cylinder head.
12. Remove cylinder head screws.
13. Remove cylinder head from cylinders.

Cylinder Head Inspection

Check cylinder head for cracks, warp or other damages. Replace if necessary.

NOTE: Refer to *ENGINE MEASUREMENT* for the measurement procedures.

Cylinder Head Warpage

SERVICE LIMIT	
CYLINDER HEAD WARPAGE	0.5 mm (.02 in) for total length of cylinder head

Cylinder Head Cleaning

Scrape off any carbon deposits from cylinder head.

Use LOCTITE CHISEL (GASKET REMOVER) (P/N 413 708 500).


Cylinder Head Installation

The installation is the reverse of removal procedure, however pay attention to the following.

Install **NEW** rubber ring and round O-rings on each cylinder.

Tighten cylinder head screws to specification following the illustrated sequence.

CYLINDER HEAD SCREW TIGHTENING SEQUENCE	
FIRST STEP	15 N•m (133 lbf•in)
SECOND STEP	29 N•m (21 lbf•ft)

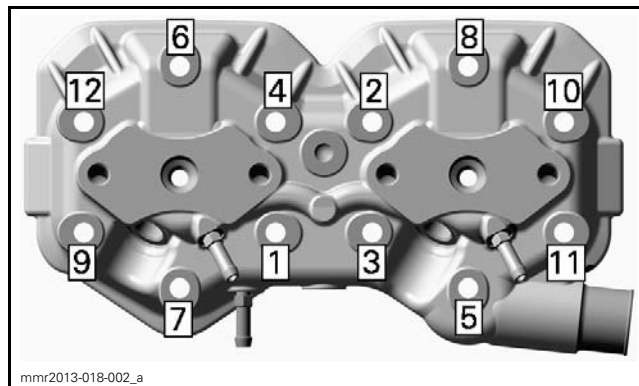

TIGHTENING SEQUENCE

Refill cooling system, refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

Tighten knock sensor retaining screw to specification.

TIGHTENING TORQUE	
KNOCK SENSOR SCREW	23 N•m (17 lbf•ft)

CYLINDERS

Cylinder Removal

1. Remove *CYLINDER HEAD* as explained in this subsection.

2. Refer to *EXHAUST SYSTEM* subsection and remove:
 - Muffler
 - Tune pipe
 - Exhaust manifold.
3. Remove acoustic panel.
4. Refer to *DRIVEN PULLEY AND COUNTER-SHAFT* subsection and remove:
 - Driven pulley
 - Countershaft bearing support.
5. Disconnect throttle bodies from intake adapters and set aside.
6. Refer to *RAVE* subsection and remove:
 - RAVE valves cover
 - RAVE valves link bar.
7. Disconnect RAVE valves oil lines and vacuum/pressure hoses.
8. Remove cylinder screws.
9. Remove cylinders from crankcase.

Cylinder Inspection

Check cylinders for cracks and scoring on the top and bottom of cylinders. Replace if necessary.

NOTE: Refer to *ENGINE MEASUREMENT* for the measurement procedures.

SERVICE LIMIT	
CYLINDER TAPER	0.10 mm (.004 in)
CYLINDER OUT OF ROUND	0.08 mm (.003 in)

Cylinder Cleaning

Scrape off any carbon deposits from cylinder exhaust port.

Carefully clean cylinder screws, specifically under screw head.

Use LOCTITE CHISEL (GASKET REMOVER) (P/N 413 708 500).

Cylinder Installation

The installation is the reverse of removal procedure, however pay attention to the following.

Install a **NEW** base gasket of the same thickness as the old one. Refer to *CYLINDER BASE GASKET*.

Lubricate cylinder wall with new injection oil or equivalent.

Tighten cylinder screws to specification in a criss-cross sequence.

Subsection XX (TOP END (600 HO E-TEC))

CYLINDER SCREW TIGHTENING SEQUENCE	
M8	29 N•m (21 lbf•ft)
M10	40 N•m (30 lbf•ft)

Measure piston projection as described in *ENGINE MEASUREMENT* subsection.

SERVICE LIMIT	
PISTON PROJECTION	0.90 mm to 1.10 mm (.035 in to .043 in)


If piston projection measurement is out of specification, change cylinder base gasket thickness. Refer to *CYLINDER BASE GASKET* in this subsection.

CYLINDER BASE GASKET

Cylinder Base Gasket Replacement

The cylinder base gasket is available in different thicknesses to adjust piston projection precisely.

CYLINDER BASE GASKET	
THICKNESS	HOLE QUANTITY
1.2	2
1.1	1
1.0	No hole
0.9	9
0.8	8
0.7	7
0.6	6
0.5	5

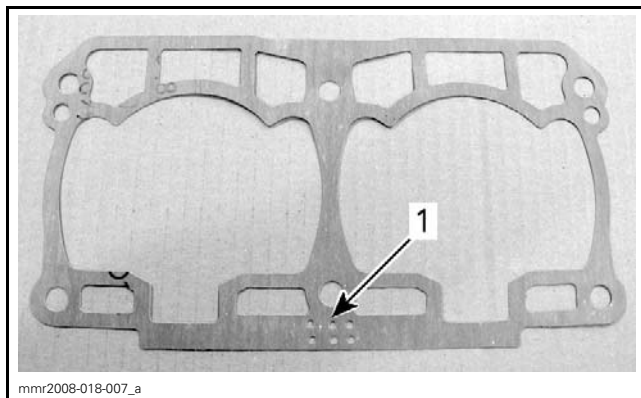

TYPICAL
1. Gasket thickness identification holes

NOTICE Always install a gasket of the proper thickness. Failure to do so may cause detonation and severe engine damage.

1. Ensure top surface of crankcase is clean.
2. Install a **NEW** cylinder base gasket of the same thickness as the one that was installed at factory.

NOTE: If thickness of the factory-installed gasket is unknown, install a 7-dot gasket (0.7 mm (.028 in)) as a base line.


3. Install cylinders and measure piston projection. Refer to *CYLINDER* in this subsection.
4. If piston projection is out of specification, follow this guideline:

CYLINDER GASKET SELECTION GUIDELINE	
MEASURED PISTON PROJECTION	GASKET TO INSTALL
Below specification	Thinner
Above specification	Thicker


PISTONS

Piston Removal

1. Remove *CYLINDERS*, as explained in this subsection.
2. Place a clean cloth or a rubber pad over crankcase.

REQUIRED TOOL	
RUBBER PAD PROTECTOR (P/N 529 023 400)	

3. Using a pointed tool inserted in piston notch, remove both circlips from piston.
4. Discard circlips.

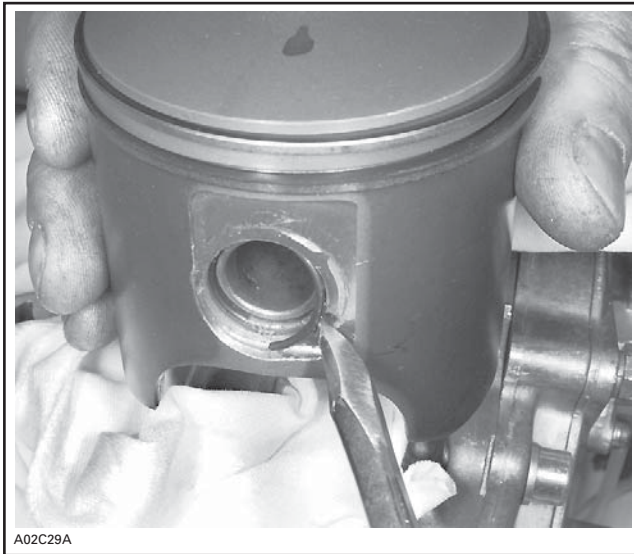

TYPICAL

5. Push piston pin out of piston.
6. Remove piston.
7. Remove bearing.

Piston Inspection

Inspect piston for scoring, cracking or other damage.


NOTE: Refer to *ENGINE MEASUREMENT* for the measurement procedures.

SERVICE LIMITS	
RING/PISTON GROOVE CLEARANCE	0.20 mm (.0079 in)
RING END GAP	1.0 mm (.039 in)
PISTON/CYLINDER CLEARANCE	0.20 mm (.008 in)

Piston Cleaning

Scrape off any carbon deposits from piston dome.

NOTE: The arrow on the piston dome must be visible after cleaning.

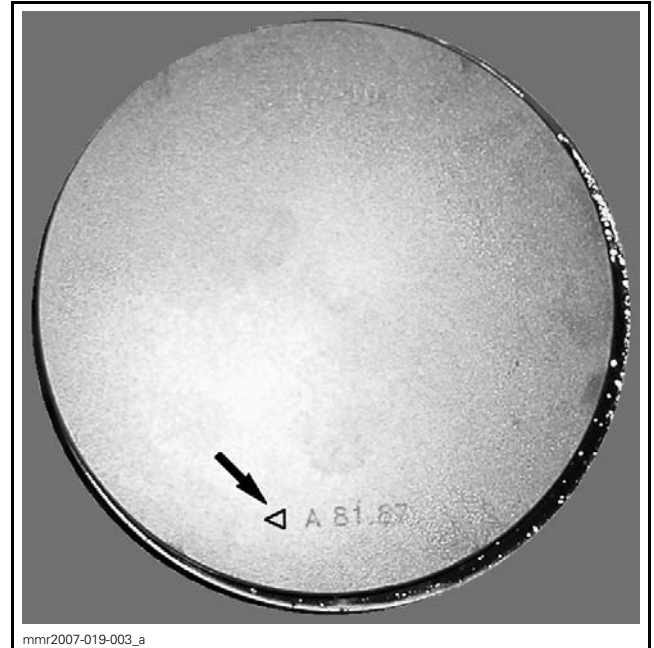


EXHAUST DIRECTION INDICATION

Clean the piston ring groove with a groove cleaner tool or with a piece of broken ring.

Piston Installation

1. Lubricate needle bearing with injection oil.
2. Insert bearing into connecting rod.
3. Place piston over connecting rod with the arrow on the piston dome facing towards exhaust port.

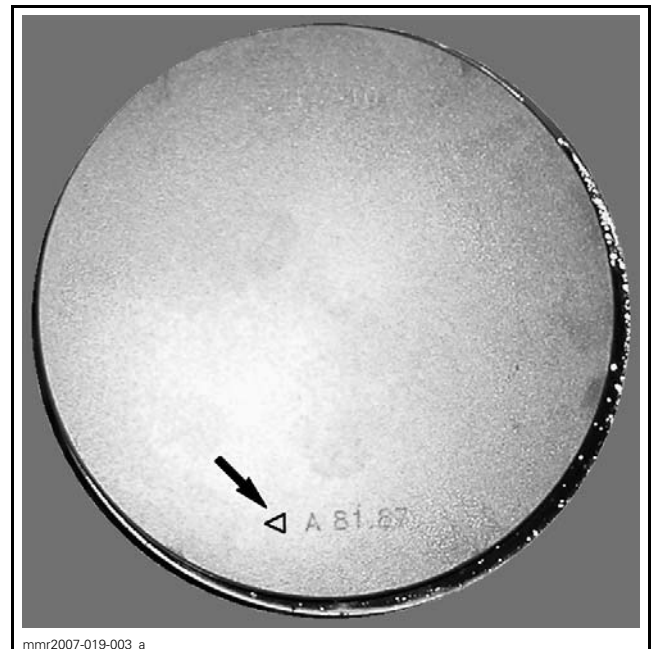


1. Exhaust

4. Push piston pin trough piston.

Subsection XX (TOP END (600 HO E-TEC))

5. Install **NEW** mono-hook circlips.


REQUIRED TOOL	
PISTON CIRCLIP INSTALLER (P/N 529 035 686)	

NOTICE Always install **NEW** mono-hook circlip(s). If circlip installation fails at the first attempt, always retry with a new one.



6. Insert circlip into support so that, when installed in piston groove, the gap will be below the tab.



7. With round end of pusher, position circlip perpendicular to the support axis.

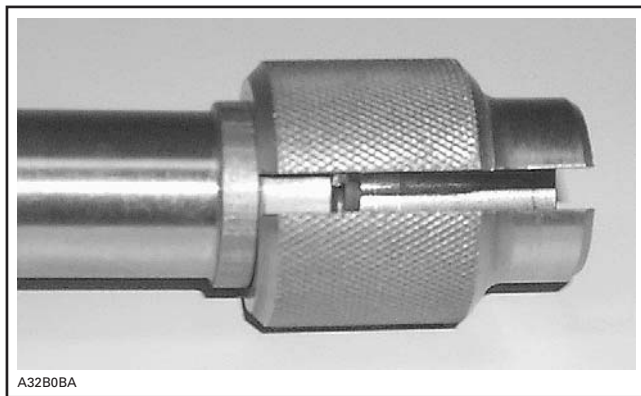

8. With the other end of the pusher, push circlip into the support groove.

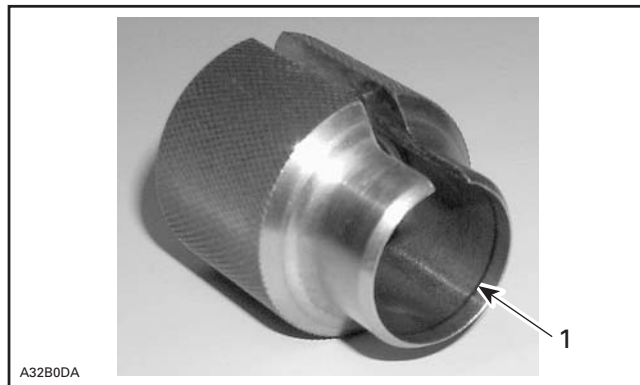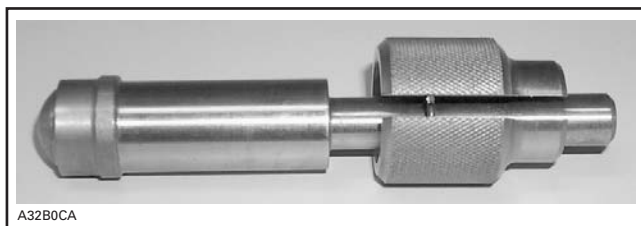


1. Groove



CIRCLIP READY TO BE INSTALLED ON PISTON

9. Using a plastic hammer, tap pusher to put circlip in place.

NOTE: Make sure to install **NEW** circlips with the gap below the tab exactly as shown on the following photo.

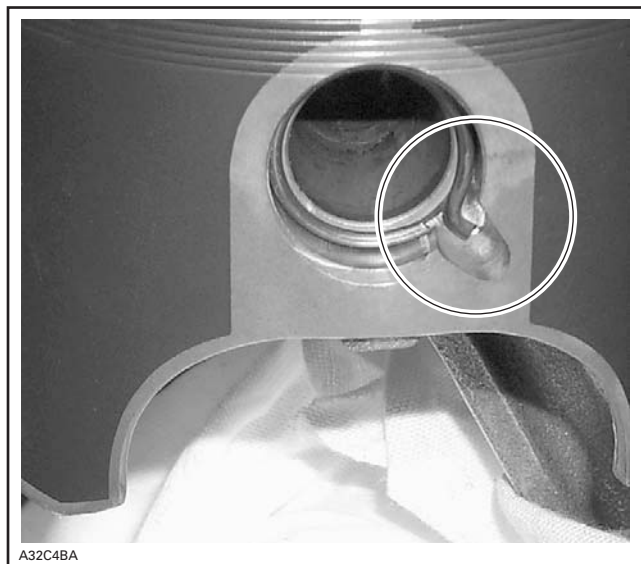

GAP BELOW THE TAB

NOTICE Circlips must not move freely after installation; if so, replace them.

10. Install all other removed parts as the reverse of removal procedure.

TOP END (800R E-TEC)

SERVICE TOOLS

Description	Part Number	Page
PISTON CIRCLIP INSTALLER 21MM.....	529 036 138	8
RUBBER PAD PROTECTOR.....	529 023 400	7

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE CHISEL (GASKET REMOVER)	413 708 500	5-6

GENERAL

Before completely disassembling the engine, check airtightness. Refer to *ENGINE LEAK TEST* subsection.

To measure internal parts, refer to *ENGINE MEASUREMENT* subsection.

During assembly or installation:

- Use torque values and service products as shown in the exploded view.
- Clean threads before applying a threadlocker. Refer to the *INTRODUCTION* subsection.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.) must be replaced with new ones.

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

⚠ WARNING


Always disconnect the magneto connector prior to:

- Disconnecting any fuel hose.
- Removing a fuel injector.
- Removing a spark plug cable or spark plug.

Otherwise, if the engine is cranked, fuel vapors may ignite in presence of a spark creating a fire hazard.

ENGINE BREAK-IN

1. Follow *OPERATOR'S GUIDE* recommendation relating to break-in.
2. Restart break-in period in B.U.D.S. as follows:
 - 2.1 Ensure to use the latest B.U.D.S. software specific to the E-TEC engine.
 - 2.2 Select **Setting** tab.
 - 2.3 Click on **Restart** button in **Restart Break-in** box.

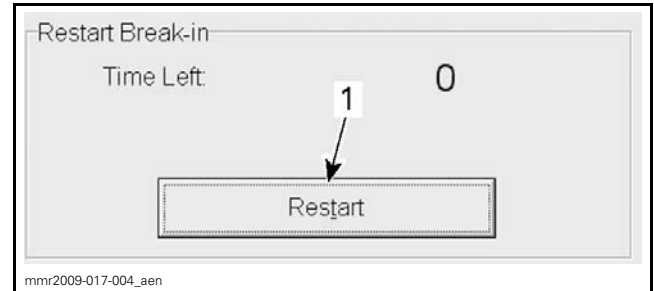

1. Click on **Restart**

INSPECTION


ENGINE COMPRESSION TEST

1. Remove body parts as required to access to the spark plugs.
2. Lift rear of vehicle to clear track from the ground. Support it with a wide base stand.

⚠ WARNING

Prior to measuring engine compression, ensure vehicle is properly lifted with the track off the ground.

3. Safely warm up engine.
4. Remove a spark plug.
5. Disconnect RAVE inlet hoses.
6. Install an appropriate ENGINE COMPRESSION TOOL on engine.

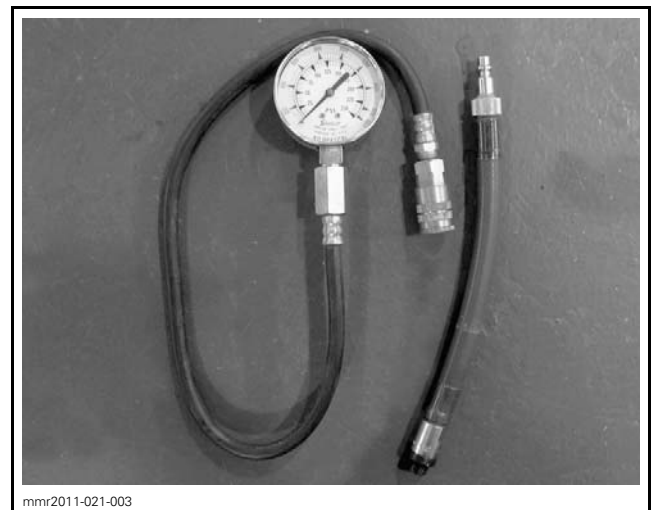

ENGINE COMPRESSION TOOL

Manual Start Models

Place emergency engine stop switch to OFF position.

Pull rewind starter several times.

Subsection XX (TOP END (800R E-TEC))

Electric Start Models

Depress throttle lever to wide open position.
Press start button for a few seconds.

All Models

Check if engine compression is according to specification.

SERVICE LIMIT	
ENGINE COMPRESSION SPECIFICATION	7.5 bar (110 PSI)

PROCEDURES

REED VALVES

Reed Valve Removal

1. Remove throttle bodies, refer to *FUEL SYSTEM* subsection.
2. Remove screws retaining intake adapters.
3. Remove reed valves.

Reed Valve Inspection

Check reed valve for proper tightness.

There must not be any play between blade and valve body when exerting a finger pressure on blade at blade stopper location.

In case of a play, turn blade upside down and recheck.


If there is still a play, replace blade and/or valve body.

Reed Valve Installation


The installation is the reverse of the removal procedure. However, pay attention to the following.

Blades have a curved shape. Install with their curve facing reed block.

Ensure to position reed valves so that they rest flat in intake opening.

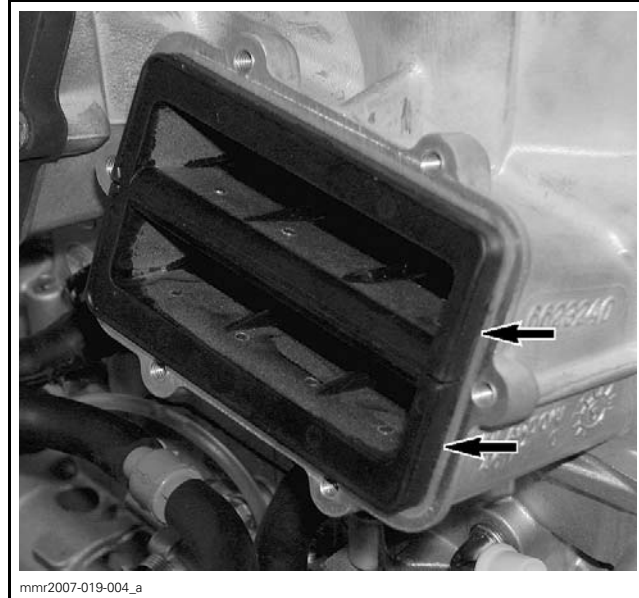

Ensure to position intake adapter as shown.

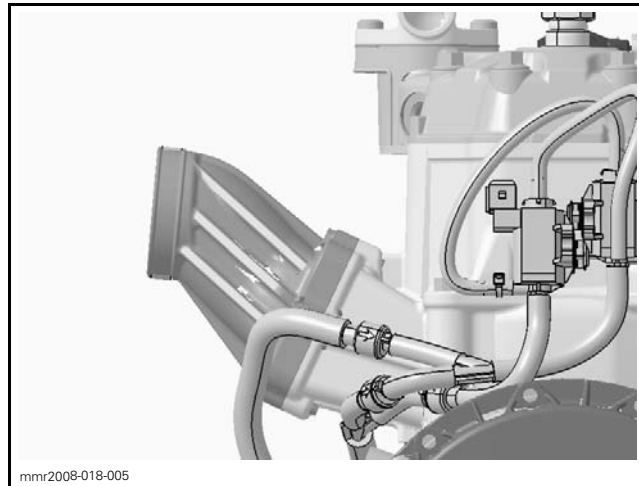

CYLINDER HEAD

Cylinder Head Removal

1. Release fuel pressure using B.U.D.S. software. Refer to *ELECTRIC FUEL PUMP (E-TEC)* in *FUEL TANK AND FUEL PUMP* subsection.
2. Remove upper body module, refer to *BODY* subsection.
3. Remove drive belt guard. refer to *DRIVE BELT* subsection.
4. Drain coolant, refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.
5. Disconnect fuel lines. Refer to *FUEL SYSTEM* subsection.
6. Disconnect injectors electrical connectors.
7. Remove spark plugs.

8. Remove knock sensor.
9. Disconnect temperature sensor connector.
10. Disconnect coolant hoses at cylinder head.
11. Disconnect throttle body heater inlet hose at cylinder head.
12. Remove cylinder head screws.
13. Remove cylinder head from cylinder.

Cylinder Head Inspection

Check cylinder head for cracks or other damages. Replace if necessary.

NOTE: Refer to *ENGINE MEASUREMENT* for the measurement procedures.

Cylinder Head Warpage

SERVICE LIMIT	
CYLINDER HEAD WARPAGE	0.05 mm (.002 in) per 50 mm (2 in) of surface
	0.5 mm (.02 in) for total length of cylinder head

Cylinder Head Cleaning

Scrape off any carbon deposits from cylinder head.

Use LOCTITE CHISEL (GASKET REMOVER) (P/N 413 708 500).


Cylinder Head Installation

The installation is the reverse of removal procedure, however pay attention to the following.

Install **NEW** rubber ring and round O-rings on each cylinder.

Tighten cylinder head screws to specification as per the following sequence.

CYLINDER HEAD SCREW TIGHTENING SEQUENCE	
FIRST STEP	15 N•m (133 lbf•in)
SECOND STEP	29 N•m (21 lbf•ft)

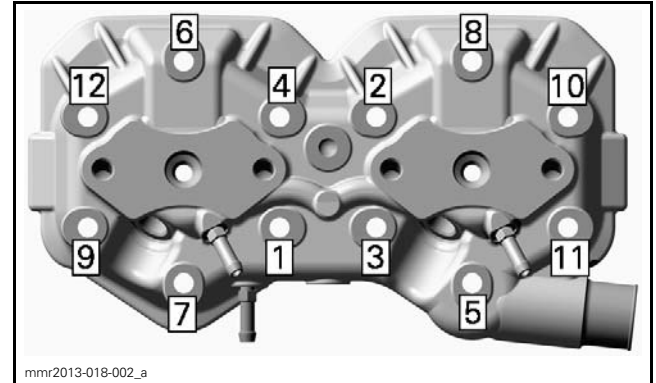

TIGHTENING SEQUENCE

Tighten knock sensor retaining screw to specification.

TIGHTENING TORQUE	
KNOCK SENSOR SCREW	24 N•m (18 lbf•ft)

CYLINDERS

Cylinder Removal

1. Remove *CYLINDER HEAD* as explained in this subsection.
2. Refer to *EXHAUST SYSTEM* subsection and remove:
 - Muffler
 - Tune pipe
 - Exhaust manifold.
3. Remove acoustic panel.
4. Refer to *DRIVEN PULLEY AND COUNTER-SHAFT* subsection and remove:
 - Driven pulley
 - Countershaft bearing support.
5. Disconnect throttle bodies from intake adapters and set aside.
6. Refer to *RAVE* subsection and remove:
 - RAVE valves cover
 - RAVE valves link bar.
7. Disconnect RAVE valves oil lines and vacuum/pressure hoses.
8. Remove cylinder screws.
9. Remove cylinder from crankcase.

Cylinder Inspection

Remove RAVE valves, refer to *RAVE* subsection. Remove reed valves, refer to *REED VALVES REMOVAL* in this subsection.

Check cylinders for cracks and scoring on the top and bottom of cylinders. Replace if necessary.

Subsection XX (TOP END (800R E-TEC))

NOTE: Refer to *ENGINE MEASUREMENT* for the measurement procedures.

SERVICE LIMITS	
CYLINDER TAPER	0.1 mm (.004 in)
CYLINDER OUT OF ROUND	0.08 mm (.003 in)

Cylinder Cleaning

Scrape off any carbon deposits from exhaust ports.

Carefully clean cylinder screws, specifically under screw head.

Use LOCTITE CHISEL (GASKET REMOVER) (P/N 413 708 500).

Cylinder Installation

The installation is the reverse of removal procedure, however pay attention to the following.

Install a **NEW** cylinder base gasket of the same thickness as the old one. Refer to *CYLINDER BASE GASKET*.

Check if dowel pins are in crankcase holes.




Lubricate cylinder with new injection oil or equivalent.

Carefully slide cylinder down while squeezing piston rings to allow cylinder insertion.

Proceed one piston at a time, the help of an assistant may be required.

Tighten cylinder screws to specification as per the following sequence.

CYLINDER SCREW TIGHTENING SEQUENCE	
FIRST STEP	25 N•m (18 lbf•ft)
SECOND STEP	50 N•m (37 lbf•ft)

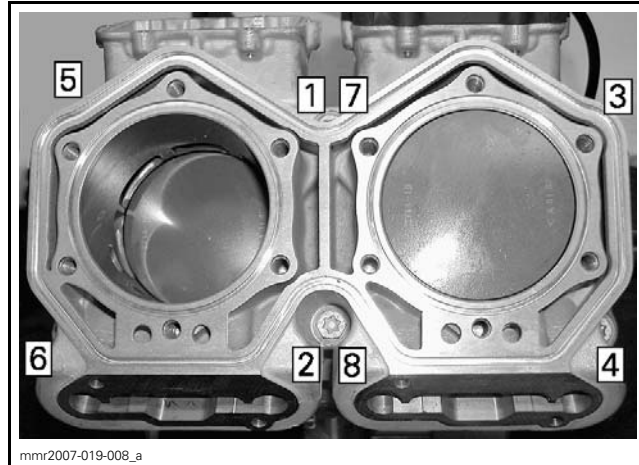

TIGHTENING SEQUENCE

Measure piston projection as described in *ENGINE MEASUREMENT* subsection.

SERVICE LIMIT	
PISTON PROJECTION	1.82 mm to 1.92 mm (.072 in to .076 in)


If piston projection measurement is out of specification, change cylinder base gasket thickness. Refer to *CYLINDER BASE GASKET* in this subsection.

CYLINDER BASE GASKET

Cylinder Base Gasket Replacement

The cylinder base gasket is available in different thicknesses to adjust precisely the piston projection.

CYLINDER BASE GASKET	
THICKNESS	HOLES QUANTITY
1.2	2
1.1	1
1.0	No hole
0.9	9
0.8	8
0.7	7
0.6	6
0.5	5

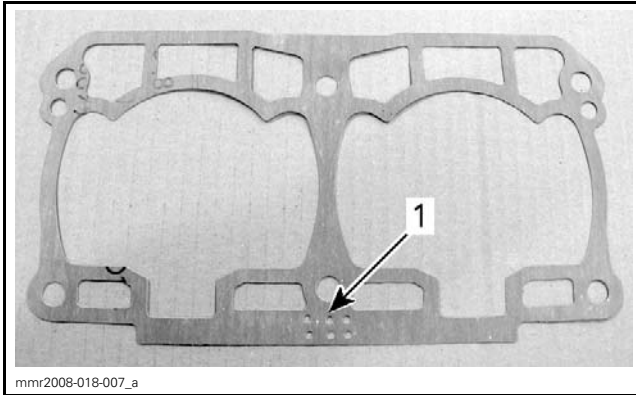

TYPICAL

1. Gasket thickness identification holes

NOTICE Always install a cylinder base gasket of the proper thickness. Failure to do so may cause detonation and severe engine damage.

1. Ensure top surface of crankcase is clean.
2. Install a **NEW** cylinder base gasket of the same thickness as the one that was installed at factory.

NOTE: If thickness of the factory-installed gasket is unknown, install a 7-holes gasket (0.7 mm (.028 in)) as a base line.


3. Install cylinder and measure piston projection. Refer to *CYLINDER* in this subsection.
4. If piston projection is out of specification, follow this guideline:

CYLINDER GASKET SELECTION GUIDELINE	
MEASURED PISTON PROJECTION	GASKET TO INSTALL
Below specification	Thinner
Above specification	Thicker


PISTONS

Piston Removal

1. Remove *CYLINDER*, as explained in this subsection.
2. Place a clean cloth or a rubber pad over crankcase.

REQUIRED TOOL	
RUBBER PAD PROTECTOR (P/N 529 023 400)	

3. Using a pointed tool inserted in piston notch, remove one circlip from piston.

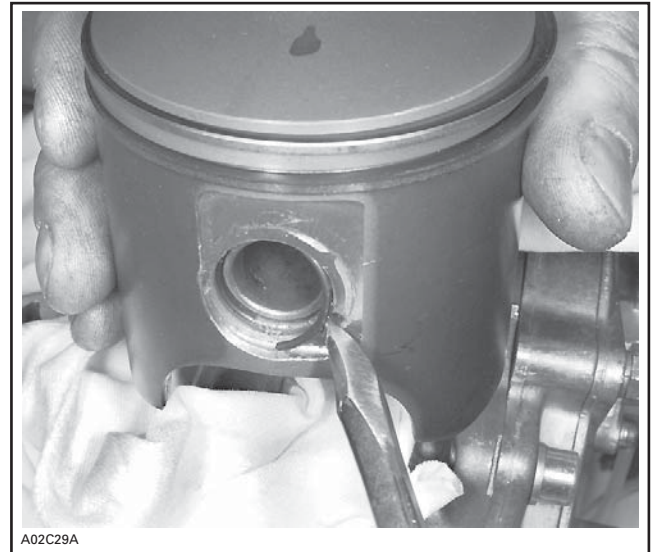

TYPICAL

4. Push piston pin out of piston.
5. Remove piston.
6. Remove bearing.
7. Discard circlips.

Piston Inspection

Inspect piston for scoring, cracking or other damage.

NOTE: Refer to *ENGINE MEASUREMENT* for the measurement procedures.


SERVICE LIMIT	
CYLINDER/PISTON CLEARANCE	0.2 mm (.0079 in)
RING/PISTON GROOVE CLEARANCE	0.2 mm (.0079 in)
RING END GAP	1 mm (.039 in)

Piston Cleaning

1. Scrape off any carbon deposits from piston dome.

NOTE: The arrow on the piston dome must be visible after cleaning.

Subsection XX (TOP END (800R E-TEC))

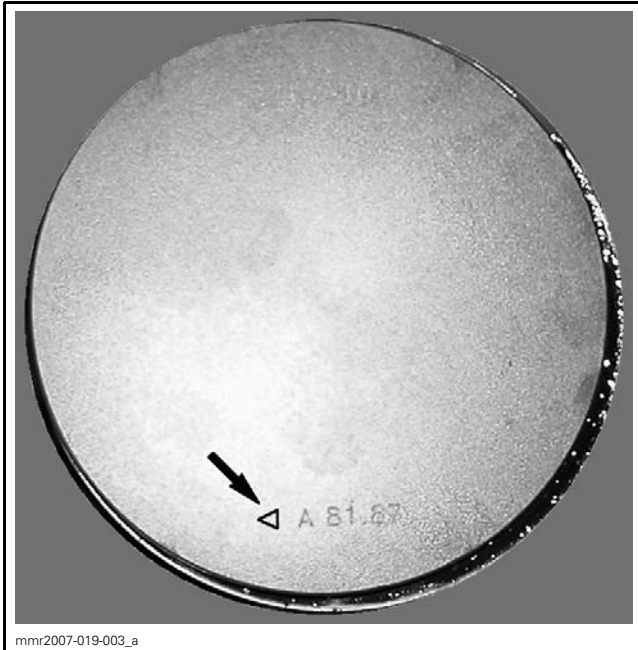


EXHAUST DIRECTION INDICATION

2. Clean the piston ring groove with a groove cleaner tool or with a piece of broken ring.

Piston Installation


1. Lubricate needle bearing with injection oil.
2. Insert bearing into connecting rod.
3. Place pistons over connecting rods with the arrow on the piston dome facing towards exhaust port.

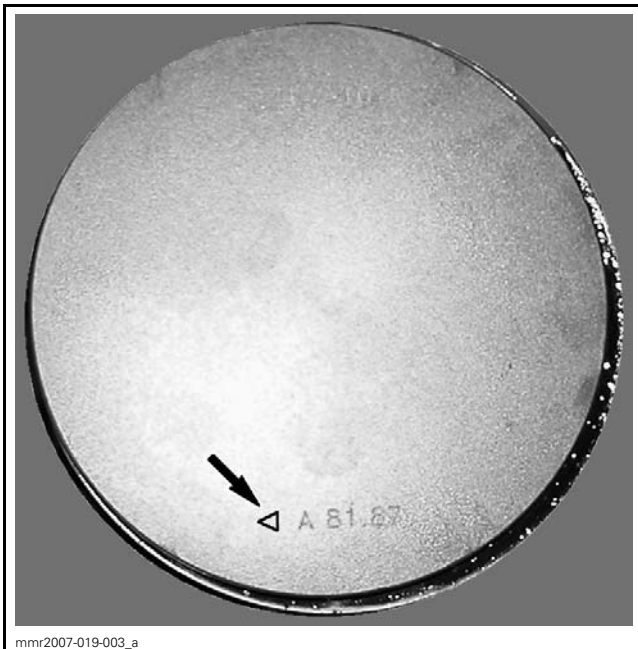

EXHAUST DIRECTION INDICATION

4. Install piston pin in piston.

5. Install **NEW** circlips.

REQUIRED TOOL	
PISTON CIRCLIP INSTALLER 21MM (P/N 529 036 138)	


NOTICE Always install **NEW** mono-hook circlip(s). If circlip installation fails at the first attempt, always retry with a new one.

6. Use the following procedure to properly install circlip.


- 6.1 Insert circlip into support so that, when installed in piston groove, the gap will be below the tab.




- 6.2 With round end of pusher, position circlip perpendicularly to the support axis.

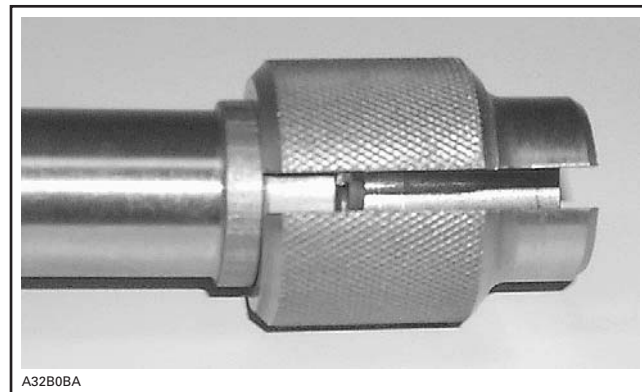

- 6.3 With the other end of the pusher, push circlip into the support groove.

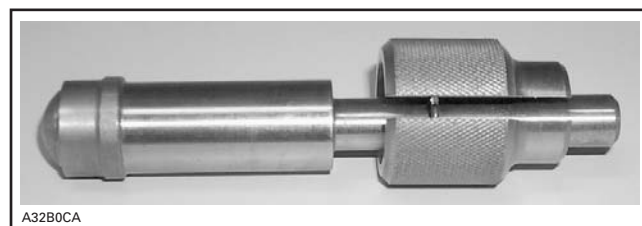

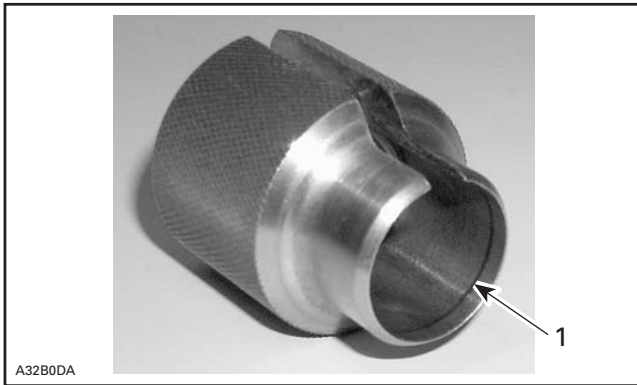

1. Groove


7. Install all other removed parts as the reverse of removal procedure.



CIRCLIP READY TO BE INSTALLED ON PISTON

6.4 Using a plastic hammer, tap pusher to put the new circlip in place.

NOTE: Make sure to install new circlip(s) with the gap below the tab exactly as shown on the following photo.

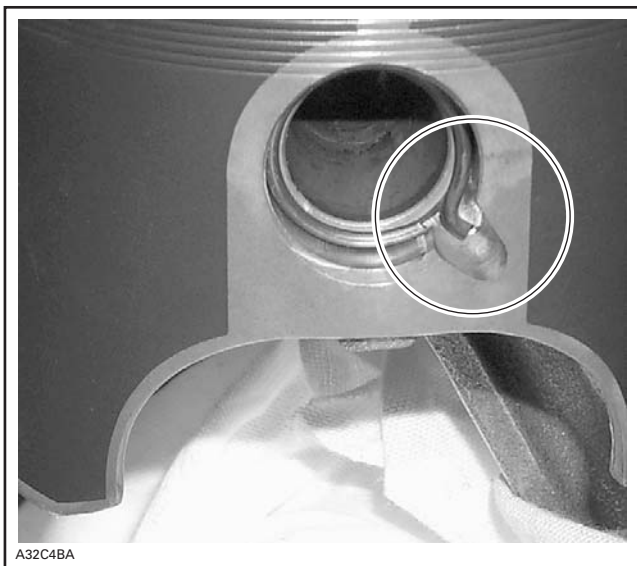

GAP BELOW THE TAB

NOTICE Circlips must not move freely after installation; if so, replace them.

BOTTOM END (600 HO E-TEC)

SERVICE TOOLS

Description	Part Number	Page
BEARING HEATER	529 035 969	12
BEARING INSTALLER (PTO)	529 035 990	13–14
CERAMIC SEAL INSTALLER.....	529 036 014	7–8
CRANKSHAFT BEARING PULLER	529 036 004	11
CRANKSHAFT DISTANCE GAUGE.....	529 035 968	13
CRANKSHAFT PROTECTOR (MAG).....	420 876 557	11
CRANKSHAFT PROTECTOR (PTO).....	420 876 552	11
HALF-RINGS.....	420 977 479	11
HANDLE	420 877 650	7
OIL SEAL GUIDE.....	529 035 822	7
OIL SEAL PUSHER.....	529 035 757	7
PULLER RING	420 977 494	11
SUPPORT PLATE.....	529 035 976	13
TEMPERATURE INDICATOR STICK.....	529 035 970	13

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
SNAP-ON BEARING SEPARATOR.....	CJ 951	11
SNAP-ON MANUAL IMPACT DRIVER	PIT120	8
SPX/OTC BEARING SEPARATOR.....	1124	11

SERVICE PRODUCTS

Description	Part Number	Page
ISOFLEX GREASE TOPAS NB 52	293 550 021	15
LOCTITE 243 (BLUE).....	293 800 060	4, 8
LOCTITE 5910	293 800 081	9
LOCTITE 767 (ANTISEIZE LUBRICANT)	293 800 070	12
LOCTITE CHISEL (GASKET REMOVER)	413 708 500	9
PULLEY FLANGE CLEANER	413 711 809	12
XPS INJECTION OIL.....	293 600 117	8–9, 15
XPS LUBE.....	293 600 016	11

GENERAL

Engine removal is required to repair bottom end except for the water pump impeller.

All oil seals and gaskets must be discarded and replaced with new ones when crankcase halves are separated.

Clean all metal components in a non-ferrous metal cleaner.

To measure internal parts, refer to *ENGINE MEASUREMENT* subsection.

During assembly or installation:

- Use torque values and service products as shown in the exploded view.
- Clean threads before applying a threadlocker. Refer to the *INTRODUCTION* subsection.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to.

Locking devices when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.) must be replaced with new ones.

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.


⚠ WARNING

Always disconnect the magneto connector prior to:

- Disconnecting any fuel hose.
 - Removing a fuel injector.
 - Removing a spark plug cable or spark plug.
- Otherwise, if the engine is cranked, fuel vapors may ignite in presence of a spark creating a fire hazard.

ENGINE BREAK-IN

1. Follow *OPERATOR'S GUIDE* recommendation relating to break-in.
2. Restart break-in period in B.U.D.S. as follows:
 - 2.1 Ensure to use the latest B.U.D.S. software specific to the E-TEC engine.
 - 2.2 Select **Setting** tab.
 - 2.3 Click on **Restart** button in **Restart Break-in** box.

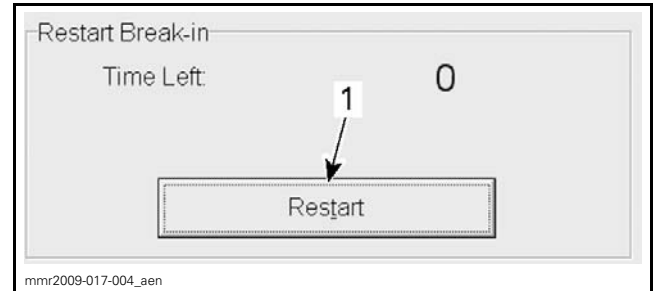

1. Click on Restart

PROCEDURES

WATER PUMP

Water Pump Access

Refer to *BODY* subsection and remove:

- Upper body module
- Bottom pan cover.

Refer to *EXHAUST SYSTEM* subsection and remove:

- Tune pipe
- Muffler
- Exhaust manifold.

Remove acoustic panel.


Remove starter as necessary. Refer to *STARTING SYSTEM* subsection.

Water Pump Removal

Put a large drain pan under vehicle bottom pan.

Remove water pump inlet hose from pump cover.

Remove water pump cover **no. 5**.

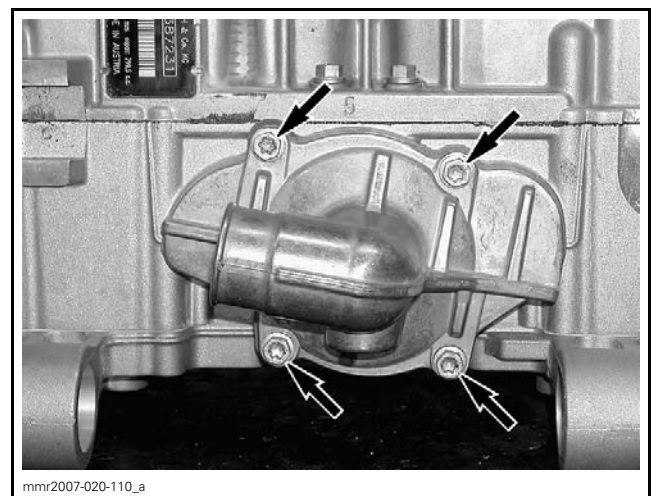


TYPICAL


Remove impeller **no. 6** by turning it counterclockwise.

Subsection XX (BOTTOM END (600 HO E-TEC))

NOTICE Be careful not to damage impeller fins.

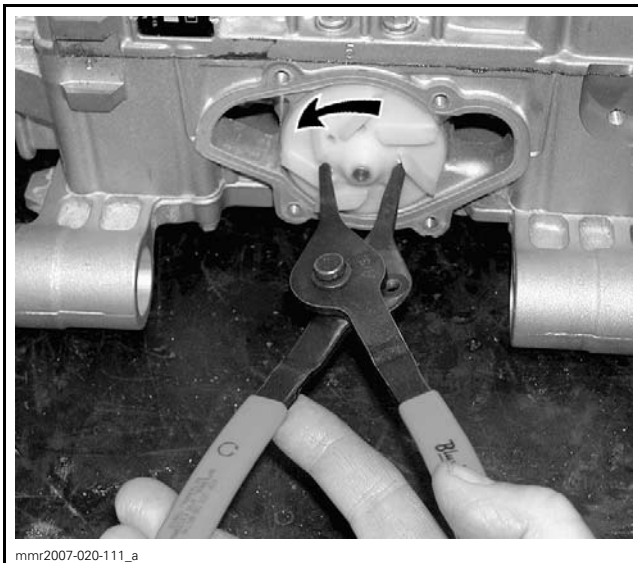

TYPICAL

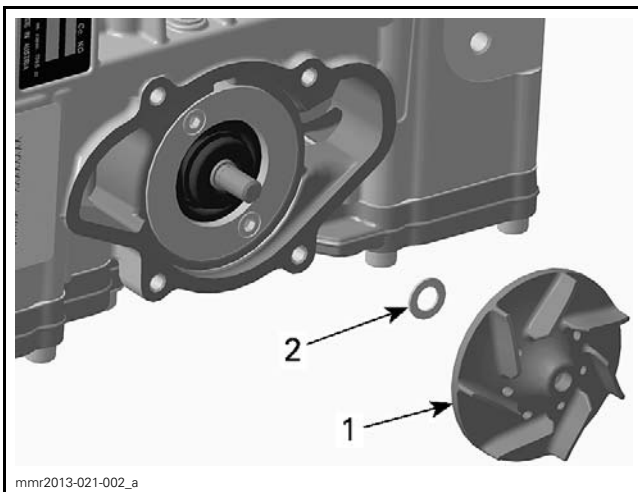

1. Impeller
2. Washer, 0.5 mm (.02 in) thick

Clean gasket surfaces of water pump cover and crankcase.

Water Pump Installation

The installation is the reverse of removal procedure. However, pay attention to the following details.

Ensure to install the 0.5 mm (.02 in) thick washer. Tighten impeller to specification.

IMPELLER	
Service Product	LOCTITE 243 (BLUE) (P/N 293 800 060)
Tightening Torque	5 N•m (44 lbf•in)

Install a **NEW** pump cover gasket.

Tighten screws of water pump cover to specification in a **crisscross** sequence.

WATER PUMP COVER SCREWS	
Tightening Torque	11 N•m (97 lbf•in)


BEARING CARRIER AND PUMP SHAFT

Bearing Carrier and Pump Shaft Access

The bearing carrier and pump shaft is located on the lower rear portion of the engine. Remove engine from vehicle, refer to *ENGINE REMOVAL (600 HO E-TEC)* subsection.

Bearing Carrier and Pump Shaft Removal


Remove cover plate and discard gasket.

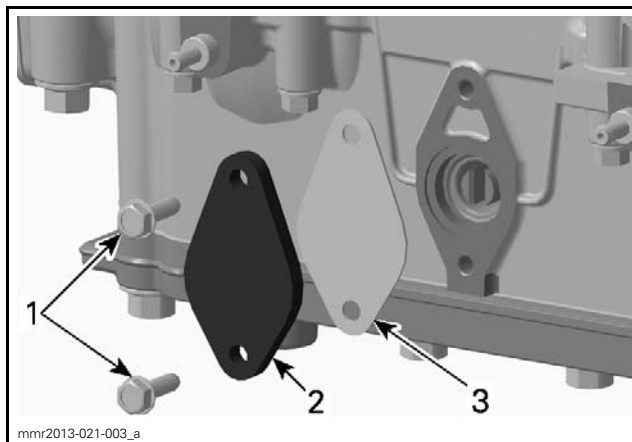

1. Screws
2. Cover plate
3. Gasket


Remove *WATER PUMP*. See procedure in this subsection.

Remove bearing carrier retaining screws **no. 7**.

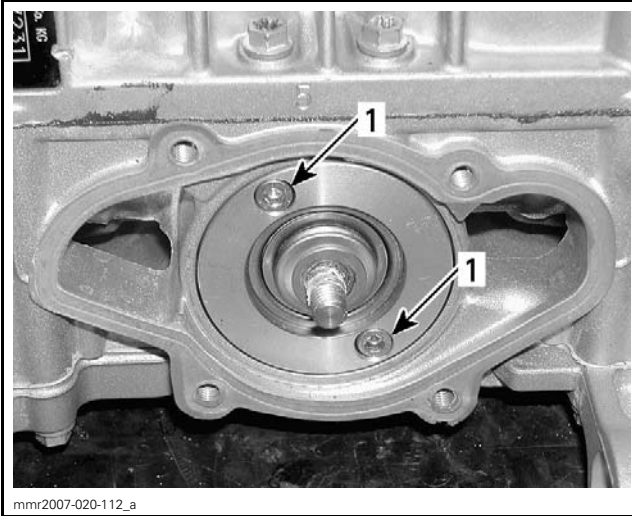

TYPICAL
1. Screws

Push pump shaft out while turning shaft to release it from crankshaft worm gear.

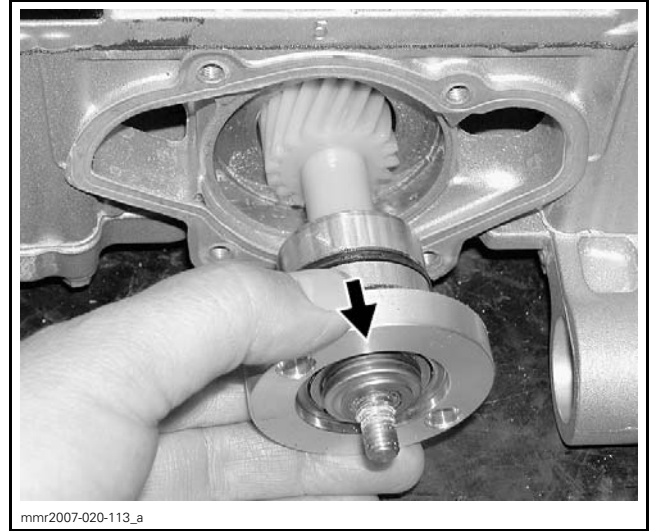

TYPICAL


Bearing Carrier and Pump Shaft Disassembly

NOTE: The pump shaft cannot be disassembled without damaging the ceramic seal and oil seal.

Protect the threads of the pump shaft with a suitable M8 nut.


Properly support bearing carrier.

Push pump shaft out using a press.

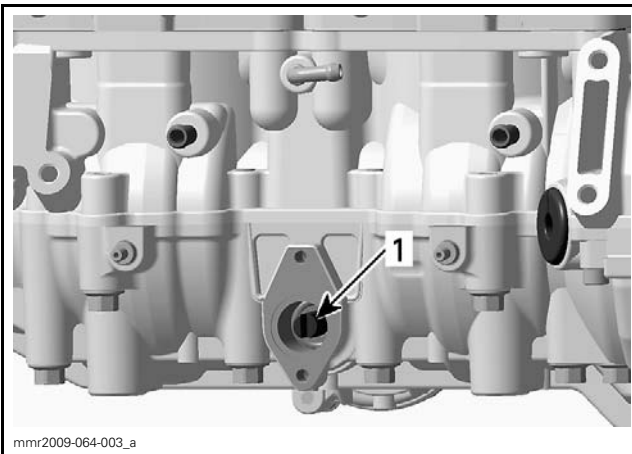

TYPICAL
1. Push out shaft here

Extract bearing carrier and pump shaft.

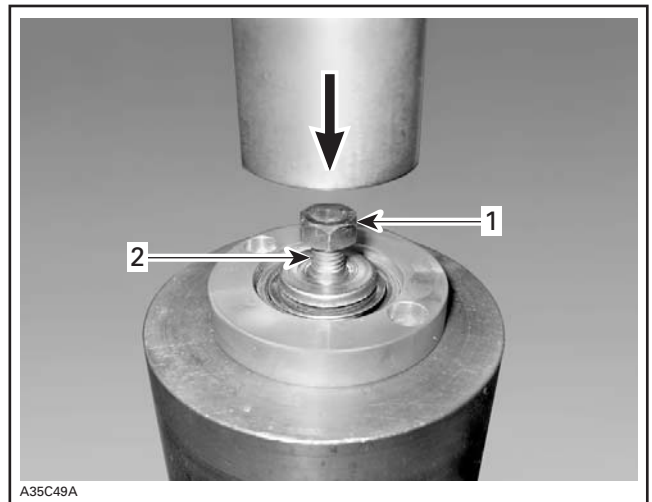

A35C49A

TYPICAL
1. M8 nut
2. Shaft


NOTICE Pay attention not to damage the bearing carrier during disassembly. Marks or other damages will lead to coolant or oil leakage.

Pry inner part of ceramic seal no. 9 out.

Subsection XX (BOTTOM END (600 HO E-TEC))




Push out bearing no. 11 from bearing carrier using an appropriate pusher.

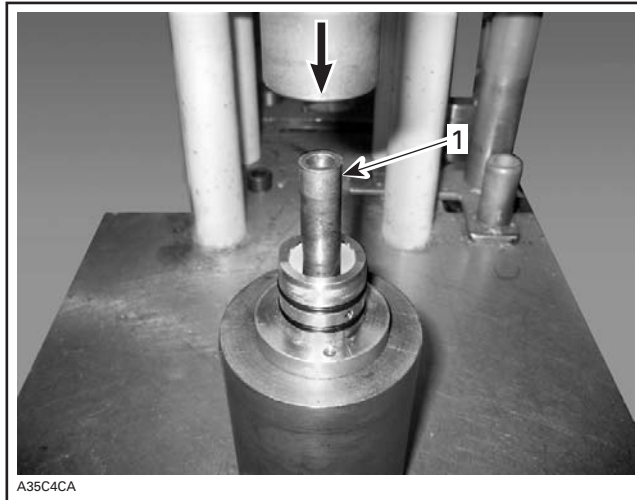

1. 16 mm (.63 in) mandrel



Push oil seal no. 10 out.

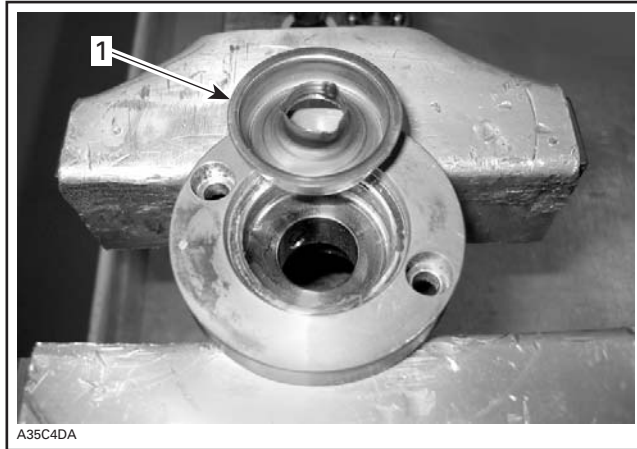


1. Outer part of ceramic seal

Remove sealant from bearing carrier with sand paper no. 180.



Carefully press out outer part of ceramic seal.

NOTE: Use a mandrel with a diameter of approximately 16 mm (.63 in).

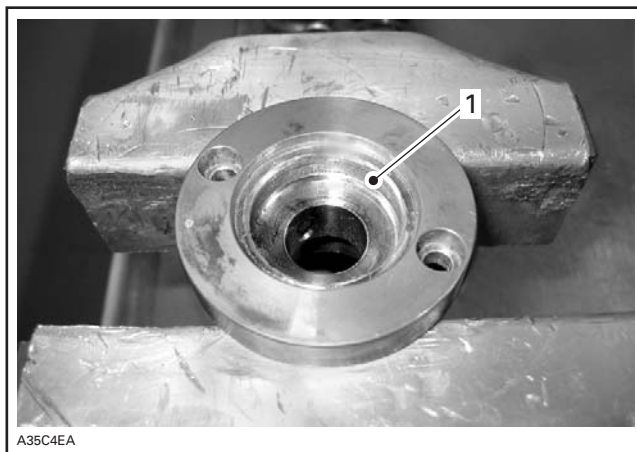



1. Remove sealant


Bearing Carrier and Pump Shaft Reassembly

Reverse disassembly procedure and pay attention to the following.

NOTE: Never put oil in press fit area of oil seal and ceramic seal.

Push **NEW** oil seal no. 10 in bearing carrier.

REQUIRED TOOL	
HANDLE (P/N 420 877 650)	
OIL SEAL PUSHER (P/N 529 035 757)	

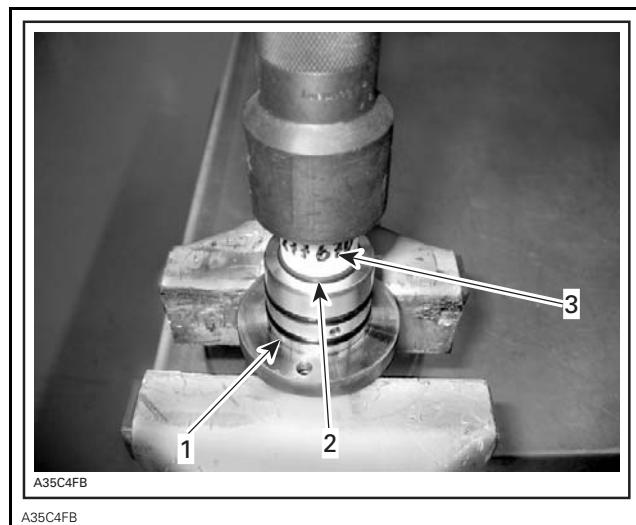

1. Bearing carrier
2. Oil seal
3. Oil seal protector

Press bearing no. 11 in bearing carrier no. 8.




Push **NEW** ceramic seal no. 9 in bearing carrier no. 8.


REQUIRED TOOL	
CERAMIC SEAL INSTALLER (P/N 529 036 014)	



NOTICE Never use a hammer for the ceramic seal installation. Only use a press to avoid damaging the ceramic component.

Install oil seal protector on pump shaft no. 13.

REQUIRED TOOL	
OIL SEAL GUIDE (P/N 529 035 822)	

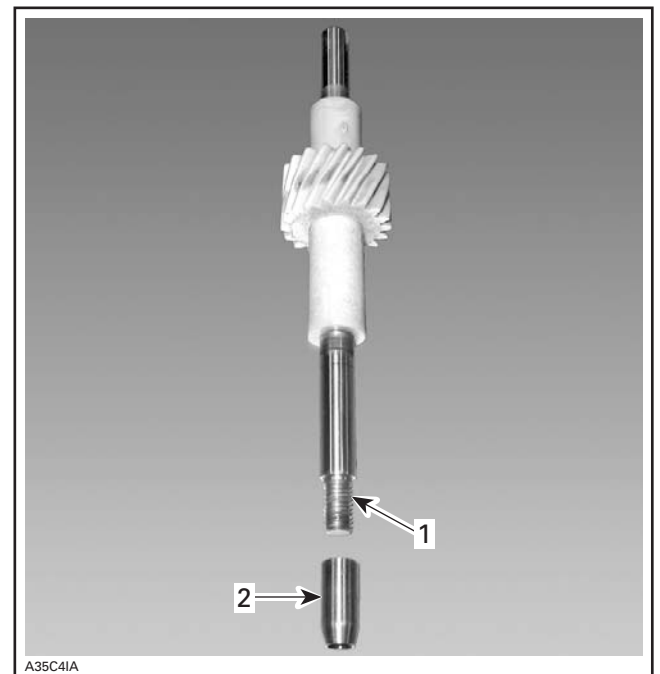


1. Pump shaft
2. Oil seal protector

Subsection XX (BOTTOM END (600 HO E-TEC))

Press pump shaft **no. 13** in bearing carrier **no. 8** with appropriate force.

NOTICE Inadequate force will damage the oil seal and bearing.

NOTE: During installation, support ceramic seal as shown in following illustration.

REQUIRED TOOL	
CERAMIC SEAL INSTALLER (P/N 529 036 014)	

BEARING CARRIER SCREWS	
Tightening Torque	6 N•m (53 lbf•in)

Install cover plate and **NEW** gasket.

Tighten cover plate screws to specification.

COVER PLATE SCREWS	
Service Product	LOCTITE 243 (BLUE) (P/N 293 800 060)
Tightening Torque	6 N•m (53 lbf•in)

CRANKCASE

Crankcase Disassembly

Remove engine from vehicle. Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.

Remove cylinder head and cylinders. Refer to *TOP END (600 HO-E-TEC)* subsection.

Remove rewind starter. Refer to *REWIND STARTER* subsection.

Refer to *MAGNETO SYSTEM* subsection and remove:

- Crankshaft position sensor
- Magneto flywheel
- Stator.


Remove front engine supports.

Remove drive pulley. Refer to *DRIVE PULLEY* subsection.

Remove PTO oil seal cover **no. 1**.


NOTE: Tap on screw heads to break Loctite bond or use following tool.

SUGGESTED TOOL
SNAP-ON MANUAL IMPACT DRIVER (P/N PIT120)

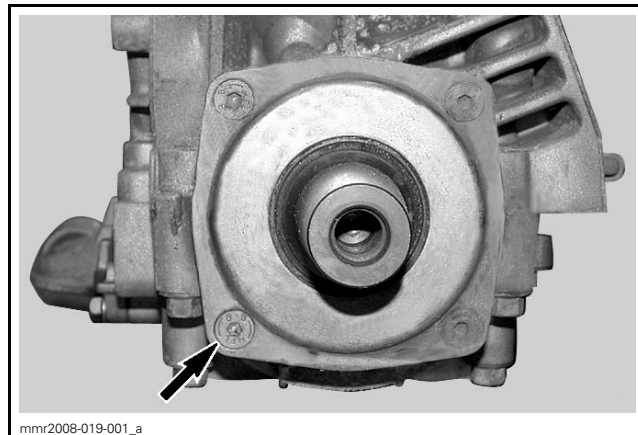

mnr2008-019-001_a

TYPICAL - 600 HO E-TEC

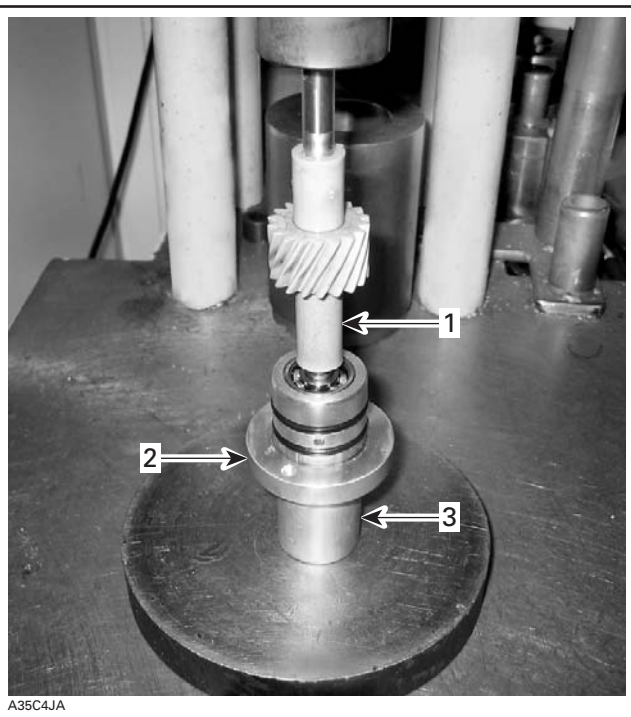

1. Pump shaft
2. Bearing carrier
3. Ceramic seal installer

Remove oil seal protector from pump shaft.

Bearing Carrier and Pump Shaft Installation

Installation is the reverse of removal procedure, however pay attention to the following.

Pour 50 ml (1.7 U.S. oz) of injection oil in the cavity under crankshaft worm gear.

SERVICE PRODUCT
XPS INJECTION OIL (P/N 293 600 117)

Install pump shaft and bearing carrier in crankcase while turning shaft to mesh gears.

Tighten bearing carrier retaining screws **no. 7** to specification.

Remove all screws retaining crankcase halves together.

Separate crankcase halves and remove crankshaft.

Crankcase Cleaning

Clean all metal components in a non-ferrous metal cleaner.

Use LOCTITE CHISEL (GASKET REMOVER) (P/N 413 708 500) accordingly.

NOTICE Never use a sharp object to remove sealant as score marks incurred are harmful to crankcase sealing.

Crankcase Inspection

Check crankcase for cracks or other damages. Replace if necessary.

Crankcase Assembly

Install crankshaft in lower crankcase. See *CRANKSHAFT* for procedure.

Pour 50 ml (1.7 U.S. oz) of injection oil in the cavity under crankshaft worm gear.


SERVICE PRODUCT
XPS INJECTION OIL (P/N 293 600 117)

Apply LOCTITE 5910 (P/N 293 800 081) on crankcase halves. Proceed as follows.


NOTE: IMPORTANT: The total assembly sequence, including sealing compound application and crankcase torquing, must be performed within 10 minutes.

Use a plexiglass plate and apply some sealant on it. Use a 50 mm - 75 mm (2 in - 3 in) soft rubber roller and spread the sealant to get a thin uniform coat on the plate (spread as necessary).

When ready, apply the sealant on crankcase mating surfaces.

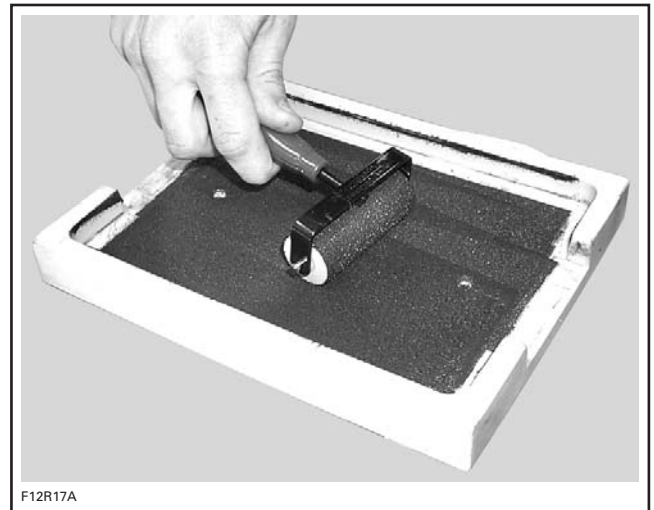

TYPICAL

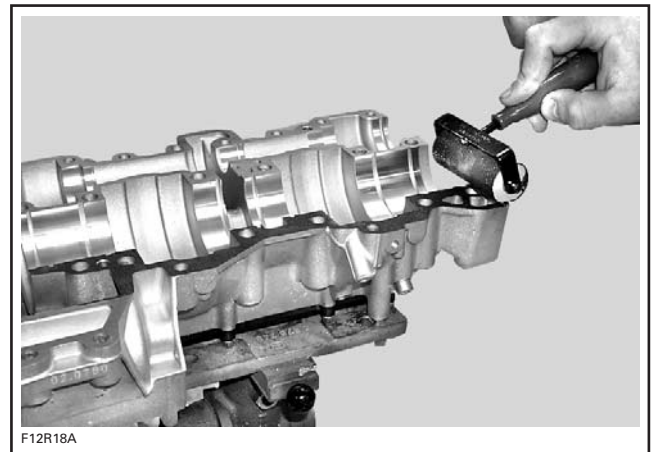

TYPICAL - CRANKCASE SEALANT APPLICATION


NOTE: If you do not use the roller method, you may use your finger to uniformly distribute the sealant.

Assemble both crankcase halves.

Install M8 screws (16x) in crankcase and tighten to specification as per illustrated sequence.

CRANKCASE M8 SCREWS TIGHTENING SEQUENCE	
FIRST STEP	18 N•m (159 lbf•in)
FINAL STEP	29 N•m (21 lbf•ft)


Subsection XX (BOTTOM END (600 HO E-TEC))

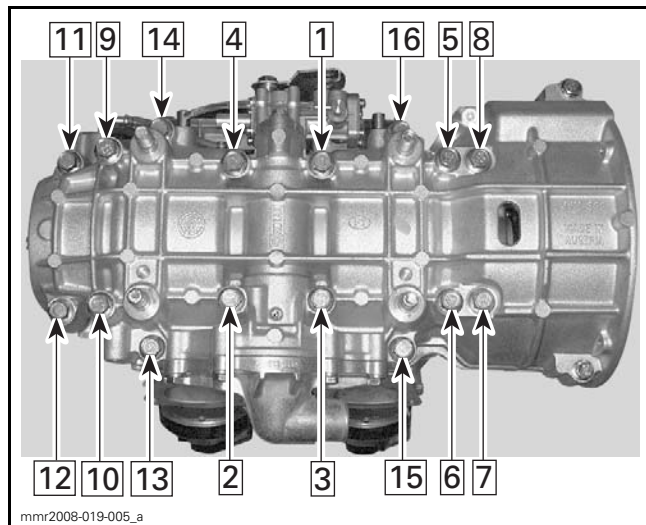


TYPICAL - TIGHTENING SEQUENCE - M8 SCREWS

Install M6 screws (5x) in crankcase and tighten to specification as per illustrated sequence.

CRANKCASE M6 SCREWS	
Tightening Torque	9 N•m (80 lbf•in)

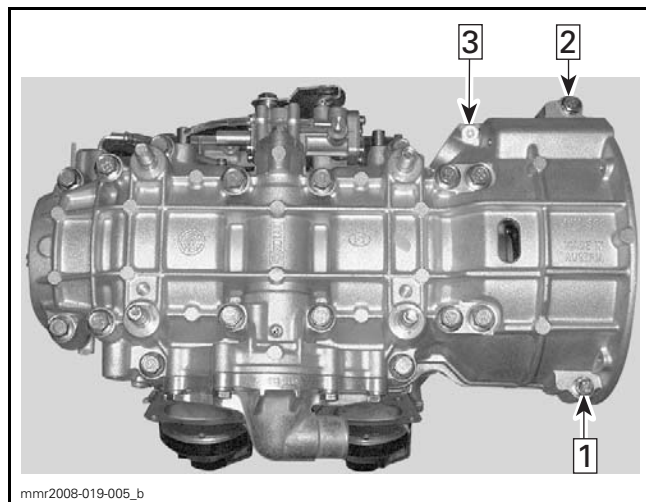

TYPICAL - TIGHTENING SEQUENCE - M6 SCREWS

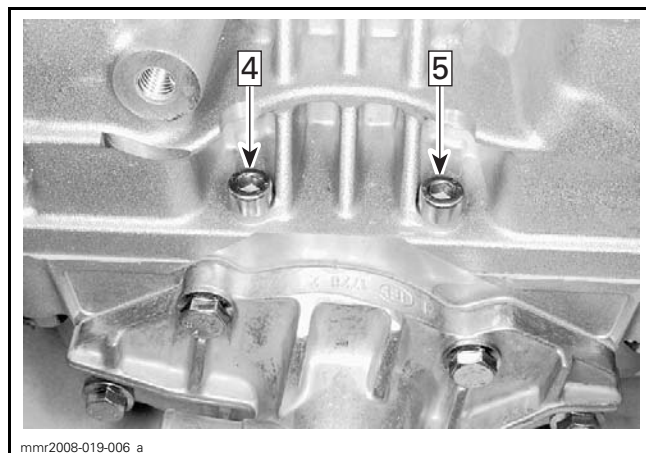

TIGHTENING SEQUENCE - M6 SCREWS

Install PTO oil seal cover no. 1 and tighten screws to specification.

OIL SEAL COVER SCREWS	
Tightening Torque	11 N•m (97 lbf•in)

NOTE: It is recommended to test engine cooling system for leaks after engine assembly, before installation in vehicle. Refer to *COOLING SYSTEM* subsection.

CRANKSHAFT

Crankshaft Removal

To remove crankshaft, use crankcase disassembly procedure.

Crankshaft Inspection

Check crankshaft bearings. They must turn smoothly and without noise. Replace as required.



Refer to table below to find crankshaft dimension specifications. For dimension measurement procedures, refer to *ENGINE MEASUREMENT*.


ENGINE MEASUREMENT	TOLERANCES		
	NEW PARTS (min.)	(max.)	WEAR LIMIT
Crankshaft deflection on PTO side	N.A.	0.06 mm (.002 in)	N.A.
Crankshaft deflection on MAG side	N.A.	0.05 mm (.002 in)	N.A.
Crankshaft deflection in center of crankshaft	N.A.	0.08 mm (.003 in)	N.A.
Connecting rod big end axial play			
	0.28 mm (.011 in)	0.68 mm (.027 in)	1.20 mm (.047 in)
Crankshaft end-play	0.10 mm (.004 in)	0.30 mm (.012 in)	N.A.
N.A.: Not Applicable			

Crankshaft Bearing Removal

NOTE: Normally, it takes approximately 10 minutes to heat up a bearing. If replacing bearing, it's recommended to start the bearing heating process prior to removal operation. See *BEARING HEATING* procedure further.



To remove bearings **no. 2** and **no. 3** from crankshaft **no. 4**, install half rings and puller ring on the outer bearing race.

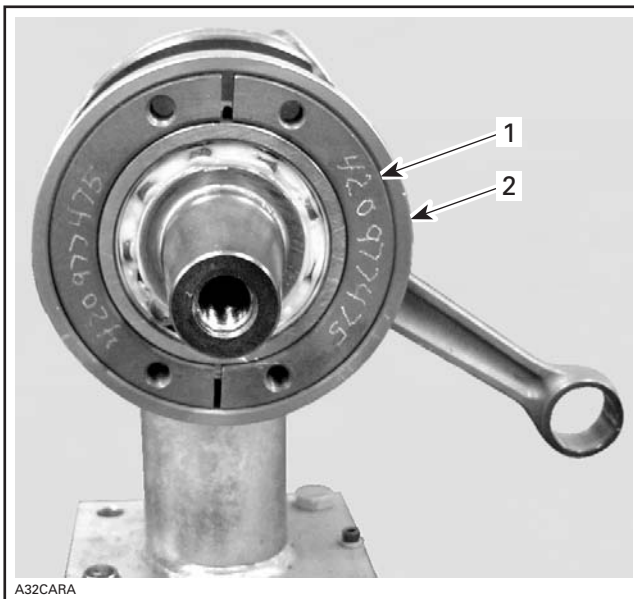REQUIRED TOOL	
HALF-RINGS (P/N 420 977 479)	
PULLER RING (P/N 420 977 494)	



1. Half ring
2. Puller ring


NOTE: Apply some grease on crankshaft end to hold proper crankshaft protector in place.

REQUIRED TOOL	
PTO side	
CRANKSHAFT PROTECTOR (PTO) (P/N 420 876 552)	
MAG side	
CRANKSHAFT PROTECTOR (MAG) (P/N 420 876 557)	

Install bearing puller on the half rings.

REQUIRED TOOL	
CRANKSHAFT BEARING PULLER (P/N 529 036 004)	

Secure bearing puller in a vise by one of its ribs.

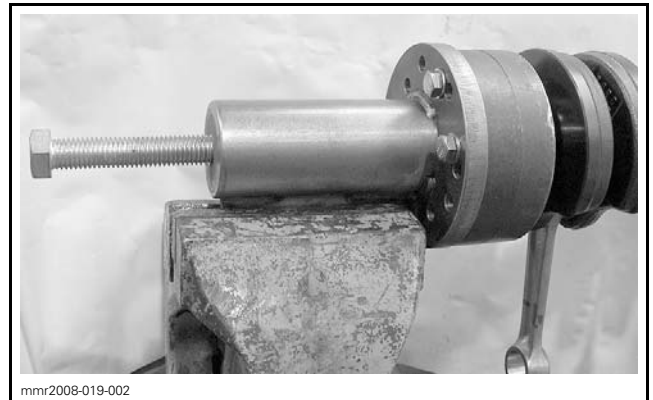


mmr2008-019-002
BEARING PULLER SECURED IN THE VISE

NOTICE Never use an air impact tool for tightening the puller bolt. Lubricate bolt with XPS LUBE (P/N 293 600 016) to avoid damaging the threads.

Screw in puller bolt until bearing comes out.

Follow same procedure for inner bearing.

NOTE: In the case of a damaged bearing or reduced clearance between crankshaft counterbalance and bearing, or on the MAG side bearing, use SNAP-ON BEARING SEPARATOR (P/N CJ 951) or SPX/OTC BEARING SEPARATOR (P/N 1124) to facilitate removal.

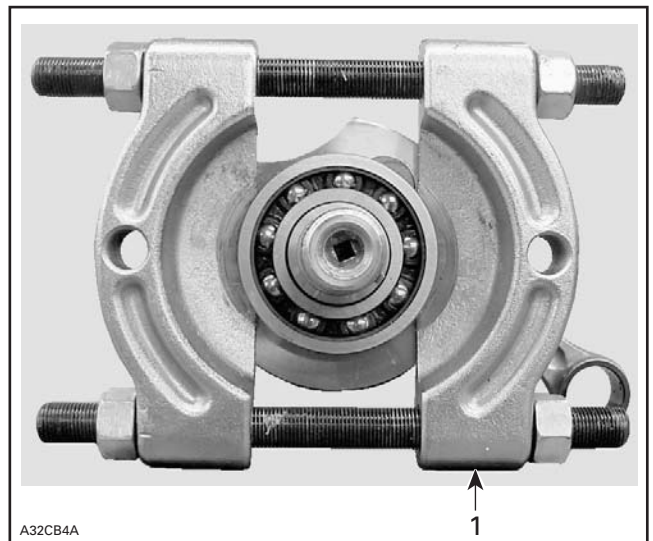


A32CB4A
1. Bearing separator

Crankshaft Bearing Installation

Inspect crankshaft ends for damage.


Clean crankshaft ends with sand paper no. 180 to remove possible seal marks and debris.

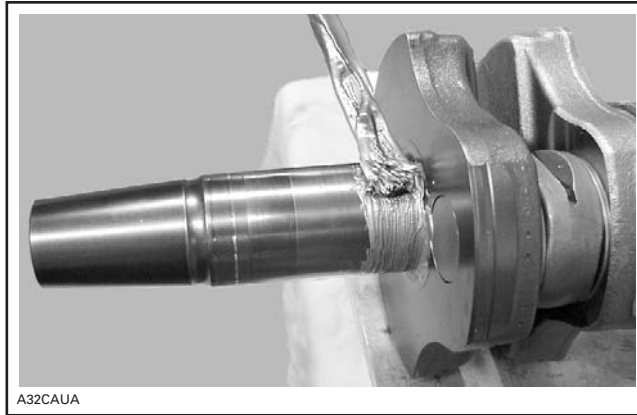

ANTISEIZE LUBRICANT APPLICATION

Bearing Heating

Heat bearing(s) as per following instructions to ease installation. If required, put a suitable plate or shim between integrated seal and heating surface to avoid direct contact.

REQUIRED TOOL	
BEARING HEATER (P/N 529 035 969)	



Remove all residue using PULLEY FLANGE CLEANER (P/N 413 711 809).

Apply LOCTITE 767 (ANTISEIZE LUBRICANT) (P/N 293 800 070) on crankshaft bearing mounting area.



NOTICE Bearing(s) should not be heated to more than 80°C (176°F). Do not heat bearing(s) with direct flame, or with a heat gun or soaked in a heated oil bath. Inappropriate bearing(s) heating may result in inner seals or cage failure.


For even heat distribution, turn bearing several times during heating process.


NOTE: Two bearings can be heated at the same time on one bearing heater.



1. Bearings

Probe side of bearing inner race with temperature indicator stick. Temperature stick will liquefy when bearing reaches proper temperature.

REQUIRED TOOL	
TEMPERATURE INDICATOR STICK (P/N 529 035 970)	

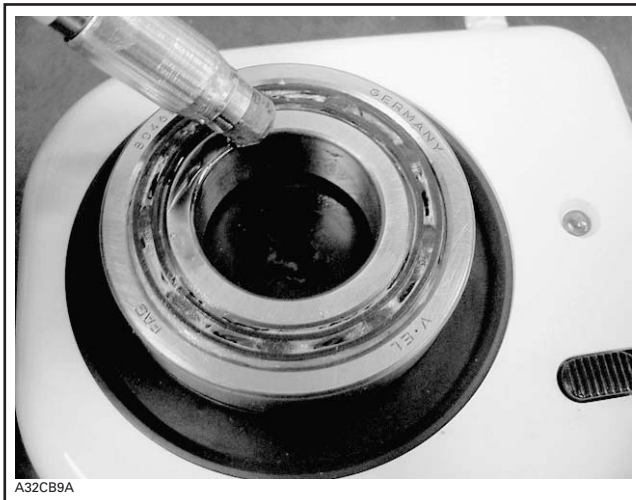


⚠ WARNING
Do not touch heated bearing with bare hands. Always wear heat resistant gloves before handling heated bearing(s).


NOTICE Never reinstall a bearing that has been removed.

PTO Side Bearing Installation

Slide inner PTO bearing onto crankshaft with the integrated seal facing crankshaft. Push bearing to end position.

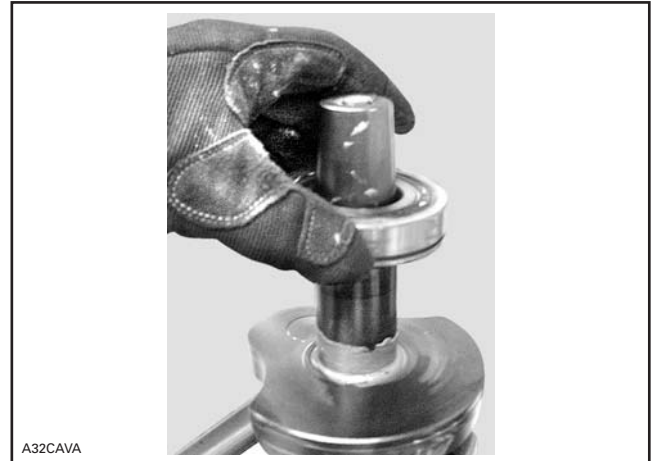




NOTE: Heated bearing should slide easily onto crankshaft. If required, push on the bearing inner race. Pay special attention to correct positioning of the locating pins and/or retaining discs.

REQUIRED TOOL	
BEARING INSTALLER (PTO) (P/N 529 035 990)	

Install retaining discs.

Install support plate with distance gauge.

REQUIRED TOOL	
SUPPORT PLATE (P/N 529 035 976)	
CRANKSHAFT DISTANCE GAUGE (P/N 529 035 968)	

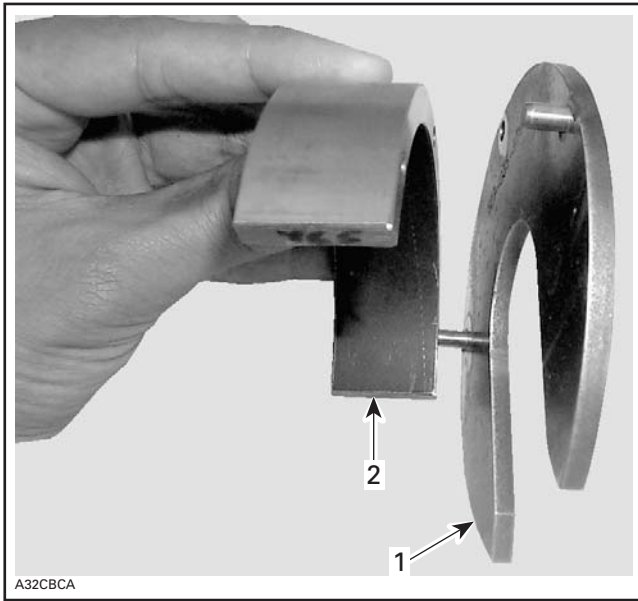

1. Support plate
2. Distance gauge

Install bearing locator tool.



Slide second bearing onto crankshaft until it contacts the first one.



Slide heated outer PTO bearing onto crankshaft until it contacts the distance gauge.

MAG Side Bearing Installation

Slide first MAG bearing onto crankshaft with the **integrated seal facing crankshaft** until it bottoms on crankshaft shoulder.


NOTE: Heated bearing should slide easily onto crankshaft. If required, push on the bearing inner race using appropriate tool.



Crankshaft Installation

At crankshaft installation, position location pins as illustrated.


REQUIRED TOOL	
BEARING INSTALLER (PTO) (P/N 529 035 990)	

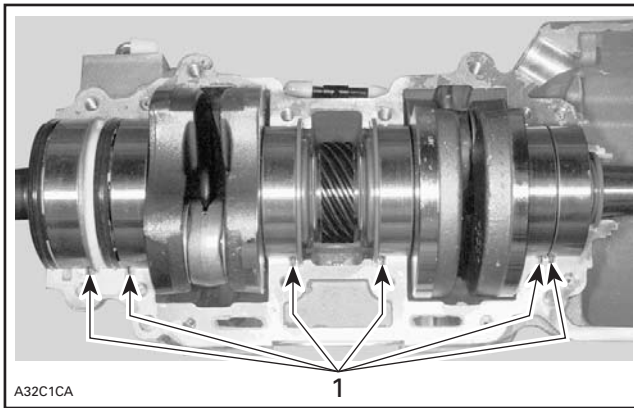

TYPICAL
1. Position pins

Pour 50 ml (1.7 U.S. oz) of injection oil in the pan under worm gear as per illustration.

SERVICE PRODUCT
XPS INJECTION OIL (P/N 293 600 117)

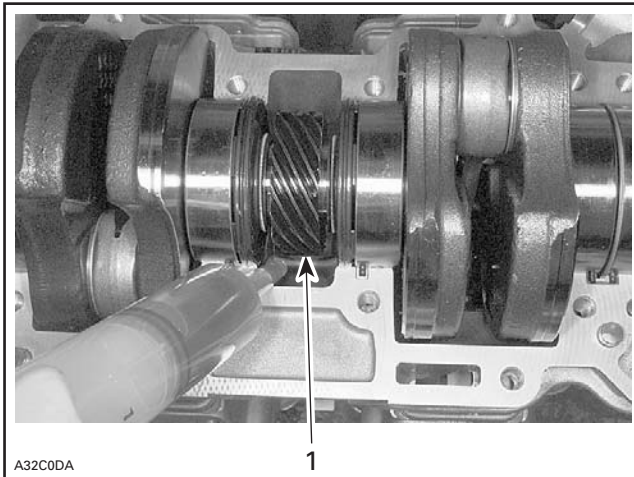

1. Worm gear oil bath

Apply recommended service product as per following procedure:


NOTICE Use only the recommended service product. Make sure not to push grease between the outer bearing race and crankcase half.

SERVICE PRODUCT	
30 ml ± 5 ml (1 U.S. oz ± .2 U.S. oz)	ISOFLEX GREASE TOPAS NB 52 (P/N 293 550 021)

NOTE: The 50 g tube corresponds to 50 ml of grease.

NOTICE Do not exceed the recommended amount of grease.

Fill inner side of PTO side bearing with grease (about 10 ml (.3 U.S. oz)).

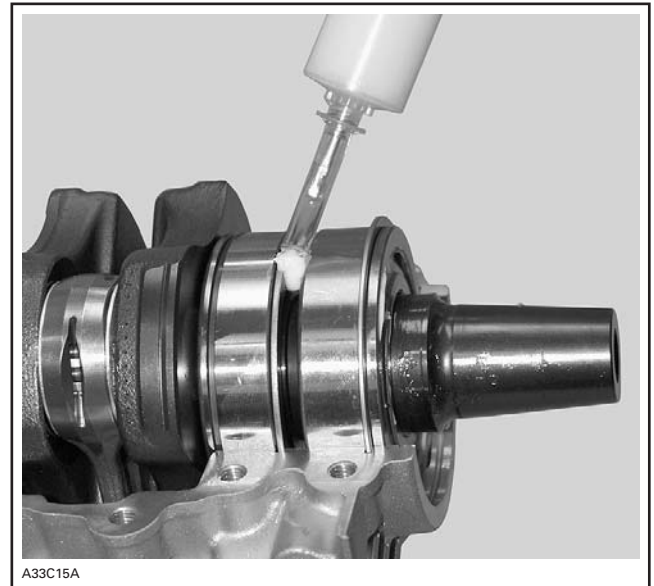


PTO SIDE BEARING FILLED WITH GREASE

With the syringe, fill the outer ball bearing and inner side of outer seal with the remaining grease.



BALLS COATED WITH A SEAM OF GREASE

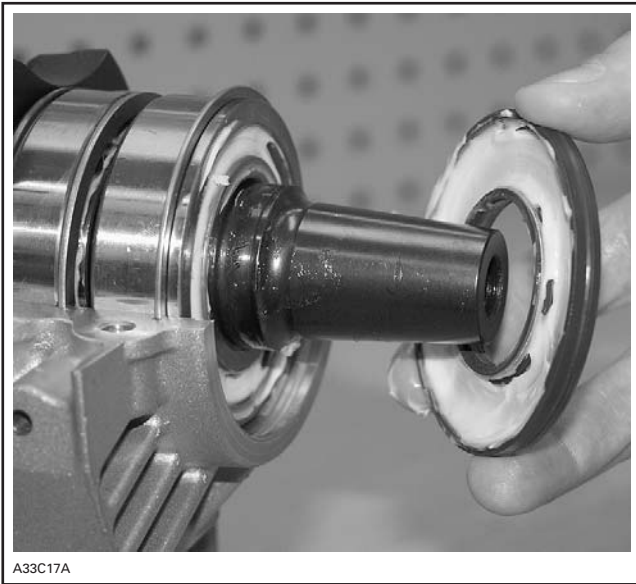

TYPICAL — FILL WITH GREASE AND SET IN PLACE

Apply 6 ml (.2 U.S. oz) of same grease to MAG side outer bearing.

NOTE: If replaced with new bearing, do not apply grease as new bearings come with grease already applied.

Proceed with crankcase assembly. Refer to *CRANKCASE* subsection.



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

BOTTOM END (800R E-TEC)

SERVICE TOOLS

Description	Part Number	Page
BEARING HEATER	529 035 969	13
CERAMIC SEAL INSTALLER.....	529 036 014	7-8
CRANKSHAFT BEARING PULLER	529 036 004	12
DISTANCE GAUGE	529 036 060	15
HANDLE	420 877 650	6
OIL SEAL GUIDE.....	529 035 822	7
OIL SEAL PUSHER.....	529 035 757	6
TEMPERATURE INDICATOR STICK.....	529 035 970	14

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
SNAP-ON BEARING SEPARATOR.....	CJ 951	13
SNAP-ON MANUAL IMPACT DRIVER	PIT120	8
SPX/OTC BEARING SEPARATOR.....	1124	13

SERVICE PRODUCTS

Description	Part Number	Page
ISOFLEX GREASE TOPAS NB 52	293 550 021	16
LOCTITE 243 (BLUE).....	293 800 060	4, 8
LOCTITE 5910	293 800 081	9
LOCTITE 767 (ANTISEIZE LUBRICANT)	293 800 070	13
LOCTITE CHISEL (GASKET REMOVER)	413 708 500	9
PULLEY FLANGE CLEANER	413 711 809	13
XPS LUBE.....	293 600 016	12

GENERAL

Engine removal is required to repair bottom end except for the water pump impeller.

All oil seals and gaskets must be discarded and replaced with new ones when crankcase is split.

Clean all metal components in a non-ferrous metal cleaner.

To measure internal parts, refer to *ENGINE MEASUREMENT* subsection.

During assembly or installation:

- Use torque values and service products as shown in the exploded view.
- Clean threads before applying a threadlocker. Refer to the *INTRODUCTION* subsection.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to.

Locking devices when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.) must be replaced with new ones.

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

⚠ WARNING

Always disconnect the magneto connector prior to:


- Disconnecting any fuel hose.
 - Removing a fuel injector.
 - Removing a spark plug cable or spark plug.
- Otherwise, if the engine is cranked, fuel vapors may ignite in presence of a spark creating a fire hazard.

ENGINE BREAK-IN

NOTICE After a repair involving major parts replacement, a break-in period must be observed.

1. Follow *OPERATOR'S GUIDE* recommendation relating to break-in.
2. Restart break-in period in B.U.D.S. as follows:
 - 2.1 Ensure to use the latest B.U.D.S. software specific to the E-TEC engine.
 - 2.2 Select **Setting** tab.

- 2.3 Click on **Restart** button in **Restart Break-in** box.

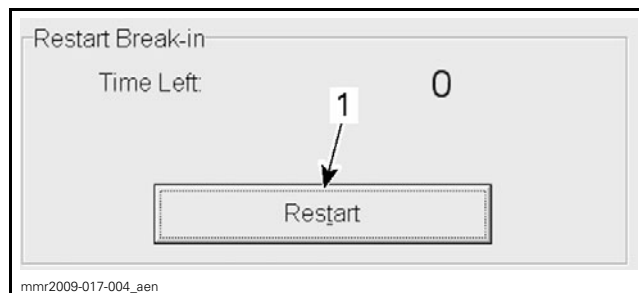

1. Click on **Restart**

PROCEDURES

WATER PUMP

Water Pump Access

Refer to *BODY* subsection and remove:

- Both side panel
- Upper body module.

Refer to *EXHAUST SYSTEM* subsection and remove:

- Tune pipe
- Muffler.


Remove acoustic panel.

Put a large drain pan under vehicle bottom pan.

Remove starter, refer to *STARTING SYSTEM* subsection.

Water Pump Removal

Remove water pump cover.

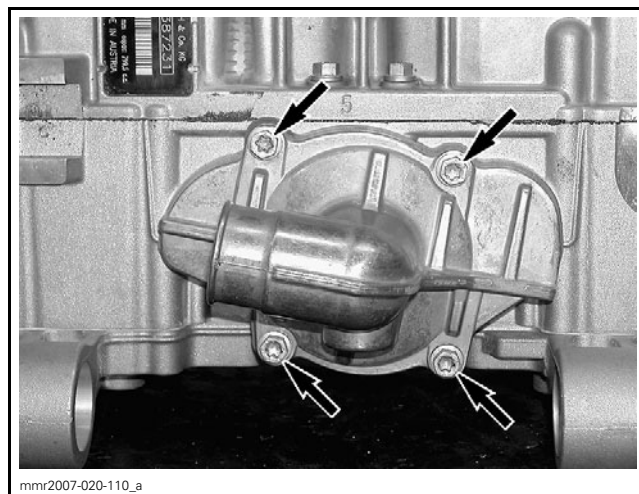


TYPICAL


Remove impeller by turning it counterclockwise.

Subsection XX (BOTTOM END (800R E-TEC))

NOTICE Be careful not to damage impeller fins.

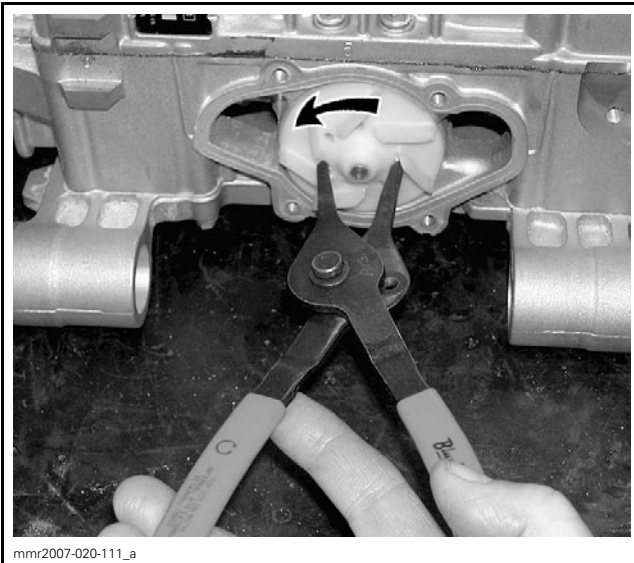

TYPICAL

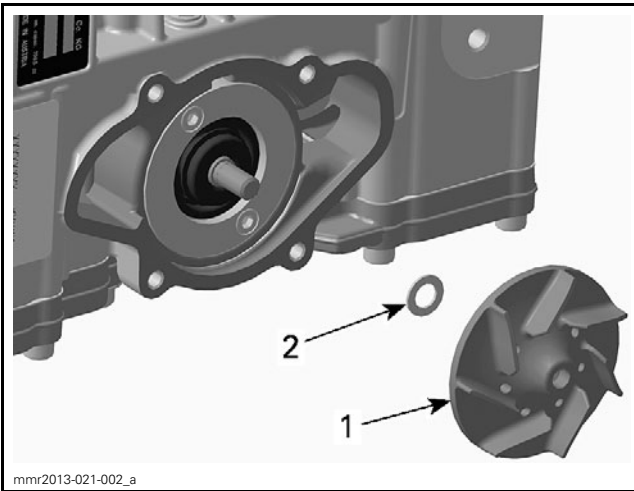

1. Impeller
2. Washer, 1 mm (.039 in) thick

Clean gasket surfaces of water pump cover and crankcase.

Water Pump Installation

The installation is the reverse of removal procedure. However, pay attention to the following details.

Ensure to use the 1 mm (.039 in) thick washer.

Tighten impeller to specification.

TIGHTENING TORQUE	
Impeller	15 N•m (133 lbf•in) + LOCTITE 243 (BLUE) (P/N 293 800 060)

Install a **NEW** water pump cover gasket.


Tighten screws of water pump cover to specification in a crisscross sequence.

TIGHTENING TORQUE	
Water pump cover screws	11 N•m (97 lbf•in)

BEARING CARRIER AND PUMP SHAFT

Bearing Carrier and Pump Shaft Removal


Remove cover plate and discard gasket.

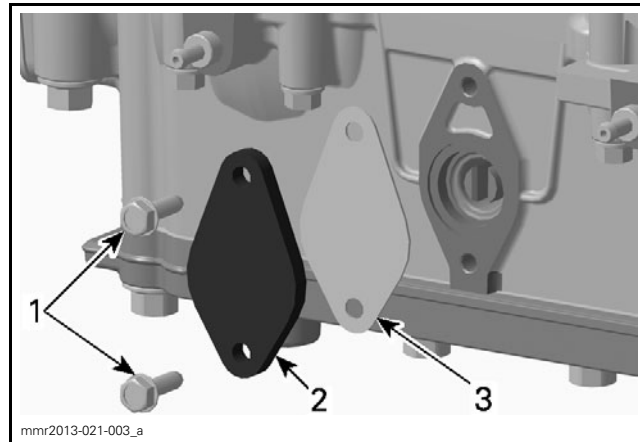

1. Screws
2. Cover plate
3. Gasket


Remove *WATER PUMP*. See procedure in this subsection.

Remove bearing carrier retaining screws.

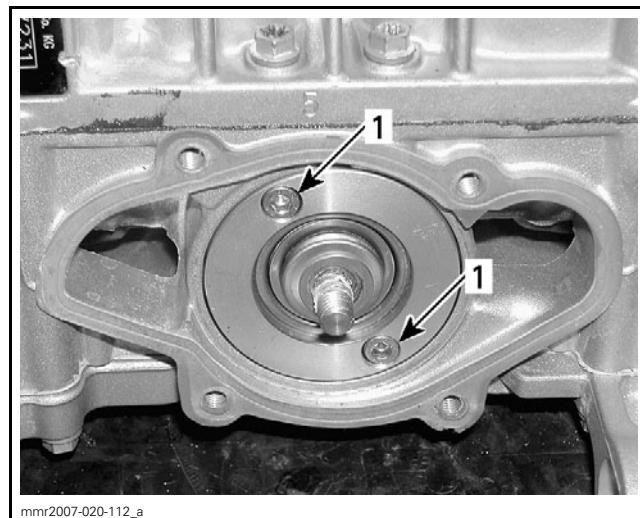


TYPICAL
1. Screws

Push pump shaft out while turning shaft to release it from crankshaft worm gear.

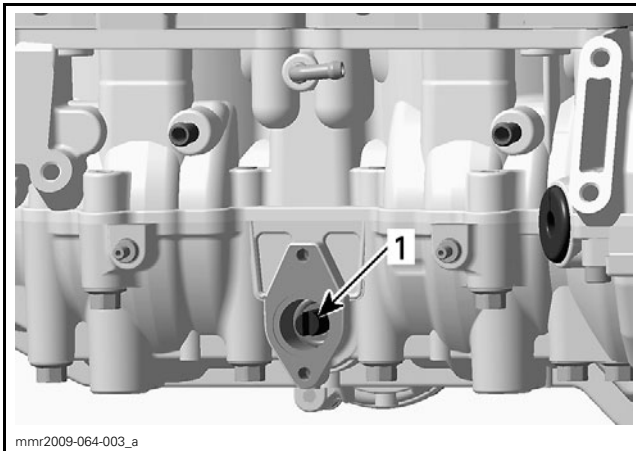

TYPICAL
1. Push out shaft here

Extract bearing carrier and pump shaft.

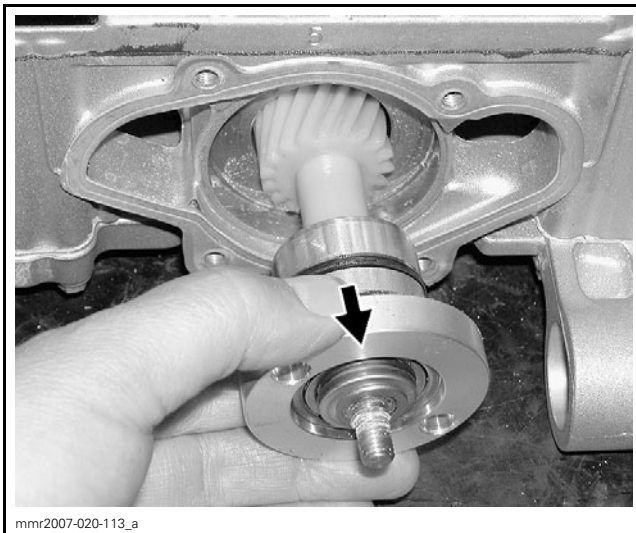

TYPICAL


Bearing Carrier and Pump Shaft Disassembly

NOTE: The pump shaft cannot be disassembled without damaging the ceramic seal and oil seal.

Protect the threads of shaft with a suitable M8 nut.

Properly support bearing carrier.

Push pump shaft out using a press.

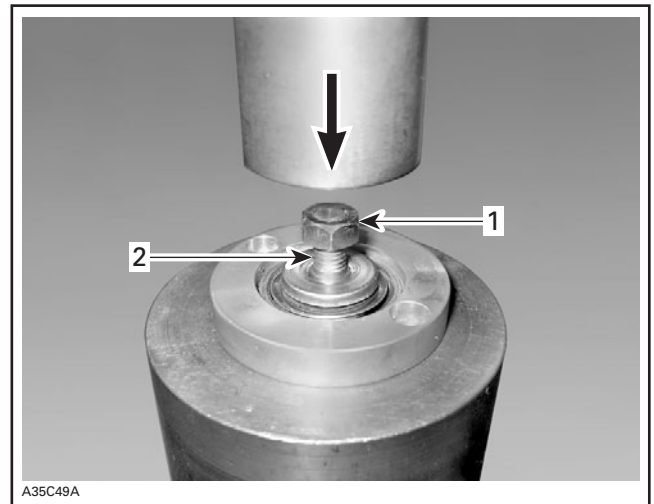

TYPICAL
1. M8 nut
2. Shaft


NOTICE Pay attention not to damage the bearing carrier during disassembly. Marks or other damages will lead to coolant or oil leakage.

Pry inner part of ceramic seal out.



Push out bearing from the bearing carrier using an appropriate pusher.

Subsection XX (BOTTOM END (800R E-TEC))

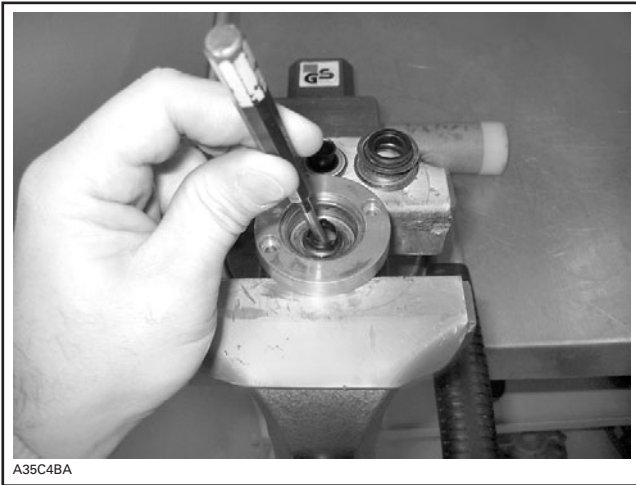


BEARING UNDERNEATH OUTER PART OF ROTARY SEAL

Push oil seal out.




Carefully press the outer part of ceramic seal out.

NOTE: Use a mandrel with a diameter of approximately 16 mm (.63 in).

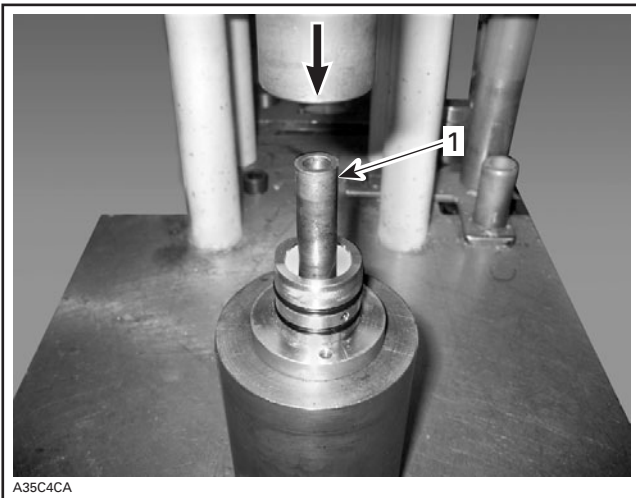


1. 16 mm (.63 in) mandrel

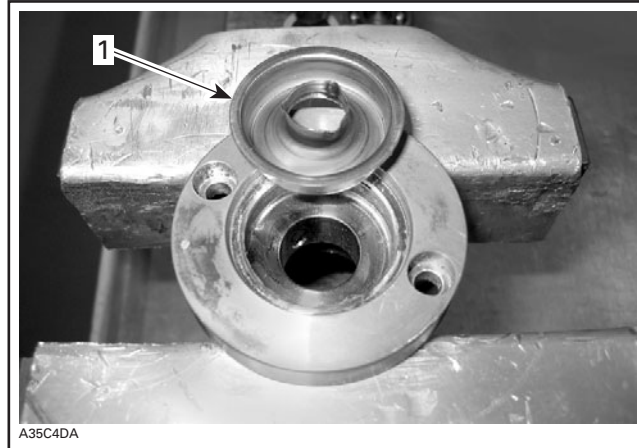

1. Outer part of ceramic seal

Remove sealant from bearing carrier with sand paper no. 180.

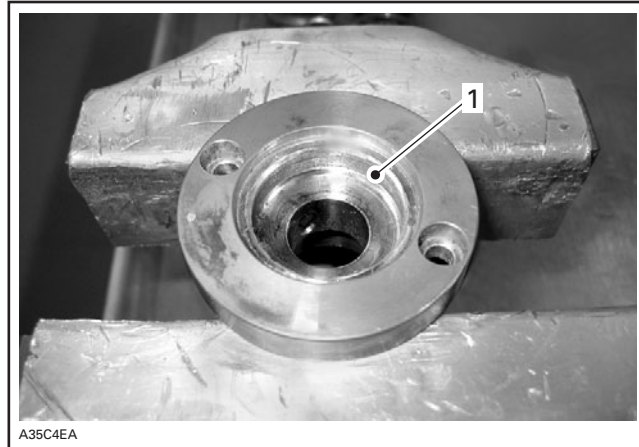



1. Remove sealant


Bearing Carrier and Pump Shaft Reassembly

Reverse disassembly procedure and pay attention to the following.

NOTE: Never put oil in the press fit area of the oil seal and ceramic seal.

Push the **NEW** oil seal in bearing carrier.

REQUIRED TOOL	
HANDLE (P/N 420 877 650)	
OIL SEAL PUSHER (P/N 529 035 757)	

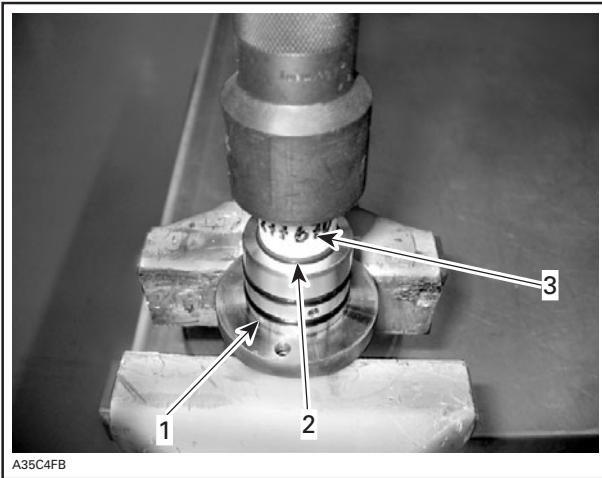


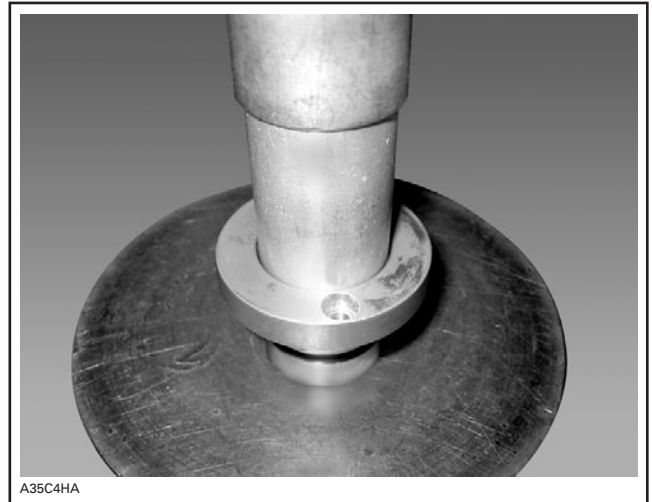
1. Bearing carrier
2. Oil seal
3. Oil seal pusher

Press bearing into bearing carrier.




Push the **NEW** ceramic seal in bearing carrier.


REQUIRED TOOL	
CERAMIC SEAL INSTALLER (P/N 529 036 014)	



NOTICE Never use a hammer for the ceramic seal installation. Only use a press to avoid damaging the ceramic component.

Install oil seal guide on pump shaft.

REQUIRED TOOL	
OIL SEAL GUIDE (P/N 529 035 822)	

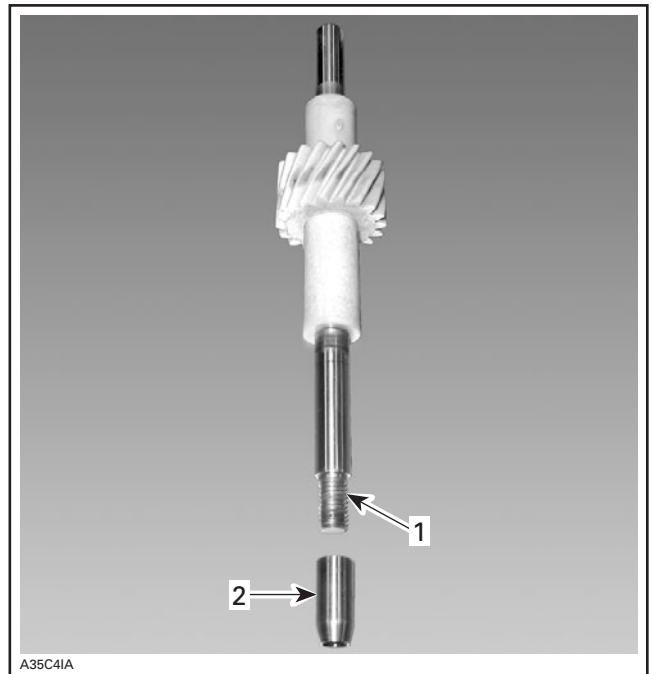


1. Pump shaft
2. Oil seal guide

Press pump shaft into the bearing carrier with the appropriate force.

NOTICE Inadequate force will damage the oil seal and bearing.

Subsection XX (BOTTOM END (800R E-TEC))

NOTE: During installation support the ceramic seal as shown on the following illustration.

REQUIRED TOOL	
CERAMIC SEAL INSTALLER (P/N 529 036 014)	

TIGHTENING TORQUE	
Cover plate screws	6 N•m (53 lbf•in) + LOCTITE 243 (BLUE) (P/N 293 800 060)

CRANKCASE

Crankcase Disassembly

Remove engine from vehicle. Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.


Remove cylinder head and cylinder-block. Refer to *TOP END (800R E-TEC ENGINES)* subsection.

Remove magneto housing. Refer to *MAGNETO SYSTEM* subsection.

Remove drive pulley. Refer to *DRIVE PULLEY* subsection.


Remove PTO oil seal cover.

NOTE: Tap screw heads to break the Loctite bond or use a SNAP-ON MANUAL IMPACT DRIVER (P/N PIT120).

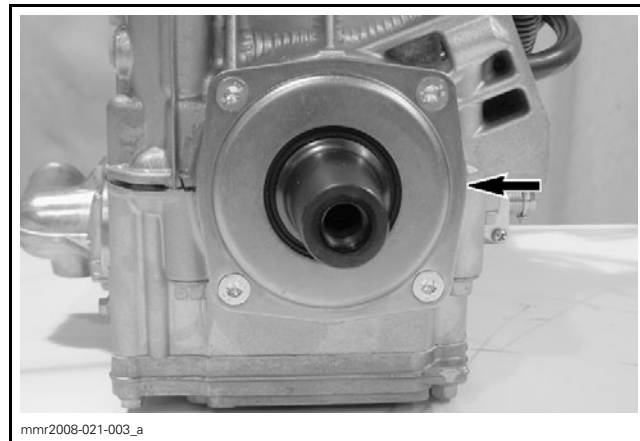

TYPICAL - PTO OIL SEAL COVER

Remove base plate.

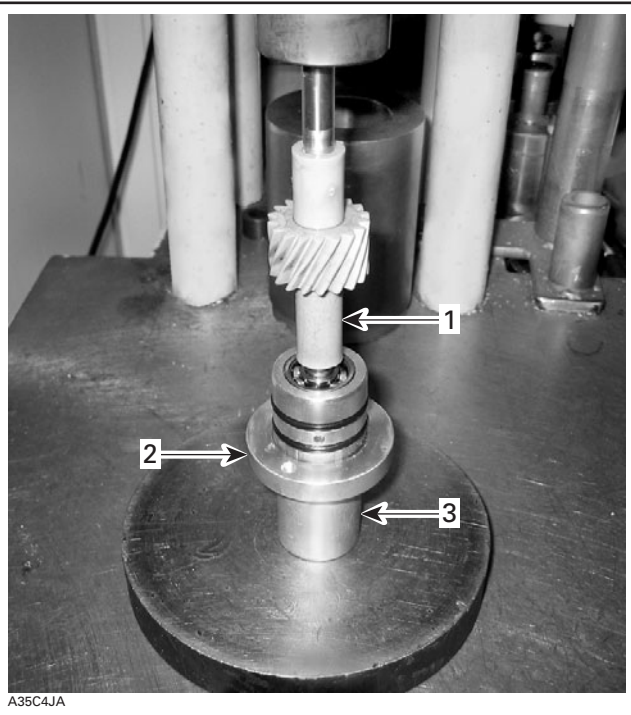

1. Pump shaft
2. Bearing carrier
3. Ceramic seal installer

Remove oil seal guide from pump shaft.

Bearing Carrier and Pump Shaft Installation

The installation is the reverse of removal procedure, however pay attention to the following.

Pour 50 ml (1.7 U.S. oz) of injection oil in the pan under crankshaft worm gear.


Install pump shaft and bearing carrier in crankcase while turning shaft to mesh gears.

Tighten bearing carrier retaining screws to specification.

TIGHTENING TORQUE	
Bearing carrier screws	6 N•m (53 lbf•in)

Install cover plate and **NEW** gasket.


Tighten cover plate screws to specification.

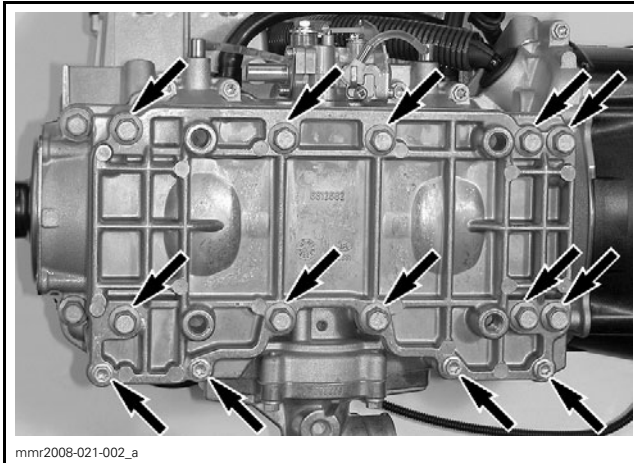


TYPICAL - BASE PLATE RETAINING SCREWS

NOTICE Whenever base plate is removed, crankcase must be opened, cleaned, and re-sealed.

Remove engine front supports.
Remove crankcase screws.

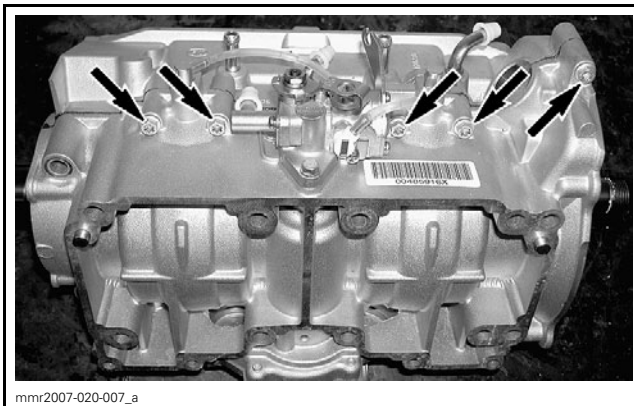


CRANKCASE SCREWS - OIL INJECTION PUMP SIDE

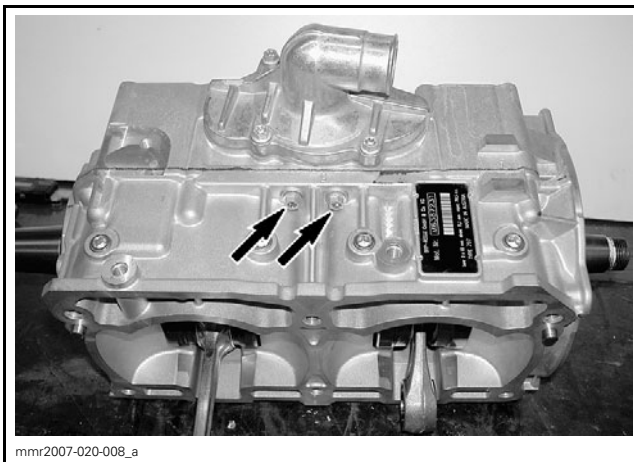


TYPICAL - CRANKCASE SCREWS - WATER PUMP SIDE

Split crankcase.

NOTE: To prevent damage to crankcase mating surfaces, use prying lugs to "unstick" crankcase.

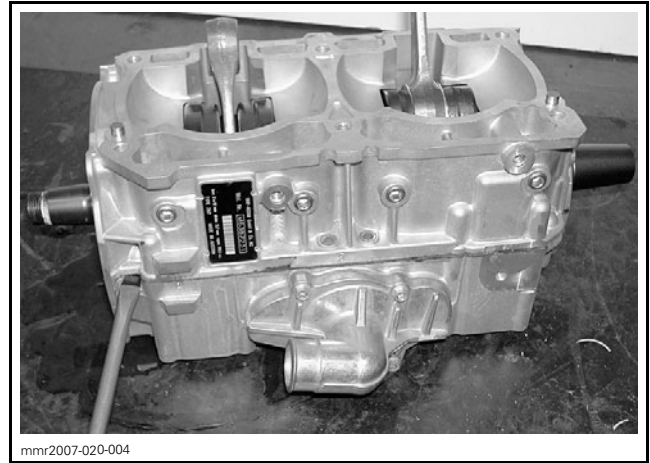

PRYING LUGS

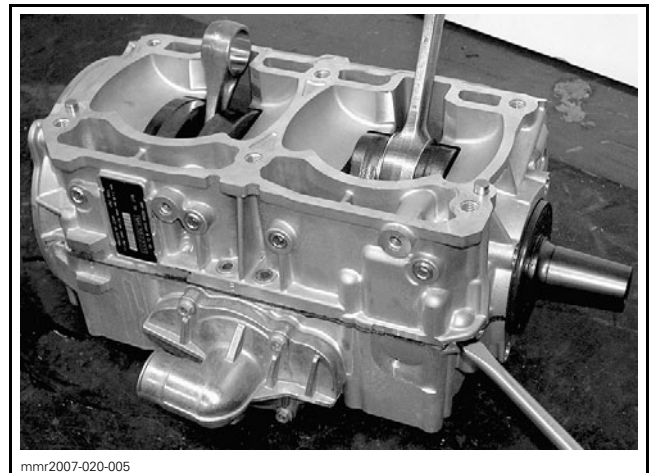

PRYING LUGS

Remove crankshaft assembly.

Crankcase Cleaning

Clean all metal components in a non-ferrous metal cleaner. Use LOCTITE CHISEL (GASKET REMOVER) (P/N 413 708 500) accordingly.

NOTICE Never use a sharp object to remove sealant as score marks incurred are harmful to crankcase sealing.

Crankcase Inspection

Check crankcase for cracks or other damages. Replace if necessary.

Crankcase Assembly



Install crankshaft in lower crankcase. See *CRANKSHAFT* for procedure.

Apply LOCTITE 5910 (P/N 293 800 081) on crankcase halves as per following procedure.

NOTE: The total assembly sequence, including sealing compound application and crankcase torquing, must be performed within 10 minutes.

Subsection XX (BOTTOM END (800R E-TEC))

Use a plexiglass plate and apply some sealant on it. Use a 50 mm - 75 mm (2 in - 3 in) soft rubber roller and spread the sealant to get a thin uniform coat on the plate (spread as necessary). When ready, apply the sealant on crankcase mating surfaces.

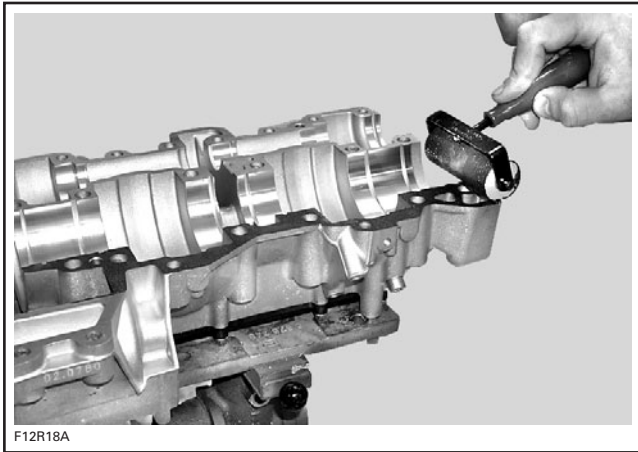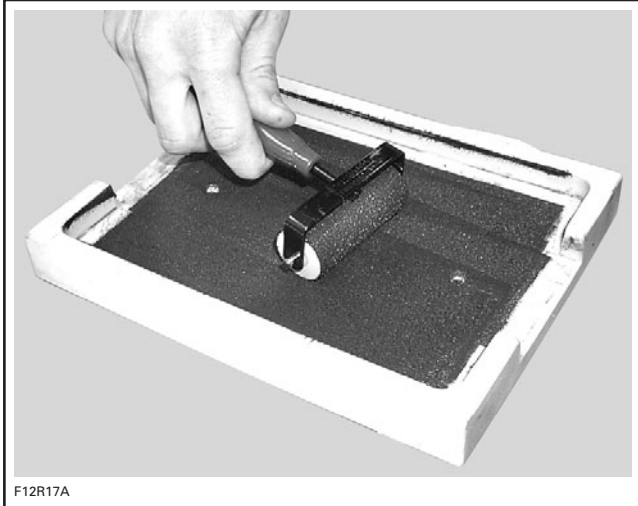


TYPICAL

NOTE: If you do not use the roller method, you may use your finger to uniformly distribute the sealant.

Spread a small bead of sealant around the water passage groove as illustrated.



Ensure dowel pins are in their holes.

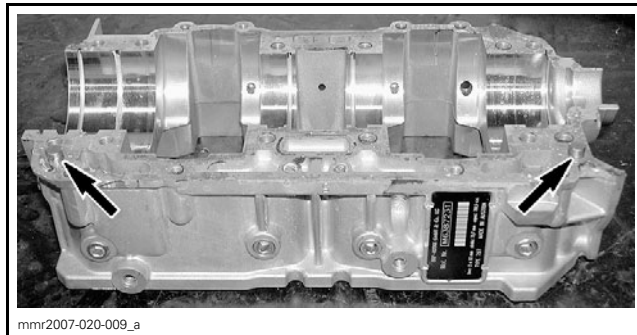


Assemble both crankcase halves.


Install M6 screws (7x) in crankcase.

Tighten M6 screws to specification as per illustrated sequence.

TIGHTENING TORQUE	
Crankcase M6 screws	11 N•m (97 lbf•in)

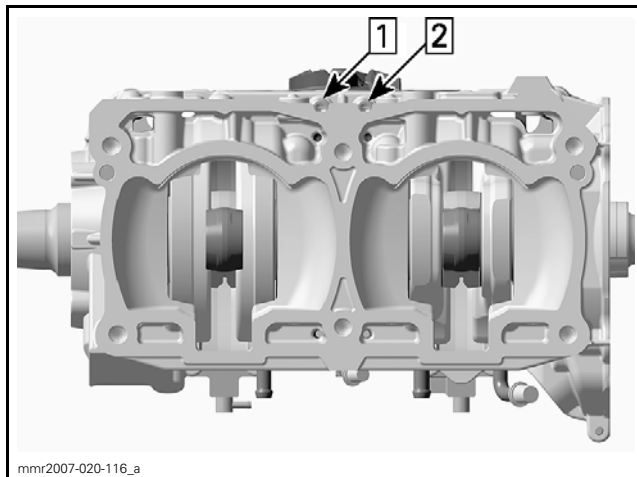


TIGHTENING SEQUENCE - TOP VIEW

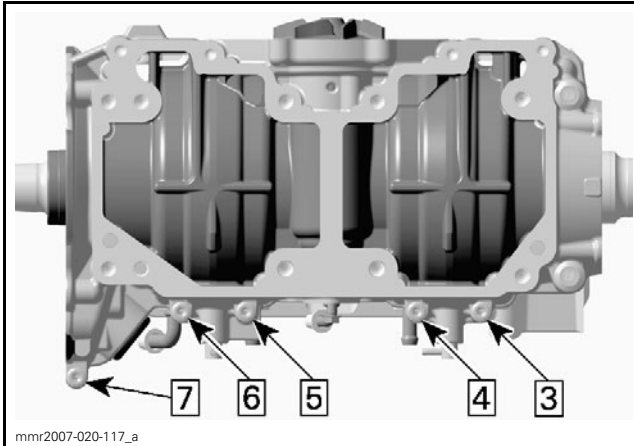

mmr2007-020-117_a

TIGHTENING SEQUENCE - BOTTOM VIEW

Ensure dowel pins are in their holes.

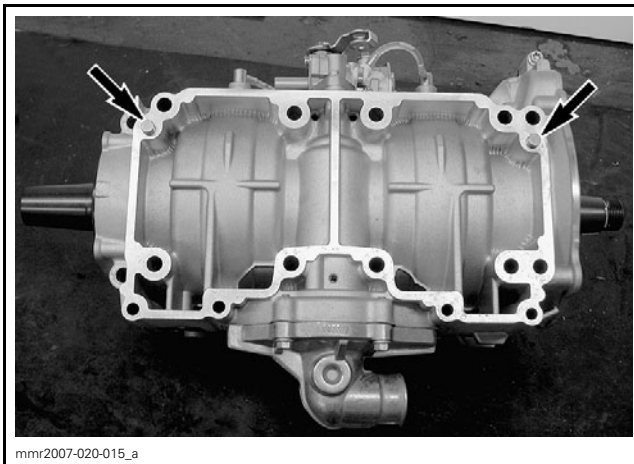

mmr2007-020-015_a

TYPICAL - BOTTOM VIEW


Install engine support.

Install a **NEW** base plate gasket.

Install M8 screws (12x) in base plate.

Tighten M8 screws to specification as per illustrated sequence.

TIGHTENING TORQUE (SEQUENCE)		
Base plate M8 screws	First step	14 N•m (124 lbf•in)
	Final step	29 N•m (21 lbf•ft)

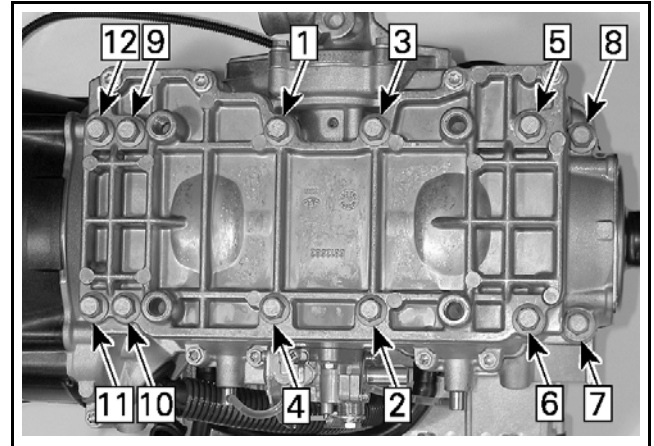


mmr2008-021-002_b

TYPICAL - TIGHTENING SEQUENCE (M8 SCREWS)

Install M6 screws (4x) in base plate.

Tighten M6 screws to specification as per illustrated sequence.

TIGHTENING TORQUE	
Base plate M6 screws	11 N•m (97 lbf•in)

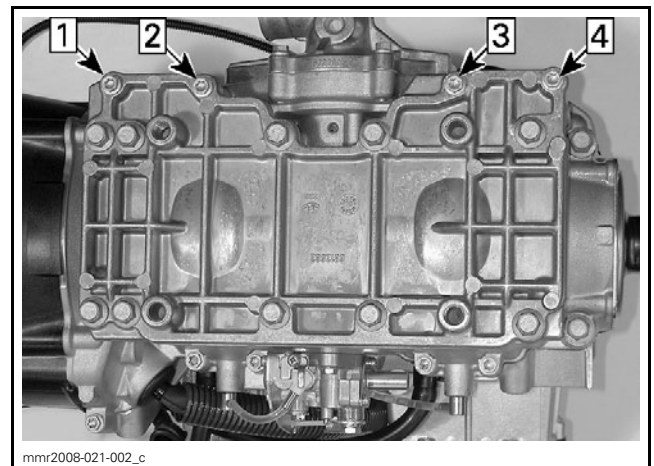

mmr2008-021-002_c

TYPICAL - TIGHTENING SEQUENCE (M6 SCREWS)

Install PTO oil seal cover.

Tighten oil seal cover to specification.

TIGHTENING TORQUE	
Oil seal cover screws	11 N•m (97 lbf•in)

NOTE: It is recommended to test engine cooling system for leaks after engine assembly, before installation in vehicle. Refer to *COOLING SYSTEM* subsection.

CRANKSHAFT

Crankshaft Removal

To remove crankshaft, use crankcase disassembly procedure.

Crankshaft Inspection

For crankshaft specifications refer to *800R E-TEC MODELS* subsection in *TECHNICAL SPECIFICATIONS* section.

For dimension measurement procedures, refer to *ENGINE MEASUREMENT* subsection.

Crankshaft Bearing Removal

NOTE: 10 minutes is required to heat up a new bearing for its installation, To save time, it is recommended to start the heating process prior to bearing removal operation. See procedure further.

To remove MAG and PTO side bearings from crankshaft, install proper half rings and puller ring on the outer bearing race.


NOTE: On MAG side, position tools on inner bearing and pull out both bearings together.

REQUIRED TOOL		
Part	MAG side	PTO side
Half rings	420 977 475	420 977 479
Puller ring	420 977 490	420 977 494
Crankshaft protector	420 876 557	420 877 414

Ensure to position bearing pin between half ring gap.



mnr2007-020-012_a
MAG SIDE

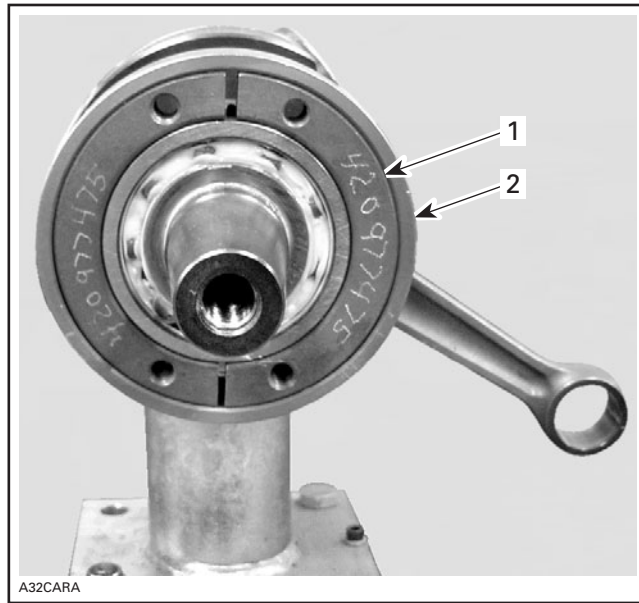

A32CARA

PTO SIDE


1. Half ring
2. Puller ring

NOTE: Apply some grease on crankshaft end to hold in place the proper crankshaft protector.

Install bearing puller on the half rings.

REQUIRED TOOL	
CRANKSHAFT BEARING PULLER (P/N 529 036 004)	

Secure the bearing puller in a vise by one of its rib.

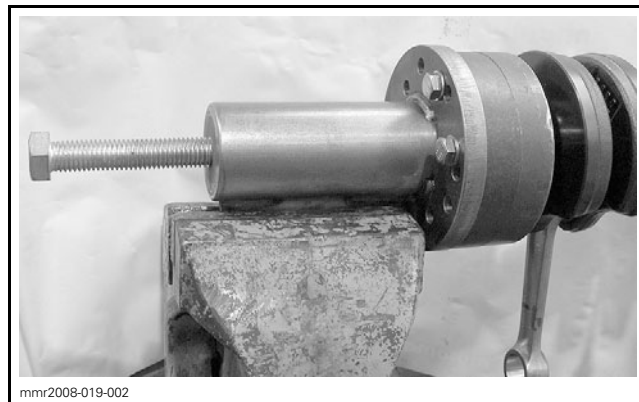


mnr2008-019-002
BEARING PULLER SECURED IN THE VISE

NOTICE Never use any air impact tool for tightening the puller bolt. Lubricate the bolt with XPS LUBE (P/N 293 600 016) to avoid damaging the threads.

Screw in the puller bolt until the bearing comes out.

Follow the same procedure for the inner bearing (PTO side).

NOTE: As an alternate method to remove bearings, use SNAP-ON BEARING SEPARATOR (P/N CJ 951) or SPX/OTC BEARING SEPARATOR (P/N 1124). Use a press to remove bearings.

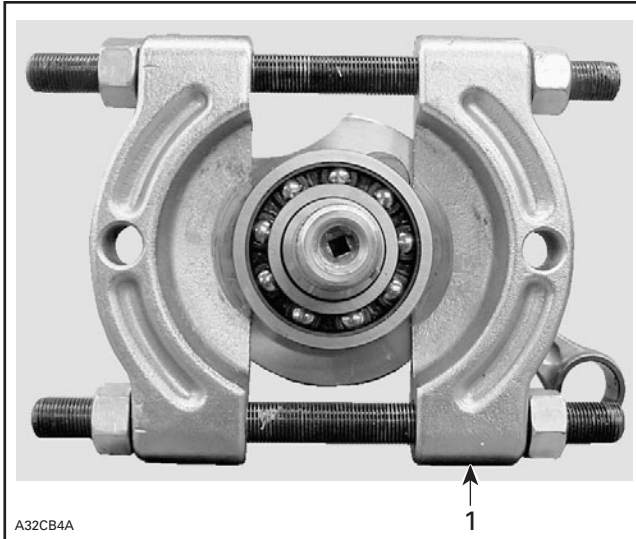

1. Bearing separator

Crankshaft Bearing Installation

Inspect crankshaft ends for damage.

Clean crankshaft ends with sand paper no. 180 to remove possible seal marks and debris.




A32CB5A



A32CBWB

Remove all residue using PULLEY FLANGE CLEANER (P/N 413 711 809).


Apply LOCTITE 767 (ANTISEIZE LUBRICANT) (P/N 293 800 070) on crankshaft bearing mounting area.

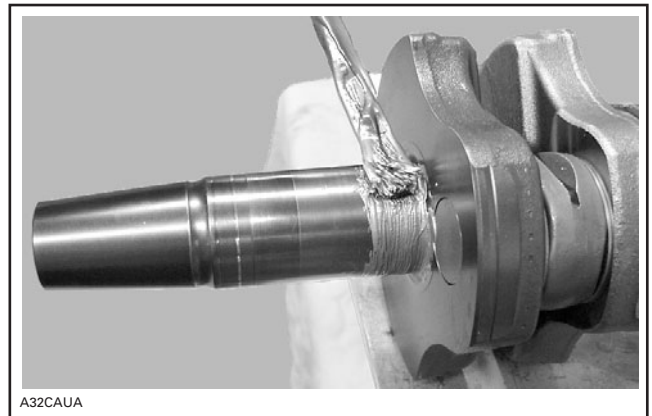


A32CAUA

Bearing Heating

Heat up the bearing(s) to ease installation. If required, put a suitable plate or shim to avoid the direct contact between the integrated seal with the heating surface.

REQUIRED TOOL	
BEARING HEATER (P/N 529 035 969)	

Subsection XX (BOTTOM END (800R E-TEC))

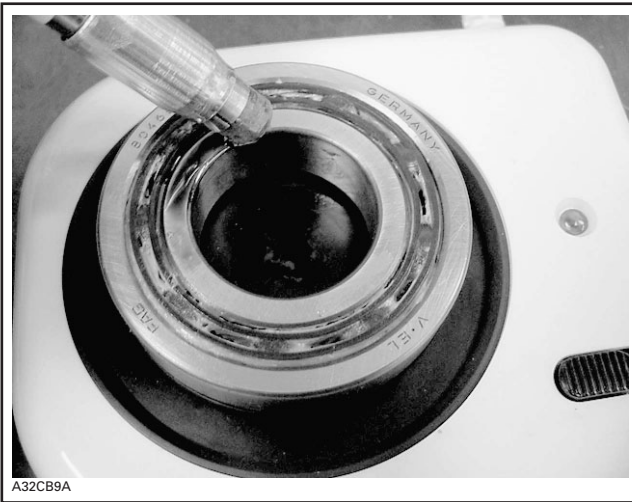

NOTICE Bearing(s) should not be heated to more than 80°C (176°F). Do not heat bearing(s) with direct flame, or with a heat gun or soaked in a heated oil bath. Inappropriate bearing(s) heating may result in inner seals or cage failure.


For even heat distribution, turn bearing several times during heating process.

NOTE: Two bearings can be heated at the same time on one bearing heater.



1. Bearings

Probe the side of the inner race of the bearing with a temperature indicator stick. Stick will liquefy when the bearing reaches the proper temperature.

REQUIRED TOOL	
TEMPERATURE INDICATOR STICK (P/N 529 035 970)	


⚠ WARNING

Do not touch heated bearing with bare hands. Always wear heat resisting gloves before handling the heated bearing(s).

NOTICE Never reinstall a bearing that has been removed.

PTO Side Bearings

Install PTO bearings on crankshaft so that locating pins will be positioned as shown.

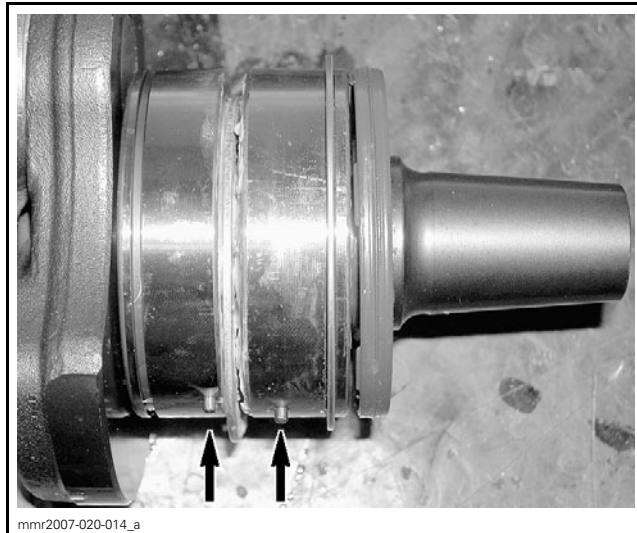

PTO SIDE


Slide the heated inner PTO bearing on crankshaft until it bottoms on crankshaft shoulder.



NOTE: Heated bearing should slide easily onto the crankshaft. If required, push with a steel tube on the inner race of the bearing.

Install retaining disc.

Install distance gauge.

REQUIRED TOOL	
DISTANCE GAUGE (P/N 529 036 060)	




TYPICAL

Slide the heated outer PTO bearing onto the crankshaft until it contacts the distance gauge.

MAG Side Bearings

Install MAG bearings on crankshaft so that locating pins will be positioned as shown.

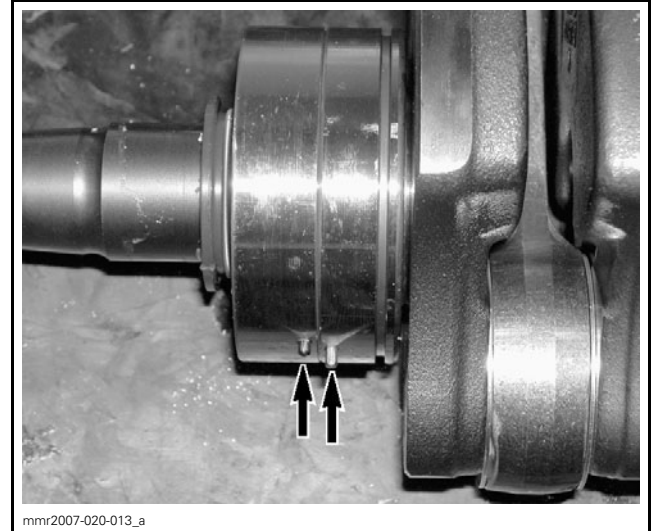

MAG SIDE

Slide the inner MAG bearing until it bottoms on crankshaft shoulder.

NOTE: Heated bearing should slide easily onto the crankshaft. If required, push with a steel tube on the inner race of the bearing.




Slide the outer bearing until it sits on inner bearing.



Crankshaft Installation


1. Position locating pins in their recess as illustrated.

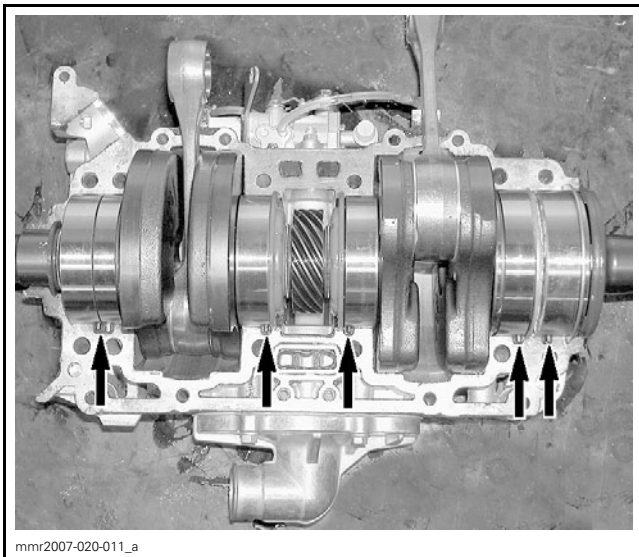

2. Pay attention to properly locate MAG seal in its groove.



3. Pour 50 ml (1.7 U.S. oz) of injection oil in the oil bath under worm gear as shown.

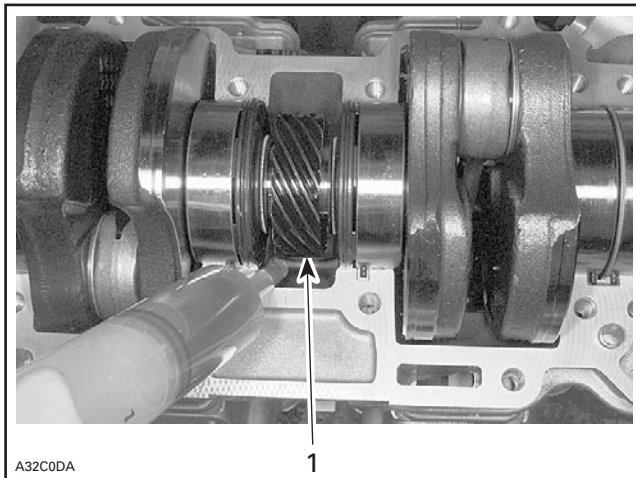

TYPICAL

1. Oil bath

4. Apply ISOFLEX GREASE TOPAS NB 52 (P/N 293 550 021) as follows:

NOTICE

- Use only the recommended grease.
 - Make sure not to push grease between the outside bearing race and the crankcase half.
 - Do not exceed the recommended amount of grease.
- 4.1 Put approximately 25 ml (.8 U.S. oz) of grease in a syringe.
- NOTE:** The 50 g tube corresponds to 50 ml of grease.
- 4.2 With the syringe, fill the PTO side outer bearing with 19 ml (.6 U.S. oz) of grease.



NOTE: Inner PTO bearing is already filled with grease (about 8 ml (.3 U.S. oz)).

- 4.3 Apply 5 ml (.2 U.S. oz) of grease to MAG side outer bearing.




NOTE: Inner MAG bearing is already filled with grease (about 5 ml (.2 U.S. oz)).

5. Install MAG seal.
6. Proceed with crankcase assembly. Refer to *CRANKCASE* in this subsection.

ENGINE MANAGEMENT SYSTEM

600 HO E-TEC

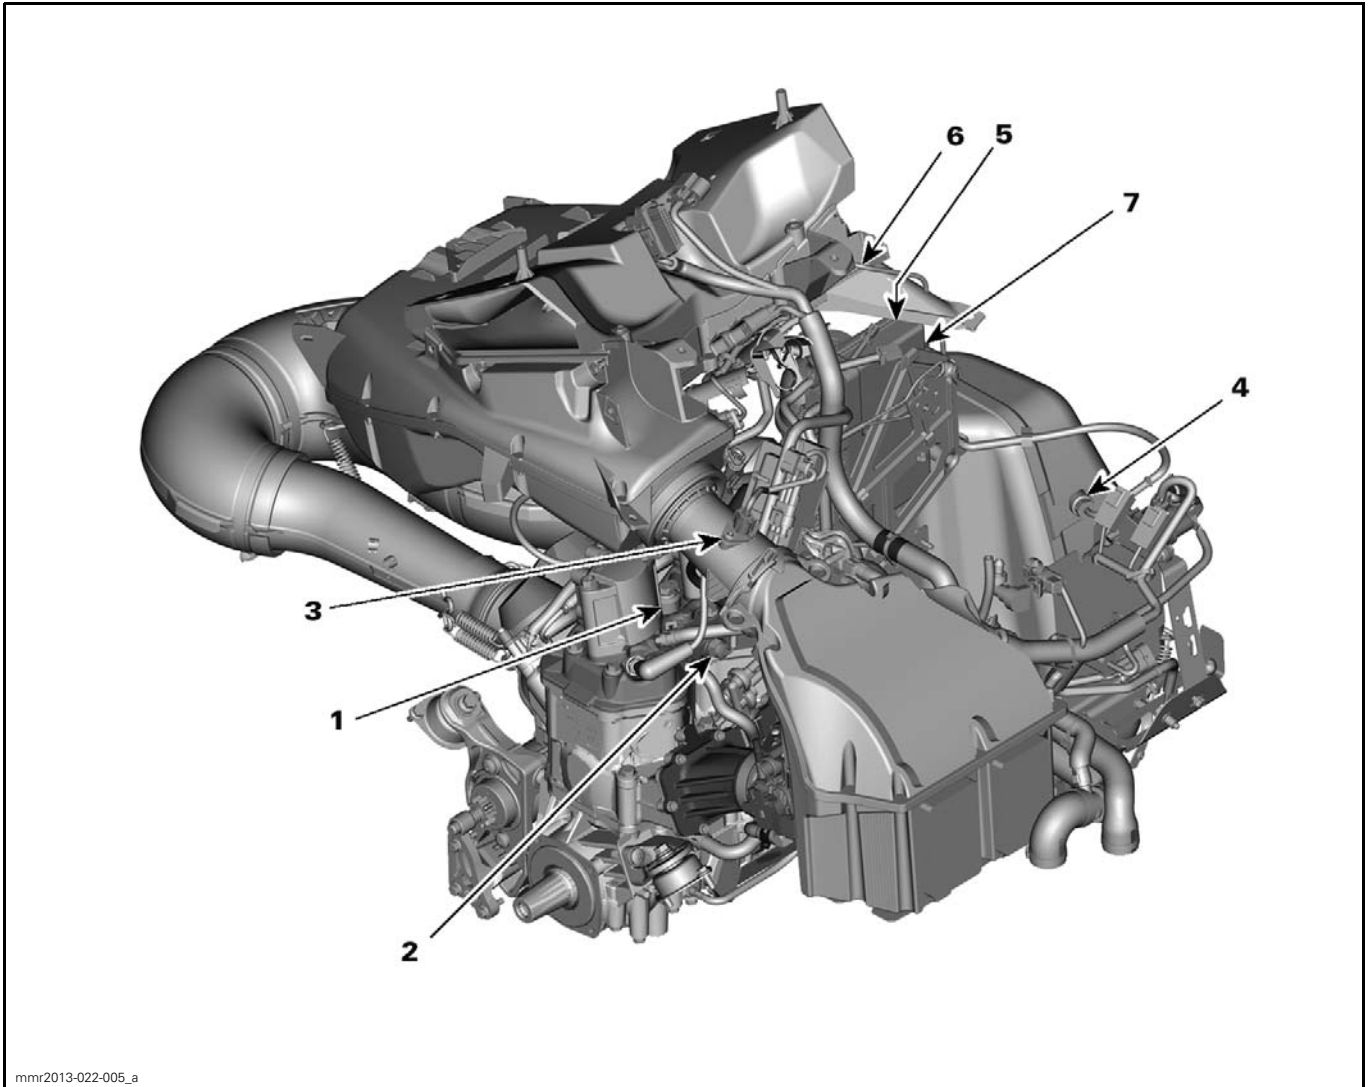


mmr2013-022-005_a

- 1. Knock sensor (KS)
- 2. Coolant temperature sensor (CTS)
- 3. Air temperature sensor (ATS)
- 4. Exhaust gas temperature sensor (EGTS)

- 5. Engine control module (ECM)
- 6. Air pressure sense line
- 7. Air pressure sensor (inside ECM)

Subsection XX (ENGINE MANAGEMENT SYSTEM)

600 HO E-TEC

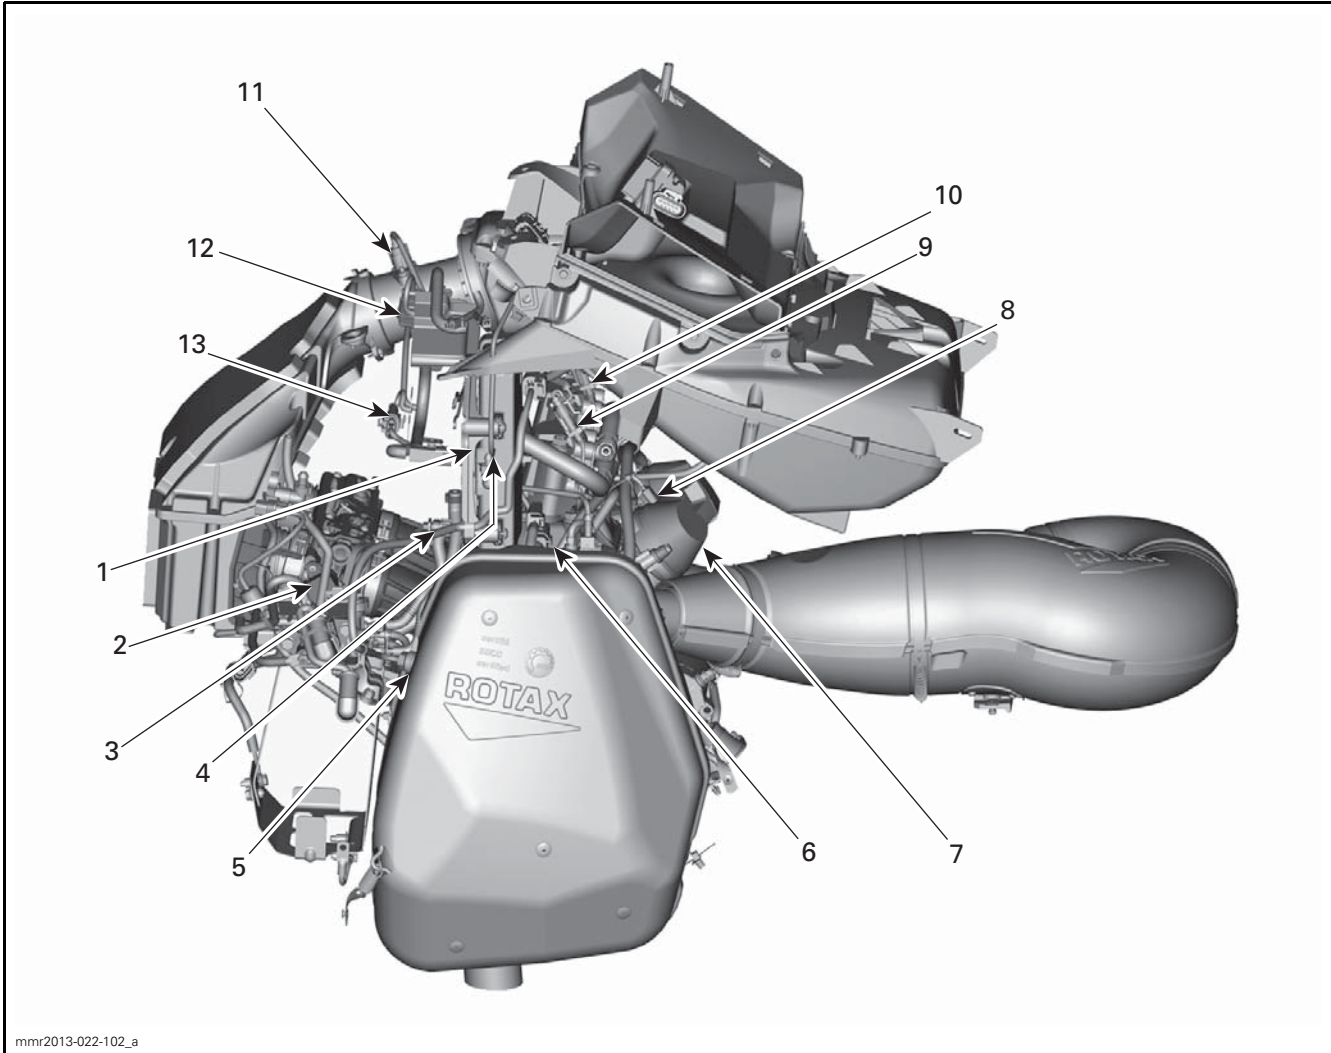


mmr2013-022-102_a

1. Engine control module (ECM)
2. Throttle position sensor (TPS)
3. Oil level sensor connector (OLS)
4. Air pressure sensor (APS, inside ECM)
5. Exhaust gas temperature sensor (EGTS)
6. Crankshaft position sensor connector (CPS)
7. RAVE valve

8. RAVE valve position sensor (RPS)
9. MAG injector
10. PTO injector
11. Air temperature sensor (ATS)
12. MAG ignition coil
13. PTO ignition coil

800R E-TEC

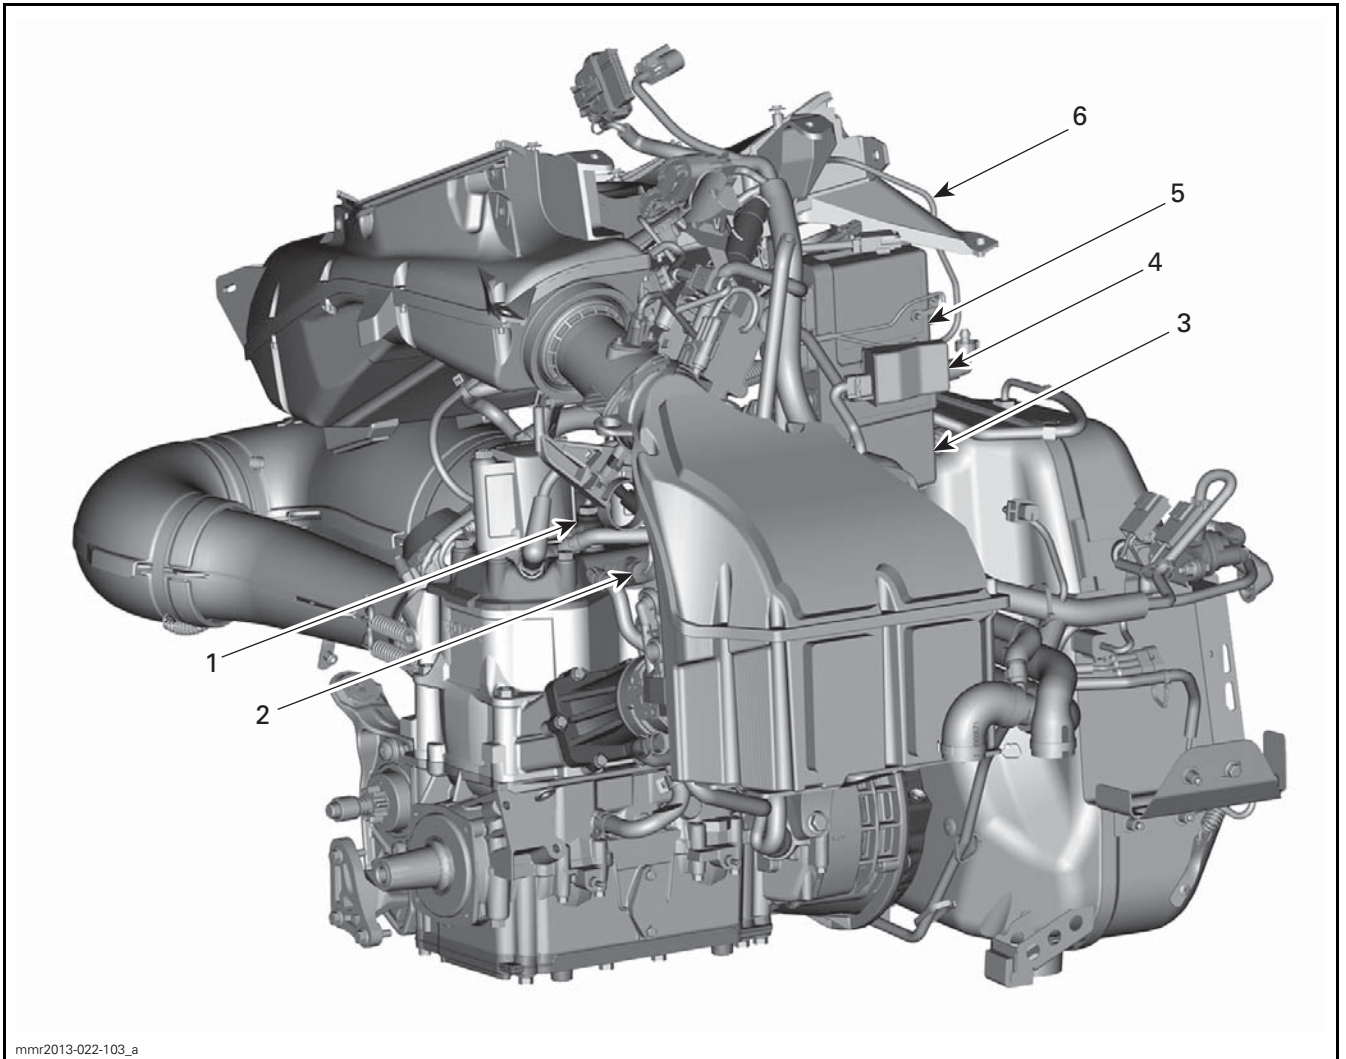


mmr2013-022-103_a

- 1. Knock sensor (KS)
- 2. Coolant temperature sensor (CTS)
- 3. Engine control module (ECM)

- 4. Thermocouple module (THCM)
- 5. Air pressure sensor (APS, inside ECM)
- 6. Air pressure sense line

Subsection XX (ENGINE MANAGEMENT SYSTEM)

800R E-TEC

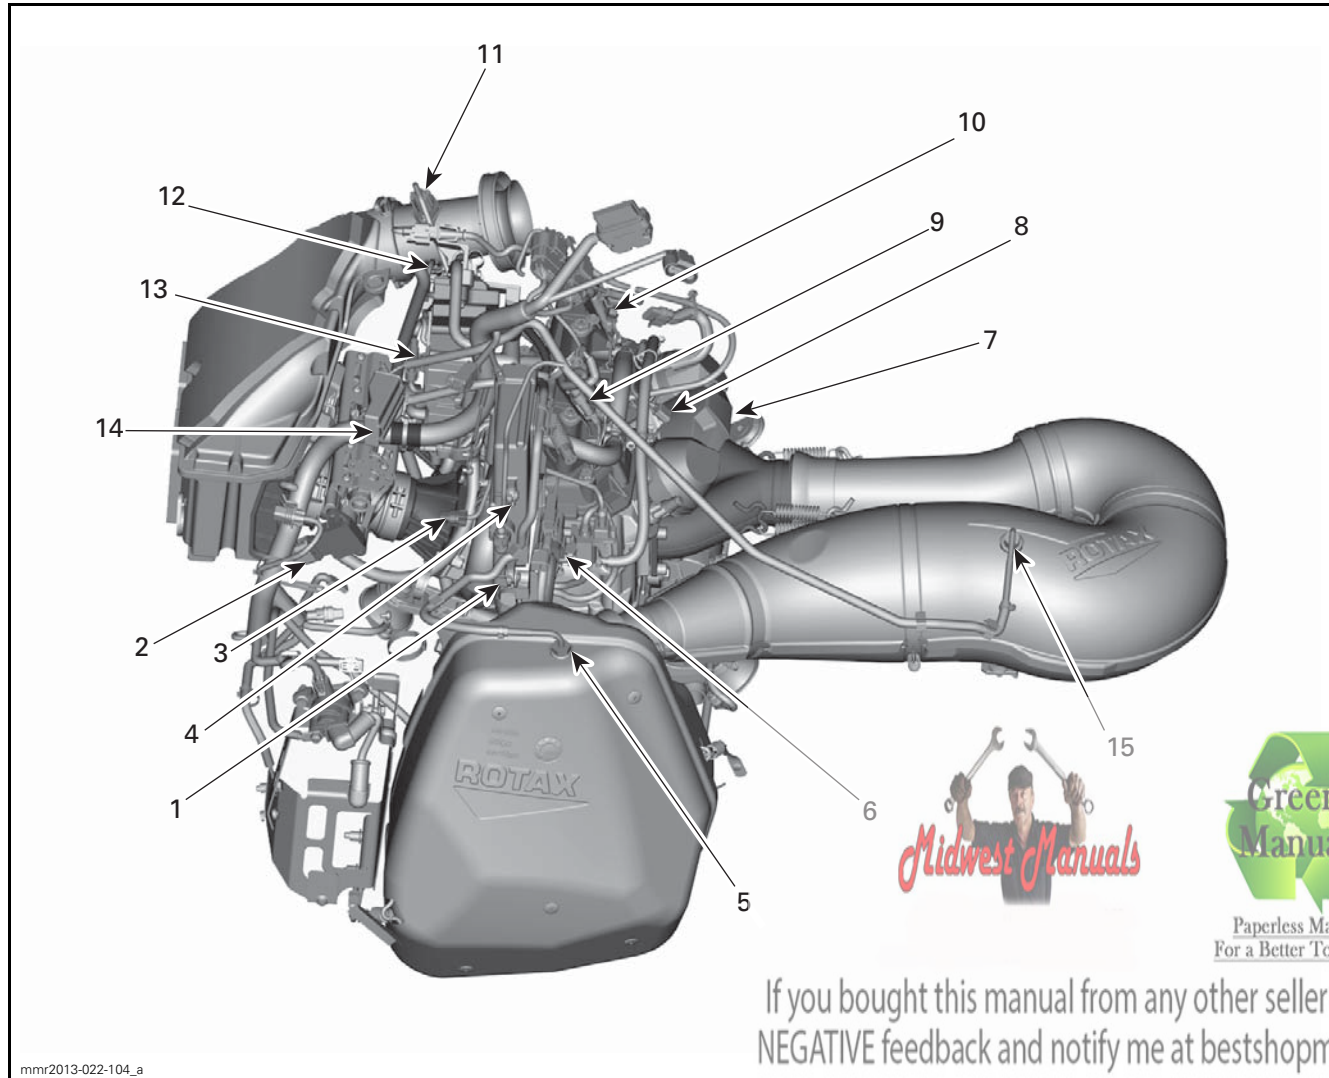


If you bought this manual from any other seller please leave them
NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

- mnr2013-022-104_a
1. Engine control module (ECM)
 2. Throttle position sensor (TPS)
 3. Oil level sensor connector (OLS)
 4. Air pressure sensor (APS, inside ECM)
 5. Exhaust gas temperature sensor muffler (EGTSm)
 6. Crankshaft position sensor connector (CPS)
 7. RAVE valves
 8. RAVE valve position sensor (RPS)


9. MAG injector
10. PTO injector
11. Air temperature sensor (ATS)
12. MAG ignition coil
13. PTO ignition coil
14. Thermocouple module (THCM)
15. Exhaust gas temperature sensor tuned pipe (EGTStp, Summit and Backcountry)

600 HO E-TEC Models

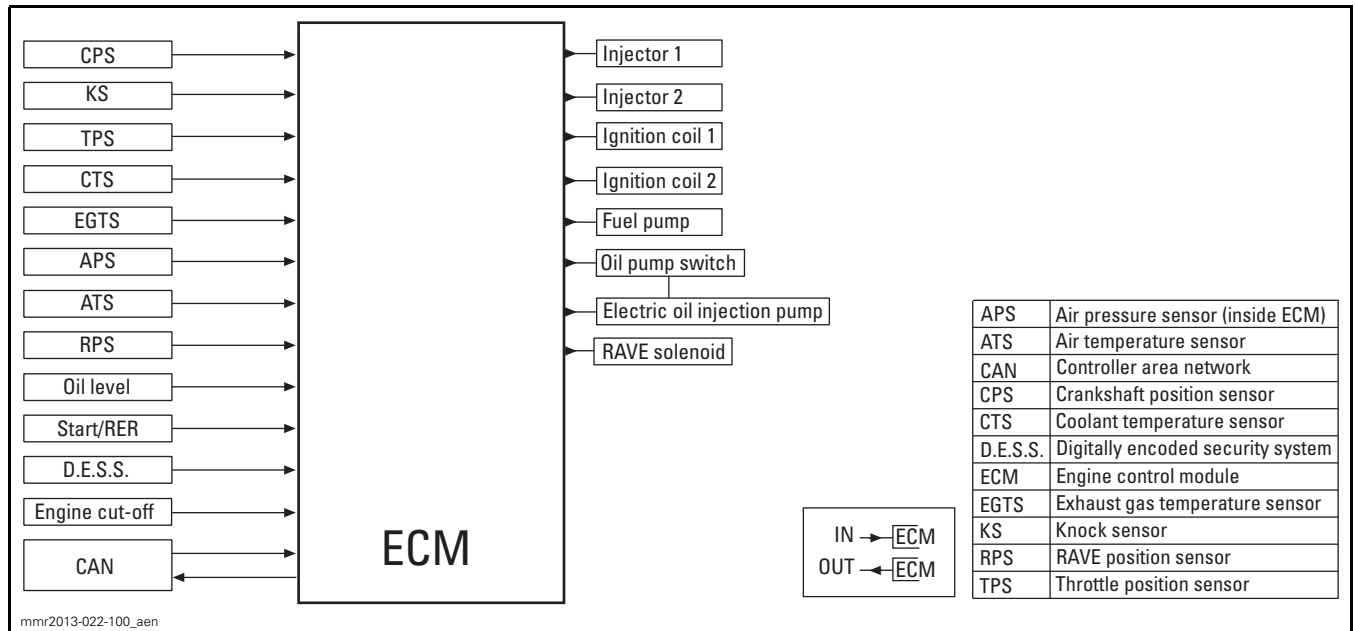

ENGINE MANAGEMENT DIAGRAM

800R E-TEC Models

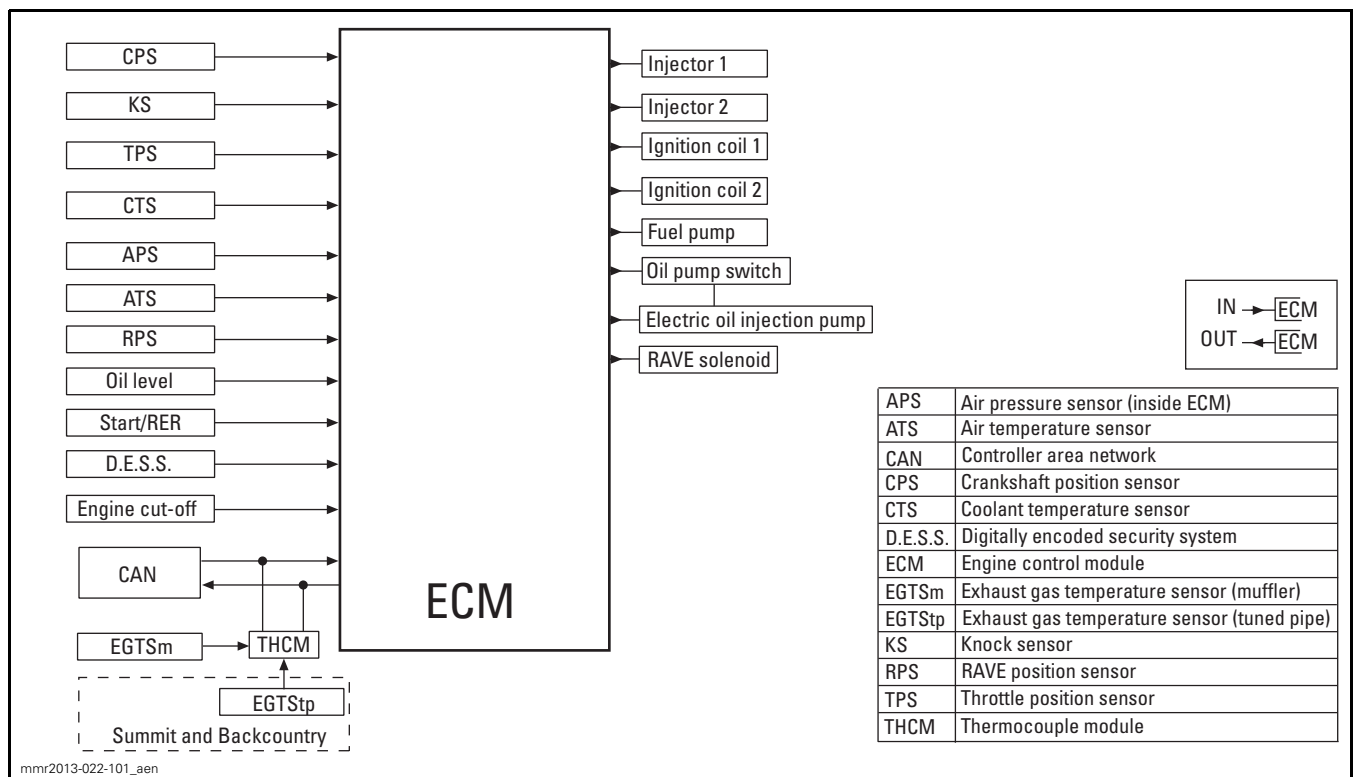

ENGINE MANAGEMENT DIAGRAM

GENERAL

SYSTEM DESCRIPTION

A highly advanced engine management system (EMS) has been used on this 2-stroke engine to ensure a high power output with a clean combustion with practically no exhaust smoke.

There are 8 main systems that are controlled by the engine management system (EMS):

1. E-TEC Direct fuel injection
2. Ignition system
3. Starting system
4. Rotax electronic reverse (RER)
5. Digitally encoded security system (D.E.S.S.)
6. Lubrication system
7. 3D RAVE
8. Electrical accessories.

The engine management system features a monitoring system that self-diagnoses its electronic components. For more information, refer to *DIAGNOSTIC FAULT CODES* subsection.

Electrical power distribution is also controlled by the engine management system. Refer to *POWER DISTRIBUTION* subsection.


Engine Control Module (ECM)

The ECM is the central point of the engine management system. It reads the inputs and makes computations by comparing them to pre-determined parameters, and sends the required control signals to the outputs to ensure proper engine management.



ECM

The ECM is located near the oil injection reservoir.

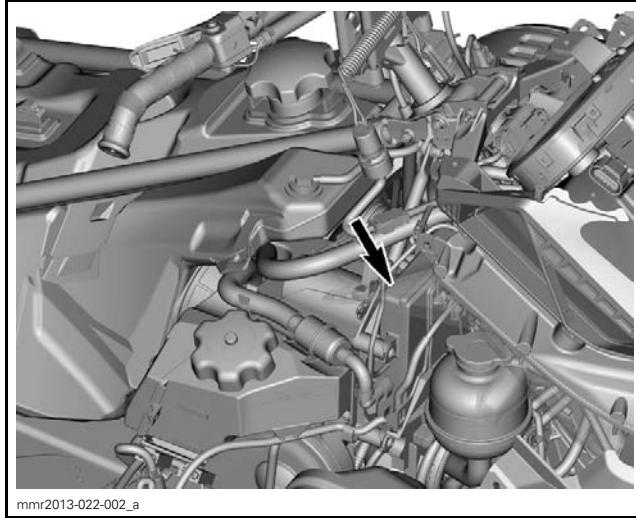


ECM LOCATION

The ECM features a permanent memory that will store fault codes, customer information and other engine information when the engine is stopped.

ECM Cooling

Since the ECM manages all the vehicle's power needs as it incorporates the voltage regulator/rectifier and other power components, a lot of heat needs to be dissipated.

To ensure adequate heat dissipation, a constant fresh fuel flow from the fuel pump is used to cool down the ECM.

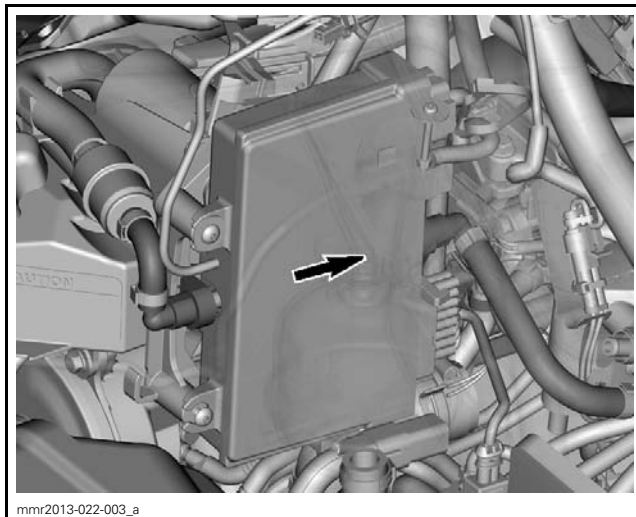

ECM COOLING (FUEL FLOW DIRECTION)

SYSTEM FEATURES

Throttle Protection

If the throttle is not completely closed during engine startup, engine RPM will be limited to idle speed by the ECM.

To revert to normal operation, release the throttle completely and then depress it again.

Warm-Up Protection

The engine's RPM is limited until the desired engine and injection oil temperatures are obtained.

WARM-UP PROTECTION	ENGINE WARM-UP TEMPERATURE	INJECTION OIL WARM-UP
600 HO E-TEC	20°C (68°F)	Oil viscosity
800R E-TEC	30°C (86°F)	

Engine Warm-Up

During the engine warm-up period, the RAVE valves will be limited to the MID position which, limits the engine to a maximum of 7500 ± 200 RPM.

Injection Oil Warm-Up

The injection oil warm-up period is based on oil viscosity.

This is accomplished by measuring the time it takes for the electric oil pump to complete a stroke (oil pump switch signal) from the time at which it was commanded. This provides an indication of the oil viscosity, and therefore temperature and flow capacity.

Automated Engine Oil Fogging (E-TEC)

An automated engine oil fogging has been implemented to automatically inject the required oil to protect the engine during vehicle storage. Refer to *STORAGE PROCEDURE* subsection for details.

COMMUNICATION PROTOCOLS

GENERAL

CONTROLLER AREA NETWORK (CAN)


The CAN protocol is an ISO standard for serial data communication.

The ECM forms a network with other components linked with the CAN bus.

The CAN bus (or CAN lines) consist of a pair of wires (WHITE/BEIGE and WHITE/BLACK) that connect every component to each other. The electronic modules are in constant communication within the network.

The network is comprised of the:

- ECM
- Multifunction gauge
- Diagnostic connector
- THCM (thermocouple module) on 800R E-TEC
- CAN bus.

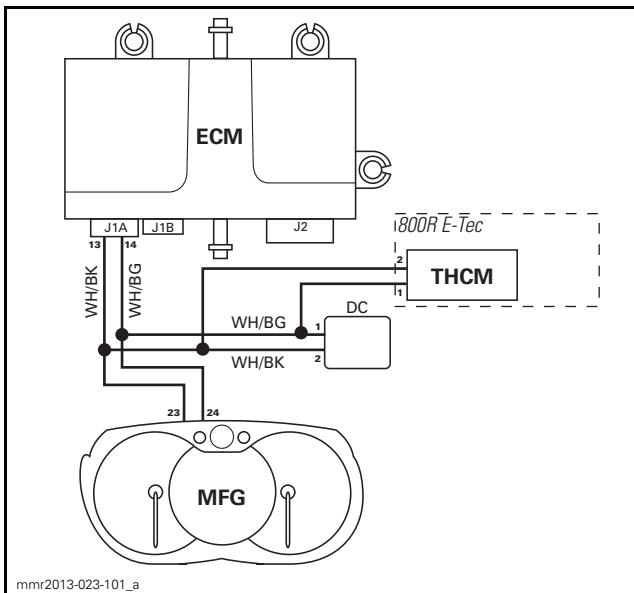

600 HO E-TEC AND 800R E-TEC
 DC (Diagnostic connector)
 ECM (Engine control module)
 MFG (Multifunction gauge)
 THCM (Thermocouple module)
 WH/BG (White/beige)
 WH/BK (White/black)

NOTE: Fault codes are broadcasted through the CAN bus.


LOCAL INTERCONNECT NETWORK (LIN)

The LIN bus is a simple broadcast serial network comprising one master and up to 16 slaves. It is used as a complement to the CAN network to integrate the following devices.

MASTER	SLAVES
Multifunction gauge	Optional premium module (engine temperature, lap recorder)
	Optional engine temperature module

The master communicates to one slave at a time which supplies the requested information. The gauge can then display the related data (engine temperature for example).

One wire connects each component. The LIN line consists of a WHITE/ORANGE wire.

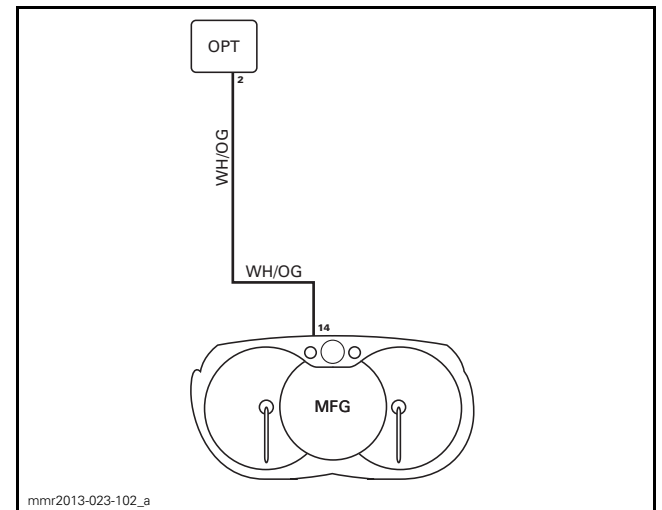

MFG (multifunction gauge)
 OPT (optional modules: engine temperature, lap recorder)
 WH/OG: WHITE/ORANGE

COMMUNICATION TOOLS AND B.U.D.S.

SERVICE TOOLS

Description	Part Number	Page
12 V BATTERY SUPPLY CABLE	529 035 997	2, 4-5
MPI-2 DIAGNOSTIC CABLE	710 000 851	2-3, 5
MPI-2 INTERFACE CARD	529 036 018	2-3
POWER INTERFACE	515 177 223	2-4

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
OPTIONAL MALE-FEMALE EXTENSION SERIAL CABLE	(DB9)	3

GENERAL

Refer to *PROCEDURES* in this subsection for instructions on the communication tools.

If communication problems occur, refer to *TROUBLESHOOTING*.


TROUBLESHOOTING

COMMUNICATION PROBLEMS

MPI-2 Connection Troubleshooting

MPI-2 Status Lights

The MPI-2 includes 2 status lights to show the connection conditions: USB and CAN. **Both lights must be GREEN** for the MPI-2 to function properly. Otherwise, refer to the following charts.

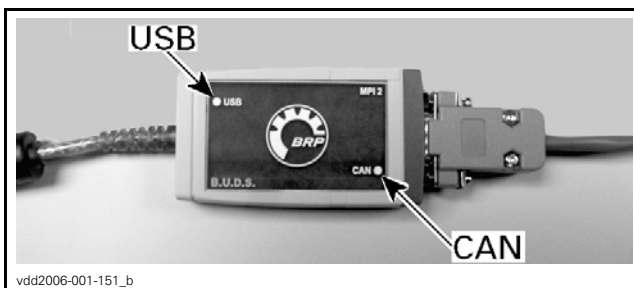

Prerequisite for USB Communication:


- PC Computer turned ON
- MPI-2 connected to PC computer.

COMMUNICATION PROBLEM (USB)	
STATUS	WHAT TO DO
USB Light is OFF	<ul style="list-style-type: none"> – Check USB connection between MPI-2 and PC computer. – Check USB operation on PC computer (hardware or Windows drivers).
USB Light is GREEN	<ul style="list-style-type: none"> – Connections are GOOD. Communication can take place on USB side.

Prerequisite for CAN Communication:

1. MPI-2 connected to diagnostic connector.
2. The tether cord cap (D.E.S.S. key) is installed on the engine cut-off switch.
3. B.U.D.S. started and logged.
4. ECM is powered.

Subsection XX (COMMUNICATION TOOLS AND B.U.D.S.)

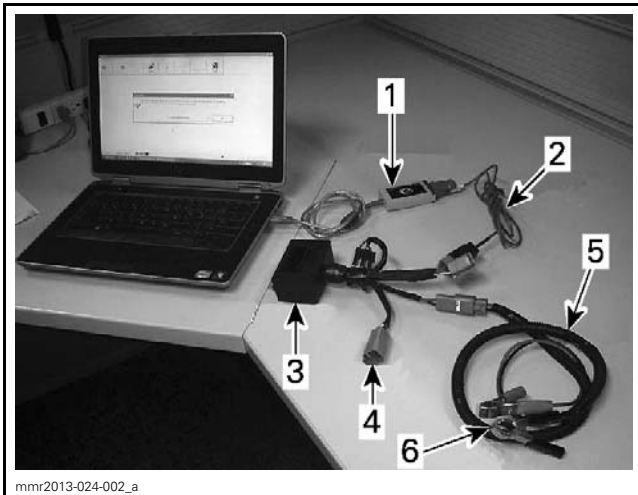

1. MPI-2 INTERFACE CARD (P/N 529 036 018)
2. MPI-2 DIAGNOSTIC CABLE (P/N 710 000 851)
3. POWER INTERFACE (P/N 515 177 223)
4. To vehicle diagnostic connector.
5. 12 V BATTERY SUPPLY CABLE (P/N 529 035 997)
6. To 12 V battery


COMMUNICATION PROBLEM (CAN)	
STATUS	WHAT TO DO
CAN Light is OFF	<ul style="list-style-type: none"> – BUDS does not communicate with the vehicle. – Check connections from computer to vehicle. – Check if BUDS is started. – Check if vehicle is powered: is cluster turned ON. If it is not ON, install the tether cord cap (D.E.S.S. key) on the engine cut-off switch.
CAN Light is RED	<p>This occurs when BUDS loses communication with vehicle.</p> <ul style="list-style-type: none"> – Check connections from computer to vehicle. – Check if vehicle is powered: is cluster turned ON? If not, install the tether cord cap (D.E.S.S. key) on the engine cut-off switch.
CAN Light is GREEN	<ul style="list-style-type: none"> – Connections are GOOD. BUDS communicates normally with the vehicle.

Communication Problems with B.U.D.S.

Vehicle not Detected in B.U.D.S.

Make sure both USB and CAN lights on the MPI-2 are GREEN.


If an "X" is shown in the status bar and the protocol indication is blinking between Kw2000 500K and KW2000, it means that no ECU is communicating with the MPI-2.

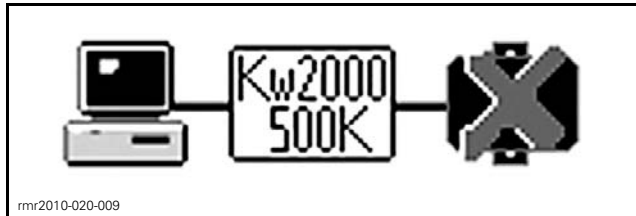

Check the following:


- Connections between the PC computer and the vehicle.
- The multifunction gauge is powered up.

If B.U.D.S. does not automatically exit the following message box, click the **Try active detection mode** button. This will manually establish the communication with the vehicle.

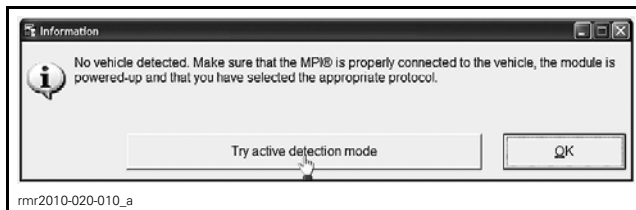

One or More ECU is not Communicating with the MPI-2


Ensure the status bar shows the Kw2000 and the appropriate number of modules to its right according to the vehicle model.

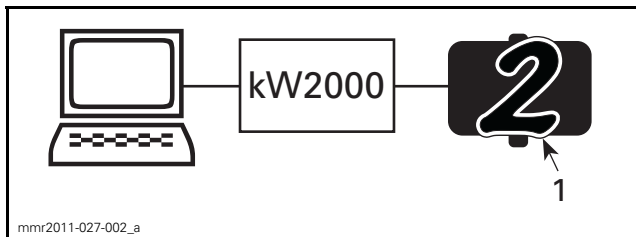

TYPICAL — CONNECTION SUCCESSFUL
1. Number of modules

VEHICLE MODEL	PROTOCOL	NUMBER OF MODULES (ECM, gauge and THCM)
600R E-TEC	Kw2000	2
800R E-TEC	Kw2000	3 (ECM, gauge and THCM)


If one or more "ECU" is (are) not communicating with the MPI-2, a module may not be properly connected, powered, or is defective. To check which module is missing in B.U.D.S., look for its page tab at the bottom of the B.U.D.S. window. It will not be visible. Then check the wiring and power supply to that module.

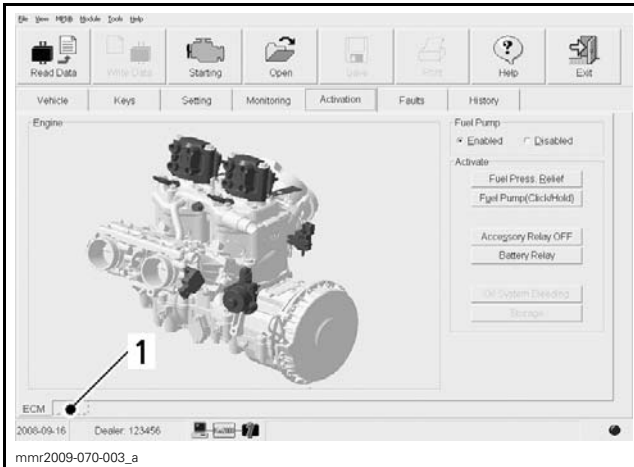

TYPICAL

1. Cluster tab not visible meaning this ECU is not communicating

NOTE: The module submenu will also provide a list of modules that are communicating with B.U.D.S.

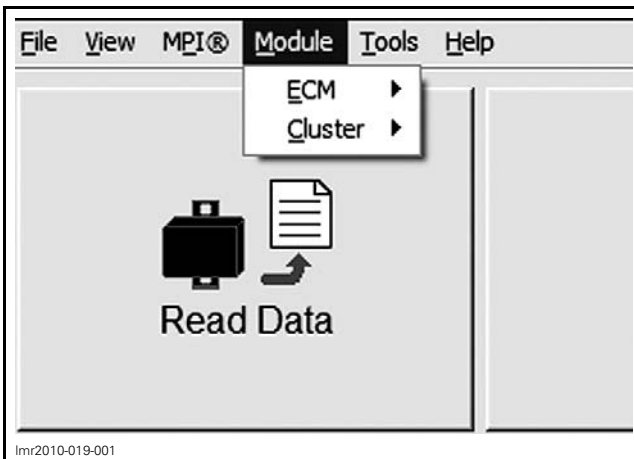


TYPICAL - MODULE SUBMENU LIST

Power Interface Test

When the POWER INTERFACE (P/N 515 177 223) is connected to the vehicle diagnostic connector, the multifunction gauge and the headlight should turn on. Otherwise, check the following and repair or replace Power interface if any test failed.

1. Power interface fuses.

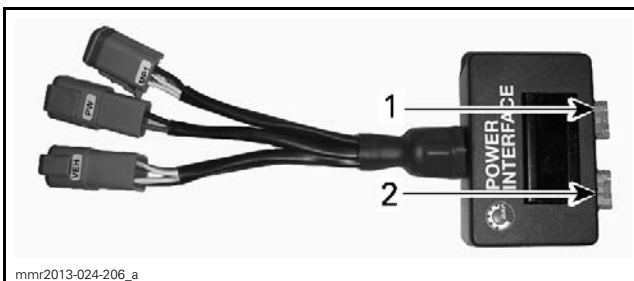

- 1. Fuse 1
- 2. Fuse 2

2. Vehicle battery voltage should be displayed on Power interface.

2.1 Ensure battery charge is high enough to keep the vehicle ON for the duration of the maintenance.

NOTE: This is especially **IMPORTANT** if you are updating vehicle software. In case of doubt, charge battery for at least 15 minutes; disconnect it prior to updating software.

PROCEDURES

MULTI-PURPOSE INTERFACE-2 (MPI-2)


The MPI-2 (Multi-Purpose Interface-2) is used with B.U.D.S. to communicate with vehicle electronic module.

Parts Required for Connecting the PC to the Vehicle

MPI-2 INTERFACE CARD (P/N 529 036 018)



OPTIONAL MALE-FEMALE EXTENSION SERIAL CABLE (P/N (DB9))

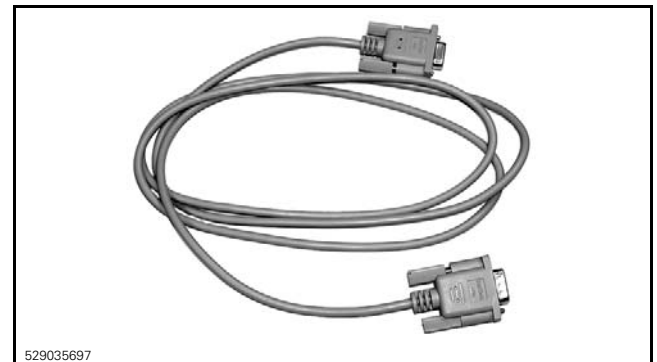

NOTE: The extension cable is available at electronic retail outlets. Do not exceed 7.6 m (25 ft). MPI-2 DIAGNOSTIC CABLE (P/N 710 000 851)

Subsection XX (COMMUNICATION TOOLS AND B.U.D.S.)



POWER INTERFACE (P/N 515 177 223)



12 V BATTERY SUPPLY CABLE (P/N 529 035 997)



MPI-2 Power

The MPI-2 uses the PC computer USB port for its power supply.

Connecting the PC to the Vehicle

⚠ WARNING

If the computer you are using is connected to a power outlet, there is a potential risk of electrocution when working in contact with water. Be careful not to touch water while working with the computer.

NOTE: Some components will generate heat when leaving vehicle in diagnostic mode for a long period. Always disconnect MPI-2 supply harness and supply cable from vehicle/battery when not working on vehicle.

1. Connect MPI-2 connector to the USB port of a PC (personal computer).



2. Remove the diagnostic connector from the protective cap on the right side of the vehicle.



1. Diagnostic connector

3. Connect the POWER INTERFACE (P/N 515 177 223) to the diagnostic connector.



1. Diagnostic Connector

4. Connect the MPI-2 DIAGNOSTIC CABLE (P/N 710 000 851) to the Power interface connector.



1. MPI-2 connector

NOTICE Connecting MPI-2 directly to diagnostic connector (without Power interface) may prevent proper communication. Always use the Power interface.

5. Connect the battery supply cable to a 12 V battery.

NOTE: Connect cable clips to vehicle battery if so equipped.



1. Red cable to battery "+" terminal
2. Black cable to battery "-" terminal

6. Connect the 12 V BATTERY SUPPLY CABLE (P/N 529 035 997) to the Power interface.

NOTICE Always use the proper supply harness and cables. Make sure to respect polarity when connecting cable clips to battery. Match RED cables together.

7. Set headlights to low beam to reduce battery discharge rate.
8. Connect DESS key.



1. DESS key

9. Use B.U.D.S. as described further in *B.U.D.S.*

B.U.D.S.

B.U.D.S. (BRP Utility and Diagnostic Software) is designed to allow:


- Electrical and electronic component monitoring
- Making setting changes (such as the Closed throttle reset)
- Diagnostics
- Update electronic module software
- Reading fault codes.

Use the latest applicable B.U.D.S. version available on BOSSWeb.

IMPORTANT: Make sure all connections have been made **before starting B.U.D.S.** to allow proper communication initialization and operation.

Reading Data from a Vehicle using the B.U.D.S. Software


1. Install the tether cord cap (D.E.S.S. key) on the engine cut-off switch.
2. Start B.U.D.S. and logon.
3. Read ECM by clicking the **Read Data** button.

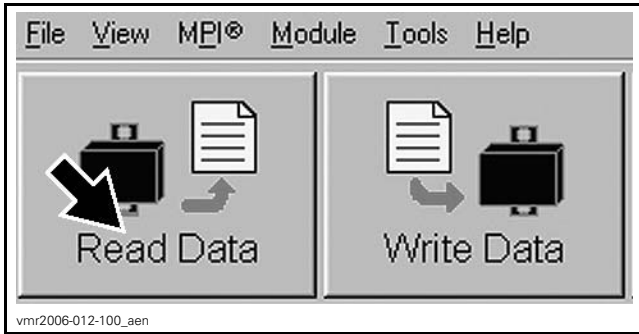

Electronic Modules (ECU) Update

NOTICE Failure to strictly follow a procedure when updating a module may permanently damage the module.

Whenever B.U.D.S. is started, check for an update icon in the B.U.D.S. status bar.

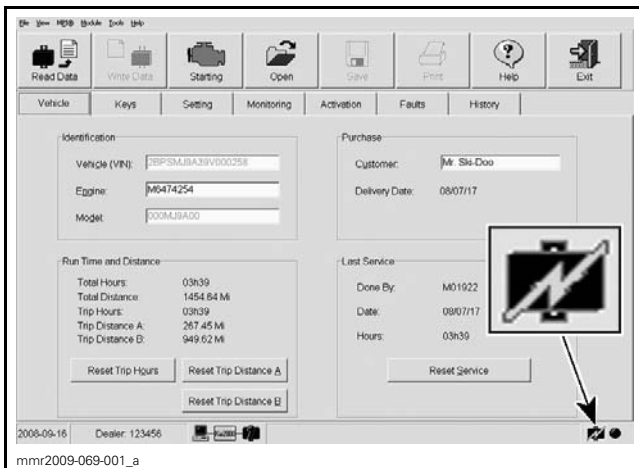


TYPICAL

The icon indicates that a file is available in B.U.D.S. to update any of the electronic modules.


NOTE: If an update file is available on BOSSWeb but the B.U.D.S. software being used is not up to date, the update icon will not appear. Refer to the *SERVICE BULLETINS* to see if there is an update available.

Use the **Module** submenu and check all modules one at a time to see which module(s) can be updated.

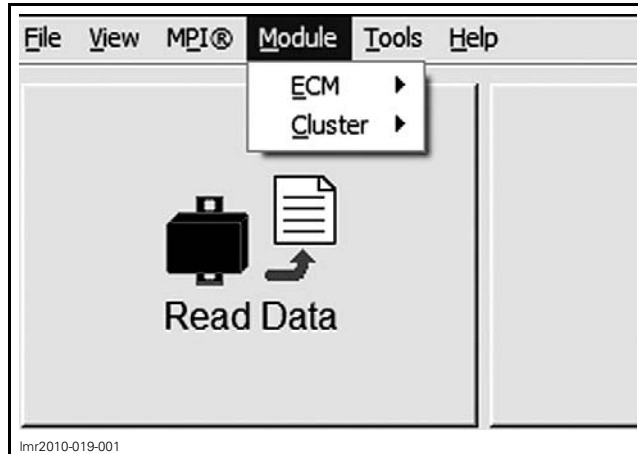

TYPICAL - MODULE SUBMENU LIST

1. If the **Update** option is **greyed out**, no update file is available for this module.
2. If the **Update** option is **black**, an update file is available for this module. Select the update option and load the proper file.

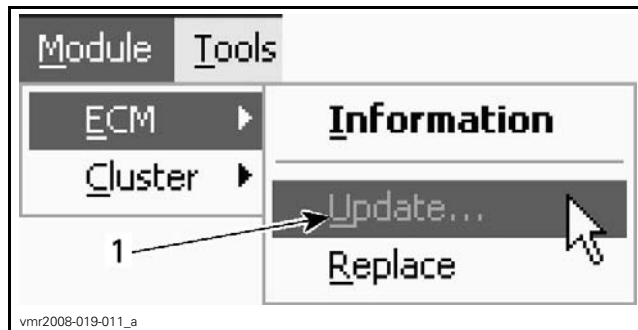

TYPICAL


1. **Greyed out:** No update to perform
Black: Update file available

Before applying an update, log onto BOSSWeb and look in the **Service** menu for the **Unit history** to find out if any information or publication related to the vehicle is available. If so, carefully follow the given instructions.




SERVICE, UNIT HISTORY

NOTE: When selecting the update database in B.U.D.S. (menu Tools ->Update Database), a dialog box will appear and the update file description may provide some clue to finding the vehicle-related information in BOSSWeb.

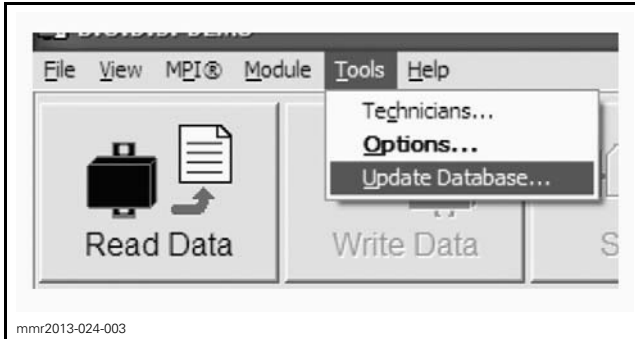


TOOLS, UPDATE DATABASE

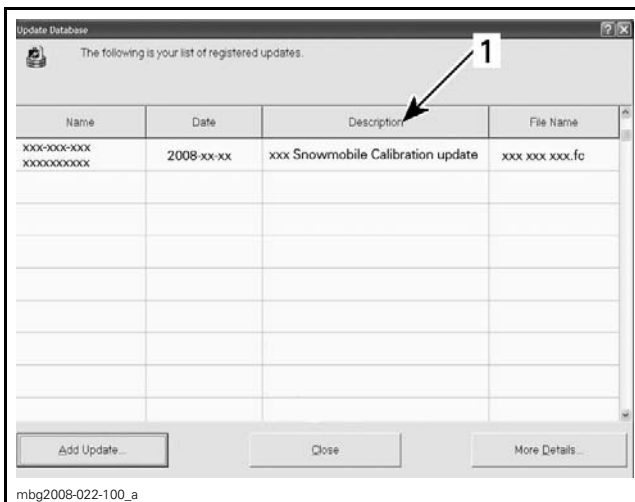

TYPICAL
1. File description

Writing Changes (Saving) in a Module

When making a data or setting change in a module using B.U.D.S., save the new data (or setting) in the module by clicking the **Write Data** button.

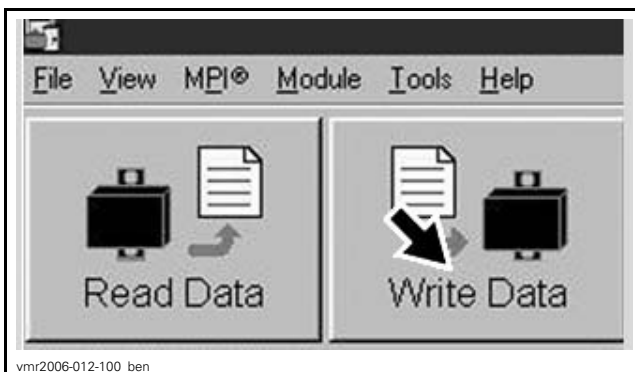

vmr2006-012-100_ben

If the word **Modified** appears in the vehicle file identification number at the top of the B.U.D.S. page, then a change has been made that requires selecting the **Write Data** to save the change.



TYPICAL
1. Indicate setting or data modified; Write Data to save

If a message box appears on the PC screen after clicking the **Write Data** button, follow the on screen instructions.

Exiting B.U.D.S and Disconnecting Computer from Vehicle

Once the maintenance is completed, press the EXIT button and disconnect MPI-2 connections. Reconnect the 6-pin connector in its protective cap.

NOTICE Failure to secure the diagnostic connector in its protective cap would allow corrosion and damage to the terminals.

DIAGNOSTIC AND FAULT CODES

GENERAL

MONITORING SYSTEM

The EMS features a monitoring system that self-diagnose its electronic components.

When a predefined condition (engine overheat for example) or a fault occurs, the ECM sends a signal to the multifunction gauge and/or audible signals to a beeper to inform you of this particular condition.

The ECM monitors the following functions and components.

COMPONENT
EMS (ECM, TPS, CTS, CPS, knock sensor, RAVE valve solenoids, APS, ATS, EGTS, RPS, ignition coils, fuel injectors and THCM for 800R E-TEC models)
12 V overload and 55/60 V voltage
D.E.S.S.
RER
Low oil level, electronic oil injection pump
Oil temperature (end of piston stroke feedback from electronic oil injection pump)
Engine RPM
Coolant temperature
CAN
CTS
Starter solenoid (electric start models)
Fuel pump
Charging system relay (electric start models)

These performance-reduced modes allow the rider to continue on to seek help, or return home, which would not be possible without this advanced system.

Limp Home Mode

The ECM may automatically set default parameters to ensure the adequate operation of the vehicle if a component of the engine management system is not operating properly.

NOTE: Sensor failures will not automatically result in limp home mode. The appropriate LED will turn on and in some cases the beeper will sound.

The engine RPM may be limited if some critical components fail. In this case, releasing the throttle and letting the engine return to idle speed may allow normal operation to come back. If it does not, try removing and reinstalling the tether cord cap (D.E.S.S. key) on the engine cut-off switch.

Section 03 ELECTRONIC MANAGEMENT SYSTEMS

Subsection 04 (DIAGNOSTIC AND FAULT CODES)

EMS ACTION	CAUSE
Engine is gradually stopped. Continuous fast short beeps and a shutdown message is displayed in multifunction gauge until shutdown.	Fuel pump wiring short circuit to ground or open circuit.
	Fuel pump current requirement is too high.
	Engine idle overheat protection: <ul style="list-style-type: none"> – Engine idled more than 5 seconds after engine temperature increased above 95°C (203°F). – Engine idled more than 5 minutes after engine temperature increased above 37°C (99°F).
Engine speed is limited to 2500 RPM.	D.E.S.S. key is not recognized by the ECM. The antitheft system is active. RAVE valves are kept at closed position.
Engine speed is limited to 5500 RPM (RAVE valves are kept closed).	Oil injection pump wiring shorted to ground or open circuit.
	Low voltage in the 55/60 Vdc system. Voltage dropped by 5 V.
	ECM overheat (85°C (185°F)).
	Engine overheat (100°C (212°F) and above).
	Exhaust gas temperature too high (800°C (1,472°F) and above).
	High engine detonation.
Engine speed is limited to 7000 RPM.	Max. RPM allowed to the engine in reverse. RAVE valves are kept closed.
Engine speed is limited (Variable limit)	Max. RPM allowed varies when engine is cold, according to oil viscosity
Engine speed is limited to 8600 RPM.	Maximum engine RPM allowed.

Section 03 ELECTRONIC MANAGEMENT SYSTEMS

Subsection 04 (DIAGNOSTIC AND FAULT CODES)






Pilot Lamps and Beep Codes

Warning lights in the multifunction gauge and/or a beeper provide signals as to a vehicle operation feedback, or to indicate a problem.

A pilot lamp can flash alone or in combination with another lamp.


Beeper codes will be heard and messages (depending on gauge model) will be displayed to attract your attention and inform you of the situation.

NOTE: Message displayed is not available on all gauges.

PILOT LAMP(S)	BEEPER OR PILOT LAMP STATUS	MESSAGE DISPLAY	DESCRIPTION
	4 short beeps every 30 seconds	ENGINE OVERHEAT	Engine is overheating, reduce snowmobile speed and run in loose snow or stop engine immediately and let engine cool down. Check coolant level, refer to <i>MAINTENANCE</i> . If coolant level is correct and overheating persists, contact an authorized Ski-Doo dealer. Do not run the engine if condition persists.
		MUFFLER	Reduce speed or stop engine. Let engine cool down and restart. If overheating persists, contact an authorized Ski-Doo dealer. Do not run the engine if condition persists.
	Short beeps repeating rapidly	ENGINE OVERHEAT	Critical overheat. Stop engine immediately and let engine cool down. Check coolant level, refer to <i>MAINTENANCE</i> . If coolant level is correct and overheating persists, contact an authorized Ski-Doo dealer. Do not run the engine if condition persists.
		MUFFLER OVERHEAT	Critical overheat. Stop engine immediately and let engine cool down. If overheating persists, contact an authorized Ski-Doo dealer. Do not run the engine if condition persists.
		ECM OVERHEAT	Critical overheat. Stop engine immediately and let engine cool down. If overheating persists, contact an authorized Ski-Doo dealer. Do not run the engine if condition persists.
	4 short beeps every 5 minutes	LOW BAT	Indicate a low or high battery voltage condition. See an authorized Ski-Doo dealer as soon as possible.
		HIGH BAT	
	4 short beeps	CHECK ENGINE	Engine fault, see an authorized Ski-Doo dealer as soon as possible.
	—	PARK BRAKE	If brakes are engaged for more than 15 seconds while vehicle is in movement, parking brake light will come on. Make sure to release the brake completely while vehicle is in movement.
—	4 short beeps every 5 minutes	KNOCK	Engine detonation (RPM is limited when this condition occurs). – Ensure recommended fuel is used. – Check fuel quality, replace if necessary. – If fault still occurs, contact an authorized Ski-Doo dealer.
—	4 short beeps every 5 minutes	REV LIMIT	Engine RPM limited for protection when certain faults occur or engine went above 8400 RPM.
—	Short beeps repeating rapidly	SHUTDOWN	Shutdown procedure in force due to engine overheating or fuel pump problem, remove tether cord cap from engine cut-off switch and contact an authorized Ski-Doo dealer.

Section 03 ELECTRONIC MANAGEMENT SYSTEMS

Subsection 04 (DIAGNOSTIC AND FAULT CODES)

PILOT LAMP(S)	BEEPER OR PILOT LAMP STATUS	MESSAGE DISPLAY	DESCRIPTION
—	—	COMMUNICATION	Communication problem between ECM and gauge. Stop engine, remove tether cord cap. Wait a few minutes, then start engine. If problem persists, contact an authorized Ski-Doo dealer.
DESS	2 short beeps	—	Good key, vehicle ready to operate.
	2 short beeps, repeating slowly	CHECK KEY	Unable to read key (bad connection). Make sure the key is clean and correctly snapped on post.
	Short beeps repeating rapidly	BAD KEY	Invalid key or key not programmed. Use the proper key for the vehicle or have the key programmed.
	(Blinking)	—	Fuel level sender problem.
—	—	THROTTLE OPEN	Throttle applied while attempting an engine start (engine cranks but won't run). Release throttle while starting.
—	—	DROWN MODE	Throttle wide open while attempting an engine start (engine cranks but won't run). Release throttle while starting.

FAULT CODES

A fault code is an indication that a glitch or malfunction is detected by the monitoring system of the vehicle.

When there is a problem, the EMS (engine management system) can provide fault codes to ease troubleshooting.

The faults registered in the ECM (engine control module) are stored in memory even when the battery is disconnected.

Many simultaneous fault codes are likely caused by a burnt fuse(s), a faulty relay or a problem with the vehicle wiring harness.

When troubleshooting using the service actions suggested in the **Fault** section of B.U.D.S., a system circuit referred to as DA-26 or J1A-26 refers to pin 26 of ECM connector "A".

IMPORTANT: After a problem has been solved, be sure to clear the fault(s) in the ECM using the B.U.D.S. software. This will properly reset their states.

How to Read Fault Codes Using B.U.D.S. Software

Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.

For more information pertaining to the faults code status and report, refer to B.U.D.S. online help or to the EMS fault code tables.

How to Read Fault Codes on the Premium Multifunction Gauge

Fault codes can also be displayed in the premium multifunction gauge. Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection.

How to Find Fault Code Descriptions

For the latest fault code table, use the **Knowledge Center** tab under the **Info Center** menu in BOSS-Web and enter the following search criterias:

- Enclose the search within quotes " "
- Enter: "2013 Ski-Doo DTC Table"


SPECIFIC FAULT CODES

The following provides additional information related to specific fault codes.

Fault Code P0480 or P0484 (Cooling Fan Relay Open Circuit, Shorted to Ground or Shorted to Battery)

This code occurs if the wrong option was selected in B.U.D.S.

If there is no cooling fan installed on the vehicle, connect and start B.U.D.S. to uncheck **With Cooling Fan** in **ECM** page under **Setting** tab and vehicle configuration thumbnail.

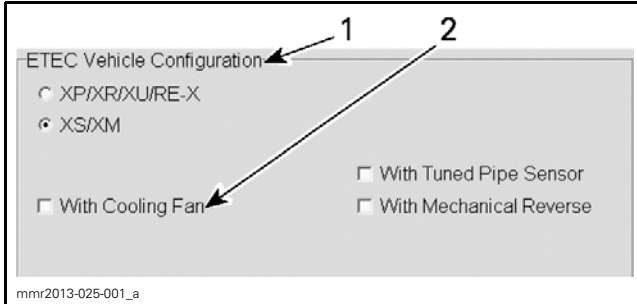

SETTING AND VEHICLE CONFIGURATION TABS
 1. Vehicle configuration area
 2. Uncheck

NOTE: If the option is not checked when a cooling fan is installed, the fan relay and its circuits will not be monitored by the EMS (Engine Management System). The fan operation will not be altered.

Fault Code P1233
Oil Pump Feedback Switch does not Close

This code occurs if the ECM does not receive a signal from the switch (end of piston stroke) in the electric injection oil pump.

When this occurs, the oil pump will function normally but the injection oil warm-up period will be time based (approximately 7.5 minutes) instead of being dependent on how long it takes for the oil pump to complete a stroke which, is dependent on oil viscosity and therefore oil temperature.

Check wiring continuity between the injection oil pump switch, the ECM and ground.

If the problem is not related to the electrical wiring or ground, refer to *LUBRICATION SYSTEM* subsection.

Fault Code P1427
(Temperature Module Not Detected)

800R E-TEC Models

This code occurs if:

- The thermocouple module (THCM) is not connected to the vehicle
- The THCM does not function

Ensure vehicle is equipped with a THCM and that it is properly connected to the vehicle wiring harness.

If the fault code persists, refer to *E-TEC DIRECT FUEL INJECTION* subsection.

All Except Summit and Backcountry X Models

The **With Tuned Pipe Sensor** box in B.U.D.S. should be unchecked and saved to the ECM, otherwise, the fault code will appear.

Fault Code P0428 and P1428

Exhaust muffler temperature sensor open circuit or Tuned pipe temperature sensor open circuit

Those codes occur if:

- The thermocouple probes are damage (wires or probe itself)
- The THCM does not operate correctly
- The wrong THCM is used on the vehicle
- The vehicle is not properly configured.

To check if the vehicle is properly configured, connect vehicle to applicable B.U.D.S. version and ensure that the "With Tuned Pipe Sensor" box in the Vehicle Configuration field is set as following:

MODELS	"WITH TUNED PIPE SENSOR" BOX
Summit and Renegade Backcountry X	Checked
All other models	Unchecked

DIAGNOSTIC AND FAULT CODES

FAULT CODE TABLE

P-CODE	MODULE	DESCRIPTION	CAUSE	ACTION
P0079	ECM	E-RAVE® solenoid open circuit or shorted to ground	Disconnected E-RAVE solenoid. Damaged E-RAVE solenoid, wires or terminals.	Check for approximately 12 volts between E-RAVE solenoid RD/OR wire and chassis. Check for approximately 30 ohms between E-RAVE solenoid terminals. Check system circuit J1B-22.
P0106	ECM	Intake air pressure sensor functional problem	Damaged air pressure sensor inside in the ECM.	Replace the ECM.
P0107	ECM	Intake air pressure sensor voltage too low	Damaged air pressure sensor inside in the ECM.	Replace the ECM.
P0108	ECM	Intake air pressure sensor voltage too high	Damaged air pressure sensor inside in the ECM.	Replace the ECM.
P0111	ECM	Air temperature sensor functional problem	Intermittent air temperature sensor reading or circuit wires shorted to ground.	Check system circuits J1A-20 for continuity to terminal 2 of the ATS connector and J1A-27 for continuity to terminal 1 of the ATS connector. Check circuits J1A-20 and J1A-27 for resistivity to ground. Sensor can have an intermittent reading, replace the sensor if necessary.
P0112	ECM	Air temperature sensor voltage too low	Air temperature sensor or circuit wires shorted to ground.	Disconnect the sensor and check for a change in the fault code. If the fault code stays the same, look for a short circuit on the harness. If the fault code is different, replace the sensor. Check system circuits J1A-20 for continuity to terminal 2 of the ATS connector. Check system circuits J1A-20 for resistivity to ground.
P0113	ECM	Air temperature sensor voltage too high	Disconnected sensor or sensor's resistance too high.	Check for disconnected air temperature sensor on the airbox. Check the air temperature sensor for approximately 2280 to 2736 ohms at 19 to 21°C (66 to 70°F). Replace the sensor if necessary. Check system circuits J1A-20 for continuity to terminal 2 of the ATS connector and J1A-27 for continuity to terminal 1 of the ATS connector.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0116	ECM	Coolant temperature sensor functional problem	Intermittent coolant temperature sensor reading or circuit wires shorted to ground.	Check system circuit J1A-19 for continuity to terminal 1 of the CTS connector and J1A-27 for continuity to terminal 2 of the CTS connector. Check circuit J1A-19 and J1A-27 for resistivity to ground. Replace the sensor if necessary.
P0117	ECM	Coolant temperature sensor voltage too low	Coolant temperature sensor or circuit wires shorted to ground.	Disconnect the sensor and check for a change in the fault code. If the fault code stays the same, look for a short circuit on the harness. If the fault code is different, replace the sensor. Check for leakage between sensor's connection and ground. Check system circuit J1A-19 for continuity to terminal 1 of the CTS connector and J1A-27 for continuity to terminal 2 of the CTS connector. Check circuit J1A-19 and J1A-27 for resistivity to ground.
P0118	ECM	Coolant temperature sensor voltage too high	Disconnected sensor or sensor's resistance too high.	Check for disconnected coolant temperature sensor. Check the engine temperature sensor for approximately 2280 to 2736 ohms at 19 to 21°C (66 to 70°F). Replace the sensor if necessary. Check system circuit J1A-19 for continuity to terminal 1 of the CTS connector and J1A-27 for continuity to terminal 2 of the CTS connector.
P0121	ECM	Throttle position sensor functional problem	Damaged circuit wires or connector, damaged throttle position sensor.	Check throttle position sensor connector for 5 volts between pin 1 and 2. Check system circuits J1A-10 for continuity to terminal 1 of the TPS connector, J1A-26 for continuity to terminal 2 of the TPS connector and J1A-1 for continuity to terminal 3 of the TPS connector. Refer to the Shop Manual for complete throttle position sensor testing procedure.
P0122	ECM	Throttle position sensor voltage too low	Damaged circuit wires, damaged throttle position sensor or damaged ECM pins.	Check throttle position sensor connector for 5 volts between pin 1 and 2. Check system circuits J1A-10 for continuity to terminal 1 of the TPS connector, J1A-26 for continuity to terminal 2 of the TPS connector and J1A-1 for continuity to terminal 3 of the TPS connector. Refer to the Shop Manual for complete throttle position sensor testing procedure.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0123	ECM	Throttle position sensor voltage too high	Damaged circuit wires, damaged throttle position sensor or damaged ECM pins.	Check throttle position sensor connector for 5 volts between pin 1 and 2. Check system circuits J1A-10 for continuity to terminal 1 of the TPS connector, J1A-26 for continuity to terminal 2 of the TPS connector and J1A-1 for continuity to terminal 3 of the TPS connector. Refer to the Shop Manual for complete throttle position sensor testing procedure.
P0217	ECM	High coolant temperature detected	Poor cooling conditions. Engine may have been idling for too long. Low coolant level. Problem with cooling system.	Check coolant level. Check condition list to find out how it happened. Check cooling system.
P0230	ECM	Fuel pump over current	Damaged circuit wires, damaged fuel pump.	Check system circuit J2-4 for continuity to terminal 1 of the fuel pump connector. Check system circuit J2-4 for resistivity to ground. Replace the fuel pump if necessary.
P0231	ECM	Fuel pump open circuit or shorted to ground	Disconnected fuel pump. Damaged fuel pump, damaged circuit wires or connectors.	Check system circuit J2-4 for continuity to terminal 1 of the fuel pump connector. Check system circuit J2-12 for continuity to terminal 2 of the fuel pump connector. Check circuit J2-4 and J2-12 for resistivity to ground.
P0261	ECM	MAG injector open circuit or shorted to ground	Damaged or disconnected injector, circuit wires or ECM output pins. Damaged ECM output stage.	Check system circuit J1B-8 for continuity to terminal 2 of the MAG injector. Check system circuit J2-13 for continuity to terminal 1 of the MAG injector. Check circuit J1B-8 for resistivity to ground. Check for approximately 2.4 ohms on injector. Replace ECM.
P0262	ECM	MAG injector shorted to system voltage (over current)	Damaged injector, circuit wires or ECM output pins. Damaged ECM output stage.	Check for approximately 2.4 ohms on injector. Check if system circuit J1B-8 is shorted to system voltage (55V). Replace ECM.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0264	ECM	PTO injector open circuit or shorted to ground	Damaged or disconnected injector, circuit wires or ECM output pins. Damaged ECM output stage.	Check system circuit J1B-1 for continuity to terminal 2 of the PTO injector. Check system circuit J2-13 for continuity to terminal 1 of the PTO injector. Check circuit J1B-1 for resistivity to ground. Check for approximately 2.4 ohms on injector. Replace ECM.
P0265	ECM	PTO injector shorted to system voltage (over current)	Damaged injector, circuit wires or ECM output pins. Damaged ECM output stage.	Check for approximately 2.4 ohms on injector. Check if system circuit J1B-1 is shorted to system voltage (55V). Replace ECM.
P0326	ECM	Knock sensor below minimum noise	Damaged or disconnected knock sensor, damaged circuit wires or damaged connector.	Check system circuits J1A-33 for continuity to terminal 2 of knock sensor connector and J1A-34 for continuity to terminal 1 of knock sensor connector. Check sensor mounting surface and torque.
P0339	ECM	Crankshaft signal fault (lost of sync)	CPS signal not plausible, damaged circuit wires, damaged connector or damaged tooth wheel.	Check for 190 to 290 ohms between terminals J1A-6 and J1A-7 of ECM connector. Check for 2 volts AC between terminals J1A-6 and J1A-7 of ECM connector while cranking the engine.
P0351	ECM	MAG ignition coil open circuit or shorted to ground	Damaged circuit wires or connector, damaged or disconnected ignition coil.	Check system circuit J1B-26 for continuity to terminal 2 of the ignition coil connector. Check for 55 volts on terminal 3 of ignition coil connector. Check for continuity between terminal 1 of ignition coil connector and chassis.
P0352	ECM	PTO ignition coil open circuit or shorted to ground	Damaged circuit wires or connector, damaged or disconnected ignition coil.	Check system circuit J1B-19 for continuity to terminal 2 of the ignition coil connector. Check for 55 volts on terminal 3 of ignition coil connector. Check for continuity between terminal 1 of ignition coil connector and chassis.
P0426	ECM	Exhaust muffler temperature sensor functional problem	Intermittent exhaust muffler temperature sensor reading or circuit wires shorted to ground.	Check system circuits J1A-12 for continuity to terminal 2 of the EGTS connector and J1A-27 for continuity to terminal 1 of the EGTS connector. Check circuits J1A-12 for continuity to ground. Replace the sensor if necessary.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0428	ECM	Exhaust muffler temperature sensor voltage too high	Disconnected sensor or sensor's resistance too high.	Check for disconnected exhaust muffler temperature sensor. Check the exhaust muffler temperature sensor for 215 to 225 ohms at 19 to 21°C (66 to 70°F). Replace the sensor if necessary. Check system circuits J1A-12 for continuity to terminal 2 of the exhaust muffler temperature sensor connector and J1A-27 for continuity to terminal 1 of the muffler temperature sensor connector. Check circuits J1A-27 for continuity to ground.
P0480	ECM	Cooling fan relay open circuit or shorted to ground	Damaged or disconnected relay, damaged circuit wires or terminals.	Check for disconnected relay, damaged circuit wires. Check system circuit J1B-18 for continuity to relay connector.
P0484	ECM	Cooling fan relay shorted to battery	Damaged relay or damaged circuit wires.	Check for damaged relay or damaged circuit wires going to J1B-18.
P0562	ECM	12 V primary circuit voltage too low	Battery failure, damaged circuit wires or connection, too much load on electrical system.	Check battery condition, check if additional accessories are connected in the circuit.
P0563	ECM	12 V primary circuit voltage too high	An external battery charger may have been used, damaged ECM.	Measure 12 V primary circuit voltage on diagnostic connector pin 3 and 5 for approximately 14 volts while engine is running. If it's higher than 15.5 volts you may have a damaged ECM. Make sure no external power is connected to the primary 12 volt circuit.
P0601	ECM	ECM memory checksum error	Damaged ECM.	Replace ECM.
P0608	ECM	Sensor's power supply voltage too low	Damaged circuit wires, shorted TPS or E-RAVE position sensor.	Disconnect TPS and E-RAVE position sensor. Check E-RAVE positions sensor connector for 5 volts between pin 1 and 3. Check system circuit J1A-10 for resistivity to ground.
P0667	ECM	ECM temperature sensor functional problem	Damaged temperature sensor inside in the ECM.	Replace the ECM.
P0668	ECM	ECM temperature sensor voltage too low	Damaged temperature sensor inside in the ECM.	Replace the ECM.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0669	ECM	ECM temperature sensor voltage too high	Damaged temperature sensor inside in the ECM.	Replace the ECM.
P1217	ECM	Engine shutdown at idle because overheat occurred	Engine coolant temperature reached a high value at idle and the engine was stopped for protection.	Avoid keeping the engine idling for too long. Inspect cooling system for leaks.
P1218	ECM	Major Engine overheat occurred	Poor cooling conditions. Engine may have been idling for too long. Low coolant level. Problem with cooling system.	Check coolant level. Check condition list to find out how it happened. Check cooling system.
P1231	ECM	Oil pump open circuit or shorted to ground	Damaged or disconnected oil pump, circuit wires or ECM output pins.	Check connection on oil pump, check system circuit J1B-23. Check WHITE/RED wire on oil pump connector for 55 volts.
P1233	ECM	Oil pump feedback switch do not close	Damaged or disconnected oil pump feedback switch circuit wires or ECM input pin.	Check connection on oil pump feedback switch, check system circuit J1A-4. Check black wire on oil pump feedback switch connector for resistivity to ground.
P1326	ECM	High engine detonation detected on MAG side	Poor fuel quality, low fuel pressure, wrong timing offset, damaged spark plug, engine temperature too high, worn piston/ring.	Measure fuel pressure, check timing offset, check spark plug, check coolant system, check for evidence of piston erosion.
P1327	ECM	High engine detonation detected on PTO side	Poor fuel quality, low fuel pressure, wrong timing offset, damaged spark plug, engine temperature too high, worn piston/ring.	Measure fuel pressure, check timing offset, check spark plug, check coolant system, check for evidence of piston erosion.
P1351	ECM	MAG ignition shorted to system voltage	Damaged circuit wires or connector, damaged ignition coil.	Check system circuit J1B-26, check WHITE/RED wire on ignition coil connector for 55 volts.
P1352	ECM	PTO ignition shorted to system voltage	Damaged circuit wires or connector, damaged ignition coil.	Check system circuit J1B-19, check WHITE/RED wire on injector connector for 55 volts.
P1426	ECM	High exhaust muffler temperature detected	Damaged sensor, low fuel pump pressure, air leak in exhaust system, poor fuel quality.	Check fuel pump pressure, check sensor and replace if necessary, check components in exhaust system.
P1471	ECM	E-RAVE® position sensor functional problem	Damaged circuit wires or connector, damaged E-RAVE position sensor.	Check E-RAVE position sensor connector for 5 volts between pin 1 and 3. Check system circuit J1A-18.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P1472	ECM	E-RAVE® position sensor voltage too low	Damaged circuit wires or connector, damaged E-RAVE position sensor.	Check E-RAVE position sensor connector for 5 volts between pin 1 and 3. Check system circuit J1A-18.
P1473	ECM	E-RAVE® position sensor voltage too high	Damaged circuit wires or connector, damaged E-RAVE position sensor.	Check E-RAVE position sensor connector for 5 volts between pin 1 and 3. Check system circuit J1A-18.
P1476	ECM	RAVE valve middle position not reached	Damaged bellows. Damaged or disconnected hoses. Damaged E-RAVE solenoid valve. Adjustment of the link between the two E-RAVE valves. Carbon deposit around E-RAVE parts.	Check for damaged bellows. Check for damaged or disconnected vacuum hoses. Check for damaged or disconnected pressure hoses. Check if the E-RAVE valves move freely. Clean and make the necessary adjustment if necessary.
P1477	ECM	RAVE valve close position not reached	Damaged bellows. Damaged or disconnected hoses. Damaged E-RAVE solenoid valve. Adjustment of the link between the two E-RAVE valves. Carbon deposit around E-RAVE parts.	Check for damaged bellows. Check for damaged or disconnected vacuum hoses. Check for damaged or disconnected pressure hoses. Check if the E-RAVE valves move freely. Clean and make the necessary adjustment if necessary.
P1478	ECM	RAVE valve open position not reached	Damaged bellows. Damaged or disconnected hoses. Damaged E-RAVE solenoid valve. Adjustment of the link between the two E-RAVE valves. Carbon deposit around E-RAVE parts.	Check for damaged bellows. Check for damaged or disconnected vacuum hoses. Check for damaged or disconnected pressure hoses. Check if the E-RAVE valves move freely. Clean and make the necessary adjustment if necessary.
P1532	ECM	High ECM temperature detected	Poor fuel flow in ECM. Damaged ECM.	Check fuel system for clogged filter, damaged regulator or damaged fuel pump.
P1533	ECM	Major ECM overheat occurred	Low fuel pressure, low fuel circulation in ECM.	Check fuel pump pressure, check fuel line for pinched hose.
P1549	ECM	Major exhaust muffler overheat occurred	Damaged sensor, low fuel pump pressure, air leak in exhaust system, poor fuel quality.	Check fuel pump pressure, check sensor and replace if necessary, check components in exhaust system.
P1562	ECM	Low voltage on system voltage circuit	Damaged circuit wires, connector, injector, ignition coil, oil pump, capacitor or ECM.	Check for inverted wires on magneto connector, loose connection on capacitor. Check for defective component as describe in Possible Causes.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P1563	ECM	High voltage on system voltage circuit	Damaged circuit wires, connector or ECM.	Check for inverted wires on magneto connector, loose connection on capacitor.
P1621	ECM	Overload on 12 V primary circuit	Damaged circuit wires or connector.	Check RED/ORANGE circuit for damaged or shorted wires. Check tail light, headlamp or diagnostic connector.
P1622	ECM	Overload on 12 V secondary circuit	Damaged circuit wires or connector.	Check RED/YELLOW circuit for damaged or shorted wire. Check connections on visor outlet, check heated grips if equipped with standard gauge.
P1623	ECM	Overload on 12 V battery circuit	Damaged circuit wires, connector or battery.	Check RED/WHITE circuit for damaged or shorted wire. Check battery condition. A blown 30 amp fuse is a good indication of a problem with the wires or the battery.
P1656	ECM	D.E.S.S.® line shorted to ground	Damaged circuit wires or mixed up connections.	Check system circuits J1A-23 for continuity to terminal 1 of D.E.S.S. post connector, J1A-11 for continuity to terminal 3 of D.E.S.S. post connector and J1A-5 for continuity to terminal 2 of D.E.S.S. post connector. Check system circuit J1A-23 for continuity to circuit J1A-5 when D.E.S.S. key is installed on D.E.S.S. post. Check system circuit J1A-11 for continuity to the center contact of the D.E.S.S. post connector and circuit J1A-5 for continuity to the outer ring of the D.E.S.S. post. Check system circuits J1A-5, J1A-11 and J1A-23 for continuity to ground.
P1676	ECM	Battery relay open circuit or shorted to ground	Damaged or disconnected relay, circuit wires or terminals.	Check for disconnected relay, damaged circuit wires.
P1679	ECM	Accessory relay open circuit or shorted to ground	Damaged or disconnected relay, circuit wires or terminals.	Check for disconnected relay, damaged circuit wires.
P2299	ECM	Incompatibility between brake lever position and engine/vehicle speed	Brake lever was left in Park position. The pilot kept a constant pressure applied on the brake lever while running. Defective or stuck brake switch. Brake circuit is shorted to 12 volts.	Check if the brake switch operate properly. Check if brake switch is secured on the master cylinder. Check for 12 volts at ECM connector J1A_30 when brake is applied. Check for 0 volt at ECM connector J1A-30 when brake is not applied. Check for a faulty ground on the brake light.

DIAGNOSTIC AND FAULT CODES

FAULT CODE TABLE

P-CODE	MODULE	DESCRIPTION	CAUSE	ACTION
P0079	ECM	E-RAVE® solenoid open circuit or shorted to ground	Disconnected E-RAVE solenoid. Damaged E-RAVE solenoid, wires or terminals.	Check for approximately 12 volts between E-RAVE solenoid RD/OR wire and chassis. Check for approximately 30 ohms between E-RAVE solenoid terminals. Check system circuit J1B-22.
P0106	ECM	Intake air pressure sensor functional problem	Damaged air pressure sensor inside in the ECM.	Replace the ECM.
P0107	ECM	Intake air pressure sensor voltage too low	Damaged air pressure sensor inside in the ECM.	Replace the ECM.
P0108	ECM	Intake air pressure sensor voltage too high	Damaged air pressure sensor inside in the ECM.	Replace the ECM.
P0111	ECM	Air temperature sensor functional problem	Intermittent air temperature sensor reading or circuit wires shorted to ground.	Check system circuits J1A-20 for continuity to terminal 2 of the ATS connector and J1A-27 for continuity to terminal 1 of the ATS connector. Check circuits J1A-20 and J1A-27 for resistivity to ground. Sensor can have an intermittent reading, replace the sensor if necessary.
P0112	ECM	Air temperature sensor voltage too low	Air temperature sensor or circuit wires shorted to ground.	Disconnect the sensor and check for a change in the fault code. If the fault code stays the same, look for a short circuit on the harness. If the fault code is different, replace the sensor. Check system circuits J1A-20 for continuity to terminal 2 of the ATS connector. Check system circuits J1A-20 for resistivity to ground.
P0113	ECM	Air temperature sensor voltage too high	Disconnected sensor or sensor's resistance too high.	Check for disconnected air temperature sensor on the airbox. Check the air temperature sensor for approximately 2280 to 2736 ohms at 19 to 21°C (66 to 70°F). Replace the sensor if necessary. Check system circuits J1A-20 for continuity to terminal 2 of the ATS connector and J1A-27 for continuity to terminal 1 of the ATS connector.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0116	ECM	Coolant temperature sensor functional problem	Intermittent coolant temperature sensor reading or circuit wires shorted to ground.	Check system circuit J1A-19 for continuity to terminal 1 of the CTS connector and J1A-27 for continuity to terminal 2 of the CTS connector. Check circuit J1A-19 and J1A-27 for resistivity to ground. Replace the sensor if necessary.
P0117	ECM	Coolant temperature sensor voltage too low	Coolant temperature sensor or circuit wires shorted to ground.	Disconnect the sensor and check for a change in the fault code. If the fault code stays the same, look for a short circuit on the harness. If the fault code is different, replace the sensor. Check for leakage between sensor's connection and ground. Check system circuit J1A-19 for continuity to terminal 1 of the CTS connector and J1A-27 for continuity to terminal 2 of the CTS connector. Check circuit J1A-19 and J1A-27 for resistivity to ground.
P0118	ECM	Coolant temperature sensor voltage too high	Disconnected sensor or sensor's resistance too high.	Check for disconnected coolant temperature sensor. Check the engine temperature sensor for approximately 2280 to 2736 ohms at 19 to 21°C (66 to 70°F). Replace the sensor if necessary. Check system circuit J1A-19 for continuity to terminal 1 of the CTS connector and J1A-27 for continuity to terminal 2 of the CTS connector.
P0121	ECM	Throttle position sensor functional problem	Damaged circuit wires or connector, damaged throttle position sensor.	Check throttle position sensor connector for 5 volts between pin 1 and 2. Check system circuits J1A-10 for continuity to terminal 1 of the TPS connector, J1A-26 for continuity to terminal 2 of the TPS connector and J1A-1 for continuity to terminal 3 of the TPS connector. Refer to the Shop Manual for complete throttle position sensor testing procedure.
P0122	ECM	Throttle position sensor voltage too low	Damaged circuit wires, damaged throttle position sensor or damaged ECM pins.	Check throttle position sensor connector for 5 volts between pin 1 and 2. Check system circuits J1A-10 for continuity to terminal 1 of the TPS connector, J1A-26 for continuity to terminal 2 of the TPS connector and J1A-1 for continuity to terminal 3 of the TPS connector. Refer to the Shop Manual for complete throttle position sensor testing procedure.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0123	ECM	Throttle position sensor voltage too high	Damaged circuit wires, damaged throttle position sensor or damaged ECM pins.	Check throttle position sensor connector for 5 volts between pin 1 and 2. Check system circuits J1A-10 for continuity to terminal 1 of the TPS connector, J1A-26 for continuity to terminal 2 of the TPS connector and J1A-1 for continuity to terminal 3 of the TPS connector. Refer to the Shop Manual for complete throttle position sensor testing procedure.
P0217	ECM	High coolant temperature detected	Poor cooling conditions. Engine may have been idling for too long. Low coolant level. Problem with cooling system.	Check coolant level. Check condition list to find out how it happened. Check cooling system.
P0230	ECM	Fuel pump over current	Damaged circuit wires, damaged fuel pump.	Check system circuit J2-4 for continuity to terminal 1 of the fuel pump connector. Check system circuit J2-4 for resistivity to ground. Replace the fuel pump if necessary.
P0231	ECM	Fuel pump open circuit or shorted to ground	Disconnected fuel pump. Damaged fuel pump, damaged circuit wires or connectors.	Check system circuit J2-4 for continuity to terminal 1 of the fuel pump connector. Check system circuit J2-12 for continuity to terminal 2 of the fuel pump connector. Check circuit J2-4 and J2-12 for resistivity to ground.
P0261	ECM	MAG injector open circuit or shorted to ground	Damaged or disconnected injector, circuit wires or ECM output pins. Damaged ECM output stage.	Check system circuit J1B-8 for continuity to terminal 1 of the MAG injector. Check system circuit J1B-1 for continuity to terminal 2 of the MAG injector. Check circuit J1B-8 and J1B-1 for resistivity to ground. Check for approximately 2.4 ohms on injector. Replace ECM.
P0262	ECM	MAG injector shorted to system voltage (over current)	Damaged injector, circuit wires or ECM output pins. Damaged ECM output stage.	Check for approximately 2.4 ohms on injector. Check if system circuit J1B-1 and J1B-8 are shorted to system voltage (60 V). Replace ECM.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0264	ECM	PTO injector open circuit or shorted to ground	Damaged or disconnected injector, circuit wires or ECM output pins. Damaged ECM output stage.	Check system circuit J1B-7 for continuity to terminal 2 of the PTO injector. Check system circuit J1B-2 for continuity to terminal 1 of the PTO injector. Check circuit J1B-7 and J1B-2 for resistivity to ground. Check for approximately 2.4 ohms on injector. Replace ECM.
P0265	ECM	PTO injector shorted to system voltage (over current)	Damaged injector, circuit wires or ECM output pins. Damaged ECM output stage.	Check for approximately 2.4 ohms on injector. Check if system circuit J1B-2 and J1B-7 are shorted to system voltage (60 V). Replace ECM.
P0326	ECM	Knock sensor below minimum noise	Damaged or disconnected knock sensor, damaged circuit wires or damaged connector.	Check system circuits J1A-33 for continuity to terminal 2 of knock sensor connector and J1A-34 for continuity to terminal 1 of knock sensor connector. Check sensor mounting surface and torque.
P0339	ECM	Crankshaft signal fault (lost of sync)	CPS signal not plausible, damaged circuit wires, damaged connector or damaged tooth wheel.	Check for 190 to 290 ohms between terminals J1A-6 and J1A-7 of ECM connector. Check for 2 volts AC between terminals J1A-6 and J1A-7 of ECM connector while cranking the engine.
P0351	ECM	MAG ignition coil open circuit or shorted to ground	Damaged circuit wires or connector, damaged or disconnected ignition coil.	Check system circuit J1B-26 for continuity to terminal 2 of the ignition coil connector. Check for 60 volts on terminal 3 of ignition coil connector. Check for continuity between terminal 1 of ignition coil connector and chassis.
P0352	ECM	PTO ignition coil open circuit or shorted to ground	Damaged circuit wires or connector, damaged or disconnected ignition coil.	Check system circuit J1B-19 for continuity to terminal 2 of the ignition coil connector. Check for 60 volts on terminal 3 of ignition coil connector. Check for continuity between terminal 1 of ignition coil connector and chassis.
P0426	ECM	Exhaust muffler temperature sensor functional problem	Intermittent exhaust muffler temperature sensor reading or circuit wires shorted to ground. Exhaust muffler temperature sensor disconnected from muffler.	Check for damaged sensor wire. Check for disconnected or unscrewed sensor.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P0428	ECM	Exhaust muffler temperature sensor open circuit	Thermocouple sensor wire is open circuit.	Thermocouple sensor wire is open, replace with available kit.
P0480	ECM	Cooling fan relay open circuit or shorted to ground	Damaged or disconnected relay, damaged circuit wires or terminals.	Check for disconnected relay, damaged circuit wires. Check system circuit J1B-18 for continuity to relay connector.
P0484	ECM	Cooling fan relay shorted to battery	Damaged relay or damaged circuit wires.	Check for damaged relay or damaged circuit wires going to J1B-18.
P0562	ECM	12 V primary circuit voltage too low	Battery failure, damaged circuit wires or connection, too much load on electrical system.	Check battery condition, check if additional accessories are connected in the circuit.
P0563	ECM	12 V primary circuit voltage too high	An external battery charger may have been used, damaged ECM.	Measure 12 V primary circuit voltage on diagnostic connector pin 3 and 5 for approximately 14 volts while engine is running. If it's higher than 15.5 volts you may have a damaged ECM. Make sure no external power is connected to the primary 12 volt circuit.
P0601	ECM	ECM memory checksum error	Damaged ECM.	Replace ECM.
P0608	ECM	Sensor's power supply voltage too low	Damaged circuit wires, shorted TPS or E-RAVE position sensor.	Disconnect TPS and E-RAVE position sensor. Check E-RAVE positions sensor connector for 5 volts between pin 1 and 3. Check system circuit J1A-10 for resistivity to ground.
P1217	ECM	Engine shutdown at idle because overheat occurred	Engine coolant temperature reached a high value at idle and the engine was stopped for protection.	Avoid keeping the engine idling for too long. Inspect cooling system for leaks.
P1218	ECM	Major Engine overheat occurred	Poor cooling conditions. Engine may have been idling for too long. Low coolant level. Problem with cooling system.	Check coolant level. Check condition list to find out how it happened. Check cooling system.
P1231	ECM	Oil pump open circuit or shorted to ground	Damaged or disconnected oil pump, circuit wires or ECM output pins.	Check connection on oil pump, check system circuit J1B-23. Check WHITE/RED wire on oil pump connector for 60 volts.
P1233	ECM	Oil pump feedback switch do not close	Damaged or disconnected oil pump feedback switch circuit wires or ECM input pin.	Check connection on oil pump feedback switch, check system circuit J1A-32. Check black wire on oil pump feedback switch connector for resistivity to ground.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P1326	ECM	High engine detonation detected on MAG side	Poor fuel quality, low fuel pressure, wrong timing offset, damaged spark plug, engine temperature too high, worn piston/ring.	Measure fuel pressure, check timing offset, check spark plug, check coolant system, check for evidence of piston erosion.
P1327	ECM	High engine detonation detected on PTO side	Poor fuel quality, low fuel pressure, wrong timing offset, damaged spark plug, engine temperature too high, worn piston/ring.	Measure fuel pressure, check timing offset, check spark plug, check coolant system, check for evidence of piston erosion.
P1351	ECM	MAG ignition shorted to system voltage	Damaged circuit wires or connector, damaged ignition coil.	Check system circuit J1B-26, check WHITE/RED wire on ignition coil connector for 60 volts.
P1352	ECM	PTO ignition shorted to system voltage	Damaged circuit wires or connector, damaged ignition coil.	Check system circuit J1B-19, check WHITE/RED wire on injector connector for 60 volts.
P1426	ECM	High exhaust muffler temperature detected	Damaged sensor, low fuel pump pressure, air leak in exhaust system, poor fuel quality.	Check fuel pump pressure, check sensor and replace if necessary, check components in exhaust system.
P1427	ECM	Temperature module not detected	Temperature module is set to be active with B.U.D.S. but the module is not connected or it is damaged. Damaged wires.	Check if temperature module is connected. Check for damaged connector or damaged wires. Check if 12 volts system is ok. Check for 12 volts between pin 3 and 4 on connector TM. Check for continuity between TM connector pin 1 and BUDS connector pin 1. Check for continuity between TM connector pin 2 and BUDS connector pin 2.
P1428	ECM	Tuned pipe temperature sensor open circuit	Damaged sensor or damaged sensor wire.	Replace the temperature sensor with the kit available from BRP.
P1429	ECM	Tuned pipe temperature sensor functional problem	Intermittent contact with the temperature sensor. Damaged sensor or damaged sensor wire.	Replace the temperature sensor with the kit available from BRP.
P1430	ECM	Thermocouple module not correctly set	Thermocouple module is connected but it is not set to be active with B.U.D.S.	Go to the setting tab with B.U.D.S. and check "With Thermocouple Module" under Vehicule configuration.
P1471	ECM	E-RAVE® position sensor functional problem	Damaged circuit wires or connector, damaged E-RAVE position sensor.	Check E-RAVE position sensor connector for 5 volts between pin 1 and 3. Check system circuit J1A-18.
P1472	ECM	E-RAVE® position sensor voltage too low	Damaged circuit wires or connector, damaged E-RAVE position sensor.	Check E-RAVE position sensor connector for 5 volts between pin 1 and 3. Check system circuit J1A-18.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P1473	ECM	E-RAVE® position sensor voltage too high	Damaged circuit wires or connector, damaged E-RAVE position sensor.	Check E-RAVE position sensor connector for 5 volts between pin 1 and 3. Check system circuit J1A-18.
P1476	ECM	RAVE valve middle position not reached	Damaged bellows. Damaged or disconnected hoses. Damaged E-RAVE solenoid valve. Adjustment of the link between the two E-RAVE valves. Carbon deposit around E-RAVE parts.	Check for damaged bellows. Check for damaged or disconnected vacuum hoses. Check for damaged or disconnected pressure hoses. Check if the E-RAVE valves move freely. Clean and make the necessary adjustment if necessary.
P1477	ECM	RAVE valve close position not reached	Damaged bellows. Damaged or disconnected hoses. Damaged E-RAVE solenoid valve. Adjustment of the link between the two E-RAVE valves. Carbon deposit around E-RAVE parts.	Check for damaged bellows. Check for damaged or disconnected vacuum hoses. Check for damaged or disconnected pressure hoses. Check if the E-RAVE valves move freely. Clean and make the necessary adjustment if necessary.
P1478	ECM	RAVE valve open position not reached	Damaged bellows. Damaged or disconnected hoses. Damaged E-RAVE solenoid valve. Adjustment of the link between the two E-RAVE valves. Carbon deposit around E-RAVE parts.	Check for damaged bellows. Check for damaged or disconnected vacuum hoses. Check for damaged or disconnected pressure hoses. Check if the E-RAVE valves move freely. Clean and make the necessary adjustment if necessary.
P1532	ECM	High ECM temperature detected	Poor fuel flow in ECM. Damaged ECM.	Check fuel system for clogged filter, damaged regulator or damaged fuel pump.
P1533	ECM	Major ECM overheat occurred	Low fuel pressure, low fuel circulation in ECM.	Check fuel pump pressure, check fuel line for pinched hose.
P1549	ECM	Major exhaust muffler overheat occurred	Damaged sensor, low fuel pump pressure, air leak in exhaust system, poor fuel quality.	Check fuel pump pressure, check sensor and replace if necessary, check components in exhaust system.
P1562	ECM	Low voltage on system voltage circuit	Damaged circuit wires, connector, injector, ignition coil, oil pump, capacitor or ECM.	Check for inverted wires on magneto connector, loose connection on capacitor. Check for defective component as describe in Possible Causes.
P1563	ECM	High voltage on system voltage circuit	Damaged circuit wires, connector or ECM.	Check for inverted wires on magneto connector, loose connection on capacitor.
P1621	ECM	Overload on 12 V primary circuit	Damaged circuit wires or connector.	Check RED/ORANGE circuit for damaged or shorted wires. Check tail light, headlamp or diagnostic connector.

Subsection XX (DIAGNOSTIC AND FAULT CODES)

P1622	ECM	Overload on 12 V secondary circuit	Damaged circuit wires or connector.	Check RED/YELLOW circuit for damaged or shorted wire. Check connections on visor outlet, check heated grips if equipped with standard gauge.
P1623	ECM	Overload on 12 V battery circuit	Damaged circuit wires, connector or battery.	Check RED/WHITE circuit for damaged or shorted wire. Check battery condition. A blown 30 amp fuse is a good indication of a problem with the wires or the battery.
P1656	ECM	D.E.S.S.® line shorted to ground	Damaged circuit wires or mixed up connections.	Check system circuits J1A-23 for continuity to terminal 1 of D.E.S.S. post connector, J1A-11 for continuity to terminal 3 of D.E.S.S. post connector and J1A-5 for continuity to terminal 2 of D.E.S.S. post connector. Check system circuit J1A-23 for continuity to circuit J1A-5 when D.E.S.S. key is installed on D.E.S.S. post. Check system circuit J1A-11 for continuity to the center contact of the D.E.S.S. post connector and circuit J1A-5 for continuity to the outer ring of the D.E.S.S. post. Check system circuits J1A-5, J1A-11 and J1A-23 for continuity to ground.
P1676	ECM	Battery relay open circuit or shorted to ground	Damaged or disconnected relay, circuit wires or terminals.	Check for disconnected relay, damaged circuit wires.
P1679	ECM	Accessory relay open circuit or shorted to ground	Damaged or disconnected relay, circuit wires or terminals.	Check for disconnected relay, damaged circuit wires.
P2299	ECM	Incompatibility between brake lever position and engine/vehicle speed	Brake lever was left in Park position. The pilot kept a constant pressure applied on the brake lever while running. Defective or stuck brake switch. Brake circuit is shorted to 12 volts.	Check if the brake switch operate properly. Check if brake switch is secured on the master cylinder. Check for 12 volts at ECM connector J1A_30 when brake is applied. Check for 0 volt at ECM connector J1A-30 when brake is not applied. Check for a faulty ground on the brake light.

FUEL TANK AND FUEL PUMP

SERVICE TOOLS

Description	Part Number	Page
FLUKE 115 MULTIMETER	529 035 868	17
FUEL HOSE ADAPTER.....	529 036 023	7
FUEL PUMP NUT TOOL	529 036 214	12-13
LEAK TEST KIT	529 033 100	6
OETIKER PLIERS.....	295 000 070	9
PRESSURE GAUGE.....	529 035 709	7
SMALL HOSE PINCHER	295 000 076	6
SUCTION PUMP	529 035 880	9
VACUUM/PRESSURE PUMP	529 021 800	6-7


SERVICE PRODUCTS

Description	Part Number	Page
XPS BRAKES AND PARTS CLEANER (CAN).....	219 701 776	16
XPS BRAKES AND PARTS CLEANER (USA).....	219 701 705	16



If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

Subsection XX (FUEL TANK AND FUEL PUMP)

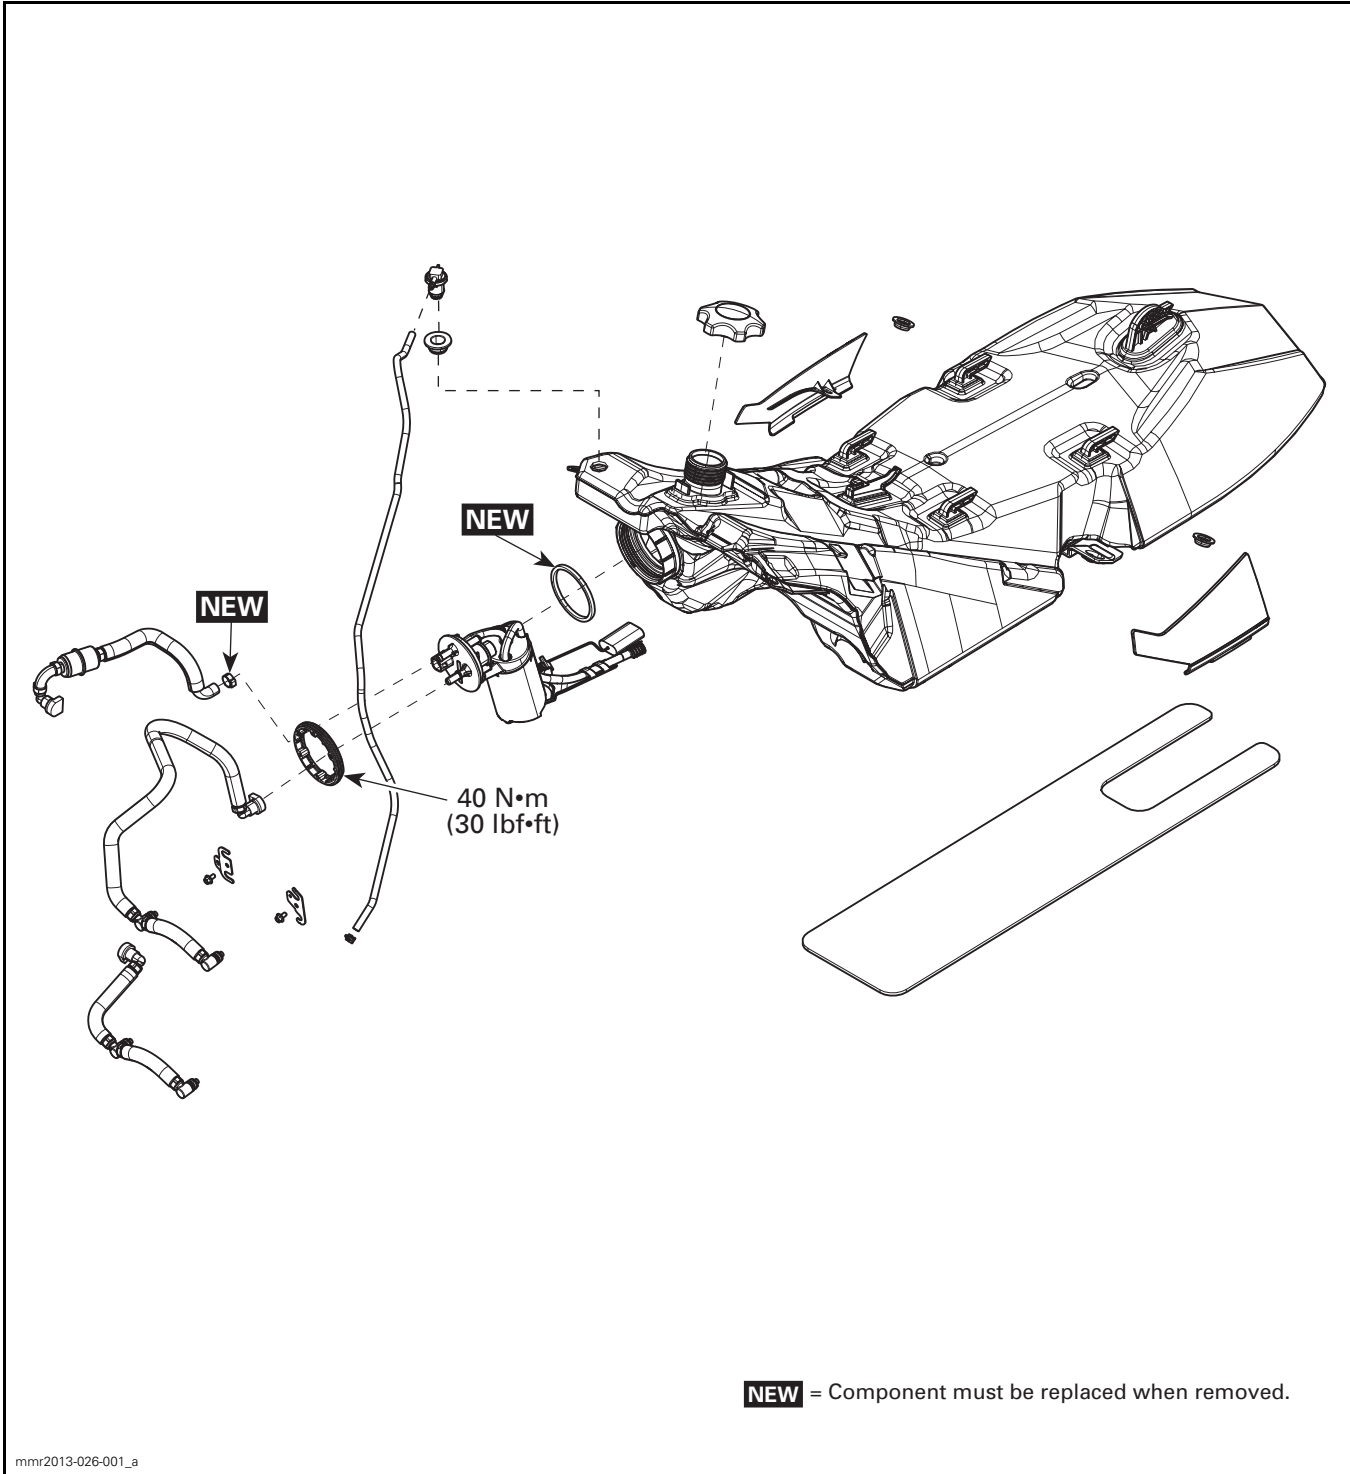

GENERAL

NOTE: It is a good practice to check for fault codes using B.U.D.S. software as a first troubleshooting step. Refer to *DIAGNOSTIC AND FAULT CODES*.

⚠ WARNING

Always disconnect battery prior to working on the fuel system.

⚠ WARNING

Always disconnect the magneto connector prior to:

- Disconnecting any fuel hose.
 - Removing a fuel injector.
 - Removing a spark plug cable or spark plug.
- Otherwise, if the engine is cranked, fuel vapors may ignite in presence of a spark creating a fire hazard.

⚠ WARNING

Proceed with care and use appropriate safety equipment when working on the fuel system. Wear safety glasses and work in a well ventilated area.

When disconnecting a fuel line, cover the connection with an absorbent shop rag and proceed slowly to minimize spilling.

⚠ WARNING

Do not allow fuel to spill on hot engine parts and/or on electrical connectors. Wipe off any fuel spillage in the engine compartment. Fuel is flammable and explosive under certain conditions.

⚠ WARNING

After working on the fuel system, always carry out a fuel system pressurization test to check for leaks.

SYSTEM DESCRIPTION

Electric Fuel Pump

An electric fuel pump is mounted in the upper RH front part of the fuel tank.


A 12 Vdc high pressure fuel pump with an integrated jet pump is used.

NOTE: Although the fuel pump is connected to the 55/60 Vdc system, the ECM modulates the voltage (Pulse Width Modulation) between 9 and 16 Vdc depending on the engine RPM. The fuel pump output will change as voltage changes.

As soon as the START/RER button is depressed, the electric fuel pump turns on for a few seconds to pressurize the fuel system in preparation for the engine start. When the engine runs, the fuel pump is ON continuously to provide a constant fuel pressure to the injectors.

To ensure a constant delivery of fuel to the engine for all riding conditions when the fuel level is low, a rear pickup and a fuel pump reservoir is used.

The fuel pump reservoir is actually the housing of the fuel pump module in which the fuel pump is located. A check valve at the bottom of the housing allows the fuel in the tank to enter the fuel pump reservoir.

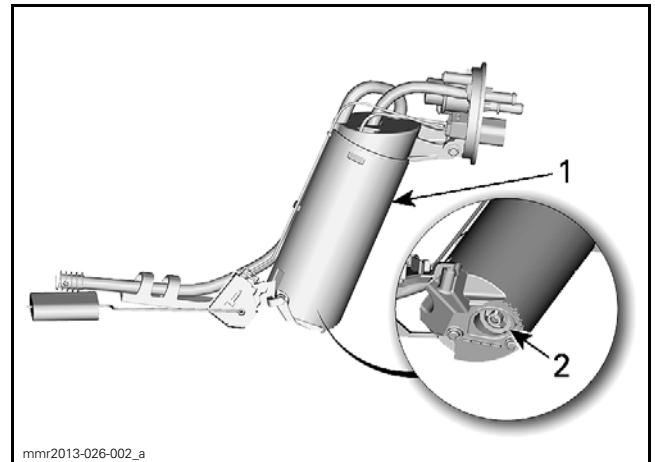


TYPICAL

1. Fuel pump reservoir
2. Check valve

When the fuel pump runs, it draws the fuel from the fuel pump reservoir and feeds it to the injection system. This causes fuel in the tank to be drawn into the fuel pump reservoir through its bottom inlet check valve.

At the same time, a portion of the fuel flow from the electric fuel pump flows through a jet pump that contains a venturi.


Subsection XX (FUEL TANK AND FUEL PUMP)

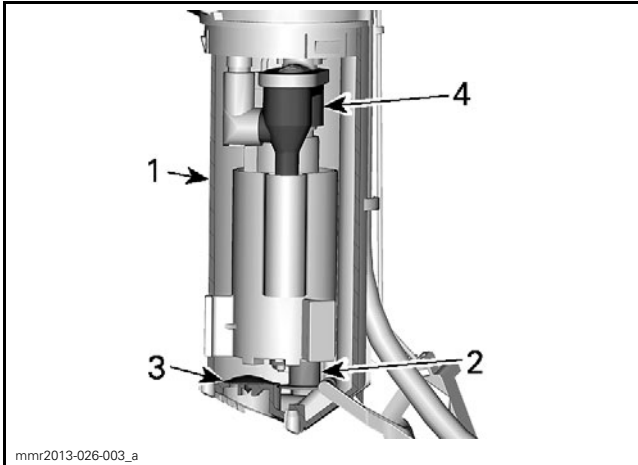

TYPICAL - VIEW INSIDE FUEL PUMP RESERVOIR

1. Fuel pump reservoir
2. Bottom inlet
3. Check valve (open upwards)
4. Venturi

As the fuel accelerates through the venturi, it generates a low pressure area at a connection to the remote pickup, which draws fuel into the fuel pump reservoir from the remote pickup.

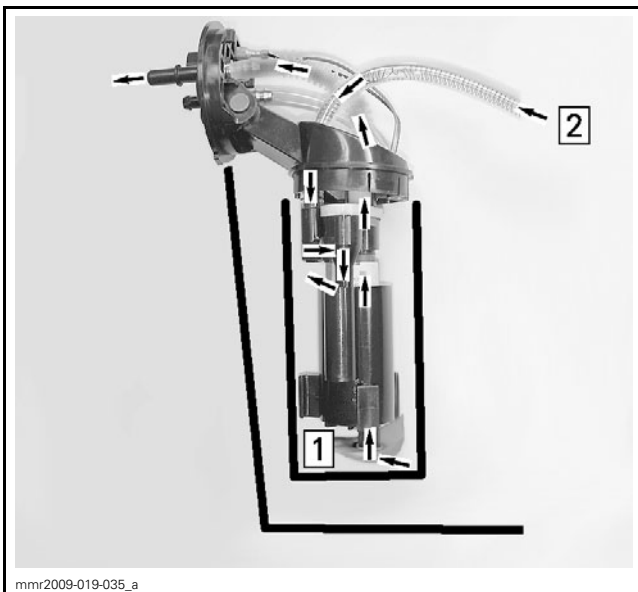


TYPICAL

- Step 1: Bottom inlet draws fuel from fuel pump reservoir
Step 2: Low pressure from venturi draws fuel from rear pickup into fuel pump reservoir

When riding the vehicle on a level surface, fuel is drawn into the fuel pump reservoir through its check valve and through the remote pickup simultaneously, as long as there is enough fuel in the tank to cover the remote pickup.

When riding downhill with a low amount of fuel in the tank, the fuel moves towards the front of fuel tank. The check valve opens and fuel enters the

fuel pump reservoir from the fuel tank through the check valve only as there is no fuel at the remote pickup.

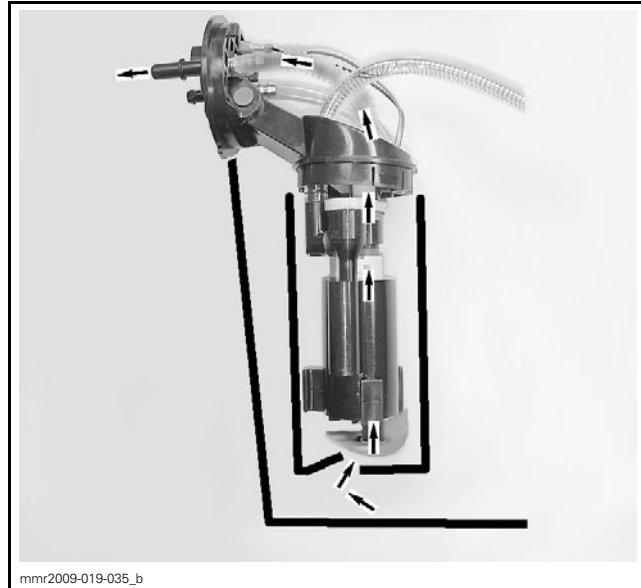

When riding uphill with a low amount of fuel in the tank, the fuel moves towards the rear of the fuel tank. The check valve closes and traps the fuel in the pump reservoir. The fuel pump continues to draw fuel from the fuel pump reservoir, which is now only fed by the jet pump using the rear pickup. This prevents air from being drawn into the fuel lines from the fuel tank.

The continuous fuel flow cools down the fuel pump, the injectors and the ECM. To cool these components, the fuel circulates as follows:


- Out of fuel pump
- Through the ECM
- To the injectors (around the voice coils)
- Through the pressure regulator
- Back to fuel tank.

NOTE: The hose loop between the MAG injector outlet and the ECM dampens the engine torque reaction movement.

Fuel Pickup

Fuel enters the fuel pump reservoir from either a check valve at the bottom of the fuel pump reservoir, or from a remote pickup in the rear portion of the fuel tank.

The remote pickup uses a replaceable steel mesh strainer to filter out relatively large dirt particles and prevent clogging of the jet pump. The fuel entering the fuel pump reservoir through the check valve will be filtered by the fuel pump prefilter.

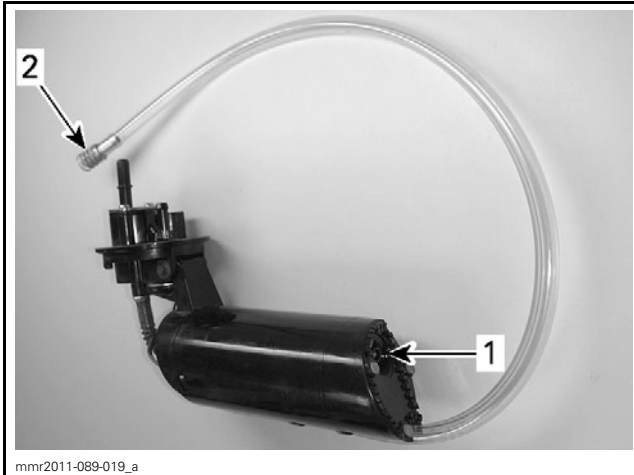


mmr2011-089-019_a

1. Fuel pump reservoir check valve
2. Remote pickup with steel mesh strainer

Fuel Pressure Regulator

An integrated fuel pressure regulator is mounted on the fuel pump flange. It is basically a spring loaded valve that opens and closes the path of fuel returning to the tank, thus maintaining a constant fuel pressure in the system.

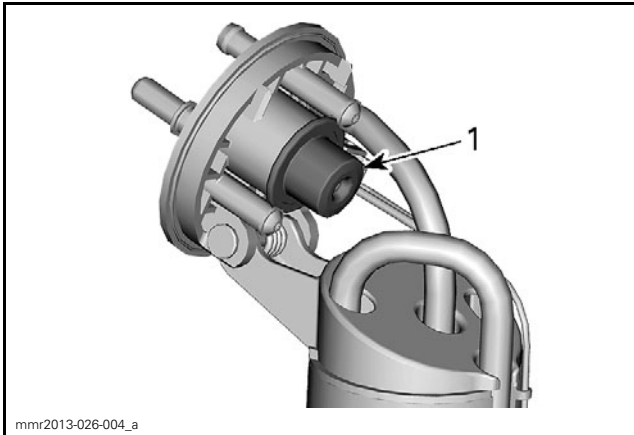

mmr2013-026-004_a

1. Integrated fuel pressure regulator

FUEL PRESSURE
Approximately 303 kPa (44 PSI) at 2000 RPM (will be lower at idle)

Fuel Tank Vent

The fuel tank is vented through a combination type check valve that allows ambient air pressure to enter fuel tank at all times.


As fuel is consumed by the engine, a negative pressure would occur in the fuel tank. This could eventually prevent the fuel pump from drawing enough fuel. The **negative pressure relieve function** of the valve allows the higher outside air pressure in.

If pressure builds up and exceeds 2.0 kPa to 4.8 kPa (.3 PSI to .7 PSI) in the fuel tank, the check valve opens and lets the excess pressure vent out of the tank.

Fuel Filters

Fuel Pump Pre-Filter

A fuel pump pre-filter is used at the electric fuel pump inlet. It is a replaceable nylon mesh filter located within the fuel pump module housing (fuel pump reservoir).

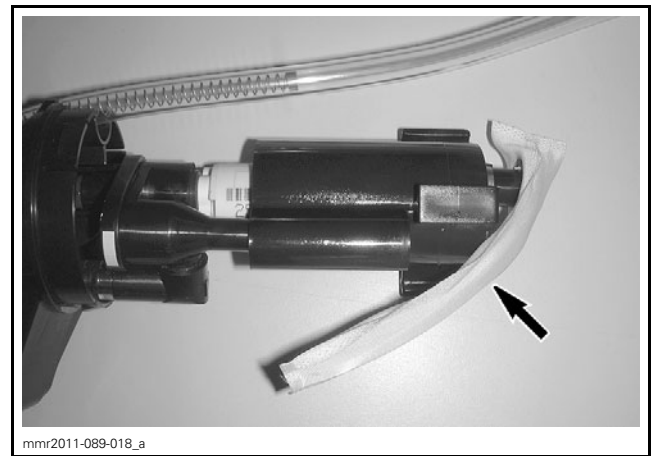

mmr2011-089-018_a

FUEL PUMP PRE-FILTER (FUEL RESERVOIR REMOVED)

The fuel pump pre-filter protects the fuel pump and prevents clogging of the fuel passages within the fuel pump module.

In-Line Fuel Filter

An in-line filter on the supply side is located at front of the fuel tank, above the oil injection tank. It is a replaceable metallic canister type filter used to deliver dirt-free fuel to the injectors.

Fuel Level Indication

A float type fuel level sensor varies its resistance with fuel level thus providing a signal to the multifunction gauge for fuel level indication.


INSPECTION

FUEL SYSTEM PRESSURIZATION AND LEAK TEST

Using B.U.D.S., active the fuel pump to apply a pressure in the fuel system. Check to detect any leak.

- Select **Activation** and **ECM** tabs.
- Click on the **Fuel Pump (CLick/Hold)** button in the **Activate** field.

Subsection XX (FUEL TANK AND FUEL PUMP)

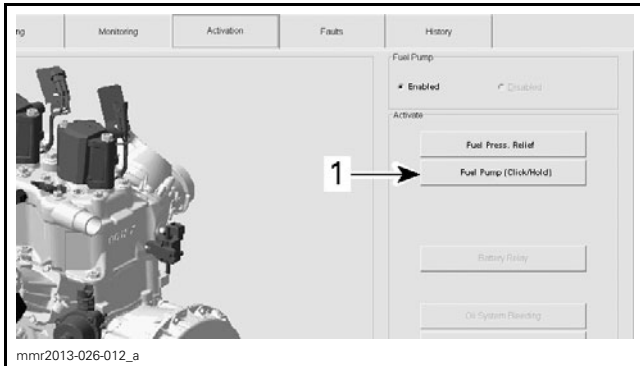


1. Press here to activate fuel pump

⚠ WARNING


After working on the fuel system, carry out a fuel system pressurization test to check for leaks. Failure to carry out a fuel system pressurization test could result in severe injury or a life threatening situation should a leak occur.

FUEL TANK LEAK TEST

1. Fill up fuel tank.
2. Open the left side panel to access the fuel vent tube.
3. Install a SMALL HOSE PINCHER (P/N 295 000 076) on the vent tube.

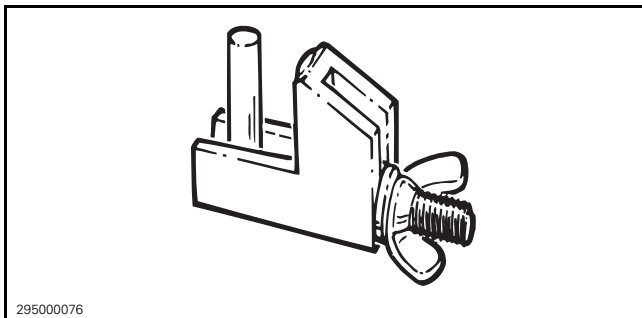

295000076

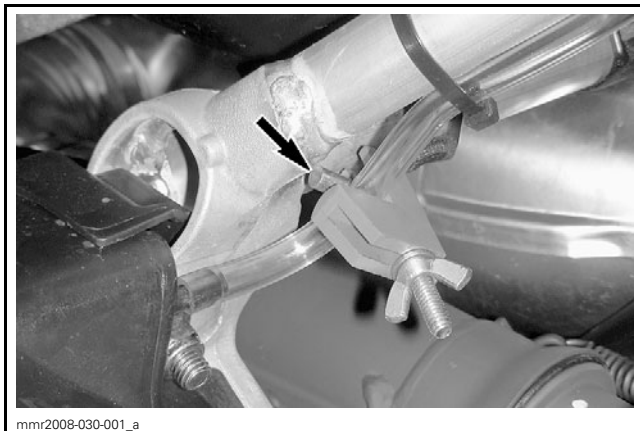

mnr2008-030-001_a

TYPICAL - HOSE PINCHER ON FUEL VENT TUBE

4. Install the appropriate test cap from the LEAK TEST KIT (P/N 529 033 100) on fuel tank inlet.




529033100

5. Install VACUUM/PRESSURE PUMP (P/N 529 021 800) on pressure test fuel cap.



529021800

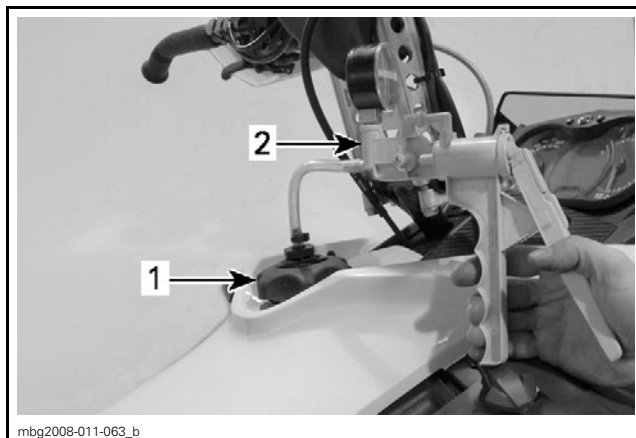

mng2008-011-063_b

TYPICAL

1. Pressure test fuel cap
2. Vacuum/pressure pump

6. Set pump selector to pressure.
7. Pressurize fuel tank as follows.


PRESSURE	TIME WITHOUT PRESSURE DROP
21 kPa (3 PSI)	3 minutes

If pressure drops, locate fuel leak(s) and repair or replace leaking component(s).

To ease locating leak(s), spray soapy water on components; bubbles will indicate leak location(s).

Fuel Tank Vent Valve Test

1. While the fuel tank is still pressurized as in the previous test, carry out the following:
2. Place a finger over the vent hose outlet.
3. When removing hose pincher, alternately touch and release vent hose outlet. You should feel pressurized air flowing out indicating the pressure relief valve function is working.
4. Release any remaining pressure in the fuel tank by slowly unscrewing fuel tank cap.
5. Remove the pressure test fuel cap.
6. Remove the fuel tank vent tube from its fitting on the lower left front body panel.
7. Install the VACUUM/PRESSURE PUMP (P/N 529 021 800) on the vent tube and apply air pressure through the vent valve. Air must flow freely towards the fuel tank neck.

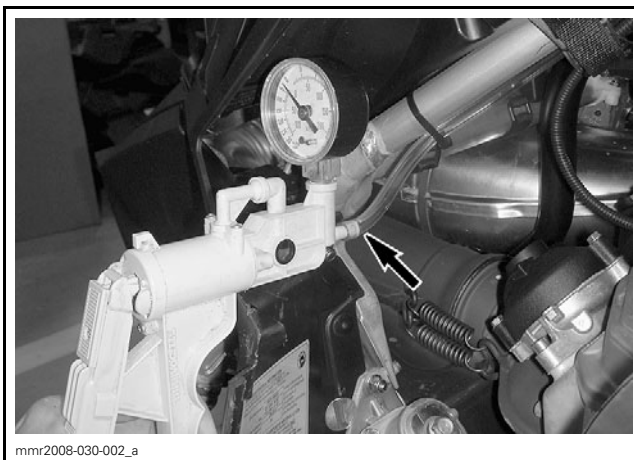

TYPICAL - VACUUM/PRESSURE PUMP ON VENT TUBE

NOTE: If fuel vent check valve does not function as indicated in test, replace vent valve.


8. Remove vacuum/pressure pump.
9. Install vent tube on its fitting.
10. Install normal fuel tank cap.

FUEL PUMP PRESSURE TEST

The pressure test provides an indication of the available fuel pressure at the fuel pump outlet. It validates the pressure regulator and the fuel pump.

1. Ensure there is enough gas in fuel tank.
2. Install a rag under the ECM hose quick connect to catch fuel spillage.


3. Disconnect fuel pressure hose from ECM.

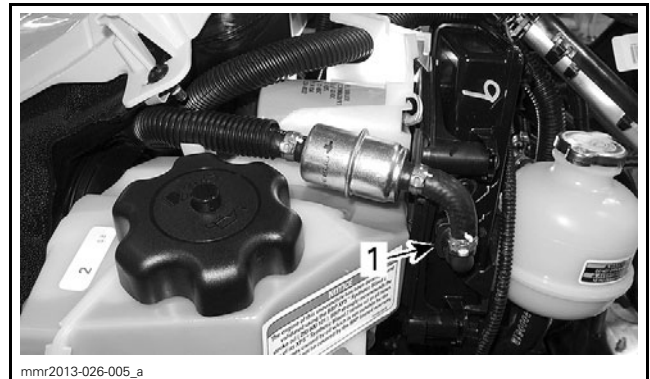


TYPICAL

1. Disconnect here

4. Install the FUEL HOSE ADAPTER (P/N 529 036 023) and the PRESSURE GAUGE (P/N 529 035 709) between fuel pressure hose and ECM.

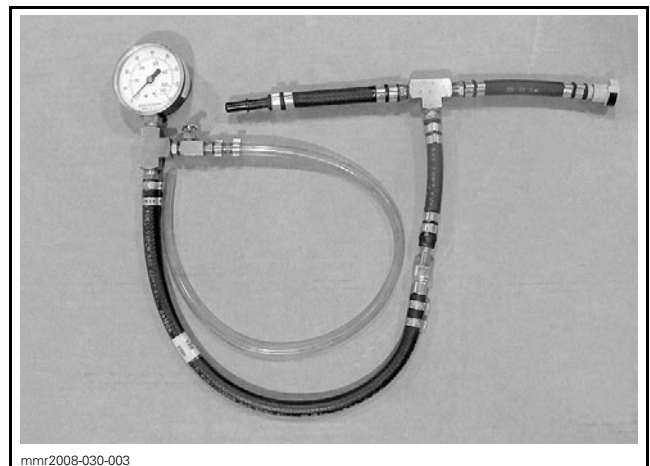

PRESSURE GAUGE WITH FUEL HOSE ADAPTER

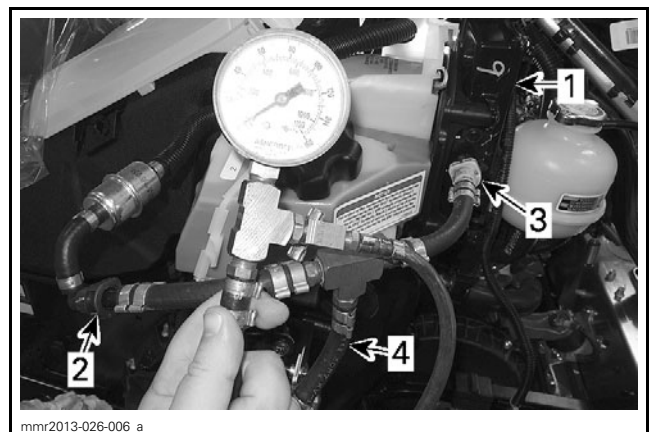

1. ECM
2. Fuel pressure hose fitting
3. Fuel hose adapter to ECM fitting
4. Fuel hose adapter to pressure gauge

Subsection XX (FUEL TANK AND FUEL PUMP)

⚠ WARNING

When carrying out pressure test, ensure fuel is not leaking from test equipment onto hot exhaust system or electrical components. Ensure fuel hose do not come into contact with hot engine parts or hot exhaust system.

5. Start engine.
6. Run engine above 2000 RPM and observe the fuel pressure.

FUEL PRESSURE

303 kPa (44 PSI)

If pressure is lower than specified, momentarily block the return hose while monitoring the pressure gauge.


NOTICE Do not block the fuel return for more than 2 seconds.

If pressure rises to reach or exceed specification with the fuel return blocked, replace fuel regulator.

If pressure does not rise with the fuel return blocked, refer to *PRESSURE BELOW SPECIFICATIONS* in the following table.

FUEL PRESSURE TROUBLESHOOTING	
RESULT	POSSIBLE CAUSE
Pressure above specifications	Defective fuel regulator
Pressure below specifications	Clogged fuel filter
	Poor electrical connection
	Defective fuel regulator
	Defective fuel pump
	Leak in the fuel system circuit

7. Stop engine.
Fuel pressure should remain stable.
8. If fuel pressure drops, check the following for leaks:
 - Tools
 - Hoses
 - Fuel injectors
 - Fuel pressure regulator
 - Fuel pump.
9. Bleed away any remaining fuel in the pressure gauge and fuel hose adapter using the bleed valve on the fuel hose adapter.

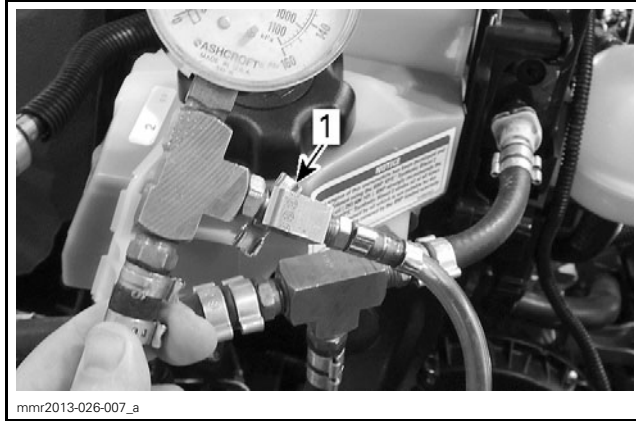

1. Pressure gauge bleed valve

10. Remove pressure gauge and fuel hose adapter.
11. Reinstall the fuel pressure hose on ECM and gently but firmly pull on hose to ensure quick disconnect fitting is properly locked and secure on the ECM.
12. Reinstall all remaining removed parts.

PROCEDURES

FUEL HOSE AND OETIKER CLAMPS

Fuel Hose Replacement

When replacing fuel hoses, be sure to use hoses as available from BRP parts department. This will ensure continued proper and safe operation.


⚠ WARNING

Use of fuel lines other than those recommended by BRP may compromise fuel system integrity.

⚠ WARNING

- Never use a hose pincher on high pressure hoses.
- Never change the routing of a fuel hose.
- Always reinstall the corrugated protective tubing on fuel hoses.
- Secure fuel hoses using the appropriate locking tie or fastener to prevent contact with sharp edges or hot, rotating and moving parts.
- After connecting a hose or a quick connect fitting, pull on the hose near the fitting to make sure it is securely locked.
- Always validate fuel system tightness by performing a *FUEL SYSTEM PRESSURIZATION AND LEAK TEST*.

Oetiker Clamp Replacement

REQUIRED TOOL	
OETIKER PLIERS (P/N 295 000 070)	


⚠ WARNING

Whenever removing a hose in the fuel system, always use new Oetiker clamps at assembly.


FUEL TANK

Fuel Tank Removal

1. Remove the following items, refer to *BODY* section:
 - Seat
 - Upper body module
 - Console.
2. Drain fuel tank as much as possible using the SUCTION PUMP (P/N 529 035 880).

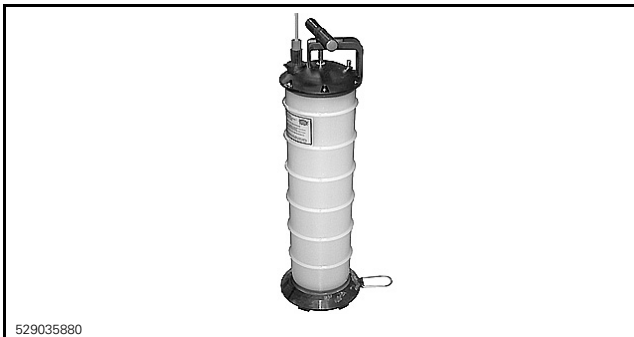


3. Remove the aft mounting bolt from the rear frame member forward mount, and the top mounting bolts from upper column support as indicated on the illustration. Discard the elastic nuts.

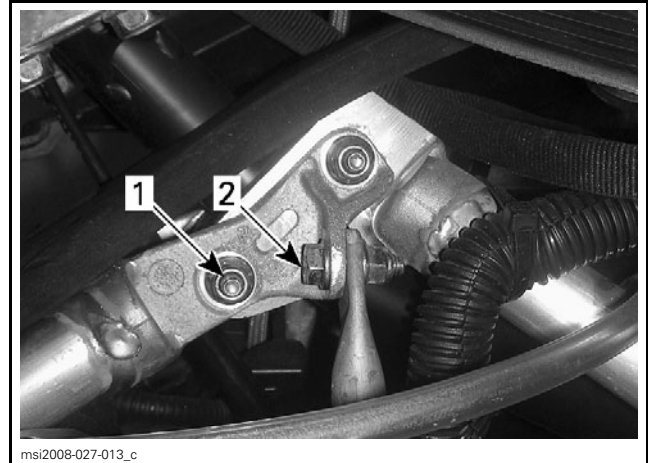

RIGHT SIDE SHOWN

1. At mounting bolt on rear frame member forward mount
2. RH top mounting bolt on upper column support

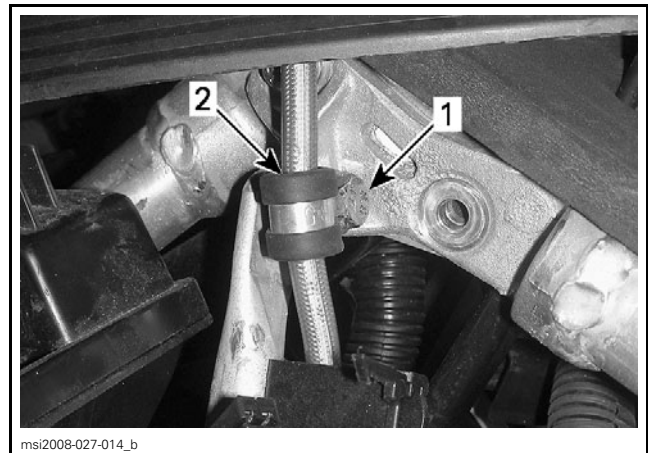

LEFT SIDE SHOWN

1. Top mounting bolt on LH upper column support
2. Brake hose retaining clamp


4. Release the torque applied to the mounting bolt on the front frame member, but do not remove bolt and elastic nut.

Subsection XX (FUEL TANK AND FUEL PUMP)




1. Mounting bolt, front frame member

5. Remove trim panels covering the aft end of the rear frame members by pulling upwards, then pulling out (one each side).

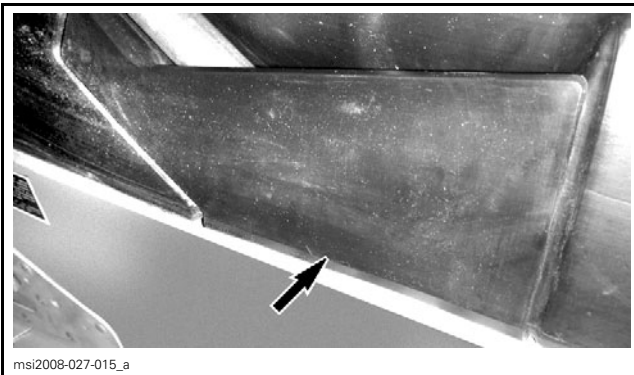


6. Remove elastic nut and shoulder bushing retaining the rear frame members (one each side) to the tunnel (discard nuts, keep shoulder bushings).

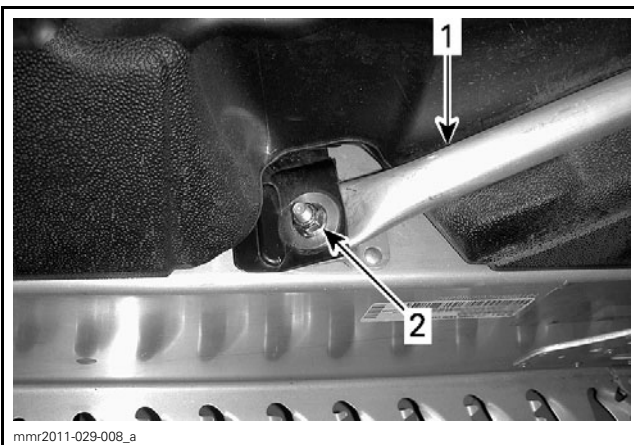

1. Frame member
2. Elastic nut

7. Disconnect the fuel tank vent tube at the check valve.

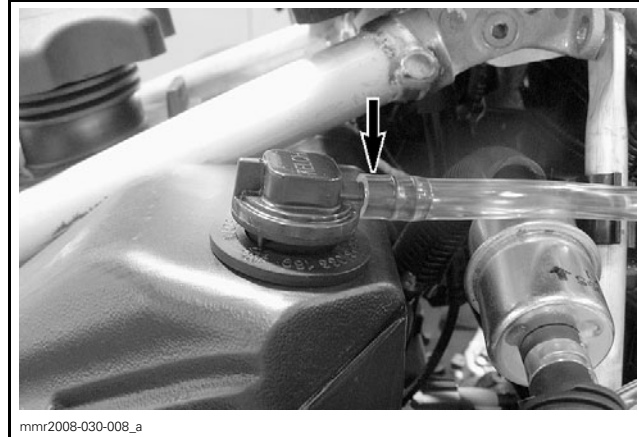

TYPICAL - DISCONNECT FUEL VENT TUBE


8. Disconnect the magneto connector.

⚠ WARNING

The magneto connector must be disconnected to prevent any spark in the engine compartment and to remove power from the fuel pump. Otherwise, if engine is cranked, fuel vapors may ignite in presence of a spark creating a fire hazard.

9. Install a rag around the ECM hose quick connect to catch fuel spillage.

10. Disconnect fuel pressure hose from ECM.

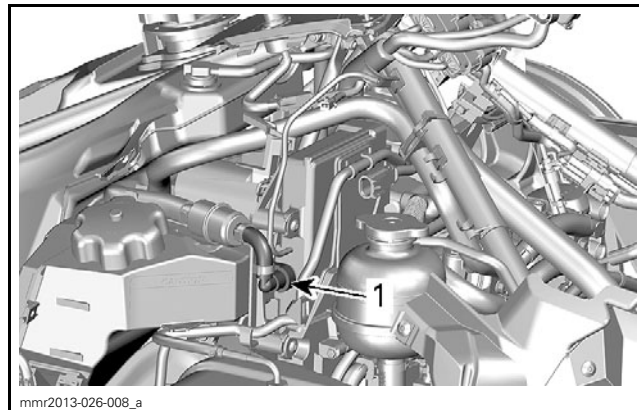

TYPICAL


1. Fuel pressure hose fitting at ECM

11. Move the fuel tank backwards until it contacts the studs.




1. Stud
2. Fuel tank

12. Disconnect fuel pump electrical connector.

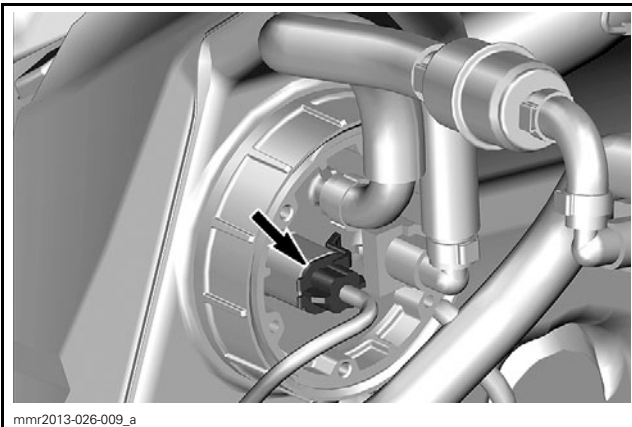

FUEL PUMP CONNECTOR TO DISCONNECT

13. Carefully disconnect fuel return hose from fuel pump.

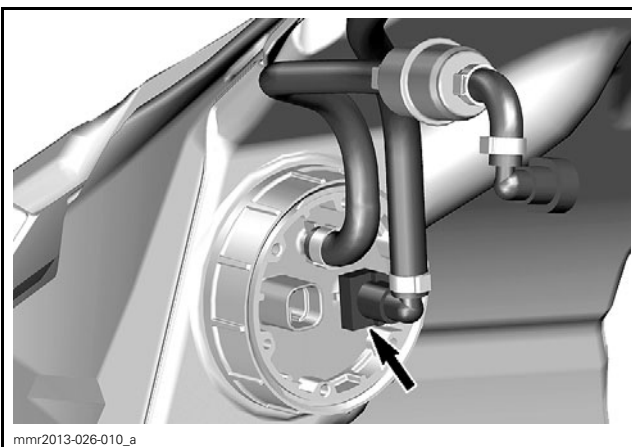

FUEL RETURN HOSE TO DISCONNECT

NOTE: Place a container under the return hose end to recover the fuel remaining in the system.

14. Carefully and slowly lift the aft end of the fuel tank from the side frame mounting studs and remove it from vehicle.

Fuel Tank Installation


Installation is the reverse of the removal procedure however, pay attention to the following.

Connect return hose to fuel pump. Pull on hose to ensure it is properly locked and secure.

When installing vent hose, ensure it is not kinked or pinched.

Secure the rear frame member using new elastic nuts and previously removed shoulder bushings.

TIGHTENING TORQUE	
Rear frame member retaining nuts	31 N•m (23 lbf•ft)

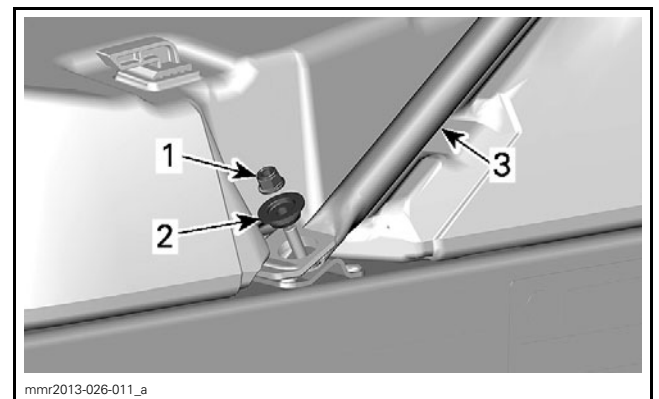

1. New elastic nut
2. Previously removed shoulder bushing
3. Rear member frame

Secure all frame members at the top of pyramid using new elastic nuts.

TIGHTENING TORQUE	
Frame member upper bolts	14 N•m (124 lbf•in)

Validate fuel system tightness by performing a *FUEL SYSTEM PRESSURIZATION AND LEAK TEST*. Refer to *INSPECTION* at the beginning of this subsection.

Reinstall all other removed parts and refill the fuel tank.


FUEL PUMP

Fuel Pressure Release

1. Connect vehicle to the latest applicable B.U.D.S. software, refer to the *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. Select the **Activation** and **ECM** tabs.

Subsection XX (FUEL TANK AND FUEL PUMP)

- Click on the **Fuel Press. Relief** button in the **Activate** field.

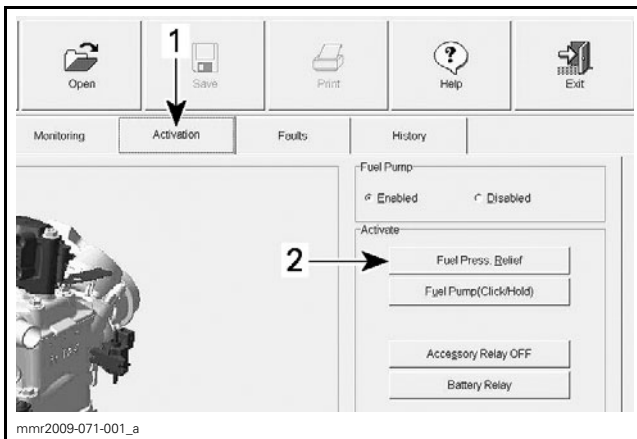


RELEASING FUEL SYSTEM PRESSURE IN B.U.D.S.

- Activation tab
- Fuel Press. Relief button on ECM page

Electric Fuel Pump Test with B.U.D.S.

NOTE: Activating the fuel pump as described in this procedure can be used for purging air from the fuel system whenever a fuel hose has been disconnected and reconnected. The pump should be activated for 15 seconds to ensure proper purging of the system.

- Connect vehicle to the latest B.U.D.S. software, refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
- Select the **Activation** and **ECM** tabs.
- Click on the **Fuel Pump (Click/Hold)** button in the **Activate** field.

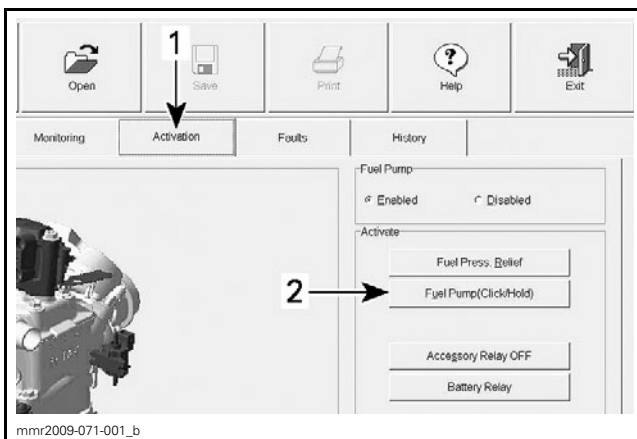

- Activation tab
- Fuel Pump (Click/Hold) button

- Listen for fuel pump operation.

NOTE: The fuel pump should run as long as you hold the **Fuel Pump (Click/Hold)** button in B.U.D.S.

If you do not hear the pump come ON, select the **Faults** tab in B.U.D.S. and check for fault codes.

If there is no fault code, connect a known good fuel pump to the vehicle harness (in parallel) and repeat the test.

NOTE: No voltage test can be done when the fuel pump is disconnected.

If the second fuel pump functions when connected to the vehicle harness, then replace the fuel pump installed in the vehicle.

Electric Fuel Pump Pressure Test

Refer to *INSPECTION* in this subsection.

Electric Fuel Pump Removal

- Release the fuel pressure in the system. Refer to *ELECTRIC FUEL PUMP (E-TEC)* in this subsection.
- Disconnect magneto connector.

WARNING


The magneto connector must be disconnected to prevent any spark in the engine compartment and to remove power from the fuel pump. Otherwise, if engine is cranked, fuel vapors may ignite in presence of a spark creating a fire hazard.

Follow procedures for removing fuel tank and move fuel tank back for access to fuel pump. Refer to *FUEL TANK REMOVAL* in this subsection.


- Disconnect fuel pump as described in the *FUEL TANK REMOVAL* procedure in this section.
- Remove fuel pump spanner nut.

REQUIRED TOOL

FUEL PUMP NUT TOOL (P/N 529 036 214)

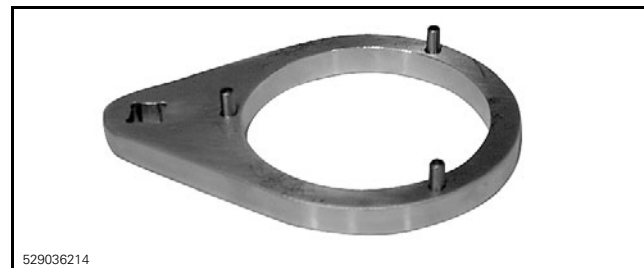


- Remove fuel pump assembly from fuel tank.

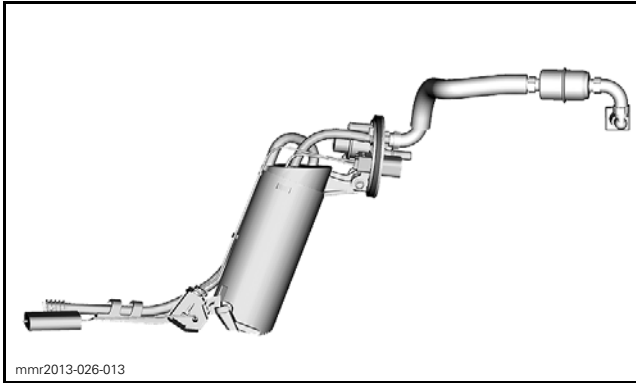

mnr2013-026-013
TYPICAL — ELECTRIC FUEL PUMP ASSEMBLY

6. Remove and discard fuel pump gasket.

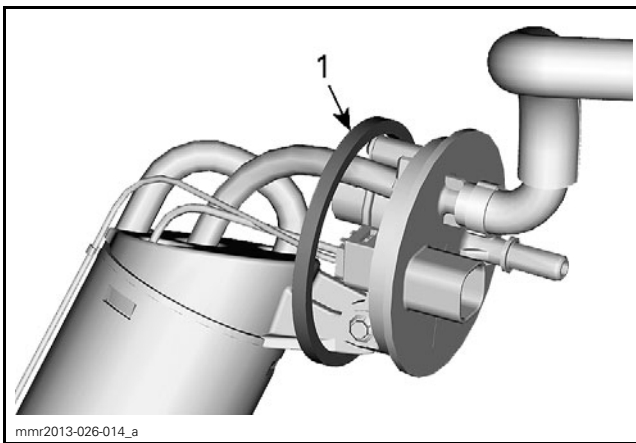


mnr2013-026-014_a
1. Fuel pump gasket

Electric Fuel Pump Installation

For installation, reverse the removal procedure however, pay attention to the following.

1. Make sure the rear pick-up is inserted all the way to the rear of fuel tank and does not interfere with the fuel level sensor float.
2. Install a **NEW** gasket on the fuel pump prior to installing the pump in the tank.

NOTE: The gasket must be installed on the fuel tank side so it is located between the pump and the fuel tank.

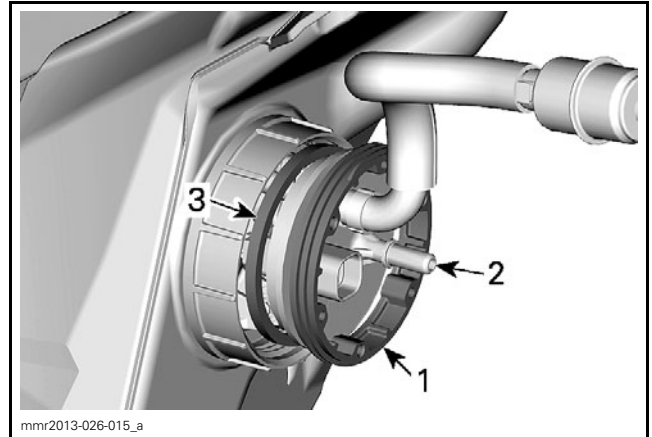

mnr2013-026-015_a
TYPICAL - FUEL PUMP INSTALLATION

1. Fuel pump spanner nut
2. Fuel pump face plate
3. Fuel pump gasket

3. Install a torque wrench perpendicularly (90°) to FUEL PUMP NUT TOOL (P/N 529 036 214).

TIGHTENING TORQUE	
Fuel pump spanner nut	40 N•m (30 lbf•ft)

4. To reconnect fuel pump and install fuel tank, refer to the *FUEL TANK INSTALLATION* procedure in this subsection.
5. Carry out a *FUEL TANK LEAK TEST* and a *FUEL SYSTEM PRESSURIZATION AND LEAK TEST* as detailed in this subsection.

⚠ WARNING

After working on the fuel system, carry out a fuel system pressurization test to check for leaks. Failure to carry out a fuel system leak test could result in severe injury or a life threatening situation should a leak occur.

FUEL PUMP INLET FILTER

Fuel Pump Inlet Filter Replacement

1. Remove fuel pump assembly from fuel tank. Refer to procedure in this subsection.
2. Pull rear pickup hose to make room.


Subsection XX (FUEL TANK AND FUEL PUMP)



1. Rear pickup hose

3. Unlock sump tank by carefully inserting a small screwdriver between the tab and the sump tank.

NOTICE Be careful not to damage tabs while pushing them.

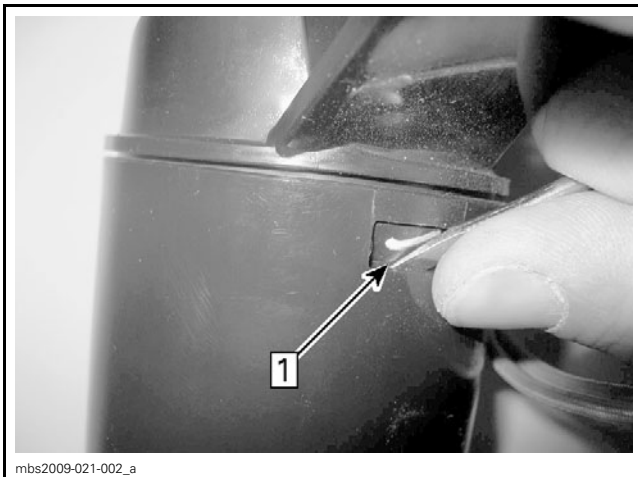

Step 1: Insert screwdriver between tab and sump tank

4. Completely remove sump tank from pump by pulling it carefully.




1. Sump tank



FUEL PUMP REMOVED

5. Remove inlet fuel pump filter using a small screwdriver.

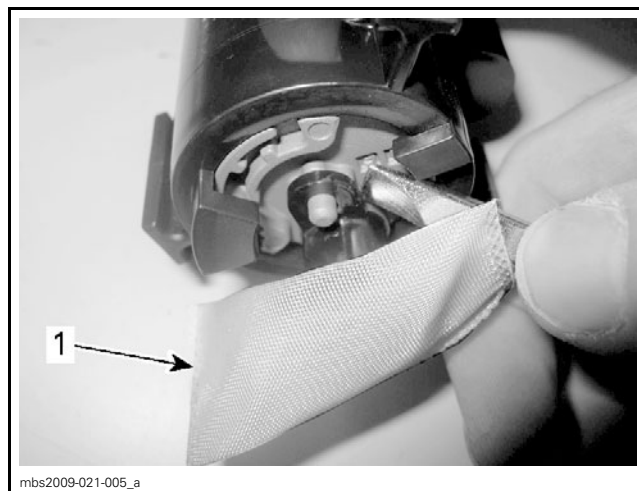


1. Inlet fuel pump filter

6. Discard inlet fuel pump filter and steel ring.


7. Install NEW steel ring on NEW inlet filter.

NOTE: Steel ring can be installed on both sides. If steel ring is loose during installation, it will tighten when plastic will contact fuel, the plastic will swell.

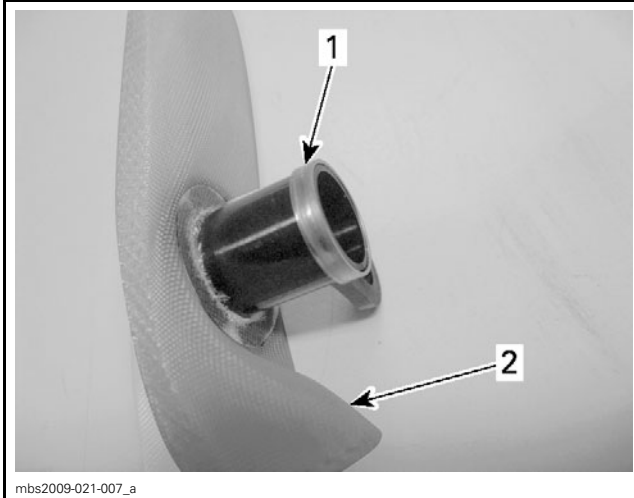


1. Steel ring
2. Inlet filter

8. Insert inlet filter into fuel pump by pressing it downward.

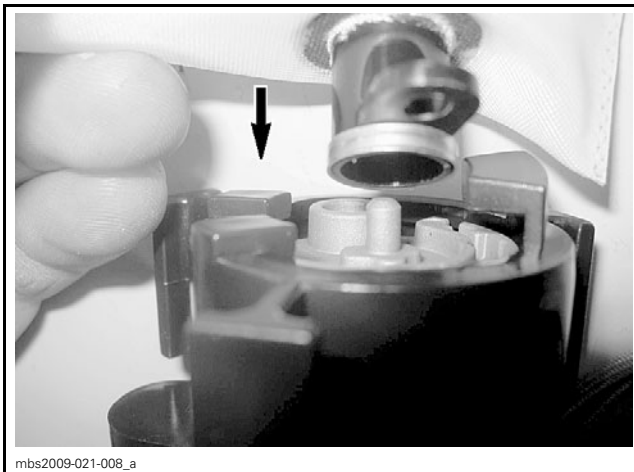


9. Ensure that the filter hole is properly positioned into the pin.

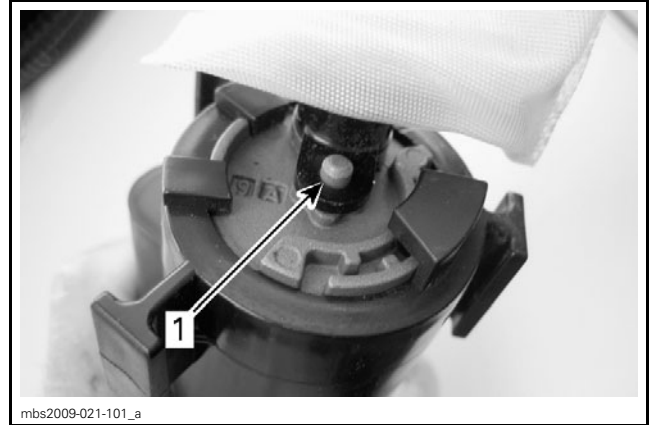


1. Pin

10. Align jet pump outlet into its opening.

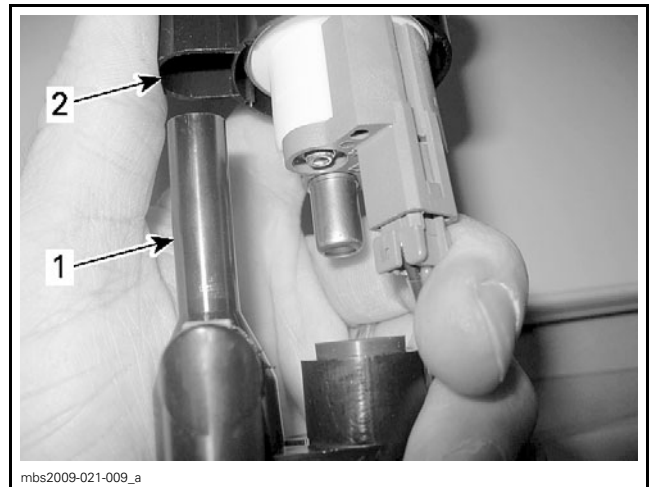

1. Jet pump outlet
2. Opening

11. Install motor into jet pump.

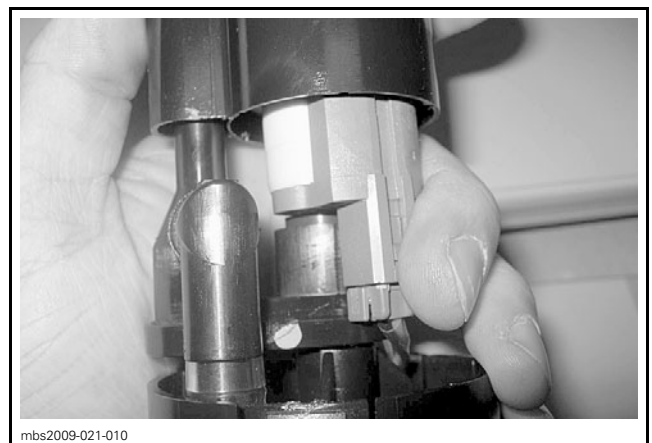


12. Install sump tank carefully and ensure that all parts are properly positioned.

Subsection XX (FUEL TANK AND FUEL PUMP)



mbs2009-021-011

13. Ensure that sump tank tabs are properly locked.
14. Position rear pickup hose by pulling it downward.

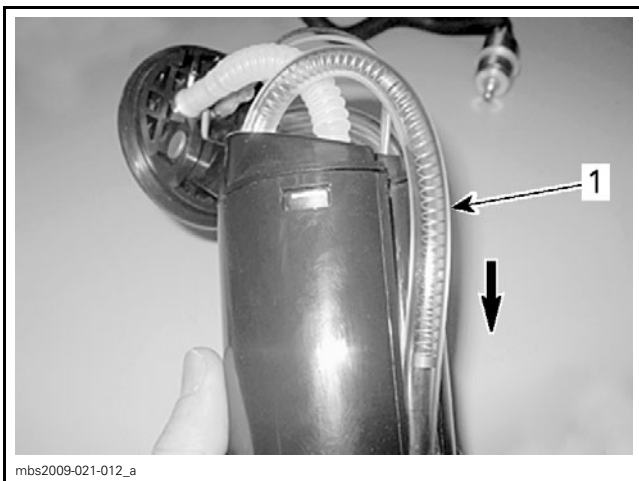

mbs2009-021-012_a

1. Rear pickup hose

15. Reinstall fuel pump from fuel tank. Refer to procedure in this subsection.


STEEL MESH FILTER

Steel Mesh Filter Location

The steel mesh fuel filter is located on the remote pickup of the fuel pump module.

Steel Mesh Filter Cleaning

1. Remove fuel pump from fuel tank, refer to *FUEL PUMP REMOVAL* in this subsection.
2. Clean steel mesh filter on fuel pump remote pickup using low pressure filtered air and XPS BRAKES AND PARTS CLEANER (USA) (P/N 219 701 705) or XPS BRAKES AND PARTS CLEANER (CAN) (P/N 219 701 776).

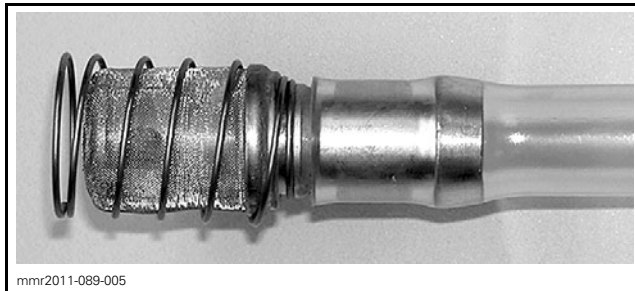

mmr2011-089-005

STEEL MESH FILTER, FUEL PUMP REMOTE PICK-UP

3. Install and reconnect fuel pump module (pressure hose and electrical connector), refer to *FUEL PUMP INSTALLATION* in this subsection.
4. Carry out a *FUEL TANK LEAK TEST* and a *FUEL SYSTEM PRESSURIZATION AND LEAK TEST* as detailed in this subsection.
5. Install remaining parts in the reverse order of removal, refer to *FUEL TANK INSTALLATION* in this subsection.

FUEL PRESSURE REGULATOR

Fuel Pressure Regulator Replacement

Remove fuel pump from fuel tank. Refer to *ELECTRIC FUEL PUMP REMOVAL* in this subsection.


Remove screws securing fuel pressure regulator on fuel pump.

Discard fuel pressure regulator with its O-rings.

Install new O-rings on the new fuel pressure regulator.

Install the regulator on fuel pump and secure it using previously removed screws.

TIGHTENING TORQUE	
Fuel pressure regulator screws	Hand-tight

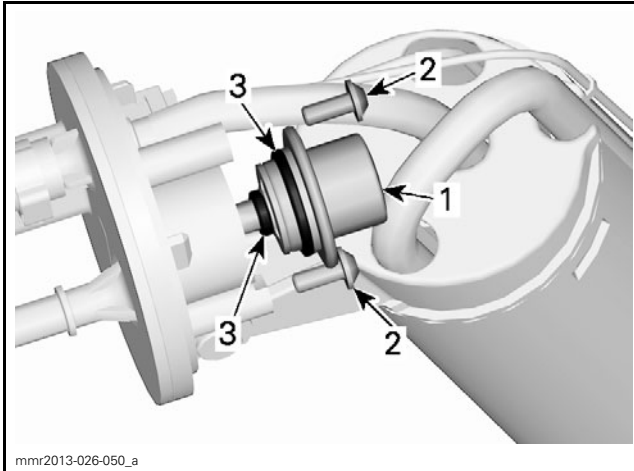


1. Fuel pressure regulator
2. Retaining screws
3. New O-rings

FUEL LEVEL SENSOR

NOTE: Verify the gauge functions related to the fuel level sensor before testing the sensor. Refer to *GAUGE* in *LIGHTS, GAUGE AND ACCESSORIES* subsection.

Fuel Level Sensor Test with B.U.D.S.

1. Connect vehicle to the latest applicable B.U.D.S. version.
2. Select the **Monitoring** and **Cluster** tabs.
3. Monitor the fuel level sensor resistance under **Fuel Level** and compare to the table below.

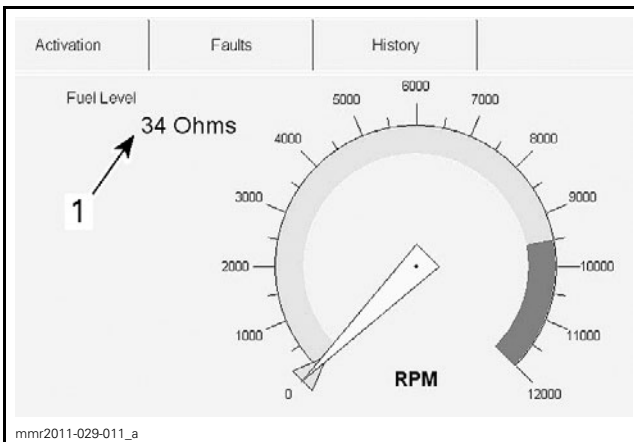

1. Fuel level sensor resistance


FUEL LEVEL SENSOR RESISTANCE TABLE	
Full level resistance value	7 Ω ± 3 Ω
Empty level resistance value	95 Ω ± 5 Ω

If resistance is within specifications, the fuel level sensor, wiring and fuse are ok.

If resistance is not within specifications, carry out the *FUEL LEVEL SENSOR RESISTANCE TEST*.

Fuel Level Sensor Resistance Test

1. Move fuel tank back to obtain access to the fuel pump connector. Refer to *FUEL TANK REMOVAL* in this subsection.
2. Disconnect fuel pump.
3. Connect the FLUKE 115 MULTIMETER (P/N 529 035 868) between the two pins in the sensor connector and set it to Ω.
4. Test resistance of sensor as follows.

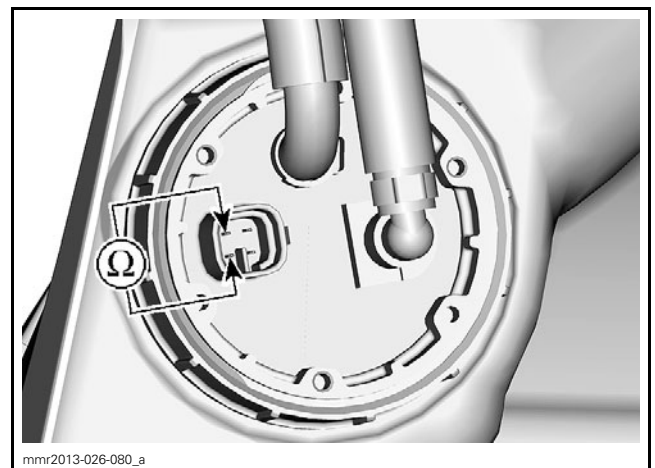

NOTE: Lift the rear of fuel tank to change fuel level.

FUEL LEVEL SENSOR RESISTANCE TABLE	
Full level resistance value	7 Ω ± 3 Ω
Empty level resistance value	95 Ω ± 5 Ω


If resistance is within specifications, check the wiring between the fuel pump connector and gauge.

If resistance is not within specifications, replace fuel level sensor.

Fuel Level Sensor Replacement


Open both fuel level sensor support tabs.

Subsection XX (FUEL TANK AND FUEL PUMP)

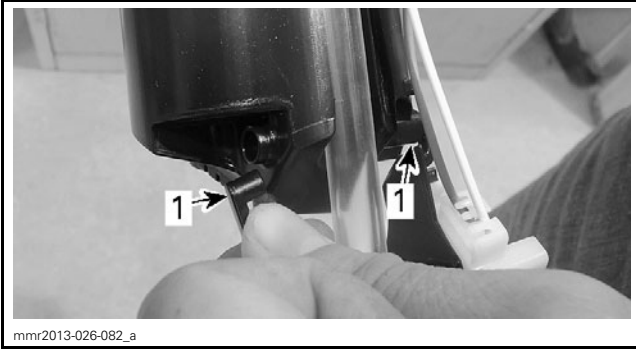


1. Tabs of fuel level sensor support

Disconnect the fuel level sensor connector from the pump module.

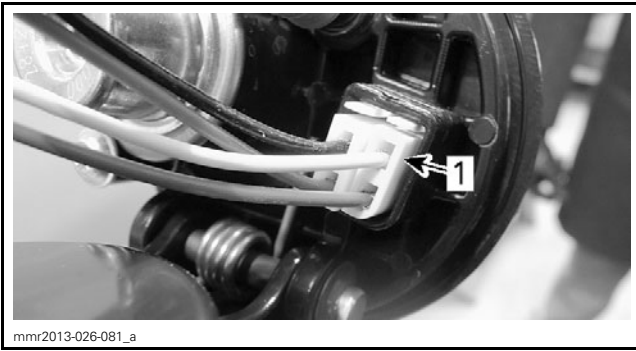

1. Fuel level sensor connector (Yellow connector)

Remove the steel mesh fuel filter from its hose.

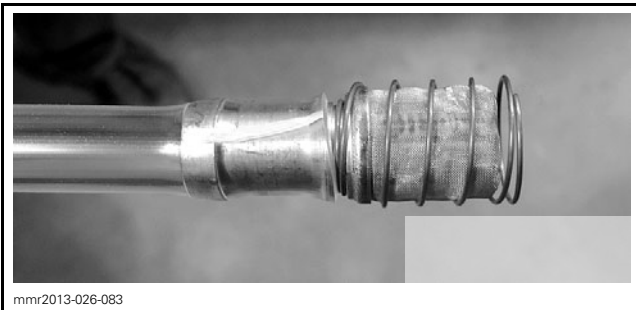

Remove the fuel level sensor.

Reinstall the new one by reversing the procedure.



If you bought this manual from any other seller please leave them
NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

E-TEC DIRECT FUEL INJECTION

SERVICE TOOLS

Description	Part Number	Page
EXTRACTOR ADAPTOR.....	529 036 136	17
FLUKE 115 MULTIMETER	529 035 868	13-14, 26, 38-39, 43, 45
INJECTOR RETAINER PLATE.....	529 036 137	11
OETIKER PLIERS.....	295 000 070	6
SMALL HOSE PINCHER	295 000 076	35

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
SNAP-ON HAMMER	CJ125-6	17
SNAP-ON SCREW.....	CJ93-1	17

SERVICE PRODUCTS

Description	Part Number	Page
DIELECTRIC GREASE	293 550 004	20
PULLEY FLANGE CLEANER	413 711 809	36

GENERAL

⚠ WARNING

Always disconnect the magneto connector prior to:

- Disconnecting any fuel hose.
- Removing a fuel injector.
- Removing a spark plug cable or spark plug.

Otherwise, fuel vapors may ignite in presence of a spark creating a fire hazard.

⚠ WARNING

The fuel system is under high pressure. Proceed with care when working on the fuel system. Wear safety glasses and work in a well ventilated area.

Release fuel system pressure prior to removing fuel system components. Refer to *ELECTRIC FUEL PUMP (E-TEC)* in *FUEL TANK AND FUEL PUMP* subsection.

⚠ WARNING

Perform a fuel pressure test each time a component from the fuel system is removed. Prior to starting the engine when a fuel hose was disconnected or a fuel injector removed:

- Ensure all fuel lines are properly connected.
- Crank engine to pressurize fuel system. Do not let engine run. If it starts, stop it right away.
- Inspect engine compartment to detect any fuel leakage or an abnormally strong fuel odor which may be an indication of a fuel leak that is not readily visible.

SYSTEM DESCRIPTION

The ECM reads the input signals from different sensors which indicate engine operating conditions at micro-second intervals.


The ECM calculates the proper air/fuel ratio and activates the output to fuel injectors.

Signals from sensors are used by the ECM to determine the injection parameters (fuel maps required for optimum air-fuel ratio).

Subsection XX (E-TEC DIRECT FUEL INJECTION)

The crankshaft position sensor (CPS), the throttle position sensor (TPS) are the primary sensors used to control the injection. Other sensors (like temperature sensors, etc.) are used as secondary input.

Air Induction

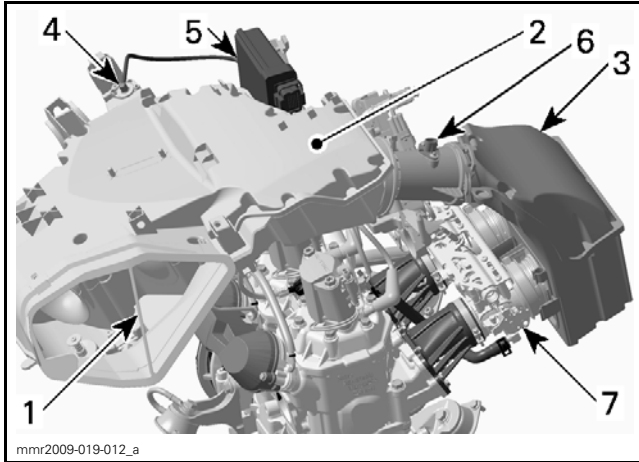

TYPICAL

1. Mesh filter
2. Secondary air intake silencer
3. Primary air intake silencer
4. Air pressure fitting and hose
5. Air pressure sensor in ECM
6. Air temperature sensor
7. Throttle body

Air flows through a mesh filter in the secondary air intake silencer mounted on top of engine. The mesh filter prevents snow from being drawn into the engine.


Air pressure is measured in the secondary air intake silencer through a tube connected to the ECM.

Air then flows through the primary air intake silencer.

Air temperature is measured at the entry point of the primary air intake silencer.

Air is then drawn in through a dual throttle body mounted on the engine intake side.


Throttle Body

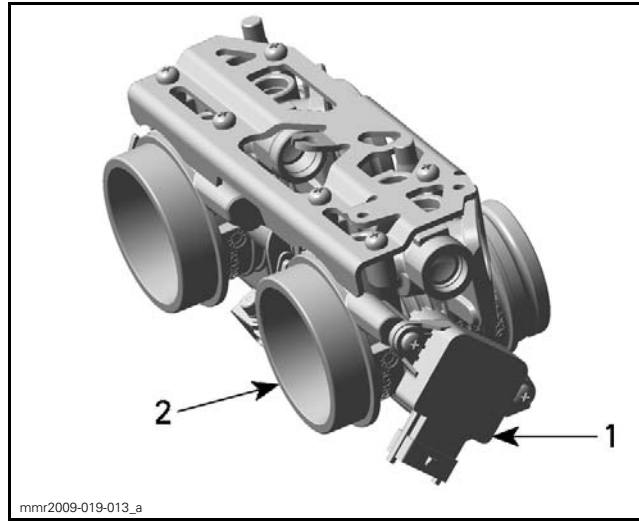

1. Throttle body
2. TPS (Throttle Position Sensor)

A Dell'Orto dual throttle body assembly is directly mounted on the intake flange of each cylinder (46 mm for the 600 HO and 52 mm for the 800R).

The air flow is controlled by two throttle plates. Each throttle plate has a 6.8 mm (.268 in) idle port in it.

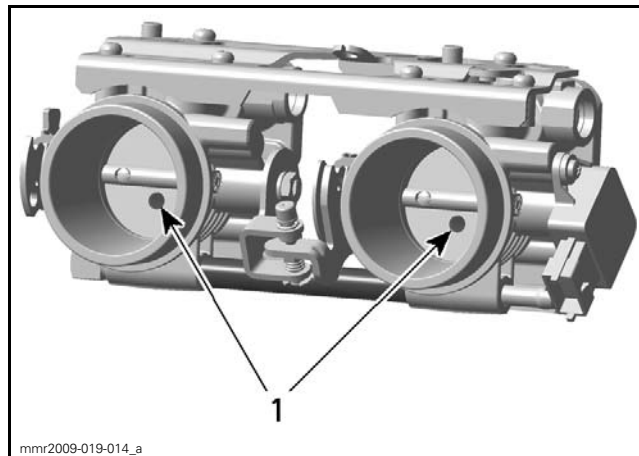


1. Idle ports

Since there is a constant airflow through the idle ports of the throttle plates, the idle speed is controlled by the ECM by varying the amount of fuel injected in the combustion chamber and by controlling the injection timing.

The TPS (Throttle Position Sensor) is fitted on the throttle body. The TPS sends throttle angle position to the ECM.

Engine coolant flows through the throttle body to prevent potential freezing of throttle plates due to the temperature drop naturally created by the venturi.

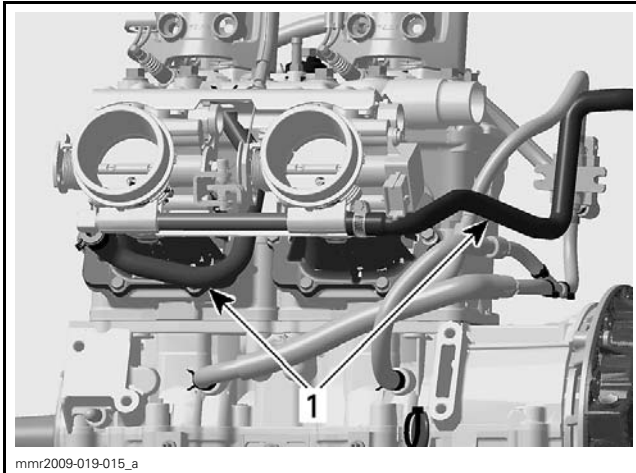

1. Coolant-heated lines

The air then continues through the reed valves into the cylinder base then into the crankcase.

Fuel Injector

The fuel injectors are powered from the 55/60 Vdc system.

One fuel injector per cylinder is used.


The E-TEC fuel injector is mounted directly on top of the cylinder head.



1. Fuel injector

The fuel injector achieves a direct injection right into the combustion chamber. This keeps the piston cooler with less fuel.


A voice coil type is used to open and close the fuel injector nozzle. This allows for quick operation of the fuel injector; opening stage as well as the closing stage. This results in the ability to operate the engine at a higher RPM and lowers unburned fuel to the exhaust port.

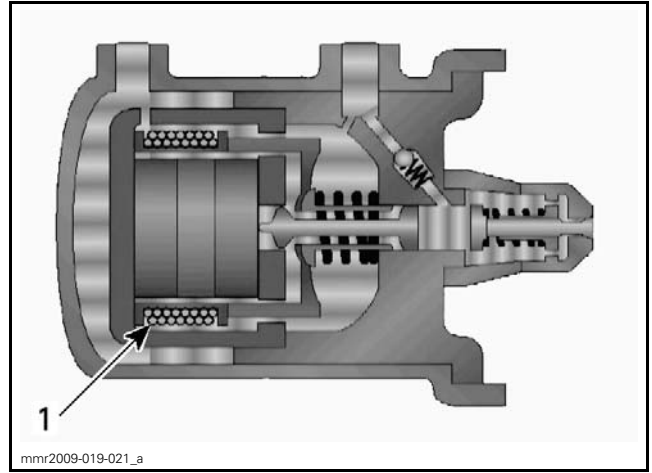

FUEL INJECTOR CLOSED

1. Voice coil

When a positive current is supplied to the coil by the ECM, the fuel injector plunger moves towards the spring loaded injector needle. As the injector plunger moves, this builds up a pressure in the fuel injector chamber. When the pressure reaches approximately 1724 kPa (250 PSI), the injector needle spring is overcome and the needle opens. Fuel injection then takes place while the pressure peaks at 3103 kPa (450 PSI).

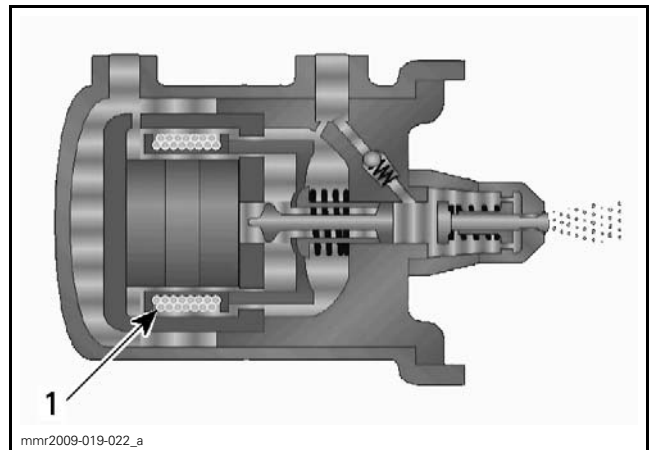

FUEL INJECTOR OPENED

1. Voice coil

Swirl channels are used in the fuel injector to better atomize the fuel charge.

The quantity of injected fuel is controlled by varying the injector plunger stroke.

To bring the injector plunger backward to its rest position, the current is reversed and the return springs close the injector needle and plunger. Near the end of the return stroke, a brief positive current is applied to "brake" the injector plunger. This results in a quieter operation of the fuel injectors.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

The fuel injectors provide a stratified fuel charge to the combustion chamber up to clutch engagement speed. Beyond this RPM, the fuel charge becomes homogeneous.


The stratified fuel charge provides a cleaner combustion, better idling and less smoke.

Fuel Injector Cooling

Fuel is used to maintain proper fuel injector operating temperature.

The flow starts from the fuel pump, through the ECM, then around the voice coil inside the fuel injector housings to cool down the fuel injector components.

Fuel enters the inlet port located at the bottom of the fuel injector housing and exits through the outlet port on top of the fuel injector.

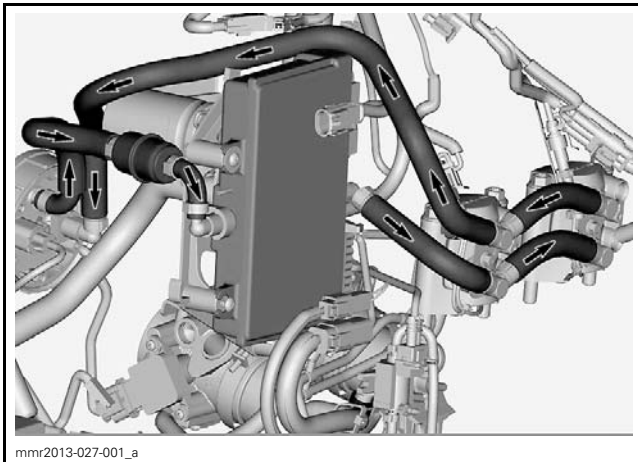

1. Fuel injectors
2. ECM

ADJUSTMENT

IDLE SPEED

Idle speed is controlled by the EMS (Engine Management System) and is not adjustable with an idle screw.

If idle speed is not as per specification (refer to *TECHNICAL SPECIFICATIONS*), perform the *CLOSED THROTTLE RESET (TPS)*.

CLOSED THROTTLE RESET (TPS)

General Information

This operation performs a reset of the TPS (throttle position sensor) values in the ECM when the throttle is closed. This reset is very important as

the setting of the TPS will determine the basic parameters for all fuel mapping and several ECM calculations for idle speed control of the engine.

The closed throttle reset must be carried out **only** if the:

- TPS is loosen, removed or replaced.
- TPS is out of tolerance or sets a fault code.
- Throttle body is replaced.
- ECM is replaced.

NOTE: Do not reset TPS needlessly. See *TPS CLOSED THROTTLE VERIFICATION*.


NOTICE An improperly set TPS may lead to poor engine performance.

TPS Closed Throttle Verification

1. Connect vehicle to the latest applicable B.U.D.S. version. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. In B.U.D.S., select the **Setting** and **ECM** tabs.
3. Activate and release throttle lever 2 - 3 times to settle throttle plates.
4. Look for the throttle opening indication in the **Close Throttle** area.

NOTE: The **Throttle Opening** indication must be within the following specification.

THROTTLE OPENING SPECIFICATION
(0 % ± 0.2)

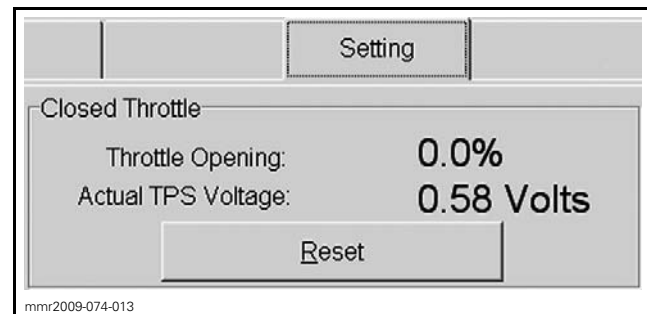

THROTTLE OPENING INDICATION

If the throttle opening is within the % specification, **DO NOT** carry out the **Closed Throttle Reset** unless the following parts were replaced:

- Engine control module (ECM)
- Throttle body
- Throttle position sensor (TPS).

If TPS is not within specification, carry out the **Closed Throttle** reset procedure that follows.


Closed Throttle Reset Procedure (TPS)

1. Ensure throttle cable is properly adjusted, refer to *THROTTLE CABLE ADJUSTMENT* in this subsection.
2. Activate throttle lever 2 - 3 times to settle throttle plate.

NOTICE Proper throttle cable adjustment must be verified before proceeding with the Closed Throttle reset.

3. In B.U.D.S.
 - 3.1 Select the **Setting** tab.
 - 3.2 Select the **ECM** tab.
4. In the **Closed Throttle** area, confirm the **Actual TPS Voltage** is within specification.

ACTUAL TPS VOLTAGE SPECIFICATION
0.3 to 0.7 Volts

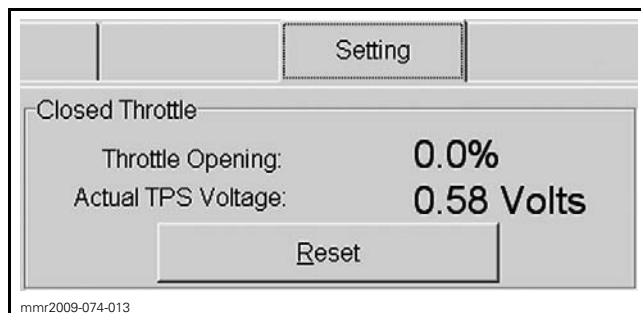


TYPICAL - ACTUAL TPS VOLTAGE

NOTE: If the **Actual TPS Voltage** is out of specification, the TPS cannot be reset. The cause must be found. See *TROUBLESHOOTING ACTUAL TPS VOLTAGE OUT OF RANGE*.

5. Press on the **Reset** button.
6. Confirm **Throttle Opening** value indicates 0.0%.

NOTE: A throttle opening of 0.0% after reset indicates the operation is successful.

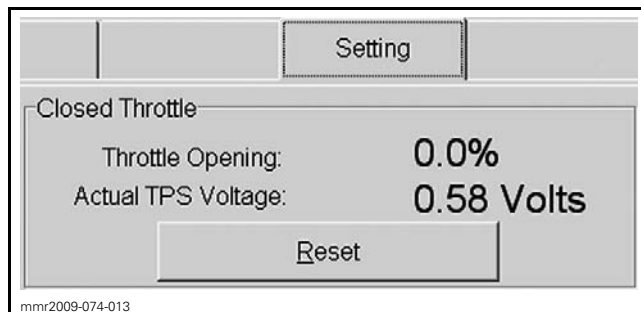

TYPICAL - THROTTLE OPENING MUST BE 0.0%

Troubleshooting Actual TPS Voltage Out of Range

If the **Actual TPS Voltage** is out of specification, check the following.

- Fault codes related to TPS
- Throttle cable adjustment
- TPS properly installed
- TPS connector and terminal condition.

TROUBLESHOOTING

DIAGNOSTIC TIPS


Engine problems are not necessarily related to the injection system.

It is important to ensure the mechanical integrity of the engine is present.

No Engine Acceleration, No Throttle Response


If this occurs, use B.U.D.S. and check the following.

1. Select the **Setting** tab then **Vehicle Configuration**.

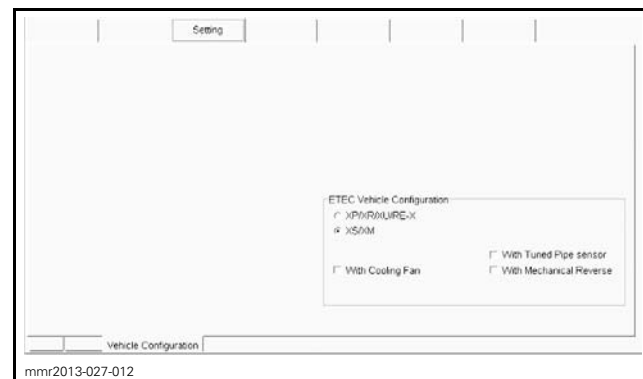

2. In the **Vehicle Configuration** page:

- 2.1 Ensure the proper vehicle platform is selected in the **ETEC Vehicle Configuration** area.

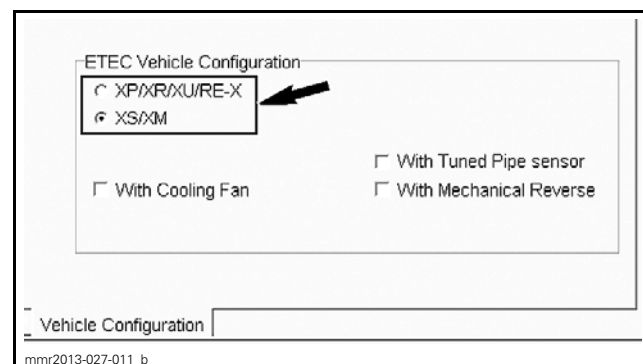

Subsection XX (E-TEC DIRECT FUEL INJECTION)

Spark Plugs

800R E-TEC Only

Improper spark plug indexing may lead to engine misfiring. Check if BRP spark plugs are installed or if spark plugs are properly indexed. Refer to *IGNITION SYSTEM* subsection.

3D RAVE Valves

Improper position of RAVE valves may lead to engine misfiring. Check RAVE valves. Refer to *RAVE* subsection.

Crankshaft Position Sensor (CPS)

Confirm that ECM receives the CPS signal. Refer to *CRANKSHAFT POSITION SENSOR (CPS)* in this subsection.

Electrical System

It is important to check that the electrical system is functioning properly:

- 55/60V system voltage
- Capacitor (refer to *CHARGING SYSTEM*)
- Ground connections
- Wiring and connectors.

Ensure that all electronic components are original BRP recommended components.

Any modification to the wiring harness may lead to fault codes or bad operation.

Always refer to the wiring diagram when diagnosing an electrical problem.

⚠ WARNING

The EMS operates on high voltage (55/60 Vdc), be careful to avoid electrical shocks.

⚠ WARNING

All electrical actuators (example: fuel injectors, fuel pump, ignition coils and electronic oil injection pump) are powered as soon as engine is cranked when the emergency engine stop switch is at the RUN position.

Electrical Connections

Pay particular attention to ensure that pins are not out of their connectors or out of shape.

Make sure that connections are very tight, make good contact, are corrosion-free, and show no signs of moisture. Particularly check ECM ground connections.

NOTE: Do not apply dielectric grease or other lubricant in the ECM connectors.

Check if wiring harness shows any signs of scoring.

Resistance Measurement

When measuring the resistance with an ohmmeter, all values are given for a temperature of 20°C (68°F). The value of a resistor varies with the temperature. The value for common resistor or windings (such as solenoid) increases as the temperature increases. However, our temperature sensors are NTC types (Negative Temperature Coefficient) except for the EGTS, which means that the value decreases as the temperature increases. Use the provided tables for sensor resistive values at given temperature.


The resistive value of a temperature sensor may test good at a certain temperature but may be defective at other temperatures.

A good test is to put the sensor in a container filled with ice and water and measure resistance. Then, heat the water and read the resistance at different temperatures.

PROCEDURES

FUEL HOSES AND OETIKER CLAMPS

Oetiker Clamp Removal and Installation

REQUIRED TOOL	
OETIKER PLIERS (P/N 295 000 070)	

Always use a shop rag when disconnecting a fuel hose.

⚠ CAUTION Fuel system is under high pressure.

⚠ WARNING

- Never use a hose pincher on high pressure hoses.
 - Never change the routing of a fuel hose.
 - Always reinstall the corrugated protective tubing on fuel hoses.
 - Secure fuel hoses using the appropriate locking tie or fastener to prevent contact with sharp edges or hot, rotating and moving parts.
 - After connecting a hose or a quick connect fitting, pull on the hose near the fitting to make sure it is securely locked.
- Use of improper fuel lines could compromise fuel system integrity.

THROTTLE CABLE

Throttle Cable Removal


1. Remove handlebar cover.
2. Depress and hold throttle lever.
3. Pull out circlip using long nose pliers. Keep circlip for re-use.



4. Pull throttle cable out of the throttle lever housing.




5. Unhook cable end barrel from throttle lever and remove cable.

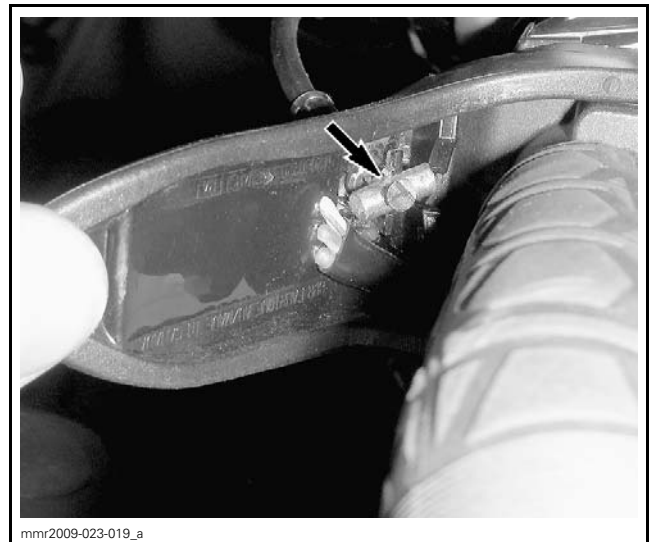


- NOTE:** Take note of cable routing before removal.
6. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
 7. Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.
 8. At throttle body, fully unscrew cable adjuster lock nut.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

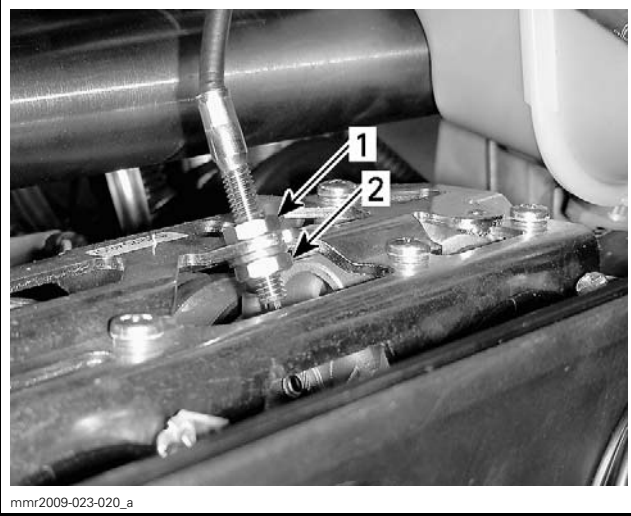

1. Adjuster nut
2. Adjuster lock nut

9. Loosen throttle body retaining clamps and remove throttle body from air intake adapters.

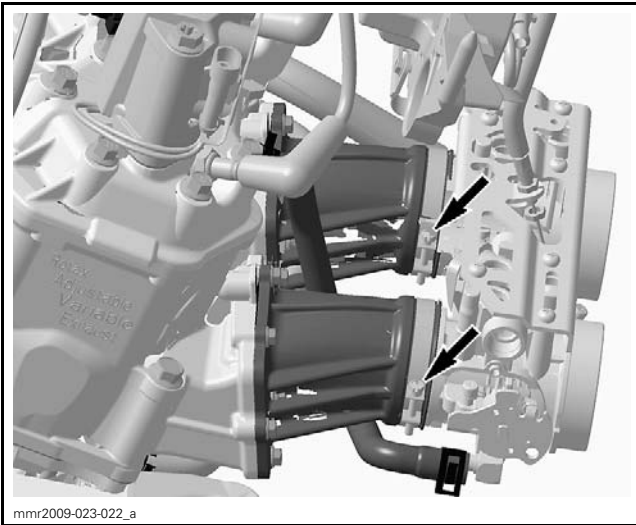

10. Pull out throttle body sufficiently to unhook throttle cable end.



11. Remove throttle cable.

Throttle Cable Installation

Reverse removal procedure however, pay attention to the following.


Route cable as noted prior to removal.

Ensure that cable ends are properly secured in their levers.

Proceed with throttle cable adjustment.

Throttle Cable Adjustment

1. Position handlebar straight and level.

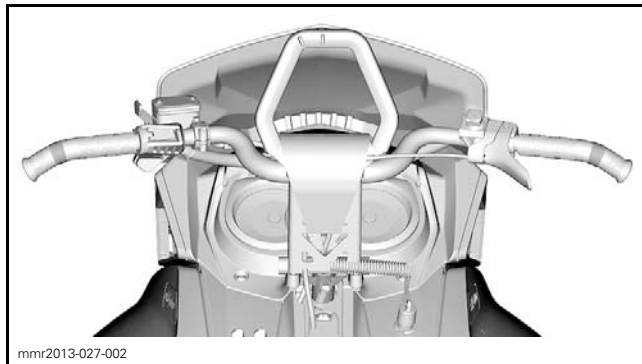


mmr2013-027-002

TYPICAL - HANDLEBAR IN STRAIGHT AHEAD POSITION

2. Turn throttle cable adjuster nut until the following is observed:


- Throttle plate stopper is in contact with master zero position screw
- Throttle cable is slightly loose (cable free play).

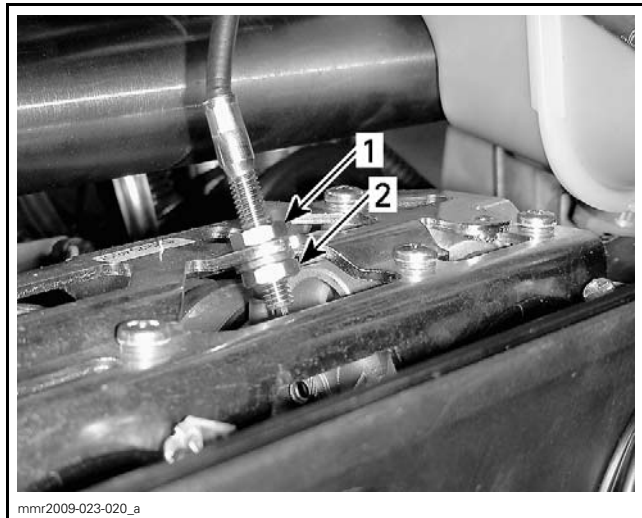

mmr2009-023-020_a

THROTTLE CABLE ADJUSTER

1. Adjuster nut (top)
2. Adjuster lock nut (Bottom)

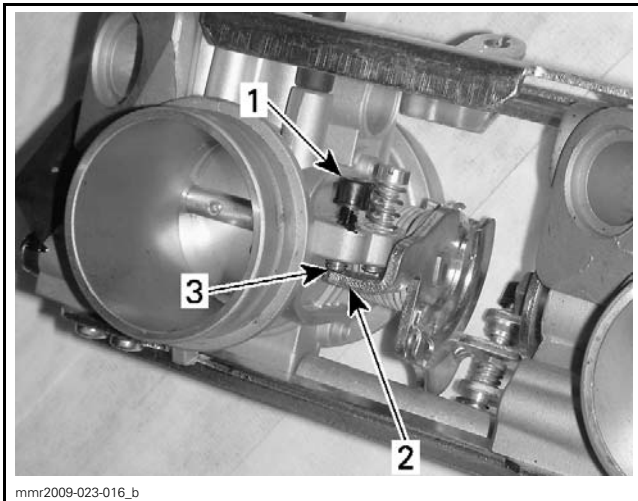

mnr2009-023-016_b

THROTTLE BODY MASTER ZERO POSITION

- 1. Master zero position screw (black)
- 2. Throttle plate stopper
- 3. Contact here

NOTICE Do not tamper with any throttle body adjustment screws. Otherwise, throttle body must be replaced.

NOTE: To ensure cable free play, lightly press on throttle cable as in following illustration.



mnr2012-033-002_a

THROTTLE CABLE FREE PLAY

- 1. Cable slightly loose here

- 3. Activate and release throttle lever 2 - 3 times to settle throttle plate.
- 4. Confirm throttle plate stopper is STILL in contact with master zero position screw.
- 5. Readjust throttle cable if necessary.
- 6. Carry out the *THROTTLE CABLE OPERATING RANGE INSPECTION WITH B.U.D.S.*

Throttle Cable Operating Range Inspection with B.U.D.S.

- 1. In B.U.D.S.
 - 1.1 Select the **Monitoring** tab.

- 1.2 Select the **ECM** tab.
- 2. Fully depress throttle lever and hold.
 - 2.1 Confirm throttle opening is within specification.

THROTTLE OPENING SPECIFICATION (WIDE OPEN THROTTLE)
95% to 100%




mnr2009-023-023

THROTTLE CABLE OPERATING RANGE

- 3. If throttle opening is out of specification, readjust as follows.

THROTTLE OPENING OUT OF SPECIFICATION	
Above specification	Loosen throttle cable
Below specification	Tighten throttle cable

FUEL INJECTOR

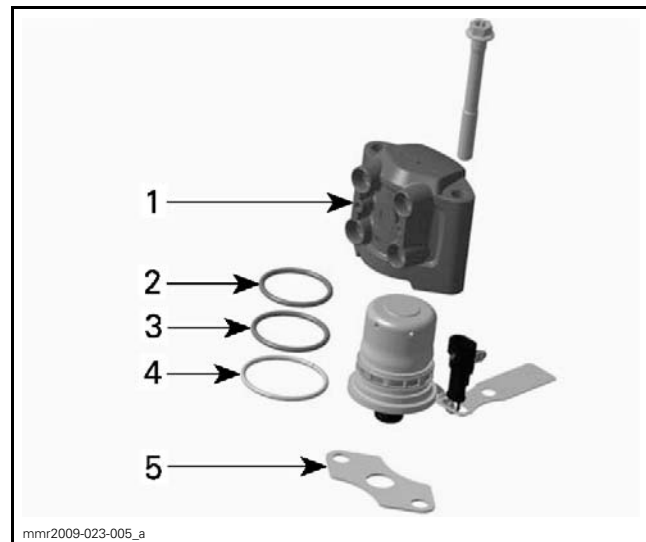

mnr2009-023-005_a

- 1. Fuel injector housing
- 2. Top O-ring
- 3. Bottom O-ring
- 4. Crush ring
- 5. Thermal insulator


Subsection XX (E-TEC DIRECT FUEL INJECTION)

Every fuel injector is bench tested. Its electrical and flow characteristics are registered throughout all its operating range in a calibration file.

NOTICE When a fuel injector is replaced, the matching calibrated file must be loaded in the ECM using B.U.D.S. so that the ECM properly controls the fuel injector.

Fuel Injector Visual Inspection

1. Open LH panel.
2. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
3. Visually inspect the fuel injector area.

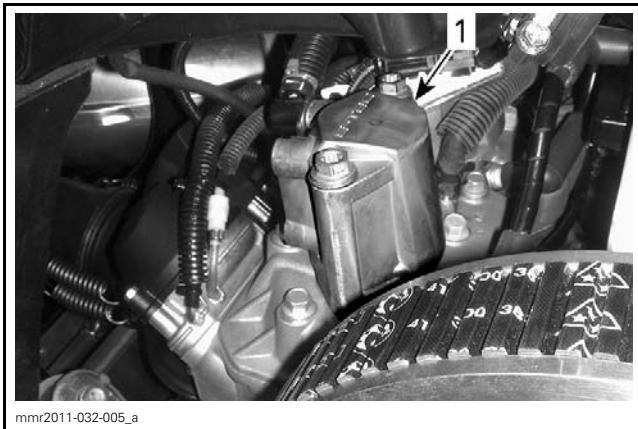

1. Fuel injector

If a fuel leak is noticed in the hoses area, inspect hoses and connections.

If a fuel leak is noticed in fuel injector base area, it indicates a leak of the lower O-ring of fuel injector.

If a dark carbon sooted area is noticed in fuel injector base area, it indicates a leak between the fuel injector nozzle and the cylinder head. The fuel injector retaining screws may not be tight enough.

Fuel Injector Troubleshooting Tips

Usually, a faulty fuel injector will lead to poor engine idling and a low RPM (around 800 RPM and below). It may also lead to engine misfiring.

Ensure the correct fuel injector is installed on the proper cylinder. Refer to *FUEL INJECTOR POSITION VALIDATION*.

While engine is running, try disconnecting a fuel injector connector:

⚠ WARNING
Be careful while working close to rotating parts.

- If engine RPM does not change, the fuel injector could be faulty.
- If engine RPM decreases, the other fuel injector could be faulty.

If one injector is thought to be faulty, proceed with the injector tests.


Fuel Injector Leak Test

Test Preparation

1. First make sure fuel pressure is within specifications. Refer to *FUEL TANK AND FUEL PUMP* subsection.

NOTE: Keep the pressure gauge installed for the leak test.

2. Disconnect magneto connector (6-pin connector). Refer to *Stator Connector* in *CHARGING SYSTEM* subsection.

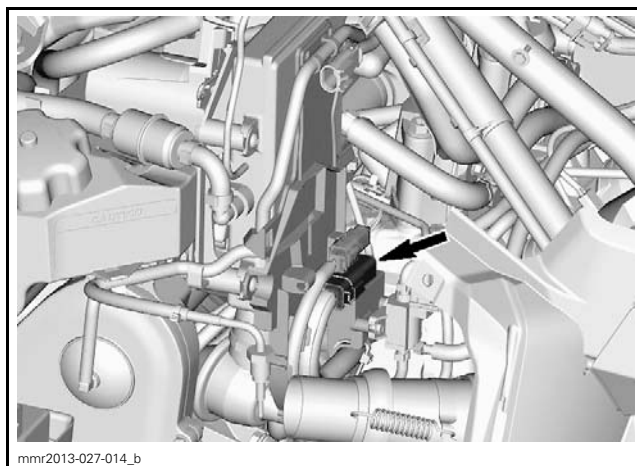

mnr2013-027-014_b

⚠ WARNING
The magneto connector must be disconnected to prevent any spark in the engine compartment should the engine be cranked. Fuel vapors may ignite in presence of a spark creating a fire hazard.

3. Release fuel pressure. Refer to *FUEL TANK AND FUEL PUMP*.

NOTICE If the fuel pressure is not released, the pressure will push the fuel injector out of its housing when removing the fuel injector from the engine. This could damage the fuel injector and lead to an important fuel spill.

4. Remove upper body module. Refer to *BODY* subsection.
5. Unlock ECM support to move ECM as necessary to lift fuel injectors.

NOTE: Fuel injector leak test can be done on one injector at a time or on both injectors simultaneously.

6. Unscrew both fuel injectors. Refer to *FUEL INJECTOR REMOVAL* in this subsection.
7. Carefully lift both fuel injectors. Be careful not to pry hoses against their plastic fittings.

CAUTION If both fuel injectors are not lifted carefully from the engine together, the strain on the injector fuel fittings may cause them to crack and leak fuel when pressurized, resulting in a fire hazard.




TYPICAL

NOTE: Do not install the thermal insulators against fuel injectors.

8. Secure each fuel injector to an INJECTOR RETAINER PLATE (P/N 529 036 137).



529036137

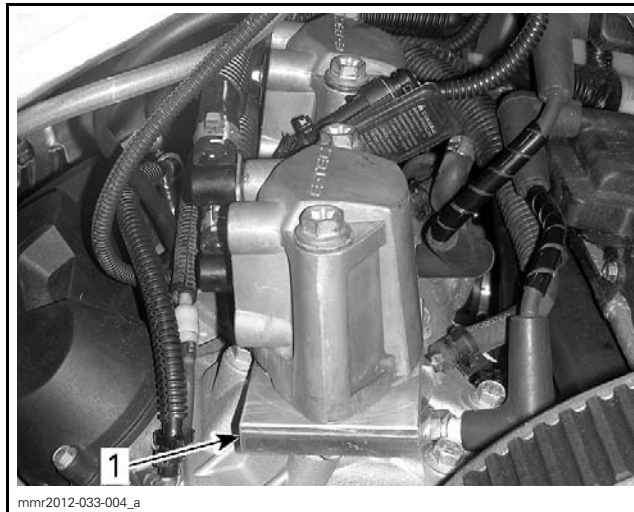

mnr2012-033-004_a

TYPICAL

1. Fuel injector retainer plate


NOTICE Ensure to position machined groove in the retainer plate on the fuel injector wiring side.

WARNING
Fuel injector must be secured during the leak test to avoid the fuel injector to be projected.

9. Place an appropriate container under the fuel injectors.
10. Ensure spark plug caps are installed on spark plugs.
11. Ensure there is enough fuel in fuel tank.
12. Connect vehicle to latest applicable B.U.D.S. version. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.

Leak Test

1. In B.U.D.S., select the **Activation** tab.
2. Ensure fuel pump is enabled.

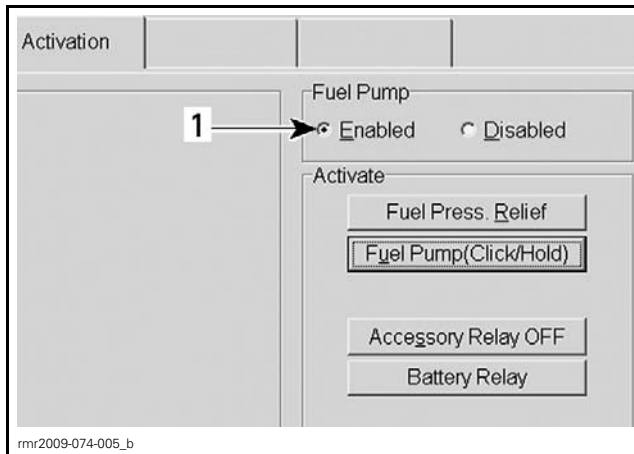

mnr2009-074-005_b


ACTIVATION TAB

1. Pump enabled

Subsection XX (E-TEC DIRECT FUEL INJECTION)

3. Click and hold the **Fuel Pump** button.

NOTE: Fuel pump will operate as long as button is held depressed in B.U.D.S.

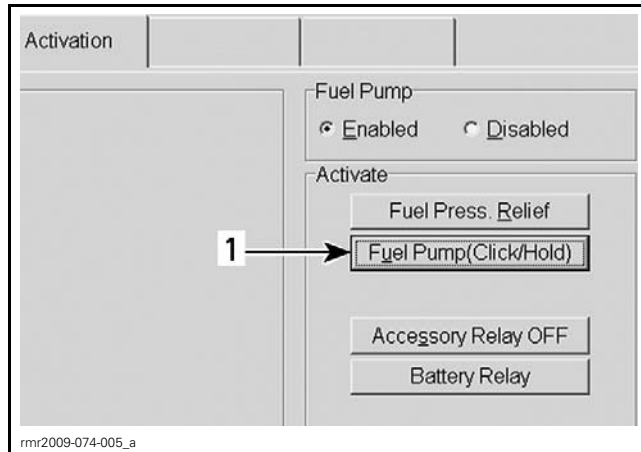

ACTIVATION TAB
1. Click and hold

4. Check for fuel leakage from the fuel injector nozzle.
5. Monitor fuel pressure at fuel pressure gauge. If pressure drops below 275 kPa (40 PSI) during the test, re-activate fuel pump as necessary.

FUEL INJECTOR LEAKAGE	
TEST DURATION	SPECIFICATION
2 minutes	2 drops per minute maximum

6. If test is not within specification, replace the faulty fuel injector.
7. Properly reinstall fuel injectors. Refer to *FUEL INJECTOR INSTALLATION* in this subsection.
8. Reinstall remaining removed components.
9. Connect magneto connector.


WARNING

Wipe up any spilled fuel.

Fuel Injector Functional Test

NOTE: This test is valid if one of the fuel injectors functions normally when activated.

1. Connect vehicle to latest applicable B.U.D.S. version. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. Select the **ECM** and **Activation** tabs.
3. Activate the fuel injector by clicking on it in B.U.D.S.

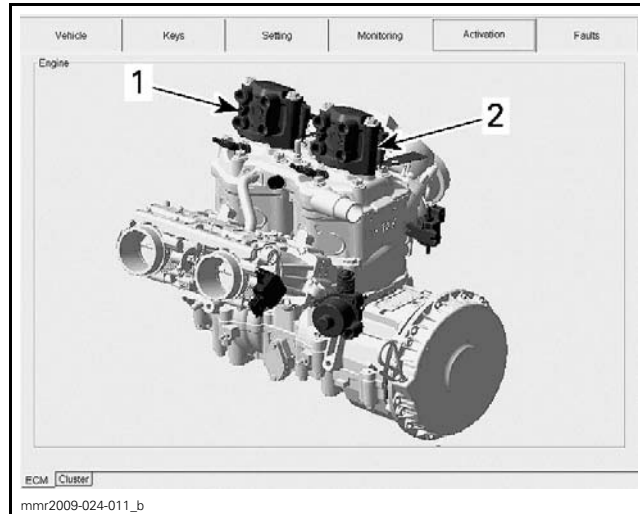

ACTIVATION TAB

1. Click on PTO fuel injector to activate
2. Click on MAG fuel injector to activate

NOTE: The fuel injector action should be felt. If the fuel injector does not function, connect it to the opposite fuel injector connector, then test again.

If the suspected fuel injector functions normally with the opposite fuel injector connector, carry out the *FUEL INJECTOR INPUT VOLTAGE TEST* in this subsection.

If the fuel injector still does not function, carry out the *FUEL INJECTOR RESISTANCE TEST*.

Fuel Injector Resistance Test

1. Remove upper body module. Refer to *BODY* subsection.
2. Disconnect the fuel injector connector.
3. Measure fuel injector resistance directly on its terminals.

FUEL INJECTOR		MEASUREMENT @ 22°C (72°F)
Pin 1	Pin 2	Below 2.7 Ω



mnr2012-033-005_a

TYPICAL

If measurement is out of specification, replace fuel injector.


Fuel Injector Input Voltage Test

600 HO E-TEC Engine

1. Set emergency engine stop switch to RUN to enable ignition and injection.

NOTE: Ensure magneto connector is properly connected.

2. Disconnect both electrical connectors from the fuel injectors.

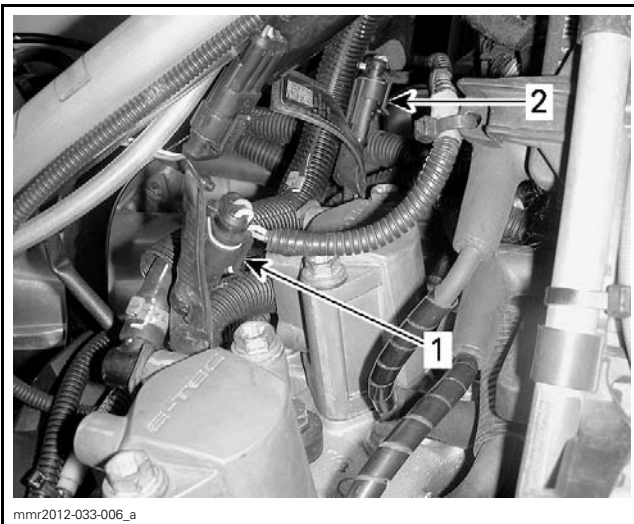


mnr2012-033-006_a

TYPICAL

1. PTO fuel Injector connector
2. MAG fuel injector connector

3. Use the FLUKE 115 MULTIMETER (P/N 529 035 868) and set it to Vdc.


4. Repeatedly press the RANGE button until the display shows Manual Range 6 0.

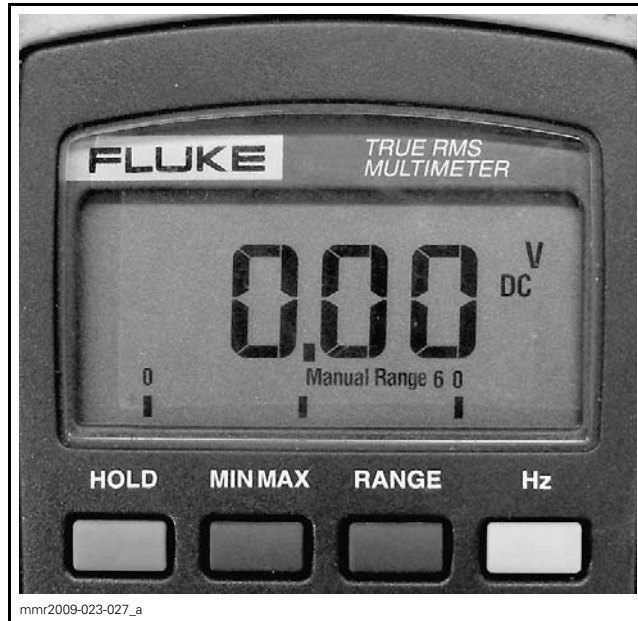

mnr2009-023-027_a

DC VOLTS AND MANUAL RANGE 6 0 SELECTED

5. Press the MIN MAX button so that the display shows MIN MAX.

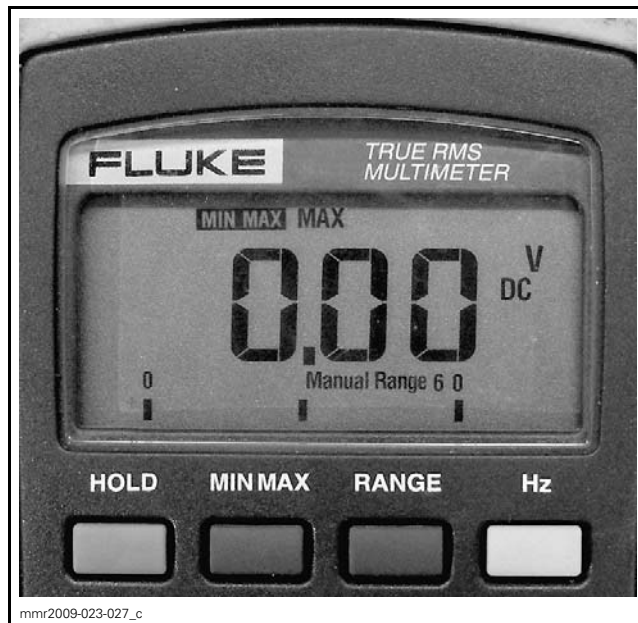


mnr2009-023-027_c

MIN MAX SELECTED

6. Measure voltage while cranking engine.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

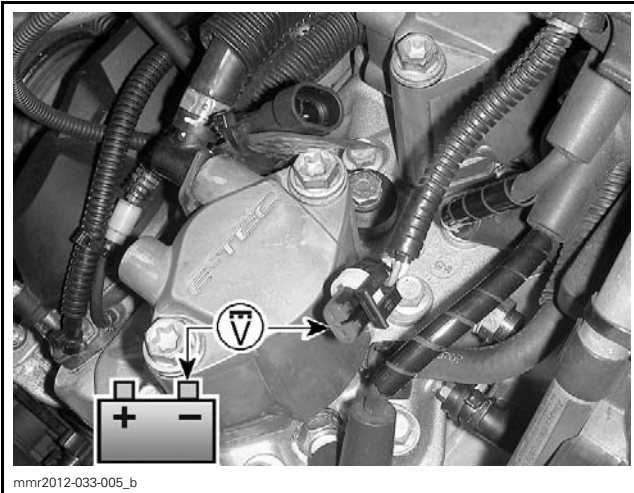

mmr2012-033-005_b

TYPICAL

7. Read the MAX value.

FUEL INJECTOR CONNECTOR		MEASUREMENT
Pin 1	Battery ground	30 Vdc minimum

NOTE: Reset multimeter by pressing and holding **MIN MAX** button until meter beeps.

If voltage test is as per specification, carry out the *FUEL INJECTOR CONTROL CIRCUIT SIGNAL TEST*.

If voltage test is not as per specification, check wire continuity between ECM and fuel injector connector.

800R E-TEC Engine


NOTE: This test can also be used on the 600 HO E-TEC engine.

1. Connect vehicle to latest applicable B.U.D.S. version. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.

In B.U.D.S., select **Monitoring** tab, then **ECM** tab.

2. Press and hold the **START/RER** button for a few seconds.

3. Read the voltage on the **55 V/60 V System Circuit** meter in B.U.D.S. as the engine is being cranked.

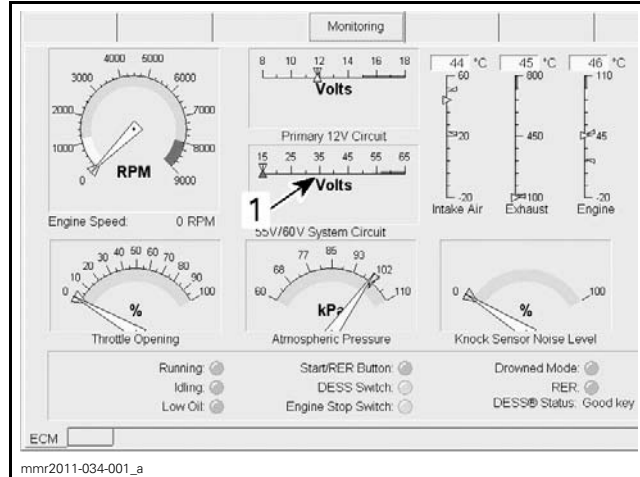

mmr2011-034-001_a

1. 55 V/60 V System circuit

55 V/60 V SYSTEM CIRCUIT VALUE


30 Vdc minimum

If voltage test is as per specification, carry out the *FUEL INJECTOR CONTROL CIRCUIT SIGNAL TEST*.

If voltage test is not as per specification, check wire continuity between ECM and fuel injector connector.


Fuel Injector Control Circuit Signal Test

1. Connect vehicle to the latest applicable B.U.D.S. version. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. Use the FLUKE 115 MULTIMETER (P/N 529 035 868) and set it to **Vdc (Hz)**.
3. Repeatedly press the **RANGE** button until the display shows Manual Range 6.

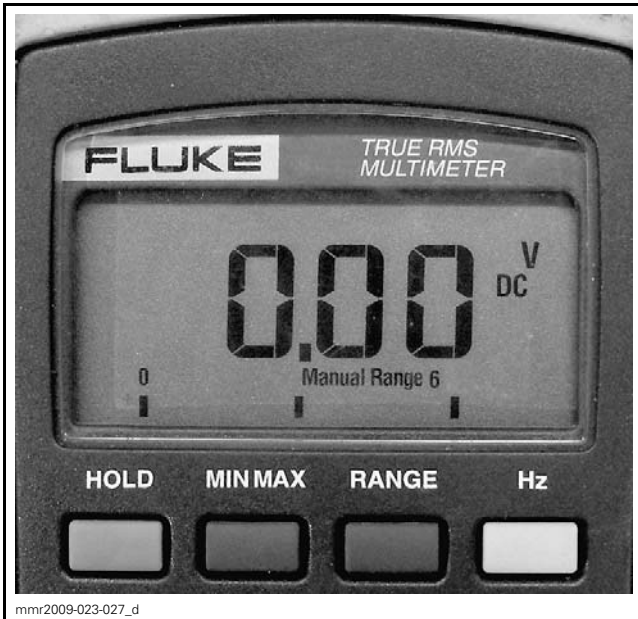


DC VOLTS AND MANUAL RANGE 6 SELECTED

4. Press the Hz button so that the display shows Hz.

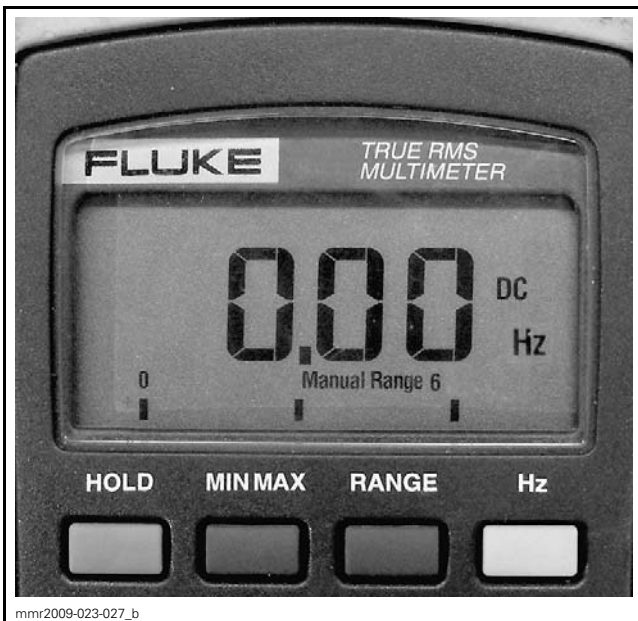

Hz SELECTED

5. In B.U.D.S., select the **Activation** and **ECM** tabs.
6. Activate fuel injector and read the frequency on the multimeter.

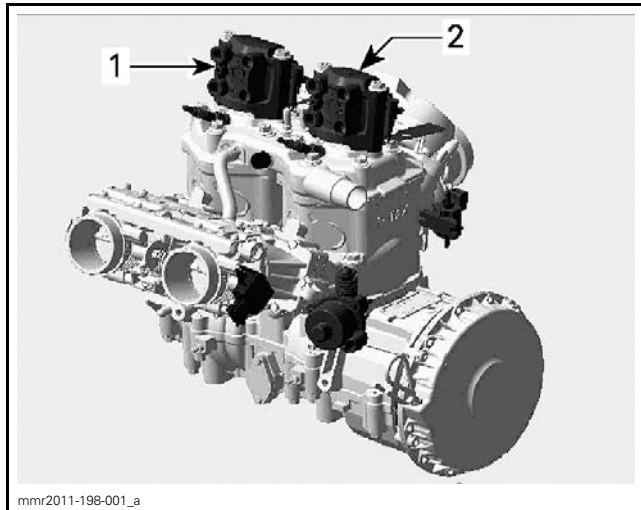

ECM, ACTIVATION PAGE
 1. PTO injector activation
 2. MAG injector activation

NOTE: The multimeter counts the pulses per minute (Hertz) of current the ECM sends to the fuel injector.

FUEL INJECTOR CONNECTOR		MEASUREMENT
Pin 1	Pin 2	Approximately 2 Hz



TYPICAL

If there is no reading, check continuity of wiring between ECM and fuel injector connector. If reading is good, the control circuit is functional.


Fuel Injector Removal

IMPORTANT: NEW O-rings and crush ring must be installed if fuel injector is removed (fuel injector disassembly required). Otherwise, leakage or damage to fuel injector/cylinder head might occur.

1. Remove upper body module. Refer to *BODY* subsection.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

2. Disconnect magneto connector (6-pin connector). Refer to *Stator Connector* in *CHARGING SYSTEM* subsection.

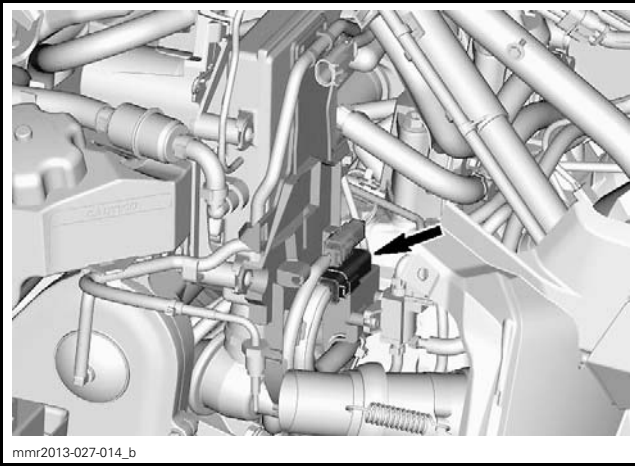

⚠ WARNING

The magneto connector must be disconnected to prevent any spark in the engine compartment should the engine be cranked. Fuel vapors may ignite in presence of a spark creating a fire hazard.


3. Clean fuel injector area.
4. Release the fuel pressure in the system. Refer to *FUEL TANK AND FUEL PUMP* subsection.

NOTICE If fuel pressure is not released, the pressure will push the fuel injector out of its housing when removing the fuel injector. This could damage the fuel injector and lead to an important fuel spill.

⚠ WARNING

Fuel vapors in the engine compartment could be lit by a spark. This might create a fire.

5. Disconnect fuel injector connector.

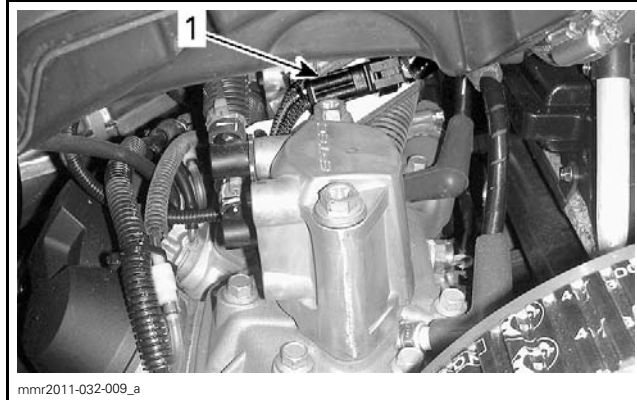


TYPICAL

1. Fuel injector connector


6. Install a rag under the hose ends to catch fuel spillage.

7. Remove fuel hose retainer screw.

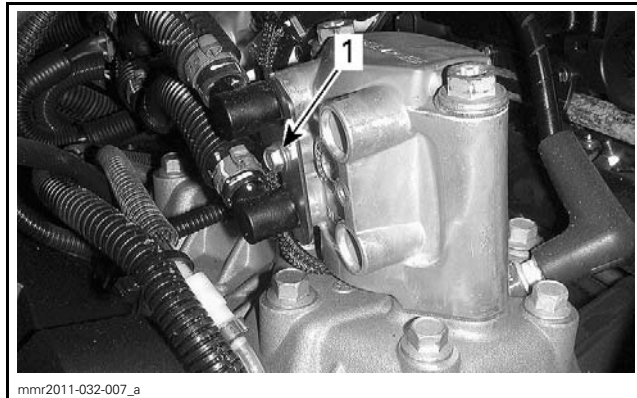

1. Fuel hose retainer screw

8. Slide the fuel hose retainer out and disconnect fuel hoses from fuel injector.

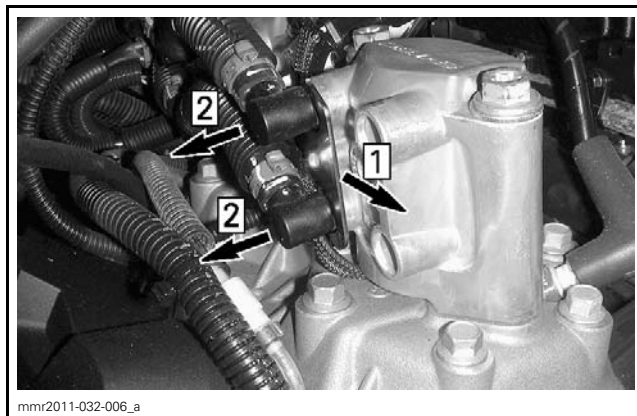

- Step 1: Remove fuel hose retainer
Step 2: Remove fuel hoses

⚠ WARNING

More fuel than usual will flow out of the fuel injectors. Work in a well ventilated area and wipe up spilled fuel.

9. Remove fuel injector screws.
10. Gently pull up on the fuel injector to remove it.

NOTE: If a fuel injector is to be reinstalled, mark it (MAG or PTO) to reinstall it in the same cylinder position.


NOTICE Use caution when handling fuel injector. Never hold injector by its electrical wires. Prevent dirt and debris from entering fuel inlet and outlet ports of fuel injectors or fuel hoses. Cover the fuel injector nozzle port in cylinder head to prevent contamination of combustion chamber.

Fuel Injector Disassembly

To remove fuel injector from its housing, use a Snap-on slide hammer puller including:


- SNAP-ON SCREW (P/N CJ93-1)
- SNAP-ON HAMMER (P/N CJ125-6).

1. Install the EXTRACTOR ADAPTOR (P/N 529 036 136) on the Snap-on screw.

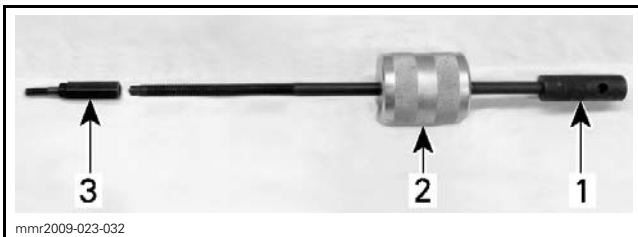

1. Snap-on screw
2. Snap-on hammer
3. Extractor adaptor (P/N 529 036 136)

2. Thread the extractor adapter into the fuel injector.
3. Securely hold the fuel injector housing upside down to avoid dropping it.
4. Work slide hammer to pull the fuel injector out.

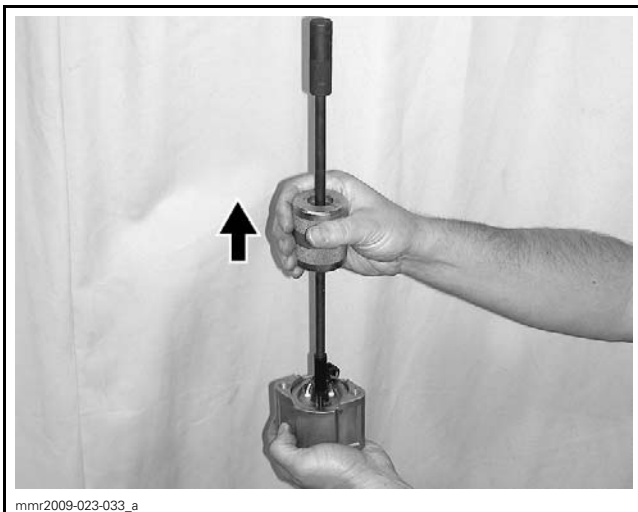


mmr2009-023-033_a



mmr2009-023-034


5. Remove the extractor adaptor from the fuel injector.
6. Remove O-rings, crush ring and filter from the fuel injector.

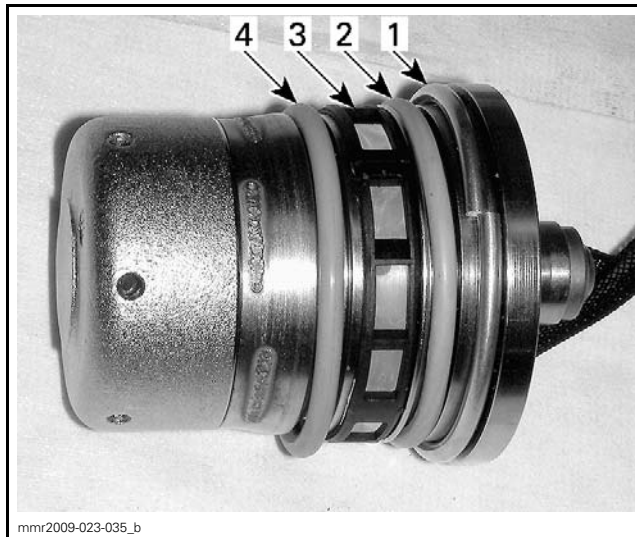

mmr2009-023-035_b

1. Crush ring
2. ORANGE O-ring
3. Filter
4. BLUE O-ring

7. Inspect and clean fuel injector filter.

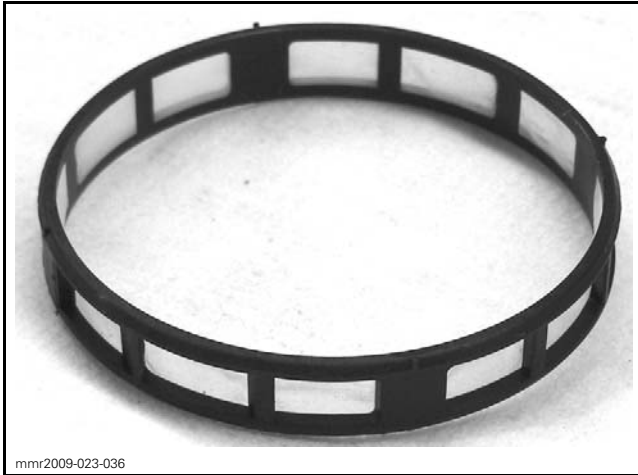

Fuel Injector Assembly

The assembly procedure is the reverse of disassembly. However, pay attention to the following:

IMPORTANT: Apply injection oil on O-rings.


Install a new crush ring.

Install a new orange O-ring on top.

NOTICE Always use the O-rings specifically designed for these fuel injectors.

Install filter. Ensure filter is retained firmly on fuel injector. Otherwise, remove it, invert it half a turn, then reinstall. If it still not retained securely, install a new one.

Install a new blue O-ring at bottom.

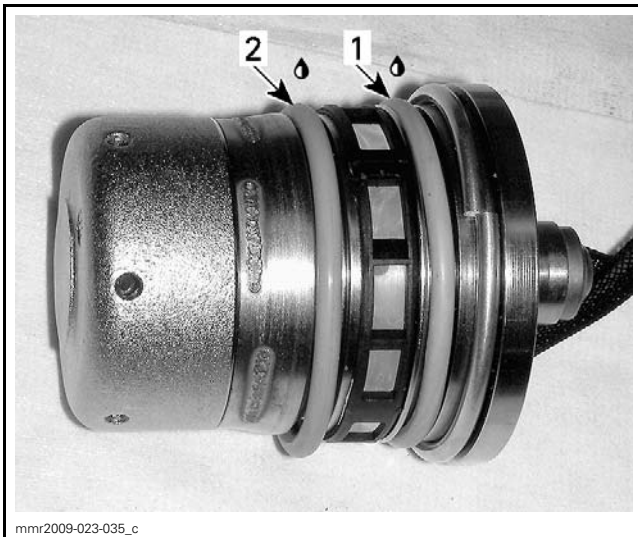

OIL INJECTION ON O-RINGS

- 1. ORANGE
- 2. BLUE

Reinstall fuel injector in its housing.


NOTE: Be sure to fully insert fuel injector in the housing with the wire outlets towards the fuel ports.

NOTICE Never press or tap the fuel injector tip.



WRONG INSTALLATION

- 1. Fuel injector not fully inserted in its housing

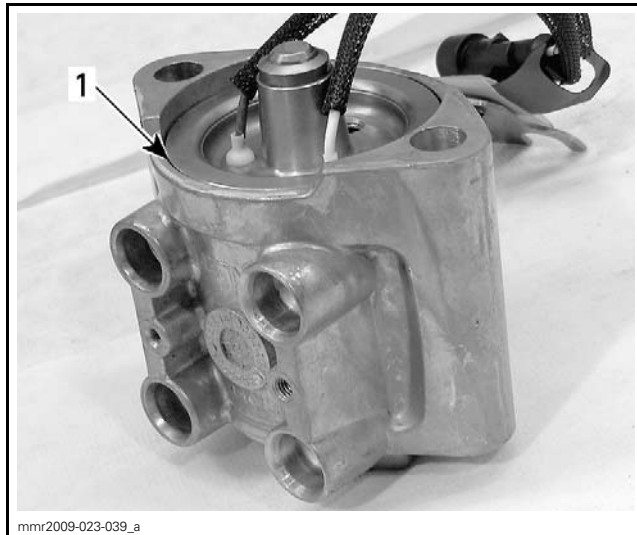

CORRECT INSTALLATION

- 1. Fuel injector fully inserted in its housing

Fuel Injector Installation

The following items and their mating surfaces must be cleaned and inspected prior to assembly:

- Fuel Injector
- Cylinder head: fuel injector housing and fuel injector tip contact surfaces
- Fuel injector screw threads and cylinder head threads (must be dry).


NOTICE All fuel injector components must be clean to ensure correct torque tightening specifications and to avoid leakage. Carefully follow the installation instructions.

NOTE: When installing a **used** fuel injector, re-install the fuel injector in the same location. If it was not marked at removal, verify the correct fuel injector-cylinder match using B.U.D.S. Refer to *FUEL INJECTOR POSITION VALIDATION*.

1. Position the thermal insulator on cylinder head.



2. Route the fuel injector wires towards the fuel ports.

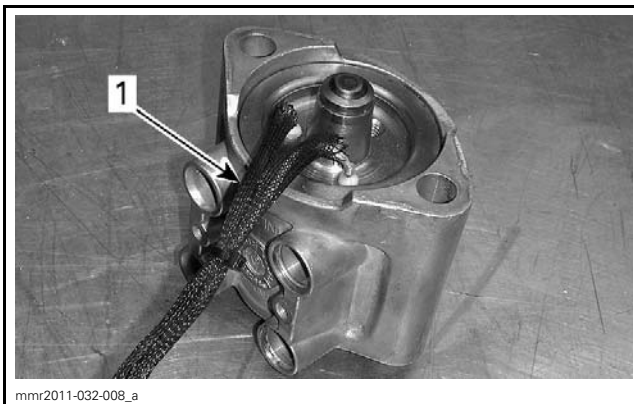


1. Fuel injector wires towards fuel ports

3. Place the fuel injector on the cylinder head, then thread in NEW screws with NEW washers.

NOTICE Torque fuel injector retaining screws prior to installing fuel hoses.

4. Tighten both injector retaining screws alternately in the following sequence:
 - 4.1 Hand tighten until the screw heads contact the fuel injector housing
 - 4.2 5 N•m (44 lbf•in)
 - 4.3 25 N•m (18 lbf•ft)
 - 4.4 60 N•m (44 lbf•ft).

5. Check condition of fuel hose O-rings and plastic flange on hose fittings.
6. Apply injection oil on O-rings.
7. Insert fuel hoses in fuel injector housing.

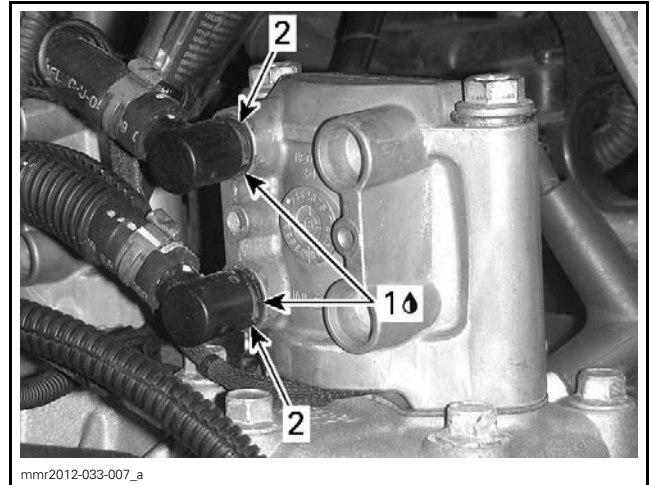


TYPICAL

1. Injection oil on O-rings
2. Hose fittings fully inserted here

NOTE: Both hose fittings must be fully seated in the fuel injector housing.

8. Insert the hose retainer so that it engages the groove in the fuel injector fittings.

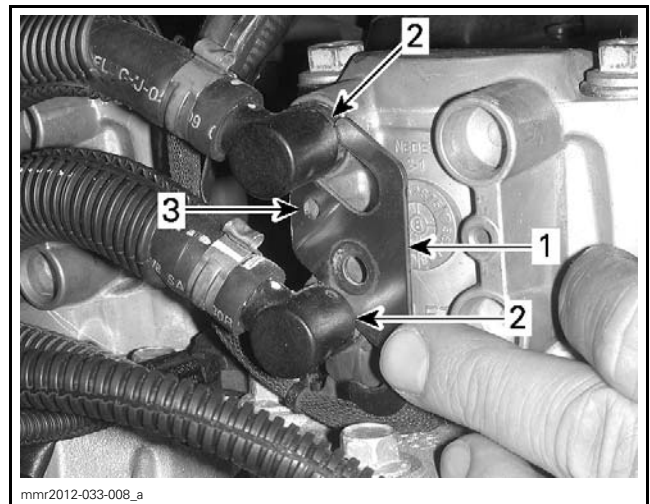

TYPICAL

1. Retainer
2. Retainer engagement in fuel injector fitting groove
3. Hole for securing injector wiring (up on PTO side)


NOTE: Ensure open end of retainer that locks in the fuel hoses faces inboard. The hole in the hose retainer used to secure the injector wiring must be on top for the PTO injector, and on the bottom for the MAG injector.

9. Install a NEW screw to secure hose retainer.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

NOTICE The screw features a scotch grip threadlocker coating that is destroyed when loosening screw. Always replace screw with a new one each time it is loosened.

10. Torque fuel hose retainer screw to 5 N•m (44 lbf•in).

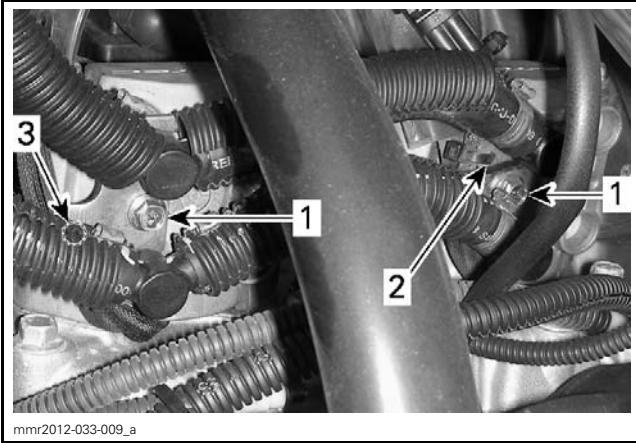

1. NEW fuel hose retainer screw
2. PTO injector wiring secured with locking tie
3. MAG injector wiring secured with locking tie (not visible)

11. Secure fuel injector wiring using a new locking tie.

12. Apply some DIELECTRIC GREASE (P/N 293 550 004) in fuel injector connector.

13. Reconnect fuel injector connector.

NOTICE Never fasten the electrical connector to the fuel injector. The connector must be "free floating".

14. If installing a NEW fuel injector, use B.U.D.S. to configure it in the ECM. Refer to *SETTING A FUEL INJECTOR TO A CYLINDER*.

NOTE: The engine will be able to run with an improperly matched fuel injector. However, the engine may misfire, run rough at idle, have poor fuel economy or run lean.

WARNING


Perform a fuel pressure test and make sure there is no leak.

Fuel Injector Position Validation

When troubleshooting or reinstalling a fuel injector, the correct matching of the fuel injector and cylinder must be confirmed using B.U.D.S. An incorrect match between the fuel injector and cylinder may lead to engine misfiring, improper idling or poor fuel economy.

NOTE: To configure a new fuel injector at installation, refer to *SETTING A FUEL INJECTOR TO A CYLINDER*.

1. Look for the fuel injector identification tag.

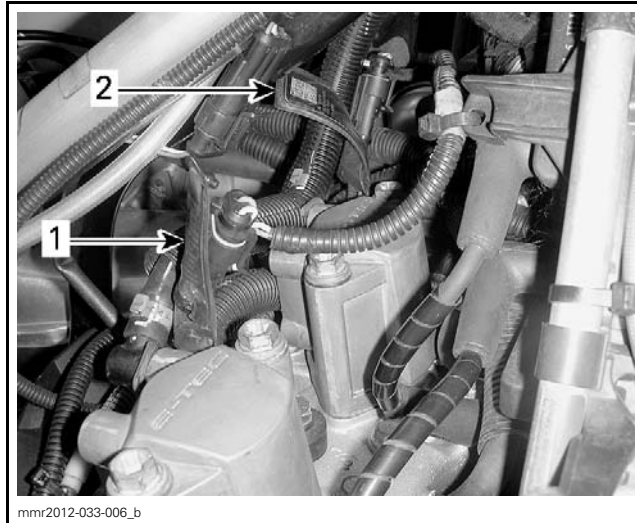

TYPICAL


1. PTO fuel injector tag
2. MAG fuel injector tag

2. Note the fuel injector serial number (SN) on the tag of the fuel injector you wish to validate.




SN: Serial number
CS: Checksum number

3. In B.U.D.S., select **Setting** and **ECM** tabs.

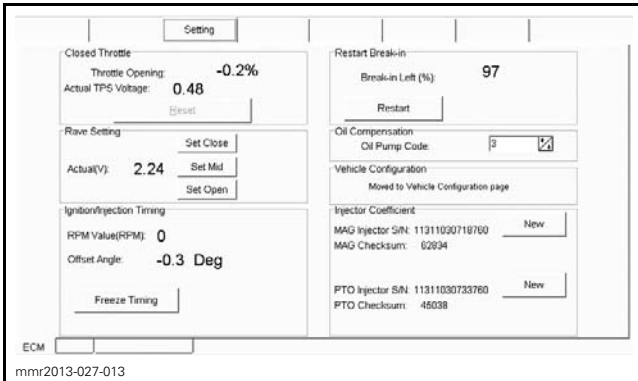

4. In the **Injector Coefficient** box, look for the fuel injector serial numbers (S/N) that are registered in the ECM.

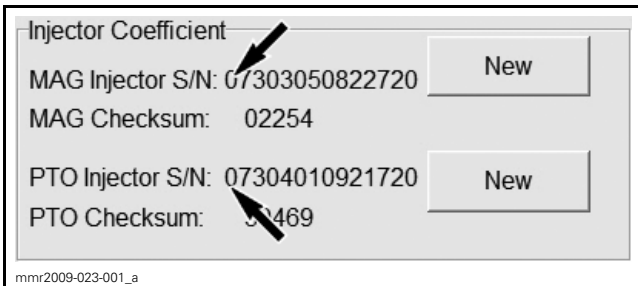

PTO AND MAG INJECTOR S/N


5. Compare the **MAG** or **PTO Injector S/N** that is configured in the ECM with the fuel injector SN installed on the engine.

NOTICE The actual fuel injector number (SN) must match the number in B.U.D.S. (Injector S/N). If not, check if fuel injectors have been installed in the wrong position (or replaced).

If numbers do not match, configure the fuel injector in B.U.D.S. Refer to *SETTING A FUEL INJECTOR TO A CYLINDER*.


Setting a Fuel Injector to a Cylinder

1. Note the serial number (SN) and the checksum number (CS) on the fuel injector tag.

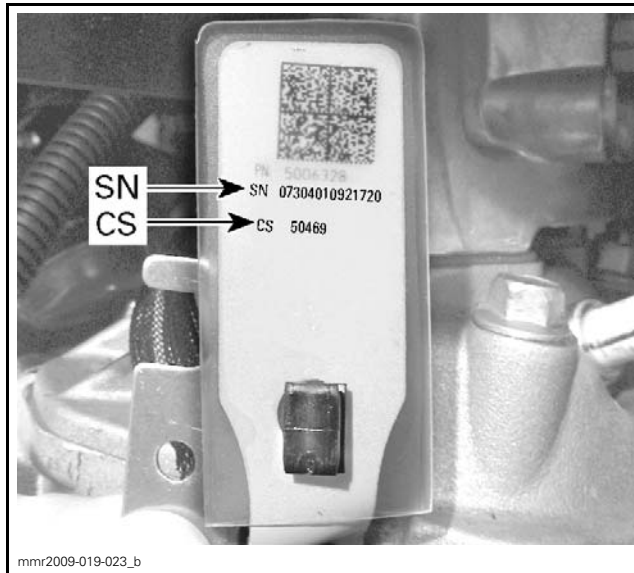


*SN: Serial number
CS: Checksum number*

- Using BOSSWeb, download the matching calibration file.
- Save the calibration file to your PC computer in the folder:
C:\Program Files\BRP\BUDSCommon\InjectorCoefficients.
- Start B.U.D.S. and click on the **Read Data** button.

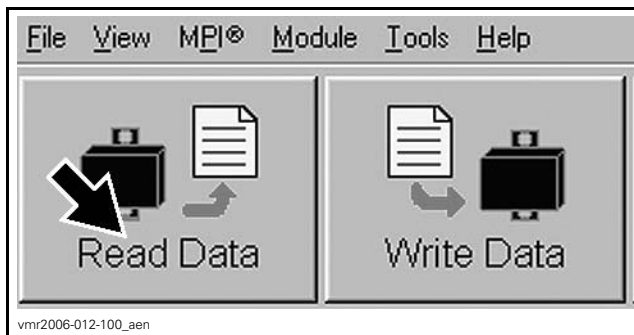

5. Select **Setting** and **ECM** tabs.

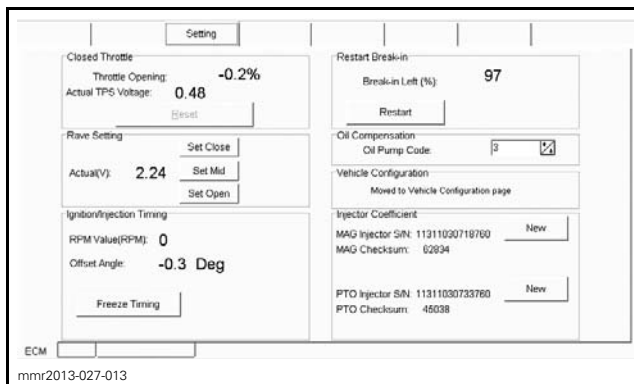

Subsection XX (E-TEC DIRECT FUEL INJECTION)

6. In the **Injector Coefficient** box, click on the **New** button of the fuel injector you want to replace (MAG or PTO).

Injector Coefficient

MAG Injector S/N: 07303050822720

MAG Checksum: 02254

PTO Injector S/N: 07304010921720

PTO Checksum: 50469

mnr2009-074-200

ECM TAB UNDER SETTING TAB

NOTE: Every time the **New** button is clicked, B.U.D.S. will automatically open the **Injector Coefficients** folder.

7. Select and open the fuel injector serial number file that matches the fuel injector installed on the engine.

Open

Look in:

07303050822720.inj

07304010921720.inj

File name:

Files of type:

mnr2009-023-003

8. Enter the checksum number noted earlier and select **Validate**.

Injector Checksum

Checksum

Serial Number:

Checksum:

mnr2009-074-201

NOTE: The file will be quickly read and loaded in B.U.D.S.

9. Click the **OK** button when the confirmation box appears.

Information

The injector file serial number has been successfully read.

mnr2009-023-004

10. Click on the **Write Data** button to save the changes to the ECM.

File View MPI® Module Tools Help

Read Data Write Data

vnr2006-012-100_ben

IMPORTANT: To ensure the proper file has been saved in the ECM, do the following:

11. Click on the **Read Data** button again in B.U.D.S.

File View MPI® Module Tools Help

Read Data Write Data

vnr2006-012-100_aen

12. Look in the **Injector Coefficient** area in the **ECM Setting** page.

Setting

Closed Throttle
Throttle Opening: -0.2%

Actual TPS Voltage: 0.48

Rave Setting
Actual(V): 2.24

Ignition/Injection Timing
RPM Value(RPM): 0
Offset Angle: -0.3 Deg

Restart Break-in
Break-in Left (%) 97

Oil Composition
Oil Pump Code: 3


Vehicle Configuration
Moved to Vehicle Configuration page

Injector Coefficient
MAG Injector S/N: 11311030718700
MAG Checksum: 02634

PTO Injector S/N: 11311030733760
PTO Checksum: 45038

ECM

mnr2013-027-013

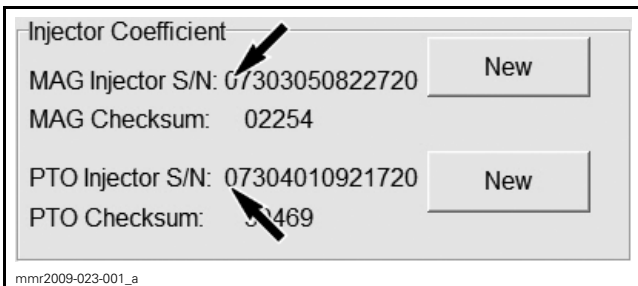

13. Ensure the S/N in B.U.D.S. matches the SN of the fuel injector installed on the engine and the PTO/MAG numbers are not inverted.
14. If there is a mismatch, reload the proper configuration file. Write data and read it again to recheck.

NOTE


Every time an ECM is read or when an **.mpem** file is opened, the fuel injector calibration files (example: 07303050822720 and 07304010921720.inj) are automatically stored on your PC computer under a folder that will be common to all versions of B.U.D.S.:

C:\Program Files\BRP\BUDESCommon\InjectorCoefficients.

If B.U.D.S. is uninstalled, the files won't be deleted.


If you ever replace an ECM from which you were not able to read the data, you could load its latest **.mpem** file, look at the fuel injector serial numbers stored in the ECM and then read the matching calibration files from the common files without the need to download the file from BOSSWeb.

ECM (ENGINE CONTROL MODULE)

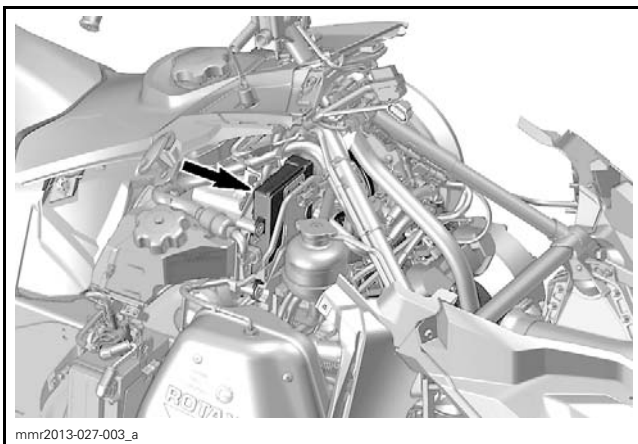

NOTE: Prior to replacing an ECM, carry out all testing procedures.

ECM Self Diagnostic LEDs

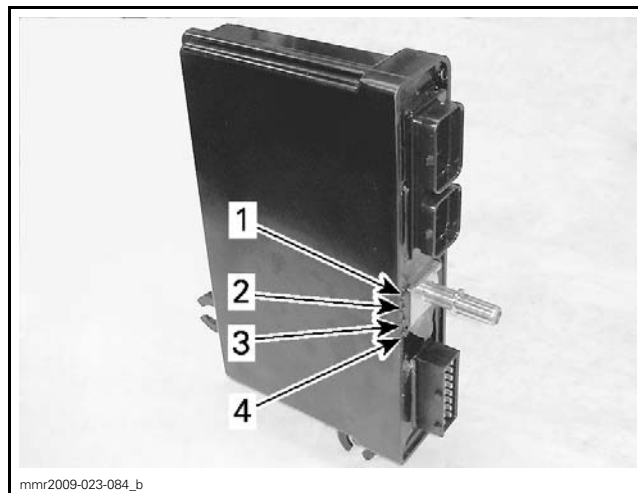

SELF DIAGNOSTIC LED

1. LED 1
2. LED 2
3. LED 3
4. LED 4

LED ON	ENGINE STARTING	ENGINE RUNNING
1	Charging OK	Charging fault
2	CPS signal OK	Fuel injection or ignition fault
3	Sensors OK	Sensor fault
4	Emergency and engine cut-off switch OK	No oil or engine overheat

ECM Pin Identification

CONNECTOR J1A (ALL E-TEC)	
FUNCTION	PIN
TPS in	1
Oil injection pump feedback switch + (600 HO only)	4
D.E.S.S. ground	5
CPS +	6
CPS	7
Emergency engine stop switch	9
TPS/RAVE position sensor +	10
D.E.S.S. signal	11
EGTS signal	12
CAN LO	13
CAN HI	14
ECM 12V power	15

Subsection XX (E-TEC DIRECT FUEL INJECTION)

CONNECTOR J1A (ALL E-TEC)	
FUNCTION	PIN
RAVE signal feedback	18
CTS signal	19
ATS signal	20
D.E.S.S. switch	23
TPS/RAVE position sensor ground	26
ATS/CTS ground EGTS ground (600 HO only)	27
START/RER switch signal	28
Oil level sensor +	29
Brake switch signal (600 HO only)	30
Not used (800R only)	
Not used (600 HO only) Oil injection pump feedback switch + (800R only)	32
Knock sensor +	33
Knock sensor ground	34

CONNECTOR J1B (600 HO E-TEC)	
FUNCTION	PIN
PTO fuel injector control	1
MAG fuel injector control	8
Starter solenoid control	9
ECM 12V power from diagnostic connector	10
Ground (fuel injectors)	14
PTO ignition coil control	19
Ground (fuel injectors)	20
Ground (fuel injectors)	21
E-RAVE solenoid control	22
Oil injection pump control	23
MAG ignition coil control	26


CONNECTOR J1B (800R E-TEC)	
FUNCTION	PIN
MAG fuel injector -	1
PTO fuel injector +	2
60V supply in	3
60V supply in	4

CONNECTOR J1B (800R E-TEC)	
FUNCTION	PIN
PTO fuel injector -	7
MAG fuel injector +	8
Starter solenoid control	9
ECM 12V power from diagnostic connector	10
Ground (fuel injectors)	14
PTO ignition coil control	19
Ground (fuel injectors)	20
Ground (fuel injectors)	21
E-RAVE solenoid control	22
Oil injection pump control	23
Brake switch signal	25
MAG ignition coil control	26

CONNECTOR J2 (ALL E-TEC)	
FUNCTION	PIN
Magneto winding	1
Magneto winding	2
Magneto winding	3
Fuel pump control	4
Ground	5
Secondary 12V supply (battery charging)	6
Ground	7
Ground	8
Magneto winding	9
Magneto winding	10
Magneto winding	11
Fuel pump flyback diode supply	12
55/60V power	13
Secondary 12V supply (battery charging)	14
Primary 12V supply	15
Primary 12V supply	16

ECM Connectors

ECM Connector Identification

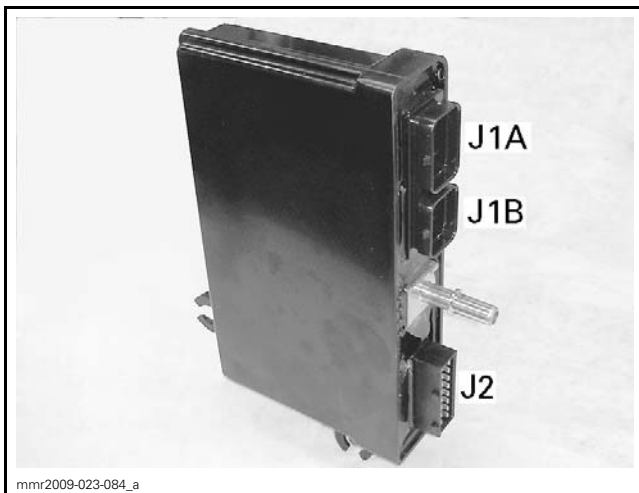


mmr2009-023-084_a
 J1A: Signal pins
 J1B: Signal pins
 J2: Power terminals

ECM Connector Access

To access ECM connectors:

1. Remove upper body module. Refer to *BODY*.
2. Unlock ECM support to move ECM as necessary.

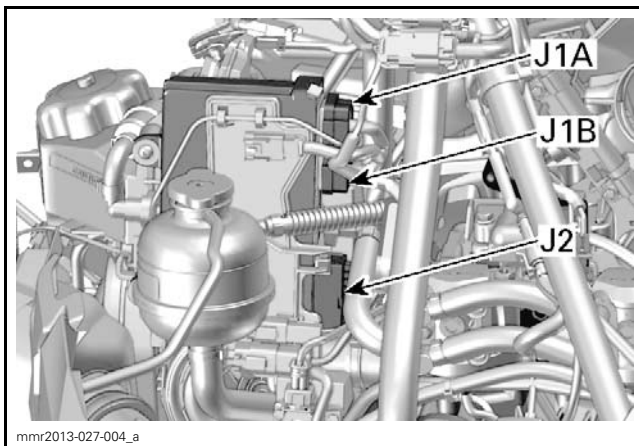


mmr2013-027-004_a
 ECM CONNECTORS — PARTS REMOVED FOR CLARITY


ECM Connector Removal

Refer to *CONNECTOR INFORMATION* subsection.


ECM Connector Pin-Outs

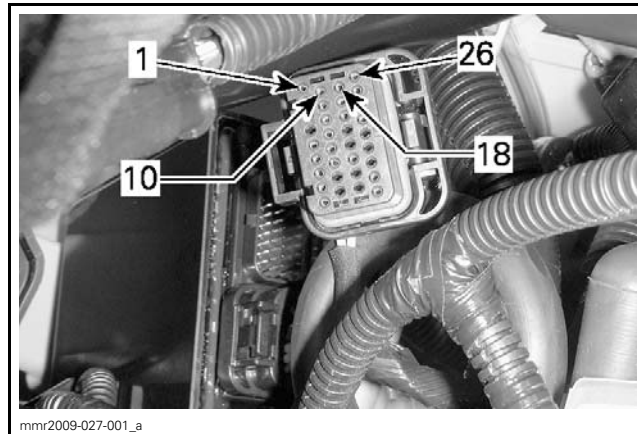

mmr2009-027-001_a
 J1A PIN-OUT

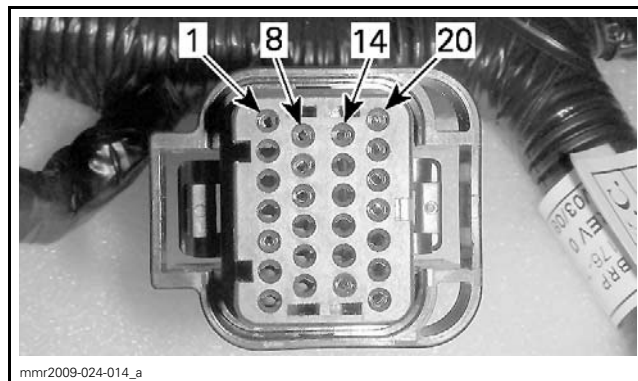

mmr2009-024-014_a
 J1B PIN-OUT

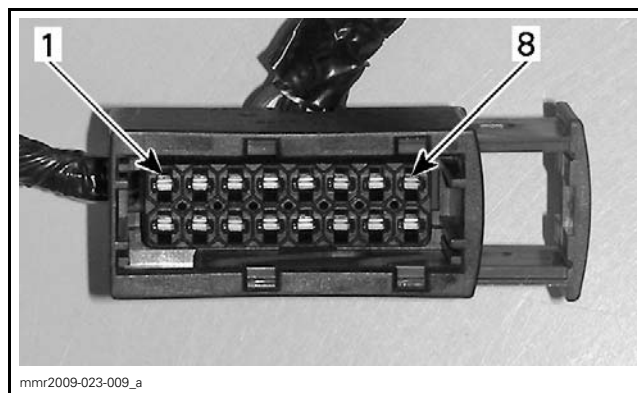

mmr2009-023-009_a
 J2 PIN-OUT


ECM Power Supply Troubleshooting

System Voltage Verification

Connect vehicle to latest applicable B.U.D.S. version. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.

In B.U.D.S., select **Monitoring** tab, then **ECM** tab. Crank engine while viewing **System Voltage**.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

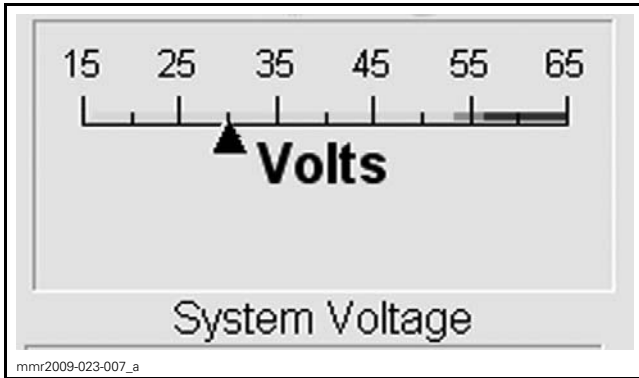


TEST CONDITION	VOLTAGE
Manual crank speed	30 Vdc min.

If voltage is as per specification, ECM is properly powered.

If voltage is out of specification, refer to *CHARGING SYSTEM*.


CAN Line Test

CAN lines link the ECM, multifunction gauge and vehicle diagnostic connector.

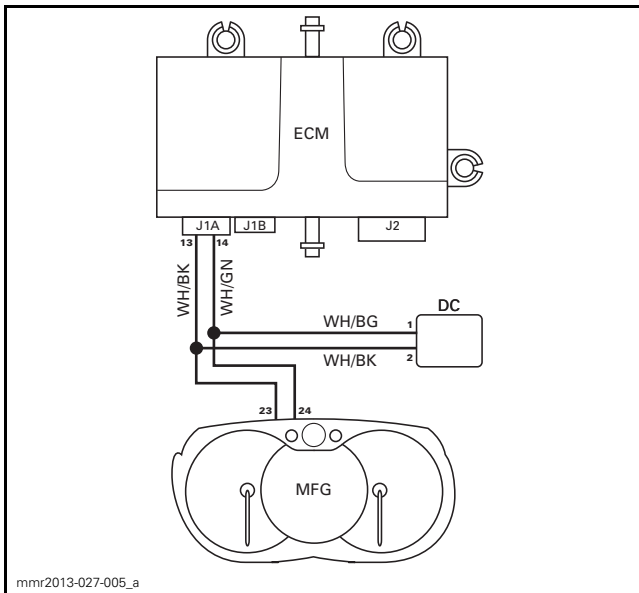

600 E-TEC

DC: Diagnostic connector
ECM: Electronic control module
MFG: Multifunction gauge

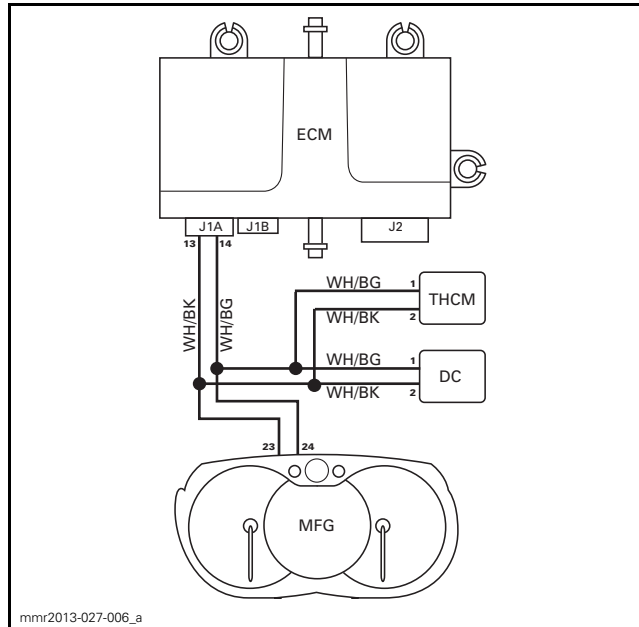

800R E-TEC

DC: Diagnostic connector
ECM: Electronic control module
MFG: Multifunction gauge
THCM: Thermocouple module

Test CAN wire continuity as follows.

1. Disconnect ECM connector J1A.
2. Disconnect multifunction gauge connector. Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection.
3. Using the FLUKE 115 MULTIMETER (P/N 529 035 868), read wire resistance as follows.

ECM ADAPTER	GAUGE CONNECTOR	MEASUREMENT
Pin 13	Pin 23	Close to 0 Ω
Pin 14	Pin 24	

If continuity is out of specification, repair or replace wiring harness between ECM and multifunction gauge.

If continuity is as per specification, carry out the following test.

4. Disconnect vehicle diagnostic connector from its protective cap.
5. Read wire resistance as follows.

DIAGNOSTIC CONNECTOR	GAUGE CONNECTOR	MEASUREMENT
Pin 2	Pin 23	Close to 0 Ω
Pin 1	Pin 24	

If continuity is out of specification, repair or replace wiring harness between diagnostic connector and multifunction gauge.

800R E-TEC Only

If continuity is as per specification, carry out the following test.

6. Disconnect THCM connector. Refer to *EXHAUST SYSTEM* subsection for THCM module access.
7. Read wire resistance as follows.

DIAGNOSTIC CONNECTOR	THERMOCOUPLE MODULE	MEASUREMENT
Pin 2	Pin 2	Close to 0 Ω
Pin 1	Pin 1	

All Models

If continuity is as per specification, CAN lines are functional.

8. Reconnect connectors and reinstall removed parts.

ECM Removal


NOTE: If a new ECM is to be installed, read *ECM REPLACEMENT* in this subsection **before** removing the ECM.

1. Remove tether cord cap (D.E.S.S. key) from engine cut-off switch.
2. Set emergency engine stop switch to STOP.
3. Remove upper body module. Refer to *BODY* subsection.
4. Install a rag under the ECM fuel hose quick connect to catch fuel spillage.
5. Place a container under the hose connector to recover fuel.




TYPICAL

6. Slowly disconnect fuel hose from ECM and drain fuel.

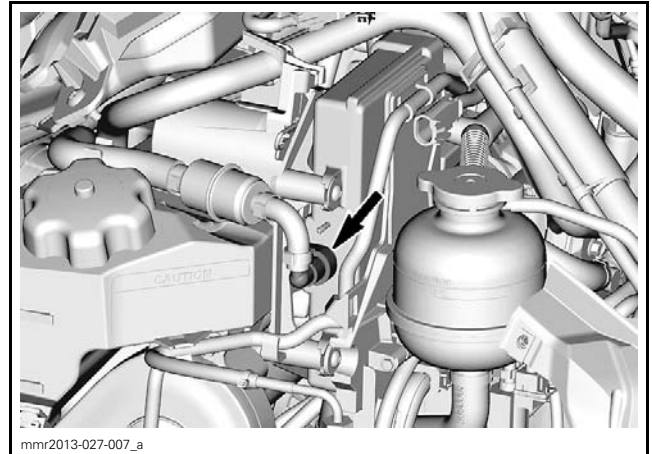

7. Detach coolant tank from its support.

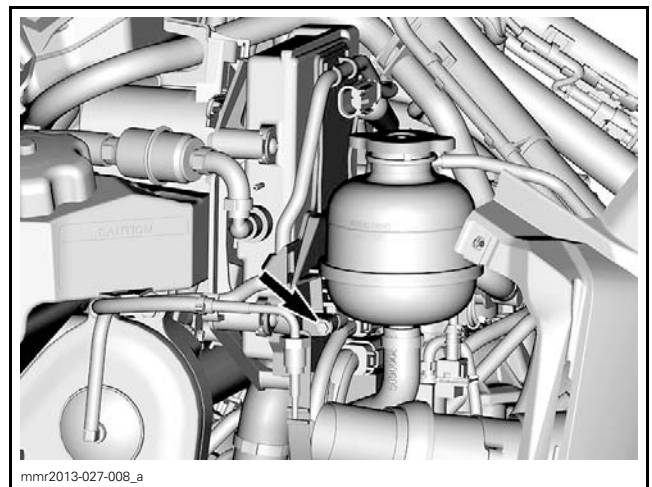


8. Unlock ECM support and slide toward right.




9. Slightly pull ECM out.
10. Tilt ECM in order to drain fuel remaining in ECM.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

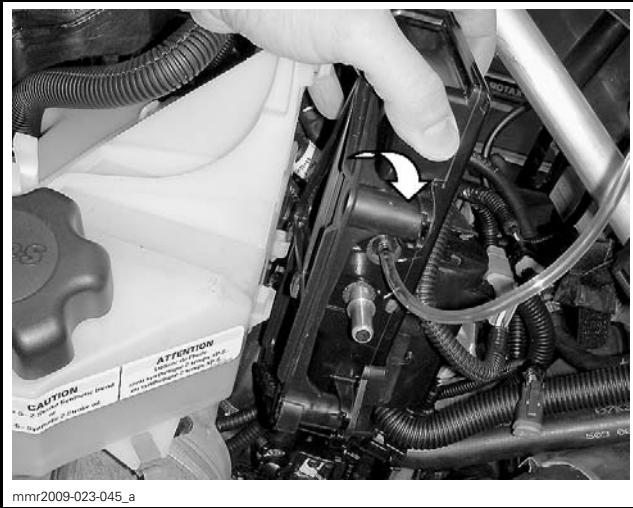

TYPICAL


11. Disconnect APS tube (air pressure sensor) from the ECM.
12. Disconnect ECM connectors.
13. Disconnect remaining fuel hose from ECM.

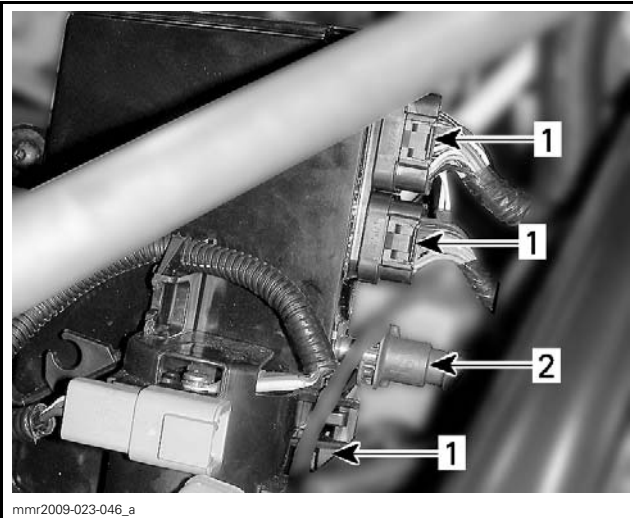

TYPICAL

1. ECM connectors
2. Fuel hose

14. Remove ECM from its support.

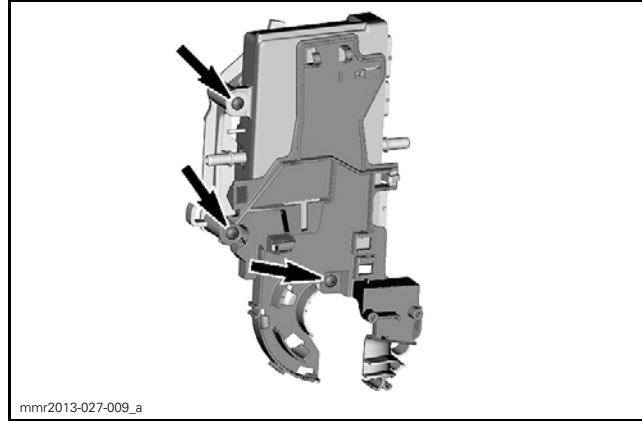

ECM Installation

Reverse removal procedure however, pay attention to the following.

Ensure the ECM tabs are properly engaged on the oil injection reservoir.



⚠ WARNING

Wipe up all spilled fuel.

Set engine stop switch to RUN.

Install tether cord cap on engine cut-off switch.

Transfer or enter data in new ECM. Refer to *ECM REPLACEMENT* in this subsection.

ECM Replacement

When installing a new ECM, data must be transferred manually and several resets are required to be carried out in B.U.D.S. Refer to *ECM MANUAL DATA ENTRY*



If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com


ECM Manual Data Entry

There are 2 possible methods to manually collect the required information. The 1st being the easiest.


- Use B.U.D.S. software and obtain the data from a saved .mpem file on your PC computer.
- Collect the information from the vehicle and obtain the fuel injector coefficient files from BOSSWeb.

1st Collecting Method: Get the Data from a Saved .mpem File


1. Remove the faulty ECM, refer to *ECM REMOVAL* in this subsection.
2. Install and connect the new ECM, refer to *ECM INSTALLATION* in this subsection.
3. Connect vehicle to latest applicable B.U.D.S. version and log on. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
4. Click on the **Open** button.

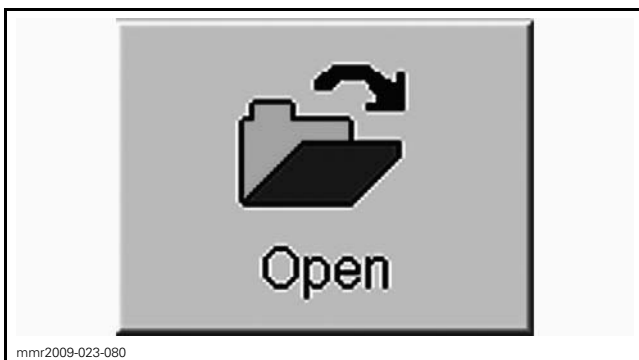

5. Click once on the **Folder Up** button in the **Open** box.

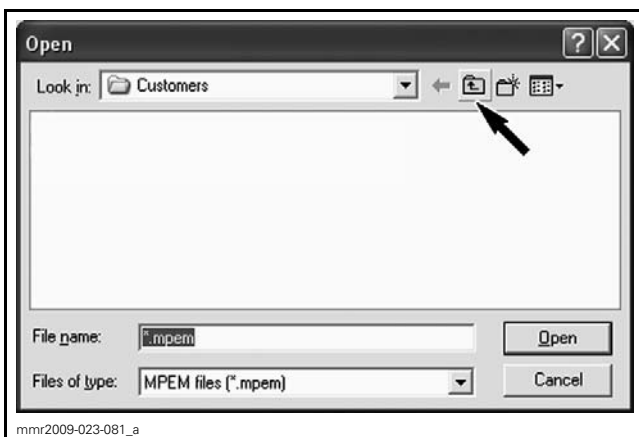


6. Double click on the **AutoSave** folder.

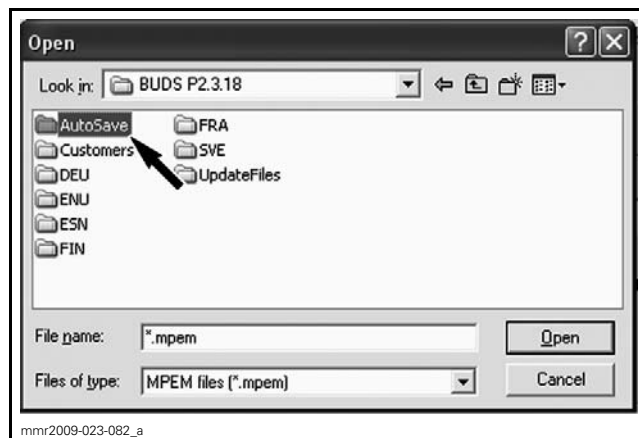

NOTE: You may have to go to another **AutoSave** folder from a previous version of B.U.D.S.

7. Choose the latest file saved for this specific vehicle.

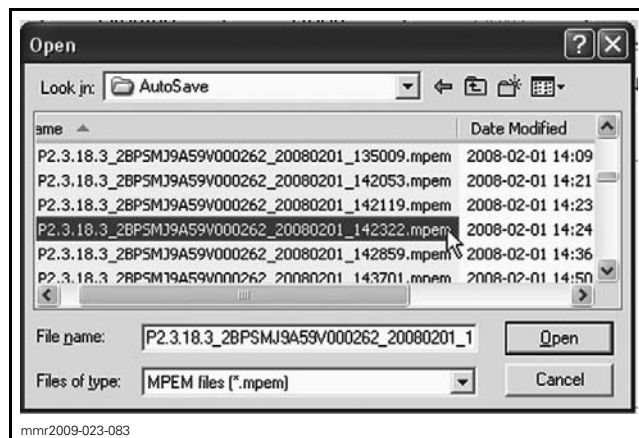

IMPORTANT: Ensure to use the file that specifically matches the vehicle you are servicing.

NOTE: The file name structure is as follows:

BUDS version_VIN_date read (yyyymmdd)_hour read (hhmmss).mpem

Example:

P2.3.18.3_2BPSMJ9A59V000262_20080201_142322.mpem

8. In the **Vehicle** tab, record the following information;
 - Engine number (without the leading "M")
 - Customer name.

NOTE: It is not necessary to record the vehicle (VIN) and model numbers. They will be transferred later.

9. Select the **ECM** and **Setting** tabs and record the following information;
 - Ignition/Injection timing: Offset angle

Subsection XX (E-TEC DIRECT FUEL INJECTION)

- Oil compensation: Oil pump code
- Fuel injector coefficients: MAG/PTO injectors S/N and Checksums.

Setting

Closed Throttle
Throttle Opening: -0.2%
Actual TP5 Voltage: 0.48
Reset

Restart Break-in:
Break-in Left (%): 97
Restart

Oil Compensation
Oil Pump Code: [0] [v]

Vehicle Configuration
Moved to Vehicle Configuration page

Injector Coefficient
MAG Injector S/N: 11311030718760 New
MAG Checksum: 62934

PTO Injector S/N: 11311030733760 New
PTO Checksum: 45038

ECM
mmr2013-027-013

Injector Coefficient

MAG Injector S/N: 07303050822720 New

MAG Checksum: 02254

PTO Injector S/N: 07304010921720 New

PTO Checksum: 50469

mmr2009-023-001_a

FUEL INJECTOR SERIAL NUMBER (S/N)

Injector Coefficient

MAG Injector S/N: 07303050822720 New

MAG Checksum: 02254

PTO Injector S/N: 07304010921720 New

PTO Checksum: 50469

mmr2009-023-001_b

FUEL INJECTOR CHECKSUM (CS)

10. Enter data in ECM as detailed in *ENTERING THE COLLECTED INFORMATION INTO THE ECM*.

2nd Collecting Method: Collect the Information from the Vehicle

1. Record engine serial number.



RH SIDE OF ENGINE COMPARTMENT

1. Engine serial number

2. Record oil injection pump code.



BACK OF OIL INJECTION PUMP

1. Oil pump code (0 to 9)

3. Record MAG/PTO injector S/N and Checksum numbers.

Record the serial number (SN) and the checksum (CS) on the fuel injector tag.



SN: Serial number
CS: Checksum number

Use BOSSWeb to get the matching calibration file.

Save the calibration file to your PC computer in the folder:

C:\Program Files\BRP\BUDSCommon\
InjectorCoefficients.


Enter data in ECM as detailed in *ENTERING THE COLLECTED INFORMATION INTO THE ECM*.

Entering the Collected Information Into the ECM


1. Ensure B.U.D.S. is properly connected to the vehicle and logged on.

NOTE: The beeper will continuously sound a sequence of 11 beeps meaning that the D.E.S.S. key is not programmed. To stop the beeps, remove key.

2. In B.U.D.S., click the **Read Data** button to read the new "empty" ECM.

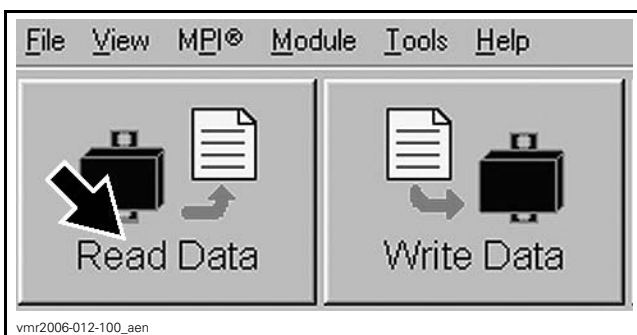


Then, a message will appear saying that the cluster (multifunction gauge) does not recognize the ECM.

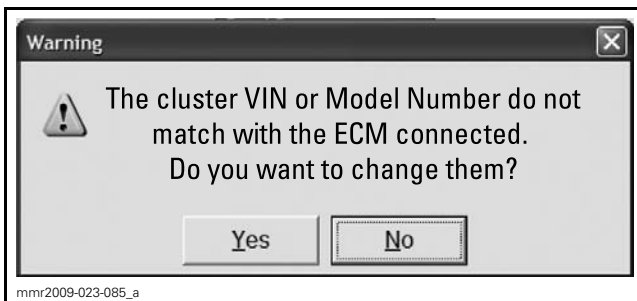

3. Click **Yes**.


NOTE: If the numbers are not matched, the gauge will stop operating within 10 seconds of engine operation. Only its D.E.S.S. LED will be turned ON.

4. Click on the arrows to transfer the numbers from the **Cluster** column to the **ECM** column.

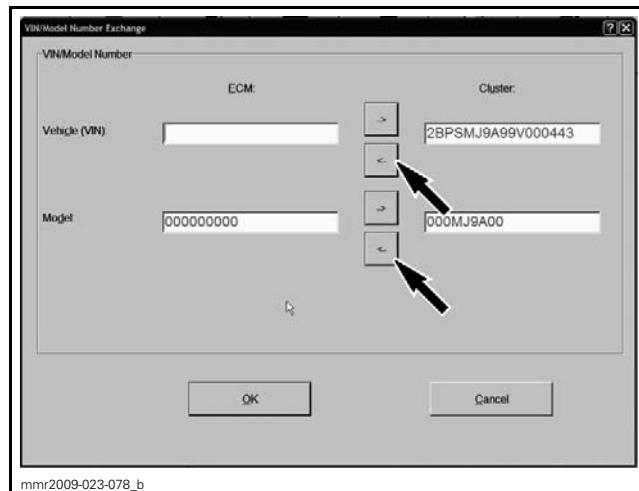

TYPICAL

Ensure the **VIN** and **Model** numbers in the ECM and cluster are exactly matched.

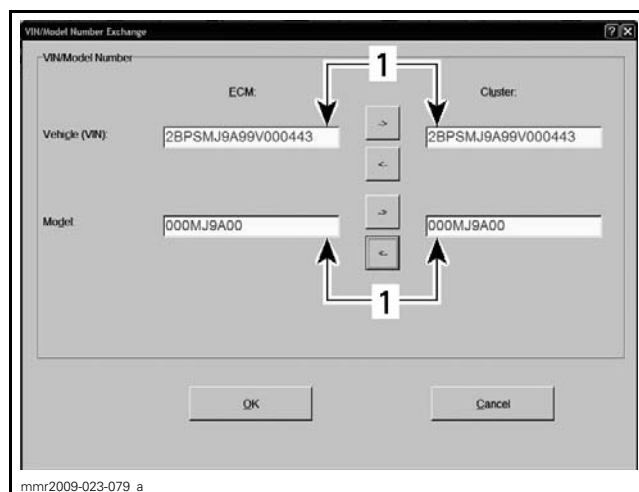


TYPICAL

1. Matching numbers

5. On the **Vehicle** page, enter the information you recorded previously:


- Engine number (do not enter the leading "M")
- Customer name.

6. In the **Keys** page, select **Erase All Keys**.

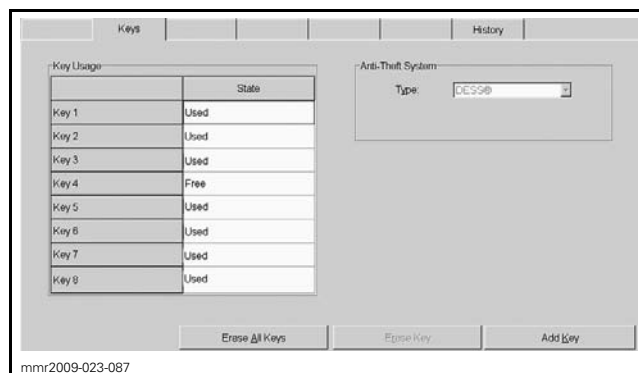


Subsection XX (E-TEC DIRECT FUEL INJECTION)

7. Program the desired key(s). Refer to *D.E.S.S. SYSTEM* subsection.
8. Select the **Setting** tab then **Vehicle Configuration**.

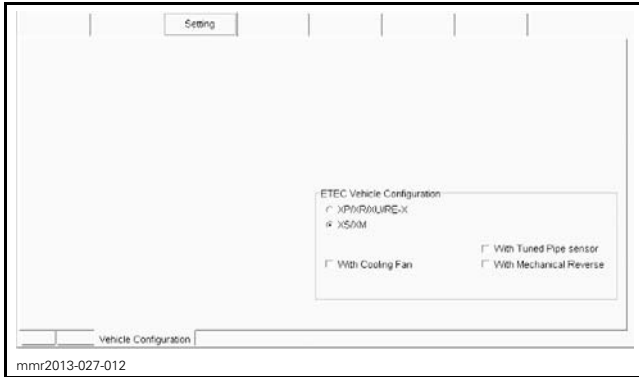


9. In the **Vehicle Configuration** page:

- 9.1 Ensure the check boxes reflect the vehicle connected to B.U.D.S. in the **ETEC Vehicle Configuration** area. Otherwise, check the required boxes.

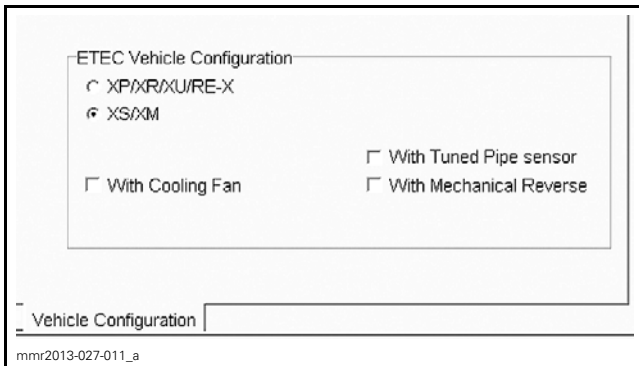


10. Select the **Setting** tab then **ECM**.

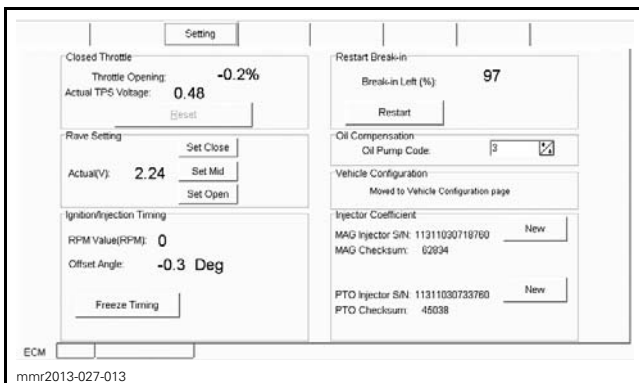

11. Reset the **Closed Throttle** setting as detailed in *CLOSED THROTTLE RESET (TPS)*.


NOTICE The Closed Throttle Reset must be carried out as described in the specific procedure or engine damage may occur.

12. Carry the **3D Rave Valves Position Sensor Setting**. Refer to *RAVE (600 HO E-TEC AND 800R E-TEC)* subsection.
13. Set the **Ignition/Injection Timing**. Refer to *IGNITION SYSTEM* subsection.
14. **Restart Break-In**. Click **Restart** button if the actual engine hours are less than 5 hours.

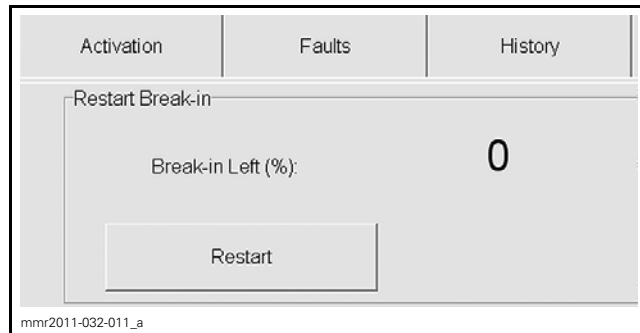

TYPICAL

15. **Oil Compensation**. Enter the previously recorded **Oil Pump Code**.

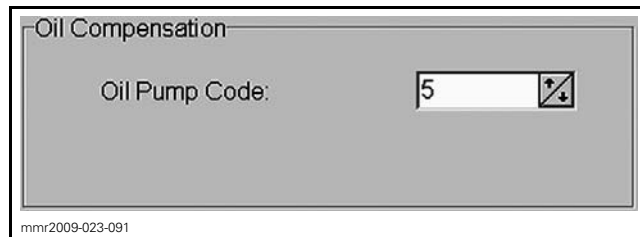

TYPICAL

16. MAG and PTO fuel injector S/N.


16.1 If the data was obtained from a saved .mpmem file, refer to table A.

16.2 If the fuel injector calibration file was obtained from BOSSWeb, refer to table B.

TABLE A (DATA FROM A SAVED .MPEM FILE)
Click on the New button and open the file that matches the previously recorded serial number.
Ensure the PTO and MAG side injector S/N correctly match those on the engine.
Once the file has been read, ensure the checksum number (CS) displayed in B.U.D.S. matches the CS previously recorded.
If the numbers do not match, the wrong file was read. Repeat the procedure to record the correct file.

TABLE B (CALIBRATION FILE FROM BOSSWEB)
Click on the New button and open the file that you previously saved on your PC computer in the folder: C:\Program Files\BRP\BUDSCommon\InjectorCoefficient
Ensure to correctly match the PTO and MAG side injector serial numbers.
Once the file has been read, ensure the fuel injector tag SN and CS matches those shown in B.U.D.S.
<p>SN: Serial Number CS: Checksum number</p>
If the numbers do not match, the wrong file was read. Repeat the procedure to record the correct file.

17. Click on the **Write Data** button to save the data to the ECM.

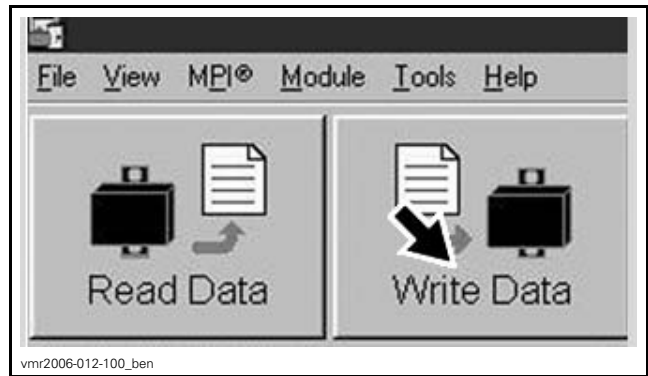


18. Lift rear of vehicle and safely support.

Subsection XX (E-TEC DIRECT FUEL INJECTION)


19. Start the engine and increase engine speed above 6000 RPM to be sure no fault codes appear.
20. Let engine idle to ensure idle is adequate.
21. If engine does not run as expected, ensure that the fuel injector calibration files are valid. Check with the tag of the fuel injectors installed on the engine.
22. Reinstall remaining removed parts.

THROTTLE BODY

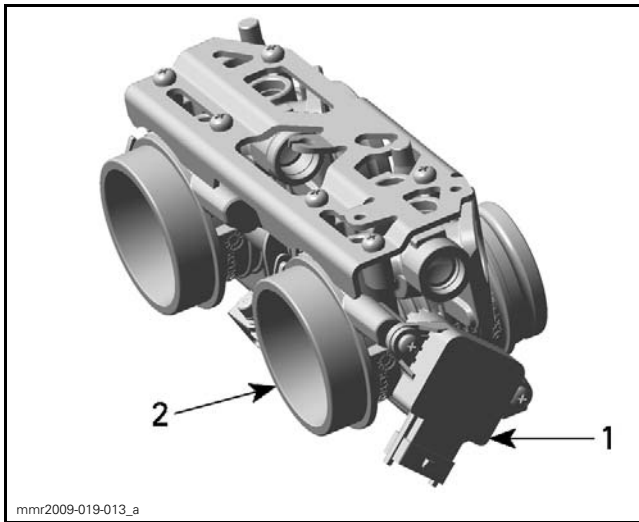

1. Throttle body
2. TPS (Throttle position sensor)

Throttle Body Screw Identification

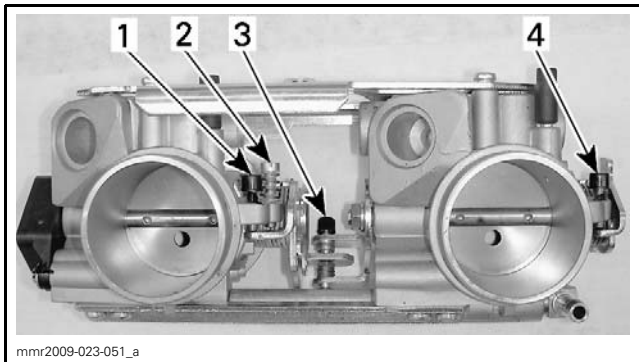

1. Master zero position screw (capped)
2. Idle screw (not used on E-TC engine)
3. Synchronizing screw (capped)
4. Slave zero position screw (capped)

NOTICE Do not tamper with any capped screw. Otherwise, throttle body may have to be replaced.

Throttle Body Inspection

- Ensure throttle plates move freely and smoothly when depressing throttle lever.


- Ensure throttle body master zero position screw is **NOT** loose. If so, replace throttle body.
- Ensure that the master zero position screw stops the throttle plate, **not** the idle screw. There **must** be a gap under the idle screw.
- Ensure TPS is **NOT** loose.
- Check for corroded or damaged wiring or connectors.

Throttle Body Removal

⚠ WARNING


Always remove tether cord cap (D.E.S.S. key) and disconnect battery before removing the throttle body.

1. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
2. Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.
3. Remove adapter plate from throttle body.

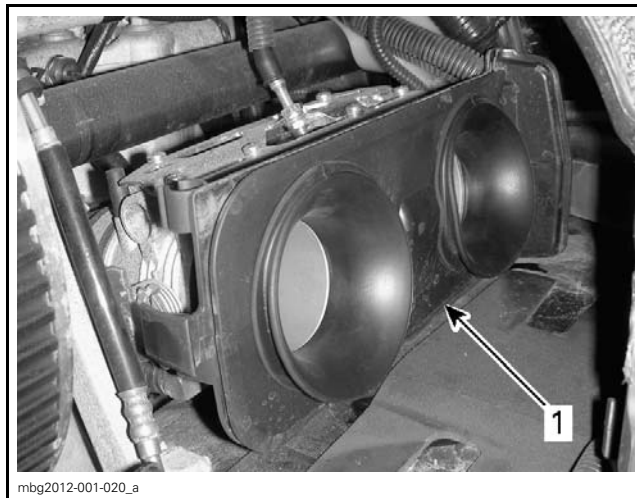


1. Adapter plate


4. Loosen clamps retaining throttle body.

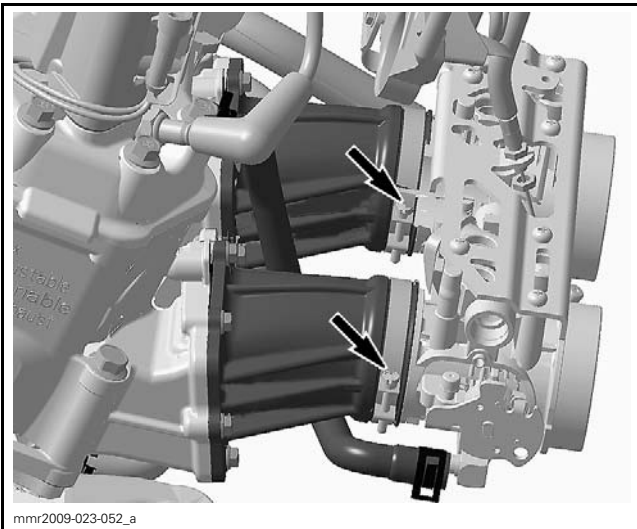

5. Pull out throttle body sufficiently to access coolant hoses and TPS connector.
6. Disconnect TPS connector.

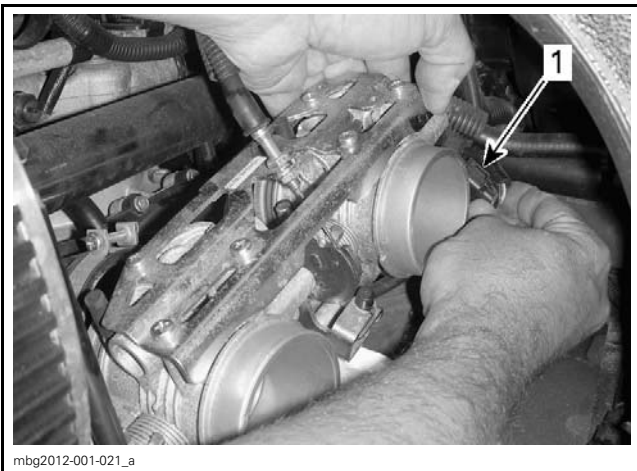



1. TPS connector

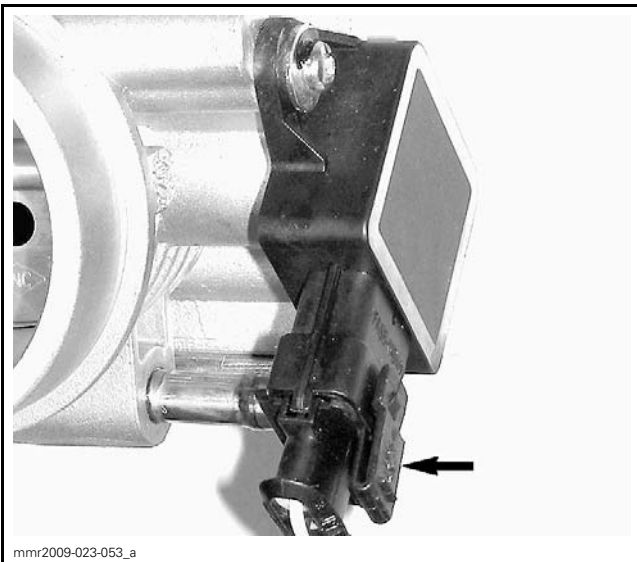

PUSH TAB TO UNLOCK


7. Install a small hose pincher on coolant hoses connected to throttle body.

REQUIRED TOOL	
SMALL HOSE PINCHER (P/N 295 000 076)	

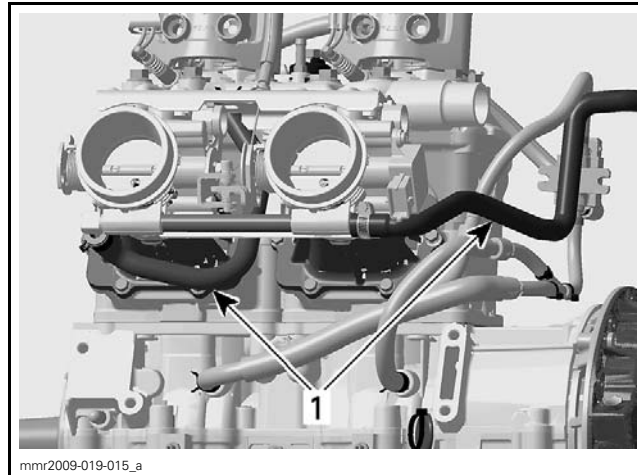

1. Install hose pinchers here

8. Remove coolant hoses from throttle body.

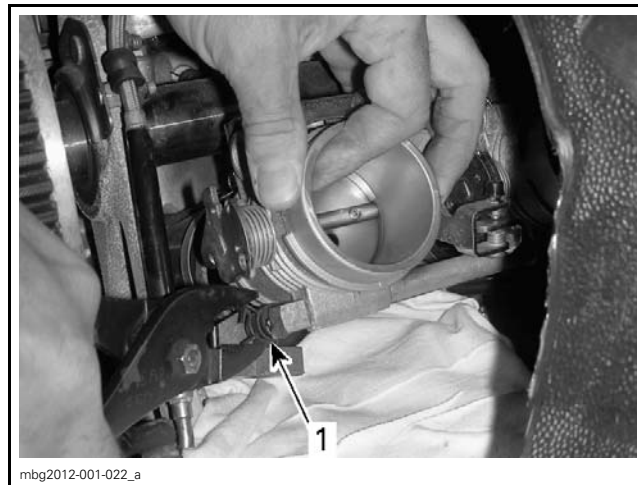


1. Coolant hose clamp to remove

Subsection XX (E-TEC DIRECT FUEL INJECTION)



1. Coolant hose clamp to remove

9. Disconnect throttle cable.

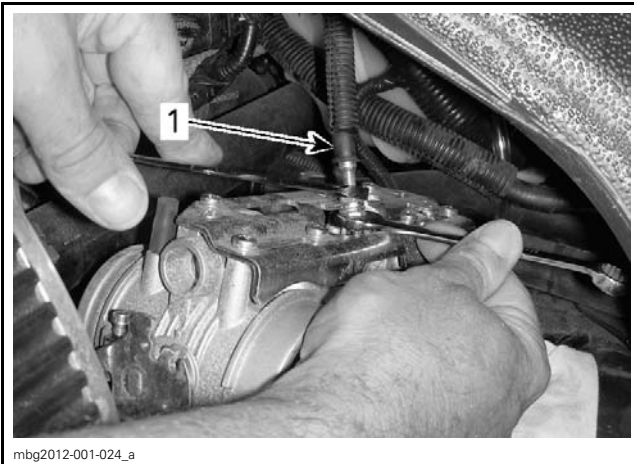

1. Throttle cable

10. Remove throttle body from vehicle.

Throttle Body Installation

1. If installing the removed throttle body, clean throttle plates and bores using PULLEY FLANGE CLEANER (P/N 413 711 809) before installation.
2. Install cooling hoses on throttle body.
3. Remove hose pinchers.
4. Connect TPS connector.

NOTICE Ensure TPS connector tab is properly locked.

5. Install throttle body on intake adapters.
6. Tighten throttle body clamps to specification.

TIGHTENING TORQUE	
Throttle body clamps	1.4 N•m ± 0.2 N•m (12 lbf•in ± 2 lbf•in)

7. Install throttle cable loosely.

8. Carry out the *THROTTLE CABLE ADJUSTMENT* as detailed in this subsection.

9. If a new throttle body or TPS is installed, carry out the *CLOSED THROTTLE RESET (TPS)* as detailed in this subsection.

10. Refill engine coolant.

NOTE: If an important quantity of coolant was spilled, bleed cooling system. Refer to *COOLING SYSTEM* subsection.

11. Install adapter plate (primary air intake silencer) on throttle body.

TIGHTENING TORQUE	
Adapter plate clamps	0.7 N•m ± 0.2 N•m (6 lbf•in ± 2 lbf•in)


12. Install primary air intake silencer, refer to *AIR INTAKE SYSTEM* subsection.

13. Install all remaining removed parts.

Throttle Body Synchronization

No synchronization is required as it has already been done at the factory.


NOTICE Do not alter synchronization screw setting. Otherwise throttle body must be replaced.

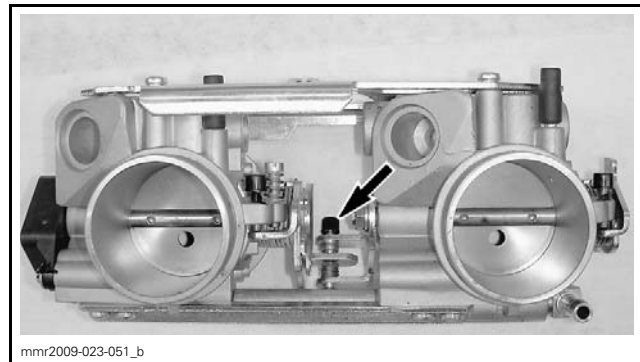

TPS (THROTTLE POSITION SENSOR)

Description

The throttle position sensor (TPS) is a potentiometer that sends a signal to the ECM which is proportional to the throttle shaft angle.

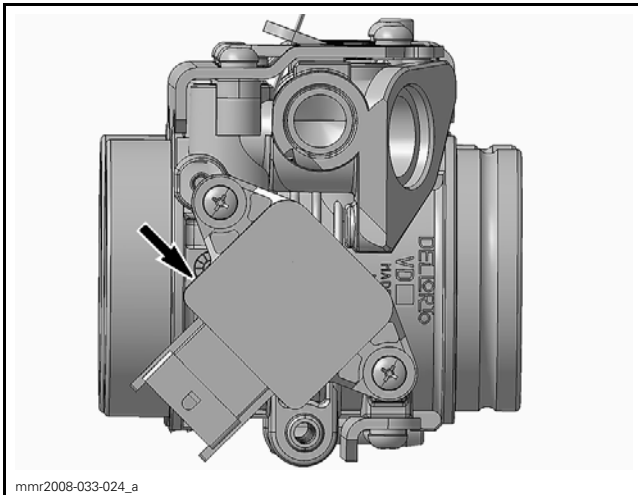

mmr2008-033-024_a

THROTTLE POSITION SENSOR (TPS)


TPS Connector Access

1. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
2. Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.

⚠ WARNING


Always remove tether cord cap (D.E.S.S. key) and disconnect battery before removing the throttle body.

3. Loosen clamps retaining throttle body.

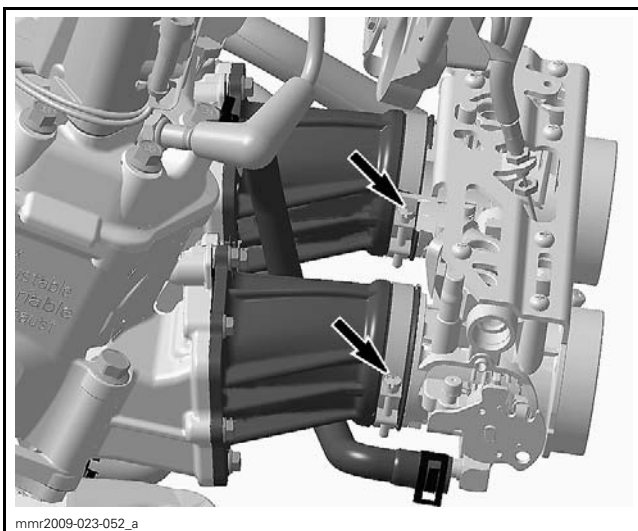

mmr2009-023-052_a


4. Pull out throttle body for access to TPS connector.
5. Disconnect TPS connector.

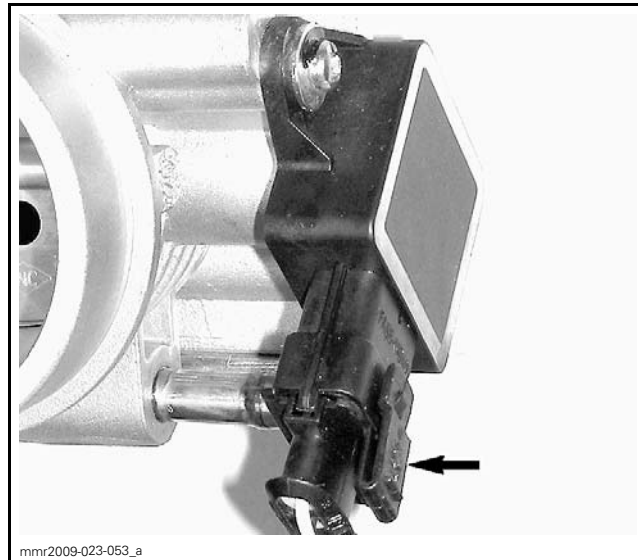

mmr2009-023-053_a

TPS Wear Test

1. Ensure TPS connector is properly connected.
2. While engine is not running, activate throttle and pay attention for smooth operation without physical stops of the cable.
3. Use B.U.D.S. software.
4. Select the **Monitoring** and **ECM** tabs. Monitor the TPS using the **Throttle Opening** indicator.

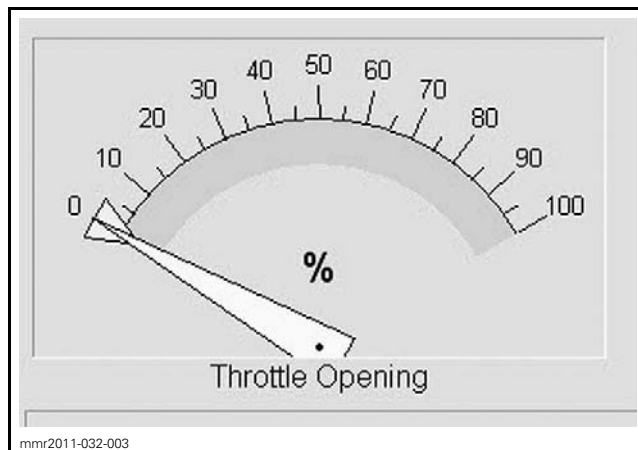

mmr2011-032-003

THROTTLE OPENING INDICATOR

5. Slowly and regularly depress the throttle. Observe the needle movement.

The needle must change gradually and regularly as the throttle is activated. If the needle "sticks", bounces, suddenly drops off or if any discrepancy between the throttle movement and the needle movement is noticed, it indicates a worn TPS that needs to be replaced.


TPS Reset (Closed Throttle)

Refer to *CLOSED THROTTLE RESET (TPS)* in the *ADJUSTMENT* topic of this subsection.

Subsection XX (E-TEC DIRECT FUEL INJECTION)


TPS Input Voltage Test

1. Remove parts required to access TPS connector, refer to *TPS CONNECTOR ACCESS* in this subsection.
2. Disconnect TPS connector.
3. Use the FLUKE 115 MULTIMETER (P/N 529 035 868) and set it to Vdc.
4. Repeatedly press the **RANGE** button until the display shows Manual Range 6.

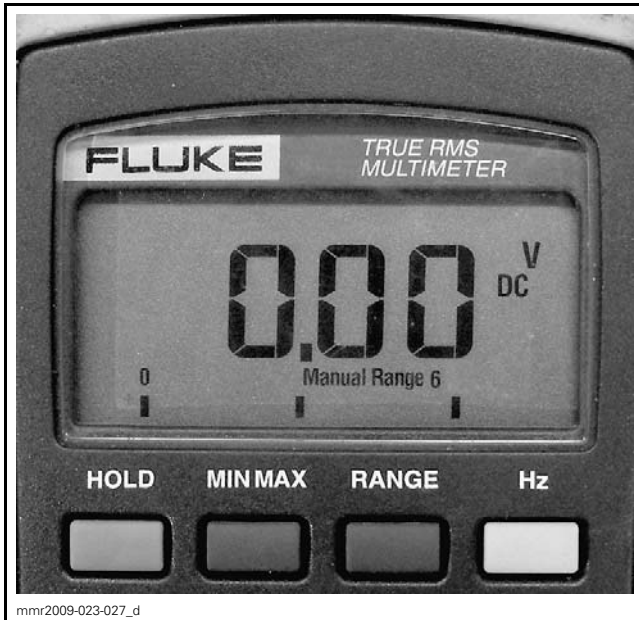

DC VOLTS, MANUAL RANGE 6 SELECTED


5. Press the **MIN MAX** button so that the display shows MIN MAX.

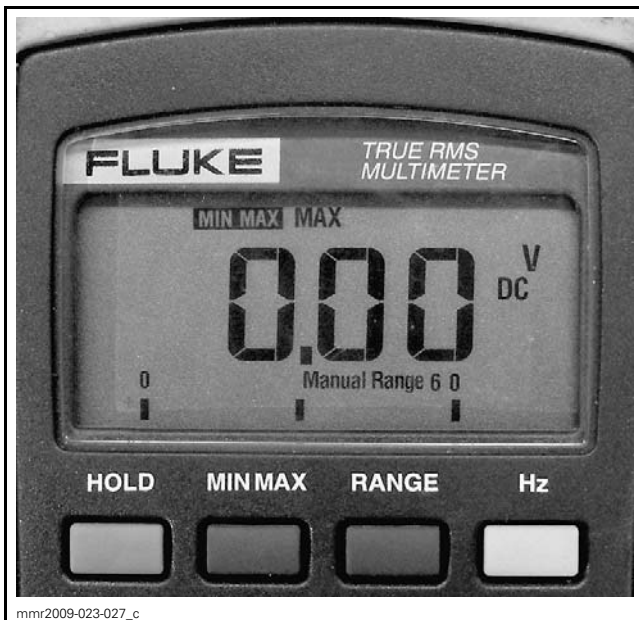

MIN MAX SELECTED

6. Crank engine.
7. Read voltage at TPS harness connector as follows.

TPS HARNESS CONNECTOR		VOLTAGE
Pin 1	Pin 2	5.0 Vdc

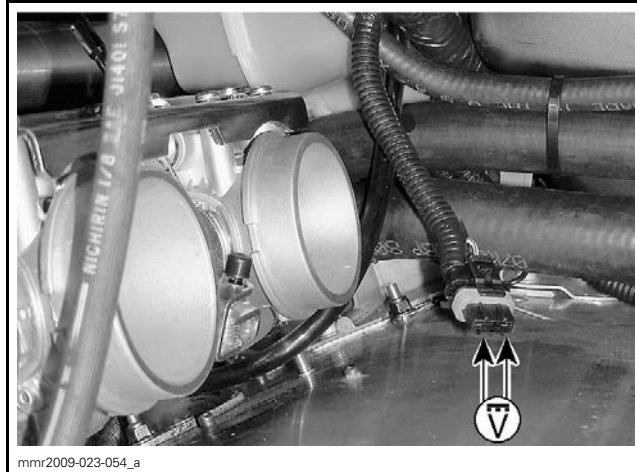

8. Read the MAX value.

NOTE: Reset multimeter by pressing and holding **MIN MAX** button until meter beeps.


If voltage is good, carry out the *TPS SIGNAL WIRE TEST*.

TPS Signal Wire Test

Disconnect J1A connector from ECM, refer to *CONNECTOR INFORMATION* subsection.

Check the wiring continuity as follows.

TPS HARNESS CONNECTOR	ECM J1A CONNECTOR	RESISTANCE
Pin 3	Pin 1	Close to 0 Ω (continuity)

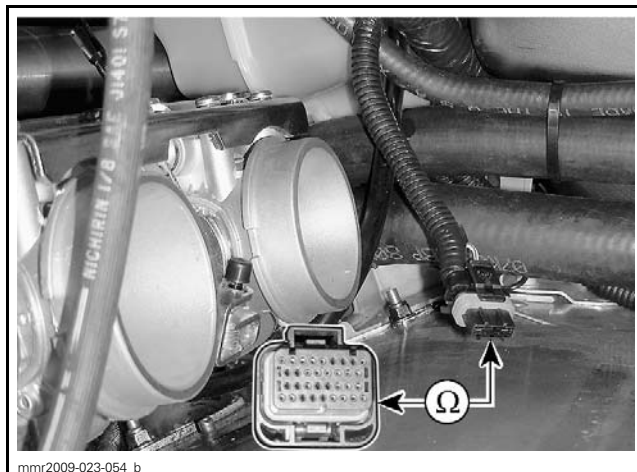

If tests are good, replace the TPS.
 If tests are not good, continue to check the resistance of the remainder of the TPS circuit.

TPS Resistance Test

1. Reconnect the TPS.
2. Disconnect connector J1A from the ECM.
3. Using the FLUKE 115 MULTIMETER (P/N 529 035 868), check resistive value as per following table.

ECM CONNECTOR		THROTTLE IDLE POSITION	WIDE OPEN THROTTLE POSITION
PIN		RESISTANCE Ω	
J1A-1	J1A-26	1000	2500
J1A-26	J1A-10	1600 - 2400	1600 - 2400
J1A-1	J1A-10	2500	1000




NOTE: The resistive value should change smoothly and proportionally to the throttle movement. Otherwise, replace TPS.

If resistive values are correct, try a new ECM. Refer to *ENGINE CONTROL MODULE (ECM)* elsewhere in this subsection.

- If resistive values are incorrect:
- Repair/replace wiring/connectors.
 - Replace TPS.


TPS Replacement

1. Remove the throttle body, refer to *THROTTLE BODY REMOVAL* in this subsection.
2. Remove TPS retaining screws.

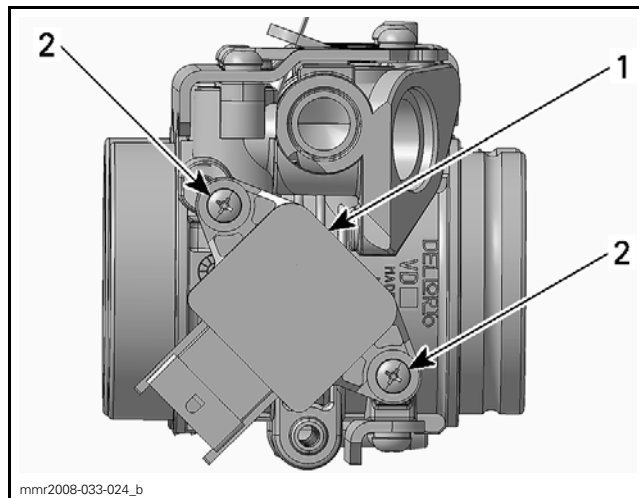

1. Throttle position sensor (TPS)
2. Screws


3. Remove TPS.
4. Ensure O-ring is still positioned on TPS after removal.

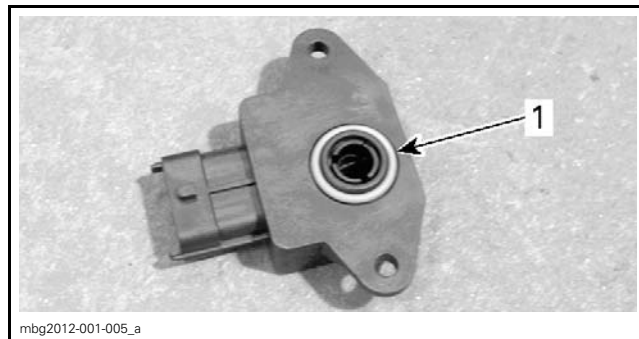

1. TPS O-ring

NOTE: If O-ring is missing, remove it from throttle body shaft.

5. Install new TPS.

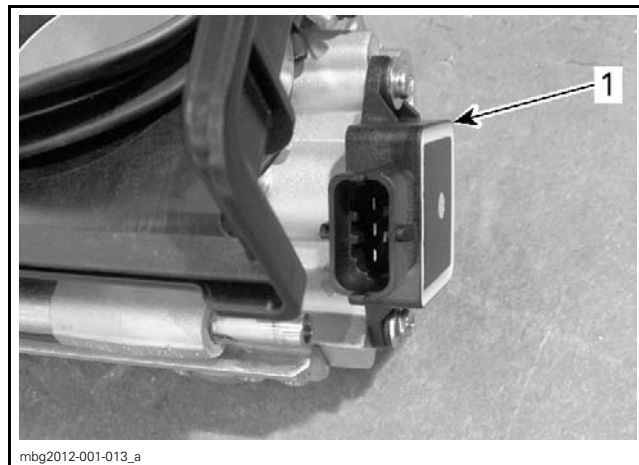

1. New TPS

6. Tighten TPS retaining screws to specification.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

TIGHTENING TORQUE

TPS retaining screws	2.0 N•m ± 0.4 N•m (18 lbf•in ± 4 lbf•in)
----------------------	---

- Open and quickly release throttle plates 6 times (throttle plates must snap shut).



mbg2012-001-014


TYPICAL - PUSH TO OPEN THROTTLE PLATES

- Reinstall remaining removed parts.
- Reset TPS, refer to *CLOSED THROTTLE RESET (TPS)* in this subsection.

CPS (CRANKSHAFT POSITION SENSOR)

CPS Test with B.U.D.S.

- Connect vehicle to the latest applicable B.U.D.S. version.
- In B.U.D.S., select the **Monitoring** and **ECM** tabs.
- Monitor the **Engine Speed (RPM)** indicator while cranking engine.

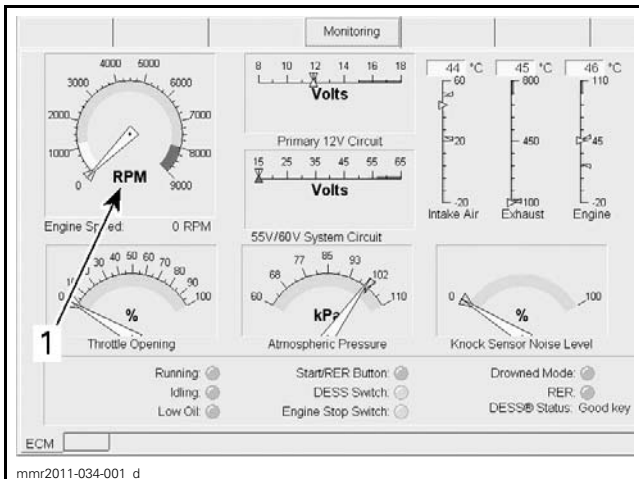

mnr2011-034-001_d


1. B.U.D.S. RPM indicator

The needle should move proportionally to the cranking RPM. If no needle movement is observed, carry out the *CPS OUTPUT VOLTAGE TEST*.

NOTE: A loose CPS or CPS connector can send an intermittent signal that can prevent the engine from starting.


CPS Output Voltage Test

- Remove upper body module. Refer to *BODY* subsection.
- Remove muffler. Refer to *EXHAUST SYSTEM* subsection.
- Detach coolant tank from its support.

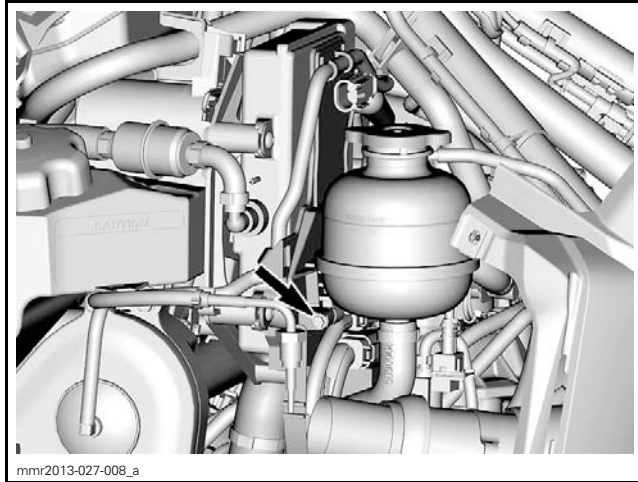

mnr2013-027-008_a


- Disconnect CPS connector (2-pin connector).

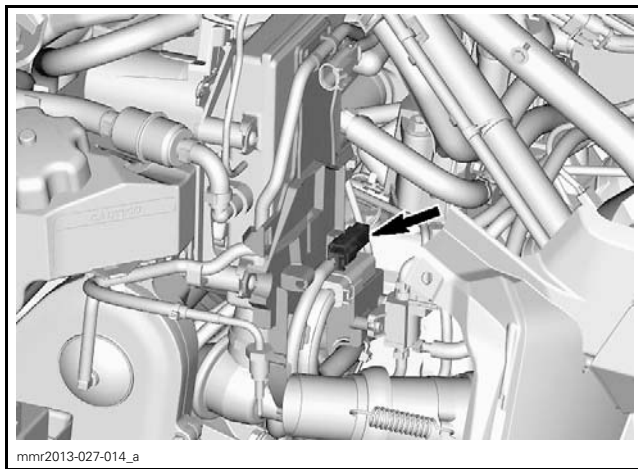

mnr2013-027-014_a

- Probe terminals coming from CPS while cranking engine.

CPS CONNECTOR		VOLTAGE
Pin 1	Pin 2	1 - 2 Vac min.

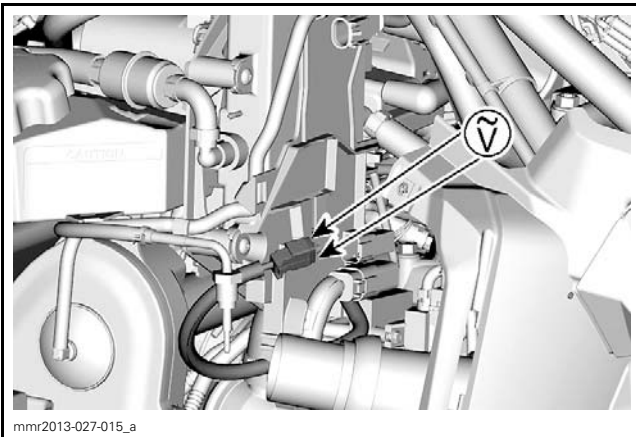

If voltage is out of specification, inspect wiring/connectors. Replace CPS if wiring is good.

CPS Resistance Test

1. Disconnect connector J1A from ECM.
2. Measure the resistance of the sensor through its wiring.

ECM J1A CONNECTOR		RESISTANCE @ 20°C (68°F)
Pin 6	Pin 7	190 - 290 Ω




TYPICAL

If measurement is out of specification, check wiring continuity between ECM and CPS.

3. Also check for a shorted connection to ground as per table.

ECM J1A CONNECTOR		RESISTANCE @ 20°C (68°F)
Pin 6	Engine ground	Open circuit (OL)
Pin 7	Engine ground	

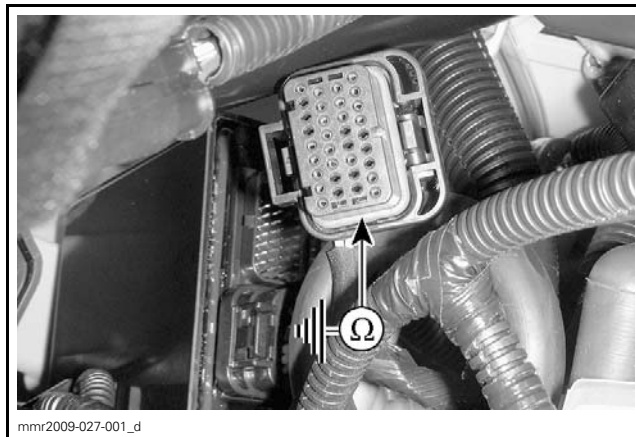

TYPICAL


If the previous tests were good, replace CPS.

CPS Replacement

Refer to *MAGNETO SYSTEM* subsection.

ATS (AIR TEMPERATURE SENSOR)

ATS Location

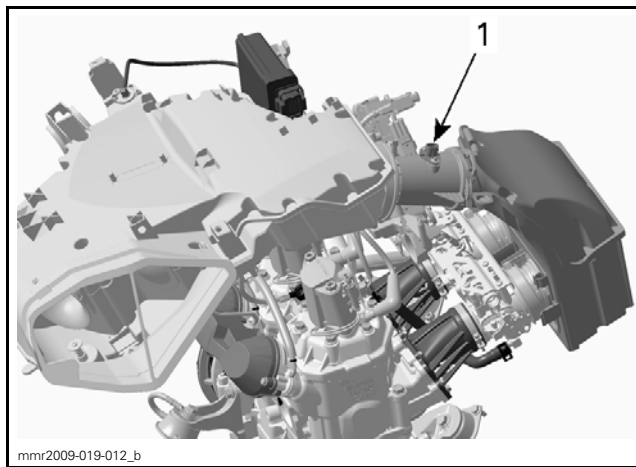

TYPICAL - ATS SENSOR

1. Air temperature sensor (ATS)

ATS Access


Remove drive belt guard. Refer to *DRIVE BELT* subsection.

Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.

Subsection XX (E-TEC DIRECT FUEL INJECTION)


ATS Test with B.U.D.S.

1. Connect vehicle to latest applicable B.U.D.S. version.
2. Select the **Monitoring** and **ECM** tabs.
3. Monitor the **Intake Air** temperature indicator. It should indicate ambient temperature. Otherwise, perform the *ATS RESISTANCE TEST*.

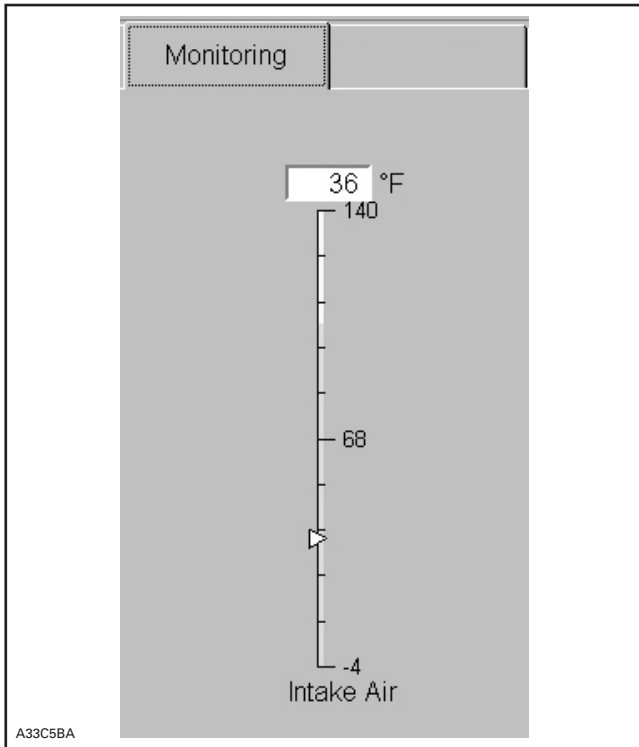

ATS Connector Access

1. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
2. Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.
3. Rotate intake adapter to disconnect ATS sensor connector.

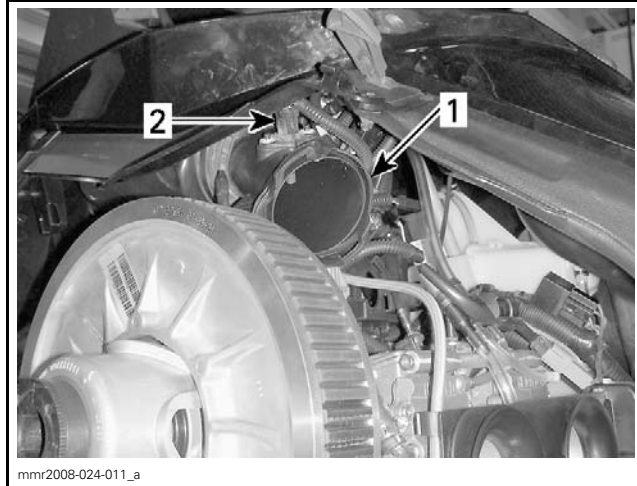


TYPICAL

1. Rotate intake adapter
2. Disconnect sensor connector

ATS Resistance Test

1. Remove parts required for access to ATS connector, refer to *ATS CONNECTOR ACCESS* in this subsection.
2. Measure sensor resistance.

ATS		MEASUREMENT
Pin 1	Pin 2	Refer to <i>SENSOR TEMPERATURE TABLE</i>

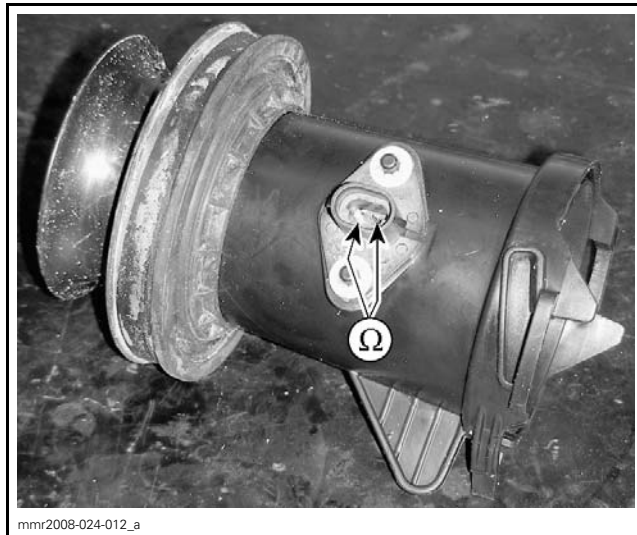

INTAKE ADAPTER REMOVED FOR CLARITY PURPOSE ONLY

SENSOR TEMPERATURE TABLE		
TEMPERATURE		RESISTANCE (OHMS)
°C	°F	ATS
- 40	- 40	43610
- 30	- 22	25090

SENSOR TEMPERATURE TABLE		
TEMPERATURE		RESISTANCE (OHMS)
°C	°F	ATS
- 20	- 4	14900
- 10	14	9102
0	32	5705
10	50	3680
20	68	2436
25	77	2000
30	86	1651
40	104	1144
50	122	808
60	140	580
70	158	424
80	176	316
90	194	238
100	212	182
110	230	141
120	248	111
130	266	88
140	284	70
150	302	57
160	320	47
170	338	39
180	356	32
190	374	27
200	392	23

If resistance is out of specifications, replace sensor.

If resistance tests good, carry out the following steps.

3. Reconnect the ATS connector.
4. Disconnect the J1A connector from ECM.
5. Using the FLUKE 115 MULTIMETER (P/N 529 035 868), measure sensor circuit resistance value as follows.

IMPORTANT: Move wiring harness back and forth near the sensor connector while measuring the resistance. If the resistance value varies as the harness is moved, check sensor connections.

J1A CONNECTOR		MEASUREMENT
Pin J1A-20	Pin J1A-27	Refer to <i>SENSOR TEMPERATURE TABLE</i>



If resistance value is incorrect, repair the connectors or replace the wiring harness between ECM connector and the ATS.

6. Reinstall removed parts. Ensure intake adapter boot is properly installed on the adapter. See below in *ATS REPLACEMENT*.

ATS Replacement

1. Remove parts required for access to ATS, refer to *ATS ACCESS* in this subsection.
2. Loosen clamp retaining adapter boot seal.



1. Boot clamp

3. Disconnect ATS connector.
4. Pull out intake adapter.
5. Remove sensor push nuts.

Subsection XX (E-TEC DIRECT FUEL INJECTION)



ATS SENSOR PUSH NUTS

6. Pull out sensor.
7. Using new push nuts, secure the new sensor to the adapter.
8. Reconnect ATS.
9. Ensure adapter boot is properly installed as shown.



CORRECT BOOT INSTALLATION


10. Reinstall removed parts.

CTS (COOLANT TEMPERATURE SENSOR)

CTS Test with B.U.D.S.


1. Connect vehicle to latest applicable B.U.D.S. version.
2. Select the **Monitoring** and **ECM** tabs.

3. Monitor the **Engine** temperature indicator. It should show the coolant temperature. Otherwise, perform the following *CTS RESISTANCE TEST*.

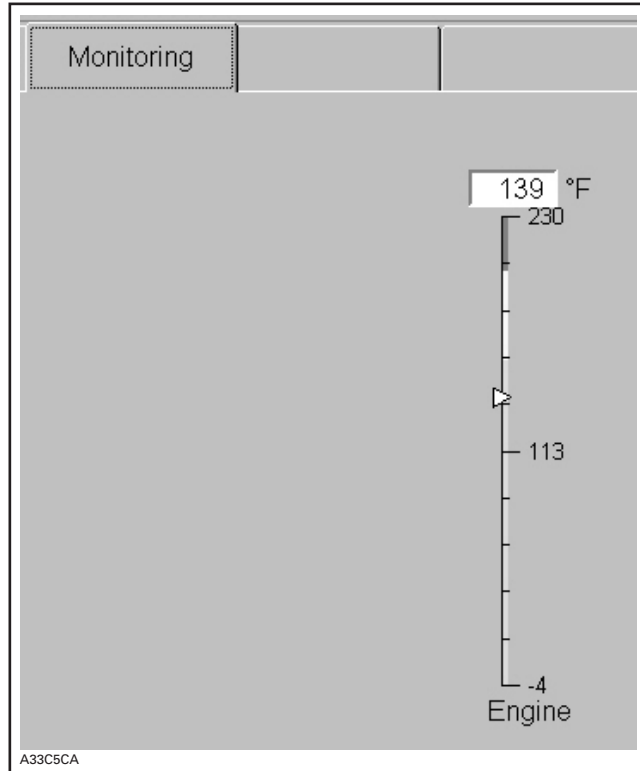

CTS Connector Access

Remove primary air intake silencer. Refer to *A/R INTAKE SYSTEM* subsection.

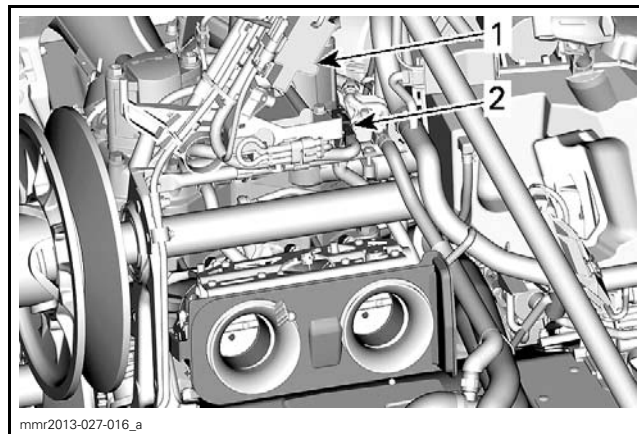

CTS CONNECTOR LOCATION


1. PTO ignition coil
2. CTS connector

CTS Resistance Test

1. Disconnect CTS sensor connector, refer to *CTS CONNECTOR ACCESS*.

2. Use the FLUKE 115 MULTIMETER (P/N 529 035 868) and set it to Ω .
3. Measure resistance between sensor terminals.

CTS		MEASUREMENT
Pin 1	Pin 2	Refer to <i>CTS SENSOR TEMPERATURE TABLE (E-TEC)</i>
Pin 1 or 2	Engine ground	Open circuit (OL)

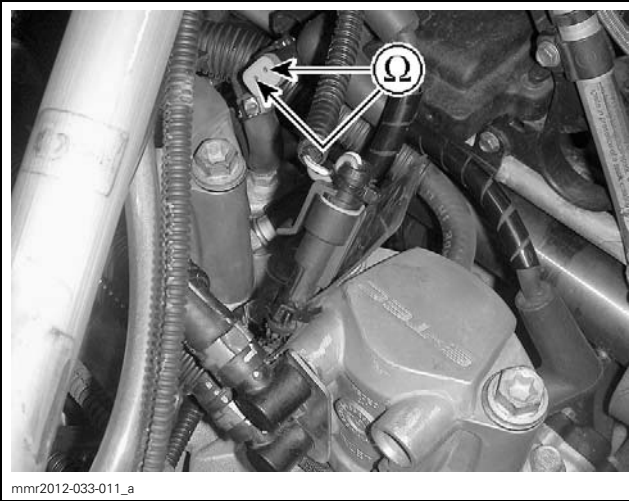

mnr2012-033-011_a

CTS RESISTANCE CHECK

CTS SENSOR TEMPERATURE TABLE (E-TEC)		
TEMPERATURE		RESISTANCE (OHMS)
°C	°F	ATS
- 40	- 40	72412
- 30	- 22	38681
- 20	- 4	21529
- 10	14	12431
0	32	7418
10	50	4582
20	68	2919
30	86	1912
40	104	1284
50	122	883
60	140	622
70	158	448
80	176	328
90	194	245
100	212	186


mnr2013-027

CTS SENSOR TEMPERATURE TABLE (E-TEC)		
TEMPERATURE		RESISTANCE (OHMS)
°C	°F	ATS
110	230	143
120	248	112
130	266	88
135	275	79
140	284	71
145	293	64
150	302	57

If resistance is out of specifications, replace CTS. If resistance tests good, carry out the following steps.

4. Reconnect the CTS.
5. Disconnect the J1A connector from ECM.
6. Measure CTS circuit resistance as follows.

J1A CONNECTOR		MEASUREMENT
Pin 19	Pin 27	Refer to <i>CTS SENSOR TEMPERATURE TABLE (E-TEC)</i>

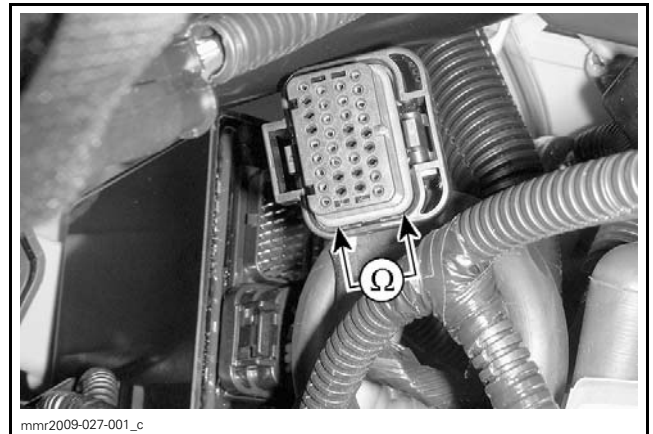

mnr2009-027-001_c

TYPICAL

If resistance value is correct, sensor and wiring/connectors are good.

If resistance value is incorrect, repair/replace wiring/connectors between ECM and CTS.

CTS Replacement

1. Remove parts required to access CTS, refer to *CTS ACCESS* in this subsection.
2. Lift rear of vehicle to minimize coolant spillage.
3. Disconnect CTS connector.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

4. Remove CTS.




1. CTS connector
2. CTS

5. Install new CTS and torque to 12 N•m (106 lbf•in).
6. Reinstall removed parts.
7. Refill engine coolant. If an important quantity of coolant spilled from the engine, bleed cooling system. Refer to *COOLING SYSTEM* subsection.

APS (AIR PRESSURE SENSOR)

APS Location

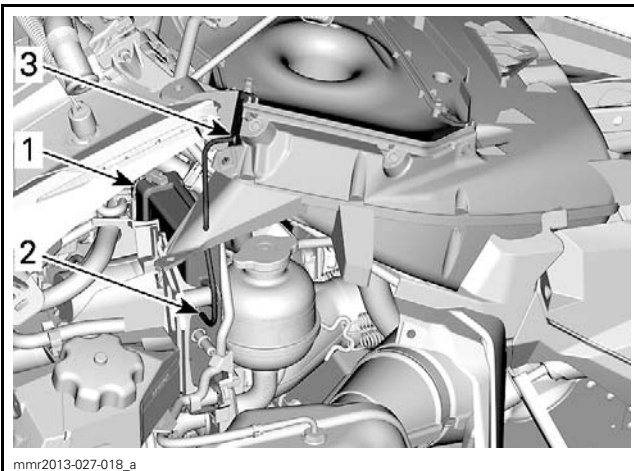


1. ECM
2. APS (inside ECM)
3. APS tube to secondary air intake silencer

APS Inspection

1. Open RH side panel. Refer to *BODY* subsection.
2. Ensure sensor hose is correctly connected on secondary air intake silencer and on ECM.

3. Check inside hose for cleanliness, water, or ice. Ensure it is not bent, kinked or burnt.
4. Connect to latest applicable B.U.D.S. version. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
5. Select the **Monitoring** and **ECM** tabs.
6. In B.U.D.S., monitor the **Atmospheric Pressure** indicator. The gauge should read the local atmospheric pressure of the day.

NOTE: At sea level, the atmospheric pressure gauge should read around 101.3 kPa (14.7 PSI) and less as altitude increases.

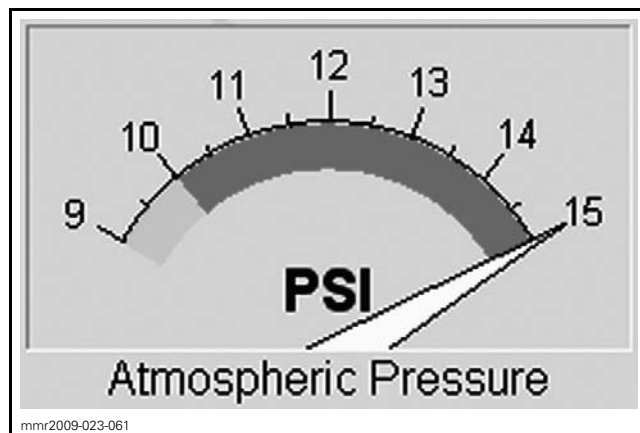


ATMOSPHERIC PRESSURE


Otherwise, replace ECM.

THCM (THERMOCOUPLE MODULE)

800R E-TEC

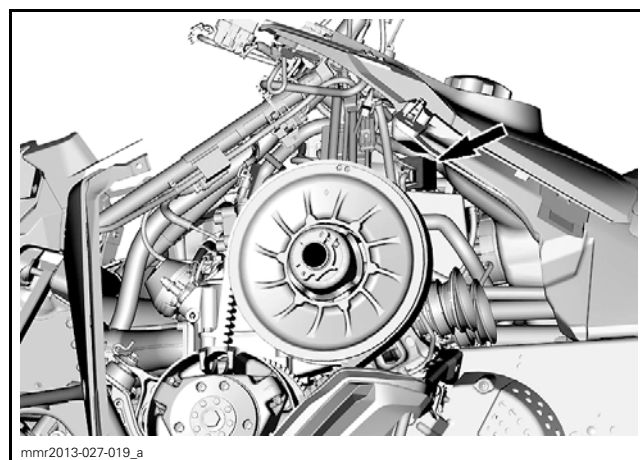


THCM MODULE

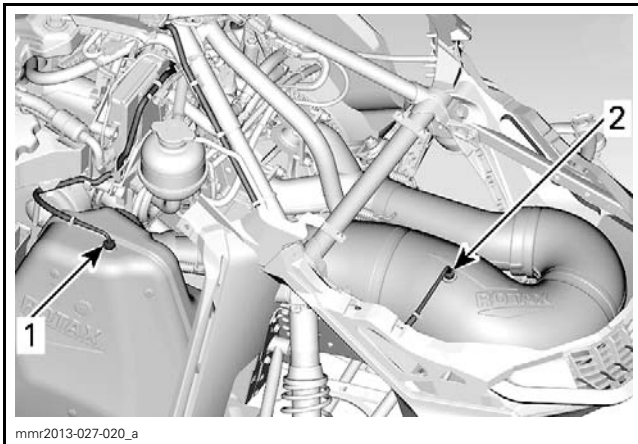

1. Thermocouple on muffler
2. Thermocouple on tuned pipe (Summit X/SP and Renegade Backcountry X)

THCM Test with B.U.D.S.

1. Connect vehicle to latest applicable B.U.D.S. version.
2. Select the **Monitoring** tab then **THCM**.
3. In B.U.D.S., monitor the **Exhaust (Muffler)** and **Tuned Pipe** temperature indicators (as applicable).

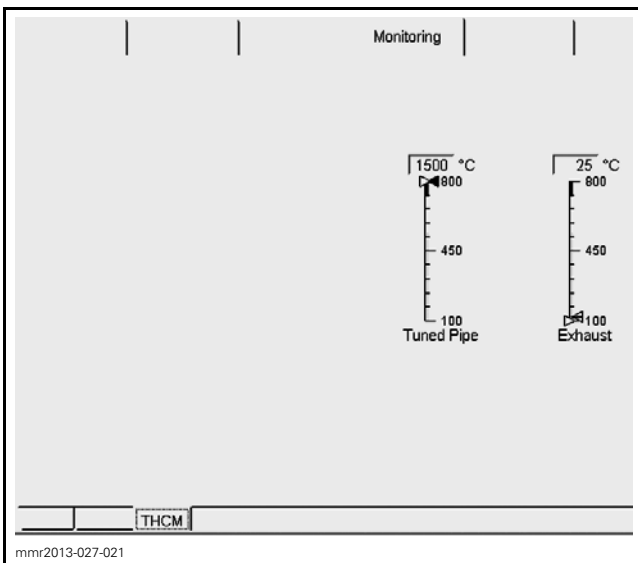


If sensor temperature continuously read(s), 1 500°C (2,732°F) then the sensor is defective (open circuit). Replace THCM.


If sensor temperature is(are) read, THCM operates normally.

If sensor temperature is(are) not read, carry out the following steps.

4. In B.U.D.S., select the **Setting** and **ECM** tabs.

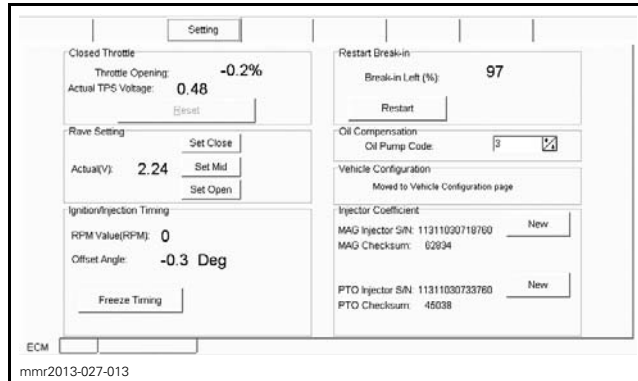

5. Ensure the **With Tuned Pipe Sensor** selection box is checked in the **Vehicle Configuration** area (on Summit X/SP and Renegade Backcountry X). Otherwise, the THCM will not be monitored by the ECM.

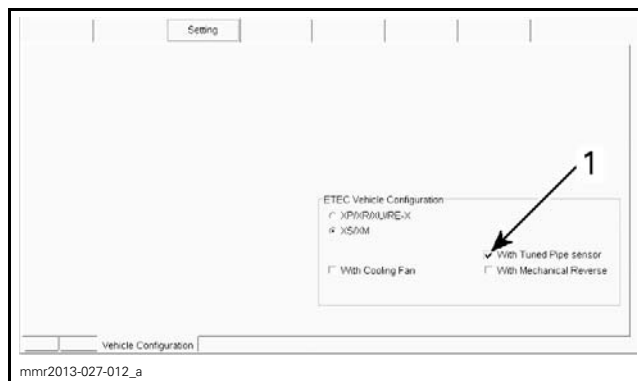

ECM SETTING PAGE IN B.U.D.S.

1. **With Tuned Pipe Sensor** selection box

6. Check for an applicable fault code (P0428, P1427, P1428).


If configuration is Ok, carry out service action as suggested by fault code.

If the THCM or thermocouple requires replacement, refer to *EXHAUST SYSTEM* subsection.

EXHAUST GAS TEMPERATURE SENSOR (EGTS)


EGTS Location

600 HO E-TEC

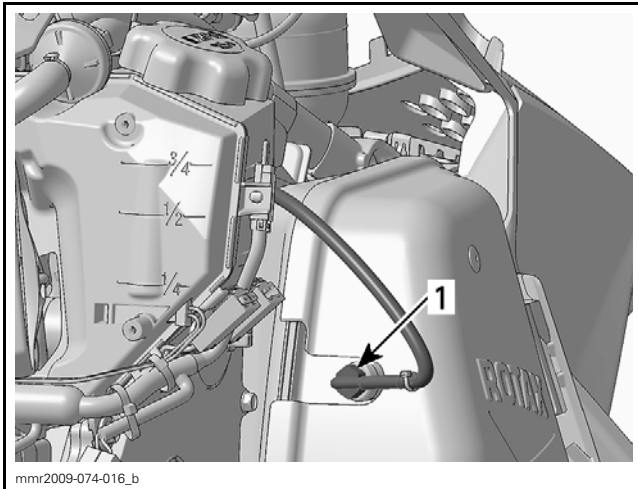

1. EGTS


EGTS		MEASUREMENT
Pin 1	Pin 2	Refer to <i>EGTS SENSOR TEMPERATURE TABLE</i>

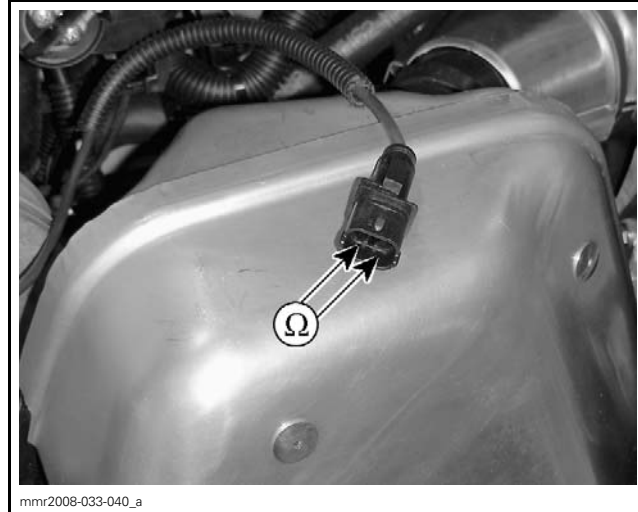

TYPICAL

EGTS Test with B.U.D.S.

In B.U.D.S., select the **Monitoring** and **ECM** tabs. Monitor the **Exhaust** temperature indicator. It should show the exhaust temperature, otherwise carry out the *EGTS RESISTANCE TEST*.

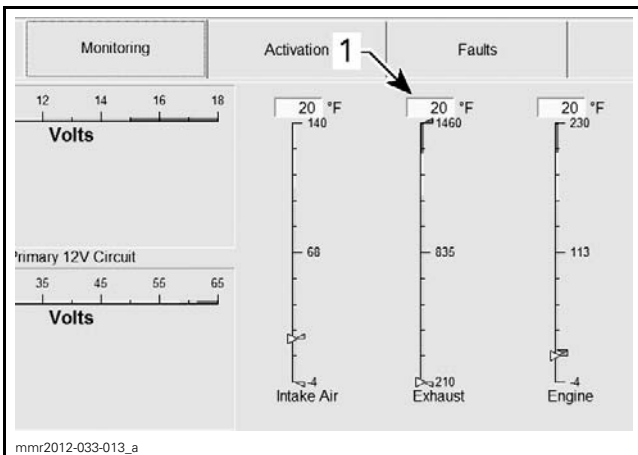

1. Muffler Exhaust temperature indicator

NOTE: If engine runs with the EGTS connected but not installed in the muffler, the reading will be 710°C (1,310°F) steady.

EGTS Resistance Test

1. Remove RH side panel. Refer to *BODY*.
2. Disconnect EGTS connector.
3. Measure sensor resistance as follows.

EGTS SENSOR TEMPERATURE TABLE		
TEMPERATURE		RESISTANCE (OHMS)
°C	°F	ATS
- 40	- 40	170
- 20	- 4	185
0	32	201
25	77	220
50	122	239
100	212	276
150	302	313
200	392	349
250	482	385
300	572	420
350	662	454
400	752	488
450	842	521
500	932	554
600	1112	618
700	1292	679
800	1472	738
900	1652	795
1000	1832	849

If resistance is out of specification, replace the sensor.

If resistance is as per specification, carry out the following steps.

4. Reconnect the EGTS.
5. Disconnect the J1A connector from ECM.
6. Measure resistance as follows.

J1A CONNECTOR		MEASUREMENT
Pin 12	Pin 27	Refer to <i>EGTS SENSOR TEMPERATURE TABLE</i>



TYPICAL

If resistive value is correct, try a new ECM. Refer to *ENGINE CONTROL MODULE (ECM)* in this subsection.

If resistive value is incorrect, repair the connector or replace the wiring harness between ECM connector and the EGTS.


EGTS Replacement

Refer to *EXHAUST SYSTEM* subsection.

KNOCK SENSOR (KS)

Knock Sensor Location

The knock sensor is located on top of the cylinder head, between the fuel injectors.

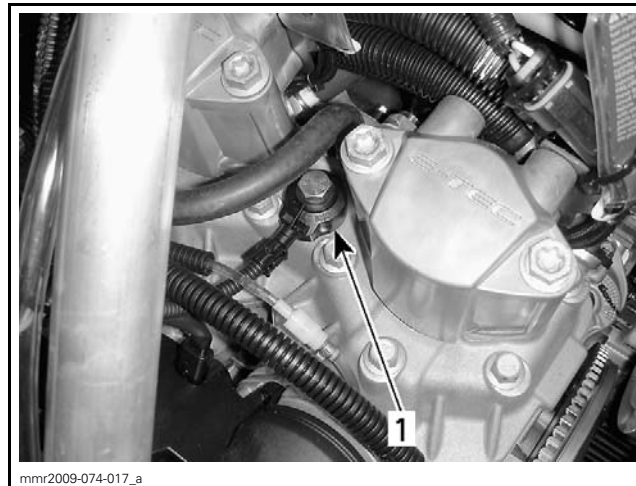


mnr2009-074-017_a

TYPICAL

1. Knock sensor

KS Test with B.U.D.S.

1. Lift rear of vehicle off the ground and support it with a wide-base mechanical stand.
2. Use the latest applicable B.U.D.S. version.
3. Monitor the knock sensor using the **Knock Sensor Signal** indication in the **ECM Monitoring** page of B.U.D.S.

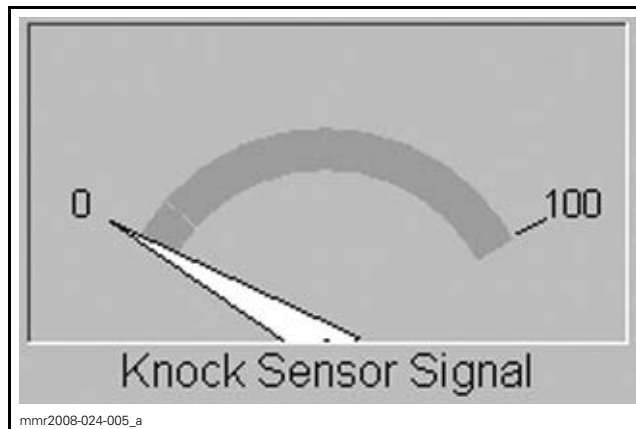


mnr2008-024-005_a

MONITORING TAB

4. Start the engine.
5. Bring engine speed above 5200 RPM and vary engine RPM above 5200 RPM.

The needle of the **Knock Sensor Signal** gauge should move between 0 and 100. The needle movement pattern is of no importance as long as it moves indicating the knock sensor senses the engine vibrations.

Subsection XX (E-TEC DIRECT FUEL INJECTION)

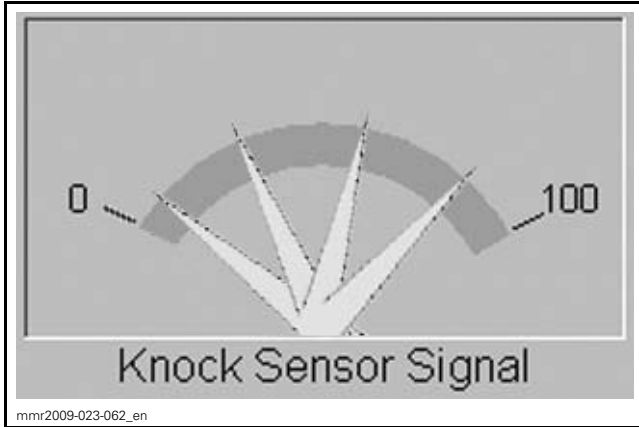

If the needle moves as described, the knock sensor should be good.

If the needle sticks either at 0 or 100, there is a problem.

NOTE: Ensure ignition coil cables are not close to knock sensor harness. If so, this might generate a false fault code.

Carry out the *KS CIRCUIT CONTINUITY TEST*.

KS Circuit Continuity Test

1. Ensure sensor and cylinder head contact surfaces are clean and mounting bolt and washer are correct and properly torqued down.
2. Disconnect knock sensor connector (DT). Refer to *KNOCK SENSOR REPLACEMENT*.
3. Disconnect J1A connector from ECM.
4. Check wire continuity of circuit as per following table.

J1A CONNECTOR	KS CONNECTOR	MEASUREMENT
J1A-34	Pin 1	Close to 0 Ω (continuity)
J1A-33	Pin 2	




If test is not good, repair/replace wiring/connectors between ECM and knock sensor.

If test is good, try a new knock sensor.

KS Replacement

1. Unscrew and remove knock sensor from cylinder head.
2. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
3. Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.
4. Disconnect knock sensor connector located near ATS.

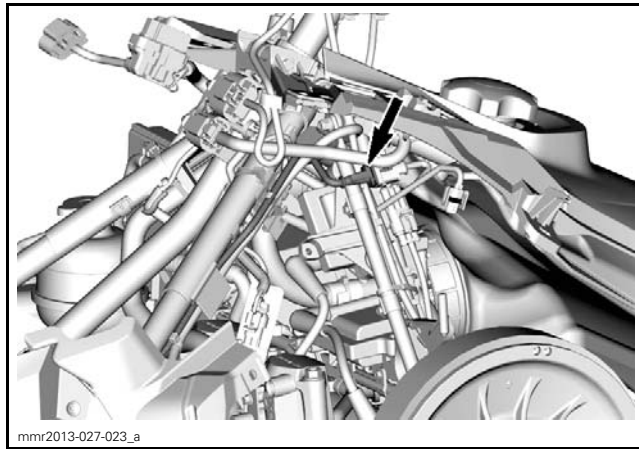

5. Clean contact surfaces on cylinder head, then install the new knock sensor.
6. Torque knock sensor screw to 29 N•m (21 lbf•ft).


NOTICE Improper torque may prevent sensor from functioning properly possibly leading to severe internal engine component damage.

7. Reconnect connector.
8. Reinstall remaining parts.

POWER DISTRIBUTION

GENERAL

OVERVIEW

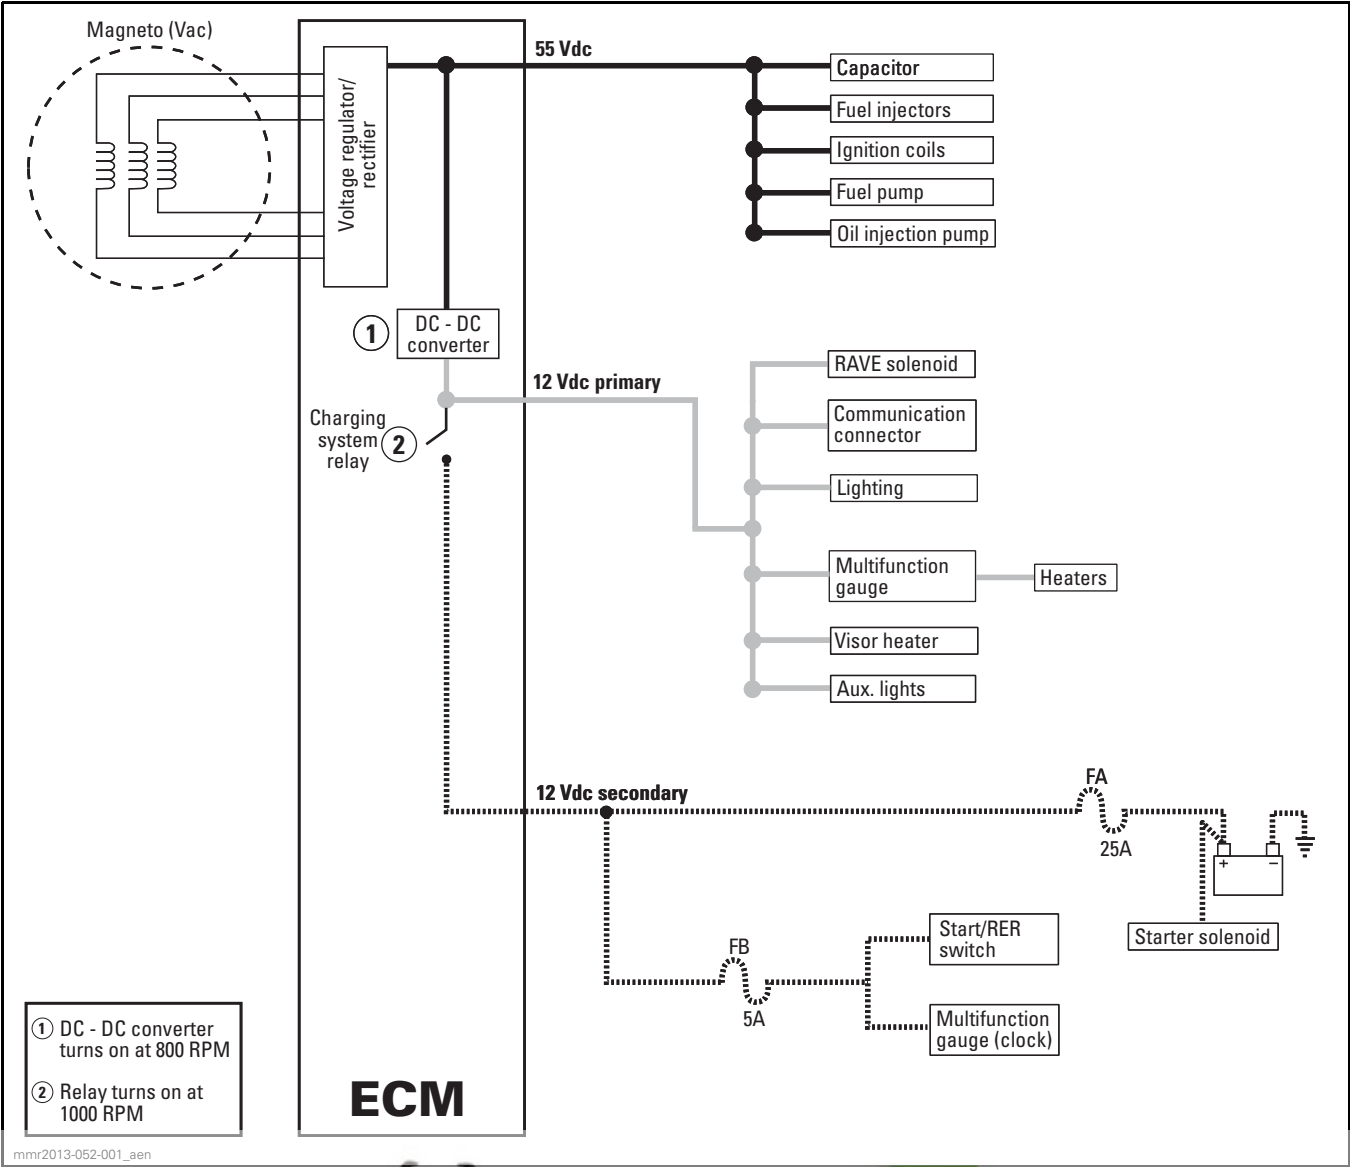


600 HO E-TEC SIMPLIFIED SCHEMATIC



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

Subsection XX (POWER DISTRIBUTION)

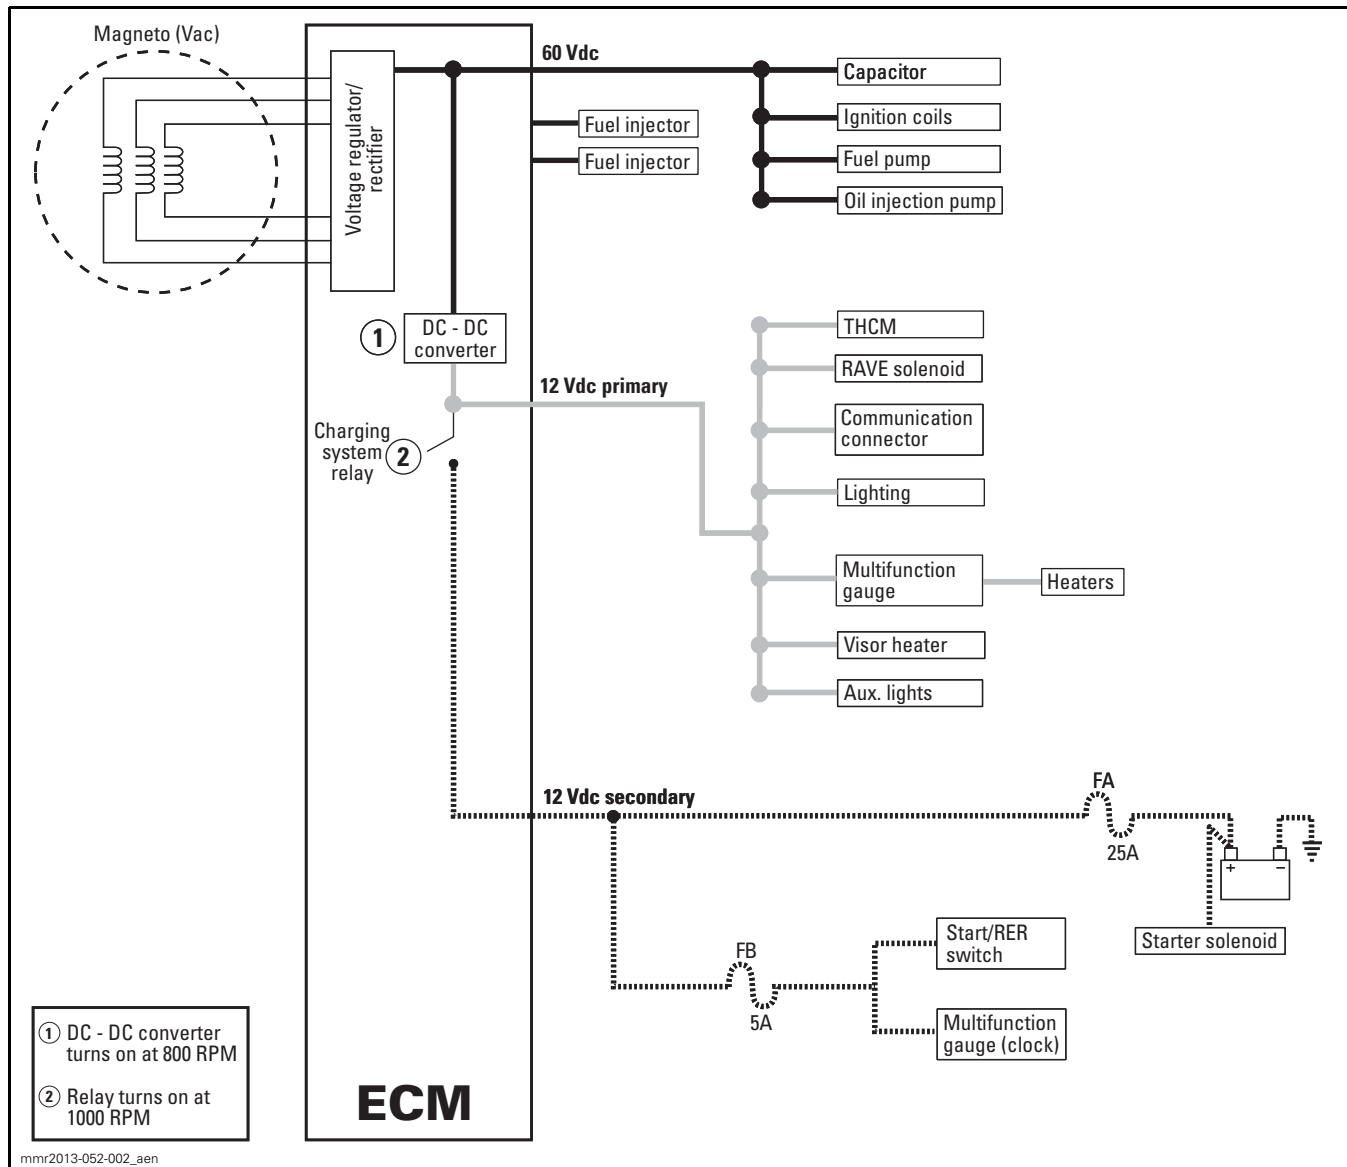

800R E-TEC SIMPLIFIED SCHEMATIC

THCM	Thermocouple module

The magneto stator is wired with 3 independent windings that works in phase. Each winding is separately wound, they are not connected, so 6 wires go to the ECM.

The vehicle requires the highest possible voltage at low RPM (to quickly supply the fuel pump, injectors and ignition coils) and the highest possible current at higher RPM (to properly supply the engine electrical loads that increase with RPM and all the other components like RAVE valves, gauge, lights and heaters). To achieve this, the stator windings are connected in series at low RPM to meet the voltage requirements and then

connected in parallel at higher RPM to meet the current requirements. This series-parallel switch is done in the ECM.

The series to parallel switching occurs at approximately 1500 RPM.

At high RPM if the magneto power is greater than the loads, the ECM will shunt the stator windings to regulate its power as necessary.

The voltage regulator/rectifier is part of the ECM. The ECM receives the energy produced by the magneto, rectifies the alternating current (AC) to direct current (DC) and regulates the voltage as per the following chart.

MODEL	VOLTAGE
600 HO E-TEC	55 Vdc
800R E-TEC	60 Vdc

SYSTEM VOLTAGE (55/60 VDC)

Since the available power is low when cranking, the ECM first supplies 55/60 Vdc to the components that mandatory need voltage for the starting and the basic operation of the engine:

- ECM (internally powered to a lower voltage)
- Fuel pump
- Fuel injectors
- Ignition coils
- Electronic oil injection pump.

A large capacitor is used to stabilize the 55/60 Vdc system to provide a constant power to the injectors.

The capacitor is attached to the oil tank.

SYSTEM VOLTAGE (12 VDC)

A DC-DC converter, in the ECM, steps down the 55/60 DC voltage to 12 Vdc when the engine reaches 800 RPM.

The 12 Vdc voltage is then divided in a primary and a secondary system.

Below 2000 RPM, the total available current is limited to reduce the load on the system voltage. Above 2000 RPM, the 12 Vdc system have a maximum of 25 A available. In all running conditions, the system voltage must be kept at 55/60 Vdc.

Primary Voltage (12 Vdc)

Since the available power is not at its maximum at the early stage of engine starting, the ECM supplies 12 Vdc to the components that are critical for the engine and vehicle when engine reaches 800 RPM.

- THCM (thermocouple module) on some models
- RAVE solenoid
- Communication connector
- Lighting system
- Multifunction gauge
- Heaters
- Heated visor
- Auxiliary lights
- 12 V power outlet
- Other accessories


Secondary Voltage (12 Vdc)

On electric start models, when the engine speed reaches 1000 RPM, the charging system relay closes and battery charging can take place.

POWER DISTRIBUTION SUMMARY


ENGINE OPERATION	VOLTAGE DELIVERED	COMPONENT SUPPLIED
Any engine speed	55/60 Vdc	<ul style="list-style-type: none"> - ECM (internally powered) - Fuel pump - Fuel injectors - Ignition coils - Electronic oil injection pump
When engine reaches 800 RPM	12 Vdc	<ul style="list-style-type: none"> - THCM (thermocouple module) on some models - RAVE solenoid - Communication connector - Lighting system - Multifunction gauge - Heaters - Heated visor - Auxiliary lights - 12 V power outlet - Other accessories
When engine reaches 1000 RPM	12 Vdc	<ul style="list-style-type: none"> - Battery charging on electric start models

GROUNDS

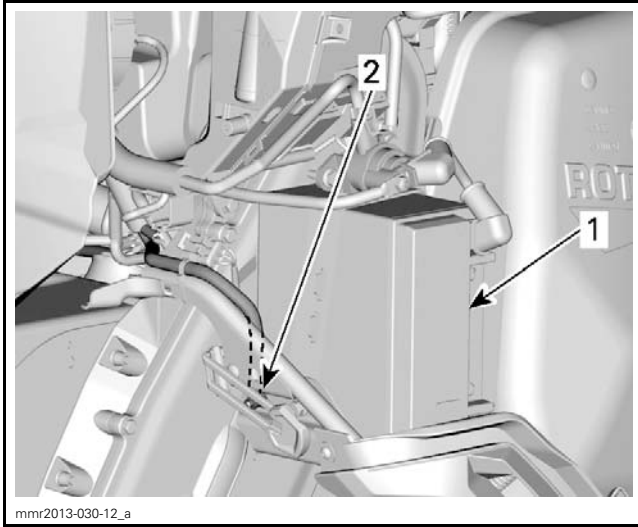


RH SIDE, VIEWED FROM REAR

1. Battery
2. Main harness ground

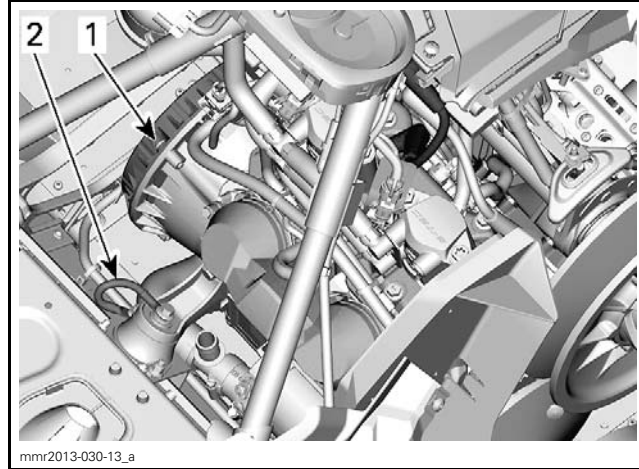

LH SIDE, VIEWED FROM FRONT

1. Rewind starter
2. Engine ground

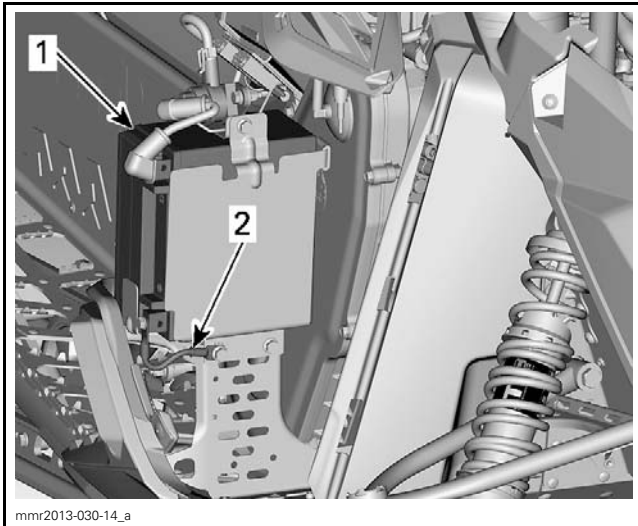

RH SIDE, VIEWED FROM FRONT

1. Battery
2. Battery ground

IGNITION SYSTEM

SERVICE TOOLS

Description	Part Number	Page
12 V BATTERY SUPPLY CABLE	529 035 997	16
DIAL INDICATOR ADAPTER	529 036 132	5
FLUKE 115 MULTIMETER	529 035 868	11, 13
IGNITION TIMING TOOL.....	529 036 129	4
POWER INTERFACE	515 177 223	10
TDC DIAL INDICATOR	295 000 143	5
TDC DIAL INDICATOR	414 104 700	5

GENERAL

⚠ WARNING


Always electrically disconnect both fuel injectors prior to testing for ignition spark. Otherwise, fuel vapors may ignite in presence of a spark creating a fire hazard.

SYSTEM DESCRIPTION

This ignition system is an inductive type specifically designed for the E-TEC engine with a rapid rise time to prevent spark plug fouling. It provides a quick spark similar to a CDI system but with a longer duration.

The ignition system is fully managed by the ECM which controls the ignition system parameters such as spark timing, dwell time, and firing order.

The system uses two separate ignition coils which induce voltage to a high level in their secondary winding to produce a spark at each spark plug independently.

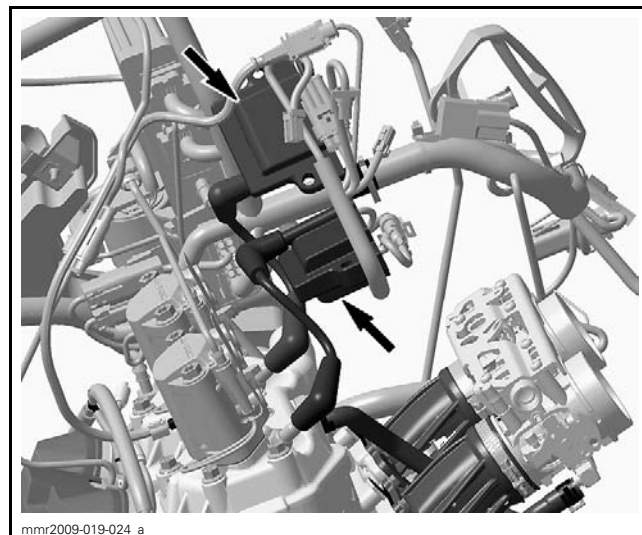

TYPICAL — IGNITION COILS

The ignition coils receive power from the 55/60 Vdc system. Their operating voltage varies from 20 to 55/60 Vdc.

Ignition System Basic Operation

A 3-wire connector is connected to the primary winding of each coil.

The ignition coils are powered by the 55/60 Vdc system voltage through pin 3. Pin 1 is connected to a ground circuit.

Each ignition coil uses an active circuitry to energize the primary winding when it receive a pulse from the ECM via pin 2. The dwell time has an amplitude of approximately 10 volts. At the end of the dwell time, the power is released from the primary winding which induces a current that produces a high voltage in the secondary winding. This high voltage is then fed to the spark plug.

A resistive core spark plug cable is used to prevent the RFI (Radio Frequency Interference). There is no resistor in the spark plug cap.


Spark Plugs

800R E-TEC

The OEM spark plug used is specially indexed for optimum engine operation and efficiency.

The threads on the spark plug and in the cylinder head are indexed so that when the plug is installed, the open end of the negative electrode will be facing the injection spray, within $\pm 90^\circ$. This ensures the negative electrode does not deviate the injection spray and ensures proper ignition.


Subsection XX (IGNITION SYSTEM)

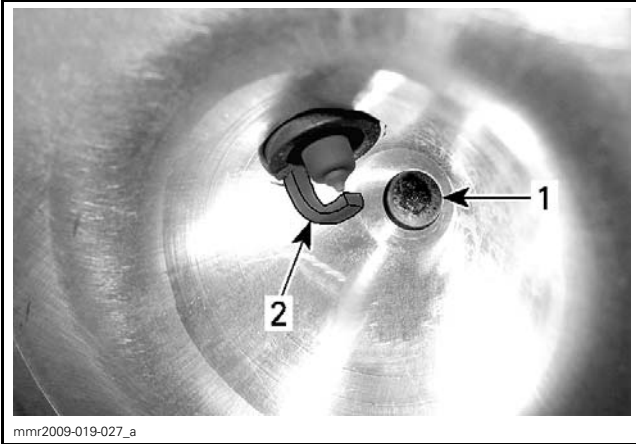

CORRECTLY INDEXED

1. Injector nozzle
2. Ground electrode

NOTE: Using an incorrectly indexed spark plug will result in poor idle and increased emissions.

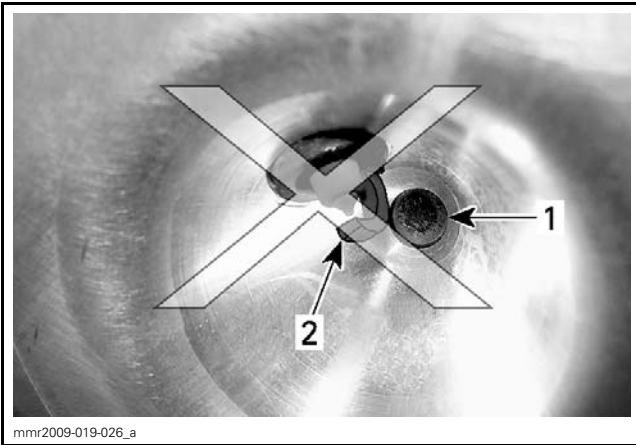

INCORRECTLY INDEXED

1. Injector nozzle
2. Ground electrode

If using a non OEM spark plug, a specific installation procedure must be followed. Refer to *PERIODIC MAINTENANCE PROCEDURE* subsection.

Ignition Timing


The crankshaft position sensor (CPS), the air pressure sensor (APS) and the throttle position sensor (TPS) are the primary sensors used to control the ignition timing.

The ECM is programmed with data (ignition mappings). Using engine operating parameters provided by the sensors, the ECM controls the ignition timing for optimum engine operation under all operating conditions.

Ignition timing can be adjusted using B.U.D.S.

Knock Detection

A knock sensor is mounted on top of the cylinder head. It detects specific vibration that would be typically generated by engine detonation.

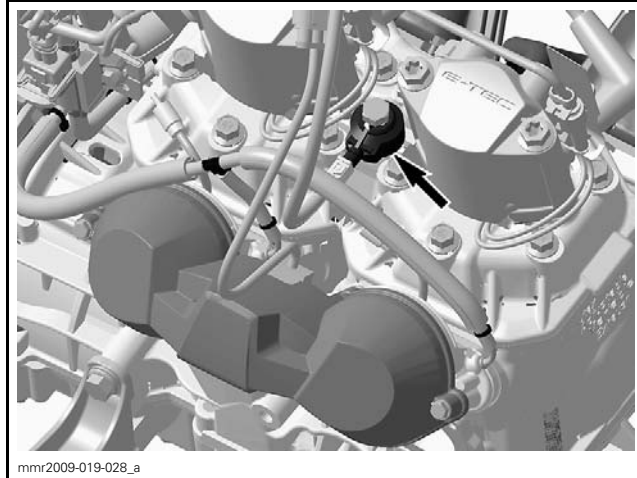

TYPICAL

If detonation occurs, the ECMs retards the ignition and increases the fuel injected temporarily (it goes into a specific operating mode) until detonation stops.

ADJUSTMENT

UNDERSTANDING THE TDC GAUGE

Dial gauges can be either in imperial or metric units. It is crucial to identify gauge units and graduation.


Imperial Dial Gauge



IMPERIAL GAUGE EXAMPLE
 1. 001 inch means it is graduated each 1/1000 inch


TYPICAL IMPERIAL DIAL GAUGE		
GRADUATION	MEASURE PER NEEDLE TURN	MEASURE EXAMPLE: .128 INCH
1/1000 inch (.001) per graduation line	1 turn = .100 inch	1 complete turn + 28 graduation lines

NOTE: The small dial indicates the number of turns the long needle traveled around the main dial.

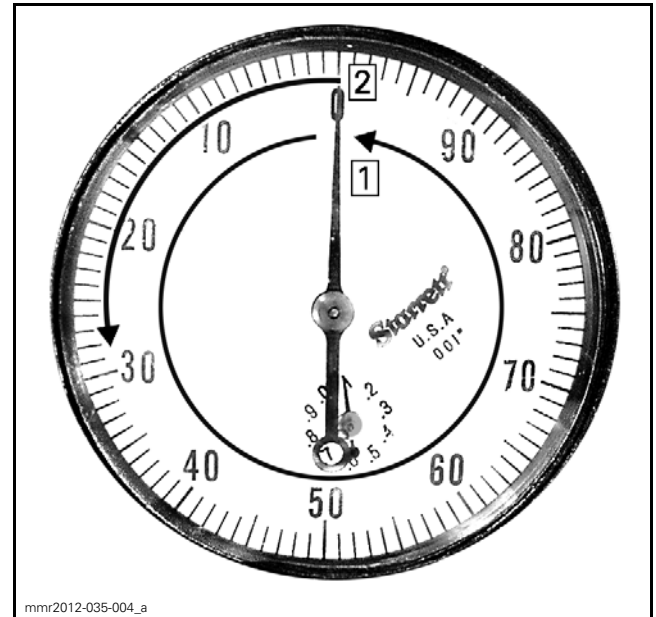

.128 INCH AS AN EXAMPLE
 Step 1: 1 complete turn
 Step 2: 28 lines

Metric Dial Gauge

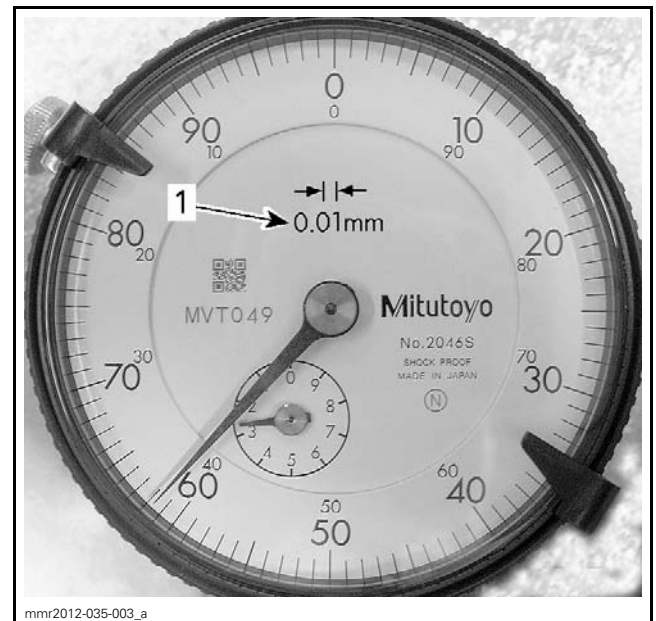


METRIC GAUGE EXAMPLE
 1. 0.01mm means its graduated each 1/100 millimeter

METRIC DIAL GAUGE EXAMPLE		
GRADUATION	MEASURE PER NEEDLE TURN	MEASURE EXAMPLE: 3.25 mm
1/100 millimeter (.01) per graduation line	1 turn = 1 millimeter	3 complete turns + 25 graduation lines

Subsection XX (IGNITION SYSTEM)

NOTE: The small dial indicates the number of turns the long needle traveled around the main dial.

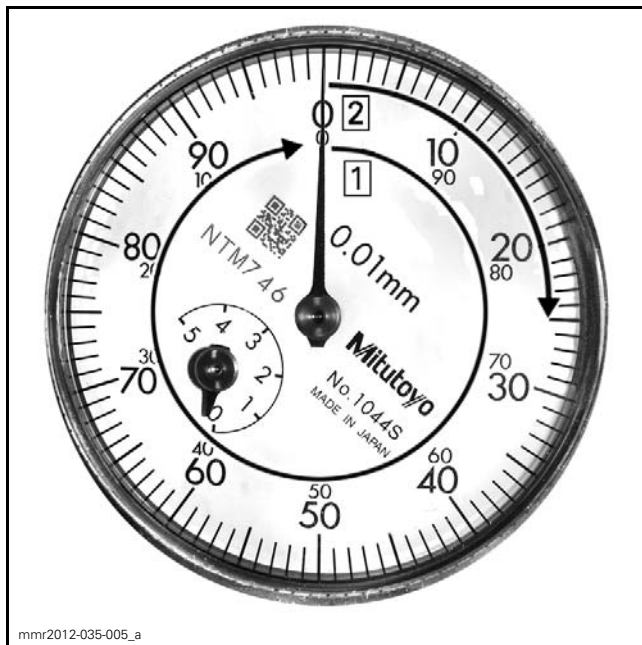

3.25 mm AS AN EXAMPLE

Step 1: Complete turns (3 X)

Step 2: 25 lines

IGNITION TIMING

Normally, ignition timing adjustments should not be required. It has been set at the factory and should remain correctly adjusted as every component is fixed and non adjustable.

The only time the ignition timing may require adjustment is when replacing the:

- Crankshaft
- Magneto flywheel
- CPS
- ECM

Adjustment procedure summary:

- Ignition Timing Tool Installation
- TDC Gauge Installation
- Locating Piston TDC
- Scribing the Timing Mark
- Checking Ignition Timing
- Adjusting Timing


If the ignition timing is found incorrect, first check for proper crankshaft alignment. This might be an indication of a twisted crankshaft. Refer to *ENGINE MEASUREMENT* subsection.

Ignition Timing Tool Installation

⚠ WARNING

Ensure tether cord is removed from engine cut-off switch and emergency engine stop switch is in the STOP position.


1. Remove the LH front engine mounting screw.

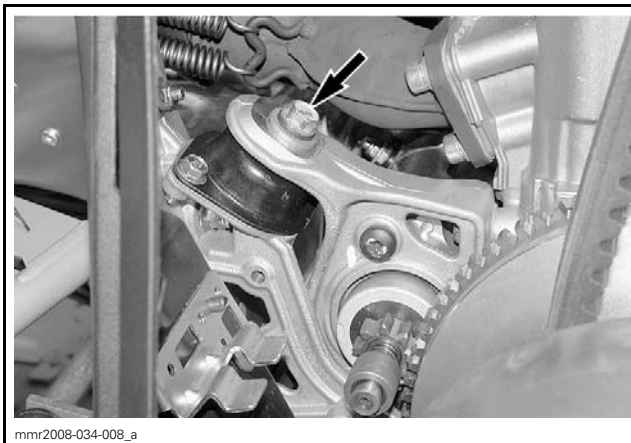


LH FRONT ENGINE MOUNT SCREW

NOTE: Note position of washers for installation.

2. Install the appropriate ignition timing tool on the LH front engine mount.

	REQUIRED TOOL
	IGNITION TIMING TOOL (P/N 529 036 129)
	

TIGHTENING TORQUE	
Engine mount screw	25 N•m (18 lbf•ft)

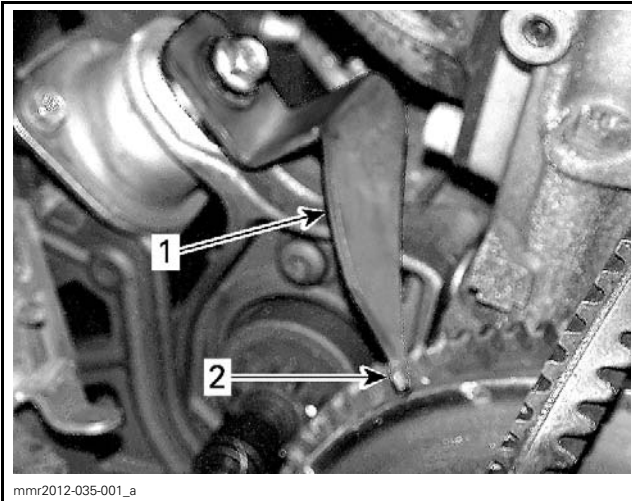



1. Ignition timing tool
2. Pointer

TDC Gauge Installation

⚠ WARNING


Ensure tether cord is removed from engine cut-off switch and emergency engine stop switch is in the STOP position.

Two TDC gauges can be used:


TDC GAUGES	
<p>Preferred Gauge</p> <p>TDC DIAL INDICATOR (P/N 295 000 143) (short reach)</p>	
<p>TDC DIAL INDICATOR (P/N 414 104 700) (long reach)</p>	

Short Reach Gauge Preparation (Preferred Gauge)

1. Remove the roller tip from the gauge.
2. Use the rounded tip from the DIAL INDICATOR ADAPTER (P/N 529 036 132).

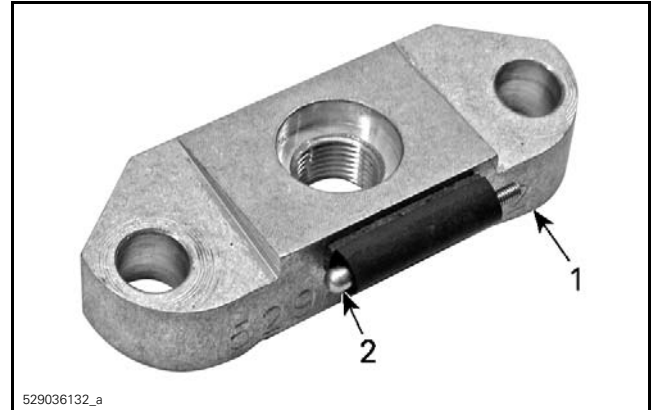

1. Dial indicator adaptor
2. Rounded tip

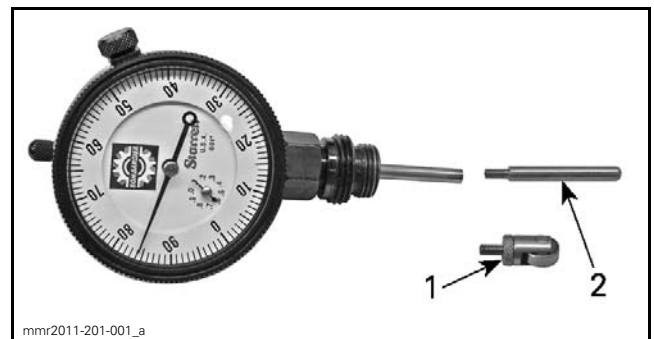

1. Roller tip removed
2. Rounded tip to install

3. Install the rounded tip on the gauge.


Long Reach Gauge Preparation

1. Loosen and lift the console, gauge support and secondary air intake silencer to provide clearance for the long reach gauge.
2. Replace the roller tip by the rounded tip as described in the *SHORT REACH GAUGE PREPARATION*.


Gauge Installation (both gauges)

1. Remove the PTO injector, refer to *E-TEC DIRECT FUEL INJECTION* subsection.
2. Install the DIAL INDICATOR ADAPTER (P/N 529 036 132) over the PTO injector hole.

Subsection XX (IGNITION SYSTEM)

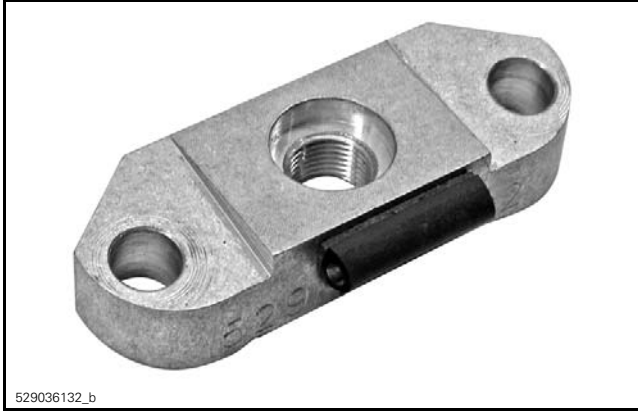

3. Use two screws M10 x 1.5 x 35 to secure the adaptor.
4. Carefully insert the TDC gauge through the dial indicator adaptor hole.

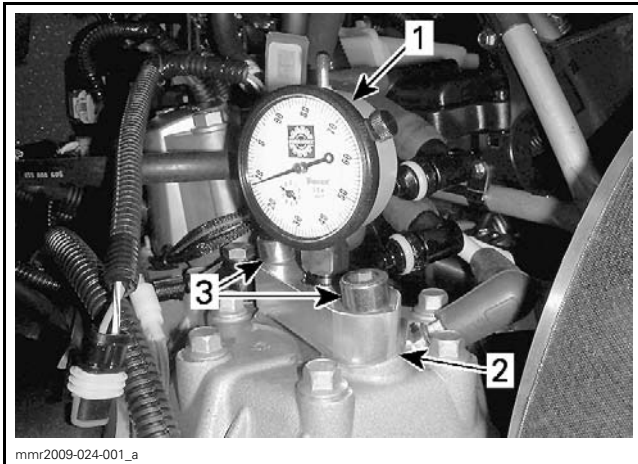

1. TDC gauge
2. Dial indicator adaptor
3. Screws

5. Screw the gauge into the adapter plate with the dial face towards the PTO and tighten it sufficiently to prevent movement.

Locating Piston TDC

NOTE: Normal engine rotation as seen from the PTO side is counterclockwise.

1. With a firm hold on the drive pulley, slowly rotate the drive pulley counterclockwise while observing the TDC gauge needle.

NOTE: Note that the needle stops moving only as the piston is changing direction at the top of its stroke.

2. Rotate the dial face so the "0" is in line with the needle when it stops moving.
3. Resume rotating the engine in the same direction (counterclockwise) until the gauge needle has rotated approximately 1/4 turn past TDC.

4. Then slowly rotate the engine in a clockwise direction until needle stops moving.

NOTE: The needle should stop on the "0". If not, reset the dial "0" to the needle.

5. Again, slowly rotate the drive pulley back and forth across TDC and confirm the needle always stops exactly at "0" before changing direction. "0" now indicates exact TDC.


6. Lock the dial face with the dial lock screw.

NOTE: If a difference in "0" setting the dial in each direction of rotation is easily noticeable, the engine components may suffer from excessive wear. The engine may require further inspection and maintenance.

Scribing the Timing Mark


IMPORTANT: Make sure to understand the TDC gauge functioning. Refer to *UNDERSTANDING THE TDC GAUGE* in this subsection.

1. From the "0" (TDC), rotate the drive pulley clockwise (backwards engine rotation) until the dial needle rotates past the BTDC specification (see table below).

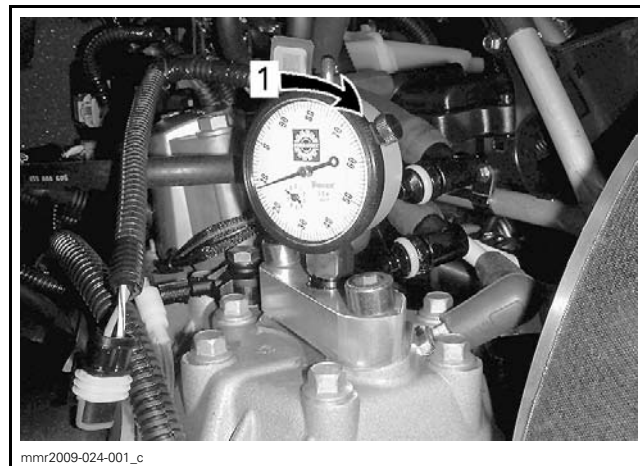

1. Pass the BTDC specification

2. Then carefully rotate engine forward until needle precisely points the measurement specified in the table.

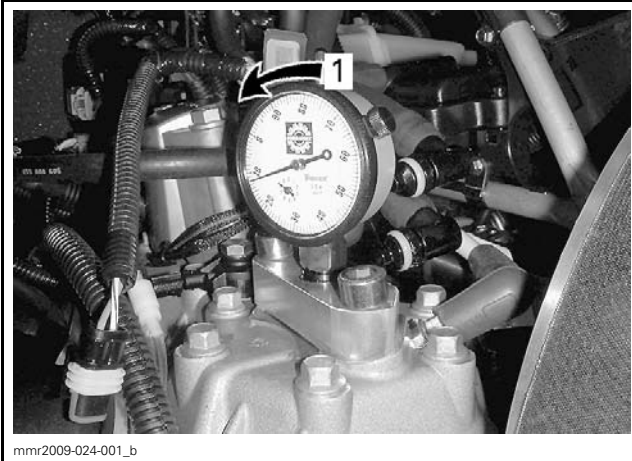

mmr2009-024-001_b

1. Bring dial needle to the BTDC specification

NOTE: Final setting must always be made in the normal engine rotation.

IGNITION TIMING BTDC		
ENGINE	BTDC SPECIFICATION	DEGREE SETTING BTDC
600 HO E-TEC	5.39 mm (.212 in)	28°
800R E-TEC	5.63 mm (.222 in)	28°

3. With the TDC gauge indicating specified timing, use a permanent marker to draw a line on the drive pulley fixed sheave directly in line with pointer end.



mmr2008-034-010_a

TYPICAL

1. Timing mark in line with pointer end

4. Repeat the procedure to ascertain the mark is exactly in line with the pointer.
 5. Remove the TDC gauge and dial indicator adapter.

6. Reinstall the fuel injector. Refer to *E-TEC DIRECT INJECTION* subsection.
7. Reconnect magneto connector.
8. Check ignition timing as per applicable procedure in this subsection.

Checking Ignition Timing

The ignition timing can be checked with either the engine hot or cold at the specified RPM.

ENGINE SPEED FOR IGNITION TIMING CHECK	
	ENGINE RPM
	2500 to 4000 ⁽¹⁾

⁽¹⁾ In this range, the spark advance does not change during the procedure.


To check the ignition timing proceed as follows:

⚠ WARNING

Place ski tips against a wall, raise rear of vehicle on a stand, so that track does not contact the ground. Do not allow anyone in front of or behind the vehicle while engine is running. Keep clear of track and do not wear loose clothing which can get caught in moving parts.

1. Connect the timing light pick-up to the PTO spark plug cable.

NOTE: Be careful to route timing light cable away from drive belt and pulleys.

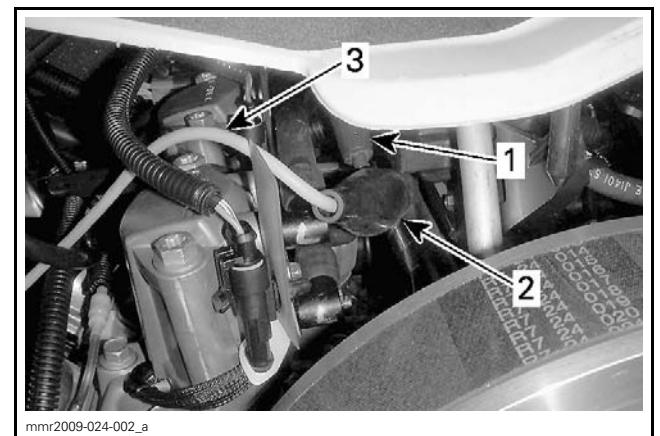

mmr2009-024-002_a


TYPICAL — TIMING LIGHT CONNECTION

1. PTO spark plug cable
2. Timing light connection to PTO plug cable
3. Timing light wire routing

2. Remove RH side panel, refer to *BODY* subsection.

Subsection XX (IGNITION SYSTEM)

3. Connect the vehicle to the latest applicable B.U.D.S. version, refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
4. Start engine and let idle.
5. In B.U.D.S., select **Read Data**.
6. Select the **Setting** tab.
7. At the bottom of the setting page, select the **ECM** tab.
8. At the bottom left hand corner of the page, you will be able to read the **RPM Value** and the **Offset Angle** in the **Ignition/Injection Timing** area.

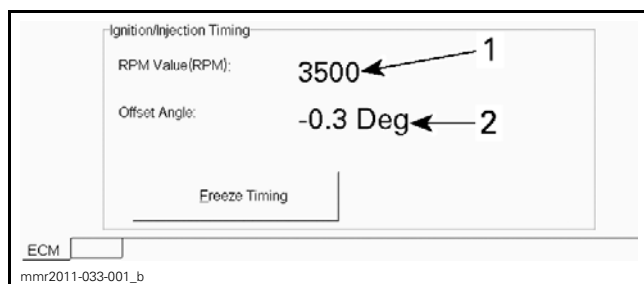


TYPICAL

1. RPM Value
2. Timing Offset Angle

9. In the **Ignition/Injection Timing** area, select **Freeze timing**.

NOTE: Timing will be frozen on the PTO cylinder only for RPM stability. RPM will be limited to 4000 RPM.

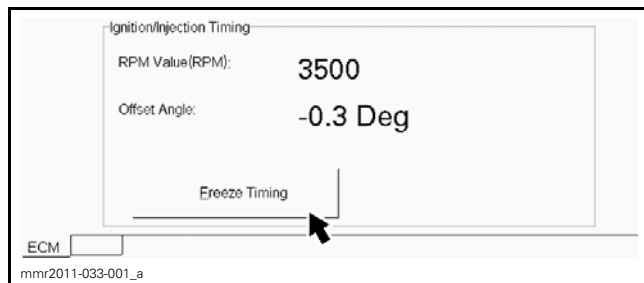

TYPICAL — SELECTING FREEZE TIMING

Note how the available buttons in the **Ignition/Injection Timing** area have changed.



TYPICAL

10. Point the timing light on the timing mark and increase engine to **3500 RPM** for a brief instant.
11. The timing mark must be aligned with the pointer end within the specified tolerance.

	TOLERANCE
	± 0.5°

If timing mark and pointer are aligned, no adjustment is required.

If they are not aligned, note if timing is retarded or advanced, see following illustrations. Then, adjust timing as described in *ADJUSTING TIMING* further in this subsection.



TYPICAL — TIMING RETARDED BY ABOUT 1°



TYPICAL — TIMING ADVANCED BY ABOUT 2°

Adjusting Timing

1. In the **Ignition/Injection Timing** area on the **Setting** page, select **Advance** or **Retard** to change the ignition timing, and **Cancel** to erase the last change.




TYPICAL

1. Advance timing button
2. Retard timing button
3. Cancel timing change

NOTE: Timing will be changed in 0.5° increments.

2. Adjust the timing using the appropriate button until the timing mark is in line with the pointer, within 0.5°. Then click **Store Offset** button to store the ignition timing correction.

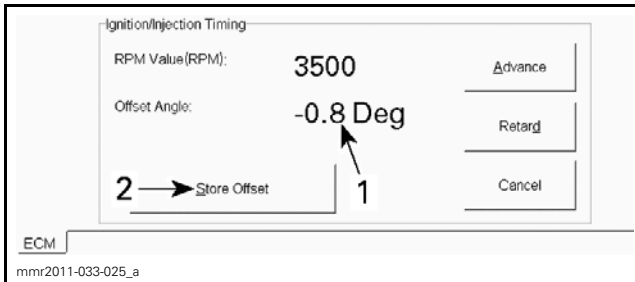

TYPICAL

1. Timing angle changed by 0.5 degrees
2. Store Offset button

3. Shut down engine.
4. Restart engine and select **Read Data** in B.U.D.S.
5. Recheck timing to ensure ignition timing adjustment was properly stored in the ECM.
6. Increase engine RPM pass 4000 RPM to ascertain the **Freeze Timing** function is no longer active.

NOTE: The **Freeze Timing** function automatically disengages when the **Store Offset** is selected or when engine is stopped.

7. Remove all tools.

TROUBLESHOOTING

IGNITION SYSTEM TESTING SEQUENCE

NOTE: It is good practice to check for fault codes using the B.U.D.S. software as a first troubleshooting step. Refer to the *DIAGNOSTIC AND FAULT CODES* subsection.

In the case of ignition problems, check the following in the prescribed order until the problem can be solved:

1. Spark plugs
2. Spark plug cables
3. Wiring harness/electrical connectors
4. Emergency engine stop switch
5. Ignition cut-off switch
6. Ignition coil(s)
7. CPS
8. ECM (Engine Control Module).

800R E-TEC

If engine idles roughly or shows signs of increased emissions, the spark plugs may be incorrectly indexed. Refer to *PERIODIC MAINTENANCE PROCEDURE* subsection.

PROCEDURES

SPARK PLUGS

Spark Plug Application

A platinum NGK spark plug is used, one per cylinder.

MODEL	NGK SPARK PLUG NUMBER
600 HO E-TEC	PZFR6F
800R E-TEC	PFR7AB



mnr2009-019-025

TYPICAL

Spark Testing

NOTE: Use **ONLY** an approved inductive spark plug tester or a new spark plug to test for ignition spark. In-line (series connected) spark testers must not be used. Radio frequency interference (RFI) generated by the arcing current may cause erratic behavior in the ECM.

⚠ WARNING

Always electrically disconnect both fuel injectors prior to testing for ignition spark. Otherwise, fuel vapors may ignite in presence of a spark, creating a fire hazard.

1. Install the inductive spark tester (or a new spark plug) on the spark plug cable (**Do not remove spark plugs installed on engine**).
2. Bring the new spark plug into contact with the engine.
3. Pull rewind starter or press START/RER button as applicable.
4. If no spark is produced, refer to *IGNITION SYSTEM TESTING SEQUENCE* in this subsection.
5. If a spark is produced, install new spark plugs in the engine and repeat the test to assure the new spark plugs are in good condition and functioning correctly.


SPARK PLUG CABLES

Spark Plug Cable Resistance Test

If the spark plug cables are in good condition, carry out the following resistance test.

1. Remove each spark plug cable from its ignition coil and spark plug.
2. Set multimeter to Ω .
3. Insert a probe in each cable end and measure the resistance.

SPARK PLUG CABLE RESISTANCE
1283 – 4083 Ω

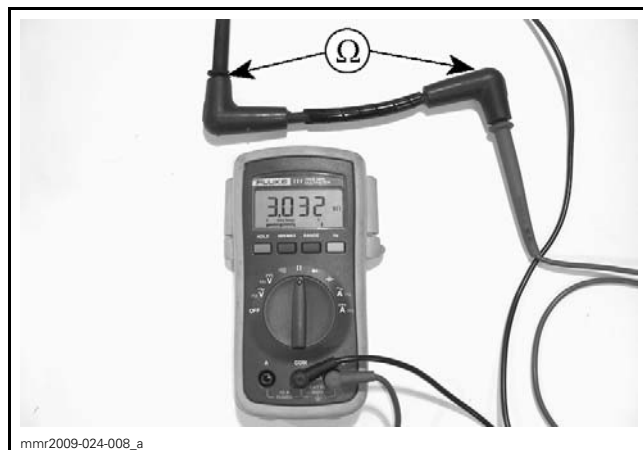

SPARK PLUG CABLE RESISTANCE TEST

If resistance is not as specified, replace spark plug cable.

NOTICE Do not interchange spark plug cables. The lower LH coil must be matched to the PTO spark plug.

EMERGENCY ENGINE STOP SWITCH

Emergency Engine Stop Switch Operation

The emergency engine stop switch provides a ground signal to the ECM when STOP is selected.

The ground signal is applied to ECM connector J1A pin 9, through the emergency engine stop switch (STOP position).

Refer to applicable *WIRING DIAGRAM* for details.


Emergency Engine Stop Switch Troubleshooting

Engine Will Not Start, No Spark

If the engine will not start and you do not have ignition spark at the plugs, the emergency engine stop switch or its wiring to the ECM may be shorted to ground.

Provide power to the electrical system using the POWER INTERFACE (P/N 515 177 223) and connect as described in *COMMUNICATION TOOLS AND B.U.D.S.* subsection.

1. Using B.U.D.S., select the **Monitoring** tab.
2. On the lower LH side of the page, choose the **ECM** tab.
3. In B.U.D.S., look for the "engine stop switch" indicator light at the bottom of the page.
4. Toggle the emergency engine stop switch STOP and RUN positions.

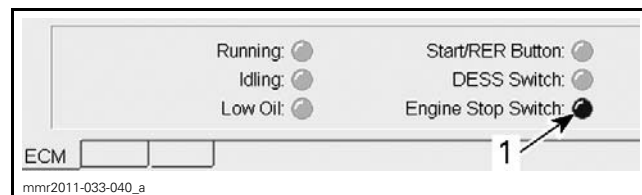

1. Engine stop light indication

EMERGENCY ENGINE STOP SWITCH NORMAL RESULT	
STOP position (down)	B.U.D.S. indicator light ON
RUN position (UP)	B.U.D.S. indicator light OFF

If results are not as specified, carry out an *EMERGENCY ENGINE STOP SWITCH CONTINUITY TEST*, and a *EMERGENCY ENGINE STOP SWITCH WIRING TEST* as per applicable procedures in this subsection.

NOTE: If emergency engine stop switch or wiring is open, the engine will not shut off.

Emergency Engine Stop Switch Continuity Test

To test the emergency engine stop switch, carry out the following steps.


1. Disconnect the 6-pin (RH) under the steering cover.



6-PINCONNECTOR (RH)

2. Set the FLUKE 115 MULTIMETER (P/N 529 035 868) multimeter to Ω .
3. Measure the resistance through the switch and its wiring as follows.

EMERGENCY ENGINE STOP SWITCH CONTINUITY TEST			
SWITCH POSITION	TEST PROBES		RESISTANCE
RUN	Pin 5	Pin 6	Infinite (OL)
STOP			0 to 0.5 Ω

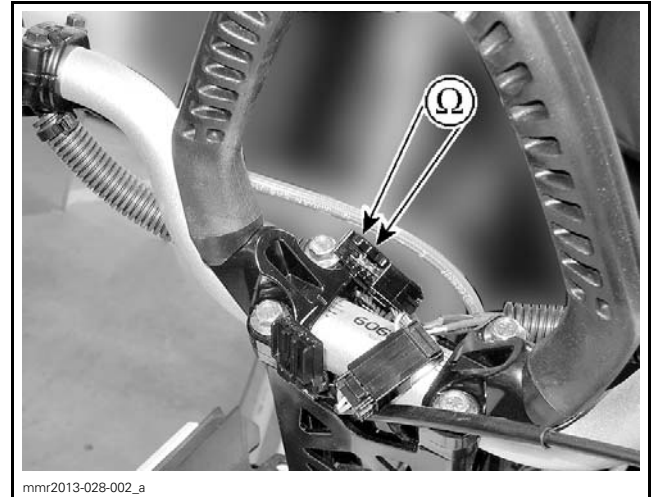

If readings are not as specified in table, replace switch or repair wiring/connector.

If readings are as specified, refer to *EMERGENCY ENGINE STOP SWITCH WIRING TEST*.

Emergency Engine Stop Switch Wiring Test

Emergency Engine Stop Switch Input Wiring Test



1. Remove the steering cover and disconnect the 6-pin connector (RH).




6-PINCONNECTOR (RH)

2. Remove upper body module. Refer to *BODY* subsection.
3. Disconnect J1A from the ECM (top connector).

Subsection XX (IGNITION SYSTEM)

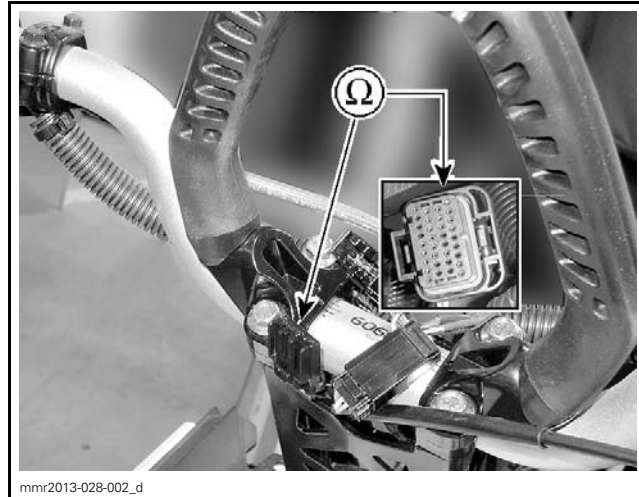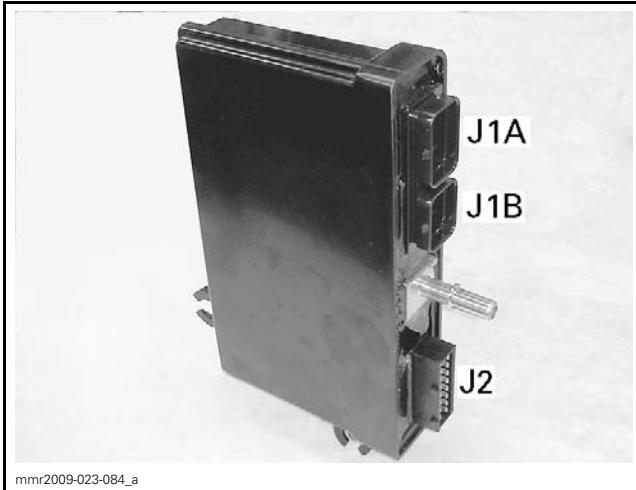


MEASURING TO ECM CONNECTOR J1A

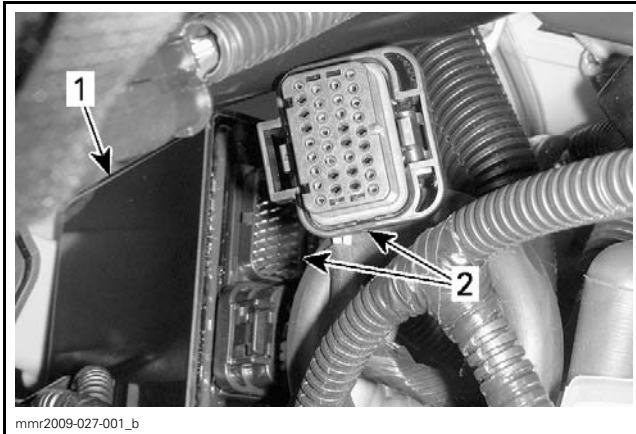

SEEN FROM RH SIDE

1. ECM
2. J1A disconnected

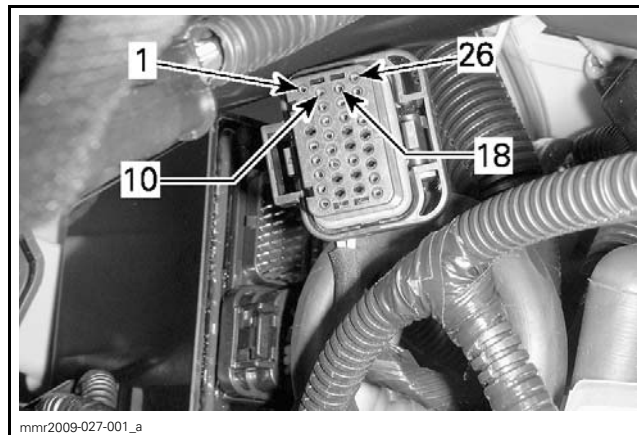

J1A PIN-OUT

4. Test the emergency engine stop switch circuit as per following tables.

Refer to the applicable *WIRING DIAGRAM* for circuit details.


EMERGENCY ENGINE STOP SWITCH WIRING CONTINUITY TEST

PROBE (VEHICLE HARNESS SIDE)		RESISTANCE
RH pin 6	ECM J1A pin 9	Close to 0 Ω (continuity)

5. If circuit continuity is not good, check vehicle and steering harnesses for an open wire. Refer to *WIRING DIAGRAMS* subsection.
6. If circuit continuity is good, check if wiring is shorted to ground as per table.

EMERGENCY ENGINE STOP SWITCH WIRING GROUND TEST


PROBE (VEHICLE HARNESS SIDE)		RESISTANCE
RH pin 6	Chassis ground	Infinite (OL)

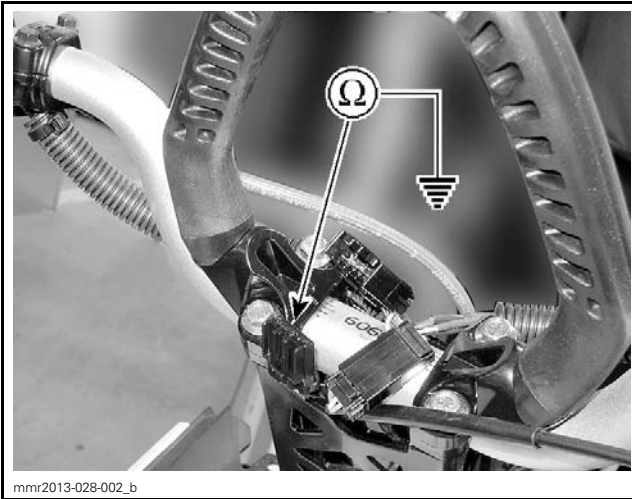

mnr2013-028-002_b

MEASURING TO CHASSIS GROUND

7. If an open circuit is found, then the wiring harnesses are functional.
8. If a short circuit (low resistance to ground) is found, disconnect the 12-pin connector (SH) at steering column and check vehicle and steering harnesses individually to find the faulty harness. Repair or replace the faulty wiring or connection.

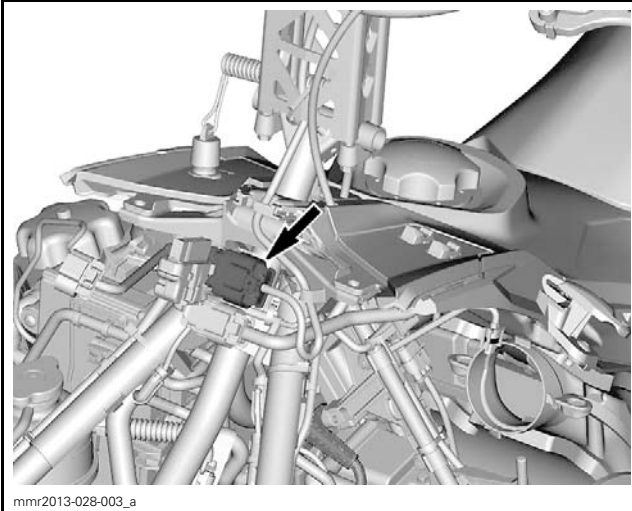

mnr2013-028-003_a


12-PIN CONNECTOR (SH)

ENGINE CUT-OFF SWITCH

Engine Cut-off Switch Continuity Test

Remove upper body module. Refer to *BODY* subsection.

Disconnect engine cut-off switch connector (DS).

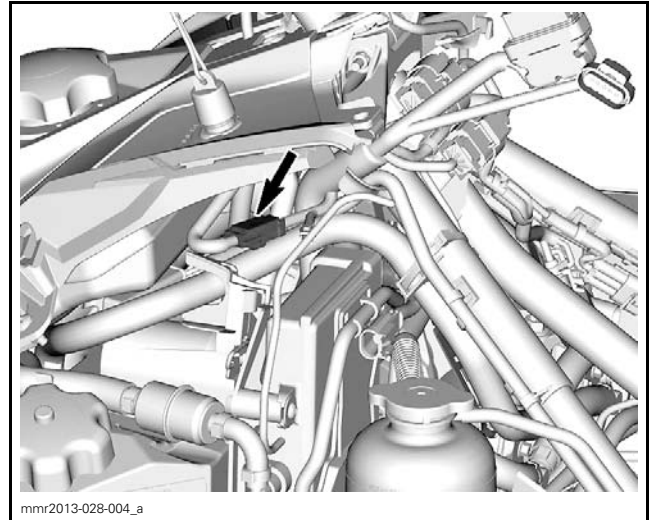

mnr2013-028-004_a

ENGINE CUT-OFF SWITCH CONNECTOR (DS)


The following continuity tests can be performed using the FLUKE 115 MULTIMETER (P/N 529 035 868).

Tether Cord Cap Removed from Switch

Set multimeter to Ω .

Connect test probes to engine cut-off switch and its connector as per tables and measure resistance.


ENGINE CUT-OFF SWITCH		RESISTANCE Ω @ 20°C (68°F)
WIRE		
BK/GN	BK/WH	Open circuit

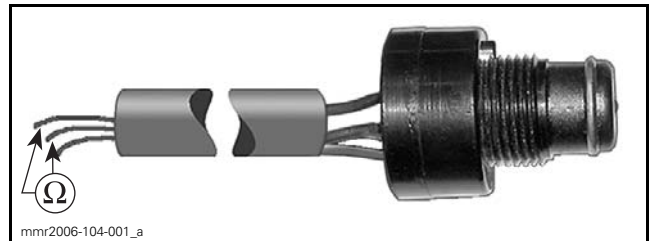

mnr2006-104-001_a

TYPICAL

ENGINE CUT-OFF SWITCH		RESISTANCE Ω @ 20°C (68°F)
WIRE		
WH/GY	Switch terminal	Close to 0 Ω

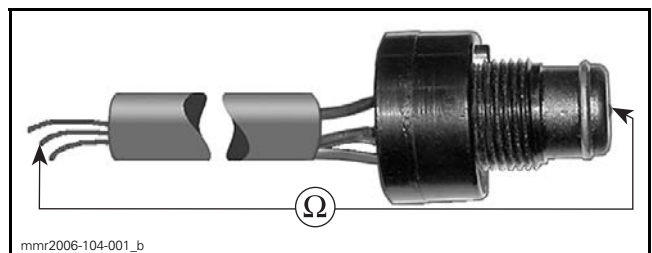


mnr2006-104-001_b

TYPICAL

Subsection XX (IGNITION SYSTEM)

ENGINE CUT-OFF SWITCH		RESISTANCE Ω @ 20°C (68°F)
WIRE		
BK/GN	Switch ring	Close to 0 Ω

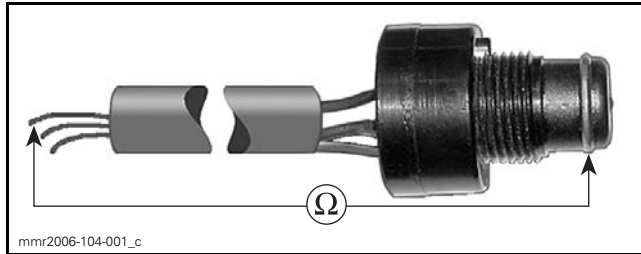


TYPICAL

Tether Cord Cap on Switch

Connect test probes to engine cut-off switch connector as per table and measure resistance.

ENGINE CUT-OFF SWITCH		RESISTANCE Ω @ 20°C (68°F)
WIRE		
BK/GN	BK/WH	Close to 0 Ω

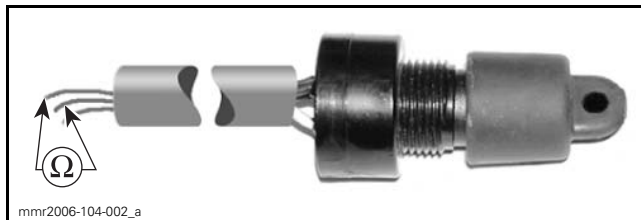

TYPICAL

If the latest test failed, try a known good cut-off switch cap. If the resistance test is now good, replace cap.

If any resistance test failed from the other tests, replace engine cut-off switch.


Engine Cut-off Switch Vehicle Harness Continuity Test

Disconnect engine cut-off switch connector.




Paperless Manuals
For a Better Tomorrow


If you bought this manual from any other seller please leave them
NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

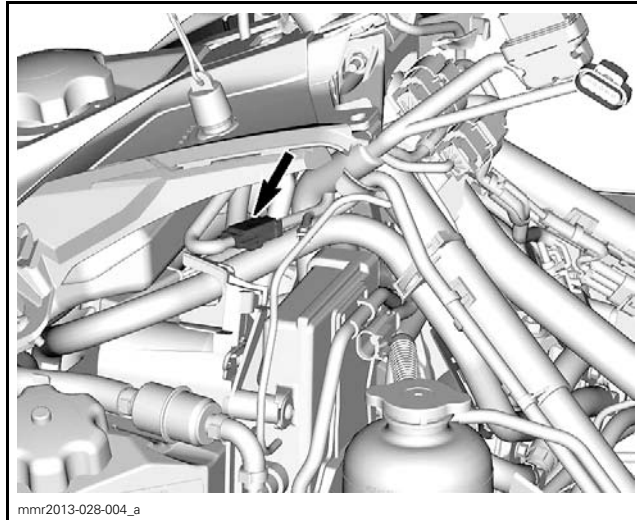

Disconnect the J1A connector from ECM (top connector).

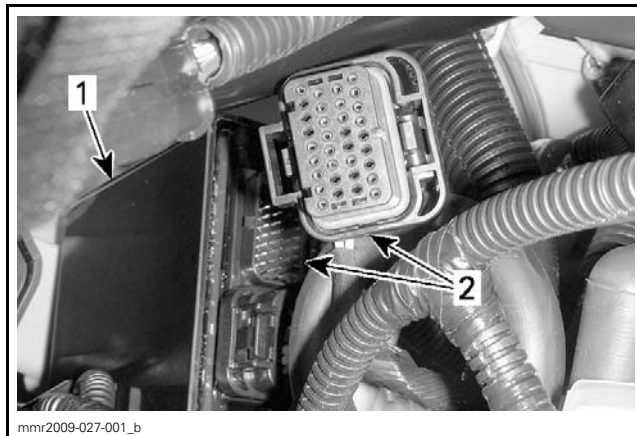


1. ECM
2. J1A disconnected

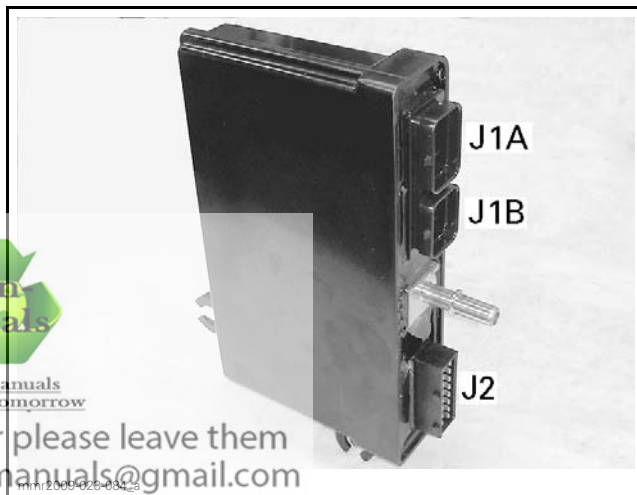

Set multimeter to Ω and check wire continuity between engine cut-off switch connector and ECM as follows.

ENGINE CUT-OFF SWITCH CONNECTOR	ECM J1A CONNECTOR	RESISTANCE Ω @ 20°C (68°F)
WIRE	PIN	
WH/GY	11	Close to 0 Ω
BK/WH	23	
BK/GN	5	

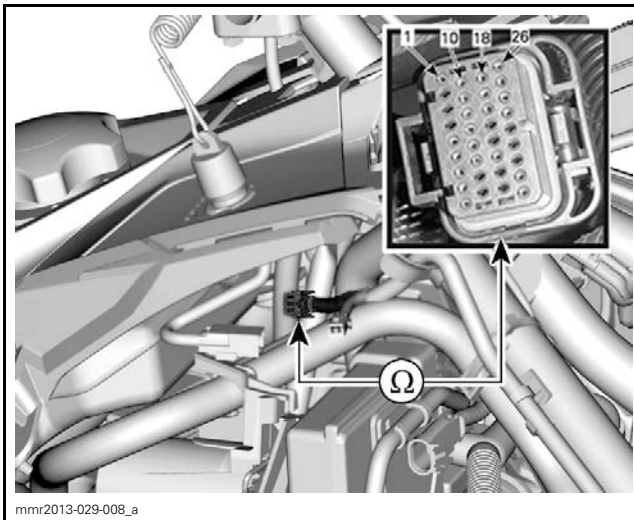

- If any continuity test failed, repair or replace wiring connectors/terminals.
- If problem persists and all tests have been performed, try a new ECM. Refer to *ECM REPLACEMENT*.

Reinstall removed parts.

IGNITION COILS

Ignition Coil Testing Sequence

NOTE: A resistance test of the ignition coil primary and secondary windings cannot be carried out due to internal circuits.

Before replacing an ignition coil, carry out the following in this order:


- Ignition coil test with B.U.D.S.
- Ignition coil input voltage test
- Ignition control signal test with B.U.D.S.
- Ignition coil control circuit test
- Ignition coil ground circuit test
- Spark plug cable test
- Spark plug replacement.

Ignition Coil Test with B.U.D.S.

NOTE: The battery must be fully charged. The test with B.U.D.S. will fail if the battery voltage is less than 11 Vdc.

NOTE: The ECM energizes and sends a trigger signal to each ignition coil individually. It can detect if each ignition coil is connected, display a trouble code in the multifunction display, and a CHECK ENGINE upon engine starting.

1. Connect the vehicle to the latest applicable B.U.D.S. version, refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. Select **Read Data**.
3. Select the **Activation** tab.
4. At the bottom LH corner of the activation page, select the **ECM** tab.
5. Energize each ignition coil separately.

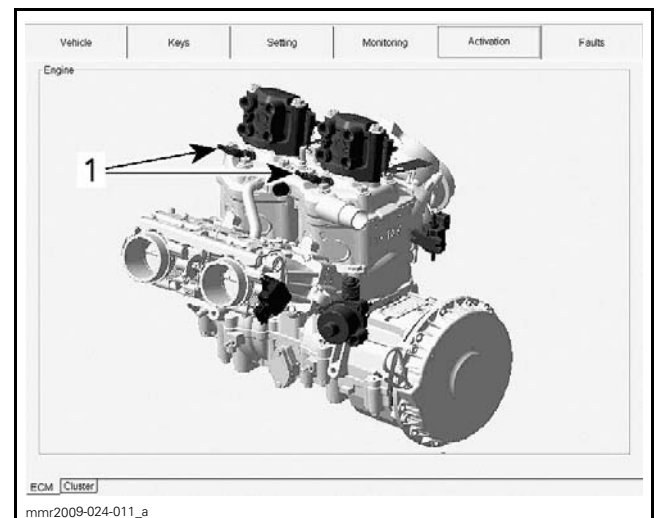

1. Activate here


You should hear the spark occurring. If in doubt, use an inductive spark tester.

If there is no spark, carry out an *IGNITION COIL INPUT VOLTAGE TEST*.

Ignition Coil Input Voltage Test

1. Remove the upper body module. Refer to *BODY* subsection.
2. Disconnect the connector from each ignition coil.

Subsection XX (IGNITION SYSTEM)

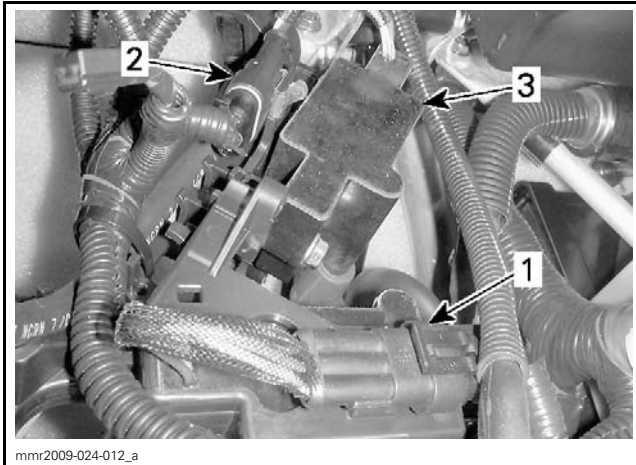

IGNITION COIL CONNECTORS, REAR VIEW


1. PTO coil connector
2. MAG coil connector
3. MAG ignition coil

3. Install the following tools to supply 12 Vdc to the primary 12 Vdc circuits and to the 55/60 Vdc circuits for this test. Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection for proper connections.

- (P/N 515 177 223)
- 12 V BATTERY SUPPLY CABLE (P/N 529 035 997)
- 12 volts battery.


4. Set multimeter to Vdc and measure supply battery voltage.

5. Check ignition coil input voltage as follows.

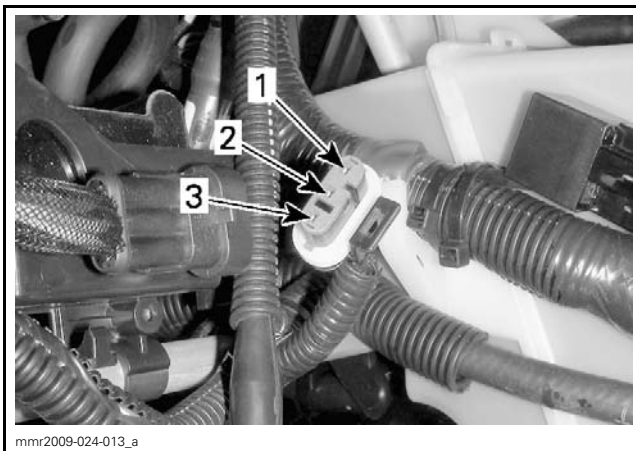

IGNITION COIL CONNECTOR PIN-OUT

IGNITION COIL TERMINAL		VOLTAGE (VDC)
3	Battery ground	Battery voltage minus 0.7 Vdc

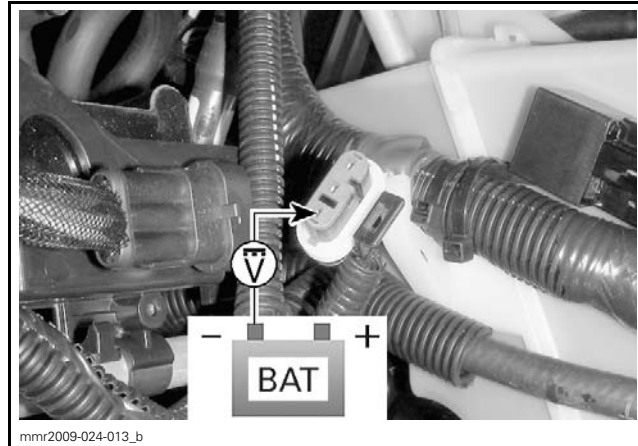

INPUT VOLTAGE TEST (PRIMARY COIL WINDING)

If voltage is NOT as specified, carry out the following. Refer to applicable *WIRING DIAGRAM* for details.

- Test for supply battery voltage at pins 15 and 16 of ECM J2 connector.
- Check continuity of wire between terminal 3 of ignition coil and pin 13 of the ECM J2 connector.
- Test continuity of all ECM ground circuits, refer to *E-TEC DIRECT INJECTION* subsection.
- Repair or replace wiring as required.

If battery voltage is read at coil input, carry out the following. Refer to applicable *WIRING DIAGRAM* for details.

- Ignition control signal test with B.U.D.S.
- Spark plug cable resistance test
- Continuity test of ignition coil control circuit
- Continuity test of coil ground circuit, pin 1 to chassis ground
- Replace coil
- Replace ECM.

Ignition Coil Control Signal Test with B.U.D.S.

1. Disconnect the affected ignition coil connector.
2. Set multimeter to Vdc, then select the frequency function (Hz), and manually set the scale to 6 Hz.

NOTE: If the meter is left in automatic range mode, you will not obtain a reading as the ignition control signal is too fast and for too short a period of time for the meter to adjust and take the reading.


3. Select the MAX. function on the multimeter to record the maximum reading detected.

4. Install an alligator clip adapter to the BLACK (-) probe, and a thin rigid back probe to the RED multimeter probe.



IGNITION SIGNAL TEST AT COIL CONNECTOR

5. Insert the RED probe in pin 2 (OG wire) of the coil connector, and clip the BLACK probe to engine ground.
6. In B.U.D.S., energize the affected ignition coil separately.

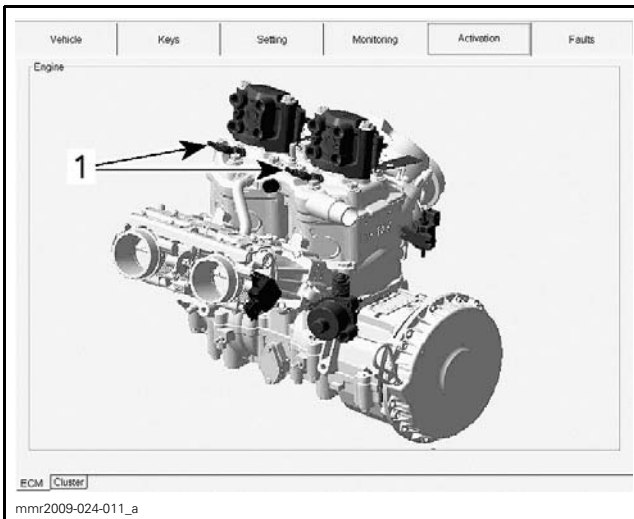

1. Activate here

METER SELECTION	TEST PROBES		READING
Vdc Hz manual range	Coil connector	Engine	Approximately 2 Hz
	Pin 2 (OG)	Ground	

Frequency of ignition signal should consistently be approximately 2 Hz.

If signal is not present, refer to *IGNITION COIL CONTROL CIRCUIT*.


If the ignition coil control signal test was good, test the following before installing a new coil.

- Ignition coil ground circuit test
- Spark plug cable resistance test
- Spark plugs.


Ignition Coil Control Circuit Test

1. Disconnect connector J1B from ECM.
2. Test for continuity of the circuit between ECM connector and ignition coil connector as follows.

CONNECTOR PIN			
CYLINDER	ECM J1B	IGNITION COIL	RESISTANCE
PTO	19	2	Close to 0 Ω (continuity)
MAG	26	2	

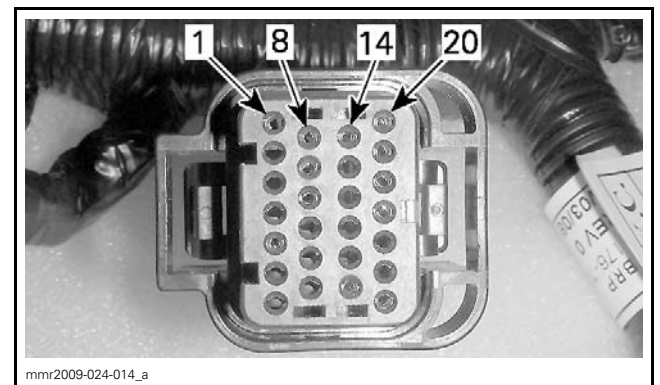

J1B PIN-OUT

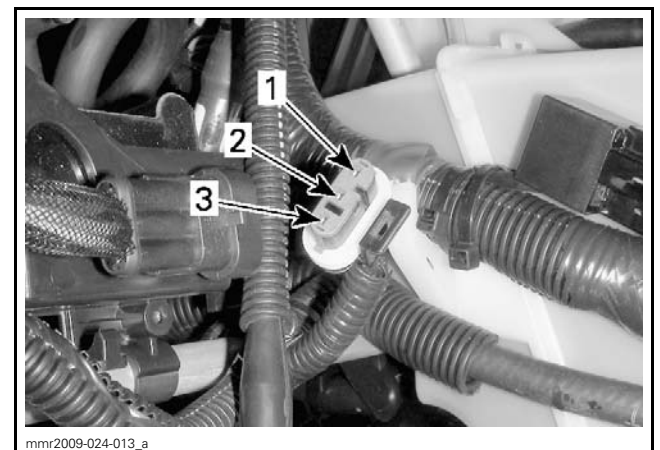

IGNITION COIL CONNECTOR PIN-OUT

If wiring harness is defective, repair the connector or replace the wiring harness between ECM connector and the ignition coil.


If wiring harness tested good, refer to *IGNITION COIL GROUND CIRCUIT TEST*.

Subsection XX (IGNITION SYSTEM)

Ignition Coil Ground Circuit Test

1. Disconnect the input connector from both coils.
2. Test for continuity of the coil ground circuit as follows.

CYLINDER	IGNITION COIL CONNECTOR		RESISTANCE
PTO	Pin 1	Chassis ground	Close to 0 Ω (continuity)
MAG			

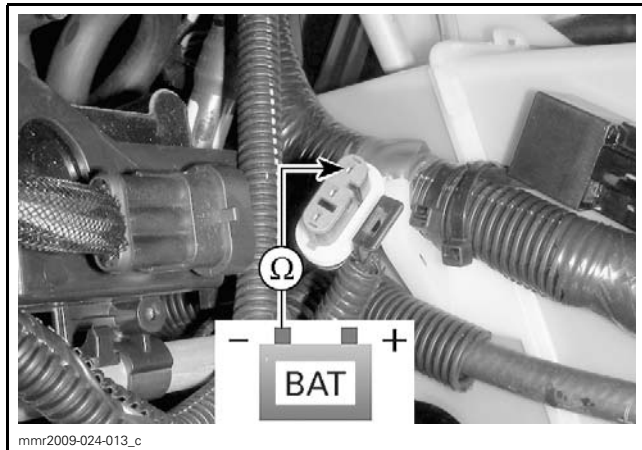

IGNITION COIL GROUND CIRCUIT TEST (PIN 1)

If wiring harness is defective, repair or replace the wiring and connectors.


If the ground circuit tested good, replace the ignition coil.

Ignition Coil Removal

1. Remove the upper body module. Refer to *BODY* subsection.
2. Note position of spark plug cables and remove them from the spark plugs.

PTO Coil Removal

1. Disconnect the ignition coil connector.
2. Remove the coil retaining screw.

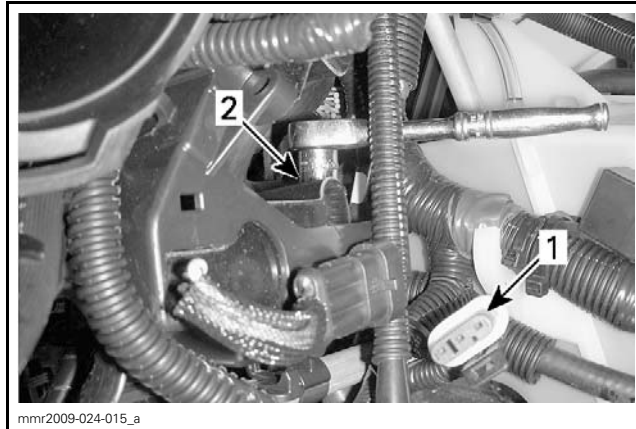


PTO IGNITION COIL (REAR VIEW)

1. Disconnect coil connector
2. Remove coil retaining screw

NOTE: PTO coil connector is mounted to the support with a retaining clip. Coil must be off support to access clip for removal.


3. Using a screwdriver, lift the retaining tab out of the second coil mounting hole to release coil from support. Do not pull coil away from support.
4. Using a small screwdriver, remove spring clip retaining coil connector to support and pull connector through support opening.

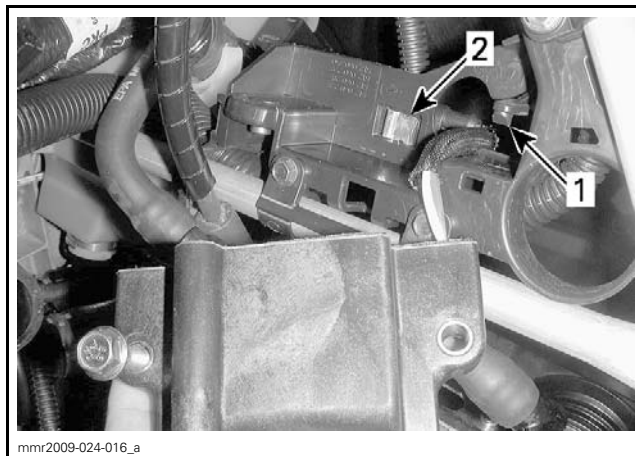

1. Lift to release coil from support
2. Remove connector retaining clip from support


MAG Coil Removal

1. Disconnect the ignition coil connector.
2. Using a small screwdriver, remove connector retaining clip from support.
3. Remove the two coil retaining screws.

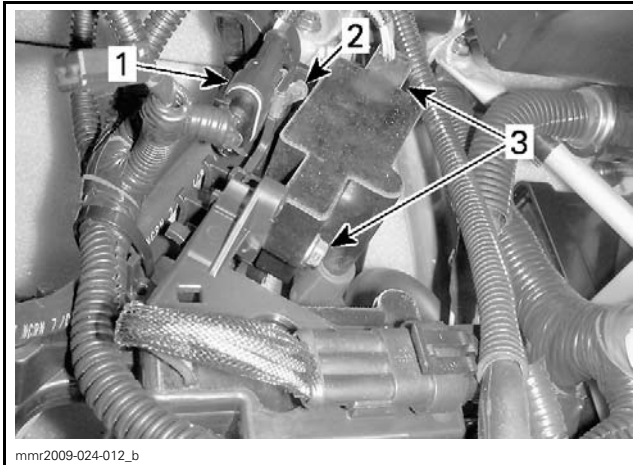

mnr2009-024-012_b

1. Disconnect coil connector
2. Remove connector retaining clip
3. Remove two mounting screws

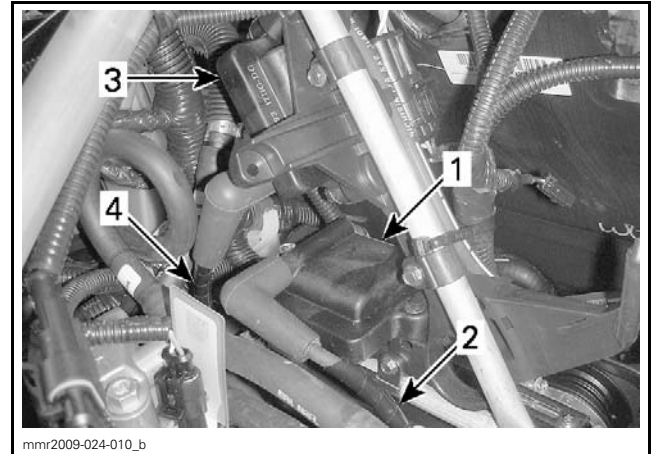

mnr2009-024-010_b

1. PTO ignition coil
2. Cable To PTO spark plug
3. MAG ignition coil
4. To MAG spark plug


Ignition Coil Installation

Reverse the removal procedures but pay attention to the following:

1. On the PTO coil, insert the coil connector through the coil support and install its retaining clip on the support before installing the coil.
2. Insert the PTO coil under the coil support retaining tab and slide it onto the support until the tab drops into the coil mounting hole.

⚠ WARNING

Always reconnect ignition coil cables to the same spark plugs they were disconnected from. Otherwise, severe backfire may occur with possible damage to exhaust system components.

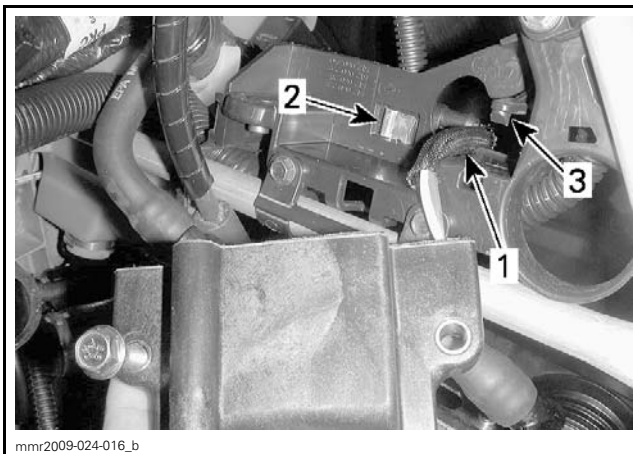

mnr2009-024-016_b

1. Insert coil connector through support
2. Install connector retaining clip
3. Lift tab and insert coil

3. Install the retaining screw(s) and torque to 10 N•m (89 lbf•in) (both coils).
4. Reconnect the primary winding connectors and the spark plug cables.

NOTE: Pay attention to the position of the spark plug cables when connecting them. Lower coil connects to the PTO spark plug. Apply dielectric grease, refer to *SPARK PLUG CABLE*.

CHARGING SYSTEM

SERVICE TOOLS

Description	Part Number	Page
12 V BATTERY SUPPLY CABLE	529 035 997	3-4
FLUKE 115 MULTIMETER	529 035 868	6-7
POWER INTERFACE	515 177 223	3-4

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
NAPA ULTRA PRO BATTERY LOAD TESTER	95260	11

SERVICE PRODUCTS

Description	Part Number	Page
DIELECTRIC GREASE	293 550 004	12-13

GENERAL

⚠ WARNING

Unless otherwise specified, always disconnect the magneto connector and ensure spark plugs are installed on the engine before carrying out electrical system checks on the E-TEC 600 HO E-TEC and 800R engines. Should the engine be made to rotate with magneto connected, a spark may occur resulting in electrical shock, a fire, or an explosion.

SYSTEM DESCRIPTION

Magneto

A magneto provides the primary source of electrical energy. It transforms a magnetic field into an alternating current (AC).

The magneto is comprised of a 3 winding, single phase wound stator that has a capacity of 1200 watts.

AC current is rectified and regulated by a voltage regulator/rectifier circuit, and a DC to DC converter, both integrated within the ECM.

The charging system provides 3 outputs to the vehicle electrical system, one 55/60 Vdc and two 12 Vdc outputs.

Battery

A battery is installed on **electric start models** as a secondary power source. It is primarily used for energizing the starter and it provides power to instantly power the ECM when the START/RER button is pressed.

On **vehicles equipped with a high end multi-function gauge**, it also provides power to maintain the clock function within the gauge.

NOTE: Never use a battery charger to temporarily substitute the battery as it may cause the ECM (engine control module) to function erratically or not at all.

TROUBLESHOOTING

NOTE: It is good practice to check for fault codes using B.U.D.S. as a first troubleshooting step. Refer to *DIAGNOSTIC AND FAULT CODES*.

TROUBLESHOOTING GUIDELINES

Weak or Discharged Battery

Electric Start Models

If the battery is weak or discharged, check the following items:

- Battery charging fuse (FA)
- Charging system voltage, see *PRIMARY 12 VDC CIRCUIT TEST WITH B.U.D.S.* in this subsection

Subsection XX (CHARGING SYSTEM)

- Battery
- Wiring and connections.

Low or No System Voltage (Engine May Not Start)

The vehicle cannot start without having a minimum voltage to the 55/60 V power circuit. If the engine does not start, see *VOLTAGE REGULATOR/RECTIFIER* in this subsection and carry out the *55/60 VDC VOLTAGE OUTPUT TEST WITH B.U.D.S.*

If voltage is not as specified, check the following items in the recommended order until you find the fault:

- Stator (refer to *MAGNETO* subsection)
- Capacitor (see procedure in this subsection).

NOTE: The 55/60 Vdc may be unstable or unobtainable if the capacitor is faulty, not connected, or incorrectly connected.

If the above mentioned checks were good, isolate each of the following components by disconnecting them individually, and repeating the voltage test after each one.

- Each injector
- Each ignition coil
- Fuel pump
- Oil injection pump.


NOTE: When the 55/60 Vdc test good after a component is disconnected, replace that component and repeat the test.

PROCEDURES

BATTERY CHARGING FUSE

Fuse Location

Fuses are located behind the RH side panel above battery.

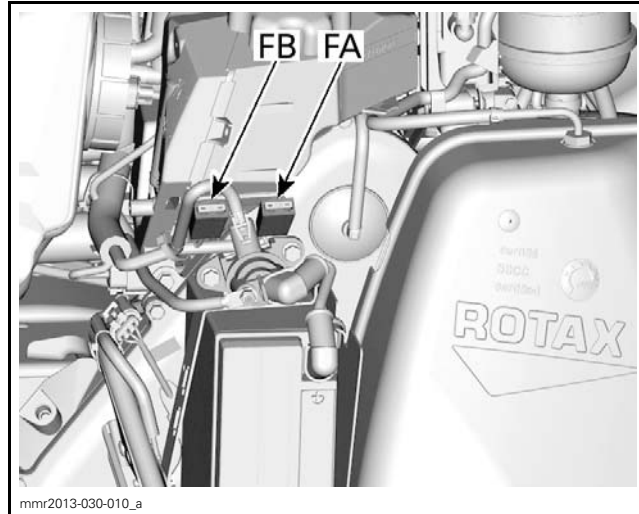

1. FA: Battery charging fuse
2. FB: START/REAR fuse

Fuse Information

The voltage regulator could be the culprit of a blown battery charging fuse (FA).

To check for this, carry out the *PRIMARY 12 VDC CIRCUIT TEST WITH B.U.D.S.* in this subsection. Also check for an applicable fault code, refer to *DIAGNOSTIC AND FAULT CODES*.

BATTERY CHARGING RELAY

The battery charging relay is located within the ECM. It completes the charging circuit between the voltage regulator output (within the ECM) and the battery. It then outputs the secondary 12 Vdc voltage. Refer to *POWER DISTRIBUTION* for more details.

The ECM turns on the relay so that battery charging occurs at approximately 1000 RPM. When engine is stopped, the ECM opens the charging circuit to isolate the battery from the ECM.

The relay operation will be tested through the *SECONDARY 12 VDC CIRCUIT TEST*.

VOLTAGE REGULATOR/ RECTIFIER


Description

The voltage regulator/rectifier is integrated within the ECM. It receives three single phase alternating current (AC) inputs from the magneto which it rectifies and regulates to 55/60 Vdc.

On a single pull start with the engine between 250 and 500 RPM, the magneto, combined with an ingenious series/parallel switching capability of the voltage regulator/rectifier, is capable of producing 55/60 Vdc.

55/60 Vdc Output Path

ECM CONNECTOR	TO
J2 pins 12 and 13	55/60 Vdc to: - Capacitor - Fuel Injectors (600 HO E-TEC) - Ignition coils - Fuel pump - Oil injection pump
J1B pins 2 and 8	Fuel injectors (800R E-TEC)

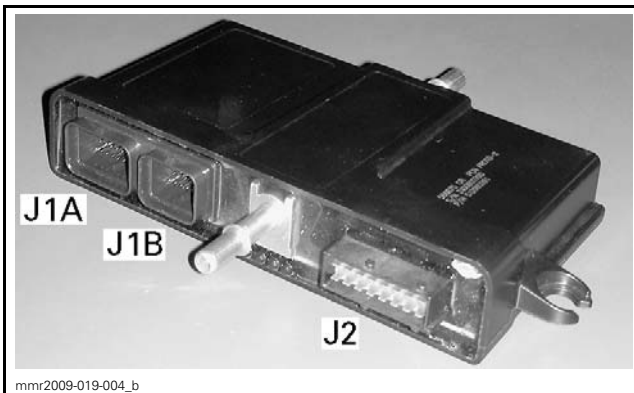

Continuity Test
(Voltage Regulator/Rectifier)

Due to internal circuitry, there is no static test available to check continuity.

55/60 Vdc Voltage Output Test with B.U.D.S.
(Voltage Regulator/Rectifier)

1. Raise vehicle so that the track is off the ground and can turn freely.

⚠ WARNING

Ensure vehicle track is completely raised off ground. If the track should come into contact with the ground when the engine is at 5000 RPM, equipment damage and severe injury may result.


2. Remove RH side panel, refer to *BODY* subsection.
3. Use the applicable B.U.D.S. version available from BOSSWeb. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.

Procedure When Engine Cannot be Started

Manual Start Models

1. Install the following tools to supply power to the 12 Vdc circuits for this test. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection for proper connections.
 - POWER INTERFACE (P/N 515 177 223)
 - 12 V BATTERY SUPPLY CABLE (P/N 529 035 997)
 - 12 volts battery.
2. In B.U.D.S., select **Read Data**.
3. Select the **Monitoring** tab.
4. At the bottom of the monitoring page, select the **ECM** tab.
5. Crank the engine 4 - 5 times using the rewind starter.
6. Read the voltage on the **55 V/60 V System Circuit** meter in B.U.D.S. as the engine is turning over.

55/60 VDC VOLTAGE OUTPUT TEST		
	TEST ENGINE SPEED	VOLTAGE
	Pull start (engine not running)	At least 30 Vdc

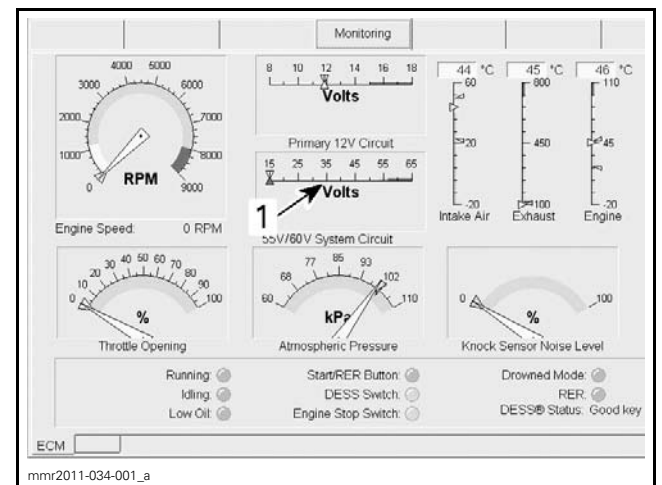

1. 55 V/60 V System circuit

If you cannot obtain the specified voltage, refer to *TROUBLESHOOTING* in this subsection and carry out the required tests.


Also carry out the *VOLTAGE REGULATOR/RECTIFIER GROUND CIRCUIT TEST* in this subsection.

Subsection XX (CHARGING SYSTEM)

Electric Start Models

1. Connect the following tools to the vehicle before connecting it to the applicable B.U.D.S. software version. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
 - POWER INTERFACE (P/N 515 177 223)
 - 12 V BATTERY SUPPLY CABLE (P/N 529 035 997)
 - 12 volts battery.
2. In B.U.D.S., select **Read Data**.
3. Select the **Monitoring** tab.
4. At the bottom of the monitoring page, select the **ECM** tab.
5. Crank the engine over by pressing and holding the START/RER button for a few seconds.
6. Read the voltage on the **55 V/60 V System Circuit** meter in B.U.D.S. as the engine is being cranked.

NOTICE Do not hold the START/RER button more than 10 seconds. A rest period should be observed between the cranking cycles to let the starter cool down. Holding the START/RER button for extended periods could overheat and permanently damage the starter.

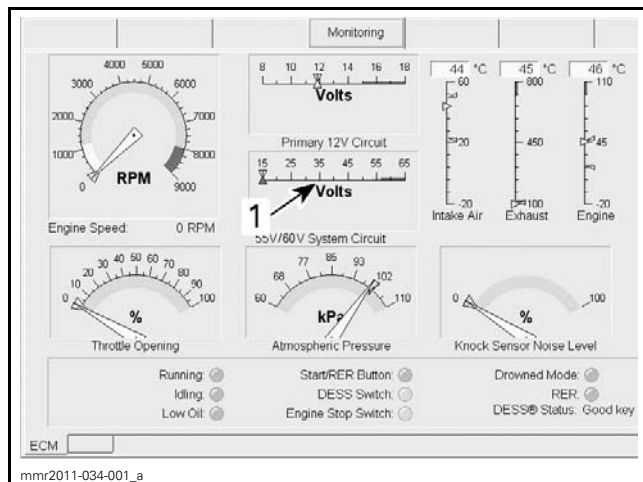

1. 55 V/60 V System circuit


7. Refer to the *55/60 VDC VOLTAGE OUTPUT TEST* table in the previous *MANUAL START MODELS* for specifications.

Procedure With Engine Running (All Models)

1. Connect vehicle to the applicable B.U.D.S. software version, refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. Start engine.
3. In B.U.D.S., select **Read Data**.
4. Select the **Monitoring** tab.

5. At the bottom of the **Monitoring** page, select the **ECM** tab.
6. Read the voltage on the **55 V/60 V System Circuit** meter in B.U.D.S.

55/60 VDC VOLTAGE OUTPUT TEST (ENGINE RUNNING)		
MODEL	TEST ENGINE SPEED	VOLTAGE
600 HO E-TEC	Any RPM from idle and above	55 Vdc \pm 2
800R E-TEC		60 Vdc \pm 2

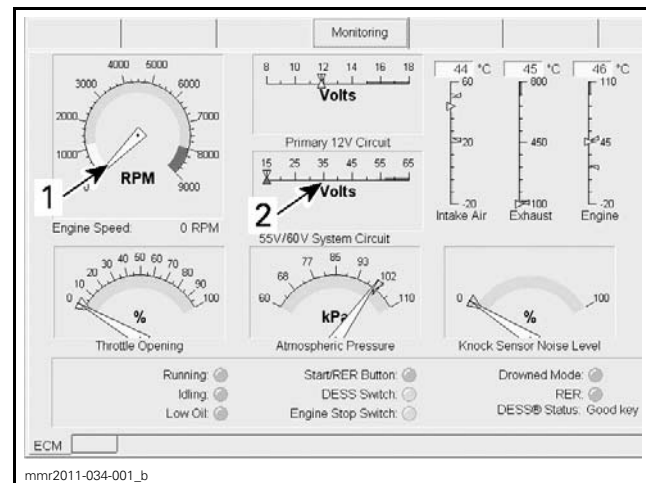

1. RPM indication
2. 55 V/60 V System circuit indication


If voltage is below or above specification, refer to *TROUBLESHOOTING* in this subsection and carry out the required tests.

Also carry out the *VOLTAGE REGULATOR/RECTIFIER GROUND CIRCUIT TEST*.

Ground Circuit Test (Voltage Regulator/Rectifier)

1. Disconnect the ECM J2 connector.
2. Test ground circuit continuity as follows.

VOLTAGE REGULATOR/RECTIFIER GROUND CIRCUIT TEST	
ECM J2 CONNECTOR	Chassis ground
Pin 5	
Pin 7	
Pin 8	

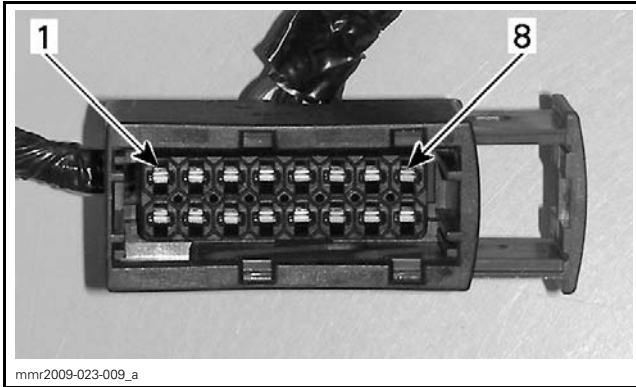

ECM J2 PIN-OUT

DC-DC CONVERTER

Description

The DC-DC converter is integrated within the ECM. It receives 55/60 Vdc from the voltage regulator/rectifier which, it steps down to 12 Vdc. This 12 Vdc power is then split into two separate circuits, a primary and a secondary 12 Vdc output.

Primary 12 Vdc Output

From approximately 800 RPM and 50/55 V from the voltage regulator, the primary 12 Vdc output provides power to the following:

- Multifunction gauge and heaters
- 3D RAVE valve solenoid
- THCM (Thermocouple module on 800R E-TEC)
- Lighting system.
- Visor heater
- Auxiliary lights
- Communication connector

NOTE: If the 12 Vdc outputs failed, the engine would still run on the 55/60 Vdc supply voltage.

Secondary 12 Vdc Output

The secondary 12 Vdc output provides power to the following components when the engine reaches approximately 1000 RPM.

- Clock in multifunction gauge (high end multifunction gauge)
- Start/RER switch
- Battery

NOTE: If the 12 Vdc outputs failed, the engine would still run on the 55/60 Vdc supply voltage.

12 Vdc Output Voltage Tests (DC-DC Converter)


12 VDC OUTPUT VOLTAGE	
OUTPUT	ECM CONNECTOR AND PIN
Primary 12 Vdc	J2 pins 15 and 16
Secondary 12 Vdc	J2 pins 6 and 14

Since ECM connector J2 is not easily accessible. To carry out 12 Vdc output tests, carry out the following procedures.

Primary 12 Vdc Circuit Test with B.U.D.S.

1. Remove RH side panel, refer to *BODY* subsection.
2. Use the applicable B.U.D.S. software version available from BOSSWeb. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
3. Start engine.
4. In B.U.D.S., select **Read Data**.
5. Select the **Monitoring** tab.
6. At the bottom of the **Monitoring** page, select the **ECM** tab.
7. Read the voltage on the **Primary 12 V Circuit** meter in B.U.D.S.

PRIMARY 12 VDC CIRCUIT TEST WITH B.U.D.S.	
TEST ENGINE SPEED	VOLTAGE
Any RPM from idle and above	14.75 ± 0.5 Vdc

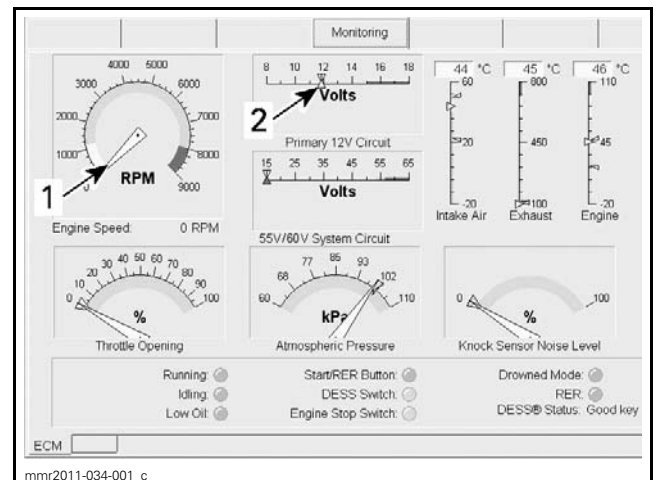

1. RPM indication
2. Primary 12 V circuit indication (battery)

Subsection XX (CHARGING SYSTEM)

If voltage is above specification, replace ECM.

If voltage is below specification, check the *PRI-MARY 12 VDC CIRCUIT TEST WITH B.U.D.S.*

Also carry out the *VOLTAGE REGULATOR/RECTIFIER GROUND CIRCUIT TEST* in this subsection.

Install all removed parts and connectors.


Secondary 12 Vdc Circuit Test

The secondary 12 Vdc system is not monitored in B.U.D.S.

To test it, carry out the following procedure.

1. Remove RH side panel to expose the fuse(s). Refer to *BODY*.
2. Set FLUKE 115 MULTIMETER (P/N 529 035 868) to Vdc scale.
3. Start the engine.
4. To measure the voltage, probe the battery charging fuse holder (FA) as follows.

FA FUSE HOLDER	
RED TEST PROBE	BLACK TEST PROBE
Terminal A (RD/WH wire)	Chassis ground

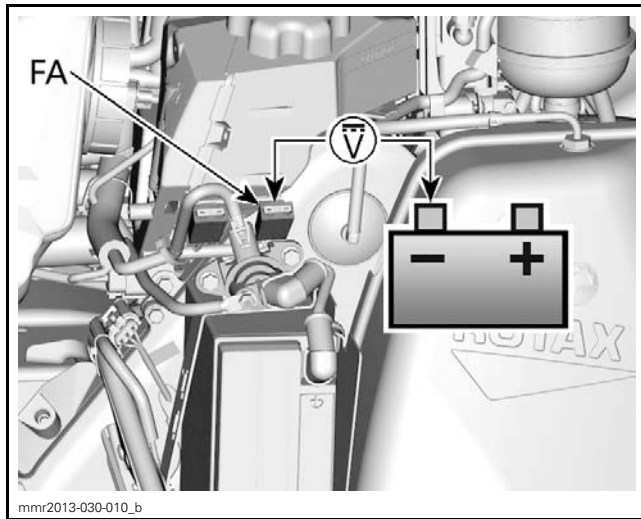

FA: BATTERY CHARGING FUSE HOLDER

SECONDARY 12 VDC CIRCUIT TEST	
TEST ENGINE SPEED	VOLTAGE
Any RPM from idle and above	14.75 ± 0.5 Vdc

If voltage cannot be measured, test continuity of wire from FA fuse holder to pins 6 and 14 of ECM J2 connector.

If the wire continuity is good and other voltages from ECM tested good, ECM may not output secondary 12 Vdc.

Carry out the *VOLTAGE REGULATOR/RECTIFIER GROUND CIRCUIT TEST*. If the ground circuit tests good, the ECM will need to be replaced.

NOTE: Before replacing ECM, all ECM grounds, power output circuits, and input circuits from the magneto must be tested.

Repair or replace as applicable.

CAPACITOR

The fuel injectors, which require a stable 55/60 Vdc for their operation, are particularly sensitive to voltage variations. A capacitor is connected to the 55/60 Vdc electrical system to stabilize the system voltage.

The capacitor is located on the RH side of the vehicle, just on top of oil injection reservoir.



CAPACITOR LOCATION

Quick Troubleshooting

A faulty capacitor will lead to the following symptoms:

- Unstable, low, or no system voltage (55/60 V).
- Engine will not start
- Engine hard to start
- Poor idling
- Engine misfiring.

NOTE: A defective capacitor is likely to give off a burn like odor.

Discharging Capacitor

⚠ WARNING

The capacitor remains charged approximately 10 seconds after engine is stopped. A high energy could suddenly be discharged if capacitor terminals were shorted. Always discharge capacitor before servicing.

To properly discharge capacitor, leave it connected for at least 10 seconds after engine has been stopped, or after engine was last cranked before carrying out any maintenance procedure on the capacitor or 55/60 volt electrical system.

Capacitor Charge Hold Test


Procedure Setup

1. Remove capacitor from vehicle. Refer to *CAPACITOR REMOVAL* in this subsection
2. Work on a non metallic workbench.
3. Connect the following items to the capacitor. See following illustration.
 - A switch
 - Resistor (300 Ω /5 W)
 - 12 V battery (fully charged).

NOTICE Ensure the test switch is in the OFF position when connecting the battery to the capacitor to prevent sparking or electrical shock.

⚠ WARNING

Connect the battery POSITIVE post to the capacitor POSITIVE terminal.

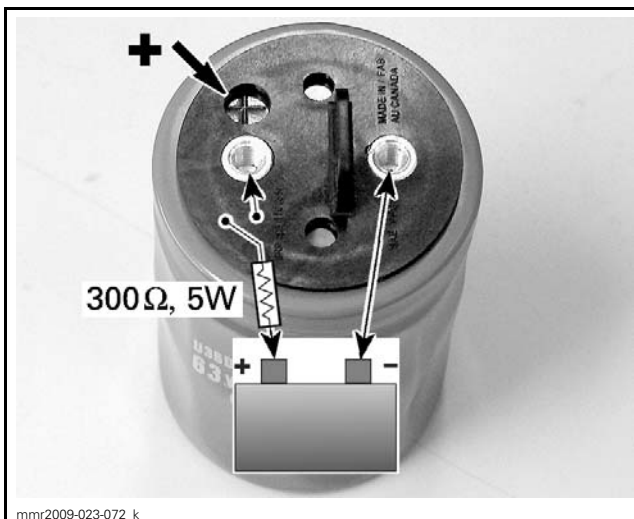


mmr2009-023-072_k

SWITCH AT OFF

Test Procedure


1. Turn switch to ON and read capacitor voltage. Wait until voltage reaches 12 V.

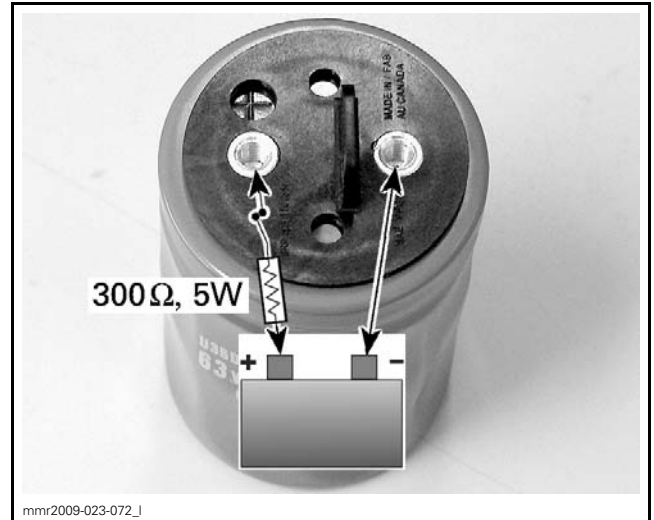

mmr2009-023-072_j

SWITCH AT ON

2. Turn test switch to OFF.
3. Use the FLUKE 115 MULTIMETER (P/N 529 035 868) set to Vdc.
4. Read capacitor voltage.

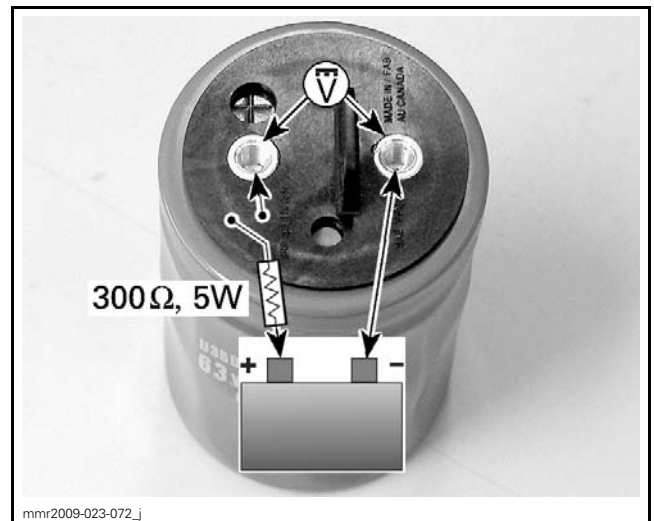


mmr2009-023-072_j

SWITCH AT OFF

5. Wait 5 minutes.
6. Read capacitor voltage again.

Subsection XX (CHARGING SYSTEM)

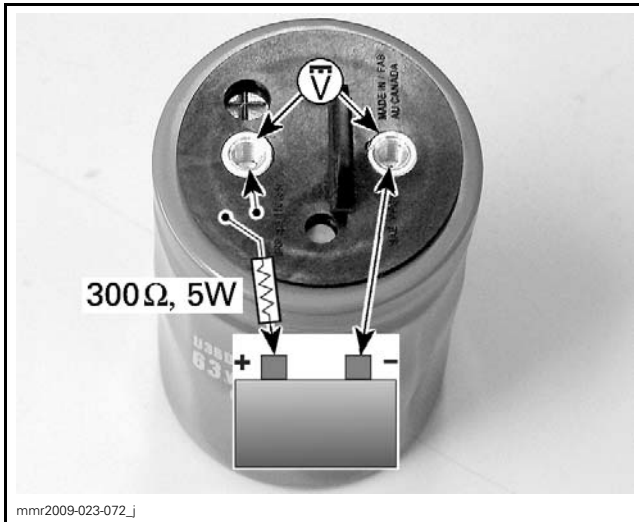

SWITCH AT OFF

7. The difference between the readings should not exceed the specification.

ALLOWED VOLTAGE DIFFERENCE BETWEEN READINGS
0.5 Vdc

If readings are out of specification, replace capacitor.

Reinstall capacitor. Refer to *CAPACITOR INSTALLATION* in this subsection.


Capacitor Residual Voltage Test

Procedure Setup

Follow the same steps as described in Procedure Setup of *CAPACITOR CHARGE HOLD TEST* above.

Test Procedure

1. Turn switch to **ON** and read capacitor voltage. Wait until voltage reaches 12 V to ensure the capacitor is fully charged.

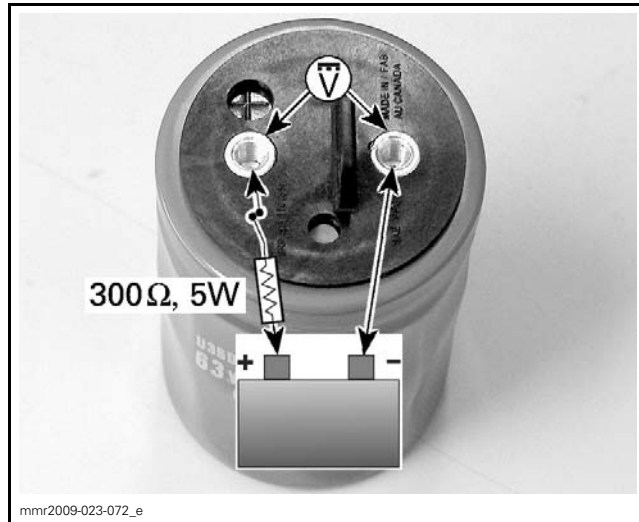


2. Turn test switch to **OFF**.

NOTE: Carry out the following steps **within one minute** to ensure the capacitor does not begin to discharge before the test.

3. Remove battery from circuit and connect the resistor and switch across capacitor terminals.

NOTICE Ensure test switch is in the **OFF** position during the circuit configuration change.

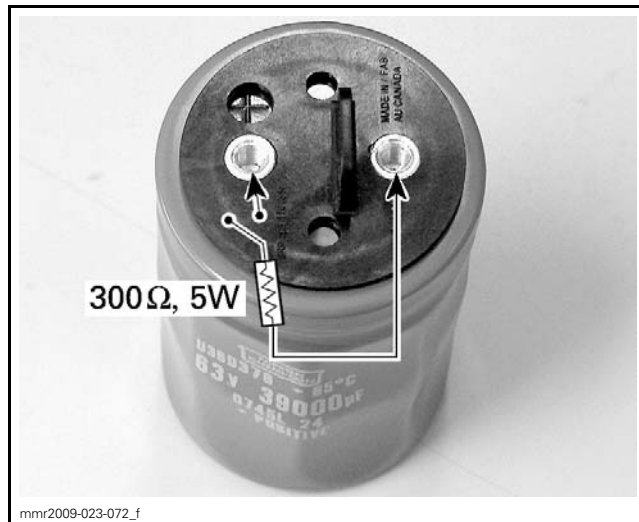

SWITCH AT OFF

4. Turn test switch to the **ON** position for 12 seconds \pm 1 second to slowly discharge capacitor.
5. Read capacitor voltage.



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com



mmr2009-023-072_g

SWITCH AT ON

CAPACITOR RESIDUAL VOLTAGE
Must be above 2.6 Vdc

If voltage is out of specification, replace capacitor.

Capacitor Removal

1. Disconnect magneto connector.

⚠ WARNING

Disconnect the magneto connector. Should the engine be made to rotate with magneto connected, a spark may occur resulting in electrical shock, a fire or an explosion.

2. Ensure capacitor remained connected for at least 10 seconds after engine shut down, or after engine was last cranked. This ensures capacitor is fully discharged.
3. Remove upper body module. Refer to *BODY* subsection.
4. Release fuel hose from oil injection tank clip.
5. Unlock ECM support and slide toward right.



mmr2013-029-001_b

6. Move ECM support away from capacitor as much as possible.
7. Carefully remove terminal screws from capacitor.



mmr2013-029-002_a

8. Pull out capacitor toward rear.

⚠ WARNING

Do not remove plastic protector from top of capacitor unless the capacitor is to be replaced. The cover prevents the two capacitor contacts from being easily shorted together which may cause a spark, possibly resulting in a fire.

9. Check inspection hole on top of capacitor.


Subsection XX (CHARGING SYSTEM)



INSPECTION HOLE (SHIELD IS INTACT)

If the top shield is open (pierced), replace capacitor.

NOTE: The following illustration shows a perforated shield with capacitor fluid leakage. This capacitor was connected in reverse polarity.

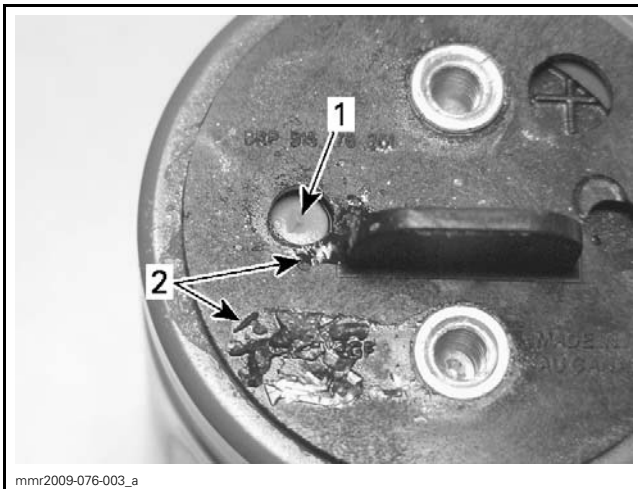

1. Perforated shield
2. Capacitor fluid leakage

Capacitor Installation


1. If capacitor was replaced, install a plastic protector cap on new capacitor.

NOTE: When reinstalling plastic protector, ensure the + sign on top of capacitor is visible through the hole in protector. Otherwise, pull off protector, rotate it one half turn, then reinstall it.



2. Route capacitor wires as per illustration and connect wire terminals to capacitor. Connect the WH/RD wire to the + terminal.

NOTICE Improper polarity could destroy the capacitor while in operation.

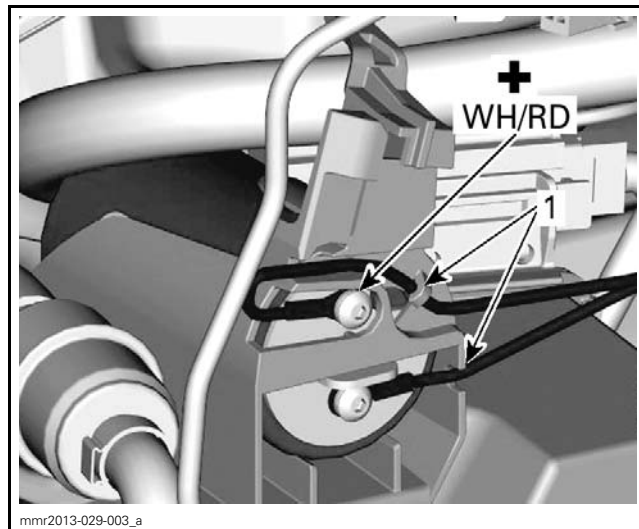


1. Wires secured in clips

NOTICE Be careful not to damage threads when tightening capacitor screws.

3. Torque screws to 2 N•m (18 lbf•in).
4. Complete assembly of remaining parts in the reverse order of removal.

BATTERY

Electric start models are equipped with a sealed valve regulated lead acid (VRLA) battery. It is a non-spillable, maintenance-reduced type (no electrolyte level to be checked and readjusted). No ventilation tube is attached to the battery.

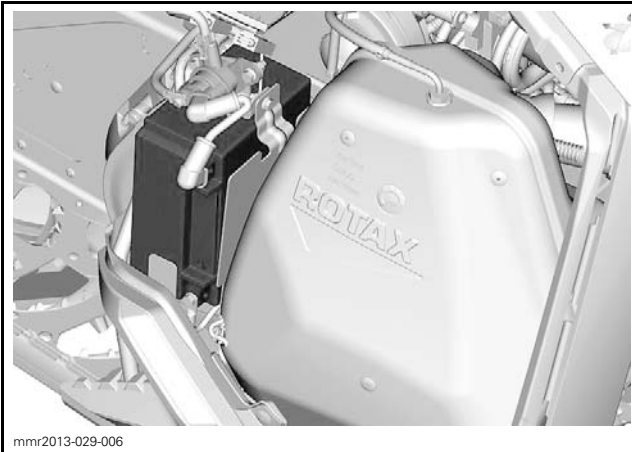


Battery Testing

Battery Voltmeter Test (No Load Applied)

NOTE: An unloaded voltmeter test is carried out on a battery without discharging current. It is the simplest and most commonly used. However, be aware that a voltage test can indicate that the battery is in good condition even though the battery does not have enough power to crank the engine. A voltage reading provides an instant indication of the state of charge of the battery, not of its current storage capacity. A battery load test gives a more accurate indication of the battery condition.

If the battery has just received a charge, allow it to rest for 1 - 2 hours before taking a voltage reading.

Set multimeter to Vdc and connect to battery terminals. Always respect polarity.

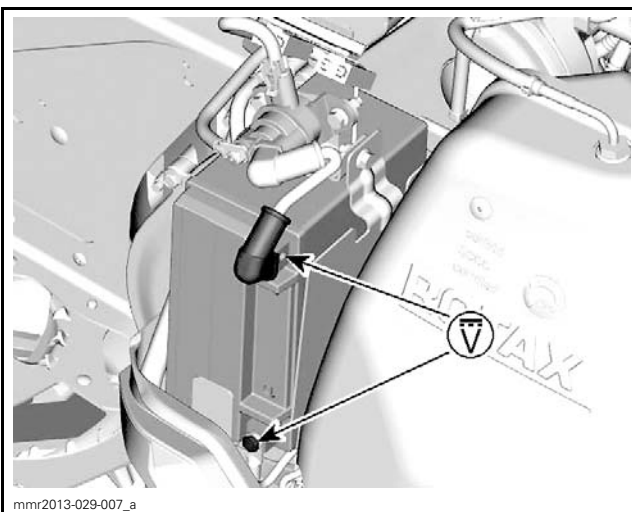

Batteries with a voltage above 12.8 V do not need to be charged.

Batteries with a voltage of 12.8 V and below need to be charged. Refer to *BATTERY CHARGING* in this subsection.

Battery Testing (Load Applied)

This is the best test used to determine the battery condition.

Using a load testing device such as the NAPA ULTRA PRO BATTERY LOAD TESTER (P/N 95260), test the storage capacity of the battery. It has a 500 A carbon pile adjustable load.

The battery should be fully charged before testing.

If battery has just been recharged, allow battery to rest for at least one hour.

Follow battery load tester instructions.


If battery voltage has dropped below 10 Vdc (or voltage indicated on battery temperature compensation chart), battery storage capacity has decreased appreciably and should be replaced.

Battery Removal

⚠ WARNING

The **BLACK (-)** battery cable must always be disconnected first and reconnected last. Never charge or boost a battery while installed on vehicle.



1. Open RH side panel.
2. Disconnect BLACK (-) cable terminal from the negative battery post.
3. Slide the RED rubber protector off the (+) cable terminal and disconnect it from the battery post.

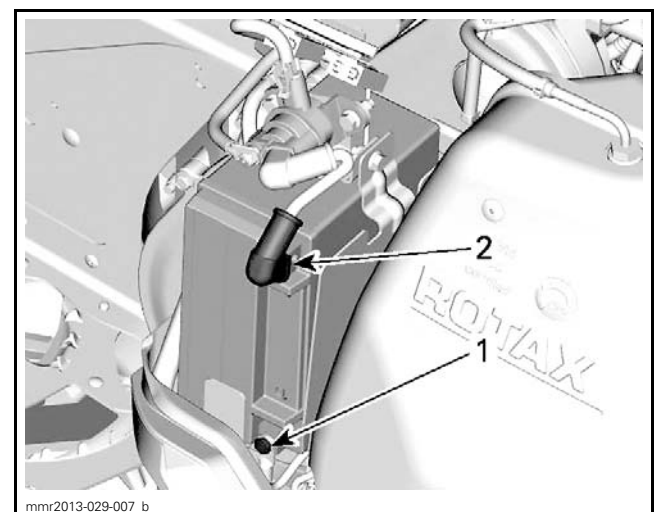

1. Negative post
2. RED rubber protector on positive post

4. Remove the battery retaining plate bolts.

Subsection XX (CHARGING SYSTEM)

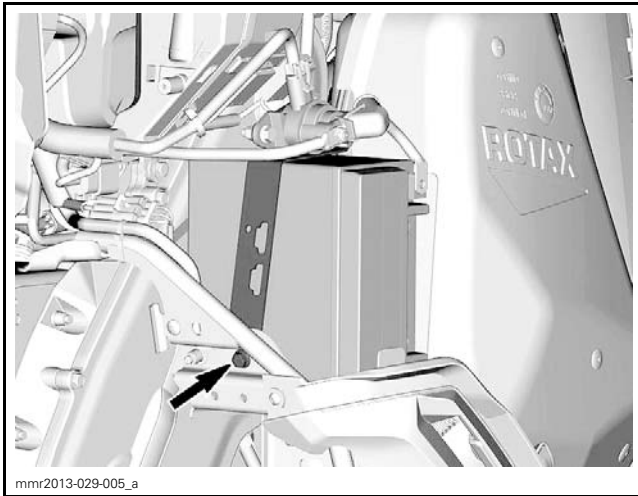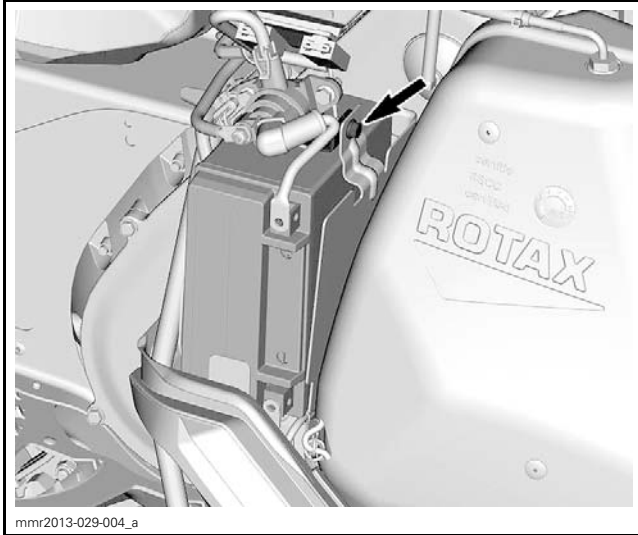

5. Remove battery.

NOTICE Should any electrolyte spillage occur, immediately wash off with a solution of baking soda and water to prevent damage to vehicle components.

Battery Cleaning

Clean the battery, battery casing, cables and battery posts using a solution of baking soda and water.

Remove corrosion from battery cable terminals and battery posts using a firm wire brush. Battery top should be cleaned with a soft brush and any grease-cutting soap or baking soda solution.

Battery Inspection

Visually inspect battery casing for cracks, leaks or other possible damage.

Discoloration, warping or raised top, indicates that the battery has overheated or been overcharged.

If the casing is damaged, replace battery and thoroughly clean battery tray and surrounding area with a water and baking soda solution.

⚠ WARNING

Should the battery casing be damaged, wear a suitable pair of non-absorbent gloves when removing the battery by hand.

Inspect the battery posts for security of mounting.

Battery Storage

NOTICE A discharged battery will freeze and may damage its casing. A damaged casing will allow electrolyte spillage that may damage surrounding parts.

1. Disconnect and remove battery from the vehicle.
2. Clean battery terminals and cable connections using a wire brush. Apply a light coat of DIELECTRIC GREASE (P/N 293 550 004) or petroleum jelly on terminals.
3. Clean battery casing using a solution of baking soda and water. Rinse battery with clear water and dry thoroughly using a clean cloth.

NOTE: The battery must always be stored in fully a charged state.

4. Charge the battery every month if stored at a temperature **below** 15°C (59°F).
5. Charge the battery every two week if stored at a temperature **above** 15°C (59°F).

NEW Battery Activation

Refer to the instructions provided with the battery.

Battery Charging

⚠ WARNING

Always wear safety glasses and charge the battery in a ventilated area. Never charge or boost a battery while installed on a vehicle. Do not open the sealed caps during charging. Do not place battery near an open flame.

NOTICE If the battery becomes hot to the touch, stop charging and allow it to cool before continuing.

NOTE: Sealed VRLA batteries have an internal safety valve. If battery pressure increases due to overcharging, the valve opens to release excess pressure, preventing battery damage.

Carry out a battery *UNLOADED VOLTMETER TEST* as described in this subsection, then proceed as described here.

An automatic charger is the fastest and most convenient way for error-proof charging.

When using a constant current charger, charge battery according to the chart below.

Battery Voltage Below 12.8 V and Above 11.5 V

STANDARD CHARGING (RECOMMENDED)		
BATTERY TYPE	TIME	CHARGE
YTX20HL-PW	4 - 9 hours	2 A

QUICK CHARGING		
BATTERY TYPE	TIME	CHARGE
YTX20HL-PW	50 minutes	10 A

Battery Voltage Below 11.5 V

A battery with a voltage below 11.5 V requires a special procedure to recharge. In charging an over discharged battery, its internal resistance may be too high to charge at a normal charging rate.

Set charger to the 10 A charging rate and monitor charging current for approximately 30 minutes. If there is no change in charging current or battery becomes abnormally hot, the battery is most likely at the end of its service life and should be replaced.

Battery Installation

Reinstall battery and secure properly.

Connect **RED (+) cable FIRST** to positive battery terminal.

Connect **BLACK (-) cable LAST**.

⚠ WARNING
Battery BLACK (-) cable must always be disconnected first and reconnected last.


Cover the RED (+) cable terminal with the protective rubber boot.

Apply DIELECTRIC GREASE (P/N 293 550 004) on battery posts and connectors.

STARTING SYSTEM

SERVICE PRODUCTS

Description	Part Number	Page
SUSPENSION GREASE.....	293 550 033	8, 10

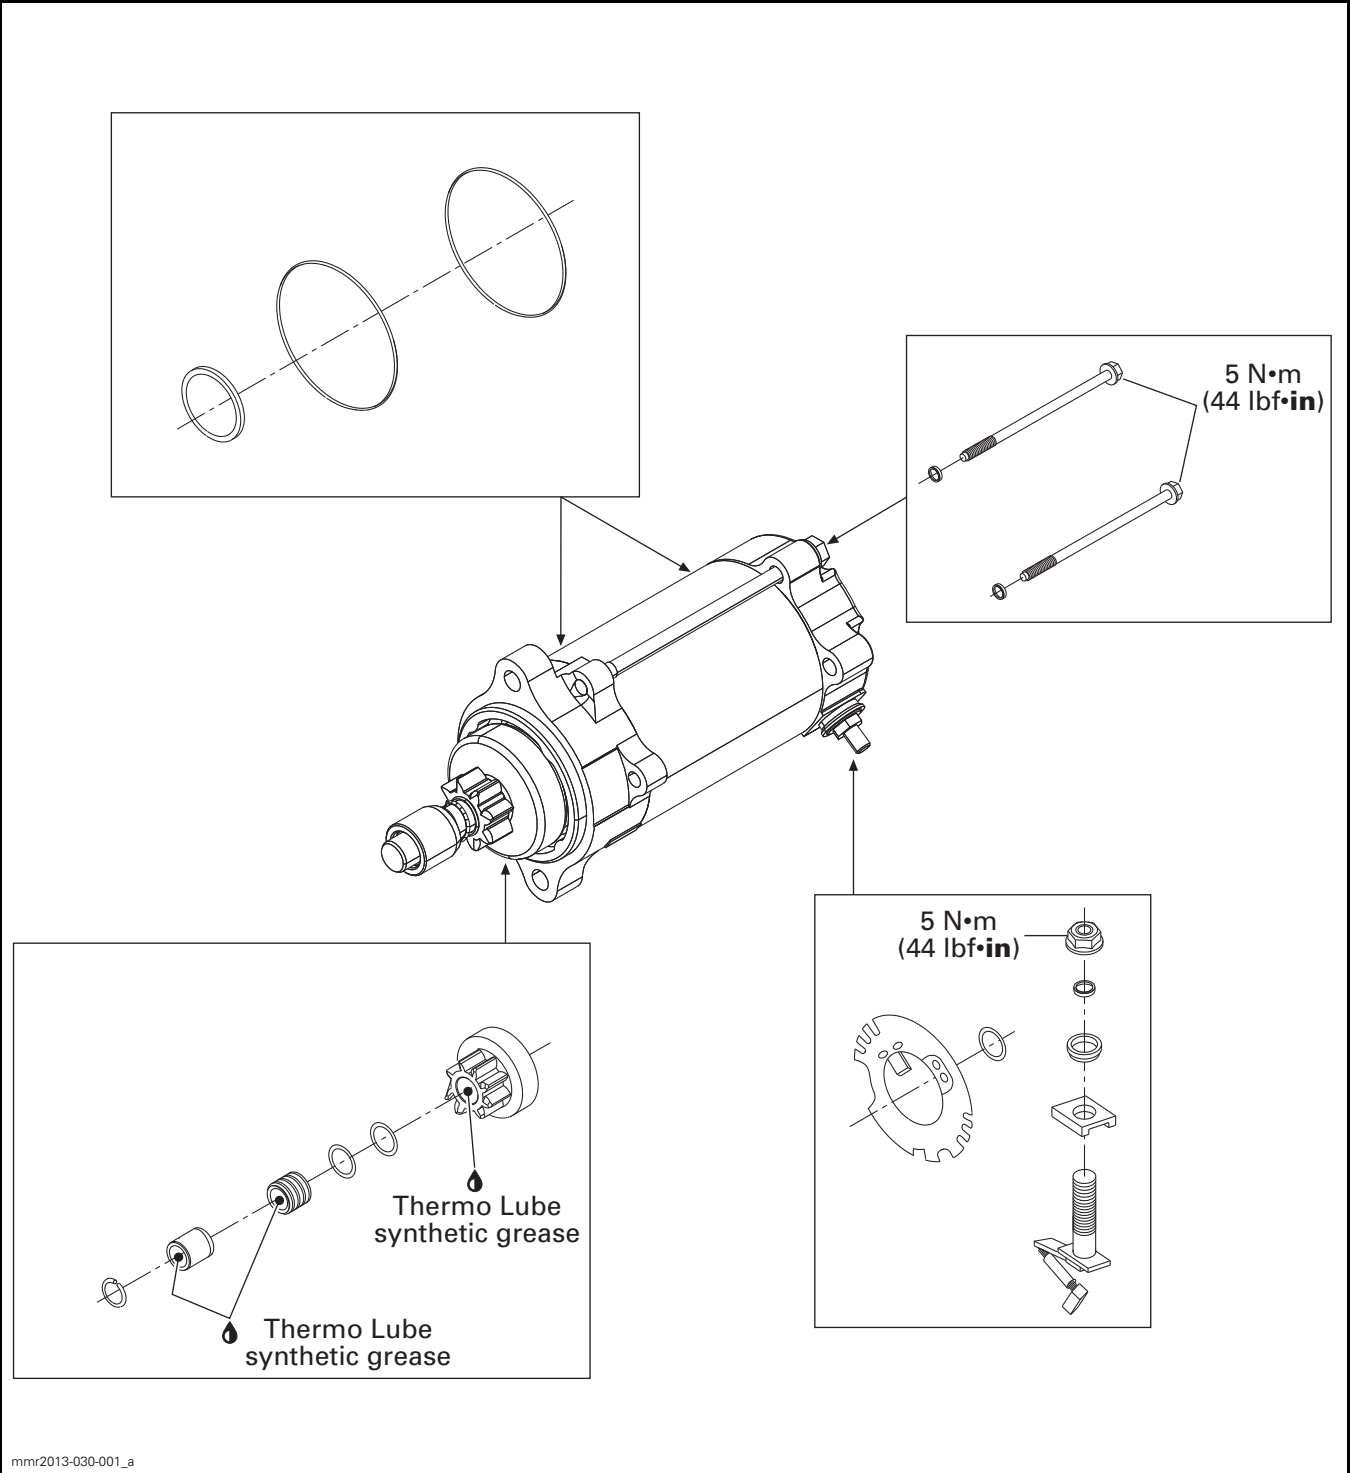

GENERAL

STARTING SYSTEM BASICS

Conditions for Engine Cranking

- Emergency engine stop switch set to RUN
- Tether cord cap installed
- START/RER button depressed.

Starting System Operation

1. The START/RER switch:
 - 1.1 Supplies starter solenoid
 - 1.2 Sends a 12-volt signal to the ECM
2. ECM grounds starter solenoid pin 2.
3. Starter solenoid contacts close and supply the starter motor with battery power.

In case of starter malfunction, first ensure the problem is not related to an engine mechanical component.

TROUBLESHOOTING

TROUBLESHOOTING TIPS

It is good practice to check for fault codes using B.U.D.S. as a first troubleshooting step. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.

Refer to *POWER DISTRIBUTION AND GROUNDS* for relay information.

Always refer to the *WIRING DIAGRAM* when troubleshooting an electrical circuit.

NOTICE Never force a multimeter probe into an electrical terminal.

PROCEDURES


FUSES

Fuse Inspection

Fuses are located behind the RH side panel above battery.

Check Start/RER (FB) fuse condition and replace as necessary.

NOTE: When a burnt fuse is found, always identify the cause before replacing it.

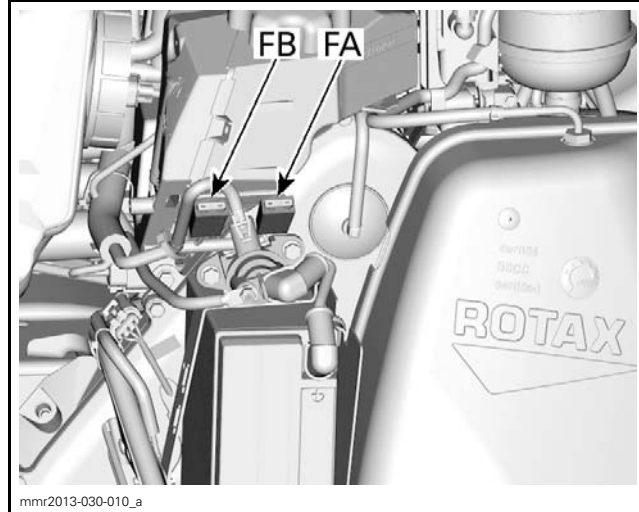

1. FA: Battery charging fuse
2. FB: START/RER fuse

ELECTRIC STARTER

Starter Operation Test

1. Apply parking brake.
2. Disconnect injector connectors to prevent engine from starting.
3. Crank engine.
4. The starter should rotate powerfully and regularly.
5. If it does not, try the following:
 - 5.1 Set emergency engine stop switch to STOP.
 - 5.2 Remove tether cord cap from the engine cut-off switch.
 - 5.3 Manually rotate the engine using the drive pulley.
 - 5.4 If the engine cannot be rotated, check engine.

⚠ WARNING

When manually rotating engine, the emergency engine stop switch **MUST BE** set to **STOP** and tether cord cap **MUST NOT** be installed or severe injury may occur.

- 5.5 If the engine can be rotated, carry out a *STARTER INPUT VOLTAGE TEST*.


Starter Input Voltage Test

1. Set multimeter to Vdc.
2. Disconnect injector connectors to prevent engine from starting.

3. Measure voltage as per table while cranking engine.

NOTE: Battery voltage will drop and fluctuate with starter cranking load.

STARTER INPUT VOLTAGE TEST		
TEST PROBES		RESULT (WHILE PRESSING START/RER BUTTON)
Starter terminal	Battery negative post	Battery voltage

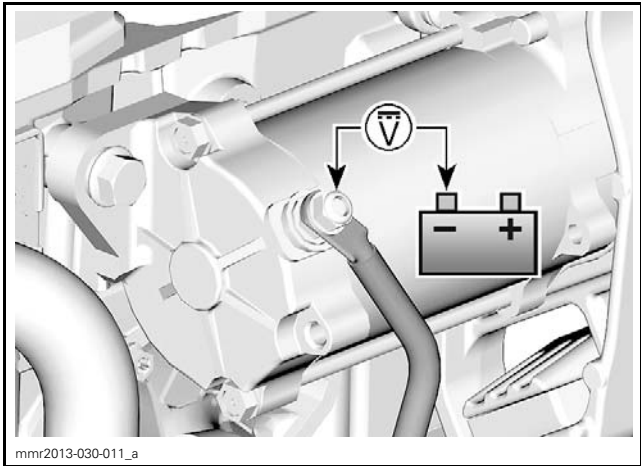


TEST RESULTS	
READING	WHAT TO DO
No voltage	Check Start/RER switch using B.U.D.S.
Voltage is low	Carry out a <i>STARTER CABLE VOLTAGE DROP TEST</i> .
Voltage is good	Carry out a <i>GROUND CIRCUIT VOLTAGE DROP TEST</i> .

Starter Cable Voltage Drop Test

This test confirms if there is parasitic resistance in the cable, solenoid or connections.

1. Set multimeter to Vdc.
2. Connect multimeter probes to the starter terminal and battery positive post.
3. Disconnect injector connectors to prevent engine from starting.
4. Measure voltage drop as follows while cranking engine.


STARTER CABLE VOLTAGE DROP TEST		
PROBES		RESULT (WHILE STARTING)
Battery positive post	Starter terminal	1 Vdc maximum

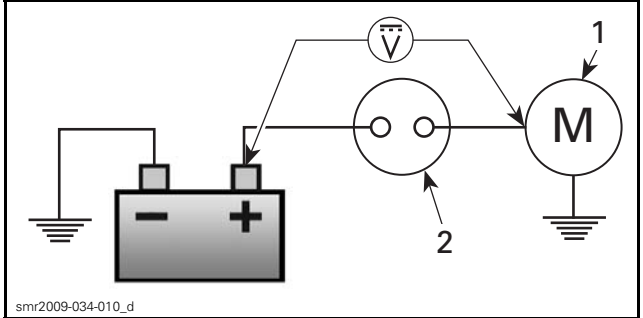

1. Starter
2. Solenoid


5. If voltage exceeds the specification, test voltage drop between the following points using the same method to determine what part of the circuit is at fault:

5.1 Battery positive post and starter solenoid post (cable from battery).

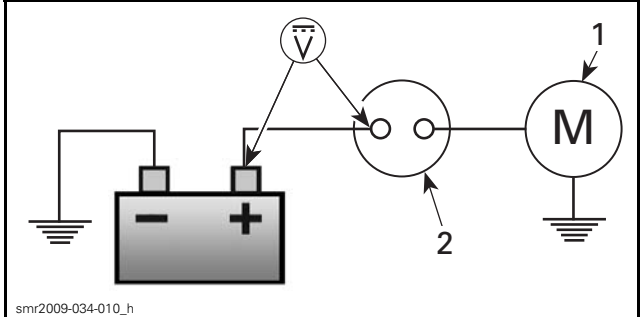


1. Starter
2. Solenoid

5.2 Both starter solenoid posts.

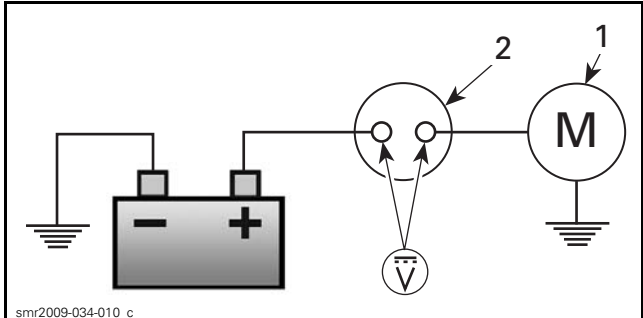

5.3 Starter solenoid post (to starter) and starter terminal.

Subsection XX (STARTING SYSTEM)

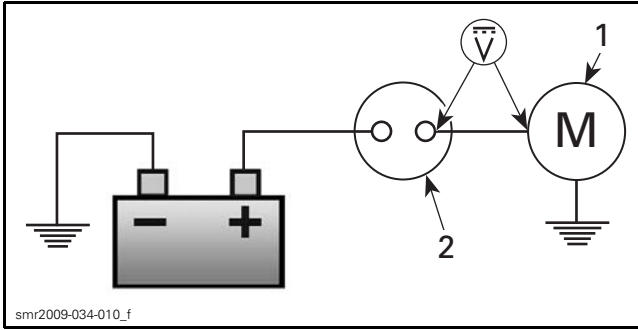

1. Starter
2. Solenoid


5.4 Replace cable(s) or solenoid if necessary.

Starter Ground Circuit Voltage Drop Test

This test confirms if there is parasitic resistance in the ground cables or connections.

1. Set multimeter to Vdc.
2. Connect multimeter probes to the starter housing and battery negative post.
3. Disconnect injector connectors to prevent engine from starting.
4. Measure voltage drop as follows while cranking engine.


STARTER GROUND CIRCUIT VOLTAGE DROP TEST		
PROBES		RESULT (WHILE STARTING)
Starter housing	Battery negative post	0.8 Vdc maximum

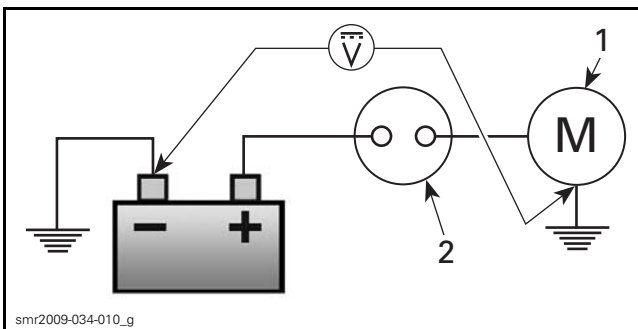

1. Starter
2. Solenoid


If voltage exceeds the specification, check ground cables and connections:

- from battery to chassis
- from engine support to chassis

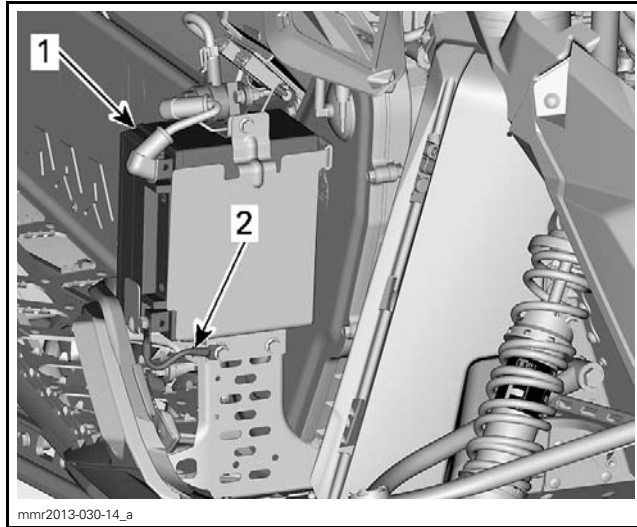

RH SIDE, VIEWED FROM FRONT

1. Battery
2. Battery ground

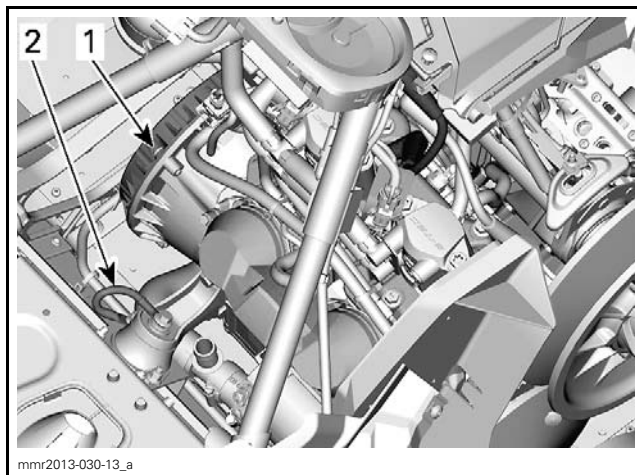

LH SIDE, VIEWED FROM FRONT


1. Rewind starter
2. Engine ground

If voltage is as per specification, test starter.

START/RER SWITCH

Start/RER Switch Test with B.U.D.S.

1. Connect the vehicle diagnostic connector to a computer with the appropriate version of the B.U.D.S. software. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. Select the **Read Data** button.
3. Select the **Monitoring** and **ECM** tabs.
4. Set emergency engine stop switch to RUN and install tether cord cap on engine cut-off switch.
5. Press the start/RER button and look at the **Start/RER Button** indicator.

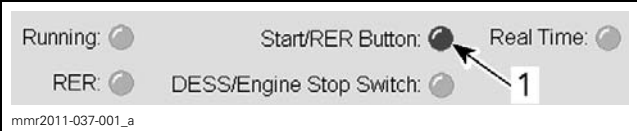

1. Should turn ON


TEST RESULTS	
START/RER BUTTON INDICATOR IN B.U.D.S.	WHAT TO DO
Comes ON while start/RER button is pressed in	The starting system input side is functioning normally (start button, ECM, wiring and connections). Make sure engine stop switch tests good (see <i>IGNITION SYSTEM</i> subsection), then proceed with <i>STARTER SOLENOID TESTS</i> .
Does not come ON while start/RER button is pressed in	Check for an open circuit or defective start/RER switch. Refer to <i>WIRING DIAGRAM</i> .

STARTER SOLENOID

Starter Solenoid Input Voltage Test

1. Disconnect connector from solenoid and test voltage as follows.
2. Set emergency engine stop switch to RUN and install tether cord cap on engine cut-off switch.
3. Read voltage while start/RER button is pressed in.

STARTER SOLENOID INPUT VOLTAGE TEST		
TEST PROBES		RESULT (WHILE PRESSING START/RER BUTTON)
Terminal "A" (RD/GN)	Battery negative post	Battery voltage

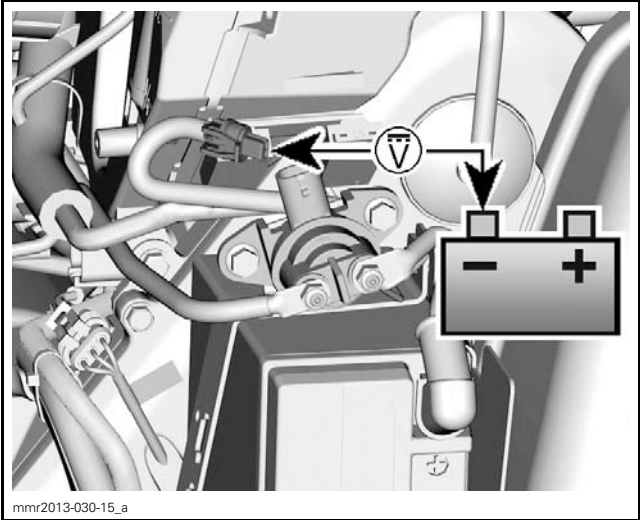


If there is no voltage, check for an open circuit. If voltage is as specified, carry out a *STARTER SOLENOID CONTROL CIRCUIT TEST*.

Starter Solenoid Control Circuit Test

1. Disconnect connector from solenoid.
 2. Use a 12 Vdc test light and probe as per table.
- IMPORTANT:** Using a voltmeter could lead to false results.
3. Observe test light while start button is pressed in.

STARTER SOLENOID CONTROL CIRCUIT TEST		
TEST PROBES		RESULT (WHILE PRESSING START/RER BUTTON)
Terminal "B" (OG/BK)	Battery positive terminal	Test light should be bright

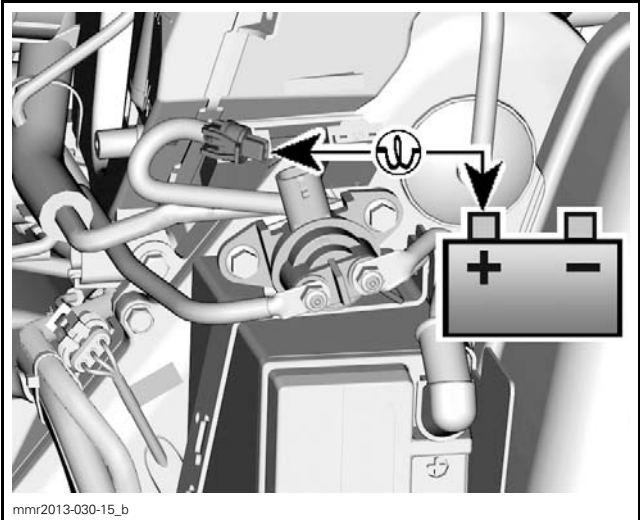

Subsection XX (STARTING SYSTEM)

If test light does not turn on or is dimmed while cranking, check for an open circuit.

If test light is bright, the solenoid gets a proper ground signal. Carry out a *STARTER SOLENOID STATIC TEST: CONTINUITY*.


Starter Solenoid Static Test: Continuity

Disconnect battery.

Disconnect connector from solenoid.

With a multimeter, measure the primary winding resistance as follows.

SOLENOID WINDING CONTINUITY TEST		
SOLENOID TERMINALS		MEASUREMENT
		RESISTANCE @ 20°C (68°F)
A	B	Approximately 5 Ω

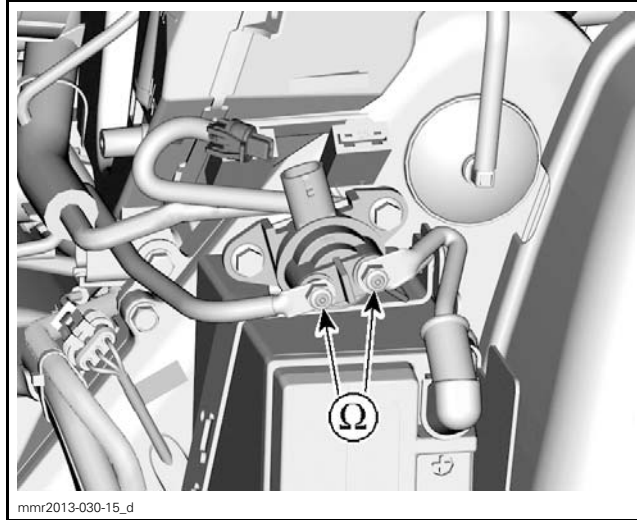

If any measurement is out of specification, replace solenoid.

Reconnect battery and starter solenoid terminals.

Starter Solenoid Removal

Disconnect the battery.

Remove the electrical connections from the starter solenoid.

Remove the two mounting screws.

Starter Solenoid Installation

Install the new solenoid in the reverse order of the removal procedure.

Carry out an engine start to validate that the new solenoid functions.

STARTER


Starter Removal

1. Remove tuned pipe. Refer to *EXHAUST SYSTEM* subsection.
2. Disconnect BLACK (-) cable from battery.
3. Disconnect RED (+) cable from battery.

⚠ WARNING


Always disconnect BLACK (-) cable first and reconnect last.

4. Remove drive belt and drive pulley. Refer to *ENGINE DRIVE SYSTEM* subsection.
5. Disconnect RED power cable from starter.

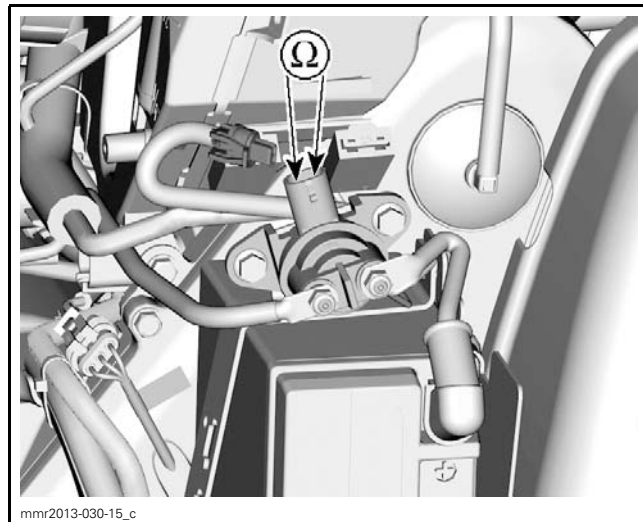

Test for a stuck solenoid plunger as follows.

SOLENOID CONTACTS CONTINUITY TEST		
SOLENOID CONNECTOR		MEASUREMENT
Battery terminal	Starter terminal	Open circuit

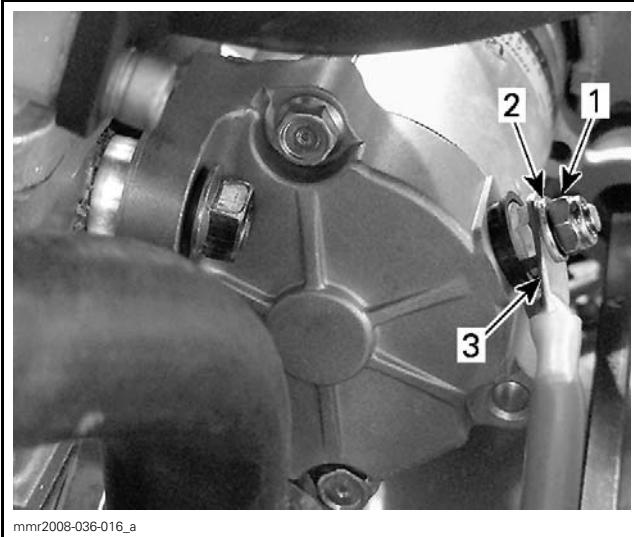


mmr2008-036-016_a

TYPICAL - STARTER POWER CABLE

- 1. Elastic nut
- 2. Washer
- 3. Power cable

6. Remove the LH front and rear engine mounting hex screws (PTO side). Discard the screws.

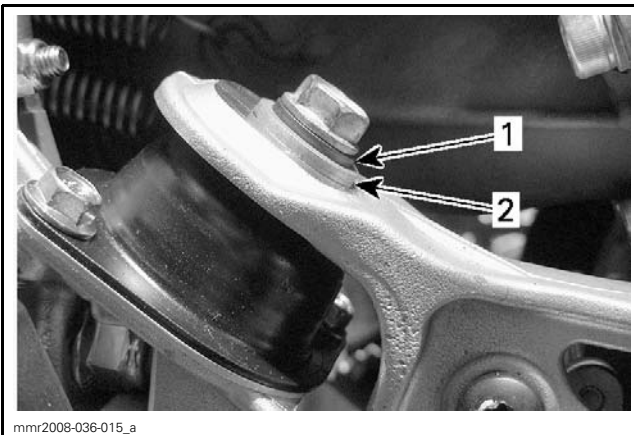


mmr2008-036-015_a

LH FRONT ENGINE MOUNT

- 1. Conical washer
- 2. Flat washer

7. Remove and discard the three bolts retaining the engine torque stopper support.

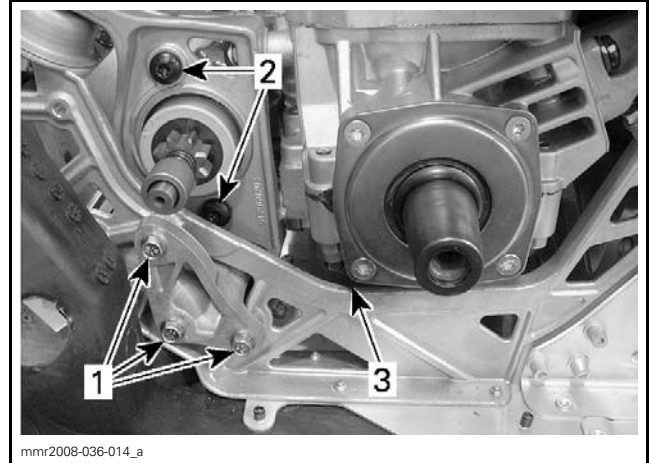

mmr2008-036-014_a

- 1. Screws, torque stopper support
- 2. Starter screws
- 3. Pry bar position


8. Insert a pry bar over the LH frame member and gently raise the engine just enough to access the lower mounting torx screw on the starter.

9. Remove and discard the lower mounting screw from the starter.

10. Remove the pry bar.

11. Remove and discard the upper mounting screw from the starter.

12. Remove and discard the RH starter mounting screw from the front of the engine.

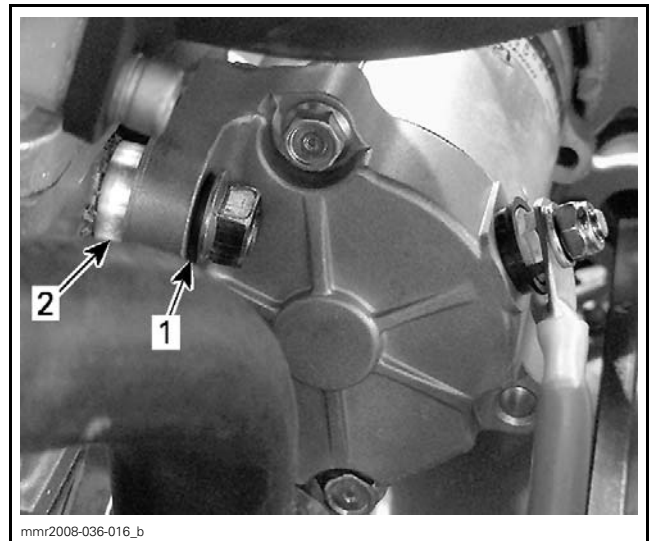

mmr2008-036-016_b

STARTER MOUNTING SCREW, RH


- 1. Washer under screw head
- 2. Washer spacer between starter and engine

Starter Disassembly

1. Refer to the exploded view in the beginning of this subsection.

2. Before disassembling, trace index marks on the starter housing and covers for parts alignment at reassembly.


Subsection XX (STARTING SYSTEM)

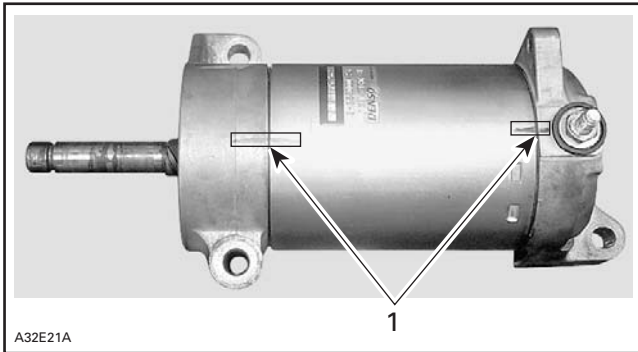

TYPICAL

1. Alignment index marks for reassembly

3. Remove starter through bolts.
4. Separate end cap from starter housing.
5. Withdraw armature from starter housing.
6. If necessary, remove brush holder from end cap.
7. Check for radial play between the armature shaft and end cap bearing. Replace the starter if radial play is detected.
8. If parts are in good condition, coat them with SUSPENSION GREASE (P/N 293 550 033) before reinstallation.
9. Push back the collar near the starter gear/clutch assembly using a screwdriver.
10. Remove snap ring, collar, and spring.

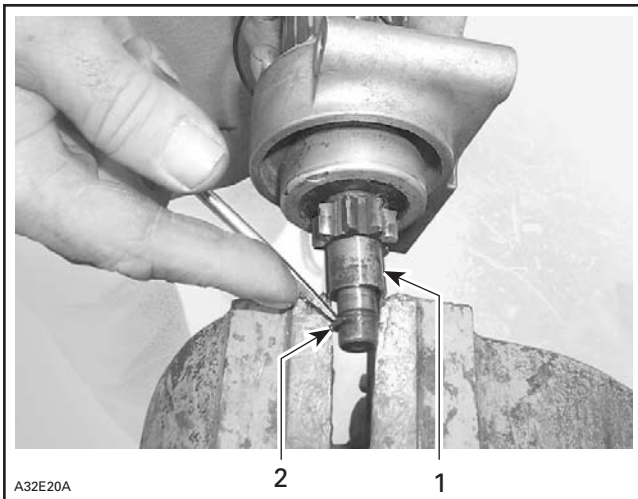

1. Collar
2. Snap ring

11. Turn starter clutch clockwise to remove it from the armature assembly.
12. Pull yoke from armature.

Starter Cleaning

NOTICE Yoke, drive unit (clutch assembly) and end cap must not be immersed in cleaning solvent.

1. Clean brushes and holders with a clean cloth impregnated with solvent. Brushes must be dried thoroughly with a clean cloth.
2. Blow brush holders clean using compressed air.

WARNING

Always wear safety glasses when using compressed air.


3. Remove dirt, oil or grease from commutator using a clean cloth soaked in suitable solvent. Dry well using a clean and dry cloth.
 4. Clean engine ring gear teeth and drive unit (clutch).
- NOTE:** Bushings or bearings must not be cleaned with grease dissolving agents.
5. Immerse all metal components in cleaning solution. Dry using a clean and dry cloth.

Starter Inspection

Armature

NOTE: An ohmmeter may be used for the following test procedures, except when testing for shorted windings in the armature.

1. Check the commutator for roughness, burnt or scored surface. If necessary, turn the commutator on a lathe, enough to remove grime only.
2. Check the commutator for mica depth. If the depth is less than 0.20 mm (.008 in), undercut the mica. Be sure that no burrs are left and no copper dust remains between the segments after the undercutting operation is completed.

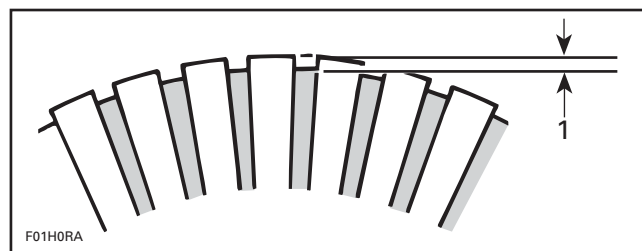


1. Commutator undercut 0.20 mm (.008 in)

3. Check the commutator out-of-round condition with V Blocks and an indicator. If the commutator out-of-round is more than 0.40 mm (.016 in), the commutator should be turned on a lathe.

4. Check commutator outer diameter for signs of excessive wear. Replace starter as necessary.

Test for Grounded Armature Winding


Use growler test probes. Check between armature core and the commutator bars. If growler lamp turns on, bars are grounded. If so, replace starter.

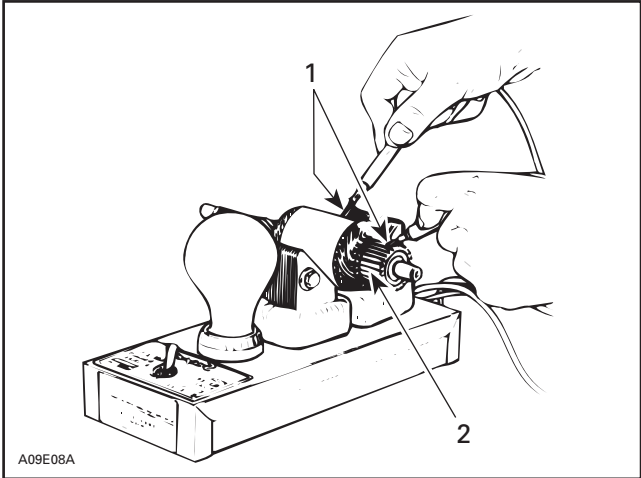

1. Test probes
2. Commutator bars

Test Armature for Shorted Winding

When the armature is rotated in the growler with a steel strip (hacksaw blade) held above it, the strip will vibrate over that area of the armature which has a short circuit. Replace starter if a shorted winding is found.

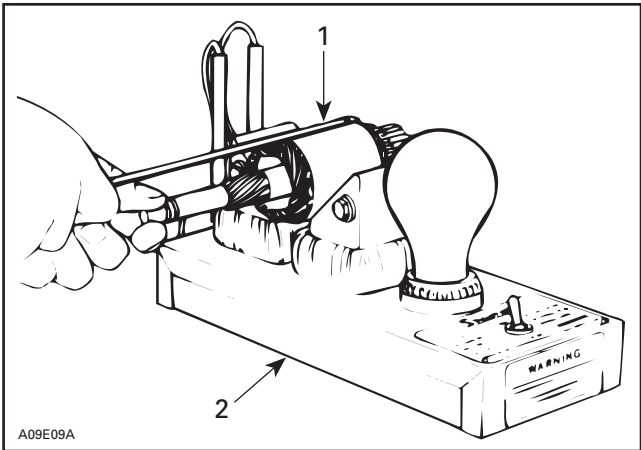

1. Steel strip (hack-saw blade)
2. Growler

Test the Armature for Open Circuit

1. Use growler test probes.
2. Place one test probe on a commutator bar and the other test probe on the neighboring bar.

3. Repeat this operation for all bars, moving one test probe at a time.

If the growler lamp does not turn on, the armature circuit between these 2 bars is opened. If an open circuit is found, replace the starter.

NOTE: Open circuits most often occur at the commutator riser where windings are soldered. Burnt commutator bars are usually an indication of an open-circuit in an armature winding.

Brush Holder


1. Check the brush holder for insulation using growler test probes.
2. Place one test probe on the insulated brush holder and the other test probe on the brush holder plate.

If the growler lamp turns on, the brush holder has to be repaired or replaced.

Brush Length

Measure brush length as illustrated. If less than the specified value, replace them.

MODEL	LENGTH	
	NEW	WEAR LIMIT
All	10 mm (.4 in)	6 mm (.24 in)

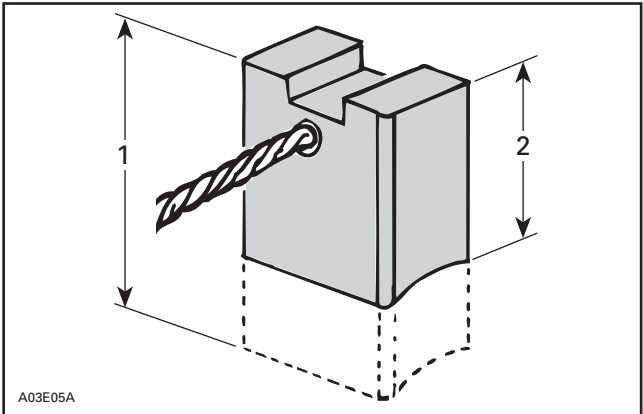


TYPICAL
1. NEW
2. Wear limit

End Cap

Check the mica insulation of the positive brush. Check the roller bearing (or bushing) condition. Replace starter, if necessary.

Subsection XX (STARTING SYSTEM)

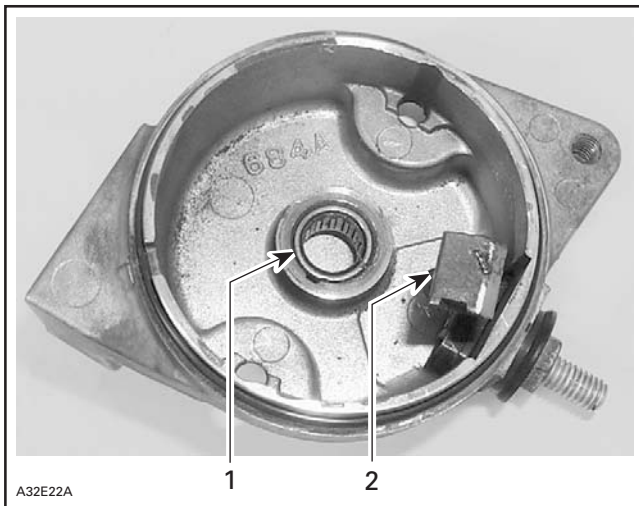

1. Roller bearing
2. Positive brush

Overrunning Clutch

The pinion of the overrunning clutch should turn smoothly in a clockwise direction, and should not slip in a counterclockwise direction. If defective, replace clutch assembly.

Check the pinion teeth for wear and damage. If defective, replace.


Starter Assembly

Reverse the order of disassembly to reassemble starter. However, pay attention to the following operations.

Prior to assembling, coat sliding surfaces on armature shaft splines, overrunning clutch and bushing with SUSPENSION GREASE (P/N 293 550 033).

After placing collar on armature shaft, install a new snap ring on the armature shaft and ensure that it is properly secured.


Slide collar over snap ring and secure in place by punching it at two or three places.

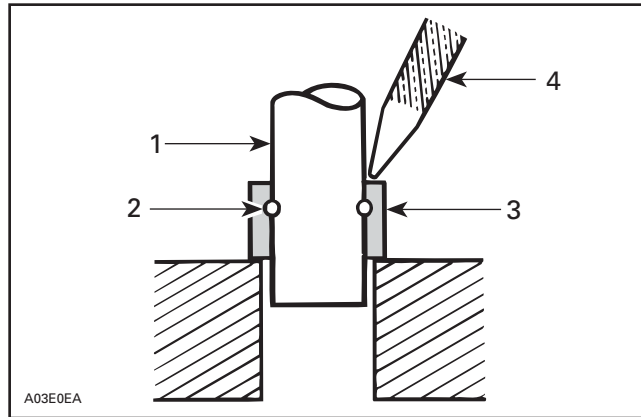

1. Armature shaft
2. Snap ring
3. Collar
4. Punch

Starter Housing, Yoke and End Cap

1. Align previously traced index marks on housing, yoke and end cap.

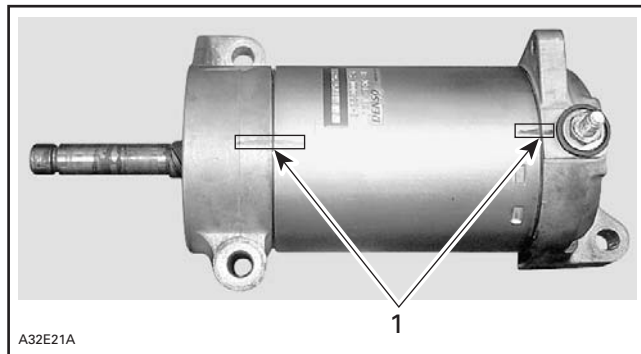


TYPICAL

1. Aligned index marks
2. Open brushes and slide over commutator.
3. Align end cap locating notch with yoke locating protrusion and properly sit brush holder into cap.



If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

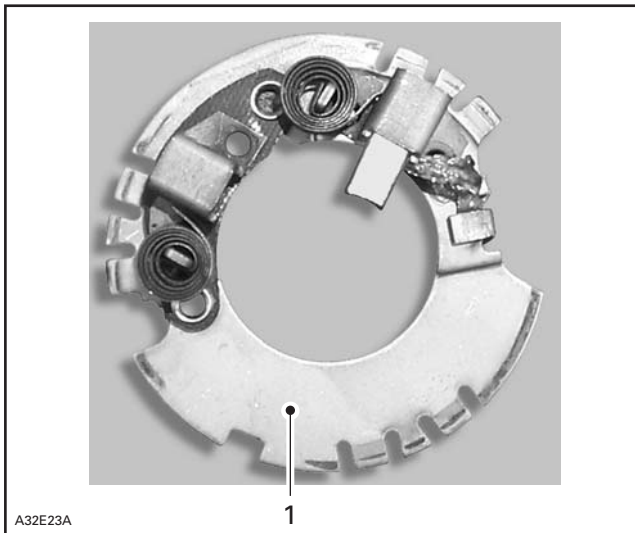

1. Brush holder

NOTE: To ease end cap installation, retain brush holder with a small screwdriver while installing armature assembly.

NOTICE Place two end caps on a flat surface before tightening the through bolts. Ensure end cap fits perfectly on yoke.


4. Torque starter through bolts as per exploded view.

Starter Installation

Install removed parts in the reverse order of removal, however, pay attention to the following.

1. Ensure starter and engine mating surfaces are free of grime. Serious trouble may arise if starter is not properly aligned.
2. Replace all scotch grip screws.
3. For ease of installation, install the three new starter mounting screws loosely before torquing.
4. Install the washer and spacer as shown.


NOTICE Be sure to install the washer and spacer as shown when installing the mounting screw on the RH side of the starter.

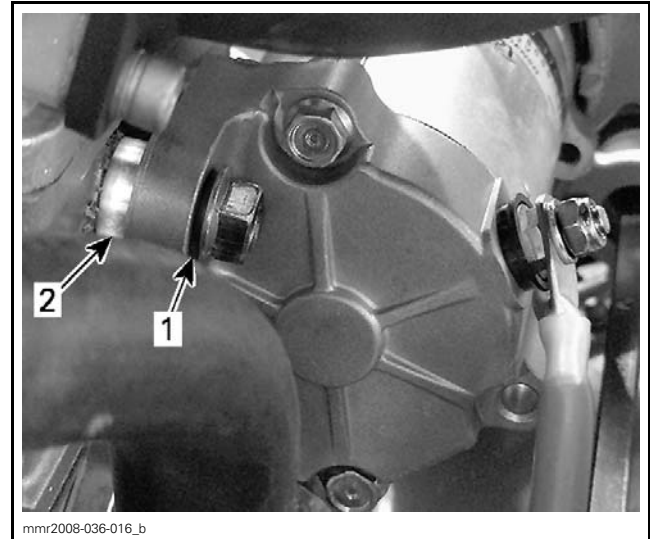

STARTER MOUNTING SCREW, RH

1. Washer under screw head
2. Washer spacer between starter and engine

5. Torque the two starter mounting Torx screws first, then the hex screw to 28 N•m (21 lbf•ft).
6. Install the torque stopper support and two new engine mounting bolts, refer to *ENGINE REMOVAL AND INSTALLATION* subsection. Install washers under front mount bolt head as shown.

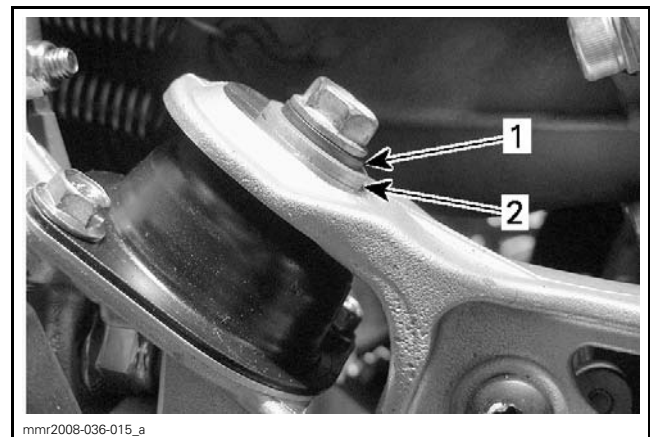

LH FRONT ENGINE MOUNT

1. Conical washer
2. Flat washer

7. Connect the RED wire to the large terminal on the starter.
8. Install the drive pulley and drive belt, refer to *DRIVE SYSTEM AND BRAKE* subsection.
9. Install the muffler and tune pipe, refer to *EXHAUST SYSTEM* subsection.
10. Reconnect the positive (+) RED battery cable, then the negative (-) BLACK cable.

DIGITALLY ENCODED SECURITY SYSTEM (D.E.S.S.)

GENERAL

SYSTEM DESCRIPTION

The following components are specially designed for this system: ECM, D.E.S.S. key (inside tether cord cap) and engine cut-off switch.

This system allows the engine to reach pulley engagement speed only if a D.E.S.S. key is installed on engine cut-off switch and the key is recognized as valid by the ECM.

The D.E.S.S. key contains a magnet and a ROM chip.

- The magnet closes the reed switch inside the engine cut-off switch. It is the equivalent of a rotary mechanical ignition switch.
- The ROM chip contains a unique digital code. It is the equivalent of the tooth-pattern cut on a conventional ignition key.

The D.E.S.S. system is quite flexible. Up to 8 D.E.S.S. keys may be programmed in the ECM memory using the B.U.D.S. software. The keys can also be erased individually.

NOTE: If desired, a D.E.S.S. key can be used on another vehicle equipped with the D.E.S.S. system. It only needs to be programmed for that vehicle.

D.E.S.S. Beeper Codes

When starting the engine with a D.E.S.S. key on the engine cut-off switch, the key is identified by the ECM and D.E.S.S. signals will be issued according to the key recognition. See table.

D.E.S.S. SIGNAL		DESCRIPTION	COMMENT
BEEPER	DISPLAYED MESSAGE ⁽¹⁾		
2 shorts beeps	SKI-DOO	Welcome message, good key	Working D.E.S.S. key.
Shorts beeps repeating slowly	CHECK KEY	Unable to read key (bad connection)	<ul style="list-style-type: none"> – Make sure the key contacts are free of dirt, snow or ice. – Reinstall key and restart engine. – Vehicle can not be driven.
Shorts beeps repeating rapidly	BAD KEY	Invalid key or key not programmed	<ul style="list-style-type: none"> – Use the proper key for this vehicle or have the key programmed. – Vehicle can not be driven.

⁽¹⁾ Only available on premium gauge.

FOR APPROVAL ONLY

PROCEDURES

D.E.S.S. KEY


D.E.S.S. Key Programming

Use the latest B.U.D.S. software available from BOSSWeb.


1. Carry out the proper connections to use B.U.D.S. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.

IMPORTANT: Ensure all connections have been made **before starting B.U.D.S.** to allow proper operation.


2. Start B.U.D.S. and logon.
3. In B.U.D.S., click on the **Read Data** button to read the ECM.

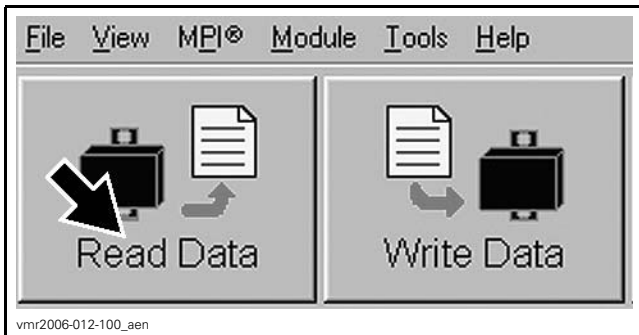

4. Install the new key to be programmed on the engine cut-off switch.
5. In B.U.D.S., click on the **Keys** tab.

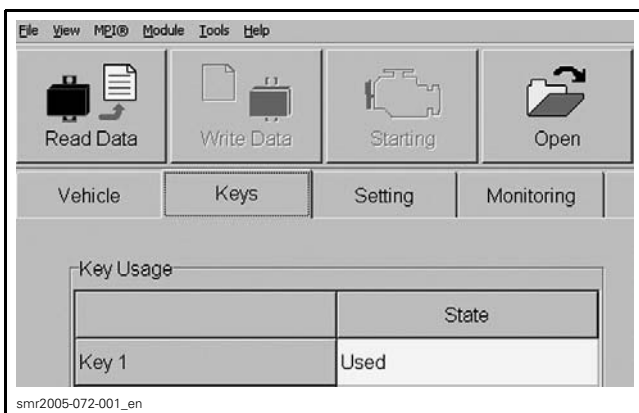

6. Click on the **Add Key** button at the bottom of the screen.

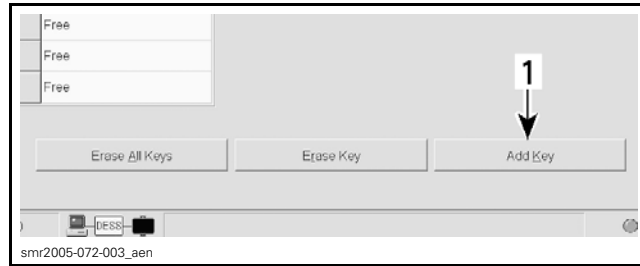


1. Click on this button

The D.E.S.S. key is now saved in the computer.

NOTE: To program other key(s), install a new key on the engine cut-off switch and click on the **Add Key** button again.

7. Save the new key(s) in the ECM by clicking the **Write Data** button.

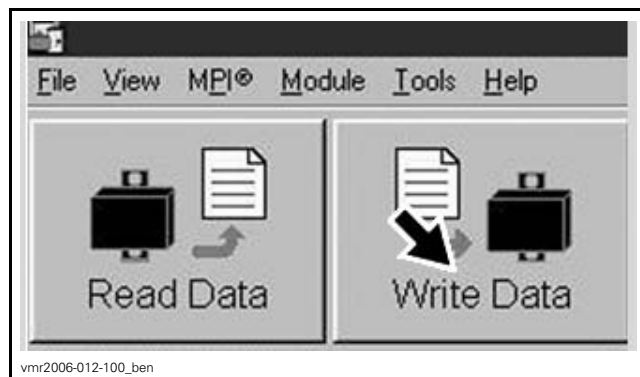

BEEPER

The beeper is integrated in the multifunction gauge and cannot be replaced alone.

If the beeper does not sound when starting the engine, check the beeper operation. Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection.

FOR APPROVAL ONLY

ROTAX ELECTRONIC REVERSE (RER)

SERVICE TOOLS

Description	Part Number	Page
12 V BATTERY SUPPLY CABLE	529 035 997	2
FLUKE 115 MULTIMETER	529 035 868	3
MPI-2 DIAGNOSTIC CABLE	710 000 851	2
MPI-2 INTERFACE CARD	529 036 018	2
POWER INTERFACE	515 177 223	2

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
OPTIONAL MALE-FEMALE EXTENSION SERIAL CABLE.....	(DB9)	2

GENERAL

The main components of the RER system are:

- RER switch
- ECM
- Crankshaft position sensor.

The ECM receives signals from the CPS for forward and reverse engine rotation.

The ECM recognizes a signal sent by the RER switch.

When the RER switch is activated and the engine is running at or near idle speed, the ECM cuts off ignition, therefore causing the engine RPM to drop off gradually.

When the engine reaches a predetermined low RPM (approximately 450 RPM), the ECM initiates an ignition spark that is greatly advanced in timing, creating a thrust which reverses engine rotation.

If the following condition are not meet, the RER function is disable and nothing takes place when the RER button is pressed.

- RPM to be between 1000 and 4300 RPM
- Throttle lever to be release (TPS opening below 2%)
- Vehicle speed below 25 km/h (16 MPH).

On electric start models, the switch is called the START/RER switch as it serves both purposes. If it is pressed when the **engine is stopped**, it signals the ECM to start the engine. If it is pressed when the **engine is running**, the same signal is interpreted by the ECM as the reverse signal.

NOTE: Refer to *E-TEC DIRECT FUEL INJECTION* subsection for crankshaft position sensor (CPS) testing.

TROUBLESHOOTING

DIAGNOSTIC TIPS

RER Does Not Respond When Depressing RER Button

Manual Start Models

Check the following:

- 5 A RER fuse condition
- *RER SWITCH SIGNAL TEST WITH B.U.D.S.*

Electric Start Models

Check the following:

- *RER SWITCH SIGNAL TEST WITH B.U.D.S.*

Engine Stops after Pressing RER Button

This confirms that RER control circuits function normally. Check the following:

- CPS
- Reed valves leaking, refer to applicable *TOP END* subsection
- RAVE valve adjustment or sticking, refer to *RAVE* subsection
- Drive belt adjustment, refer to *DRIVE SYSTEM AND BRAKE* subsection
- ECM.

RER Functions Erratically

1. Check engine compression.

NOTE: A low compression resulting in loss of engine power may cause the RER to function erratically, leading you to believe the problem is in the electronic control system.

Subsection XX (ROTAX ELECTRONIC REVERSE (RER))

2. Low compression may be due to the following items:

- REED valves leaking or broken
- RAVE valves sticking
- Worn engine parts.

3. Check piston condition through the intake and exhaust ports.

NOTE: Look for scoring on piston skirts. Scored piston skirts or other mechanical problems resulting in excessive friction which may cause the RER to function erratically.

4. Also check the following:

- RER switch for intermittent operation, refer to *RER SWITCH CONTINUITY TEST* in this subsection
- Loose (intermittent) electrical connections
- Drive belt adjustment, refer to *DRIVE SYSTEM AND BRAKE* subsection
- ECM.

PROCEDURES

RER FUSE

The RER circuit is protected by a 5 A fuse attached to the oil injection tank.

RER Fuse Location

The RER fuse is attached to the bottom of the oil injection tank.


To access fuse, open RH side panel.



1. RER fuse

RER Fuse Inspection

Check if filament is melted. Replace as necessary.

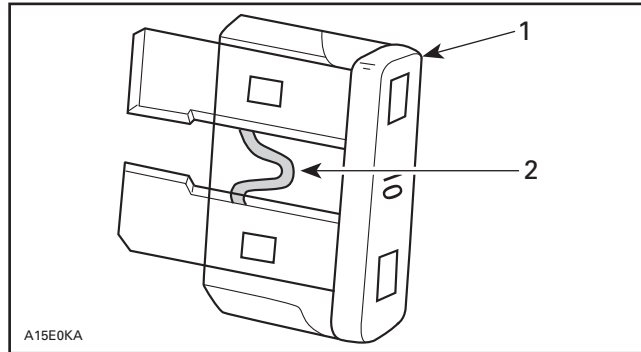






1. Fuse
2. Check if melted

NOTICE Do not use a higher rated fuse as this can cause severe damage to electric components and/or a fire. If fuse has burnt out, the cause of the malfunction should be determined and corrected before restarting.

RER SWITCH

RER Switch Signal Test with B.U.D.S.


1. Connect vehicle to the latest applicable B.U.D.S. software version available from BOSSWeb. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection for proper connection instructions.

REQUIRED TOOLS	
MPI-2 INTERFACE CARD (P/N 529 036 018)	
MPI-2 DIAGNOSTIC CABLE (P/N 710 000 851)	
POWER INTERFACE (P/N 515 177 223)	
12 V BATTERY SUPPLY CABLE (P/N 529 035 997)	
OPTIONAL MALE-FEMALE EXTENSION SERIAL CABLE (P/N (DB9))	

NOTE: On manual start models, a 12 volt battery is required to activated the electrical system.

2. In B.U.D.S., select the **Read Data** button.
3. Select the **Monitoring** tab.
4. At the bottom LH corner of the **Monitoring** page, select the **ECM** tab.
5. Set emergency engine STOP switch to STOP.

- Press vehicle START/RER button and look for the **START/RER Button** light to come ON in the bottom field of the **ECM Monitoring** page.

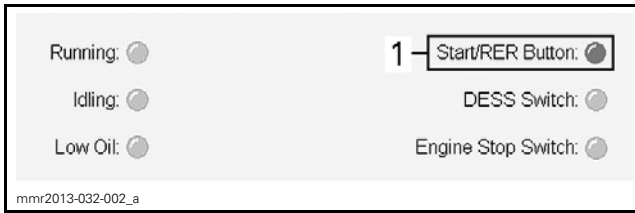

1. Should turn ON (green)

If the light comes ON, it indicates the START/RER switch, ECM and wiring are functioning properly. Test CPS. Refer to *E-TEC DIRECT FUEL INJECTION* subsection.

If the light does not come on, carry out the START/RER switch tests that follow.

NOTE: When the B.U.D.S. RER test is carried out with engine running and reverse engages, the RER light on the **ECM Monitoring** page and the reverse light on the **Cluster Monitoring** page should both turn ON (green).

RER Switch Continuity Test

- Remove the upper body module, refer to *BODY* subsection.
- Disconnect the START/RER switch 12-pin (SH) connector.



1. 12-pin (SH) connector

- Using the FLUKE 115 MULTIMETER (P/N 529 035 868) set to Ω , measure continuity of RER switch as per following table.

SWITCH POSITION	FEMALE SH CONNECTOR		RESISTANCE
	Pin C (RD/GN)	Pin H (RD/VT)	
Release			High value or infinite (OL)
Press and held			Continuity (0.4 Ω max.)

If continuity test fails, replace switch.

If continuity tests were good, measure voltage as per *RER SWITCH INPUT VOLTAGE TEST*.

RER Switch Input Voltage Test

- Set multimeter to Vdc.
- Measure voltage of battery used to power the vehicle.
- Measure for RER switch input voltage on the vehicle harness side as follows.

12-PIN (SH) CONNECTOR		VOLTAGE
Pin H (RD/VT)	Chassis ground	Battery voltage

If battery voltage is measured, reconnect SH connector and carry out an *RER SWITCH OUTPUT VOLTAGE TEST* in this subsection.

If battery voltage is not measured, test continuity of the RD/VT power wire between the fuse contact B and pin H of the 12-pin (SH) connector.

RER Switch Output Voltage Test

Connect the 12-pin (SH) connector.

Measure RER switch output voltage by back-probing the female SH connector as follows.

SWITCH POSITION	SH CONNECTOR		VOLTAGE
Released	Pin C (RD/GN)	Chassis ground	Close to 0 Vdc
Pressed and held			Approximately 12 Vdc

If RER switch output voltage test failed, replace switch.


If RER switch output voltage test is good, carry out the *RER SWITCH CONTINUITY TEST TO ECM*.

RER Switch Continuity Test to ECM

- Disconnect the 12-pin (SH) connector and ECM J1A connector.
- Disconnect the 2-pin (SD) connector from starter solenoid.
- Test wire continuity between the 12-pin (SH) connector and the ECM connector as follows.

Subsection XX (ROTAX ELECTRONIC REVERSE (RER))

SB CONNECTOR	ECM J1A CONNECTOR	RESISTANCE
Pin C (RD/GN)	Pin 28 (RD/GN)	Continuity (0.2 Ω max.)
Pin C (RD/GN)	Chassis ground	Infinite (OL)

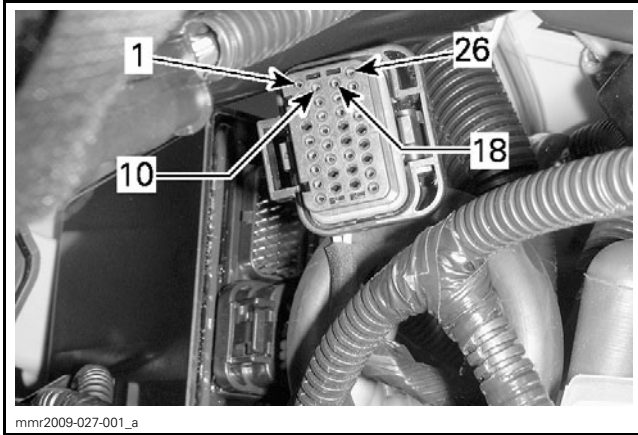

PIN-OUT — ECM CONNECTOR J1A

If continuity test is good, try a new ECM.

If test fails, repair or replace wiring.

BEEPER (REVERSE ALARM)

The reverse alarm (beeper) is integrated in the gauge cluster and is also used for emitting the vehicle beep codes. Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection for the testing procedure.

LIGHTS, GAUGE AND ACCESSORIES

SERVICE TOOLS

Description	Part Number	Page
12 V BATTERY SUPPLY CABLE	529 035 997	5
FLUKE 115 MULTIMETER	529 035 868	8, 14, 21, 24
POWER INTERFACE	515 177 223	5

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
MULTILOCK - TERMINAL EXTRACTION TOOL.....	755430-2	25

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE 5900	293 800 066	19


GENERAL

NOTE: It is a good practice to check for fault codes using B.U.D.S. software as a first troubleshooting step. Refer to *DIAGNOSTIC AND FAULT CODES* subsection.

⚠ CAUTION The battery charging fuse should always be removed before carrying out any maintenance on the vehicle to prevent any unexpected electrical activation. Removal of this fuse isolates the battery from the vehicle electrical system, except for the starter relay input terminal.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices must be replaced with new ones when removed (e.g.: locking tabs, elastic stop nuts, self-locking fasteners, cotter pins, etc.).

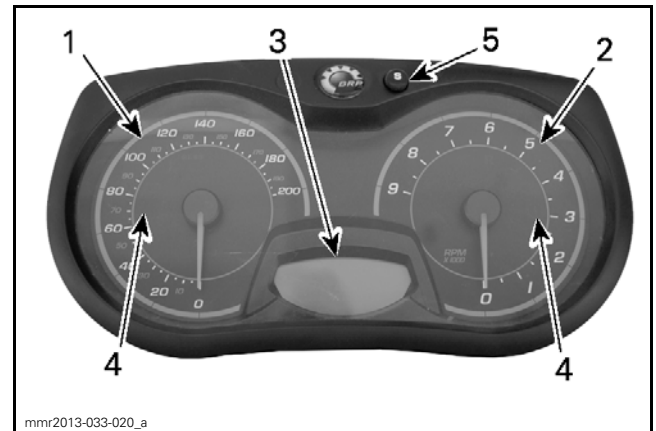

mmr2013-033-020_a
ANALOG/DIGITAL GAUGE (STANDARD)

1. Speedometer
2. Tachometer (RPM)
3. Gauge Digital Display
4. Gauge Pilot Lamps
5. Gauge SET "S" button


SYSTEM DESCRIPTION (GAUGE)

Two different type gauges which provide all indications in a single unit are used. An **analog/digital gauge (standard gauge)** and a **multifunction analog/digital gauge (premium gauge)**.

The premium gauge provides more functions and display features.

Both units can be set to indicate in metric or imperial units.

Subsection XX (LIGHTS, GAUGE AND ACCESSORIES)

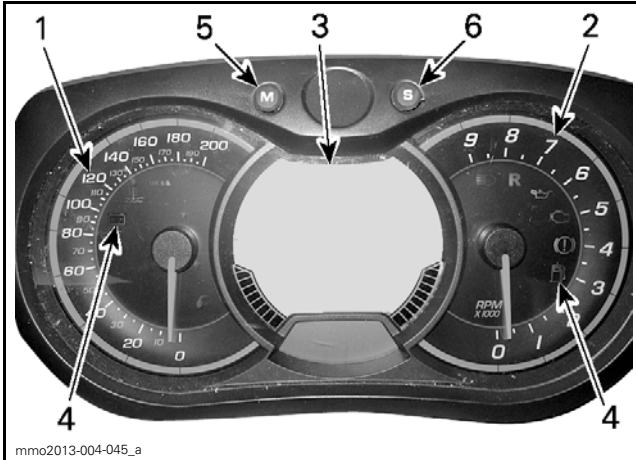

MULTIFUNCTION ANALOG/DIGITAL GAUGE (PREMIUM)


1. Speedometer
2. Tachometer (RPM)
3. Gauge Multifunction Digital Display
4. Gauge Pilot Lamps
5. Gauge MODE "M" button
6. Gauge SET "S" button

The premium gauge is also used to control 9 heating intensity settings for the heated hand grips and the heated throttle lever.

Mode and Set Buttons

Analog/Digital Gauge


The standard gauge is equipped with a SET button only at the top of the indicator.

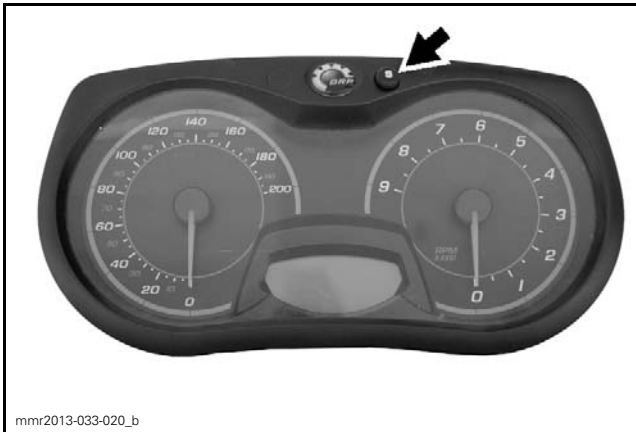

SET "S" BUTTON

Multifunction Analog/Digital Gauge (Premium)

The premium gauge is equipped with MODE and SET buttons at the top of the indicator.

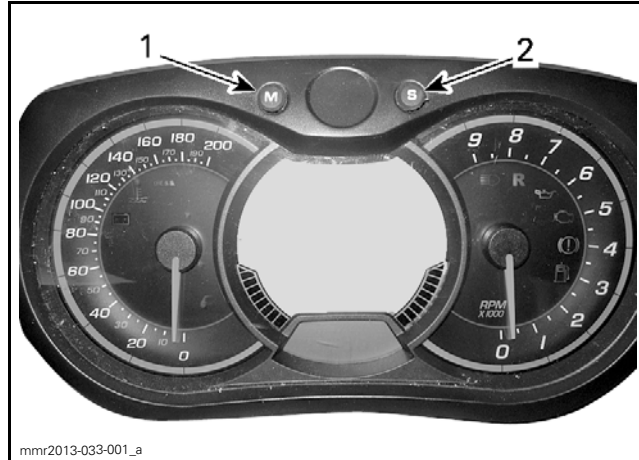

PREMIUM GAUGE

1. MODE button
2. SET button

These buttons allow you to toggle through the different functions and settings of the indicator.

Except Summit Models, all vehicles that are factory equipped with the premium gauge also come with a remote M/S button on the LH multifunction switch. It can be used instead of the buttons on the gauge simply by pressing the "M" for MODE and "S" for SET.


SYSTEM DESCRIPTION (HEATED THROTTLE LEVER)

The type of system used is usually determined by the gauge package installed at the factory, standard gauge or premium gauge.


The throttle lever heat is controlled through the gauge.

A three position switch on the LH multifunction switch allows selection of 9 heat levels, which are displayed in the indicator.


NOTE: The heating intensity is displayed via the digital display with the activation of the throttle lever switch. When released, display will return to fuel tank level.

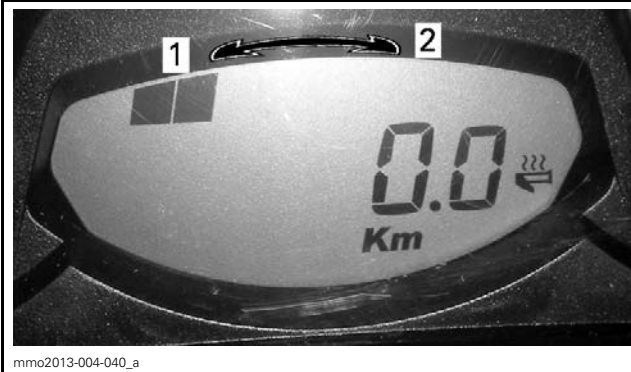

VARIABLE HEATING INTENSITY DISPLAY - STANDARD GAUGE
 1. Less heat
 2. More heat

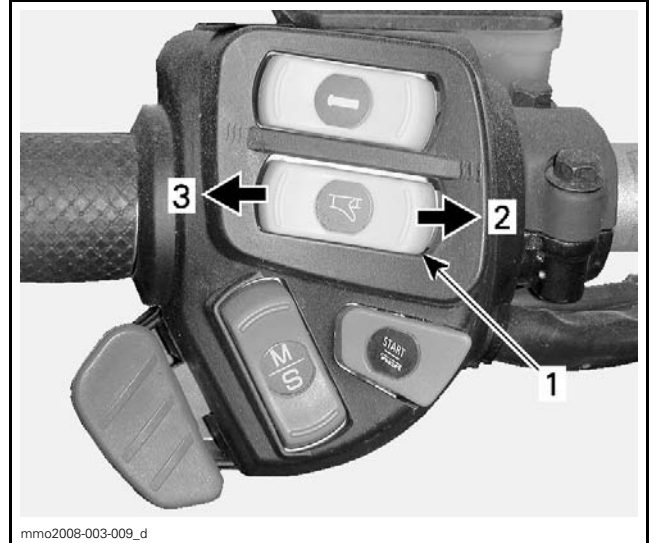


VARIABLE HEATING INTENSITY - PREMIUM GAUGE (EXCEPT SUMMIT)
 1. Throttle lever heat switch
 2. Increase heat
 3. Decrease heat

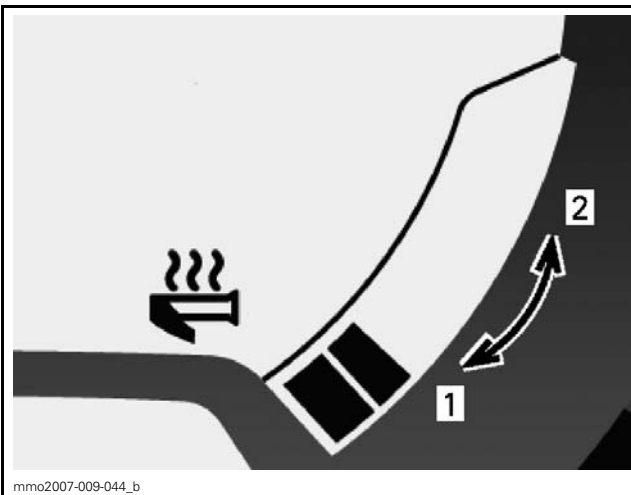


THROTTLE LEVER HEAT INDICATOR - PREMIUM GAUGE
 1. Decrease heat
 2. Increase heat

The switch selection sends a signal to the premium gauge to increase or decrease heat.

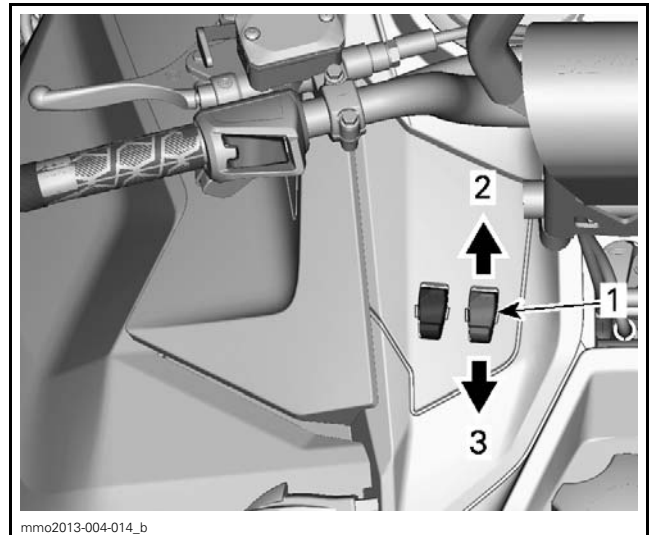

VARIABLE HEATING INTENSITY - PREMIUM GAUGE (SUMMIT ONLY)
 1. Heated throttle lever switch
 2. Increase heat
 3. Decrease heat

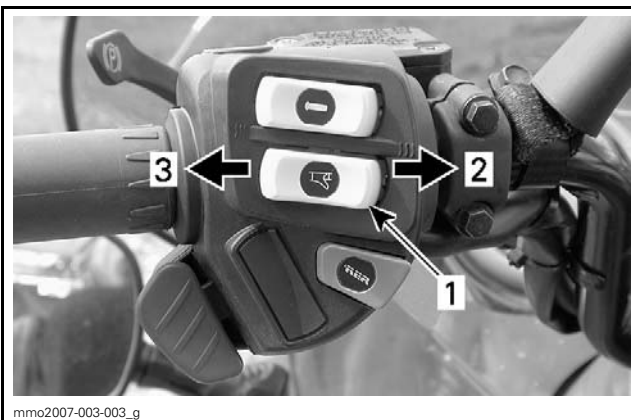

VARIABLE HEATING INTENSITY - STANDARD GAUGE
 1. Heated throttle lever switch
 2. Increase heat
 3. Decrease heat

The gauge then applies the appropriate amount of current to the heater according to the selection.

To turn OFF the heaters, select heat down until there is no more indication on the bar graph.

When released, the switch springs back to the center neutral position.

SYSTEM DESCRIPTION (HEATED HANDLEBAR GRIPS)


The type of system used is usually determined by the gauge package installed at the factory, standard gauge or premium gauge.

Subsection XX (LIGHTS, GAUGE AND ACCESSORIES)

The grip heat is controlled through the gauge.


A three position switch on the LH multifunction switch allows selection of 9 heat levels, which are displayed in the indicator.

NOTE: The heating intensity is displayed via the digital display with the activation of the heated grips switch. When released, display will return to fuel tank level.

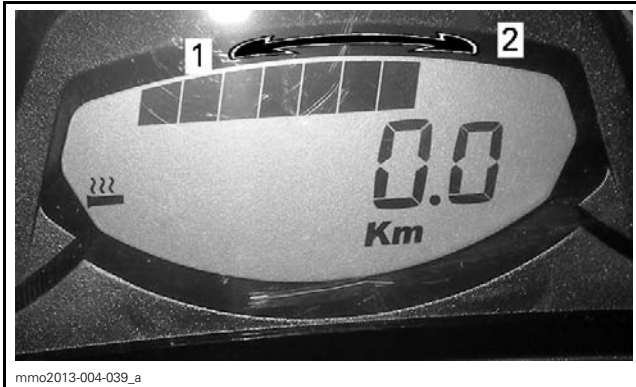

HEATING INTENSITY DISPLAY - STANDARD GAUGE


1. Less heat
2. More heat

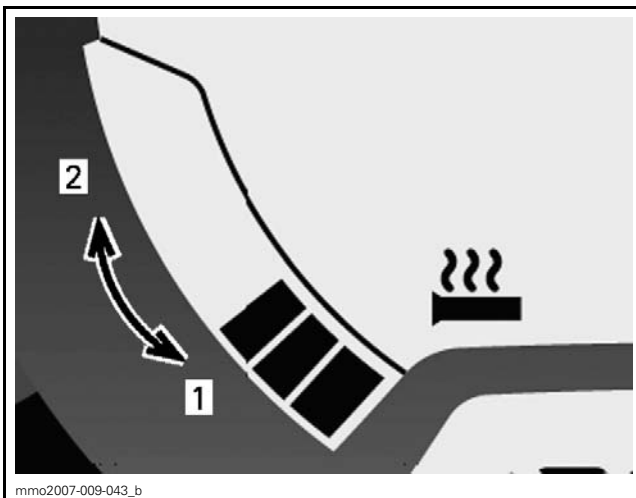

HEATING INTENSITY DISPLAY - PREMIUM GAUGE


1. Decrease heat
2. Increase heat

The switch selection sends a signal to the premium gauge to increase or decrease heat.

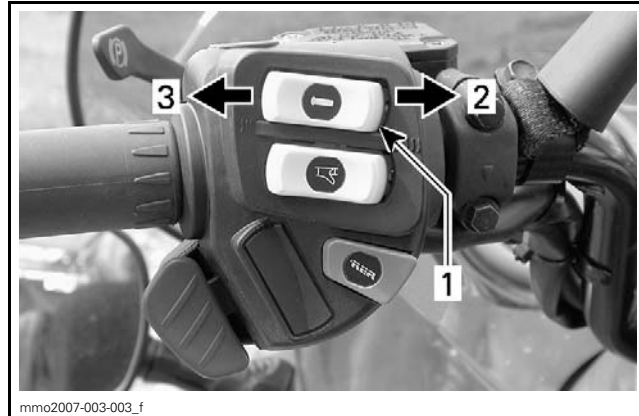

VARIABLE HEATING INTENSITY - STANDARD GAUGE

1. Heated grip switch
2. Increase heat
3. Decrease heat

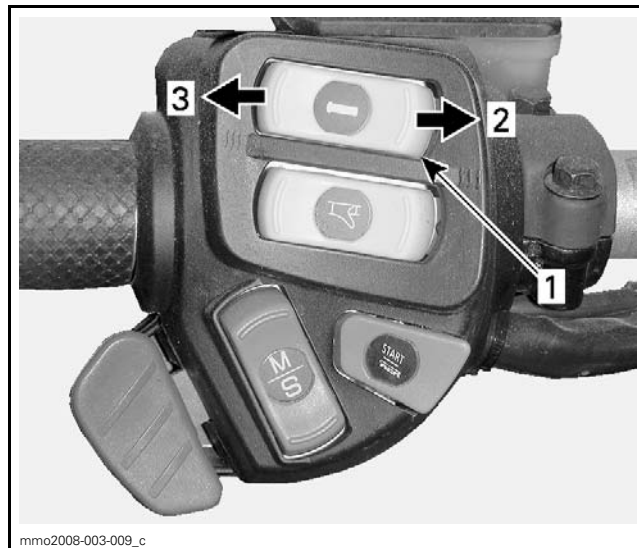


VARIABLE HEATING INTENSITY - PREMIUM GAUGE (EXCEPT SUMMIT)

1. Grip heat control switch
2. Increase heat
3. Decrease heat



If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

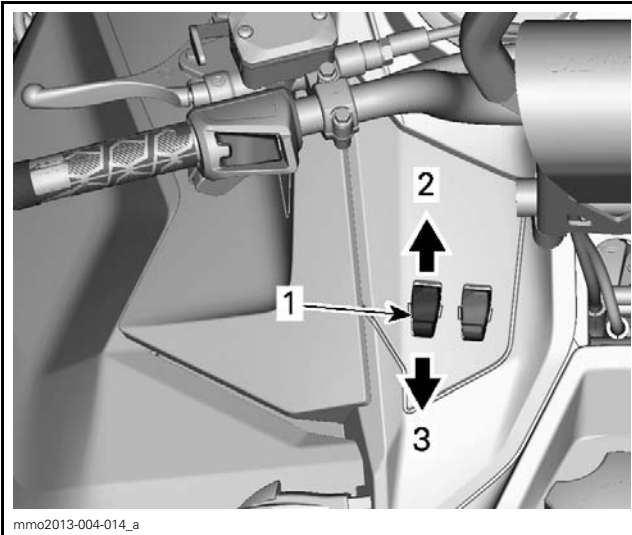

mme2013-004-014_a
VARIABLE HEATING INTENSITY - PREMIUM GAUGE (SUMMIT ONLY)

1. Heated grip switch
2. Increase heat
3. Decrease heat

The gauge then applies the appropriate amount of current to the heater according to the selection.

To turn OFF the heaters, select heat down until there is no more indication on the bar graph.

When released, the switch springs back to the center neutral position.

TROUBLESHOOTING

LIGHTING AND ACCESSORIES SYSTEM TESTING

All vehicle lights are powered from the primary 12 Vdc circuit. This circuit is powered from and controlled by the ECM when the engine reaches 800 RPM.

There are no relays or fuses outside the ECM to test or replace for the light circuits. Refer to *CHARGING SYSTEM* for more information on testing the primary 12 Vdc circuits.

If a light does not come ON, carry out the following:

- Obtain access to the bulb and make sure it is not burnt.
- Test for input voltage to the bulb.
- Test for continuity of the ground circuit.
- Test the applicable control switch (brake switch, headlight switch).

Refer to *WIRING DIAGRAM* for circuit details.

To provide power to specific circuits, refer to the following chart to meet the required conditions.

SYSTEM	MODEL	CONDITIONS REQUIRED
- Lights - Gauge - Heaters	All	- POWER INTERFACE (P/N 515 177 223) - 12 V BATTERY SUPPLY CABLE (P/N 529 035 997) (for manual start) - 12-volt battery (for manual start)
- Heaters	All	- Start engine and rev above 800 RPM for at least 2 seconds - OR Use B.U.D.S. and activate the Accessory Relay


To use B.U.D.S., refer to the *COMMUNICATION TOOLS AND B.U.D.S.* subsection for proper connections.

PROCEDURES

FUSES

Fuse Inspection

Check if filament is melted. Replace as necessary.

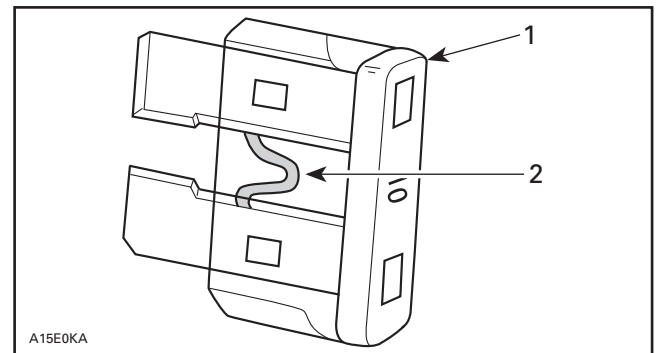


1. Fuse
2. Check if melted

NOTICE Do not use a higher rated fuse as this can cause severe damage to electric components and/or a fire. If fuse has burnt out, the cause of the malfunction should be determined and corrected before restarting.

Fuse Location


All fuses are located near the battery. The following illustrations depict the locations of the various fuses as in an **electric start model**. The fuse(s) applicable to the **manual start models** will be in the same locations.

Manual Start

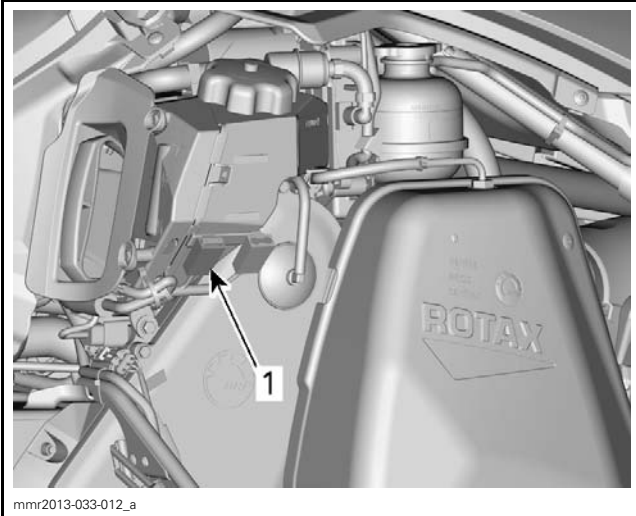

TYPICAL - RH SIDE OF ENGINE COMPARTMENT
1. 5 A start/RER fuse

Electric Start

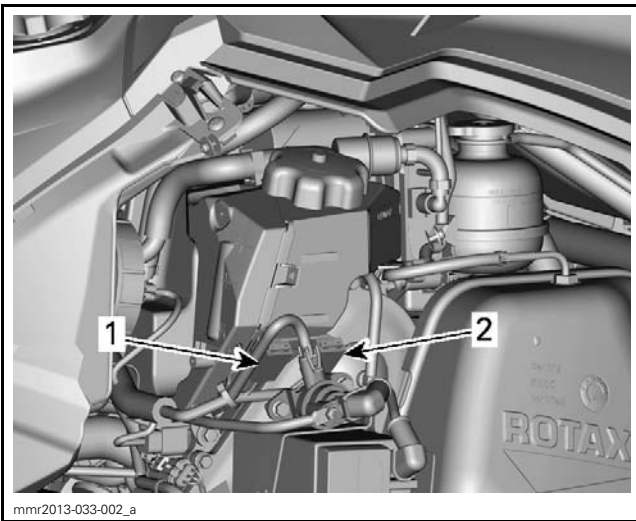

TYPICAL - RH SIDE OF ENGINE COMPARTMENT
1. 5 A charging system fuse
2. 25 A start/RER fuse

Fuse Description


MODEL	FUSE	DESCRIPTION	LOCATION
Electric start	25 A	Battery charging (FA)	Attached to oil tank
All	5 A	ECM START/RER (FB)	Attached to oil tank

HEADLIGHTS

Headlight Bulb Removal


If a headlight bulb is burnt, proceed as follows.

1. Open the front storage compartment by pulling the tab.

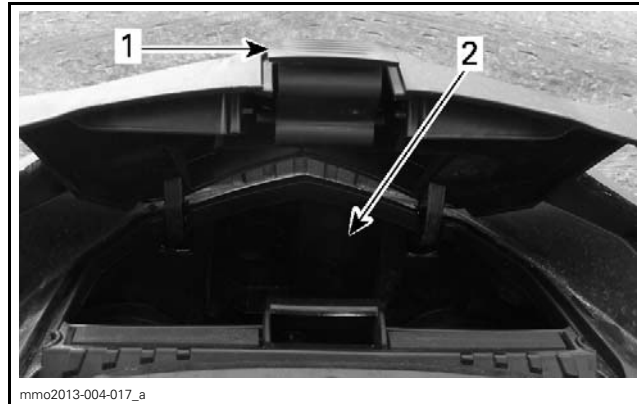


1. Tab
2. Storage compartment

2. Remove the applicable rubber boot.

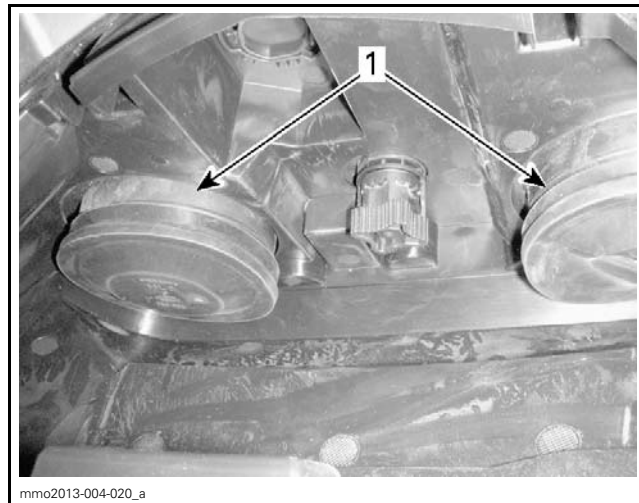


1. Rubber boots

3. Disconnect electrical connector.

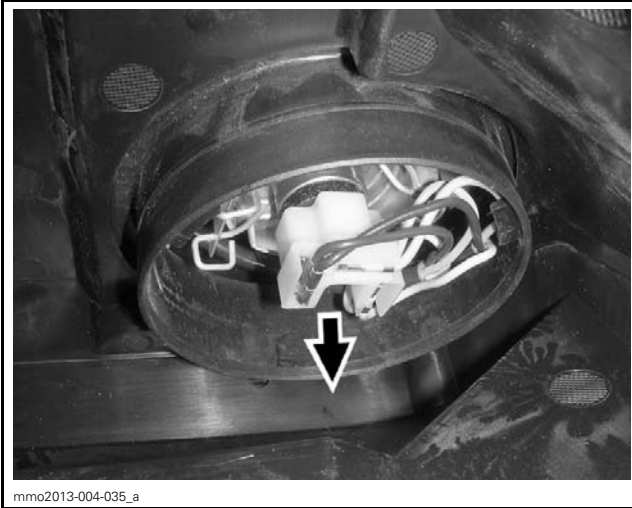

ELECTRICAL CONNECTOR

4. Press and pull both sides of the retaining clip at the same time to release it from bulb support.

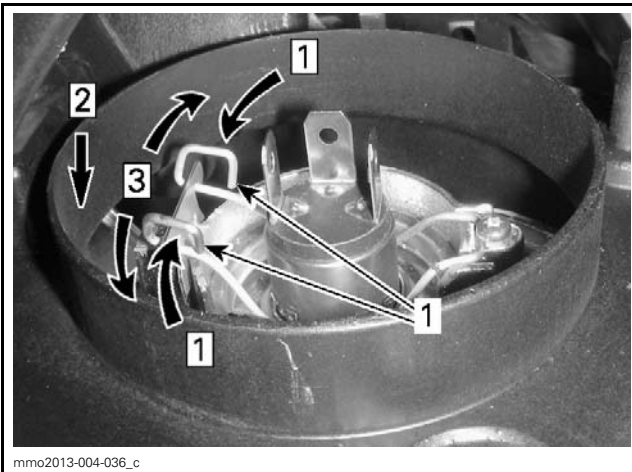

- Step 1: Push both sides
 Step 2: Push down to release
 Step 3: Release both sides
1. Retaining clip


Headlight Bulb Installation

NOTICE Never touch glass portion of a halogen bulb with bare fingers, it shortens its operating life. If glass is touched, clean it with isopropyl alcohol which will not leave a film on the bulb.

1. Insert bulb in headlight.

NOTE: Widest alignment tab on bulb should be at top of headlight.


2. Insert top of bulb holder (spring clip) as you squeeze the two sides inwards. Release bulb holder so that it locks in the grooves on either side of headlight.
3. Connect electrical connector.

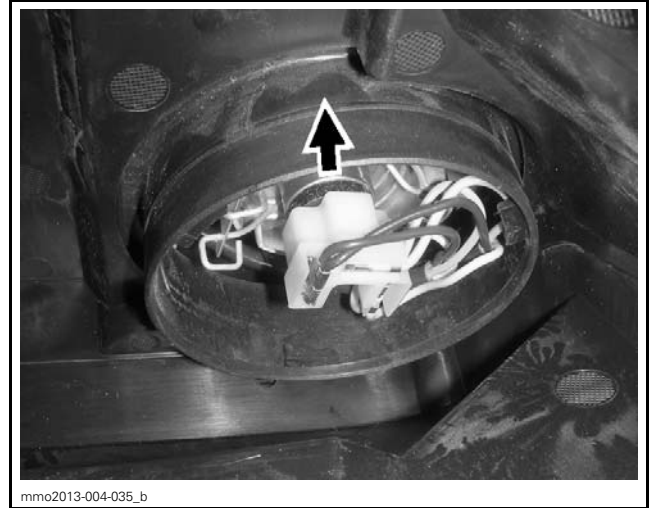

ELECTRICAL CONNECTOR

4. Install rubber boot cover. Ensure cover is properly inserted in groove provided in the headlight, and around the base of the bulb.

NOTE: Make sure to properly reinstall both rubber boots to ensure that no humidity gets inside the headlamp. Humidity can create fog inside the headlamp.

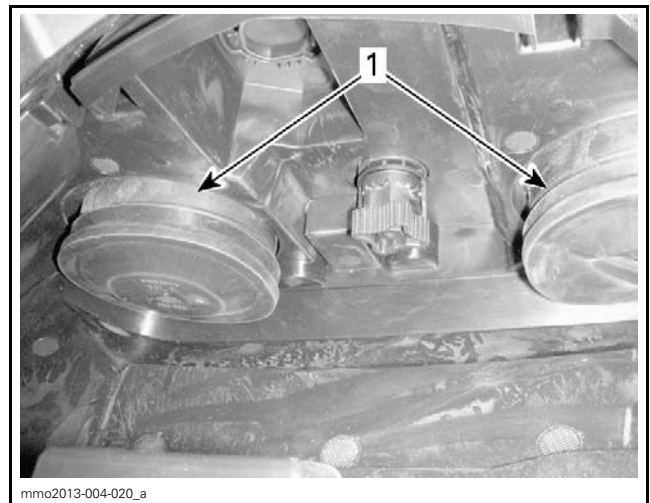

1. Rubber boots

5. Always test light operation after bulb replacement.

Headlight Input Voltage Test

If a headlight does not function, proceed as follows.


1. Remove multifunction gauge, see procedure in this subsection.
2. Disconnect headlight connector(s).

Subsection XX (LIGHTS, GAUGE AND ACCESSORIES)

3. Provide electrical power to the headlights for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection for proper procedure.

4. Read voltage at headlight connector as follows.

SWITCH POSITION	WIRE COLOR (HEADLIGHT CONNECTOR)		VOLTAGE
LO beam	GY/OG	BK	Battery voltage (Vdc)
HI beam	GY/WH	BK	

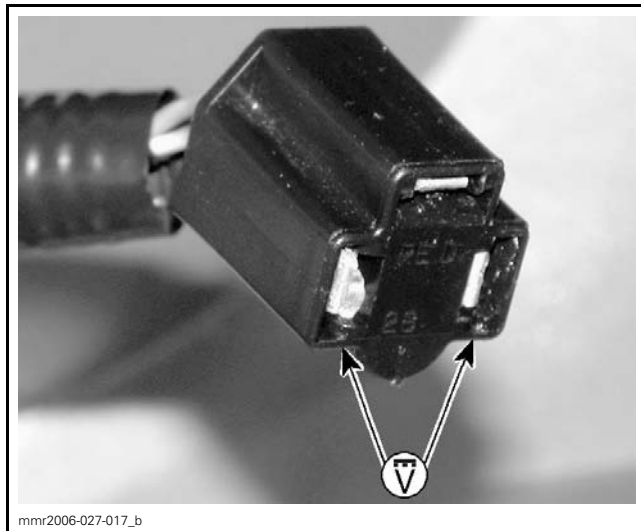


TYPICAL

If voltage is inadequate, carry out the following to find the source of the problem:

- Test headlights dimmer switch. Refer to *HEADLIGHT DIMMER SWITCH CONTINUITY TESTING* in this subsection.
- Test wiring harness and connectors.
- Test primary 12 Vdc system. Refer to *CHARGING SYSTEM*.

Headlight Dimmer Switch Test with B.U.D.S.

1. Using the B.U.D.S. software, select the **Monitoring** tab.
2. On the bottom of the page, choose the **Cluster** tab.
3. Set vehicle dimmer switch to High Beam and look for applicable indicator light in the **Switch inputs** field to turn green.

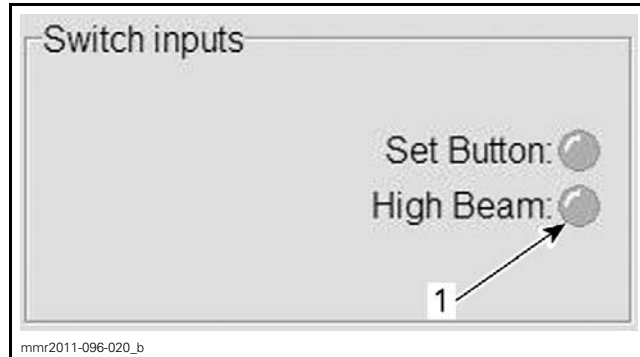


TYPICAL

1. Indicator light

If the indicator light come ON in B.U.D.S., the dimmer switch is functioning correctly.

Headlight Dimmer Switch Continuity Test

1. Remove the gauge.
2. Disconnect the SH-2 connector (12 positions).

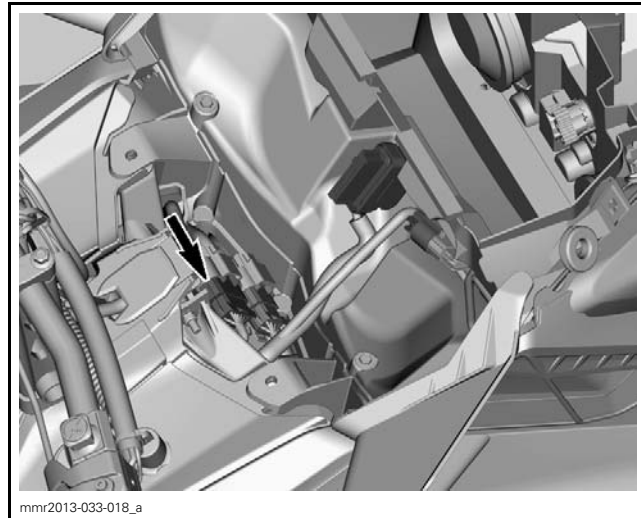

TYPICAL - SH CONNECTOR

3. Using the FLUKE 115 MULTIMETER (P/N 529 035 868), select the Ω position.
4. Test switch circuits on SH-2 connector (12 positions) on harness side as per table.

HEADLIGHT DIMMER SWITCH CONTINUITY TEST			
SWITCH POSITION	SH-2		RESISTANCE
HIGH	M	G	Close to 0 Ω
	F	G	Infinite (OL)
LOW	F	G	Infinite (OL)
	M	G	Close to 0 Ω


If tests were good, switch is functioning properly. If any test failed, check wiring and connections going to switch. If test of wiring and connections was good, replace switch.

NOTE: When testing headlight dimmer switch from SH-2 connector, if an open circuit is found through the switch, remove the screws retaining the multifunction switch, disconnect the LA and LB connectors and test for continuity of switch and wiring separately.


Headlight Beam Aiming

Beam aiming is correct when center of high beam is 25 mm (1 in) below the headlight horizontal center line, scribed on a test surface, 381 cm (12 ft 6 in) away.

1. Place the vehicle on a flat surface perpendicular to test surface (wall or screen) and 381 cm (12 ft 6 in) away from it.
2. Ask rider to sit on vehicle seat, or apply equivalent weight on the vehicle.
3. Select **high** beam.
4. Measure headlight center distance from ground. Scribe a line at this height on test surface (wall or screen). Light beam center should be 25 mm (1 in) below scribed line.

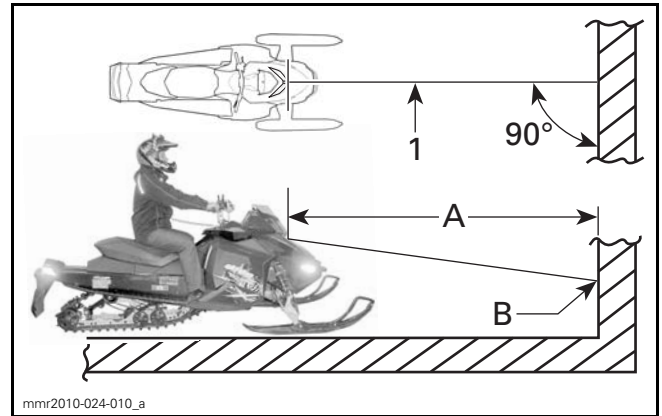

TYPICAL
 1. Headlight center line
 A. 381 cm (12 ft 6 in)
 B. 25 mm (1 in) below center line

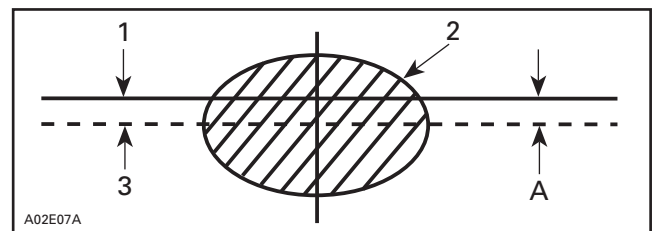


TYPICAL
 1. Headlight horizontal
 2. Light beam (high beam) (projected on the wall)
 3. Light beam center
 A. 25 mm (1 in)

Beam Aiming Adjustment

Open the front storage compartment. Turn knob clockwise to lower the beam height. Turn knob counterclockwise to raise the beam height.

NOTE: Avoid reaching extreme adjustments as the headlight assembly might move out of position.

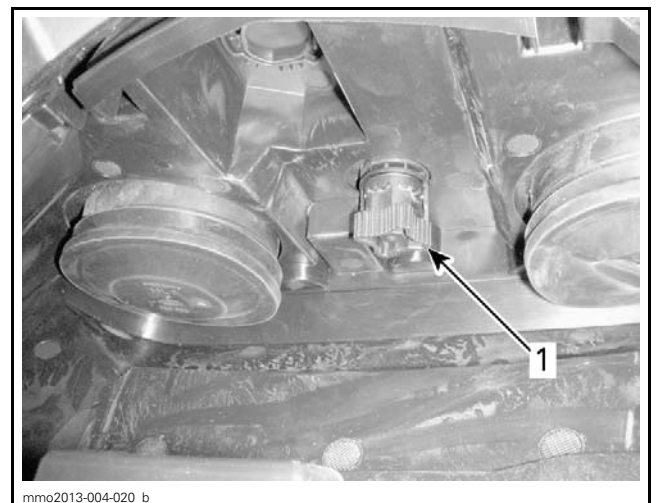


TYPICAL
 1. Knob

TAILLIGHT


Taillight Replacement

Remove both retaining bolts securing rear taillight to frame.

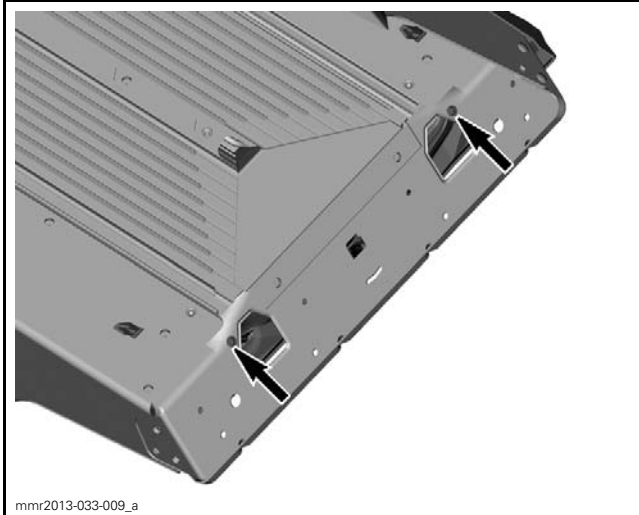


RETAINING BOLTS LOCATION - VIEWED FROM UNDER

Pull rear taillight support out of location and disconnect taillight connector.

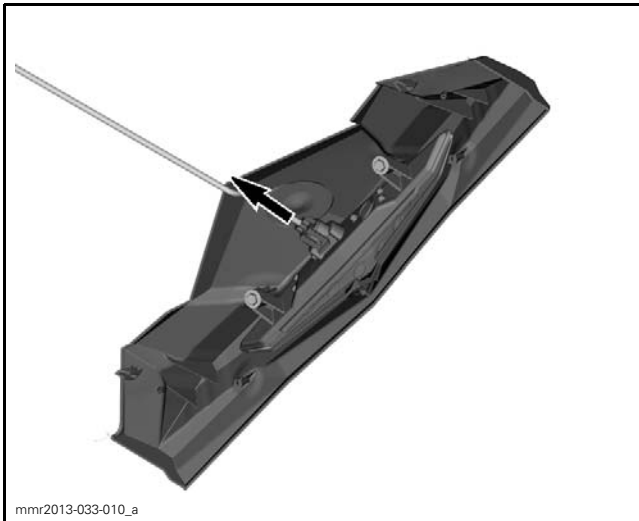

TAILLIGHT CONNECTOR DISCONNECTION

Remove both retaining screws securing taillight to taillight support.

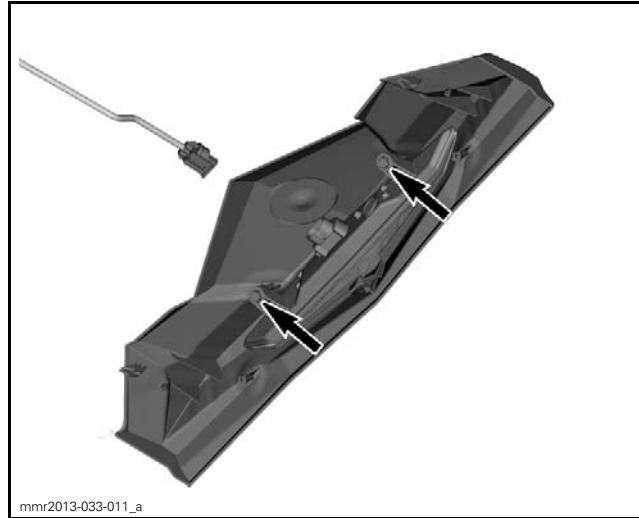

RETAINING BOLTS SECURING TAILLIGHT TO TAILLIGHT SUPPORT

Replace taillight.

Installation is the reverse of removal. However pay attention to the following.

TIGHTENING TORQUE	
Taillight retaining screw	0.4 N•m (4 lbf•in)

GAUGE

Gauge Self Test Function

On ECM **wake-up**, the gauge will perform a self-test. All indications should come ON and gauge pointers will cycle once. You will have a few seconds to ensure the indications (**LEDs** and **LCDs**) are functioning correctly.

NOTE: This test only validates the gauge operation of the **LEDs**, **LCDs** in the gauge digital display and the pointers. It does not test the actual circuit functions related to each indication.


If the self test does not take place, proceed with the *GAUGE POWER INPUT TEST*.

Gauge Setup

Clock Activation (Premium Gauge)


The gauge has an internal clock that can display the time of day in the lower digital display (when selected).

This clock requires power from the vehicle battery to maintain the proper time of day.

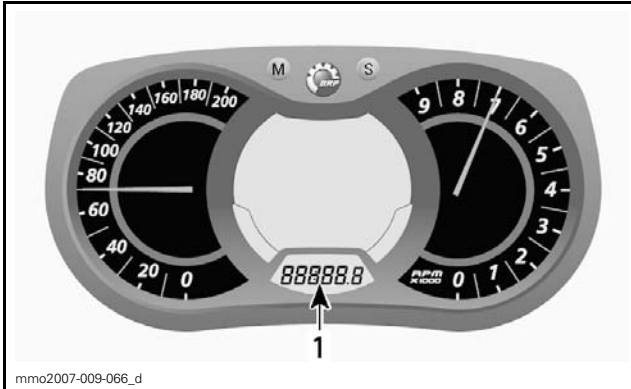

1. Clock displayed

1. Provide electrical power to the gauge, refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection.
2. In B.U.D.S., select the **Setting** tab.
3. At the bottom of the page, select the **Cluster** tab.
4. Select the **Installed** in the **Real time clock** field if the vehicle is equipped with a battery. Choose **Not installed** if the vehicle does not have a battery.

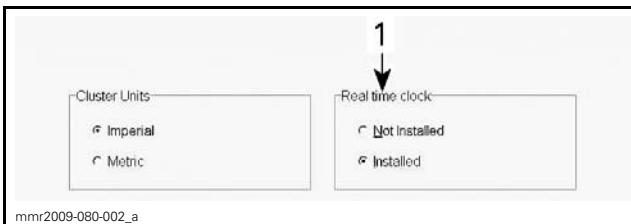

1. Real time clock selection field

Changing Gauge Units of Measurement

The gauges are factory preset to indicate in metric units and can be changed using the B.U.D.S. software.

To change the gauge units of measurement in B.U.D.S.:

1. Provide electrical power to the gauge, refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection for proper procedure.
2. In B.U.D.S., select the **Setting** tab.
3. At the bottom of the page, select the **Cluster** tab.
4. Select **Imperial** or **Metric** in the **Cluster Units** field.




1. Cluster Units field

NOTE: Speedometer, odometer and trip meter will have their units (kilometer or miles) changed simultaneously.

Speedometer and Tachometer Pointer Adjustment

1. Make connections to use B.U.D.S. Refer to *COMMUNICATION TOOLS AND B.U.D.S.*
2. In B.U.D.S., select the **Setting** tab.
3. At the bottom of the page, select the **Cluster** tab.
4. Ensure to be facing gauge to prevent parallax error.
5. Click on **Clockwise** or **Counterclockwise** button to align gauge pointer with the zero (0).

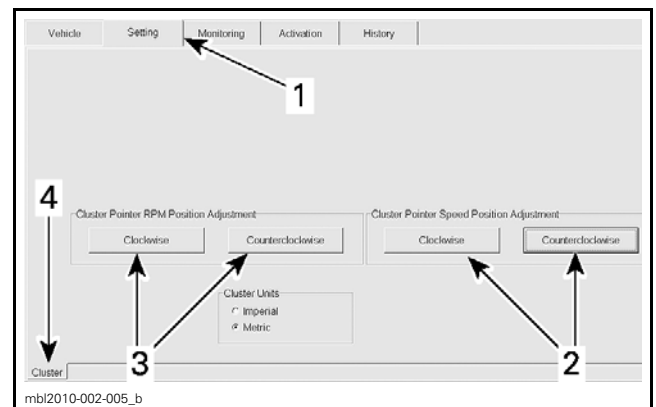


TYPICAL

1. Setting tab
2. Speedometer pointer buttons
3. Tachometer pointer buttons
4. Cluster tab

NOTE: Because of the fine tuning of the pointer, the button must be pressed several times before perceiving pointer movement.

6. Click on **Write Data** to save the new setting in the gauge.

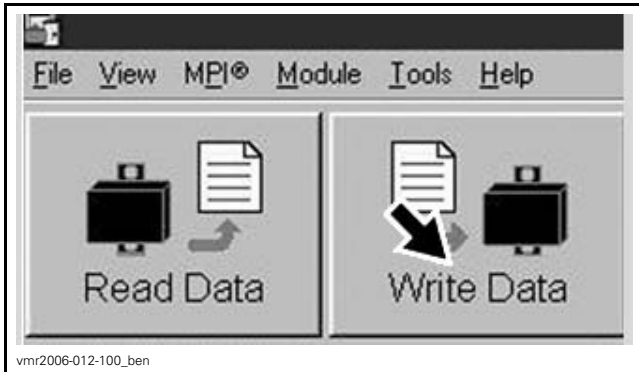

WRITE DATA

Displaying "P" Codes (Premium Gauge Only)


1. To activate **P CODE** mode, push and hold the "M" button for 2 seconds.
2. As you hold the "M" button, quickly turn ON and OFF the high beams a few times. The gauge will enter **P CODE** mode.
3. While in **P CODE** mode, use the "M" or "S" button to scroll over available failure codes.
4. Push and hold the "M" button to exit **P CODE** mode.

A **NO ACTIVE P CODE** message is displayed if there are no **P CODES** in memory.

Gauge Test With B.U.D.S.

The *GAUGE SELF TEST* can be duplicated using B.U.D.S.

1. Connect vehicle to B.U.D.S. Refer to *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. In B.U.D.S., choose the **Activation** tab.
3. At the bottom of the page, select the **Cluster** tab.
4. Select **WOW Test** in the **Activate** field.

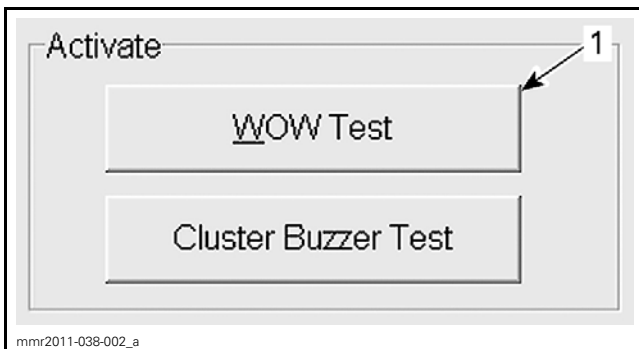

1. Select this button

Gauge Power Input Test (Main 12 Vdc)

If the gauge does not come on when the engine is started, carry out the following test.

1. Remove multifunction gauge.
2. Disconnect the gauge connector.
3. Set multimeter to Vdc.
4. Start engine.
5. Measure voltage with the battery ground as per following table.

MODEL	GAUGE CONNECTOR	VOLTAGE
E-TEC	Pin 8 (RD/OG)	Approximately 14.75 Vdc

6. If gauge main power input test was as specified, carry out the gauge *GROUND CIRCUIT CONTINUITY TEST*.
7. If no voltage was read, test wiring continuity. Refer to *WIRING DIAGRAM* for details.

NOTE: The gauge receives its main power input directly from the primary 12 Vdc bus. There are no fuses or relays to test, only wiring and connectors.

Gauge Ground Circuit Continuity Test

1. Set multimeter to Ω selection.
2. Measure for continuity of gauge ground wire as per following table.

GAUGE CONNECTOR	RESISTANCE
Pin 11 (BK)	Close to 0 Ω

If ground test failed, check vehicle ground. Refer to *POWER DISTRIBUTION* subsection.

If gauge power input test and ground circuit continuity tests are good, replace gauge.

Clock 12 Vdc Input Test (Premium Gauge)

If the clock function in the premium gauge does not hold the proper time of day when the engine is not running, carry out the following test.

NOTE: The clock receives 12 Vdc from the battery through the 5 A START/RER fuse (FB) in order to maintain correct time when the engine is not running.

1. Remove multifunction gauge.
2. Disconnect the gauge connector.
3. Set multimeter to Vdc.
4. Measure voltage as per following table.

MODELS	GAUGE CONNECTOR	VOLTAGE
All	Pin 9 (RD/VT)	Battery voltage


NOTE: If the START/RER fuse was open, the electrical start and RER functions would not be operational.

- If there is no voltage read, test input wire continuity. Refer to *WIRING DIAGRAM* for circuit details.

Gauge Beeper Test

To test beeper, perform the following test with B.U.D.S.

- Connect vehicle to B.U.D.S. Refer to *COMMUNICATION TOOLS AND B.U.D.S.*
- In B.U.D.S., choose the **Activation** tab.
- At the bottom of the page, select the **Cluster** tab.
- Select **Cluster Buzzer Test** in the **Activate** field.

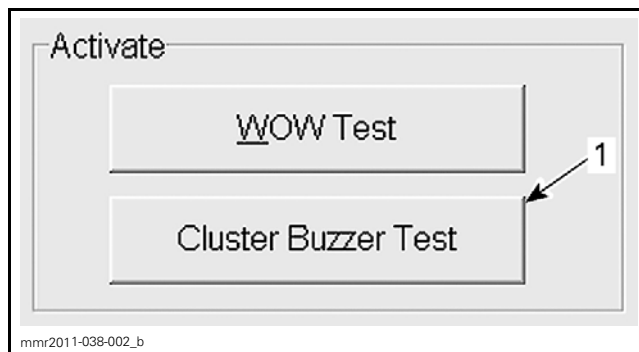

1. Select this button

You should hear a few beeps.

- If you do not hear the beeper, replace gauge.

Gauge Button Test with B.U.D.S.

Using the B.U.D.S. software, select the **Monitoring** tab.

On the bottom of the page, choose the **Cluster** tab.

Standard Gauge


Press on the gauge “S” button and look for applicable indicator light in the **Switch inputs** field to turn green.



1. Indicator light

Premium Gauge

Alternately press on the gauge “M” and “S” buttons and look for applicable indicator light in the **Switch inputs** field to turn green.

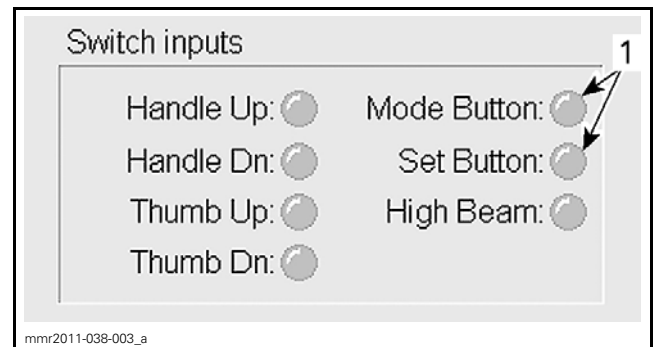

1. Indicator lights

All Gauges

If the indicator light(s) come ON in B.U.D.S., the gauge button(s) is(are) functioning correctly.


If the indicator light(s) do not come ON, check button(s). If they are in good condition, replace gauge.

Gauge Speedometer Function Test

First ensure the gauge pointer is not stuck. Refer to *GAUGE TEST WITH B.U.D.S.* in this subsection.

- Unplug speed sensor connector.

Subsection XX (LIGHTS, GAUGE AND ACCESSORIES)

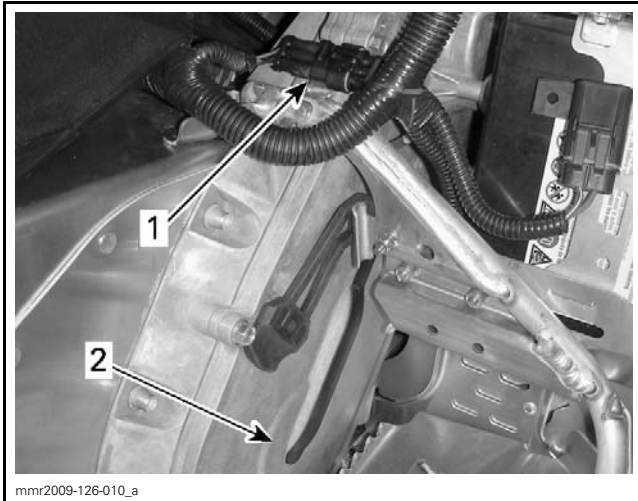

mnr2009-126-010_a

TYPICAL

1. Speed sensor connector
2. Speed sensor (inside cover)

2. Provide electrical power to the gauge for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection.
3. Use the FLUKE 115 MULTIMETER (P/N 529 035 868).
4. Set multimeter to Vdc.
5. Probe connector on vehicle harness side as per table.

GAUGE VOLTAGE TEST		
SPEED SENSOR CONNECTOR (MAIN HARNESS SIDE)		VOLTAGE
RD/BK	BK/RD	Close to battery voltage
GN/WH	BK/RD	Close to battery voltage

If test succeeded, gauge is good, proceed with *SPEED SENSOR SIGNAL TEST*.

If test failed, check wiring harness going to gauge. If wiring harness is good, replace gauge.

Gauge Fuel Level Function Test

1. Unplug fuel pump connector.
2. Provide electrical power to the gauge for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection.
3. Use the FLUKE 115 MULTIMETER (P/N 529 035 868).
4. Set multimeter to Vdc.
5. Probe connector on vehicle harness side as per table.


GAUGE VOLTAGE TEST		
FUEL LEVEL SENSOR CONNECTOR (MAIN HARNESS SIDE)		VOLTAGE
BU	BK/RD	Approximately 5 V

If test succeeded, gauge is good, proceed with *FUEL LEVEL SENSOR TEST* in *FUEL TANK AND FUEL PUMP* subsection.

If test failed, check wiring harness going to gauge. If wiring harness is good, replace gauge.


Gauge Removal

1. Open storage compartment.

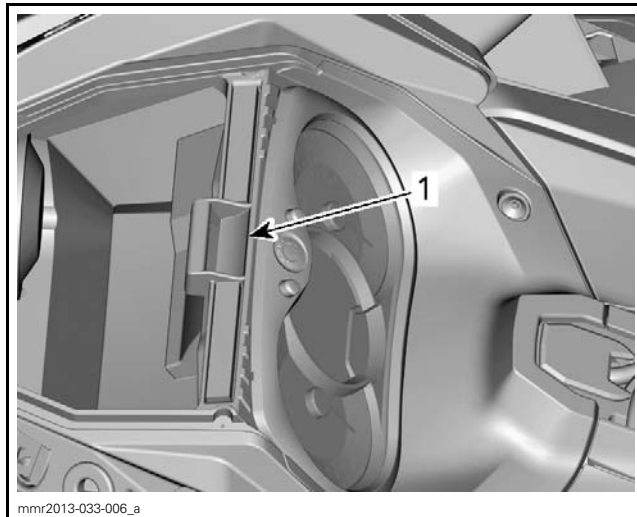


mnr2013-033-006_a

1. Storage compartment
2. Insert a small screwdriver in one of the rectangular slots at top of gauge.
3. As you gently press down on the screwdriver to release multifunction gauge locking tab, pull out and hold gauge in position.
4. Insert screwdriver in second hole and press to release other tab.

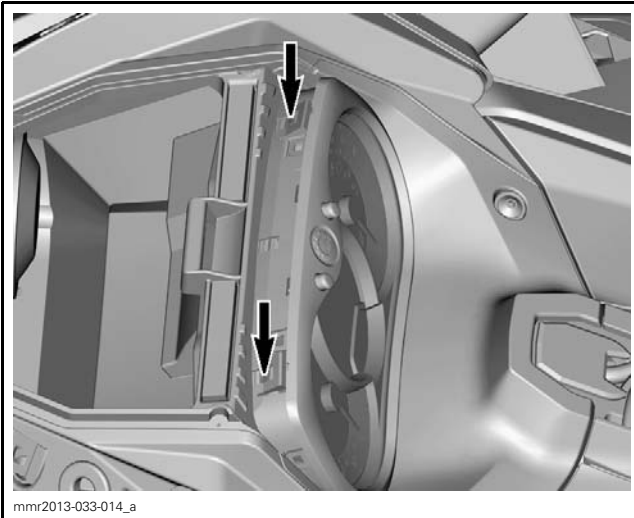

RETAINING TABS TO PRESS ON

5. Gently pull multifunction gauge from gauge support.

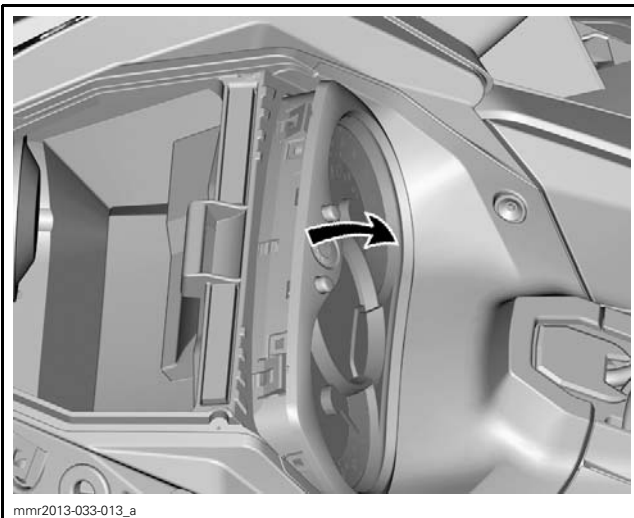

TYPICAL

6. Press on connector locking tab and pull connector off gauge.

7. Store gauge in a secure area to prevent it from being damaged.

Gauge Installation

1. Carefully align and install gauge connector, pressing it in until connector lock engages.
2. Insert bottom of gauge in gauge holder.
3. Press top of gauge in holder until you feel locking tabs engage in holder.
4. Start vehicle engine and test gauge functions.


NOTE: If a new gauge is installed, refer to *GAUGE TO ECM MATCHING*.

Gauge to ECM Matching


NOTE: If the gauge is replaced, the VIN (Vehicle Identification Number) and the vehicle model number must be entered in the gauge memory so they match those stored in the ECM.

If the numbers stored in the gauge do not match those stored in the ECM, the engine will start but the new gauge will stop operating within 10 seconds after the engine is started. The indicator needles will function normally but the LCD display will remain blank and the D.E.S.S. LED will be turned ON. This is a gauge anti theft feature.

1. To write the VIN number and model number into the gauge, connect to the applicable B.U.D.S. version for the **600 HO E-TEC and 800R E-TEC** from BOSSWeb. Refer to the *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. Follow the instructions in the referenced subsection and in the software.
3. Once connected and activated, select the **Read Data** button. You will see a message similar to the following illustration.

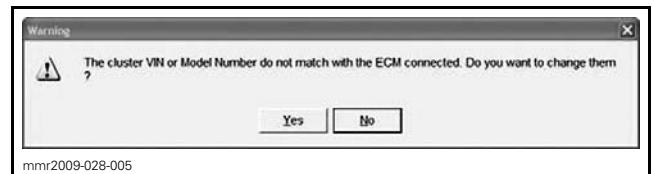


4. Select **Yes** in the displayed window.

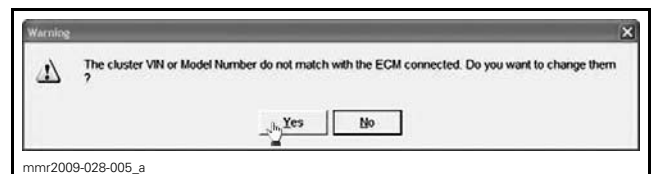


The following window illustrates that the VIN number or model number in the ECM and cluster are not the same.

Subsection XX (LIGHTS, GAUGE AND ACCESSORIES)

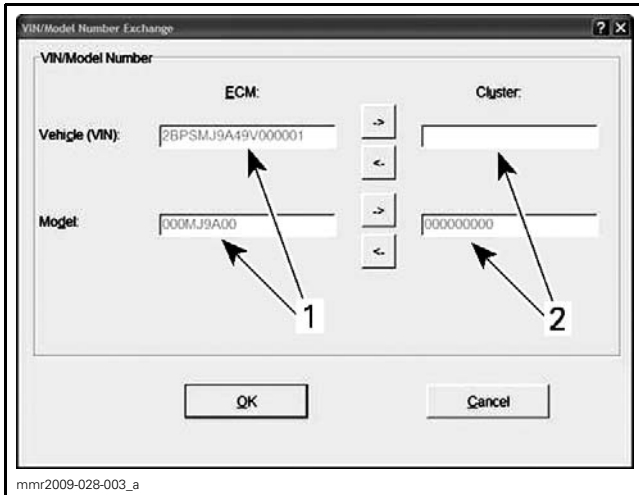


1. Numbers stored in ECM
2. No numbers stored in new cluster

5. Select each of the arrows indicated in the following illustration to copy the VIN and model numbers from the ECM to the cluster.

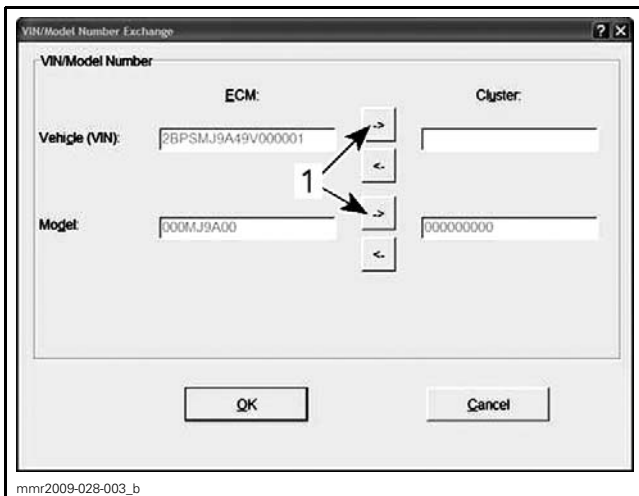


1. Select each arrow button indicated

Note how the numbers in the **Cluster** field now match those in the **ECM** field.

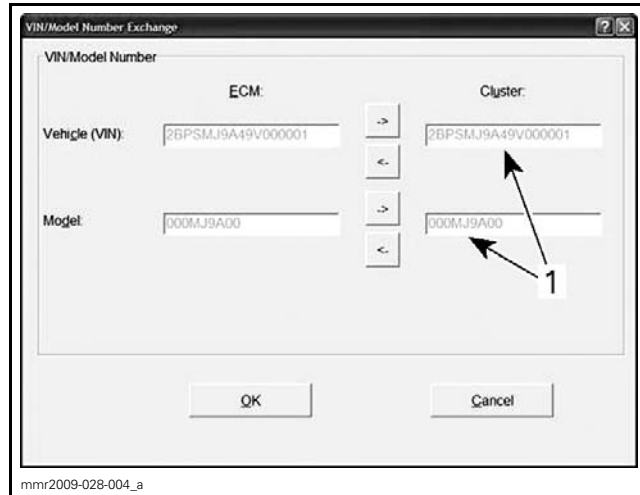

1. Numbers in Cluster field now match those in the ECM field

6. Select OK to continue.

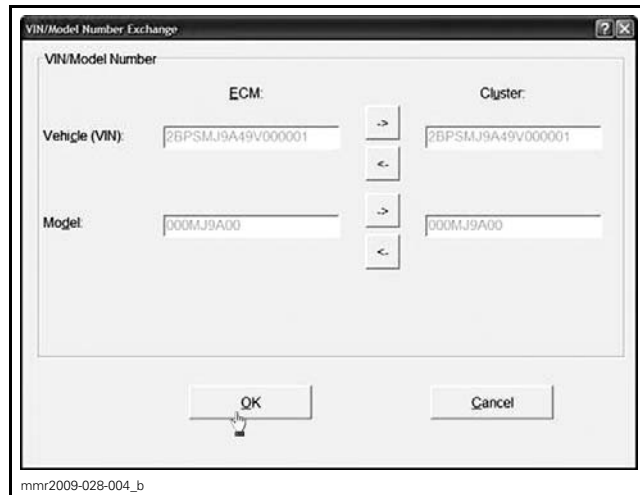


7. Once the gauge has been matched to the ECM, you will need to set the units of measurement (imperial or metric). See procedures in this subsection.

8. Ensure the gauge functions properly and that all settings and indications are within parameters.

9. Be sure to set the clock function according to gauge and vehicle type, refer to *CLOCK ACTIVATION (PREMIUM GAUGE)* in this subsection.

10. Shut down vehicle and disconnect the communication tools.

REMOTE MODE AND SET BUTTONS (PREMIUM GAUGE EXCEPT SUMMIT)

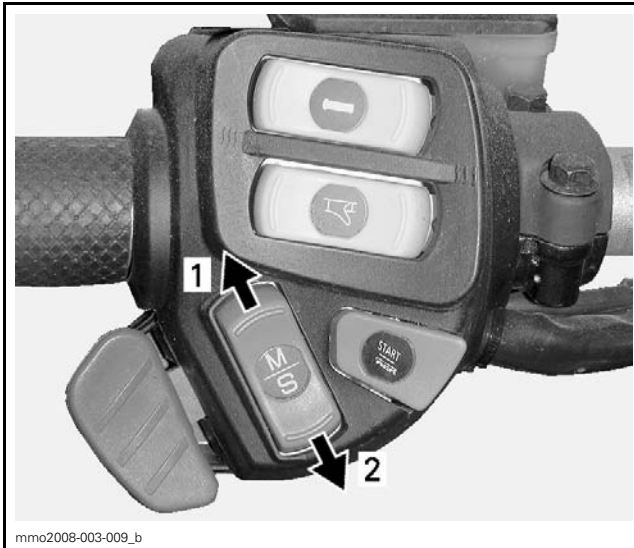


REMOTE M/S BUTTON
 1. MODE selection "M"
 2. SET selection "S"

Remote M/S Button Test with B.U.D.S.

1. Connect vehicle to the latest applicable B.U.D.S. version. Refer to the *COMMUNICATION TOOLS AND B.U.D.S.* subsection.
2. Using the B.U.D.S. software, select the **Monitoring** tab.
3. On the bottom of the page, choose the **Cluster** tab.
4. Alternately press on the remote "M" and "S" buttons and look for the applicable indicator light in the **Switch inputs** field to turn GREEN.

NOTE: Indicator lights should not be GREEN when no button is pressed.

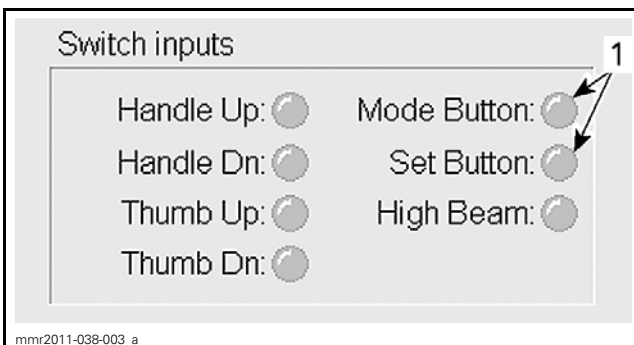


1. Indicator lights

If the indicator lights come ON in B.U.D.S., the remote M/S button is functioning correctly and the gauge receives the signals from the switches.

If the indicator lights do not come ON, verify the switch is not damaged internally, then carry out the *REMOTE M/S BUTTON CONTINUITY TEST* procedure in this subsection.

Remote M/S Button Continuity Test

1. If using the remote M/S button does not affect the indication, try using the buttons on the gauge. If they function, the remote M/S button circuit may be open.
2. Remove the gauge.
3. Disconnect the WMS connector (8 pin).

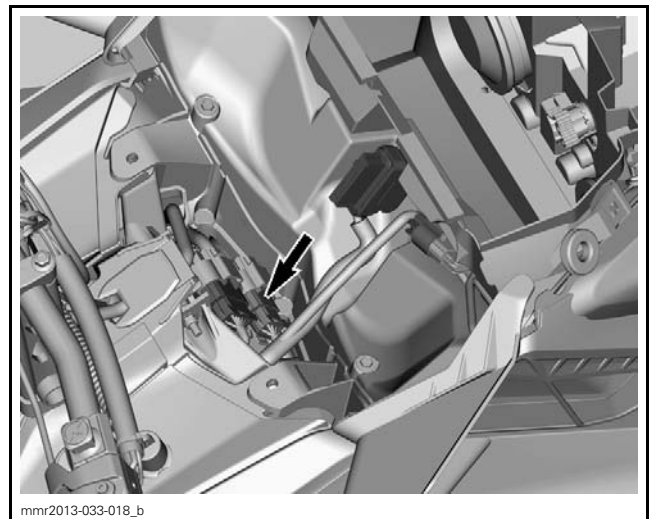

TYPICAL - WMS CONNECTOR (8 PIN)

4. Using a multimeter set to Ω , carry out the following continuity test.

REMOTE M/S BUTTON TEST (EXCEPT SUMMIT)			
SWITCH SELECTION	WMS CONNECTOR (8 PIN) WIRE		RESISTANCE
Centered	Pin B (YE/BN)	Pin A (BK)	Infinite Ω
	Pin G (YE/GN)		
M	Pin B (YE/BN)	Pin A (BK)	Close to 0 Ω
S	Pin G (YE/GN)		

If you do not obtain the values as specified, repair or replace switch, wiring and connections.

SPEED SENSOR

Speed Sensor Location

The speed sensor is mounted in the chaincase cover.

Speed Sensor Signal Test

First proceed with the *GAUGE SPEEDOMETER FUNCTION TEST* in this subsection.


1. Lift and support rear of vehicle.

CAUTION Use proper lifting techniques, notably using your leg force. Do not attempt to lift the vehicle if it is above your limits.

2. Ensure speed sensor connector is properly connected.
3. Provide electrical power to the gauge for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection for proper procedure.
4. Rotate driven pulley so that tracks rotates slowly.
5. Back-probe connector with Fluke TP88 rigid back probe pins or equivalent, between wires as per table.

NOTICE Be careful not to damage connector seals when back probing.

SPEED SENSOR SIGNAL TEST			
ROTATE DRIVEN PULLEY	SPEED SENSOR CONNECTOR (SENSOR SIDE)		VOLTAGE
		GN	BK

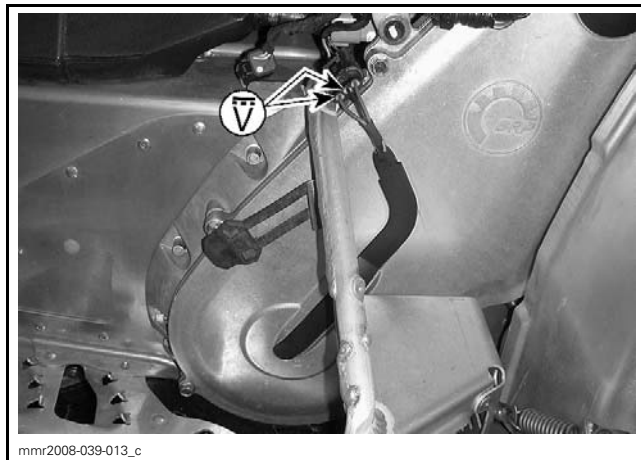

TYPICAL — SENSOR SIGNAL VOLTAGE TEST

The signal voltage should alternate between approximately 12 Vdc and 0 Vdc.

If test failed, replace the speed sensor.


Speed Sensor Replacement

The sensor can be replaced with the chaincase cover as an assembly. In such a case, refer to *CHAINCASE* subsection.

To replace sensor only, proceed as follows.

Speed Sensor Removal


1. Remove chaincase cover, refer to *CHAINCASE* subsection.
2. Using a heat gun, heat the speed sensor at plastic sheath end.

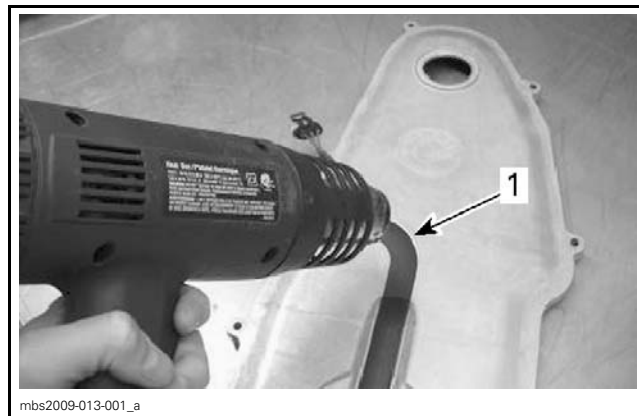

1. Plastic sheath end

NOTE: Plastic sheath color will slightly change, which tells it is adequately heated.


3. Use a flat screwdriver to pry out the end of the plastic sheath from chaincase cover.

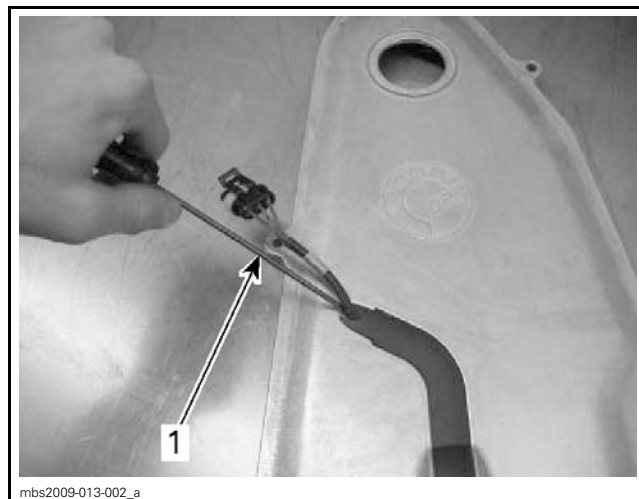

1. Prying out plastic sheath

NOTICE Use care when prying out the plastic sheath not to damage the chaincase cover.


4. Heat the next section of the plastic sheath.
5. Pry out the heated section using the flat screwdriver.
6. Repeat steps 4 and 5 until the plastic sheath is completely removed.
7. Use the flat screwdriver to remove the remaining sealant from the chaincase cover.

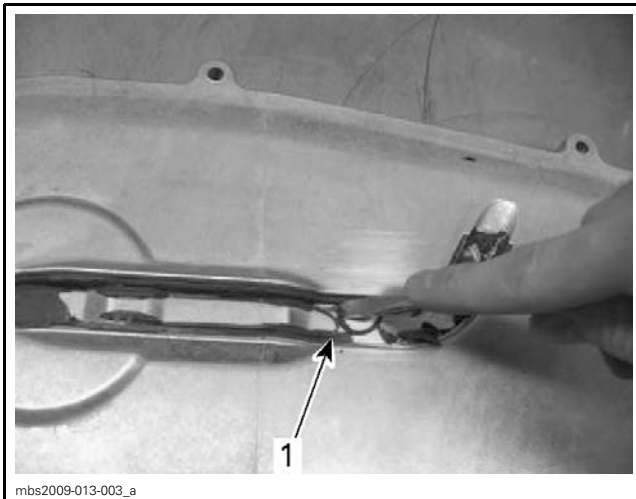

1. Remaining sealant

NOTICE Do not apply excessive pressure when removing the remaining sealant not to damage the chaincase cover.

8. Rub the sealant using a scouring pad.

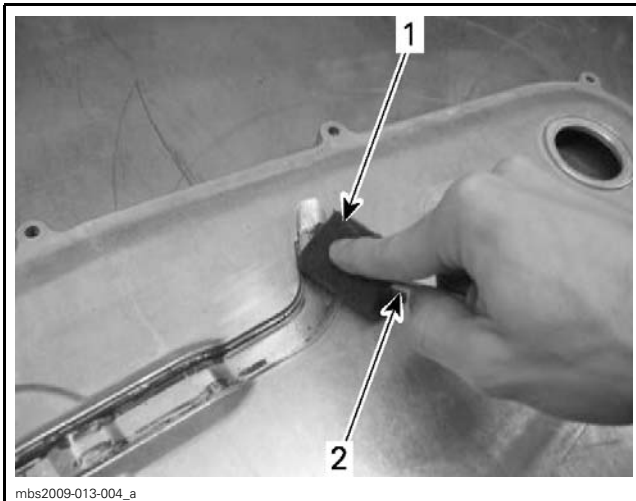


1. Scouring pad
2. Flat screwdriver

Speed Sensor Installation

1. Thoroughly clean the surface where the speed sensor is to be stuck.


NOTE: Make sure surface is clean and free of grease.

2. Slide the shrink tubing into sensor plastic housing. The end of tubing must be inside sensor plastic housing about 15 mm (19/32 in).

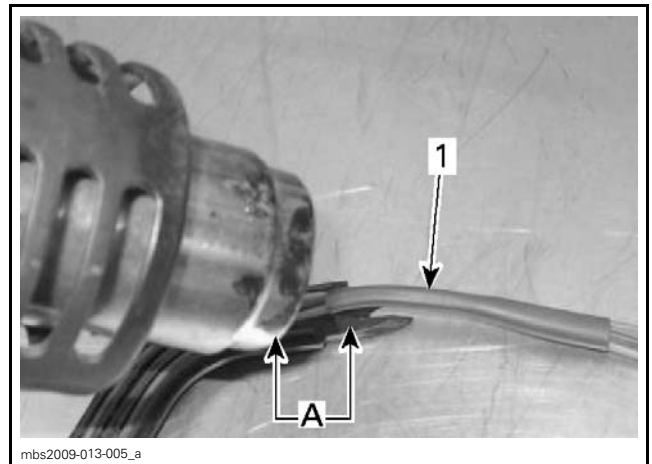

1. Shrink tubing
A. 15 mm (19/32 in)

3. Apply LOCTITE 5900 (P/N 293 800 066) under the sensor wires, between the end of the guide grooves and the plastic sheath extremity.

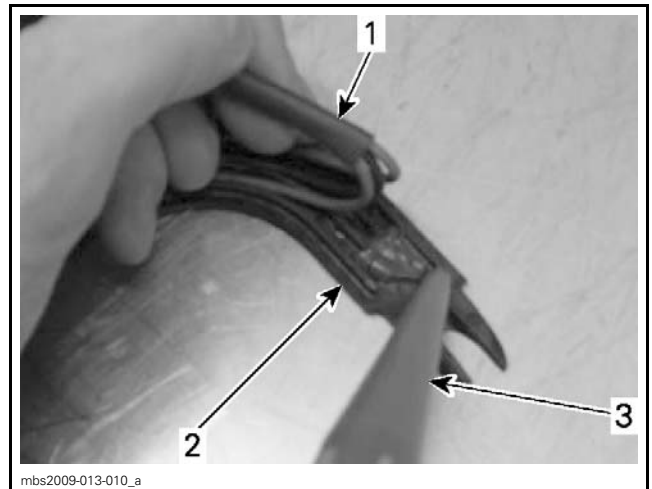


1. Sensor wires
2. Plastic sheath extremity
3. Loctite 5900 (P/N 293 800 066) bottle tip

NOTE: The assembly must be watertight.

4. Apply LOCTITE 5900 (P/N 293 800 066) all around the plastic sheath location on the chaincase cover.

Follow the pattern shown on the next picture.


Subsection XX (LIGHTS, GAUGE AND ACCESSORIES)

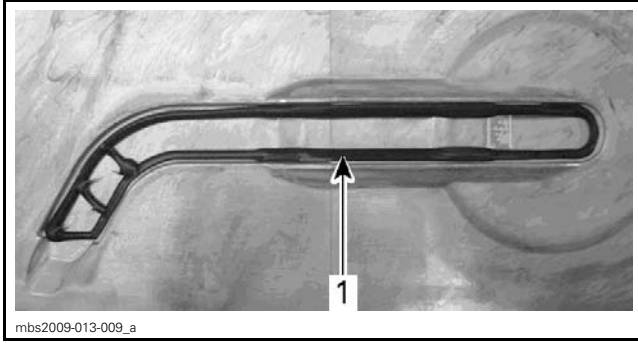

1. Loctite 5900 (P/N 293 800 066)

NOTE: Make sure the plastic sheath circumference is well covered.

5. Place the plastic sheath in position and firmly push in order to evacuate all the surplus sealant. Keep pressure for at least 1 minute.

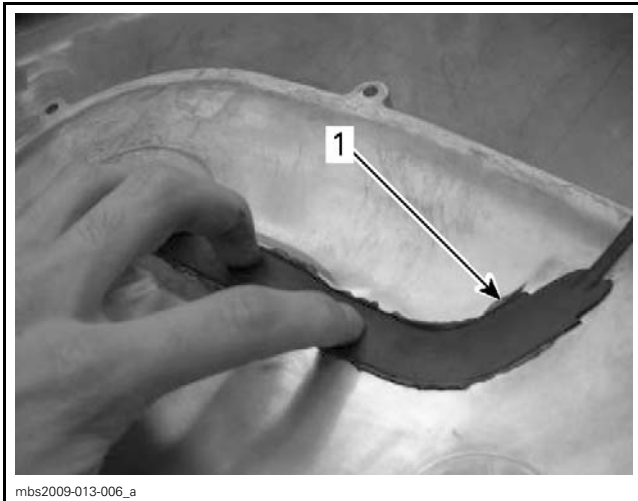


1. Surplus sealant

6. Wipe off all the sealant surplus around the plastic sheath.
7. Once cleaned up, inspect all the circumference for sealant lacks.

NOTE: Sealant must be visible all around.

8. Place some adhesive tape on the sensor to maintain a pressure on the sensor for at least 24 hours.

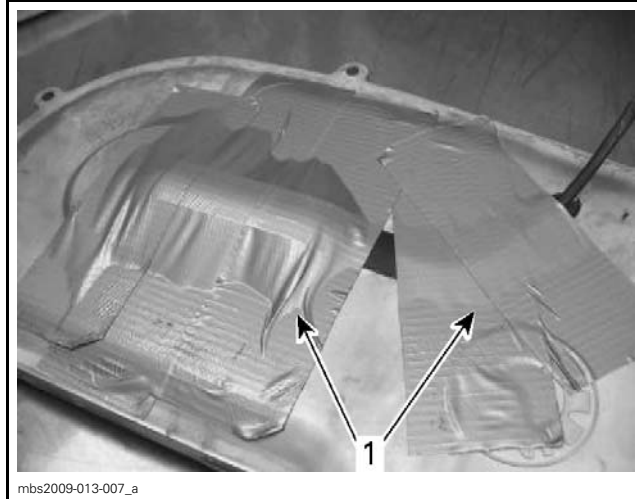

1. Adhesive tape

NOTE: Wait for at least 1 hour before exposing vehicle to cold temperature.

9. Reinstall chaincase cover, refer to *CHAINCASE* subsection.

FUEL LEVEL SENSOR

First proceed with the *GAUGE FUEL LEVEL FUNCTION TEST* in this subsection.


Refer to *FUEL TANK AND FUEL PUMP* for *FUEL SENSOR RESISTANCE TEST*.

HEATED THROTTLE LEVER

Throttle Lever Heat Switch Test with B.U.D.S.


1. Provide electrical power to the gauge for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection for proper procedure.
2. Using the B.U.D.S. software, select the **Monitoring** tab.
3. On the lower LH side of the page, choose the **Cluster** tab.
4. Press on the vehicle thumb lever heat switch to alternately increase or decrease heat.
5. In B.U.D.S., look for the applicable indicator light in the **Switch inputs** field to turn GREEN (Thumb Up or Thumb Dn).

NOTE: Indicator lights should not be GREEN when no button is pressed.

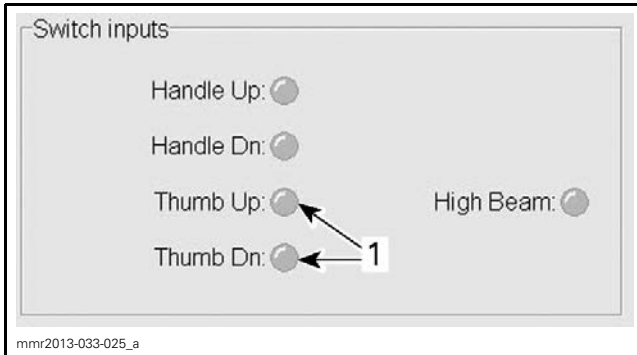

STANDARD GAUGE

1. Throttle lever heat selection

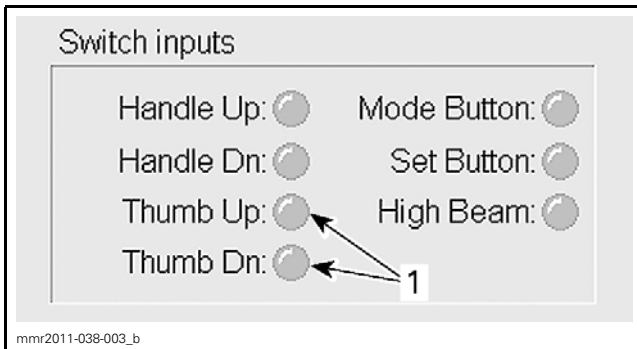

PREMIUM GAUGE


1. Throttle lever heat selection

If test is good, proceed with *GAUGE HEATER OUTPUT TEST WITH B.U.D.S.* in this subsection.

If test failed, proceed with *THROTTLE LEVER HEAT SWITCH TEST* in this subsection.

Gauge Heater Power Output Test with B.U.D.S.

1. Provide electrical power to the gauge for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection for proper procedure.
2. Using the B.U.D.S. software, select the **Activation** tab.
3. On the lower LH side of the page, choose the **Cluster** tab.
4. In B.U.D.S., select the **ON** button next to **Thumb**
5. Look for the indicator light next to the **ON** button to turn **GREEN** and touch throttle lever to confirm it heats up.

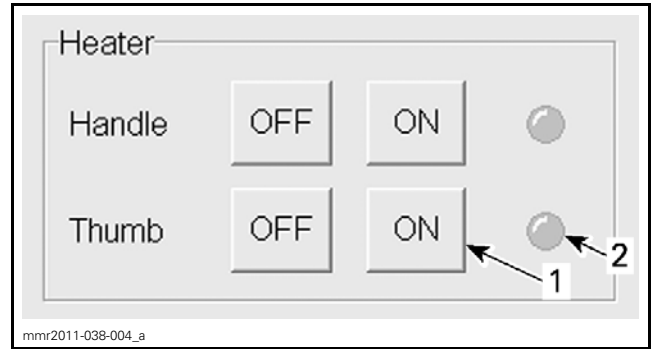

1. Throttle lever heat selection
2. Indicator light should turn **GREEN**


6. If test is good, the gauge output to throttle lever heater is good. Proceed with *THROTTLE LEVER HEATING ELEMENT TEST* in this subsection.

7. If the test failed, replace the gauge.

NOTE: When finished testing, ensure to select the **OFF** button next to **Thumb** in B.U.D.S.

Throttle Lever Heat Switch Test

1. Remove the gauge.
2. Disconnect the WMS connector (8 pin).

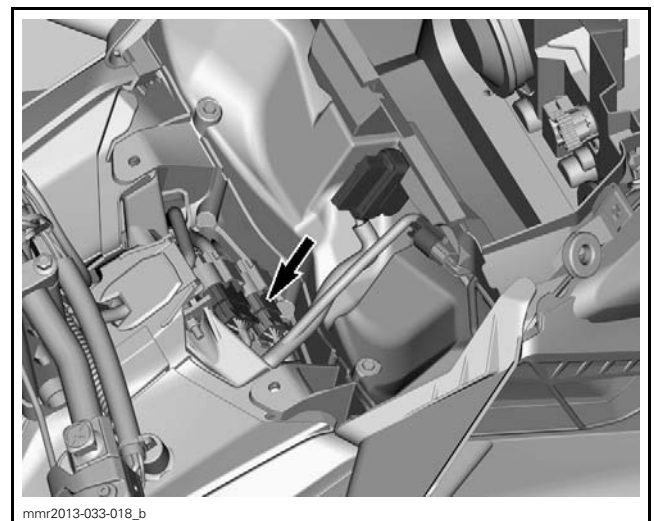

TYPICAL - WMS CONNECTOR (8 PIN)

3. Using the **FLUKE 115 MULTIMETER** (P/N 529 035 868), select the Ω position.
4. Test throttle lever heat switch and circuits as per table.


THROTTLE LEVER HEAT SWITCH TEST			
SWITCH SELECTION	WMS PIN		RESISTANCE
UP	D	A	Close to 0 Ω
	C	A	Infinite (OL)
DOWN	D	A	Infinite (OL)
	C	A	Close to 0 Ω

If continuity test is as per specification, proceed with *THROTTLE LEVER HEATING ELEMENT TEST* in this subsection.

If continuity test is out of specification, check switch circuit as per wiring diagram. If good, replace switch.

Throttle Lever Heating Element Test

1. Disconnect the RH steering connector (4 pin) located under the steering cover.

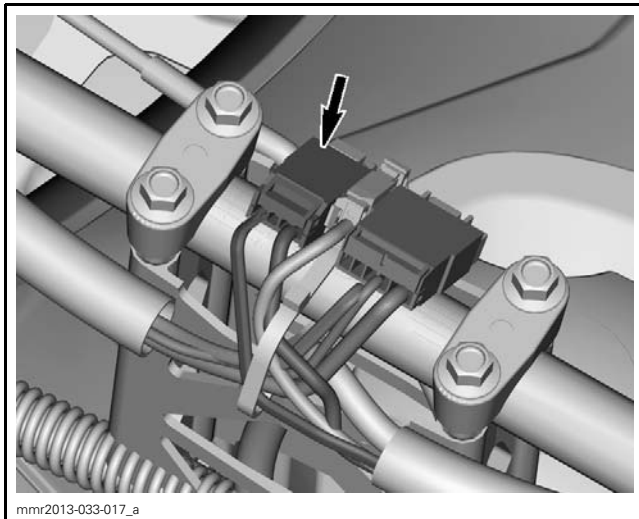

TYPICAL — RH STEERING CONNECTOR (4 PIN)

2. Carry out a resistance check of the heating elements as follows.

THROTTLE LEVER HEATING ELEMENT TEST STANDARD GAUGE			
SWITCH SELECTION	HEATER WIRE		RESISTANCE @ 20°C (68°F)
DOWN	BN/YE	BK	5.7 to 18.5 Ω
UP	BN		1.7 to 4.2 Ω


3. If readings are out of specifications, replace throttle lever.
4. If heating element readings are within specifications, check wiring and connections.
5. Reconnect connectors.

HEATED HANDLEBAR GRIPS


Handlebar Heated Grip Switch Test with B.U.D.S.

1. Provide electrical power to the gauge for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection for proper procedure.
2. Using the B.U.D.S. software, select the **Monitoring** tab.
3. On the lower LH side of the page, choose the **Cluster** tab.
4. Press on the vehicle handle grip heat switch to alternately increase or decrease heat.
5. In B.U.D.S., look for the applicable indicator light in the **Switch inputs** field to turn GREEN (Handle Up or Handle Dn).

NOTE: Indicator lights should not be GREEN when no button is pressed.

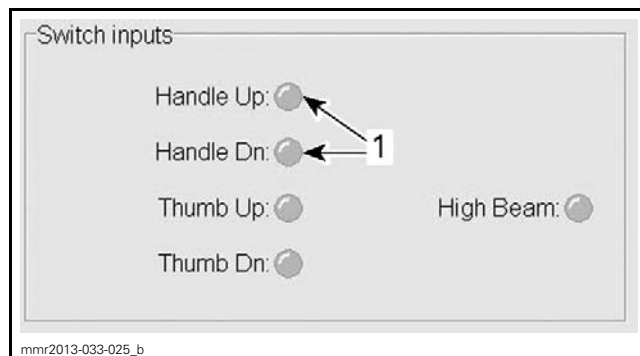

STANDARD GAUGE
1. Handle grip heat selection

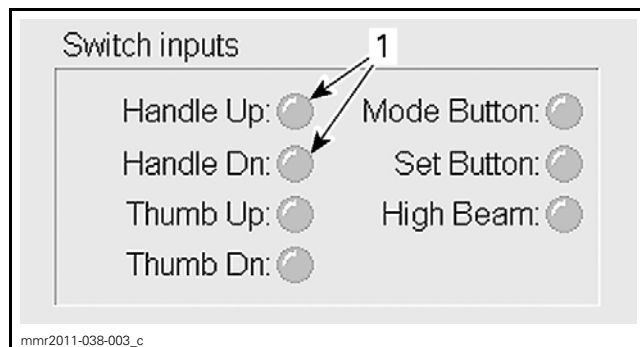


PREMIUM GAUGE
1. Handle grip heat selection

If test is good, proceed with *GAUGE HEATER OUTPUT TEST WITH B.U.D.S.* in this subsection.

If test failed, proceed with *HANDLEBAR GRIP HEAT SWITCH TEST* in this subsection.

Gauge Heater Power Output Test with B.U.D.S.

1. Provide electrical power to the gauge for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection for proper procedure.
2. Using the B.U.D.S. software, select the **Activation** tab.
3. On the lower LH side of the page, choose the **Cluster** tab.
4. In B.U.D.S., select the **ON** button next to **Handle**
5. Look for the indicator light next to the **ON** button to turn GREEN.

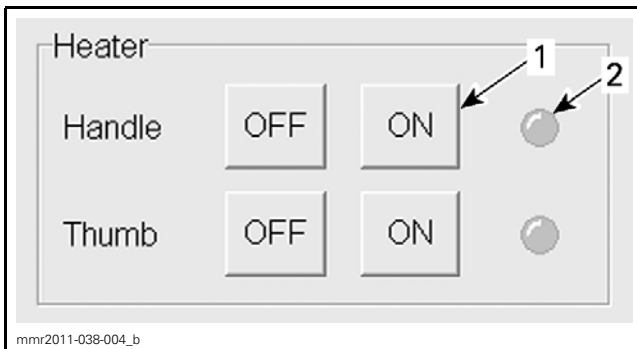

1. Hand grip heat selection
2. Indicator light should turn GREEN


6. If test is good, the gauge heater to handlebar grip heater is good. Proceed with *HANDLEBAR GRIP HEATING ELEMENT TEST* in this subsection.
7. If the test failed, replace the gauge.

NOTE: When finished testing, ensure to select the **OFF** button next to **Handle** in B.U.D.S.

Handlebar Heated Grip Switch Test


Remove the gauge.

Disconnect the WMS connector (8 pin).

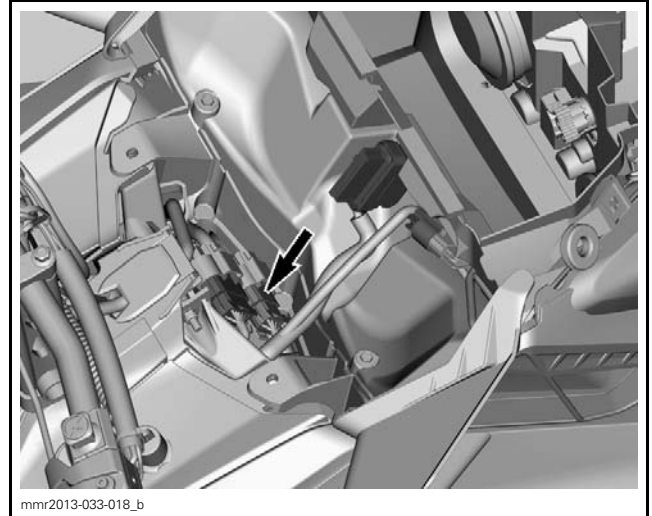


TYPICAL - WMS CONNECTOR (8 PIN)

Disconnect both LH (6 pin) and RH (4 pin) connectors under the steering cover.

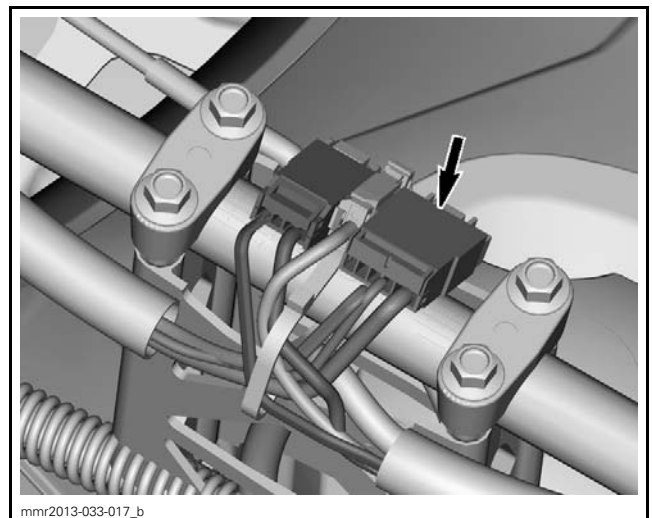

TYPICAL LH STEERING CONNECTOR (6 PIN)

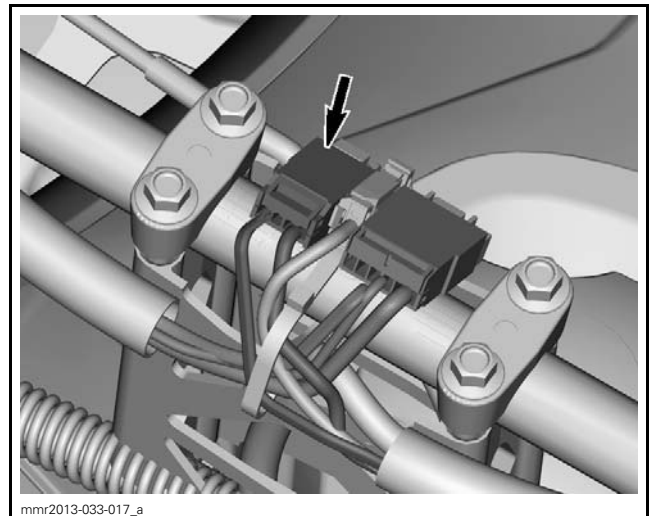

TYPICAL — RH STEERING CONNECTOR (4 PIN)

Subsection XX (LIGHTS, GAUGE AND ACCESSORIES)

To test the RH heater circuit, probe the RH steering connector (4 pin).

To test the LH heater circuit, probe the LH steering connector (6 pin).

Using the FLUKE 115 MULTIMETER (P/N 529 035 868), select the Ω position.

Test handlebar grips switch and circuits as per table.

HANDLEBAR HEATED GRIP SWITCH TEST RH HEATER			
SWITCH SELECTION	WMS PIN	RH PIN	RESISTANCE
UP	F	1	Close to 0 Ω
		4	Infinite (OL)
DOWN	E	4	Infinite (OL)
		1	Close to 0 Ω

HANDLEBAR HEATED GRIP SWITCH TEST LH HEATER			
SWITCH SELECTION	CONNECTORS		RESISTANCE
	WMS PIN	LH PIN	
UP	F	2	Close to 0 Ω
		1	Infinite (OL)
DOWN	E	1	Infinite (OL)
		2	Close to 0 Ω


If continuity test is as per specification, proceed with *HANDLEBAR GRIP HEATING ELEMENT TEST* in this subsection.

If continuity test is out of specification, check switch circuit. If good, replace switch.


Handlebar Grip Heating Element Test

If you cannot feel the temperature increase of a hand grip heating element, carry out the following steps.

1. Disconnect the two steering connectors located under the steering cover.

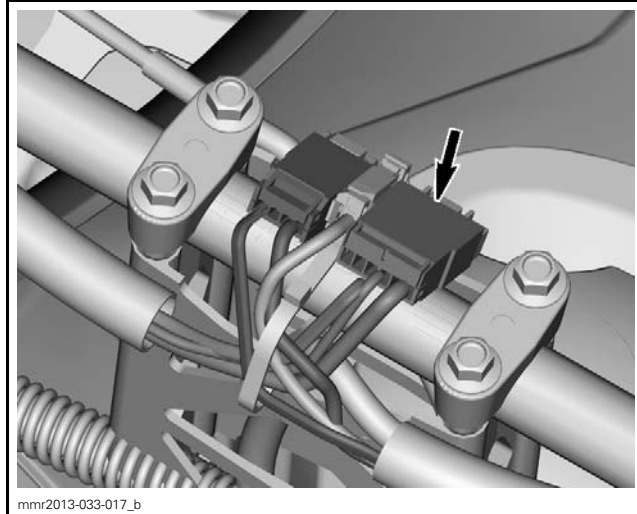

TYPICAL LH STEERING CONNECTOR (6 PIN)

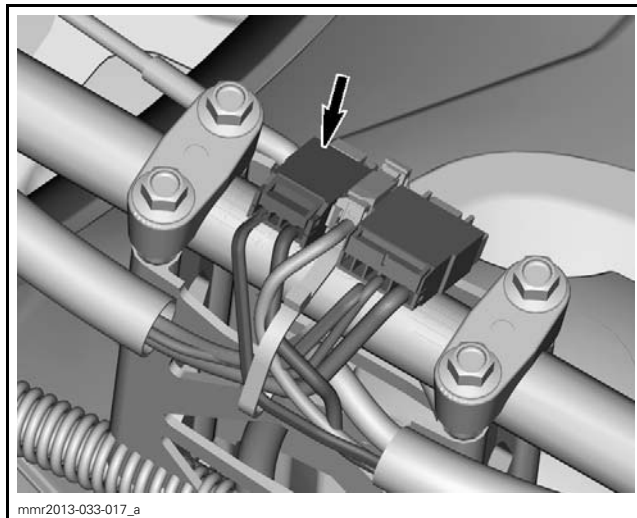

TYPICAL — RH STEERING CONNECTOR (4 PIN)

2. Test heating elements on either side as per following specifications.

HANDLEBAR GRIP HEATING ELEMENT TEST 32 W ADHESIVE FILM HEATERS FOR ALUMINUM HANDLEBAR		
HEATER WIRE		RESISTANCE @ 20°C (68°F)
OG	BK	5.3 to 6.6 Ω

3. If readings are out of specifications, replace applicable handle grip heating element.

4. If heating element readings are within specifications, check wiring and connections.

5. Reconnect connectors.

Heater Element Removal


NOTICE Heater wire routing may vary significantly due to different type handlebars and vehicles. Its highly important to take note of exact positioning of grip heaters, locking ties, and wire routing before removing them from the handlebars. Failure to properly route wires may lead to equipment damage or failure.

1. Remove the following items as applicable, refer to *STEERING SYSTEM* subsection for details.
 - Steering cover
 - Rubber hand grip
 - Multifunction switch cover.
2. Disconnect the LH (6 pin) or RH (4 pin) steering connectors under the steering cover (as applicable).




TYPICAL — STEERING CONNECTORS

3. Open the cover on the back of the connector housing using a small screwdriver or a suitable tool.

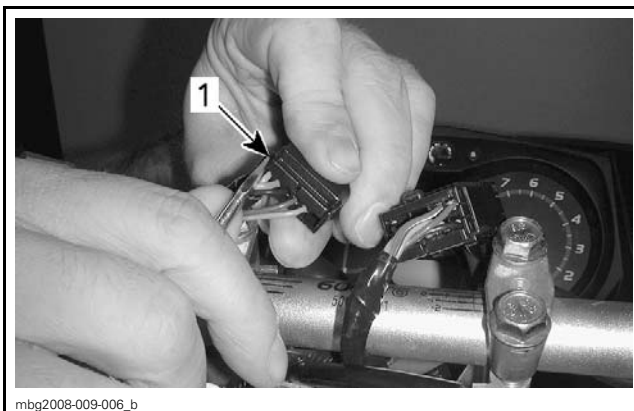

TYPICAL
1. Connector housing cover locks (one each side)

4. Using an appropriate tool such as the MULTILOCK - TERMINAL EXTRACTION TOOL (P/N 755430-2), unlock the heater wire terminals and push them out of the connector housing.

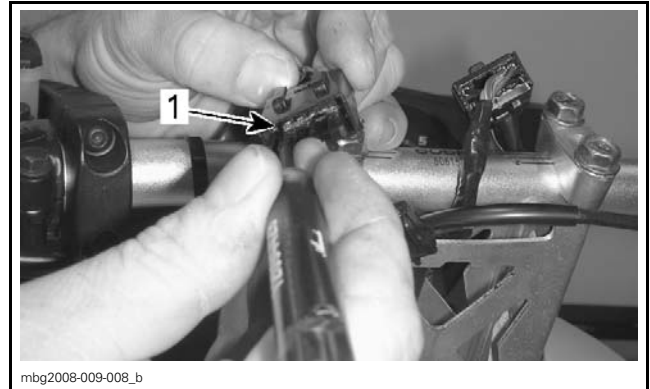


TYPICAL — UNLOCKING CONNECTOR PIN (FRONT SIDE)
1. Pin removal tool inserted above pin

NOTE: Terminals are unlocked and pushed out from the front (pin side) of the connector housing.

NOTICE Be sure to take note of exact positioning of grip heaters, locking ties, and wire routing before removing them from the handlebars.

5. Cut locking ties securing heater wires to handlebars.
6. Pull wires from harness protective sheath, multifunction switch housing or throttle lever housing.
7. Cut and remove black electrical tape from heater element and remove heater from cork insulator.

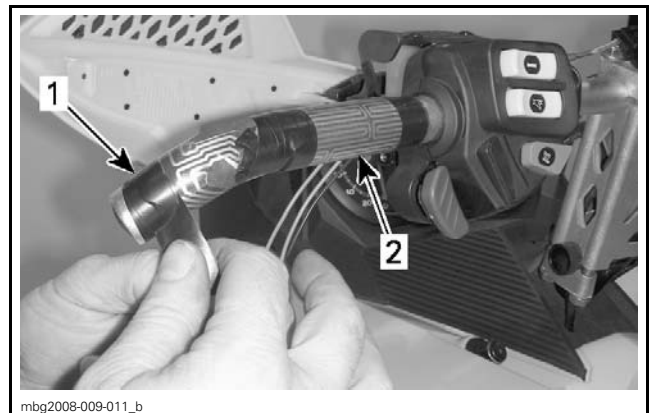


TYPICAL — LH HEATER
1. Electrical tape (4 places)
2. Heater element

8. If damaged, remove cork insulator from handlebar and clean all adhesive residue from the handlebar.

Heater Element Installation

1. Measure 159 mm (6.25 in) from the end of the handlebar, and across the top of the bend in the bar. Trace a reference line with a marker at that point on the handlebar.


Subsection XX (LIGHTS, GAUGE AND ACCESSORIES)

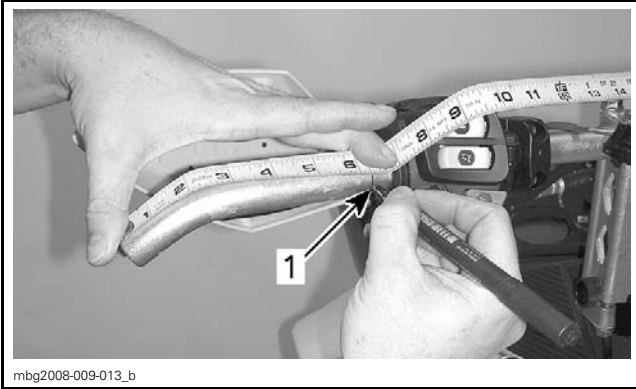

TYPICAL — MEASURING FOR HEATER POSITION


1. Trace reference line

2. Align the edge of the cork insulator with the reference line centered with the handlebar folding axis as illustrated.

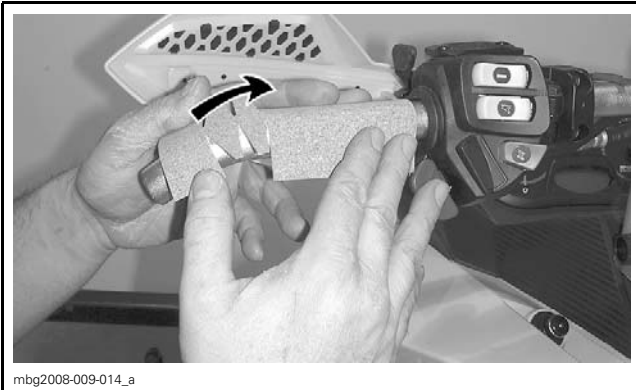

TYPICAL — CORK INSULATOR ALIGNMENT

3. Apply firm pressure to cork insulator to assure proper adherence to handlebar.
4. Align the film heater element with the cork insulator and center of handlebar folding axis as illustrated.

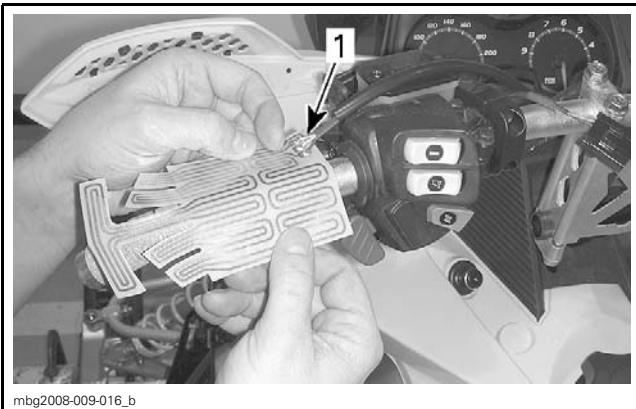


TYPICAL — HEATER ALIGNMENT

1. Heater wire position (LH front, RH rear)

5. Apply firm pressure to heater to assure proper adherence to cork insulator.

NOTE: The same heater element is used for both the LH and RH sides. Therefore, the electrical wiring will be in front of the handlebar on the LH side, and behind the handlebar (towards driver) on the RH side.


6. Apply two turns of black electrical tape at each of the four locations illustrated so that it covers the edges of the heater element and prevents snagging and damage to the element during rubber grip installation.

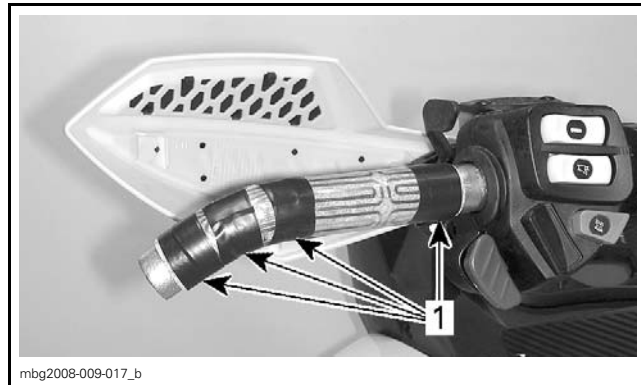

TYPICAL

1. Electrical tape application (4x)


NOTE: It is highly important to apply tape so that it fully secures the electrical wire connections. This will ease installation of the rubber hand grip and prevent undue stress to the connections.

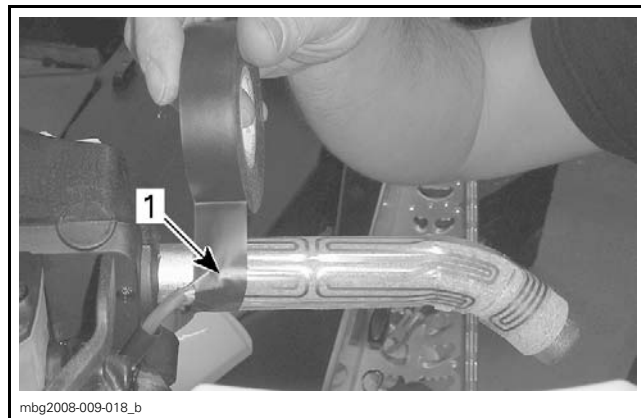

TYPICAL — IMPORTANT

1. Tape application over wire connections

7. Install rubber hand grip, refer to *STEERING SYSTEM* subsection for detail.
8. Route wiring as noted during the removal procedure.
9. Insert wire connectors in steering connector housing, refer to *WIRING DIAGRAM* for wire color and pin number locations.

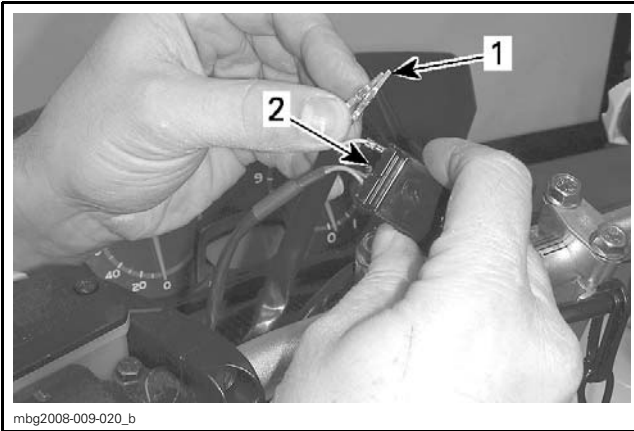

TYPICAL


1. Heater wire terminals
2. Insertion through back of connector

NOTE: On vehicles equipped with premium gauges, only two of the heater wires are used. The ORANGE/VIOLET wire terminal will need to be cut off near the connector, insulated (using heat shrink, a terminal end or electrical tape), then stored inside the wire harness protective sheath.

10. Install locking ties to secure the heater wire tightly against the handlebar.

⚠ WARNING

To ensure RH heater wires does not prevent smooth operation of throttle lever, it must be passed straight through the housing without any slack, and secured with a locking tie immediately after the lever housing.

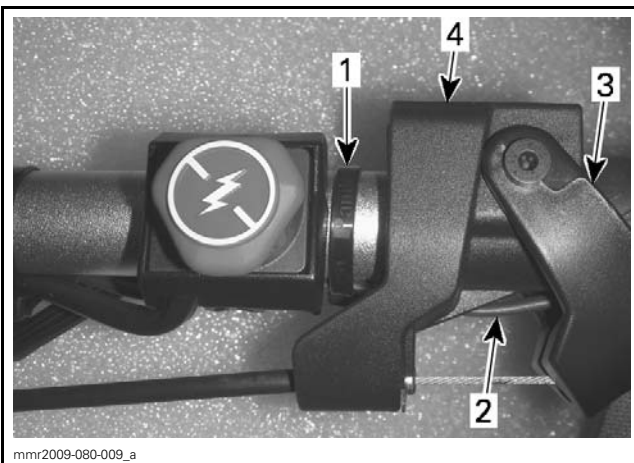

TYPICAL

1. Locking tie
2. Heater wire straight through throttle lever housing
3. Throttle lever
4. Lever housing

NOTICE Ensure LH heater wires are properly routed through multifunction switch housing to prevent them from being pinched when installing housing cover. Pinched or damaged wires may result in a short circuit.

11. Provide electrical power to the heaters for testing. Refer to *LIGHTING AND ACCESSORIES SYSTEM TESTING* in the *TROUBLESHOOTING* topic at the beginning of this subsection for proper procedure.
12. Using the hand grip heat switch, turn on the hand grip heaters and ensure they are functioning correctly.

DRIVE BELT


SERVICE TOOLS

Description	Part Number	Page
TENSIOMETER.....	414 348 200	7

Subsection XX (DRIVE BELT)

⚠️ WARNING
Make good contact with the pulley when applying the tension.
Because of rotating parts - they could cause injuries or
even your death.

⚠️ AVERTISSEMENT
En contact avec la poulie, assurez-vous d'être en plein contact
pour éviter les blessures ou la mort.

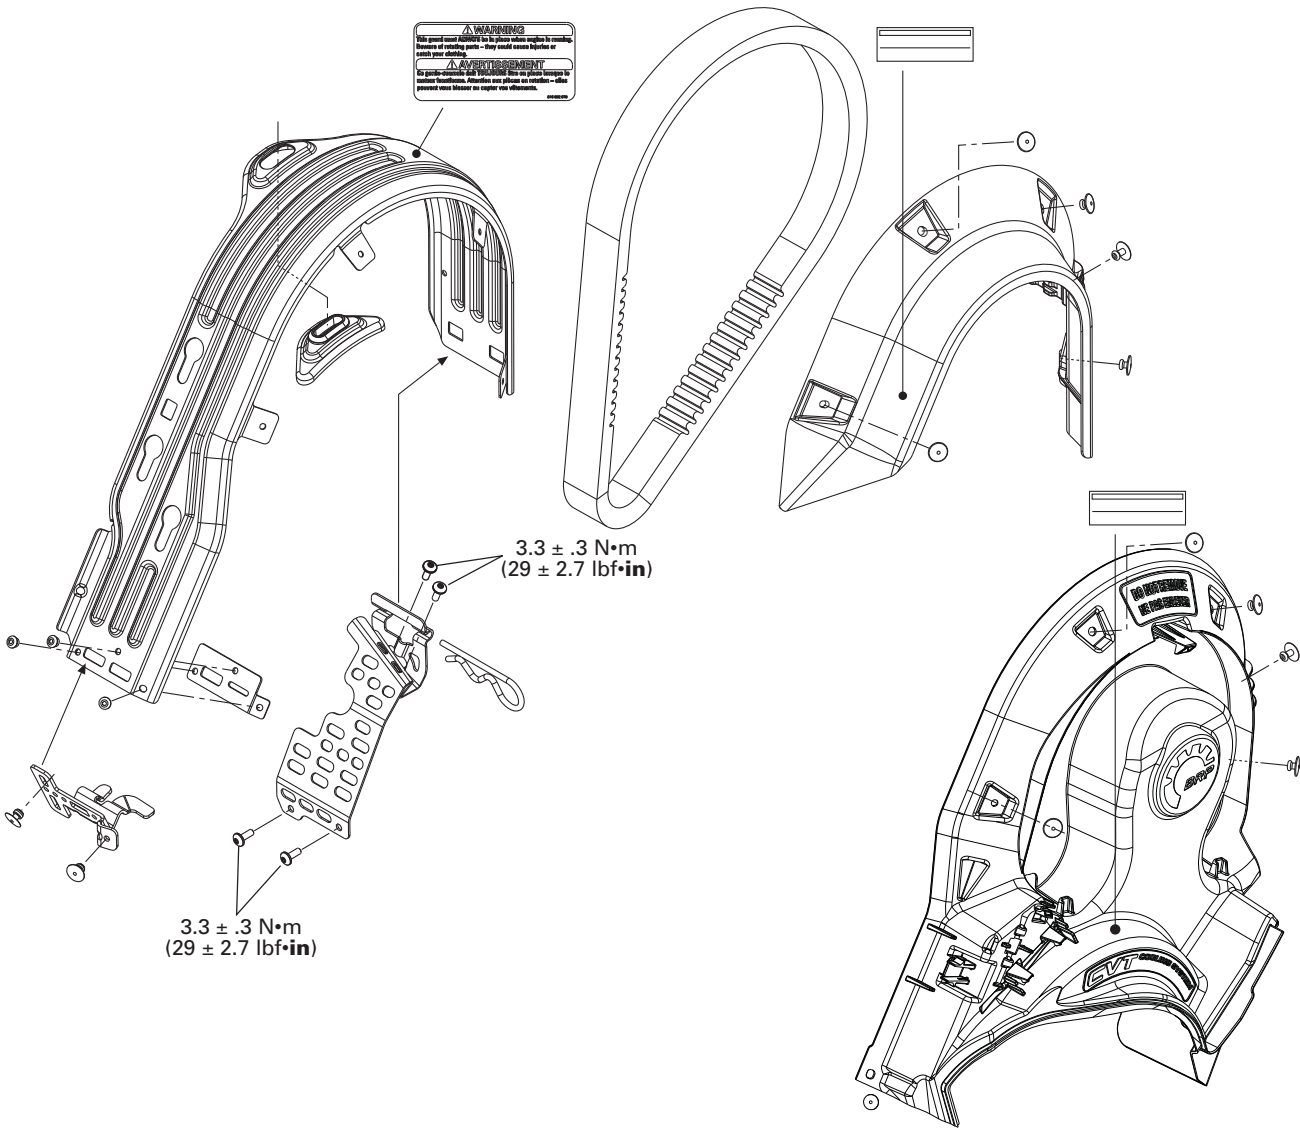

**Paperless Manuals
For a Better Tomorrow**

mnr2013-034-100_a

If you bought this manual from any other seller please leave them
NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

GENERAL

DRIVE BELT APPLICATION

Always use the drive belt specified in the BRP *PARTS CATALOG* as applicable to vehicle and engine model.

TROUBLESHOOTING

VEHICLE CREEPS FORWARD AT IDLE

1. Improper drive belt height (too high)
 - Refer to *DRIVE BELT HEIGHT ADJUSTMENT procedure* in this subsection.

ENGINE STALLS WHEN ENGAGING RER

1. Improper drive belt height (too high)
 - Refer to *DRIVE BELT HEIGHT ADJUSTMENT procedure* in this subsection.


PROCEDURES

DRIVE BELT GUARD

NOTE: Belt guard is purposely made slightly over-size to maintain tension on its pins and retainers preventing undue noise and vibration.

Drive Belt Guard Removal

1. Remove LH side panel.
2. Remove retaining pin.

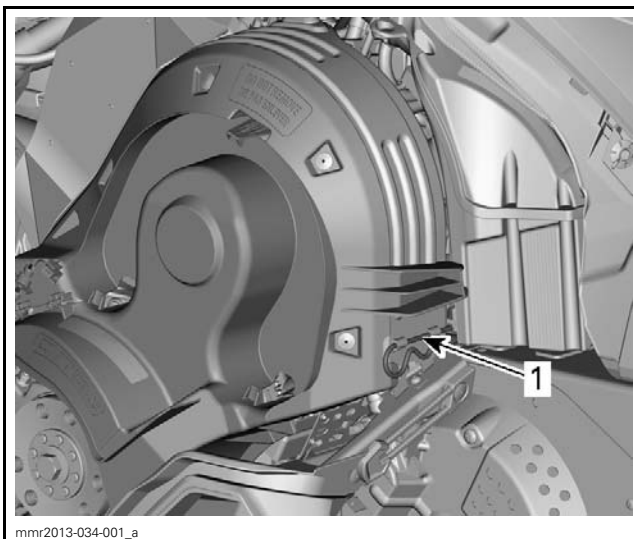


TYPICAL

1. Retaining pin

3. Lift rear portion of guard then release from front tabs.


Drive Belt Guard Installation

1. Insert belt guard tab in front support slot.

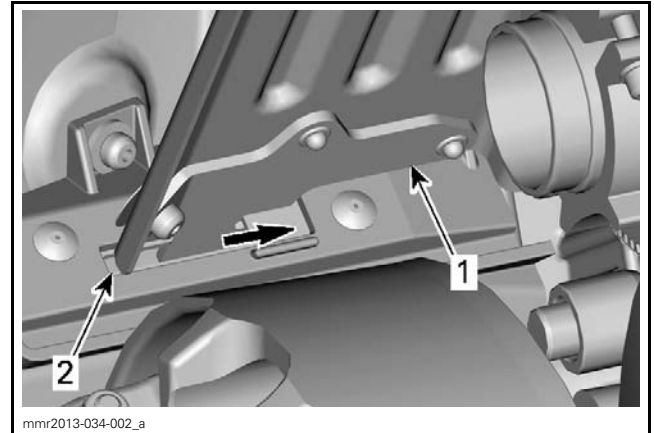


1. Belt guard tab
2. Front support slot

2. Push drive belt guard toward engine then toward front of vehicle.

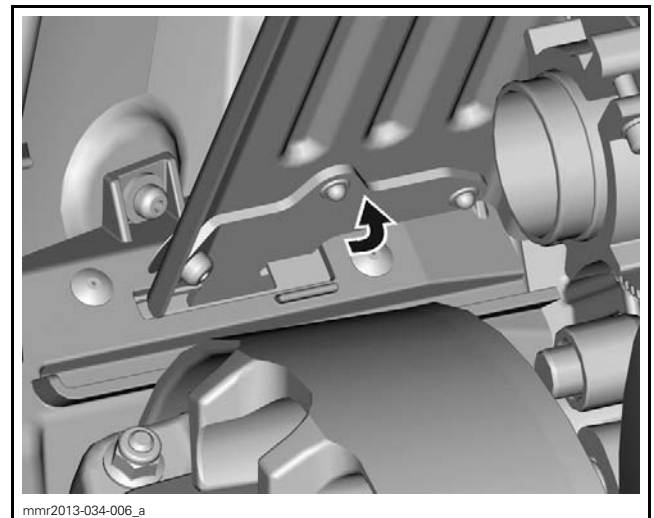


3. Position the grommet over the retaining rod. It may be necessary to slightly lift the console to make room.

Subsection XX (DRIVE BELT)

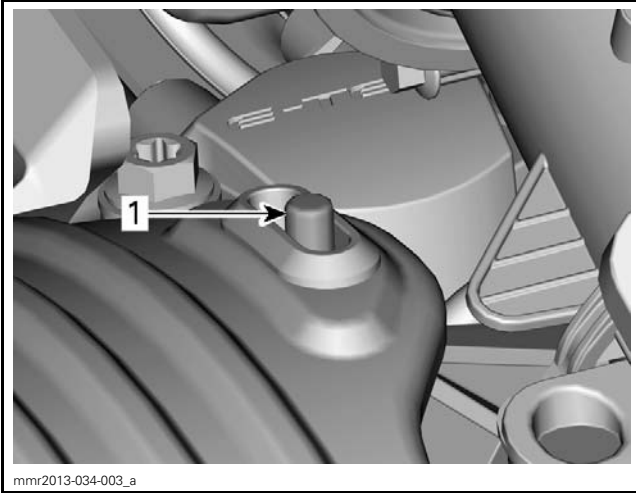

1. Retaining rod

4. Position rear portion of the drive belt guard over the retainer and secure it using the retaining pin.

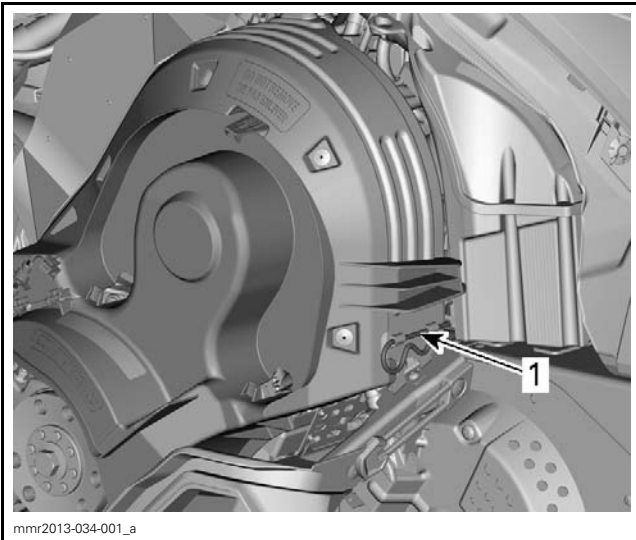


1. Retaining pin

DRIVE BELT GUARD SUPPORT

Drive Belt Guard Support Removal

1. Remove the drive belt guard.
2. Remove screws securing the support to vehicle.

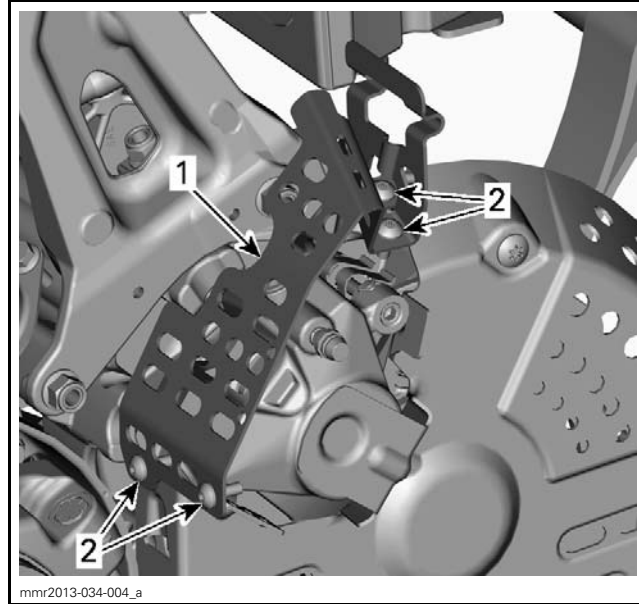

TYPICAL

1. Drive belt guard support
2. Screws

Drive Belt Guard Support Installation


The installation is the reverse of the removal procedure. However pay attention to the following.

Tighten screws to 3.5 N•m (31 lbf•in).

DRIVE BELT

Drive Belt Removal

1. Remove tether cord cap from engine cut-off switch.
2. Remove LH side panel.
3. Remove drive belt guard, refer to *DRIVE BELT GUARD REMOVAL*.
4. Insert the driven pulley expander provided in the tool kit in the threaded hole on the adjuster hub as illustrated.

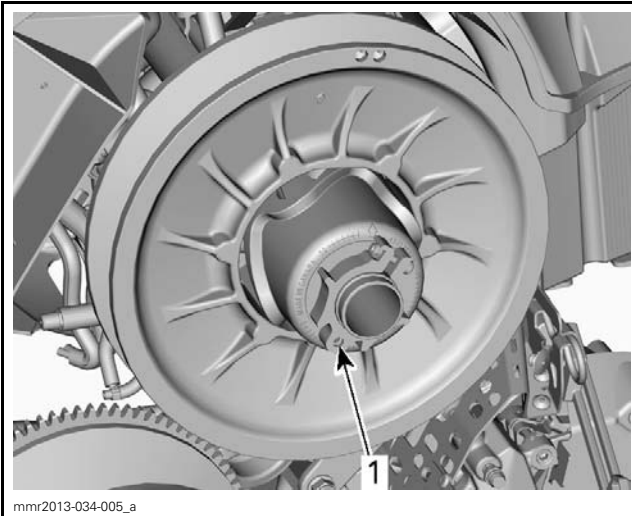

PULLEY EXPANDER TO BE INSTALLED HERE - ON ADJUSTER HUB

5. Open the driven pulley by screwing the tool in.
6. Remove the belt by slipping it over the top of the driven pulley, then out of the drive pulley.

Drive Belt Inspection

Inspect belt for:

- Cracks
- Fraying
- Abnormal wear (uneven wear, wear on one side, missing cogs, torn fabric).

If abnormal wear is noted, the probable cause could be:

- Pulley misalignment
- Excessive RPM with frozen track
- Fast starts without warm-up period
- Scratched or rusty sheave
- Oil on belt
- Distorted spare belt.

Check drive belt width. Replace the drive belt if its width is under minimum recommended specification.


ENGINE	DRIVE BELT	
	NEW	WEAR LIMIT
600 HO E-TEC	38.5 mm (1.516 in)	36.1 mm (1.421 in)
800R E-TEC	38.3 mm (1.508 in)	35.9 mm (1.413 in)

Drive Belt Installation

1. If necessary, open the driven pulley, refer to *DRIVE BELT REMOVAL*.
2. Insert drive belt in the drive pulley, then pull it over the driven pulley.

NOTICE Do not force or use tools to pry the belt into place, as this could cut or break the cords in the belt.

NOTE: The maximum drive belt life span is obtained when the belt is installed with the arrows on the belt pointing in the direction of rotation.

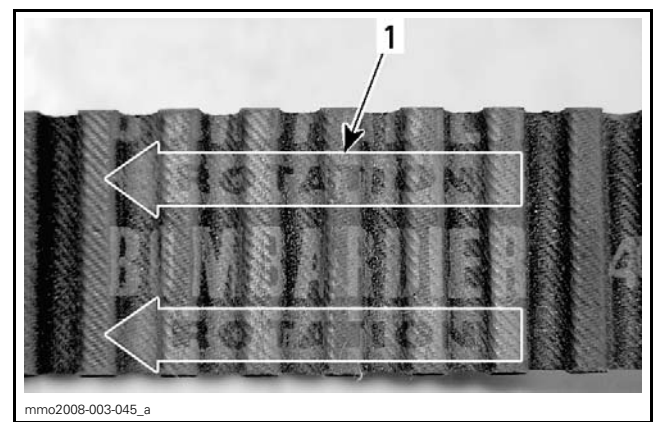

TYPICAL


1. To be pointed in the direction of rotation

3. Unscrew and remove the driven pulley expander from the driven pulley.
4. Rotate the driven pulley several times to properly set the belt between the sheaves.
5. Adjust drive belt height. Refer to *DRIVE BELT HEIGHT ADJUSTMENT* procedure.
6. Install drive belt guard, refer to *DRIVE BELT GUARD INSTALLATION*.
7. Install LH side panel.

Drive Belt Height Adjustment


1. Remove tether cord cap from engine cutout switch.
2. Remove LH side panel.
3. Remove drive belt guard, refer to *DRIVE BELT GUARD REMOVAL*.
4. Loosen the clamping screw.

Subsection XX (DRIVE BELT)

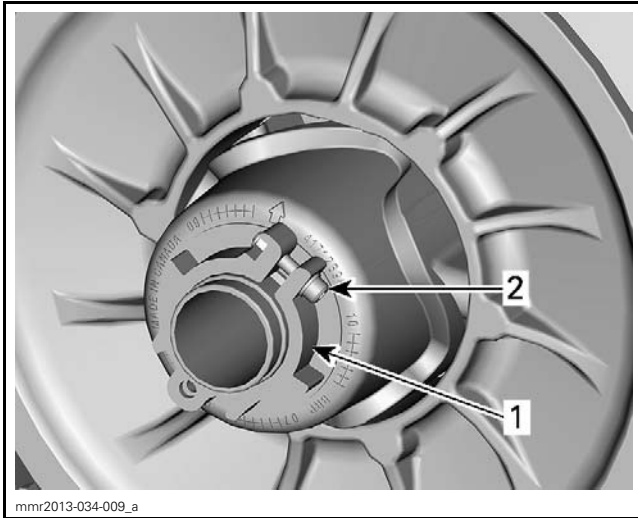


TYPICAL
1. Adjustment ring
2. Clamping screw

- Using the suspension adjustment tool provided in the tool kit, turn the adjustment ring 1/4 turn at a time then rotate the driven pulley to properly set the belt between the pulley sheaves.

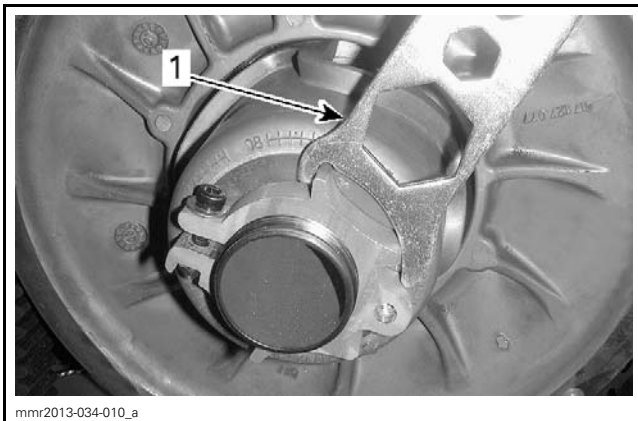

TYPICAL
1. Suspension adjustment tool

NOTE: The adjustment ring has left hand threads. Repeat step 5 until the lowest portion of the cogs on the external surface of drive belt is even with the driven pulley edge.

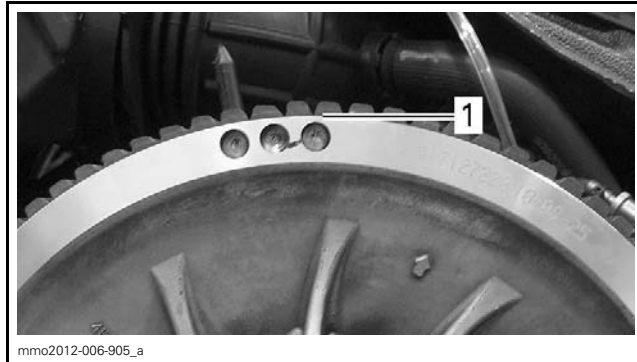

TYPICAL - PRELIMINARY SETTING
1. Lowest portion of cogs even with external surface of drive belt

NOTE: Turning the adjustment ring counterclockwise lowers the belt in the pulley. Turning the ring clockwise raises the belt in the pulley.

- Tighten the adjustment ring clamping screw.

TORQUE	
Adjustment ring clamping screw	5.5 N•m ± 0.5 N•m (49 lbf•in ± 4 lbf•in)



TYPICAL
1. Clamping screw

- Install belt guard, refer to *DRIVE BELT GUARD INSTALLATION*.
- Install LH side panel.
- Start engine and check if vehicle creeps.
 - If vehicle does not creep, adjustment is complete.
 - If vehicle creeps, check the drive belt deflection.

Reverse Activation

Reverse may not activate or may be harder to activate if the belt is positioned too high in the driven pulley. If reverse activation does not work properly, ensure the drive belt is properly adjusted.

Adjust the drive belt lower in the driven pulley if needed.

Drive Belt Deflection Verification

1. Make sure drive belt height is adjusted (preliminary setting).
2. Position a reference rule on drive belt.
3. Use the TENSIO METER (P/N 414 348 200) as explained below.
4. Set deflection as per following table using bottom O-ring.

DRIVE BELT DEFLECTION	
DRIVE BELT DEFLECTION SETTING	32 mm ± 5 mm (1.26 in ± .2 in)



DEFLECTION SETTING

1. Bottom O-ring


5. Place upper O-ring to 0 kgf (0 lbf).



LOAD READING

1. Upper O-ring

6. Apply pressure until bottom O-ring (deflection) is flush with edge of rule.

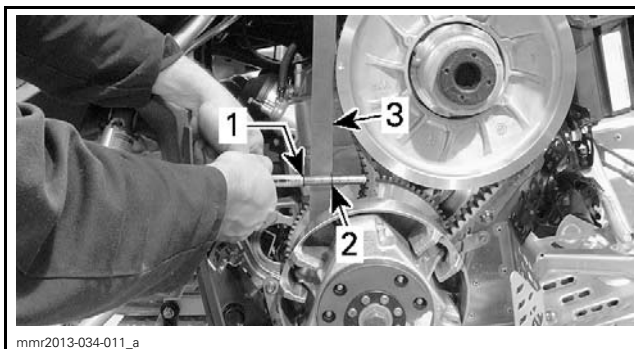

TYPICAL

1. Upper O-ring — load
2. Bottom O-ring — deflection
3. Reference rule

7. Read drive belt load. Compare result with the following table.

DRIVE BELT DEFLECTION	
DRIVE BELT LOAD READING	11.30 kgf (25 lbf)

8. If drive belt is within specification, drive belt is properly adjusted.
9. If drive belt is out of specification, try the following:
 - Lower drive belt height from initial setting.
 - Try another drive belt.
10. If proper load still cannot be obtained, check the following:
 - Inspect engine supports.
 - Inspect countershaft and bearing.
 - Inspect chassis for damages.

DRIVE PULLEY

SERVICE TOOLS

Description	Part Number	Page
BUSHING PULLER/INSTALLER	529 031 200	8
BUSHING REMOVER/INSTALLER	529 035 931	8, 10
DRIVE PULLEY HOLDER	529 035 674	3-4, 15
DRIVE PULLEY PULLER	529 000 064	4
PULLEY SPRING COMPRESSOR TOOL.....	529 036 012	5, 8, 10, 12
SLIDER SHOE FORK.....	529 005 500	5, 11


SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
TEMPILSTIK INDICATOR STICK	TS212F	6

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE 243 (BLUE).....	293 800 060	13
LOCTITE 680.....	293 800 118	10
PULLEY FLANGE CLEANER	413 711 809	8-9

Subsection XX (DRIVE PULLEY)

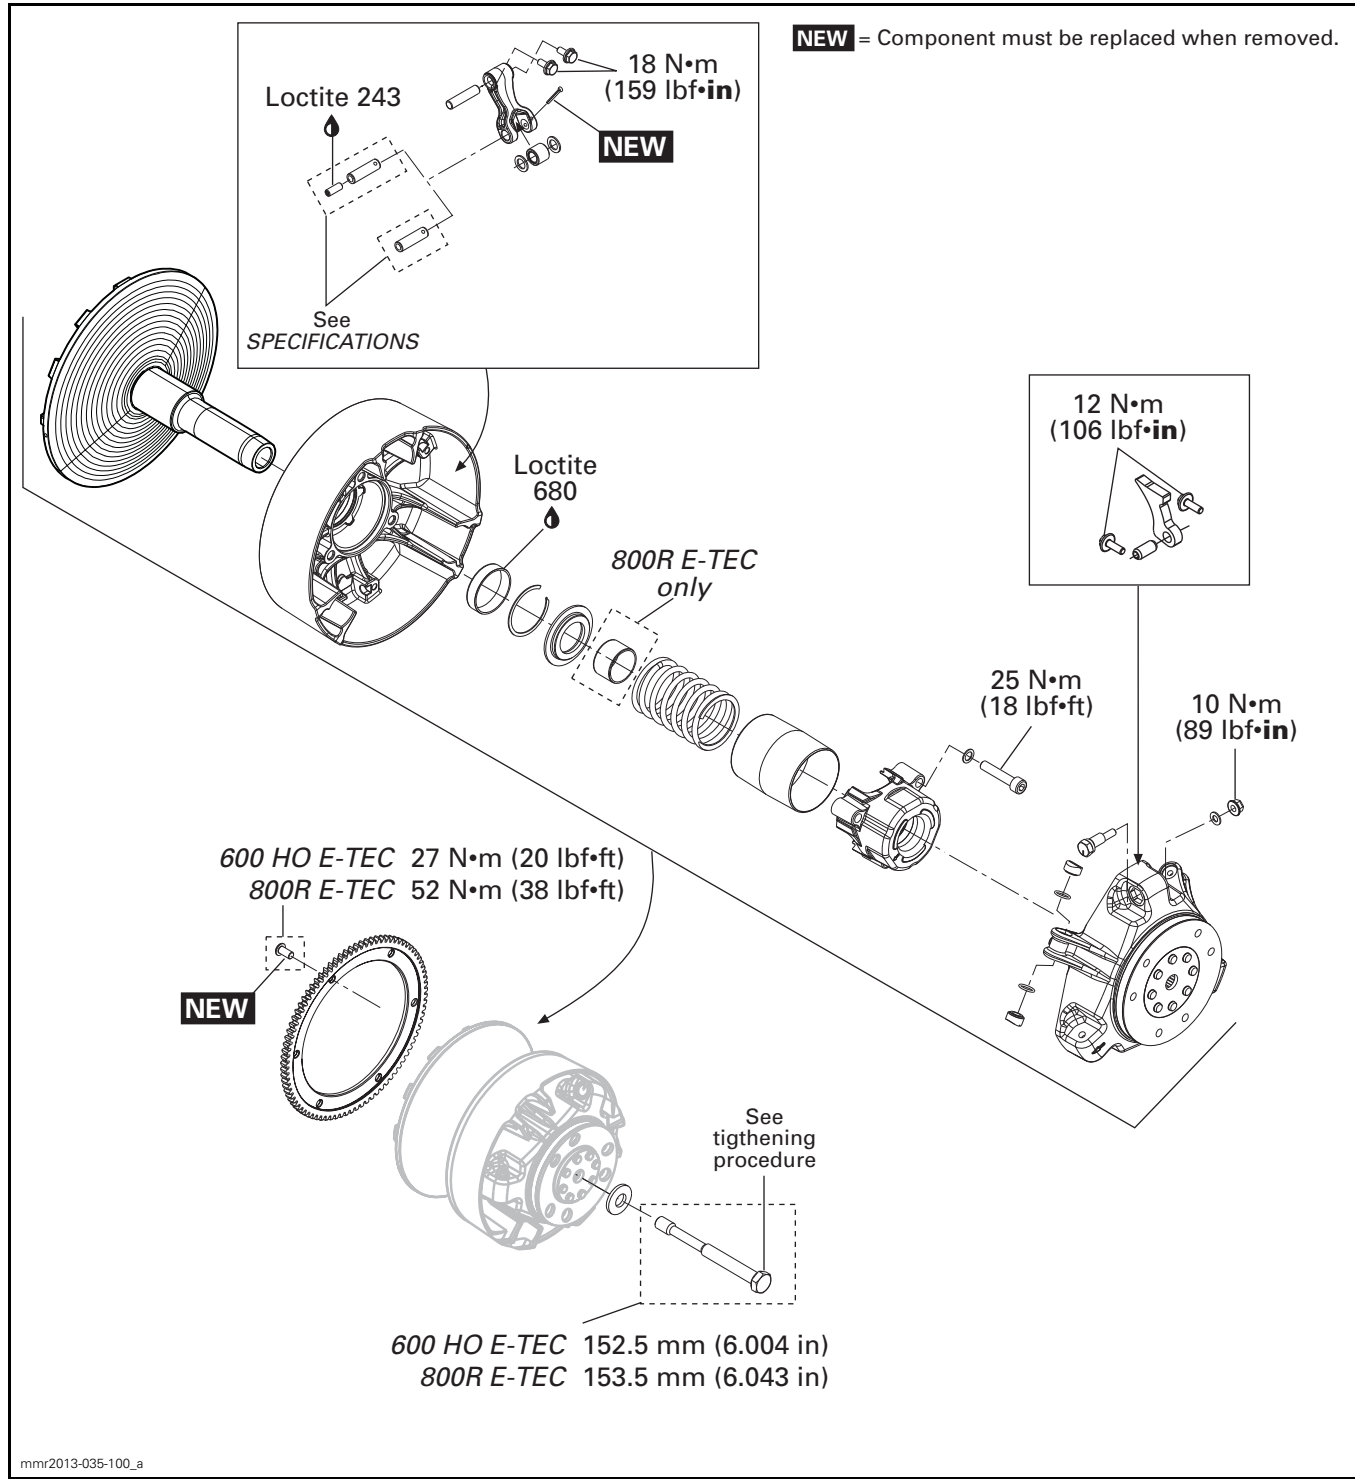

mnr2013-035-100_a

GENERAL

TRA™ drive pulley stands for **Total Range Adjustable** drive pulley.

These are lubrication free drive pulleys. Do not lubricate any component.

Always refer to appropriate *PARTS CATALOG* for replacement parts.

NOTICE Never use any type of impact wrench for drive pulley removal and installation. The use of impact wrench could damage the drive pulley and modify the calibration.

Some drive pulley components (return spring, ramp) can be changed to improve vehicle performance in high altitude regions. A Service Bulletin provides information about calibration according to altitude.

NOTICE Such modifications should only be performed by experienced mechanics since they can greatly affect vehicle performance. Verify spring specifications before installation. Do not only refer to the spring color code.

⚠ WARNING

Any drive pulley repairs must be performed by an authorized Ski-Doo dealer. Subcomponent installation and assembly tolerances require strict adherence to procedures detailed.

During assembly/installation, use torque values and service products as in the exploded views.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices must be replaced with new ones when removed (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.).


PROCEDURES

DRIVE PULLEY

Drive Pulley Removal

1. Remove drive belt. Refer to *DRIVE BELT* subsection.


2. Secure drive pulley with the DRIVE PULLEY HOLDER (P/N 529 035 674). Install it over a sliding sheave tower.

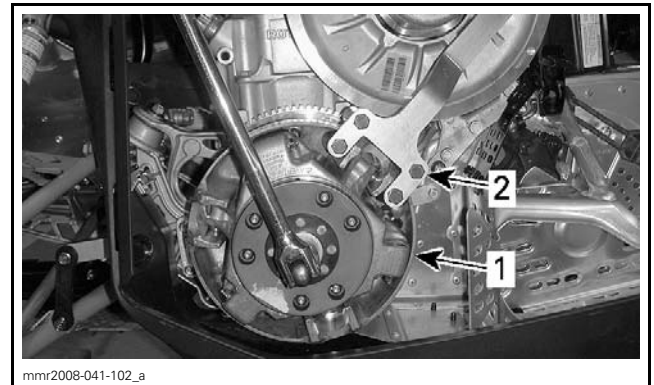

TYPICAL

1. Drive pulley
2. Drive pulley holder

3. Remove the drive pulley bolt and its conical spring washer.

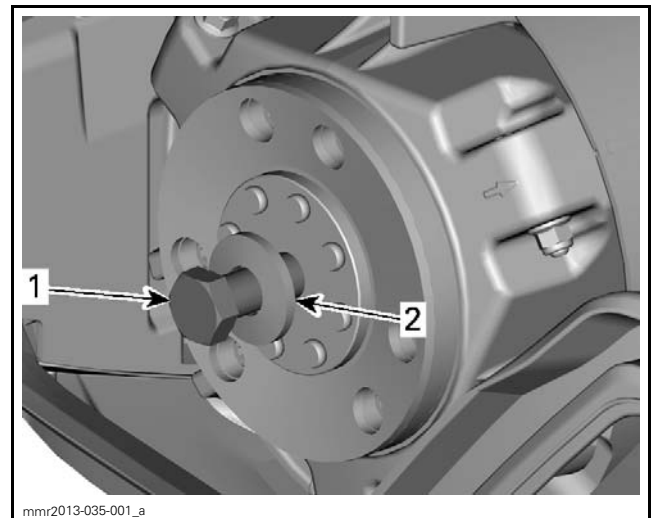

TYPICAL


1. Drive pulley bolt
2. Conical spring washer

4. To remove drive pulley from engine, use the following tools

Subsection XX (DRIVE PULLEY)

TOOL	MODEL
DRIVE PULLEY HOLDER (P/N 529 035 674)	All
DRIVE PULLEY PULLER (P/N 529 000 064)	All

5. To remove the drive pulley, hold drive pulley and tighten the puller.

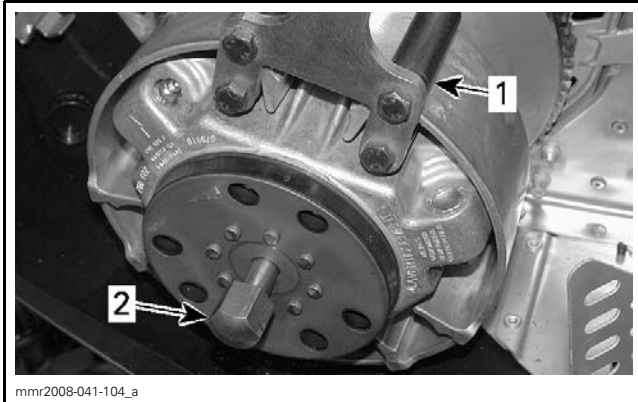

TYPICAL
1. Drive pulley holder
2. Drive pulley puller


NOTICE These pulleys have metric threads. Do not use a puller with ANS (American National Standard) or IS (International Standard) type threads. Always tighten puller by hand to ensure that the drive pulley has the same type of threads (metric vs ANS or IS) prior to fully tightening.

Drive Pulley Disassembly

To separate fixed sheave from sliding sheave, screw puller into fixed sheave shaft about 13 mm (1/2 in).

Raise drive pulley and hold it by the sliding sheave while knocking on puller head to disengage fixed sheave.

NOTICE NEVER tap on governor cup.

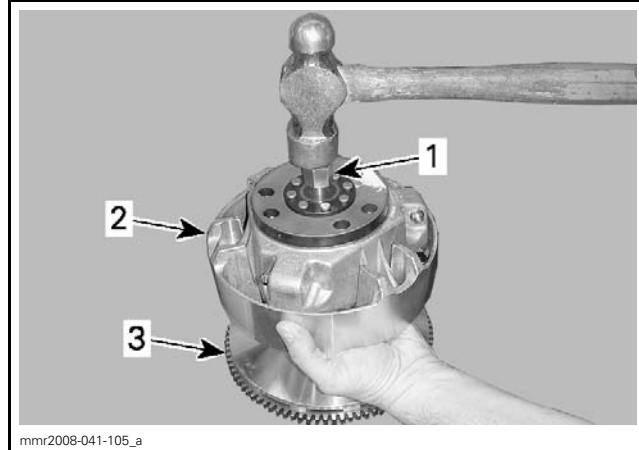


TYPICAL
1. Puller screwed 13 mm (1/2 in) in fixed sheave
2. Sliding sheave
3. Fixed sheave

NOTE: No component marking is required before disassembly. This drive pulley features factory applied index marks as references.

NOTICE Never use any type of torch to heat governor cup.

Ring Gear Removal

To remove the ring gear, use a heat gun to break the threadlocker on ring gear screws. Discard the ring gear screws.

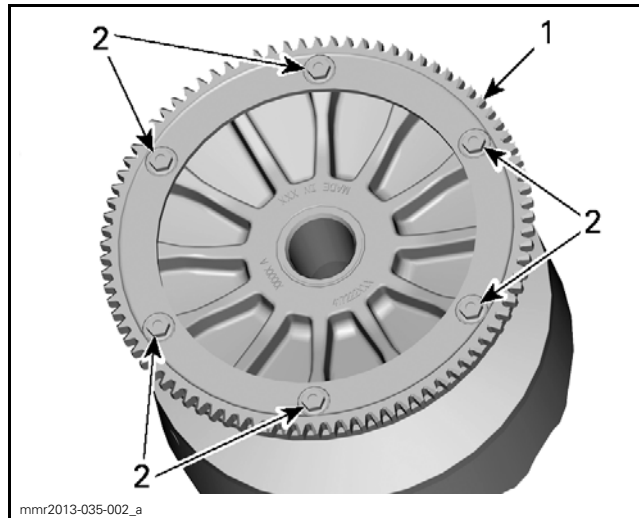


1. Ring gear
2. Ring gear screws

NOTICE If a tool other than a heat gun is used, do not exceed 150°C (302°F).

Slider Shoes and Governor Cup Removal

- Carefully lift governor cup until slider shoes are at their highest position in the guides.

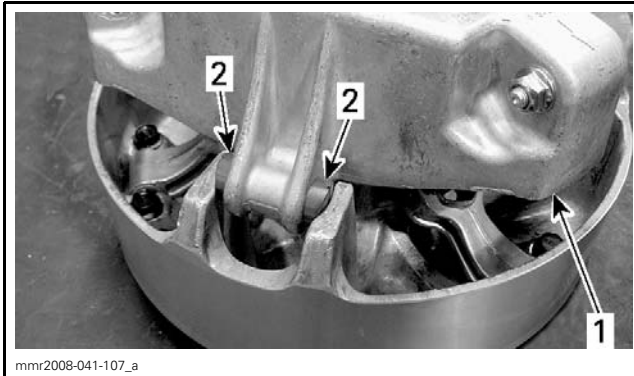

mnr2008-041-107_a


TYPICAL

- 1. Governor cup
- 2. Slider shoes

2. Hold a slider shoe set then carefully lift its housing and install a SLIDER SHOE FORK (P/N 529 005 500). Proceed the same way for other housings lifting one at a time.



529005500

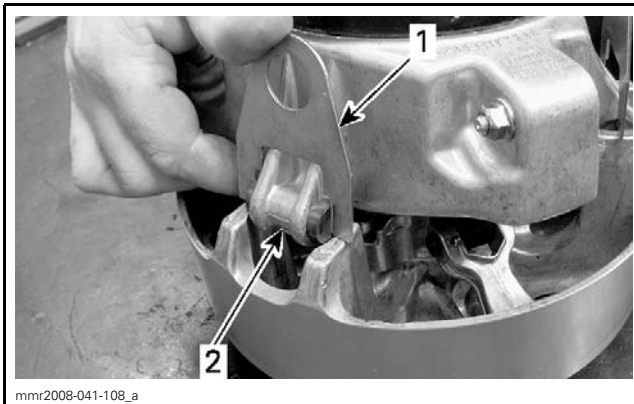


mnr2008-041-108_a

TYPICAL

- 1. Governor cup
- 2. Slider shoe forks

3. When all slider shoes are held with the forks, remove the governor cup.

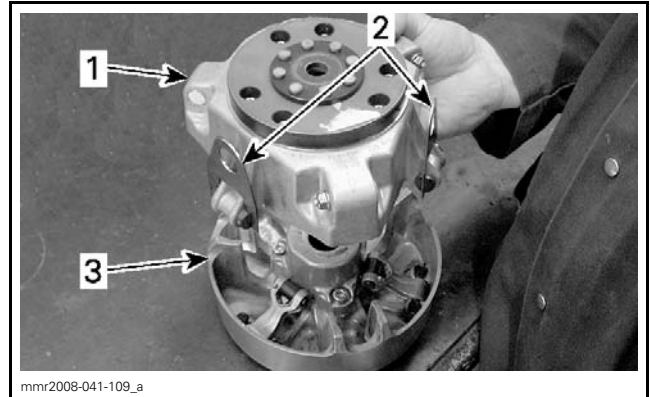

mnr2008-041-109_a

TYPICAL


- 1. Governor cup
- 2. Slider shoe forks
- 3. Sliding sheave

Spring Cover Removal

1. To remove the spring cover, always use the PULLEY SPRING COMPRESSOR TOOL (P/N 529 036 012).

⚠ WARNING


Clutch spring cover is under high clutch spring preload. Never attempt to remove spring cover without the recommended tools.

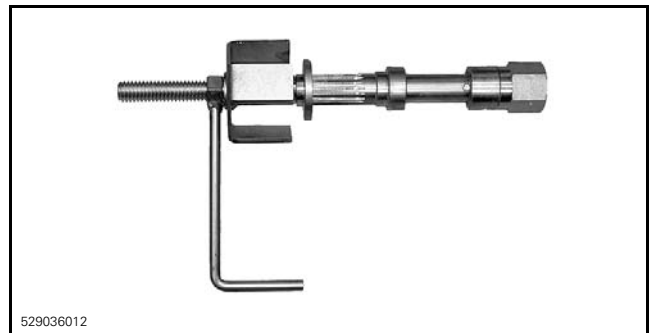

529036012

2. Install support guide of spring compressor in a vice.


Subsection XX (DRIVE PULLEY)

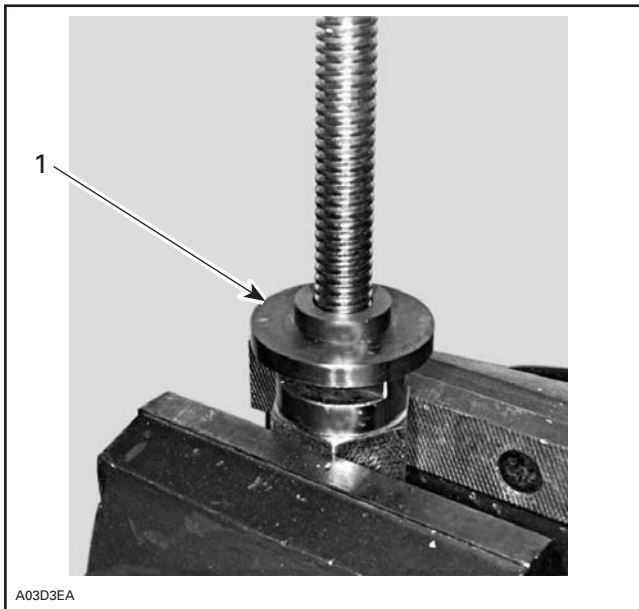

1. Support guide


NOTE: The support guide will prevent bushing damage.

3. Install sliding sheave then the support cup over spring cover.
4. Remove 3 Allen screws and washers retaining spring cover, then unscrew compressor tool.

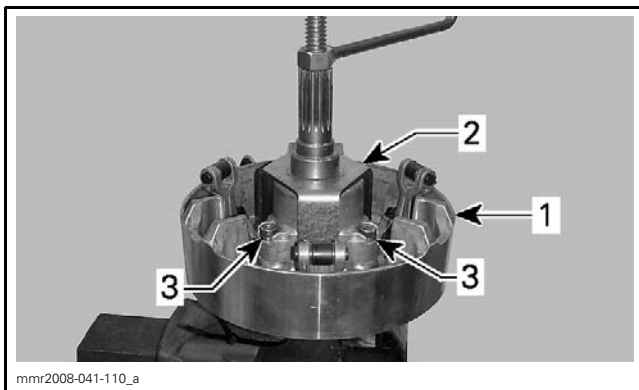

TYPICAL
1. Sliding sheave
2. Support cup
3. Spring cover screws

5. Remove spring cover, spring and spring seat.

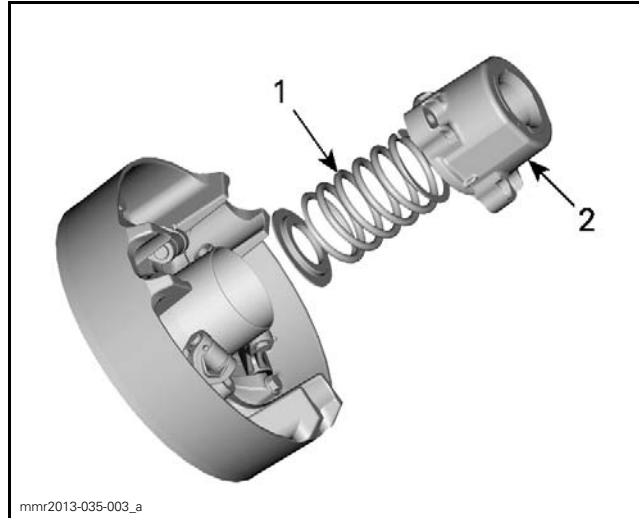

TYPICAL
1. Spring
2. Spring cover

Hollow Threaded Pin Set Screw Removal

1. Position a propane torch ± 25.4 mm (1 in) from the end of the pin (on the opposite side of the cotter pin).
2. Heat during 10 to 15 seconds or until the end of the pin reaches 100°C (212°F) and stop heating.

NOTE: Probe the end of the pin with a temperature indicator stick such as the TEMPILSTIK INDICATOR STICK (P/N TS212F), which will liquefy when pin reaches the correct temperature.


NOTICE Make sure not to exceed 100°C (212°F). Exceeding this temperature will cause severe pulley damage.

3. Wait approximately 30 seconds and remove the set screw.

NOTE: If the set screw cannot be removed, heat the pin end again during 5 seconds and try again to remove set screw. Make sure not to exceed 100°C (212°F).


Lever, Roller and Pin Removal

1. Remove lever retaining screws.

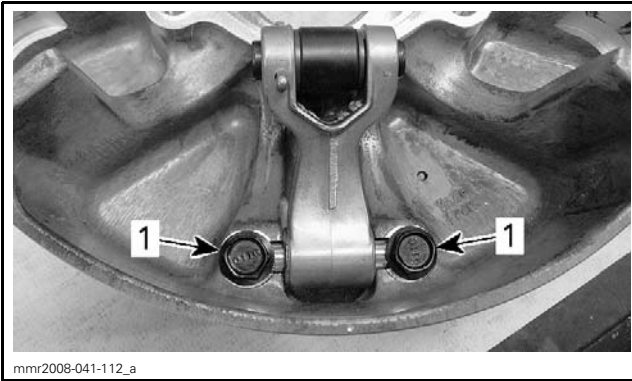


1. Lever retaining screws

2. Pull lever to remove it from sliding sheave.
3. Remove and discard the cotter pin.

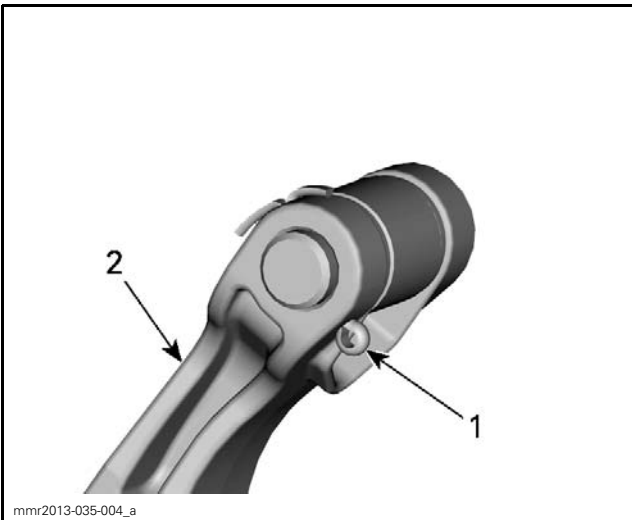

1. Cotter pin
2. Lever

4. Remove pin, thrust washers and roller.

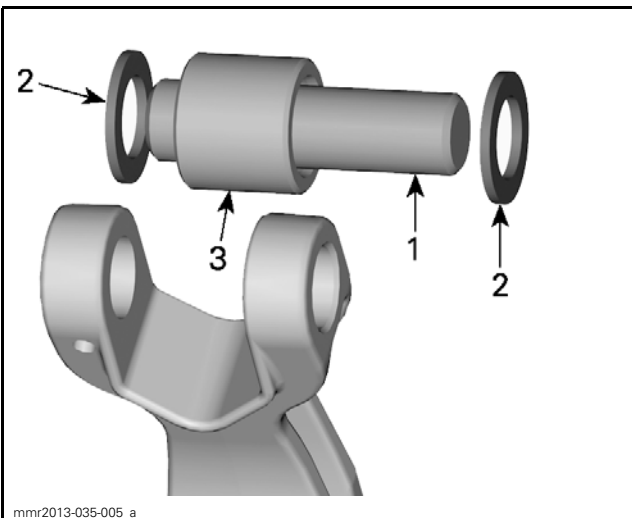


1. Pin
2. Thrust washers
3. Roller

Ramp Removal

Turn the governor cup up side down.


Remove screws retaining ramp to governor cup.

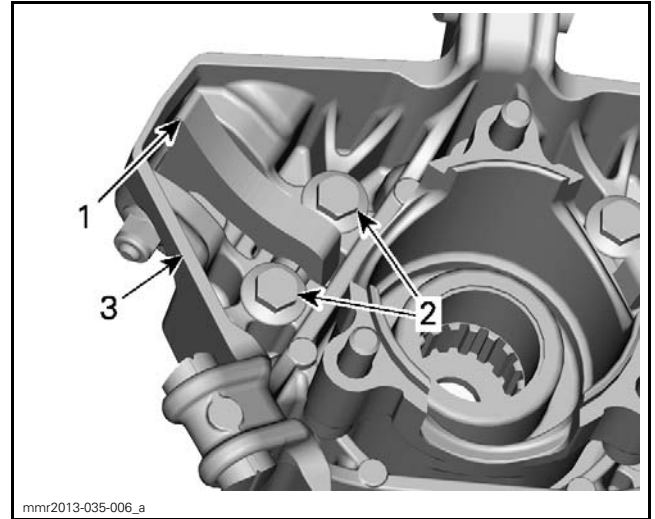

1. Ramp
2. Ramp screws
3. Governor cup

Calibration Screw Removal


Unscrew the nut securing the calibration screw.

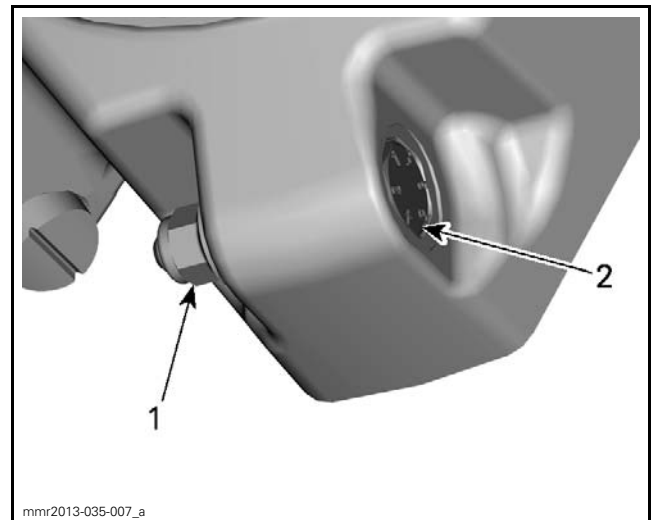

1. Retaining nut
2. Calibration screw

Remove calibration screw and its washer.

Subsection XX (DRIVE PULLEY)

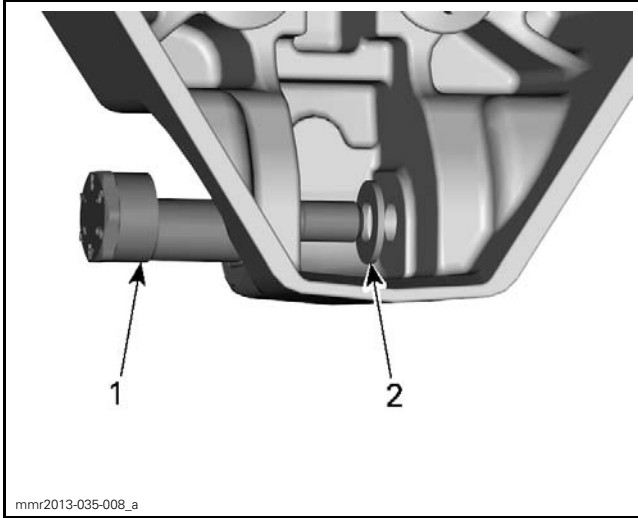


1. Calibration screw
2. Washer

Sliding Sheave Bushing Removal

NOTE: In case of worn bushing, it is advisable to replace whole sliding sheave assembly as replacing just the bushing may reduce drive pulley performance.


If bushing is out of specifications, remove it as follows:

1. Remove circlip from sliding sheave.

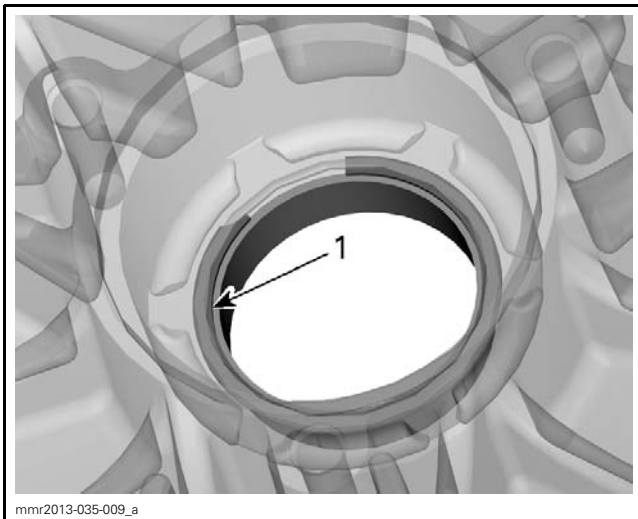

1. Circlip

2. Secure the PULLEY SPRING COMPRESSOR TOOL (P/N 529 036 012) in a vice.
3. Mount the BUSHING PULLER/INSTALLER (P/N 529 031 200) and the sliding sheave assembly on it.

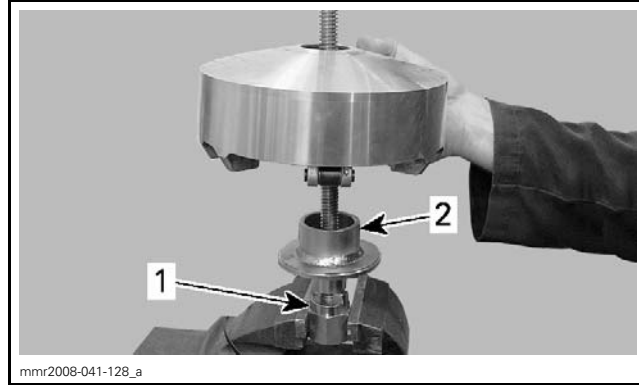

TYPICAL

1. Spring compressor
2. Bushing remover/installer

4. Use the BUSHING REMOVER/INSTALLER (P/N 529 035 931) to press out old bushing.

NOTE: Make sure to use the tool as marked; to remove the bushing press using the side marked "OUT", as shown below in the picture.



TYPICAL

5. Use a soft sand paper to clean sliding sheave bushing mounting surface.



6. Clean sliding sheave bushing mounting surface with PULLEY FLANGE CLEANER (P/N 413 711 809).
7. Clean the circlip groove.

Drive Pulley Cleaning

NOTE: Parts must be at room temperature before cleaning.

Clean pulley sheaves and shaft with fine steel wool and dry cloth.

Using a paper towel with PULLEY FLANGE CLEANER (P/N 413 711 809), clean the following components.

- Crankshaft tapered end
- Taper inside fixed sheave of drive pulley
- Crankshaft threads
- Retaining screw threads.

NOTICE Avoid contact between cleaner and crankshaft seal because damage may occur.

Remove all hardened oil deposits that are baked on crankshaft and pulley tapered surfaces with coarse or medium steel wool and/or sand paper no. 600.

NOTICE Do not use any other type of abrasive.

Reclean mounting surfaces with paper towel and cleaning solvent.

Wipe off the mounting surfaces with a clean, dry paper towel.

NOTICE Mounting surfaces must be free of any oil, cleaner or towel residue.

Drive Pulley Inspection

NOTE: During inspection, replace any component if found defective or out of specifications.

Fixed Sheave and Governor Cup Inspection

Inspect fixed sheave for marks or scratches.

600 HO E-TEC

Inspect fixed sheave and governor cup splines.


Check free-play between governor cup and fixed sheave.

NOTE: Maximum free play is measured at calibration screw radius.

MAXIMUM FREE PLAY	
Between fixed sheave and governor cup splines	0.5 mm (.02 in)

Slider Shoe Inspection


Check if slider shoe O-rings are cracked, cut or crushed.

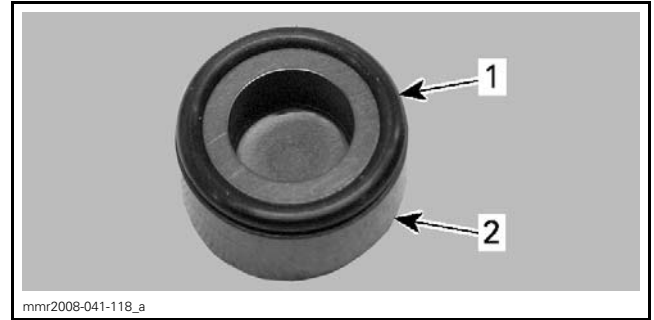

1. O-ring
2. Slider shoe

Measure the thickness of slider shoes. Take measurement at the center of slider shoe, perpendicularly with the groove.

SLIDER SHOE THICKNESS	
MODELS	SERVICE LIMIT
600 HO E-TEC	7.45 mm (19/64 in)
800R E-TEC	7.95 mm (5/16 in)

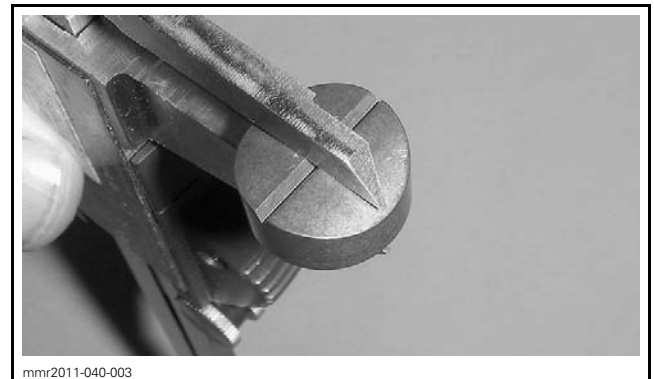


Sliding Sheave Inspection

Inspect pulley sheave for marks or scratches.

Visually inspect coating of bushings.

Using a bore gauge, measure the inner diameter of sliding sheave bushing.

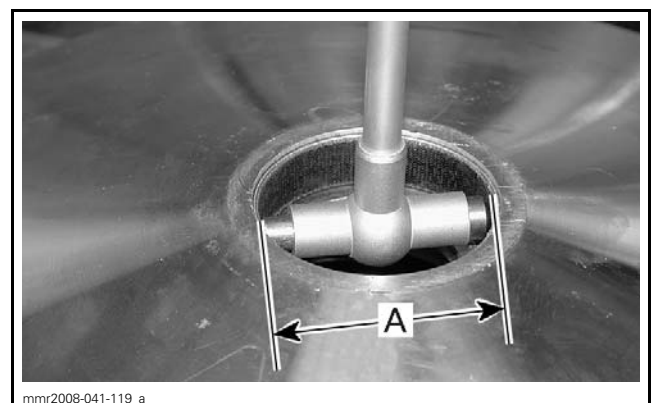

A. Inner diameter of sliding sheave bushing

Subsection XX (DRIVE PULLEY)


MEASURING POINT	
At least 5 mm (1/4 in) from bushing edge	
SLIDING SHEAVE BUSHING	SERVICE LIMIT
Inner diameter	40.3 mm (1.587 in)

Lever, Roller and Pin Inspection

Check levers for cracks, distortion or other damages.

Check lever pivot for wear.

Check lever flanged bushing for wear.

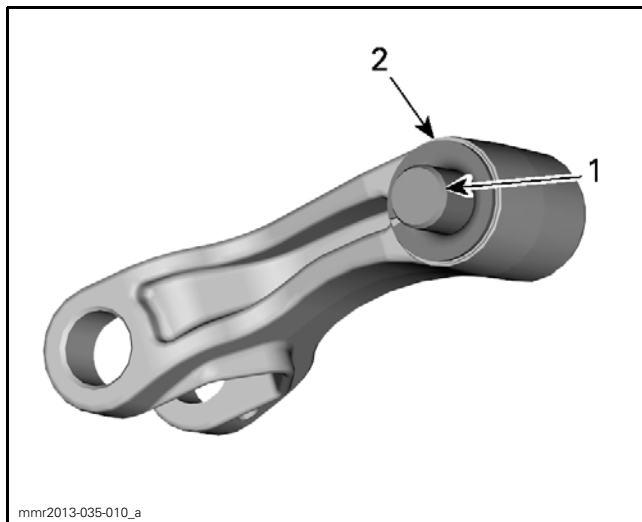

1. Lever pivot
2. Lever flanged bushing

Check rollers for roundness of external diameter.

Check thrust washers for thickness wear.


Check roller pins for wear.

Spring Cover Inspection

Check spring cover for cracks or wear.

Visually inspect the coating of spring cover bushing for wear.

Using a bore gauge, measure the inner diameter of spring cover bushing.

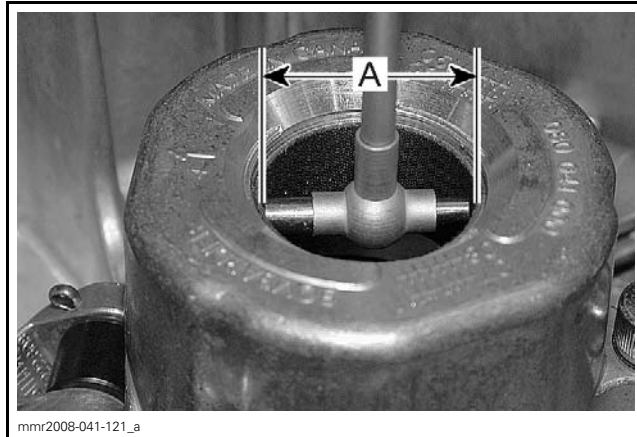

A. Inner diameter of spring cover bushing


MEASURING POINT	
At least 5 mm (1/4 in) from bushing edge	
SPRING COVER BUSHING	SERVICE LIMIT
Inner diameter	30.4 mm (1.197 in)

Replace the spring cover if the inner diameter of bushing is out of specification.

Drive Pulley Assembly


Sliding Sheave Bushing Installation

1. Secure the PULLEY SPRING COMPRESSOR TOOL (P/N 529 036 012) in a vice and mount the sliding sheave.
2. Apply LOCTITE 680 (P/N 293 800 118) on the outside of **NEW** bushing face.
3. Insert the bushing from inner side of sliding sheave.
4. Mount the BUSHING REMOVER/INSTALLER (P/N 529 035 931) with side marked "IN" to press in a new bushing.

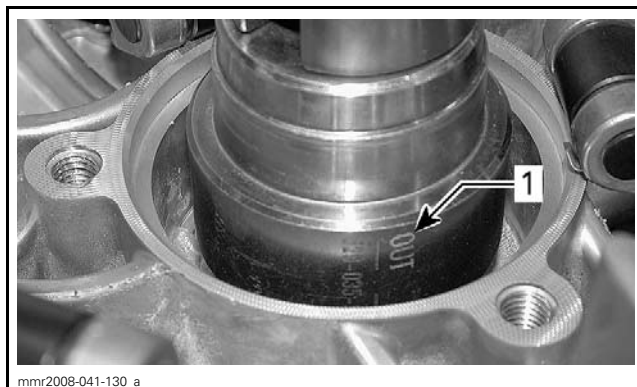

1. Mark "OUT" toward outside

NOTE: Make sure that the bushing is well seated on the sliding sheave.

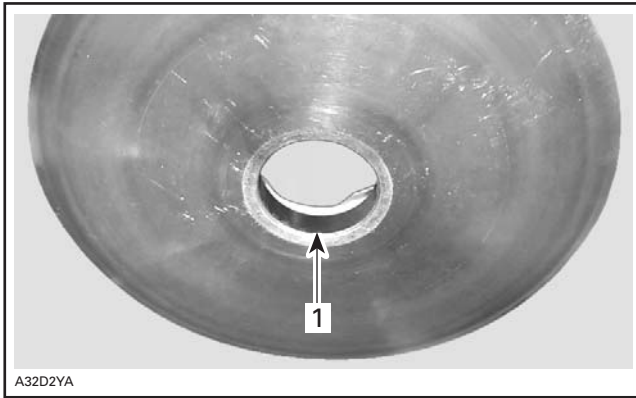

1. Bushing

5. Install the circlip.



1. Circlip

NOTICE Make sure that the circlip is properly position in its groove.

Ring Gear Installation


Clean ring gear and the inner threads of fixed sheave.

Install **NEW** ring gear screws and torque them in accordance with the following chart.

RING GEAR SCREW TORQUE	
600HO E-TEC	27 N•m (20 lbf•ft)
800R E-TEC	52 N•m (38 lbf•ft)


Sliding Sheave, Slider Shoes and Governor Cup Installation

1. Install an O-ring on each slider shoes.

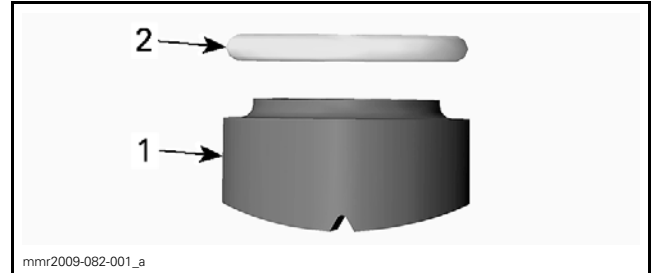


1. Slider shoe
2. O-ring

2. Insert slider shoes into governor cup so that groove in each slider shoe is vertical to properly slide in guides.

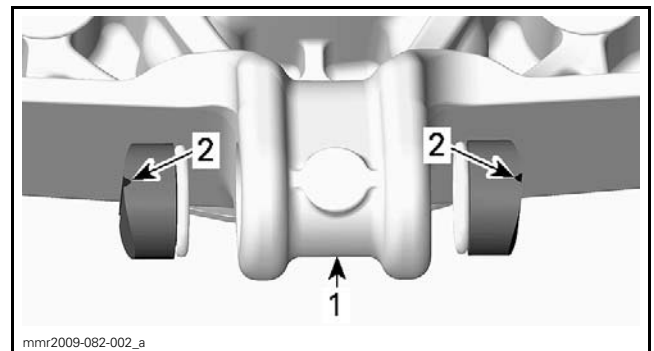

1. Governor cup
2. Slider shoe grooves


3. Install a SLIDER SHOE FORK (P/N 529 005 500) into slider shoe grooves to maintain them for governor cup installation. Proceed on 3 set of slider shoes.

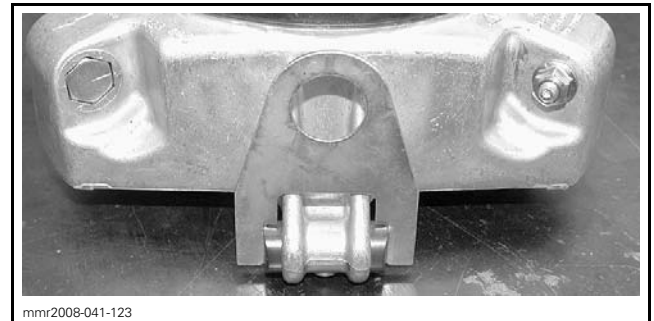


4. Index governor cup with sliding sheave by aligning index marks.

NOTE: Disregard any paint markings.


Subsection XX (DRIVE PULLEY)

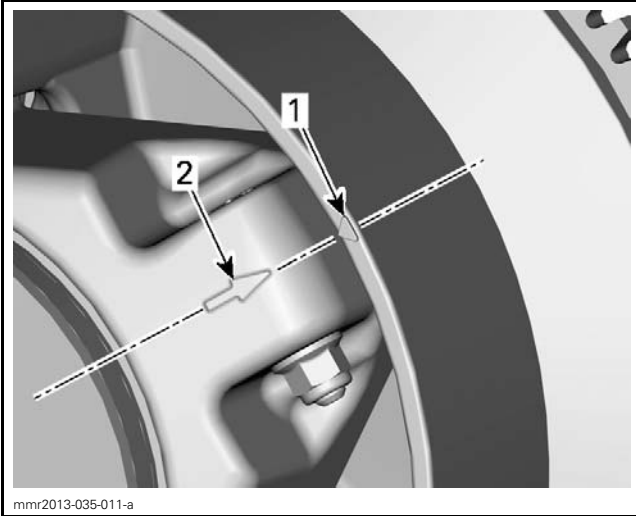


600 HO E-TEC - SLIDING SHEAVE/GOVERNOR CUP ALIGNMENT
 1. Sliding sheave index mark (EMBOSSMENT)
 2. Governor cup index mark (ARROW)

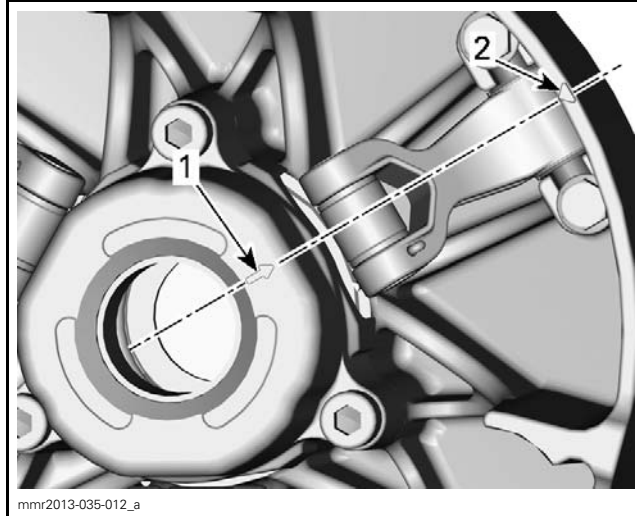

600 HO E-TEC - SPRING COVER ALIGNMENT
 1. Spring cover index mark (ARROW)
 2. Sliding sheave index mark (EMBOSSMENT)

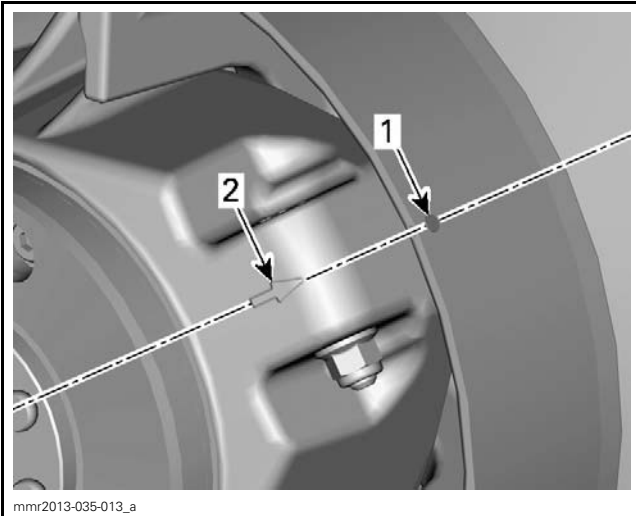

800R E-TEC - SLIDING SHEAVE/GOVERNOR CUP ALIGNMENT
 1. Sliding sheave index mark (4 mm (5/32 in) CIRCLE)
 2. Governor cup index mark (ARROW)

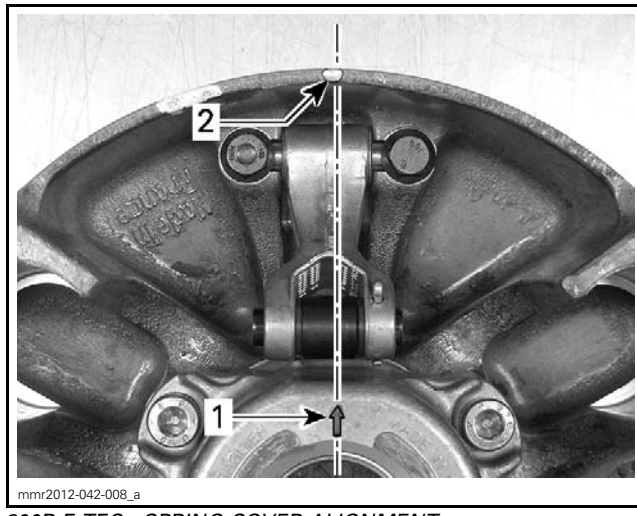


800R E-TEC - SPRING COVER ALIGNMENT
 1. Spring cover index mark (ARROW)
 2. Sliding sheave index mark (NOTCH)

All Engines

- Carefully slide governor cup into sliding sheave.
- Remove forks and fully insert governor cup.

Spring Cover Installation

- Install spring cover using the following tool.

REQUIRED TOOL	
PULLEY SPRING COMPRESSOR TOOL (P/N 529 036 012)	

- Index spring cover with sliding sheave by aligning index marks.

NOTE: Disregard any paint markings.

- Tighten spring cover screws to specification.

TIGHTENING TORQUE	
Spring cover screws	25 N•m (18 lbf•ft)

Lever, Roller and Pin Installation

Always use the same type of pin as originally installed when servicing. Refer to *TECHNICAL SPECIFICATIONS*.



mnr2007-040-010

SOLID PIN



mnr2007-040-011

HOLLOW PIN

NOTE: Different types have different weights for calibration purpose. Refer to *HIGH ALTITUDE BULLETIN*.

While installing lever make sure that the curved sides of the levers are outwards as shown.




A32D1ZA

Always install lever assemblies so cotter pin heads are oriented on top when lever is set at the bottom of sliding sheave.

Bend cotter pin ends gently to sit perfectly against lever.

⚠ WARNING

Whenever replacing centrifugal levers, always replace all 3 at the same time. Otherwise, drive pulley unbalance will occur because of levers difference.

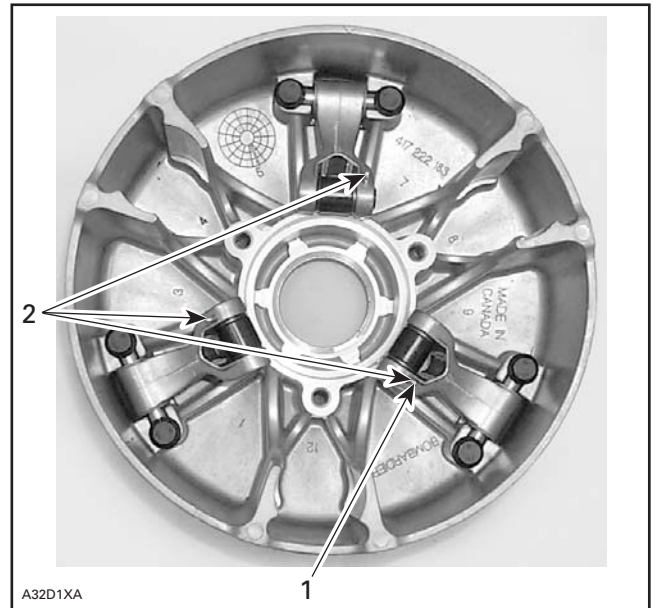

A32D1XA

TYPICAL

1. Cotter pin head on top
2. All on the same side

Tighten lever screws to specification.

TIGHTENING TORQUE	
Lever screws	25 N•m (18 lbf•ft)

NOTICE Levers and rollers must move easily after installation.


Hollow Threaded Pin Set Screw Installation

Apply LOCTITE 243 (BLUE) (P/N 293 800 060) on set screw.

Tighten the set screw completely inside the hollow threaded pin.

Ramp Installation

Insert dowel tube from chamfered side.

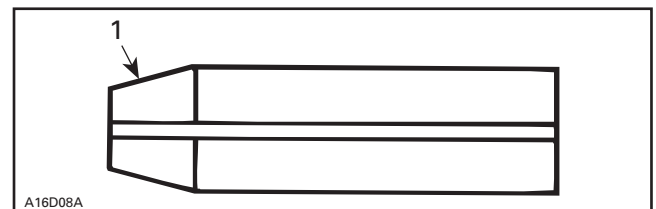


A16D08A

1. Chamfered side


Position dowel tube split at the angle "A".

Subsection XX (DRIVE PULLEY)

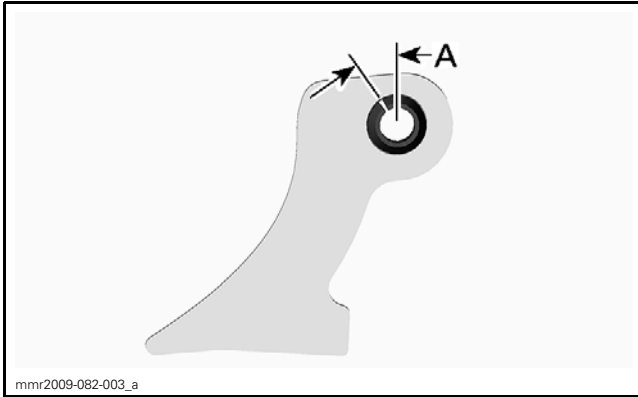

MODEL	ANGLE "A"
All	$45 \pm 3^\circ$

Make sure ramp is centered on dowel tube.

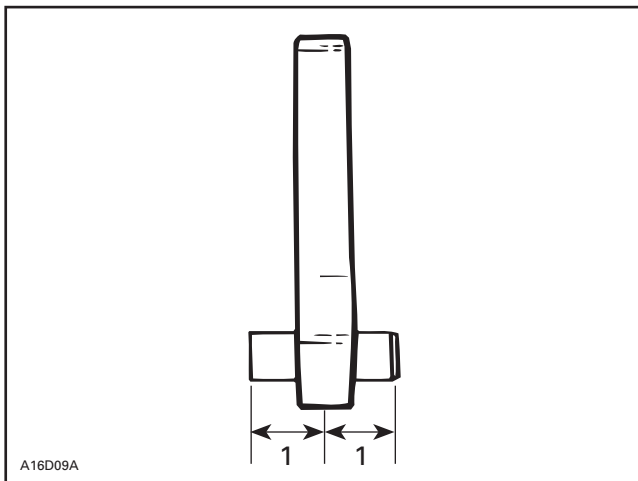


1. Equal distance

Tighten ramp screws to specification $12 \text{ N}\cdot\text{m}$ ($106 \text{ lbf}\cdot\text{in}$).

TIGHTENING TORQUE	
Ramp screws	$12 \text{ N}\cdot\text{m}$ ($106 \text{ lbf}\cdot\text{in}$)

Calibration Screw Installation

When installing calibration screw, make sure to install washer as shown.

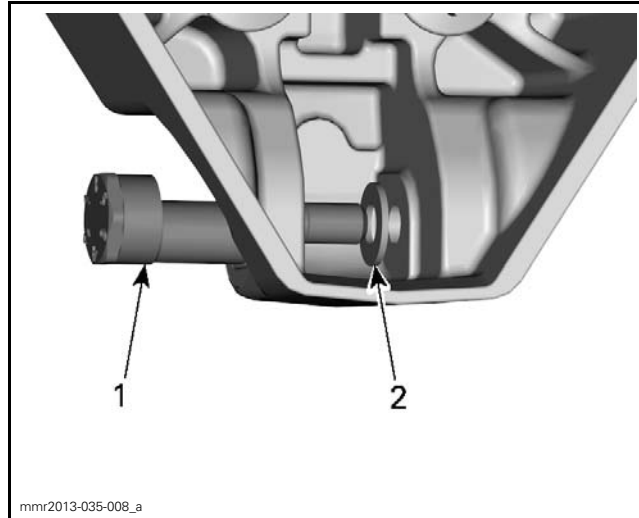

1. Washer
2. Calibration screw

NOTE: Refer to *DRIVE PULLEY ADJUSTMENT*, further in this section, to install the calibration screws in original setting.


Tighten lock nut to specification.

TIGHTENING TORQUE	
Calibration screw lock nut	$10 \text{ N}\cdot\text{m}$ ($89 \text{ lbf}\cdot\text{in}$)

Sliding Sheave and Fixed Sheave Assembly

Index sliding sheave with fixed sheave by aligning index marks.


NOTE: Disregard any paint markings.

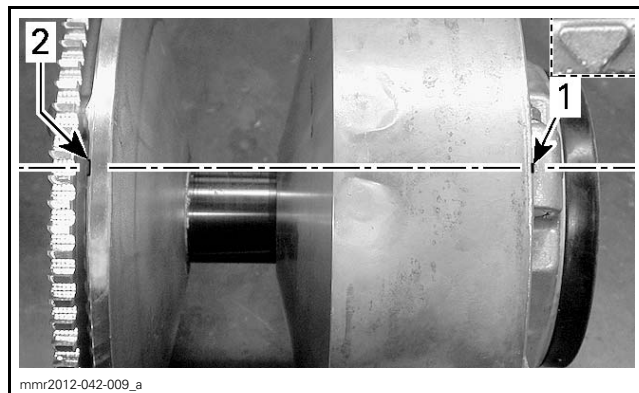


600 HO E-TEC - SLIDING SHEAVE/FIXED SHEAVE ALIGNMENT

1. Sliding sheave index (EMBOSSMENT)
2. Fixed sheave index (NOTCH)

Push sliding sheave until governor cup splines are engaged on fixed sheave splines.

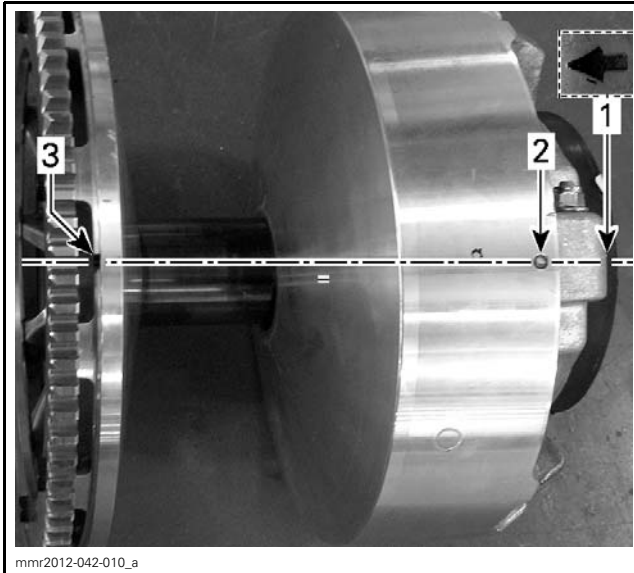

800R E-TEC - SLIDING SHEAVE/FIXED SHEAVE ALIGNMENT
 1. Governor cup index (ARROW)
 2. Sliding sheave index (4 mm (5/32 in)) CIRCLE
 3. Fixed sheave index (NOTCH)

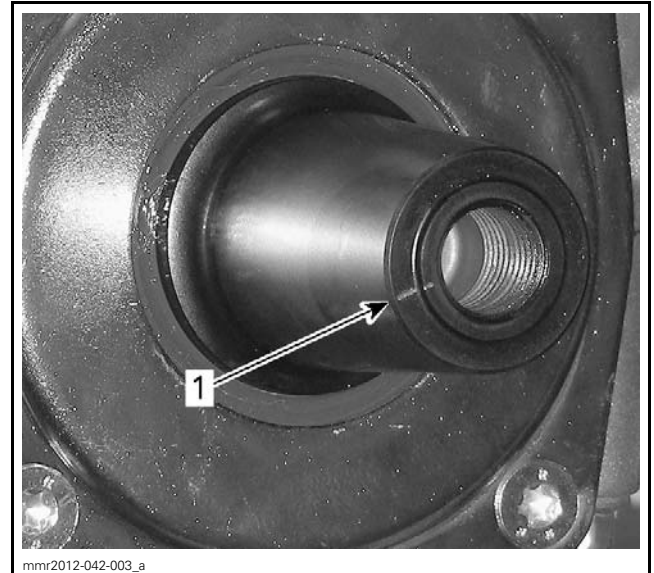

800R E-TEC MODELS ONLY
 1. Crankshaft index mark

Drive Pulley Installation

Clean mounting surfaces as described in *DRIVE PULLEY CLEANING* above.


NOTICE Do not apply antiseize or any lubricant on crankshaft and drive pulley tapers.

Install drive pulley on crankshaft.

800R E-TEC Engine

Install drive pulley on crankshaft by aligning index marks.

NOTE: Disregard any paint markings.

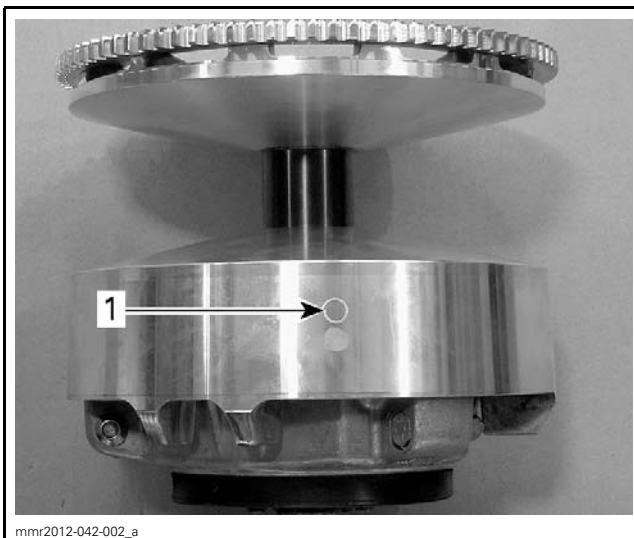

800R E-TEC MODELS ONLY
 1. Drive pulley index mark (9 mm (11/32 in)) CIRCLE

All Models

Install a **NEW** conical spring washer with its concave side towards drive pulley then install drive pulley bolt.

Install the drive pulley bolt. Refer to the following table to use the proper bolt length.

ENGINE	DRIVE PULLEY BOLT LENGTH
600 HO E-TEC	152.5 mm (6.004 in)
800R E-TEC	153.5 mm (6.043 in)

NOTICE Always use BRP genuine parts for conical spring washer and bolt.

Use the DRIVE PULLEY HOLDER (P/N 529 035 674) to retain drive pulley. See removal procedure.

Torque drive pulley bolt.

DRIVE PULLEY FIRST TORQUE	
All engines	120 N•m (89 lbf•ft)

Before starting engine, perform drive pulley adjustment, see further in this section.

Install drive belt and guard.

Subsection XX (DRIVE PULLEY)

Raise the rear of the vehicle and support it with a mechanical stand.

WARNING

Ensure that the track is free of particles which could be thrown out while track is rotating. Keep hands, tools, feet and clothing clear of track. Ensure nobody is standing near the vehicle.

Accelerate the vehicle at low speed (maximum 32 km/h (20 MPH) and apply the brake, repeat 5 times.

Re-torque drive pulley bolt.



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

DRIVE PULLEY FINAL TORQUE	
All engines	120 N•m (89 lbf•ft)

⚠ WARNING
 After 10 hours of operation the transmission system of the vehicle must be inspected to ensure drive pulley bolt is properly torqued.

Drive Pulley Adjustment

The drive pulley is factory calibrated to transmit maximum engine power at a predefined RPM. Factors such as ambient temperature, altitude or surface condition may vary this critical engine RPM thus affecting snowmobile efficiency.

This adjustable drive pulley allows setting maximum engine RPM in the vehicle to maintain maximum power.

Calibration screws should be adjusted so that actual maximum engine RPM in vehicle matches the maximum horsepower RPM given in *TECHNICAL SPECIFICATIONS*.

NOTE: The adjustment has an effect on high RPM only.

To adjust, modify ramp end position by turning calibration screws.

Governor cup has a notch while calibration screw head has 6 positions numbered 1 to 6.



mmr2011-040-002_a
GOVERNOR CUP
 1. Notch



mmr2011-040-002_b
CALIBRATION SCREW HEAD
 1. Position 1

See the following table for original setting.

CALIBRATION SCREW		
ENGINE	MODEL	POSITION
600 HO E-TEC	All models	3
800R E-TEC	MX Z	3
	RENEGADE	
	Summit (EUR models)	2
Summit (except EUR)	1	

Each number modifies maximum engine RPM by about 200 RPM.

Lower numbers decrease engine RPM in steps of 200 RPM and higher numbers increase it in steps of 200 RPM.

Example:

Calibration screw is set at position 3 and is changed to position 5. So maximum engine RPM is increased by about 400 RPM.

Subsection XX (DRIVE PULLEY)

To Adjust:

Just loosen locking nut enough to pull calibration screw **partially** out. Do not completely remove the locking nut.

NOTICE Do not completely remove calibration screw otherwise its inside washer will fall off.



1. Loosen just enough to permit rotating of calibration screw

Adjust to desired position.

NOTICE Always adjust all 3 calibration screws and make sure they are all set at the same number.

Torque locking nuts to 10 N•m (89 lbf•in).

DRIVEN PULLEY AND COUNTERSHAFT

SERVICE TOOLS

Description	Part Number	Page
COUNTERSHAFT BEARING INSTALLER	529 036 066	11
COUNTERSHAFT BEARING REMOVER	529 036 065	10
COUNTERSHAFT SUPPORT	529 036 067	11
DRIVEN PULLEY SPRING COMPRESSOR	529 036 182	5
UPPER GEAR RETAINING TOOL	529 036 110	3


SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
SUSPENSION ADJUSTMENT TOOL	-	4

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE 243 (BLUE)	293 800 060	8
LOCTITE 609	413 703 100	11
LOCTITE 767 (ANTISEIZE LUBRICANT)	293 800 070	10
PULLEY FLANGE CLEANER	413 711 809	8, 11

DRIVEN PULLEY

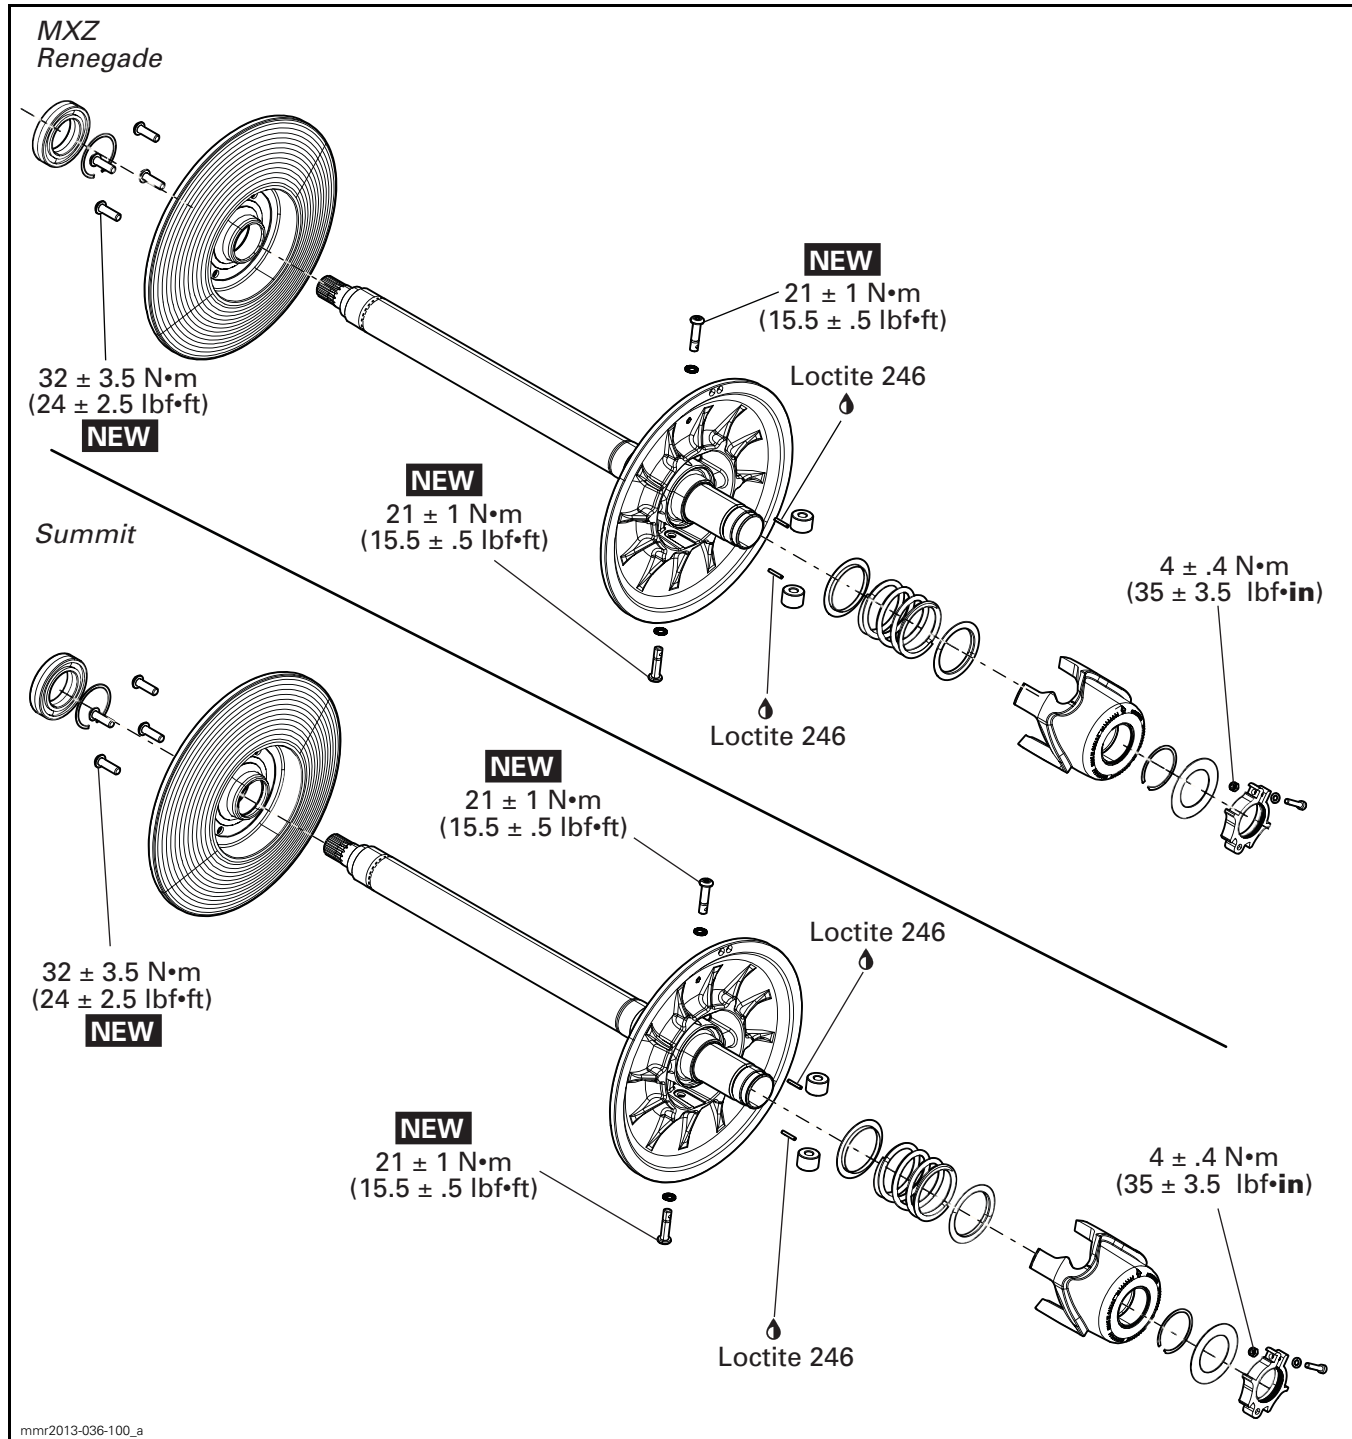

GENERAL

During assembly/installation, use the torque values and the service products as in the exploded views.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.) must be replaced with new ones.

⚠ WARNING

Never start engine when the pulley guard is removed.


PROCEDURES

DRIVEN PULLEY

Driven Pulley Removal


NOTE: The driven pulley is removed with the countershaft.

1. Open right side panel.
2. Remove the muffler. Refer to *EXHAUST SYSTEM* section.
3. On **models with electric starters**, remove battery and battery support. Refer to *CHARGING SYSTEM* subsection.
4. Remove the filling plug on the top of chaincase.

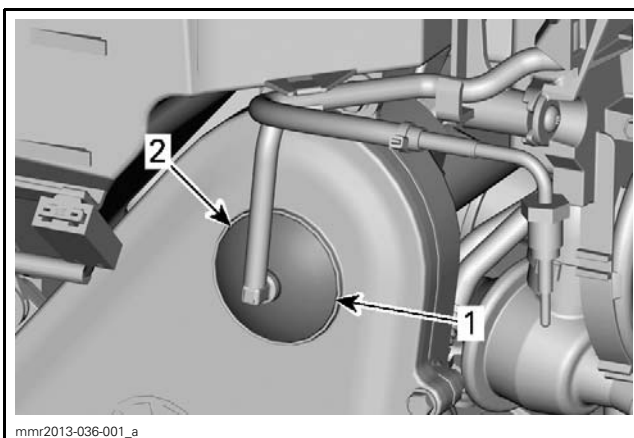


1. Filling plug
2. Chaincase

5. Release drive chain tension by unscrewing tensioner adjustment screw.

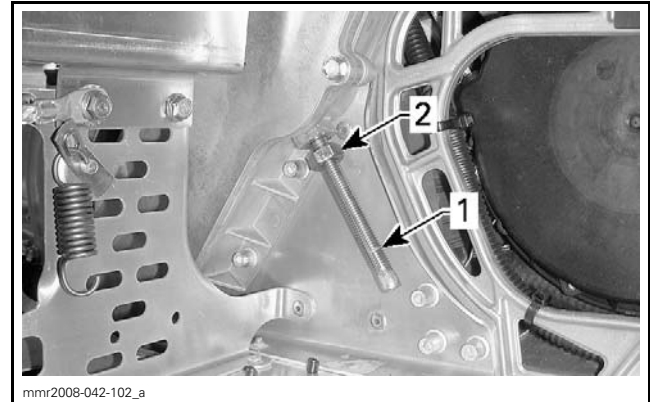


1. Tensioner adjustment screw
2. Lock nut

6. Remove the upper gear screw and the conical spring washer.

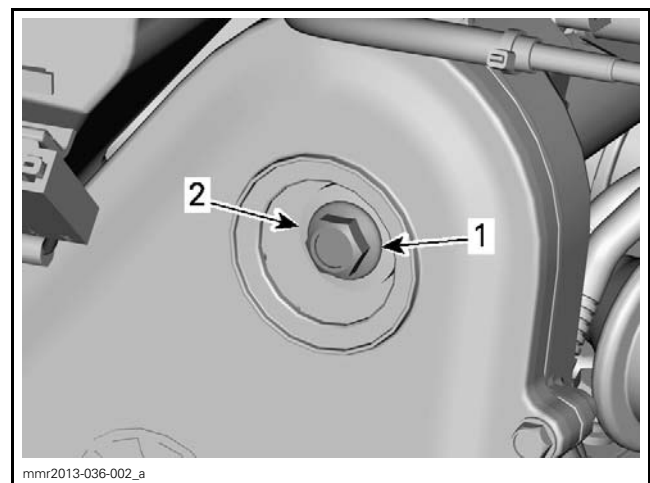

1. Upper gear screw
2. Conical spring washer



NOTE: Slightly tilt the bolt to avoid dropping washer inside chaincase.

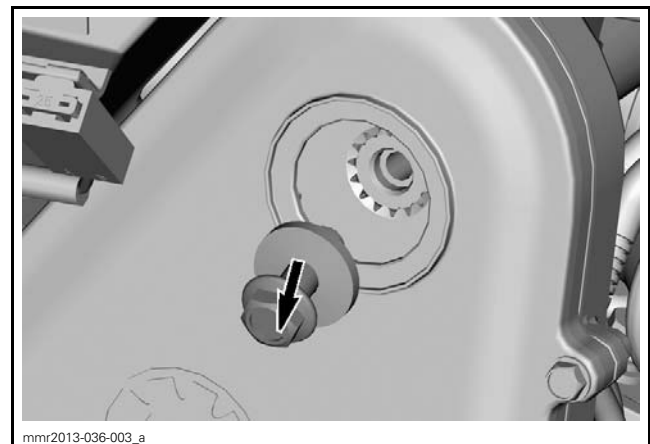

BOLT TILTED

7. Install the UPPER GEAR RETAINING TOOL (P/N 529 036 110) on countershaft end.

Subsection XX (DRIVEN PULLEY AND COUNTERSHAFT)

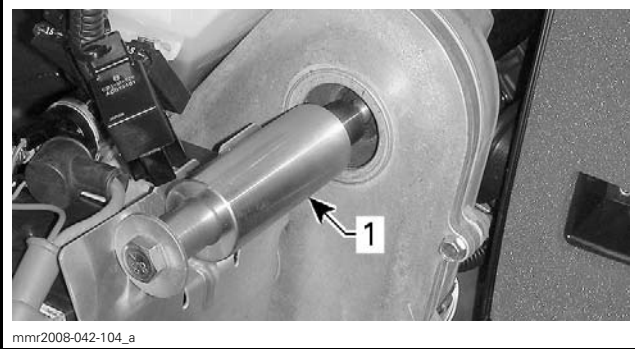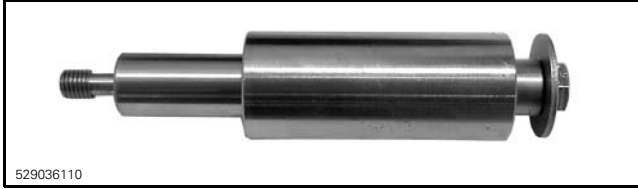


TYPICAL

1. Upper gear retaining tool

8. Remove left side panel.

9. Remove the drive belt. Refer to *DRIVE BELT* section.

10. Behind driven pulley, remove nut securing the countershaft bearing flange.

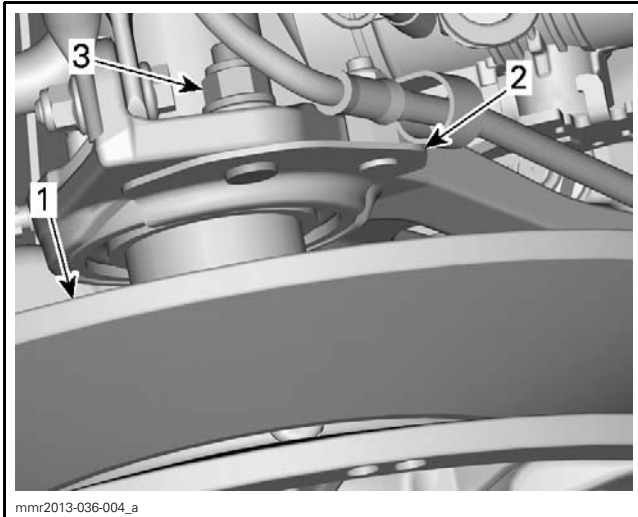


1. Driven pulley
2. Countershaft bearing flange
3. Nut

11. Pull out bearing flange.

12. Pull the driven pulley to disengage countershaft and upper gear.

NOTE: If necessary, tap the upper gear retaining tool with a plastic hammer.

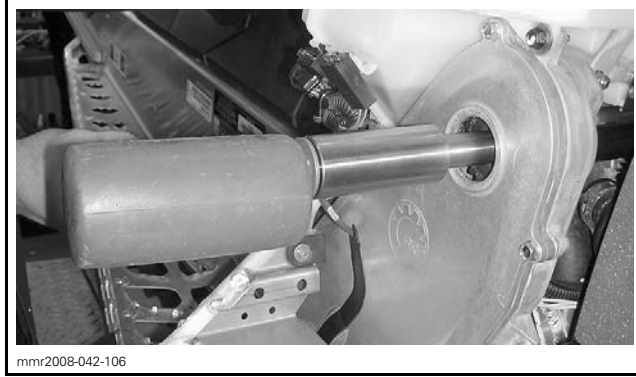

TYPICAL


13. Unscrew countershaft from the upper gear retaining tool. **Do not** remove tool.

NOTE: While countershaft is removed from vehicle, the upper gear retaining tool maintains the drive chain and the upper gear in position inside chaincase.

Driven Pulley Disassembly

Cam and Spring Removal

1. Loosen the clamping screw.

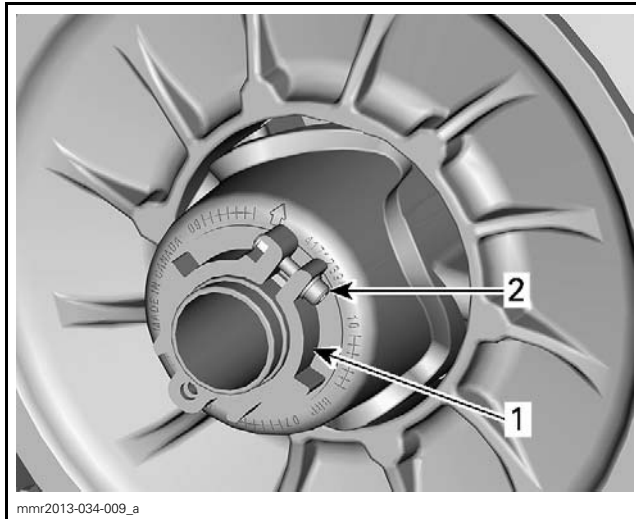


TYPICAL

1. Adjuster hub
2. Clamping screw

2. Unscrew the adjuster hub **clockwise** using the SUSPENSION ADJUSTMENT TOOL (P/N -) provided in the vehicle tool kit.

NOTE: The adjuster hub has LH treads.

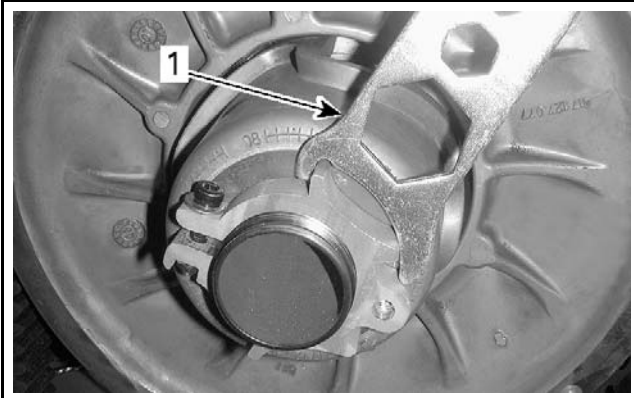


mnr2013-034-010_a

TYPICAL


1. Suspension adjustment tool shown

3. Install the threaded adapter of the DRIVEN PULLEY SPRING COMPRESSOR (P/N 529 036 182) at the end of driven pulley.

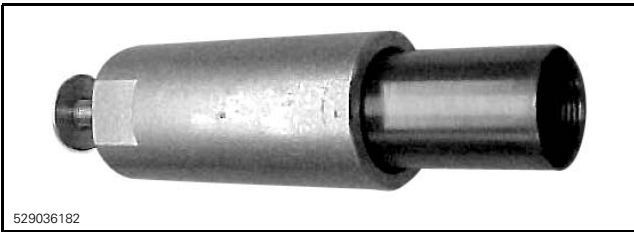

529036182

THREADED ADAPTER

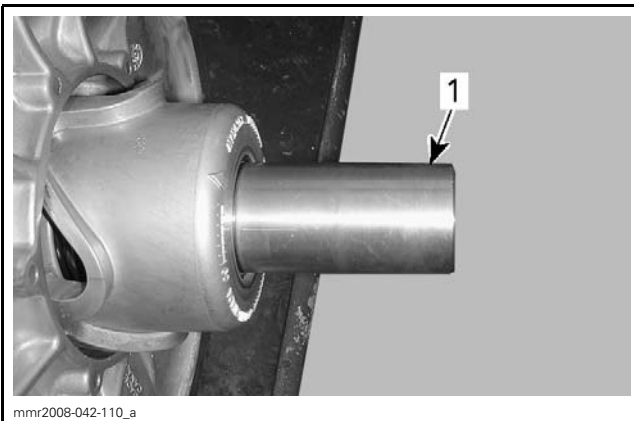


mnr2008-042-110_a

TYPICAL

1. Threaded adapter

4. Install the external sleeve over the threaded adapter and secure sleeve with the tool screw.

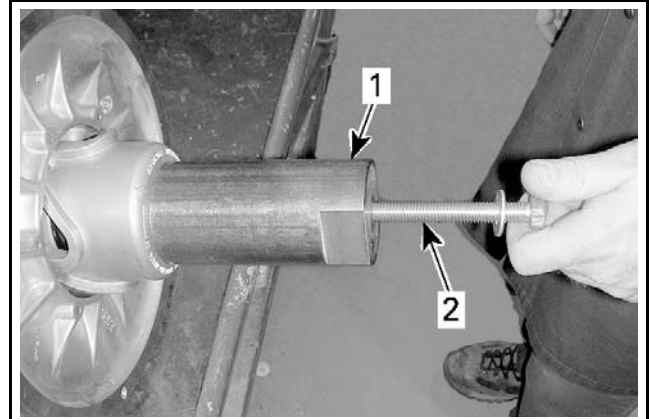

mnr2008-042-111_a


TYPICAL

1. External sleeve

2. Driven pulley spring compressor screw

5. Tighten the tool screw to compress the cam.

6. Install the tool in a vice.

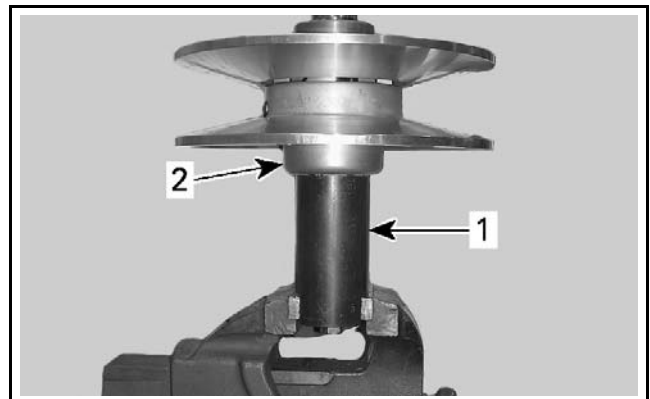


mnr2008-042-112_a

TYPICAL

1. Driven pulley spring compressor

2. Driven pulley

7. Using a heat gun, heat cam screws to break the thread locker.

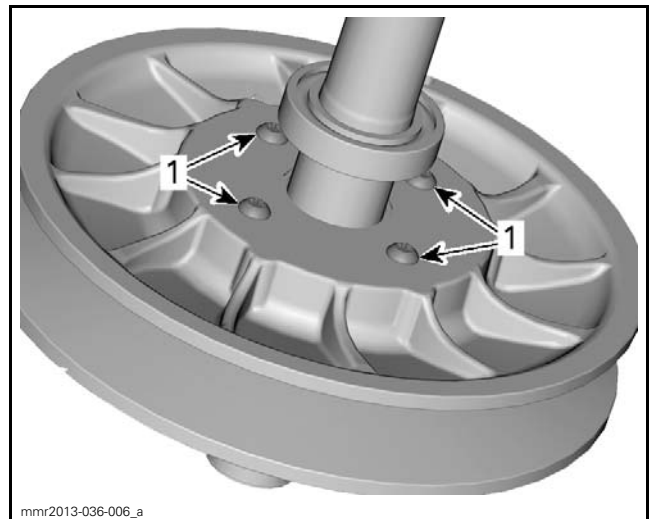

mnr2013-036-006_a


1. Heat cam screws

Subsection XX (DRIVEN PULLEY AND COUNTERSHAFT)

8. Remove and discard cam screws.
9. Unscrew the tool screw completely.
10. Remove cam, spring stoppers and spring.

Sliding Sheave Removal

1. Remove the cam and spring. Refer to *CAM AND SPRING REMOVAL*.
2. Remove the *COUNTERSHAFT BEARING*, see procedure in this section.
3. Remove sliding sheave.

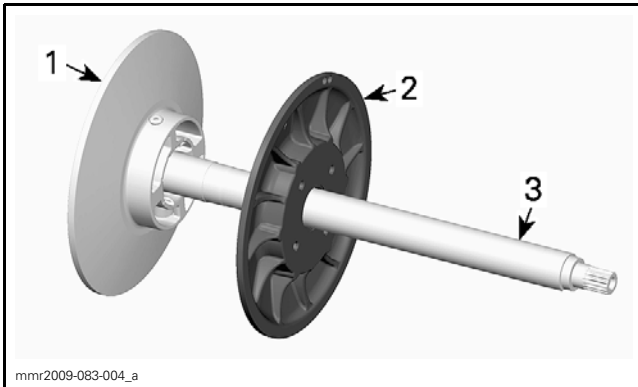


1. Fixed sheave
2. Sliding sheave
3. Countershaft

Fixed Sheave Removal

The fixed sheave and countershaft are sold as an assembly. They are not available separately.

Driven Pulley Roller Removal


1. Move sliding and fixed sheaves apart.
2. Remove spring pin used to lock pivot screw.
 - 2.1 Use tap wrench to start removing spring pin.
 - 2.2 Once spring pin is accessible to pliers, pull pin out using pliers.

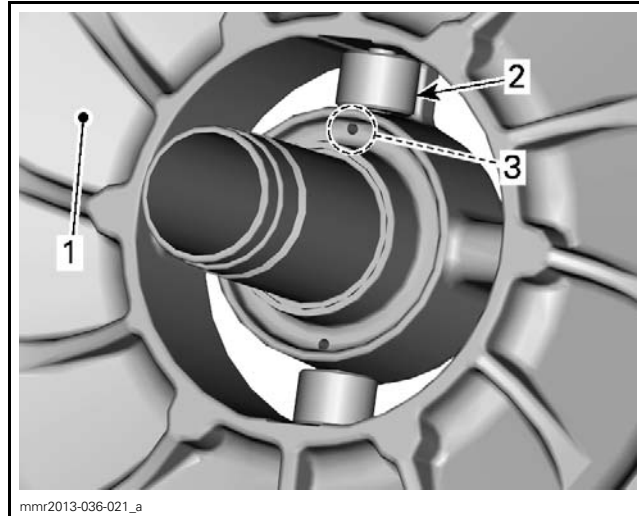

1. Fixed sheave outer face
2. Roller
3. Spring pin location

3. Identify pivot screws location before removal.
4. Remove pivot screw and ribbed lock washer; keep both for reuse.


NOTICE Make sure not to damage or lose pivot screws. If screws need to be replaced, replace fixed sheave assembly

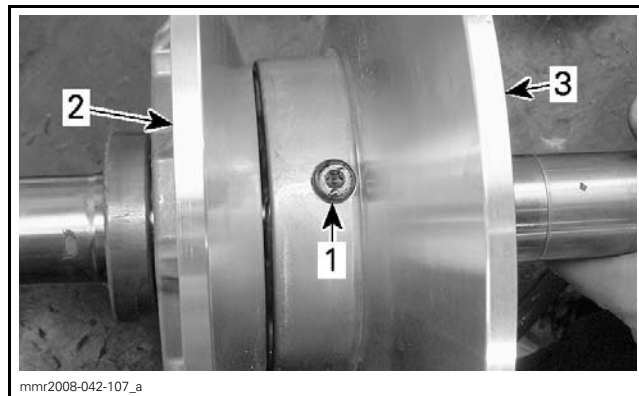

1. Pivot screw
2. Sliding sheave
3. Fixed sheave



PIVOT SCREW REMOVAL

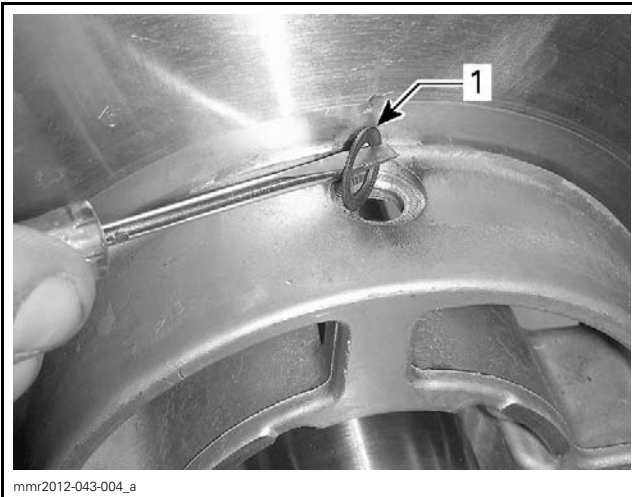

1. Ribbed lock washer

5. Remove roller.

6. Proceed with removal of other roller.


IMPORTANT: For proper fit, each pivot screw must be reinstalled where originally mounted in the fixed sheave.

NOTE: If pivot screw must be replaced, replace fixed sheave assembly.

Driven Pulley Inspection

Cam and Spring Inspection

1. Verify contact surfaces of cam for visible damages. Ensure circlip properly locks the inner bushing. Replace part if necessary.
2. Using a dial bore gauge, measure the inner diameter of cam bushing. Measuring point must be at least 5 mm (1/4 in) from bushing edge.

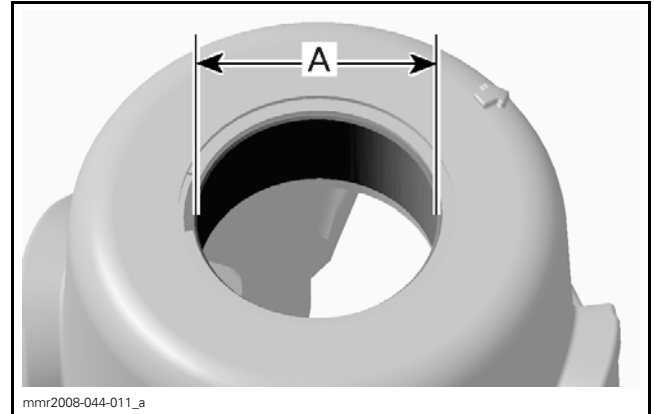


A. Inner diameter of cam bushing

CAM BUSHING	SERVICE LIMIT
Inner diameter	41.5 mm (1.634 in)

3. Replace the cam if the inner diameter of bushing is out of specification.

Sliding Sheave Inspection

1. Inspect pulley sheave for marks or scratches.
2. Ensure circlip properly locks the inner bushing. Replace part if necessary.
3. Using a dial bore gauge, measure the inner diameter of sliding sheave bushing. Measuring point must be at least 5 mm (1/4 in) from bushing edge.

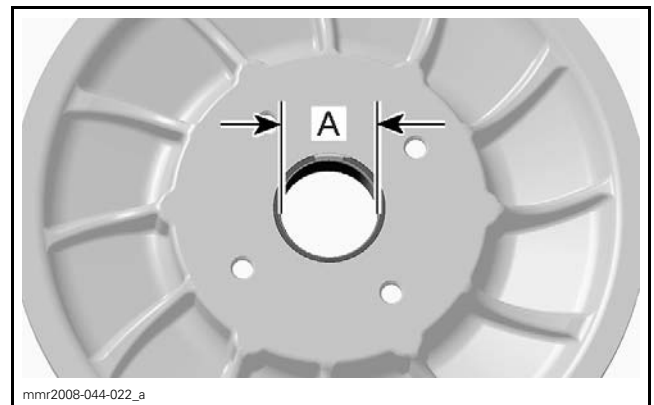

A. Inner diameter of sliding sheave bushing

SLIDING SHEAVE BUSHING	SERVICE LIMIT
Inner diameter	41.5 mm (1.634 in)

4. Replace the sliding sheave if the inner diameter of bushing is out of specification.

Fixed Sheave Inspection

Replace fixed sheave and countershaft if one of the following problem is detected:


- Marks or scratches on pulley sheave

Subsection XX (DRIVEN PULLEY AND COUNTERSHAFT)

- Bent, twisted or otherwise damaged countershaft
- Defective splines and threads at the end of countershaft.

Driven Pulley Roller Inspection


1. Check the rollers for flat spots, cracks or other visible damages. Replace if necessary (as a set).
2. Measure inner and outer diameter of rollers.

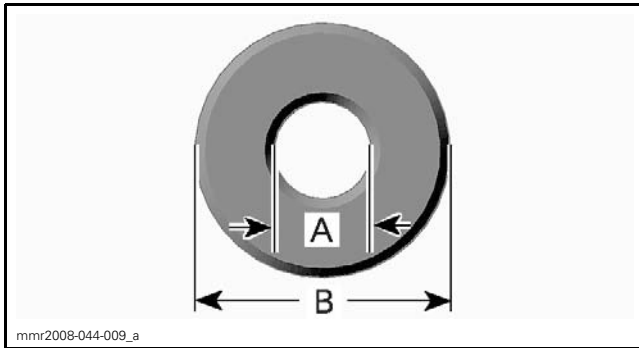

A. Inner diameter
B. Outer diameter

DRIVEN PULLEY ROLLER	SERVICE LIMIT
Inner diameter	8.5 mm (.335 in)
Outer diameter	21.5 mm (.846 in)

3. Measure the roller thickness.

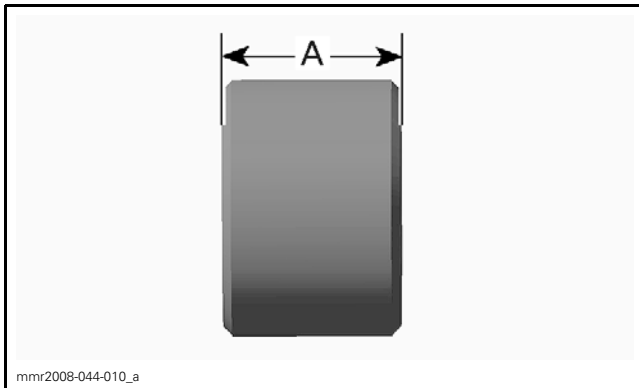

A. Thickness of roller

DRIVEN PULLEY ROLLER	SERVICE LIMIT
Thickness	14.75 mm (.581 in)

4. If a roller is out of specifications, replace both rollers at the same time.

Driven Pulley Cleaning

Use the PULLEY FLANGE CLEANER (P/N 413 711 809) and a clean rag to clean pulley sheaves.

Cam and Spring Cleaning

During break-in period, teflon from bushing moves to cam or countershaft surface. A teflon over teflon running condition occurs, leading to low friction. So it is normal to see gray teflon deposit on cam or countershaft. Do not remove this deposit.

When a dust deposit has to be removed from the cam or the countershaft, use dry cloth to avoid removing transferred teflon.

Driven Pulley Assembly

Driven Pulley Roller Installation

NOTE: Exceptionally, do **NOT** clean threaded hole to avoid changing the screw position when torqued.

1. Using a hand wire brush, clean pivot screw threads.

IMPORTANT: Do not use a thread die to clean pivot screw of threadlocker as this may alter the screw threads.


NOTE: Pivot screw and ribbed lock washer must be reused if in good condition. If damaged, replace fixed sheave assembly.

2. Apply the following threadlocker to the pivot screw threads.

SERVICE PRODUCT	
Pivot screw threads	LOCTITE 243 (BLUE) (P/N 293 800 060)

3. Insert roller in fixed sheave, thread in pivot screw with ribbed lock washer.

NOTE: The ribbed locked washer must be installed with the concave side towards the fixed sheave.

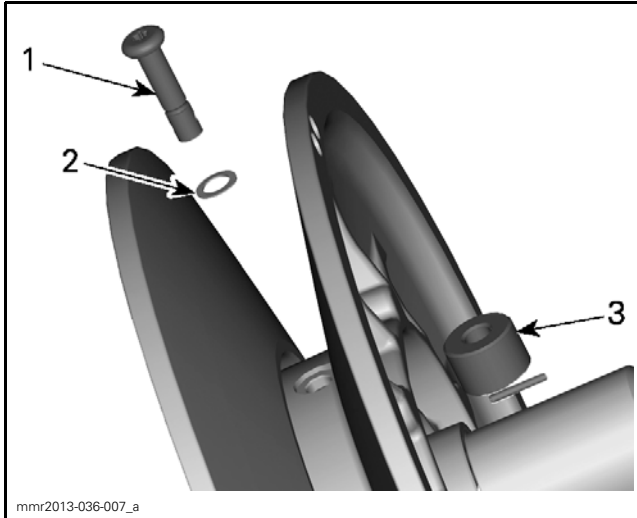

1. Pivot screw
2. Ribbed lock washer (concave side towards fixed sheave)
3. Roller


IMPORTANT: For proper fit, each pivot screw must be reinstalled where originally mounted in the fixed sheave.

4. Torque pivot screw as specified.

TIGHTENING TORQUE	
Pivot screws	21 N•m ± 1 N•m (15 lbf•ft ± 1 lbf•ft)

NOTE: Spring pin hole in the fixed sheave and pivot screw must perfectly line up when torque is applied.

NOTICE If not properly aligned, spring pin will not insert in pivot screw hole and spring pin threads in fixed sheave will be damaged.

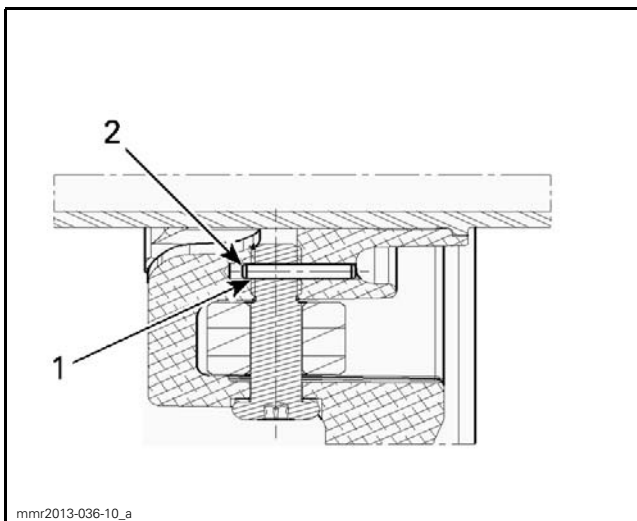


1. Hole in pivot screw
2. Spring pin

5. Install spring pin and tighten as specified.

Cam and Spring Installation


1. Install a spring stopper, the spring, the other spring stopper and the cam.

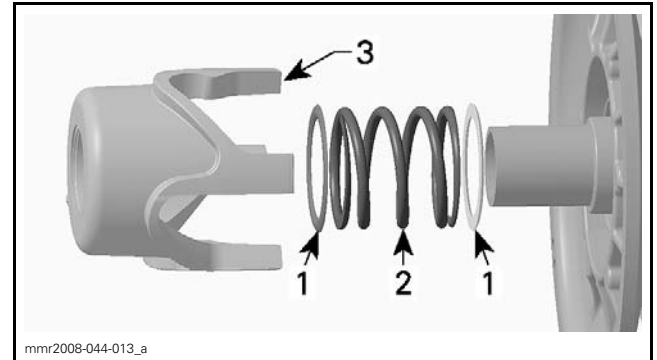

1. Spring stopper
2. Spring
3. Cam

2. Align the arrow on the cam with the arrow on the fixed sheave.

NOTE: On completion of cam installation, the arrow on the cam should have moved clockwise (approximately 30°).

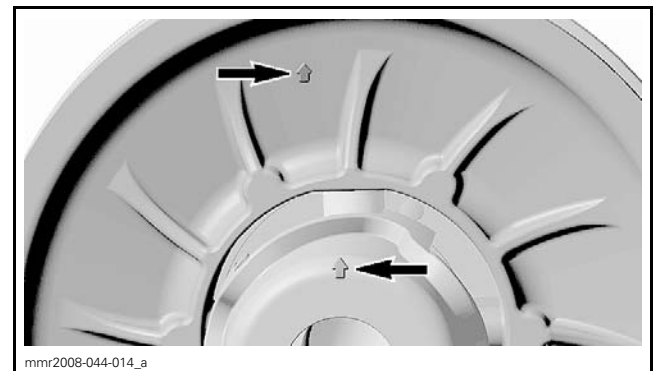

3. Install the driven pulley spring compressor sleeve and tighten the tool screw until the cam is completely pressed against the sliding sheave.

4. From the back of the sliding sheave, install 4 **NEW** cam screws.

5. Torque cam screws as specified.

TIGHTENING TORQUE	
Cam screws	32 N•m (24 lbf•ft)


6. Remove the tool.

Sliding Sheave Installation

The assembly of sliding sheave is the reverse of the disassembly. However, pay attention to the following.

Subsection XX (DRIVEN PULLEY AND COUNTERSHAFT)

When installing sliding sheave, make sure to align its arrow with the arrow on cam.

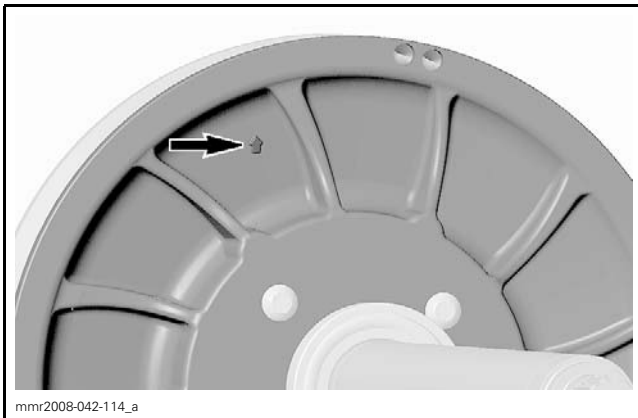

mnr2008-042-114_a

SLIDING SHEAVE ARROW




mnr2008-044-014_b

CAM ARROW

Driven Pulley Installation

- Using sand paper (600-grit or 1000-grit) or steel wool, remove any rust on bearing shoulder of countershaft bearing support.

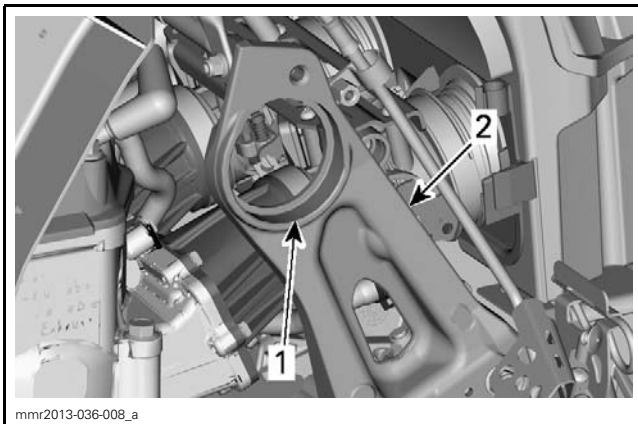

mnr2013-036-008_a

- Bearing shoulder
- Countershaft bearing support

- Apply a thin layer of LOCTITE 767 (ANTISEIZE LUBRICANT) (P/N 293 800 070) on bearing shoulder.
- Insert countershaft through countershaft bearing support.

- Fasten the end of countershaft to upper gear retaining tool.
 - Align countershaft splines with upper gear splines.
 - Using the upper gear retaining tool as a puller, install countershaft in upper gear. Ensure countershaft bearing is installed properly in countershaft bearing support.
 - Remove the upper gear retaining tool.
 - Install the upper gear screw and the conical spring washer.
- NOTE:** The conical spring washer must be installed with its concave side towards upper gear.
- Torque upper gear screw.
 - Install chaincase filler plug.
 - On LH side, install the bearing flange. Torque nut as specified.

TIGHTENING TORQUE	
Bearing flange nut	16 N•m (142 lbf•in)

- Install the adjuster hub onto the countershaft end and temporarily tighten.
- Install and adjust drive belt. Refer to *DRIVE BELT* section.
- Install all other removed parts.

COUNTERSHAFT

The countershaft and the fixed sheave are sold as an assembly. They are not available separately.

Countershaft Removal and Installation


Refer to *DRIVEN PULLEY* in this section for the procedures.

COUNTERSHAFT BEARING


Countershaft Bearing Removal

Remove *DRIVEN PULLEY*, see procedure in this section.

Install the COUNTERSHAFT BEARING REMOVER (P/N 529 036 065) on countershaft.

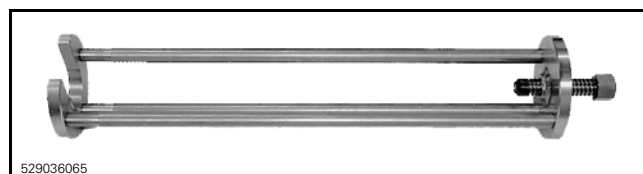

529036065

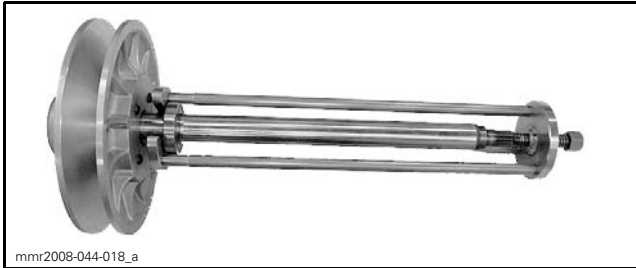


mmr2008-044-018_a

Tighten the screw at the end of tool to extract the bearing. Discard bearing.

Countershaft Bearing Installation

1. Remove the adjuster hub from the cam.
2. Insert the COUNTERSHAFT SUPPORT (P/N 529 036 067) in the countershaft.

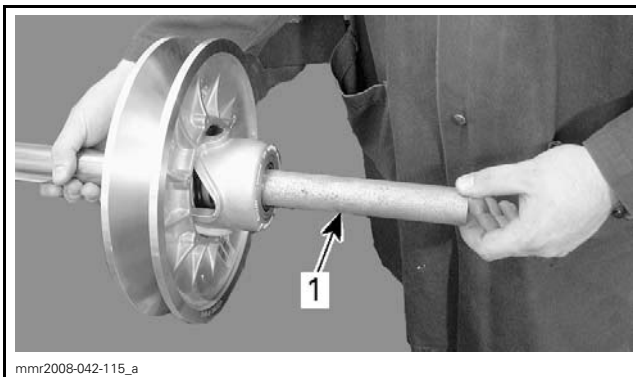


mmr2008-042-115_a

1. Countershaft support

NOTICE The countershaft support is mandatory to avoid damaging the countershaft threaded end and the cam during bearing installation.


3. Using PULLEY FLANGE CLEANER (P/N 413 711 809), clean residues on countershaft bearing surface.
4. Check countershaft bearing surface for wear.
5. Apply LOCTITE 609 (P/N 413 703 100) on countershaft bearing surface.

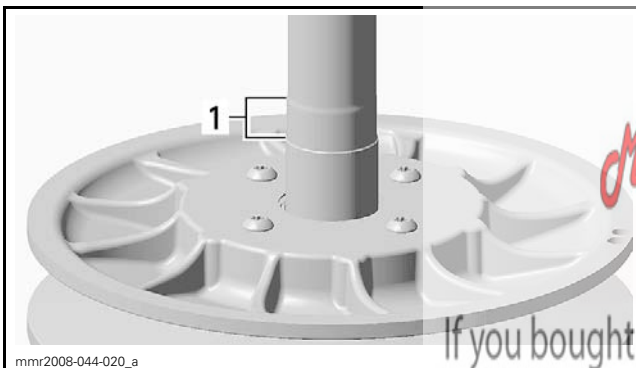

mmr2008-044-020_a

1. Apply Loctite 609 in this region

6. Using a press and the COUNTERSHAFT BEARING INSTALLER (P/N 529 036 066), install the **NEW** bearing on countershaft.

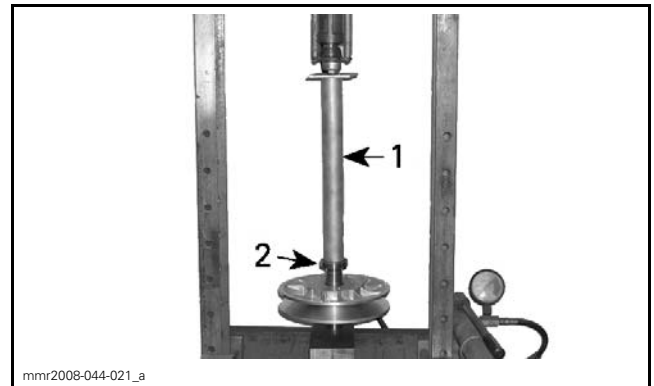

mmr2008-044-021_a

1. Countershaft bearing installer
2. NEW bearing

NOTICE Use a press only, never tap on countershaft bearing installer with an hammer to avoid damaging bearing and countershaft.

7. Clean the surplus Loctite with a rag to avoid having Loctite on sliding sheave bushing.

COUNTERSHAFT BEARING SUPPORT

For countershaft bearing support removal and installation, refer to *COUNTERSHAFT BEARING SUPPORT* in *FRAME*.



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

BRAKE


SERVICE TOOLS

Description	Part Number	Page
CALIPER PULLER	529 036 145	6
PROTECTIVE CAP	529 036 150	6

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE 767 (ANTISEIZE LUBRICANT)	293 800 070	7
XPS SYNTHETIC GREASE.....	293 550 010	10

Subsection XX (BRAKE)

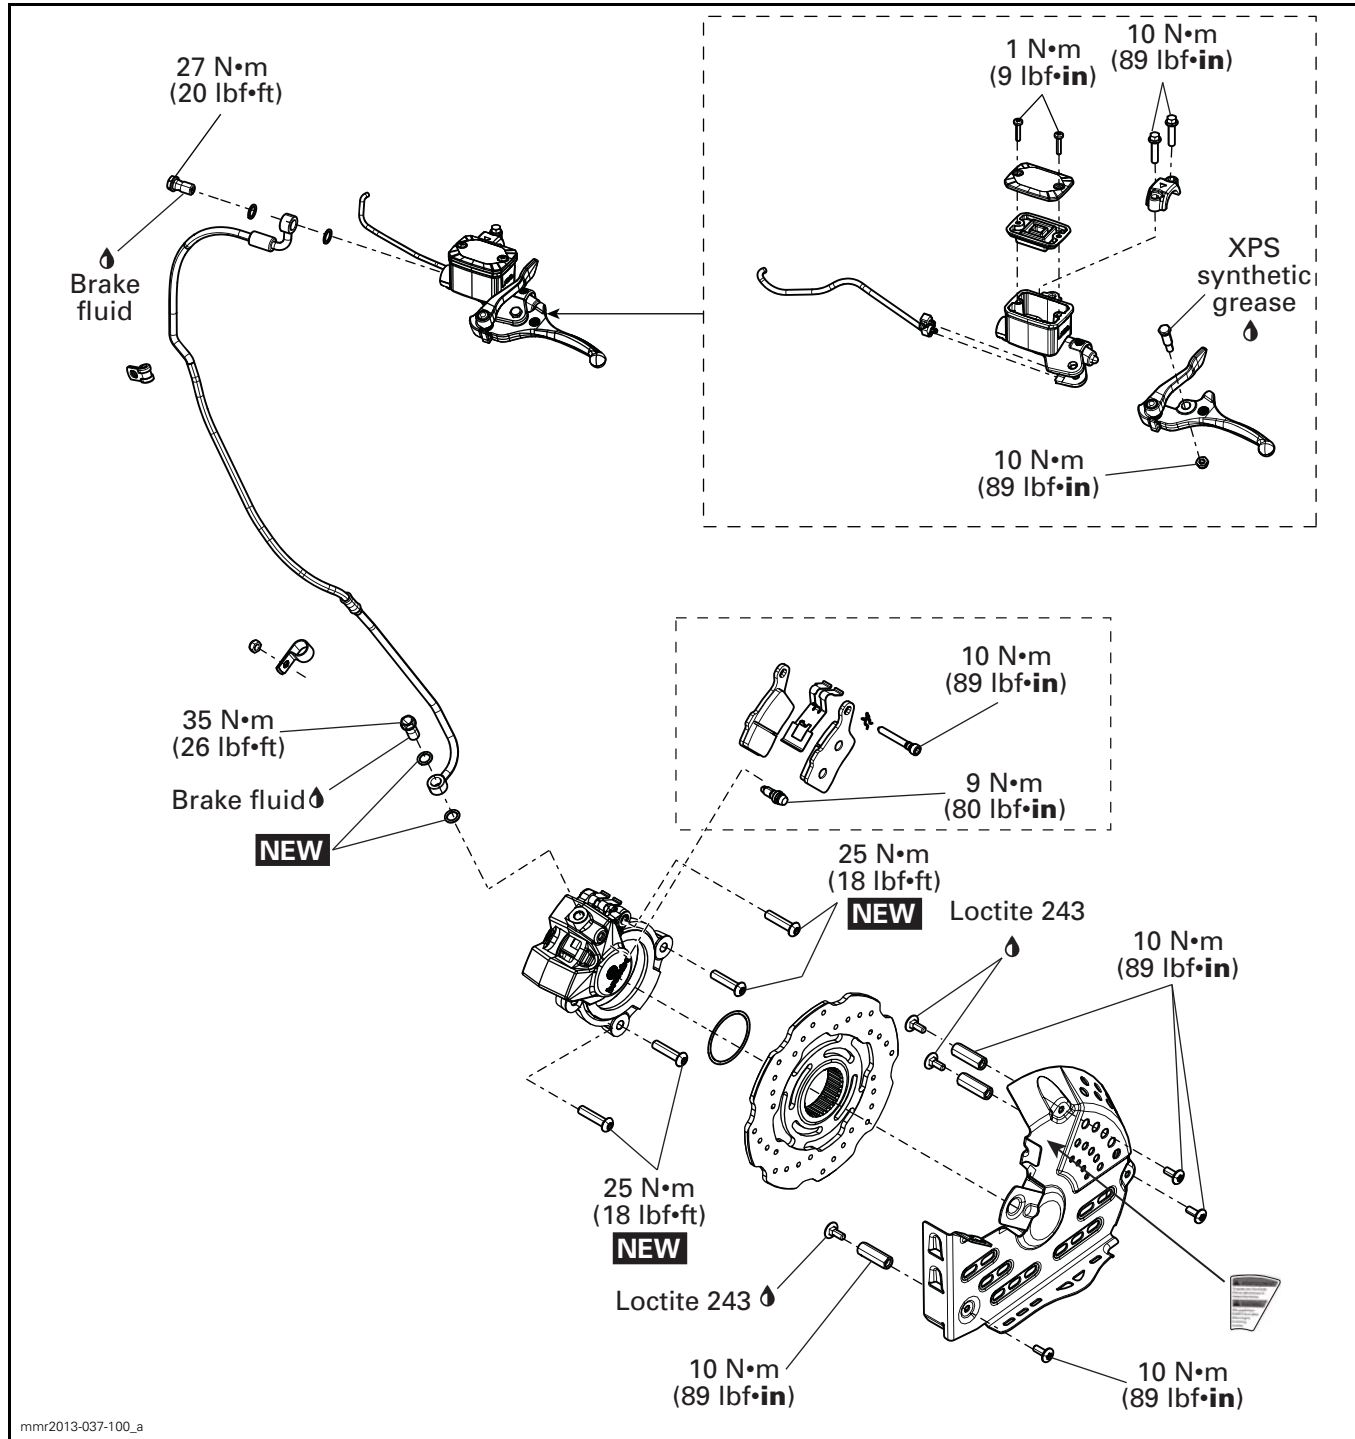

GENERAL

During assembly/installation, use torque values and service products as in the exploded view.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices must be replaced with new ones when removed (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.).

Hoses or cables removed or disconnected must be installed and routed as per factory specifications.

NOTICE Locking ties removed must be replaced as per factory specifications.

⚠ WARNING

Never apply any product to brake fittings. The use of thread sealant or Teflon tape could cause brake system failure.

⚠ WARNING

A contaminated brake disc or pad reduces braking efficiency. Discard contaminated pads and clean contaminated disc with a high quality brake degreasing agent.

NOTICE Avoid spilling brake fluid on plastic, rubber or painted parts. Protect these parts with a rag when servicing the brake system.

NOTICE Wipe up any brake fluid spillage.

NOTICE To avoid serious damage to the brake system, use only DOT 4 brake fluid from a sealed container. Do not use brake fluid taken from an old or already opened containers, or mix different fluids for topping up the system.

NOTICE Sealing washers must be discarded and replaced with NEW ones every time a Banjo fitting is unscrewed.

Dispose of brake fluid as per your local environmental regulation.

PROCEDURES


BRAKE PADS

Brake Pad Inspection

1. Measure brake pad lining thickness.

SERVICE LIMIT	
Brake pad thickness	1 mm (1/32 in)

NOTICE Brake pads must always be replaced in pairs.

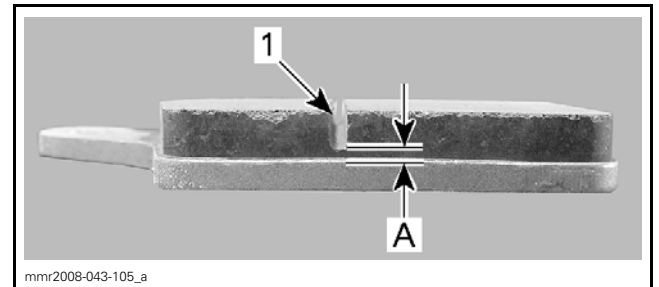

1. Groove on pad lining


A. Brake pad minimum thickness 1 mm (1/32 in)

2. Also inspect the brake disc, refer to *BRAKE DISC INSPECTION* in this subsection.

Brake Pad Replacement

Brake Pad Removal

1. Place the vehicle on a level surface.
2. Cover the plastic parts under and near master cylinder in the event that brake fluid would be spilled.
3. Remove reservoir cover with its diaphragm seal.

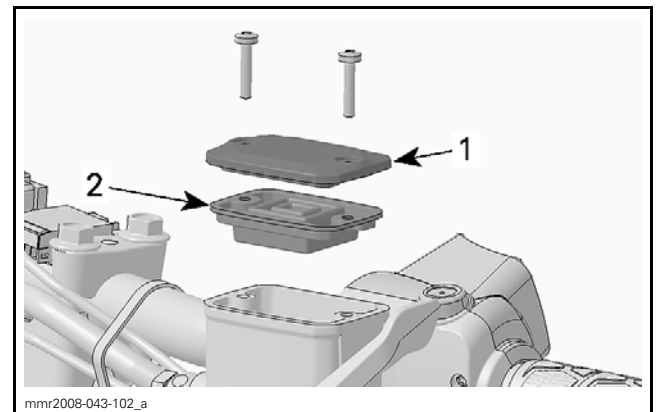


1. Reservoir cover

2. Diaphragm


4. Remove the disc brake protective cover.

Subsection XX (BRAKE)

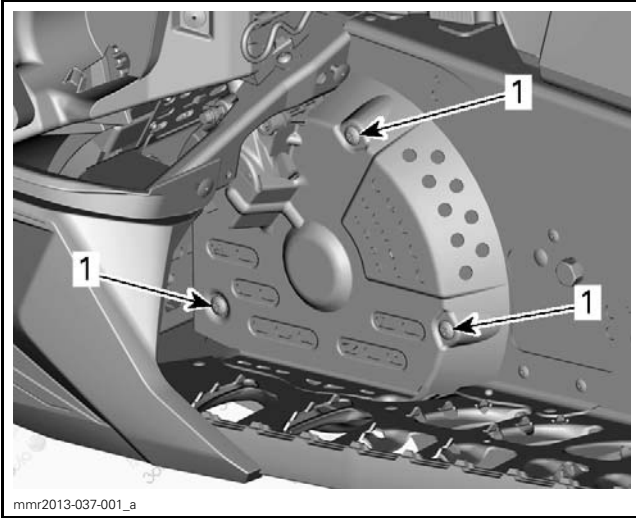


1. Retaining screws

5. Remove the clip securing brake pad pin.
6. Unscrew and remove the brake pad pin.

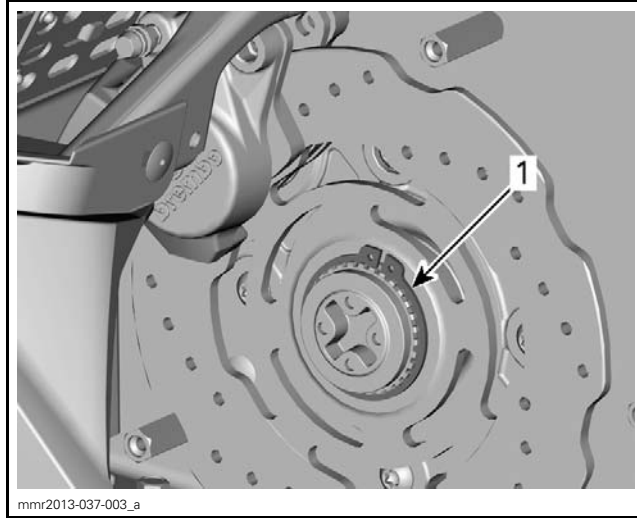

1. Brake disc circlip

9. Remove brake pads.
 - 9.1 Remove the external pad first.

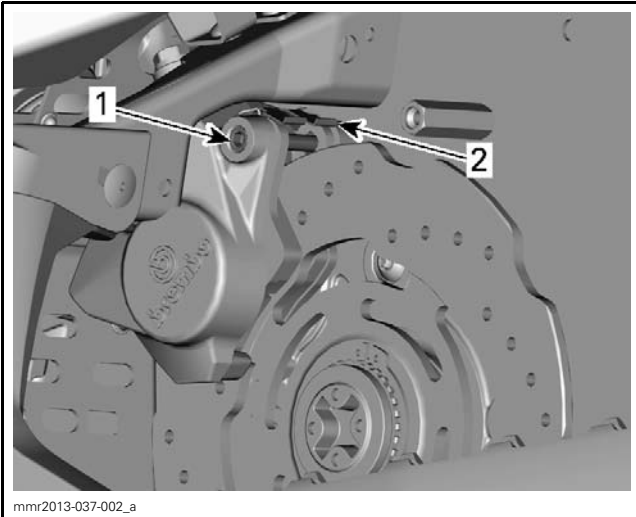


1. Clip
2. Brake pad pin

7. Using a flat screwdriver, depress caliper pistons into their bores.


NOTICE Pay attention to avoid scratching brake disc.

8. Remove the circlip securing brake disc to drive axle.

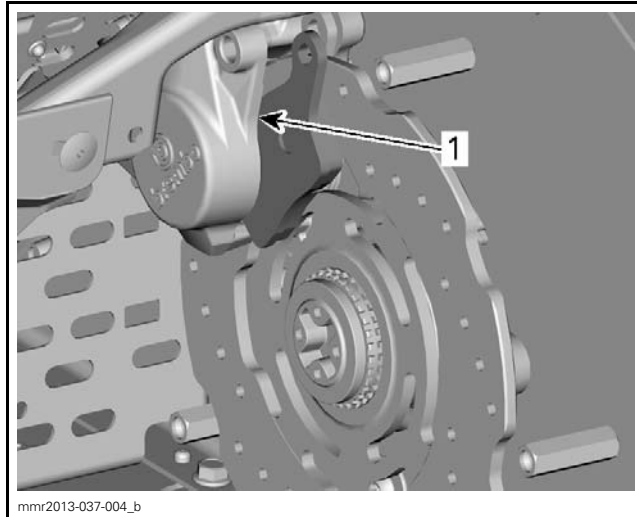


1. External pad

- 9.2 Pull the brake disc outward and remove the internal pad.

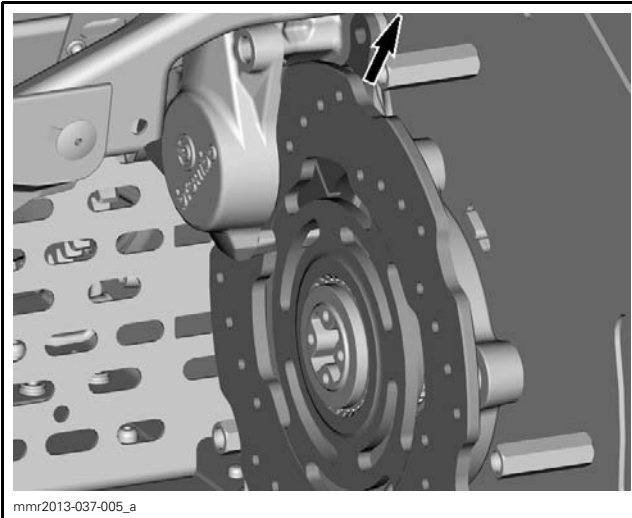

Brake Pad Installation


1. Install **NEW** brake pads with tabs facing upward.

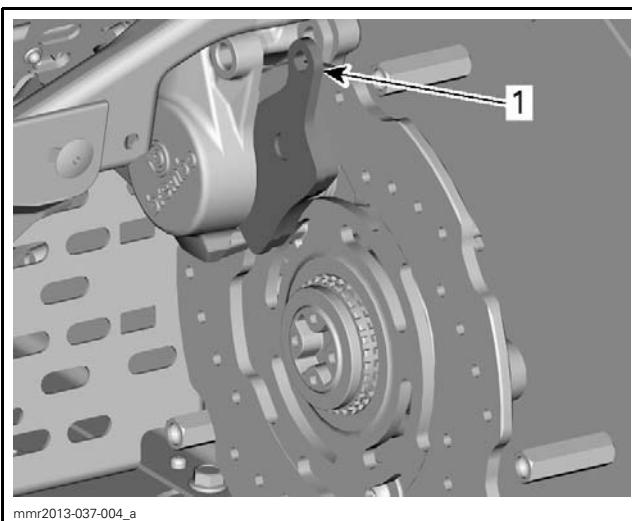


1. Brake pad tab

2. Install brake pad pin.
3. Torque brake pad pin to 10 N•m (89 lbf•in).
4. Install spring clip on brake pad pin. If the clip seems loose, replace it with a new one.

NOTE: Make sure spring ends on brake pads pins are correctly installed as per following pictures.

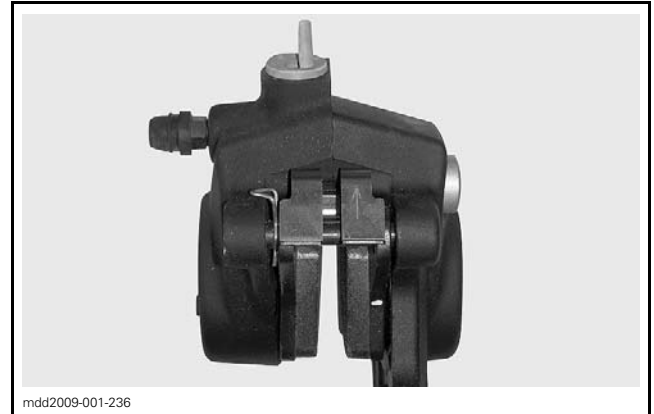

CORRECT

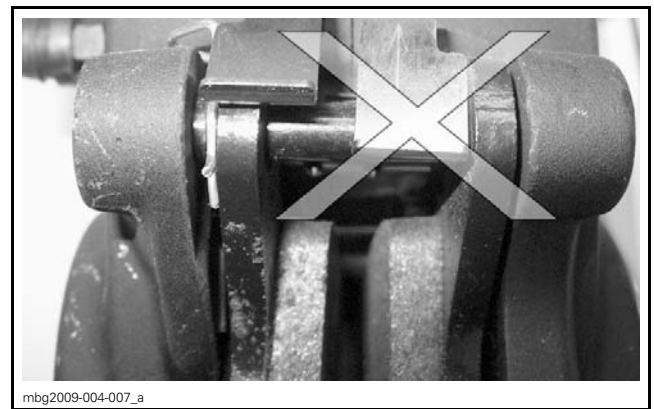

INCORRECT (ON RIGHT SIDE)

5. Operate the brake lever several times to bring the brake pads into contact with the disc brake.
6. Check brake fluid level in master cylinder and refill if necessary.
7. Install the diaphragm and the reservoir cover.
8. Install the disc brake protective cover.
9. Ride the vehicle a few minutes to make sure the repair is successful.

CALIPER


Caliper Removal

1. Open the RH side panel.
2. Refer to *CHAINCASE* subsection and carry the following steps.
 - 2.1 Remove chaincase cover.
 - 2.2 Loosen drive chain.
 - 2.3 Remove lower sprocket.
3. Open LH side panel.
4. Remove drive belt guard support. Refer to *DRIVE BELT* subsection.

NOTE: If the caliper is not replaced, omit steps 5 and 6 concerning the brake system draining and brake hose removal.


Subsection XX (BRAKE)

5. Drain the brake system, refer to *BRAKE FLUID* in *MAINTENANCE* subsection.
6. Remove the Banjo fitting and discard the sealing washers.

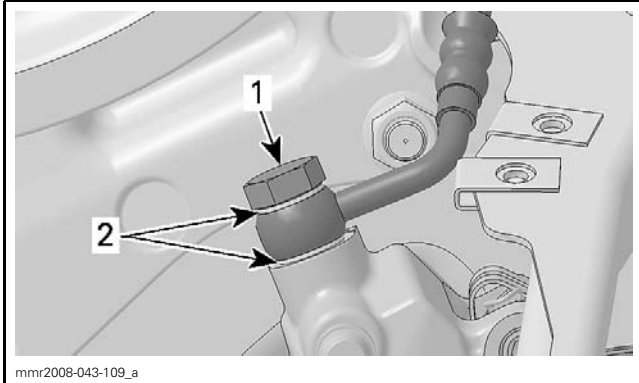


1. Banjo fitting
2. Sealing washers

7. Remove the *BRAKE PADS*, see procedure in this subsection.
8. Lift the rear of vehicle and release track tension completely.
9. Turn driven pulley to align brake disc slots with caliper bracket screws.
10. Remove caliper screws (4) behind brake disc.

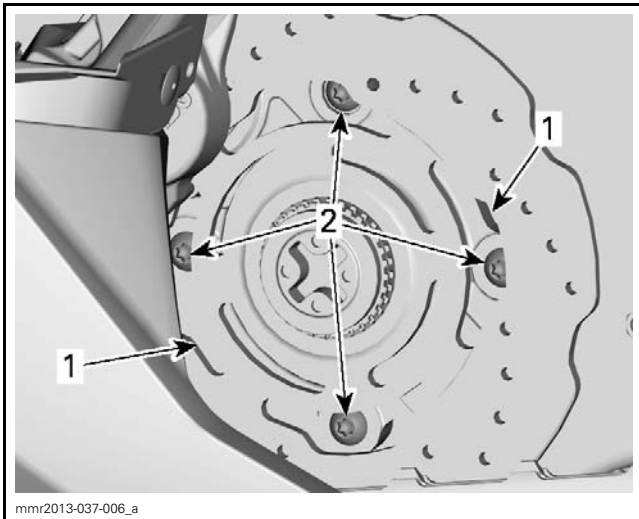

1. Brake disc slots
2. Caliper screws behind brake disc

11. Pull the bearing housing assembly (brake disc, caliper and bearing) from LH side.

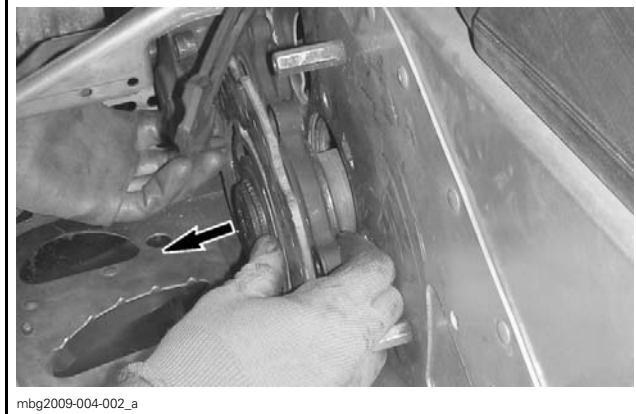


TYPICAL - PULL

12. Install the CALIPER PULLER (P/N 529 036 145) on the brake caliper through brake disc slots.

NOTE: Make sure puller tabs are correctly engaged on caliper.



13. Install the PROTECTIVE CAP (P/N 529 036 150) between caliper puller bolt and plastic cap in drive axle end.

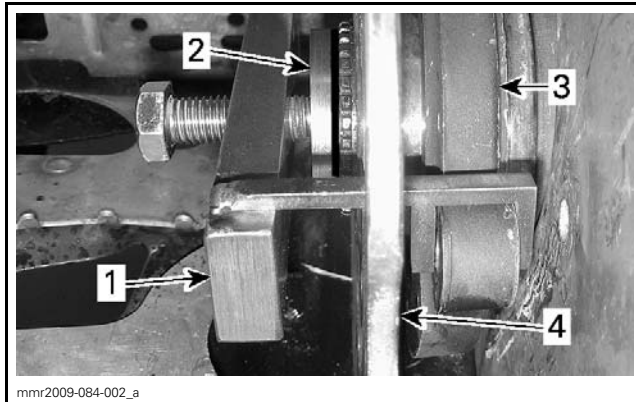

TYPICAL

1. Caliper puller
2. Protective cap
3. Caliper bracket
4. Brake disc

14. Tighten caliper puller bolt to separate caliper from drive axle bearing.

NOTICE Never use an impact tool to operate caliper puller. The caliper or the puller could break.

15. When brake disc is out of splines, remove it.
16. Remove caliper.


NOTICE Do not let caliper hang by the hose and do not stretch or twist the hose.

Caliper Inspection


1. Check caliper pistons for:
 - Proper operation
 - Rust
 - Scratches
 - Leaks.
2. Check caliper bracket for:
 - Cracks
 - Rust on bearing shoulder (clean with a steel wood).
3. Replace caliper if required.

Caliper Installation

1. Using your fingers or a small piece of wood, push both pistons into their bores.
2. Clean brake caliper bearing shoulder with fine steel wool.
3. Apply LOCTITE 767 (ANTISEIZE LUBRICANT) (P/N 293 800 070) on drive axle splines and on bearing shoulder of caliper bracket.

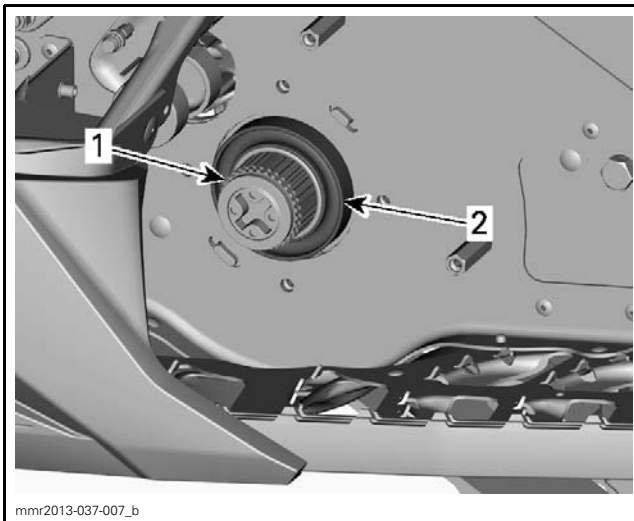


1. Drive axle splines
2. Drive axle bearing

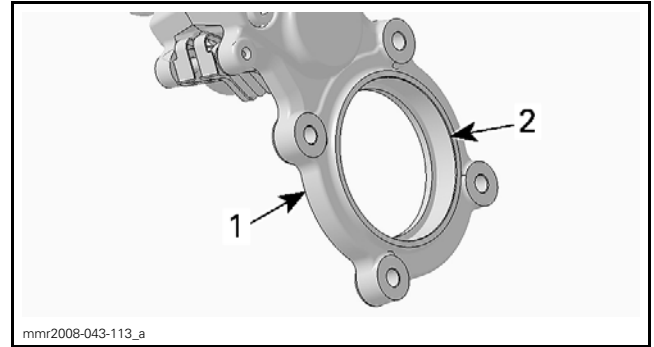


TYPICAL
1. Caliper bracket
2. Bearing shoulder

4. Insert brake disc in the caliper. The brake disc collar must be inserted in the caliper bracket.

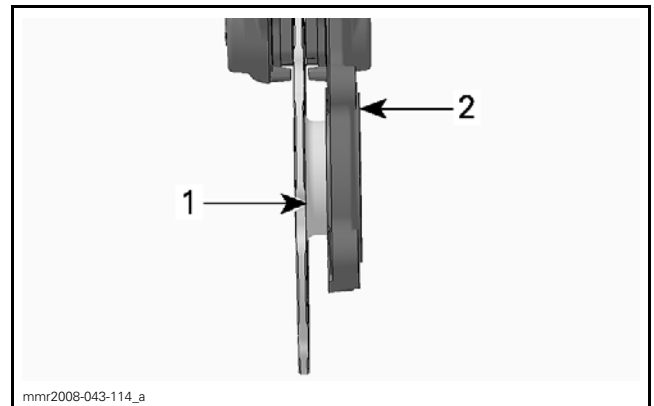

1. Brake disc collar
2. Caliper bracket

5. Ensure bearing flange is properly locked in the frame. Tabs must be properly inserted in frame slots.

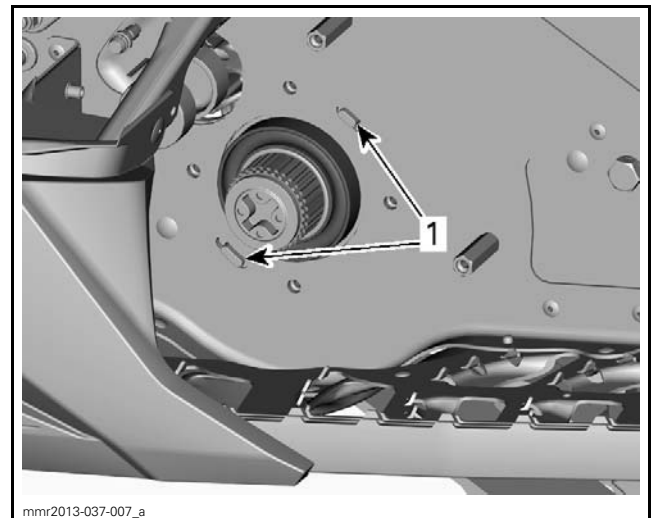


VIEW FROM OUTSIDE FRAME
1. Bearing flange locking tabs

6. Align brake disc splines with drive axle splines and push brake disc onto drive axle.

Subsection XX (BRAKE)


7. Push the caliper bracket over the drive axle bearing.

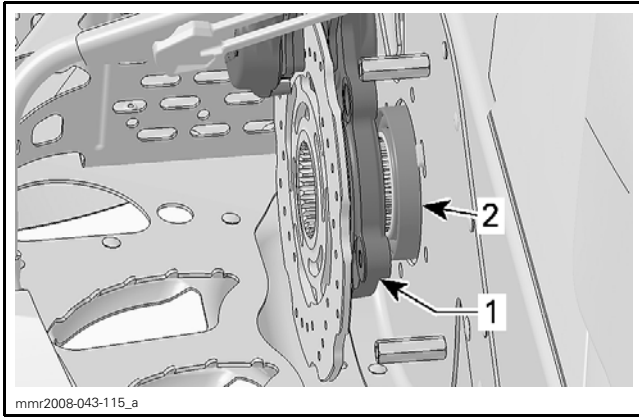

TYPICAL

1. Caliper bracket
2. Drive axle bearing

8. Align caliper bracket holes with bearing flange holes and install caliper screws.

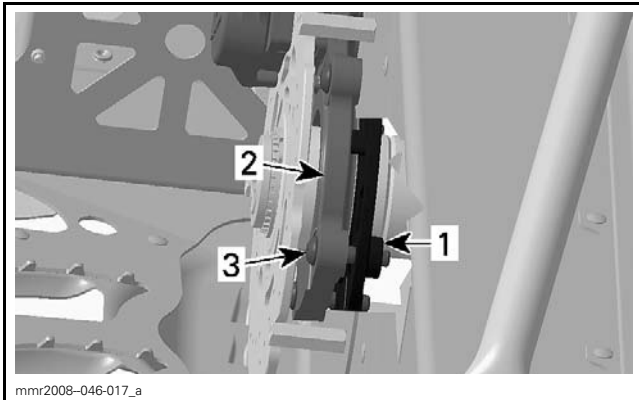

TYPICAL

1. Bearing flange (inside frame)
2. Caliper bracket
3. Caliper screws

9. **HAND TIGHTEN** each caliper bracket screw evenly in a criss-cross pattern until bracket is correctly positioned against frame.

NOTICE Never use an air tool to tighten caliper screws. The caliper bracket could crack.

10. Install *BRAKE PADS*, see procedure in this subsection.
11. Install brake disc circlip.
12. Torque brake caliper screws to 25 N•m (18 lbf•ft).
13. Apply brake fluid on Banjo fitting threads.
14. Install the Banjo fitting with two **NEW** sealing washers.
15. Torque Banjo fitting to 35 N•m (26 lbf•ft).

16. Fill and bleed the brake system. Refer to *BRAKE FLUID* in *MAINTENANCE* subsection.
17. Install all other removed parts.
18. Check the operation of the brake carefully before riding the snowmobile.

BRAKE DISC

Brake Disc Inspection (Not Removed)

1. Remove the disc brake protective cover.
2. Check for scoring, cracking or bending, replace as required.
3. Measure brake disc thickness. If the brake disc is out of specification, replace it with a new one.

NOTICE Brake disc should never be machined.

BRAKE DISC SPECIFICATION

Minimum thickness	4.5 mm (.177 in)
-------------------	------------------

Brake Disc Inspection (Removed)

1. Check brake disc splines and drive axle splines for wear or other damages. Replace defective parts.

Brake Disc Removal and Installation


Follow procedures for caliper removal and installation.

MASTER CYLINDER

Master Cylinder Removal


NOTE: If the master cylinder is not replaced, omit the steps concerning brake system draining and brake hose removal.

1. Drain brake system, refer to *BRAKE FLUID* in *PERIODIC MAINTENANCE PROCEDURES* subsection.
2. Remove the Banjo fitting and discard the sealing washers.

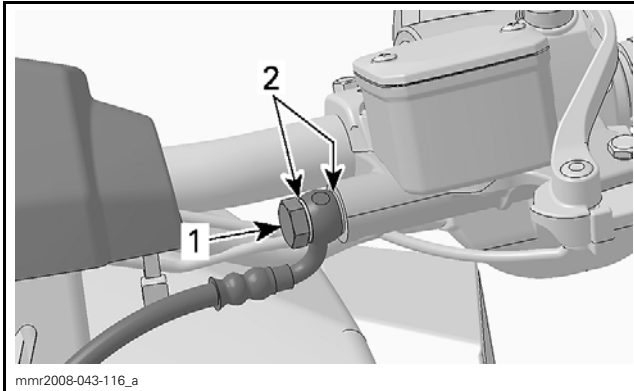


1. Banjo fitting
2. Sealing washers

3. Remove steering pad.

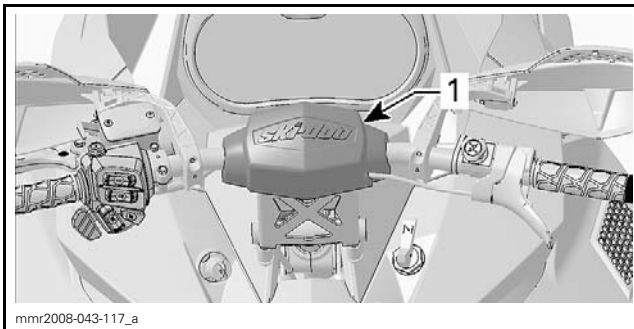


- TYPICAL**
1. Steering pad

4. Disconnect the LH steering connector.

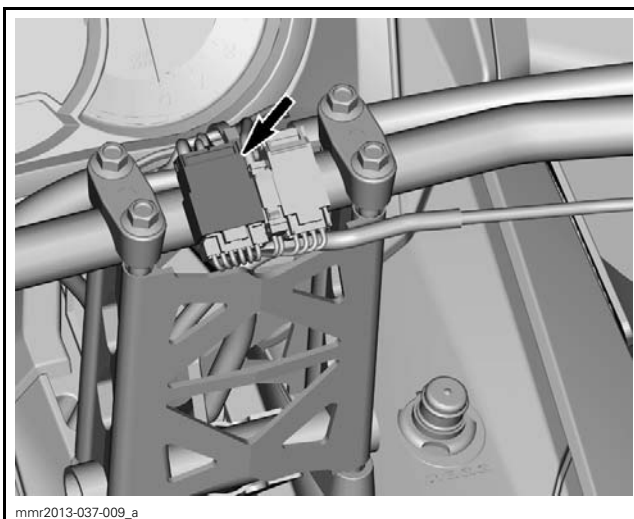

TYPICAL

5. Cut locking tie securing brake light switch wiring to handlebar.
6. Remove screws and clamp securing master cylinder to handlebar.

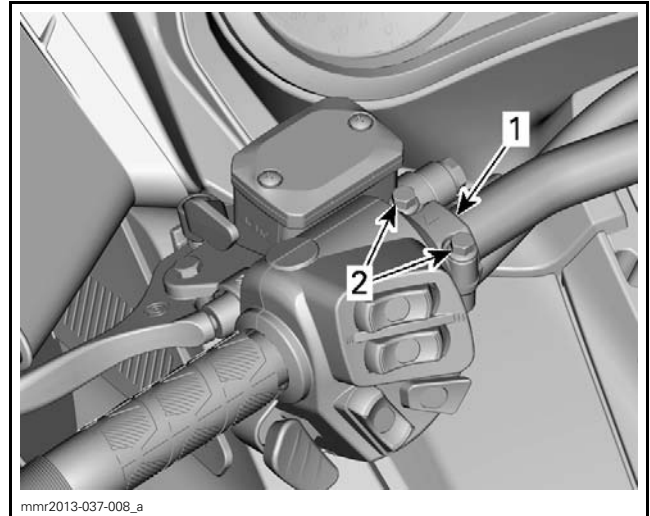

1. Master cylinder clamp
2. Master cylinder clamp screws

7. Remove master cylinder.

NOTICE Do not let master cylinder hang by the hose and do not stretch or twist the hose.


Master Cylinder Inspection

1. Discard all remaining fluid inside master cylinder reservoir.
2. Check if the reservoir cap seal is brittle, hard or damaged. Replace as necessary.
3. If the reservoir is damaged or leaking, replace master cylinder.
4. Check if brake lever is bent, cracked or otherwise damaged. Replace brake lever if required.

Master Cylinder Installation


1. Place the master cylinder on the handlebar.
2. Install master cylinder retaining clamp with its arrow pointing toward the front of vehicle.

Subsection XX (BRAKE)

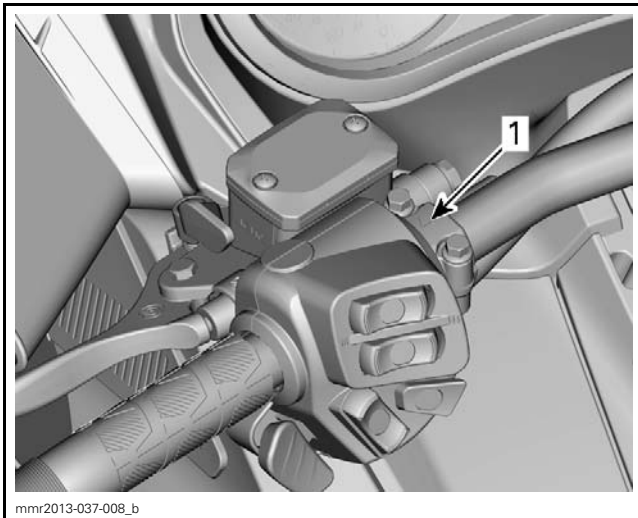

mmr2013-037-008_b
1. Arrow on clamp

3. Install master cylinder clamp screws and tighten loosely.
4. With the handlebar in the straight ahead position, place the reservoir parallel to the ground.
5. Torque master cylinder clamp screws to $10\text{ N}\cdot\text{m}$ ($89\text{ lbf}\cdot\text{in}$) in the sequence shown in the next illustration.

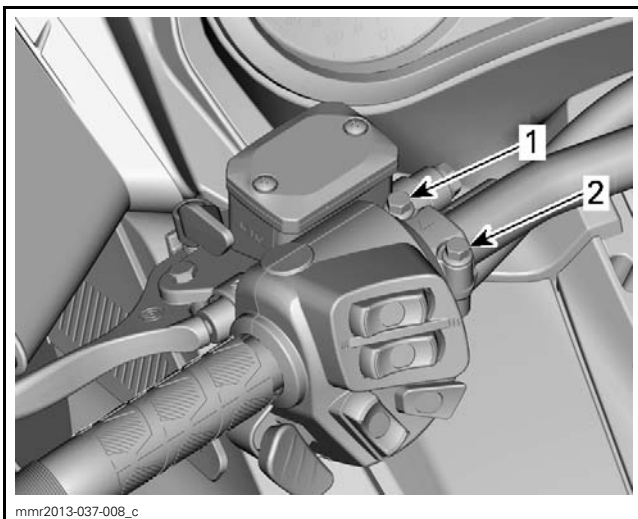

mmr2013-037-008_c
TYPICAL
Step 1: Torque this screw first
Step 2: Torque this screw last

6. Install the Banjo fitting with two **NEW** sealing washers.
7. Torque Banjo fitting to specification.

TIGHTENING TORQUE	
27 N•m (20 lbf•ft)	

8. Fill and bleed the brake system. Refer to *BRAKE FLUID* in *PERIODIC MAINTENANCE PROCEDURES* subsection.
9. Connect brake light switch connector.
10. Install steering cover.


BRAKE LEVER

Brake Lever Lubrication

After using brake cleaner in the brake lever area or after adding brake oil in reservoir, check brake lever pivot lubrication. Add XPS SYNTHETIC GREASE (P/N 293 550 010) on brake lever pivot as necessary.

Brake Lever Replacement

Lubricate brake lever pivot using XPS SYNTHETIC GREASE (P/N 293 550 010).

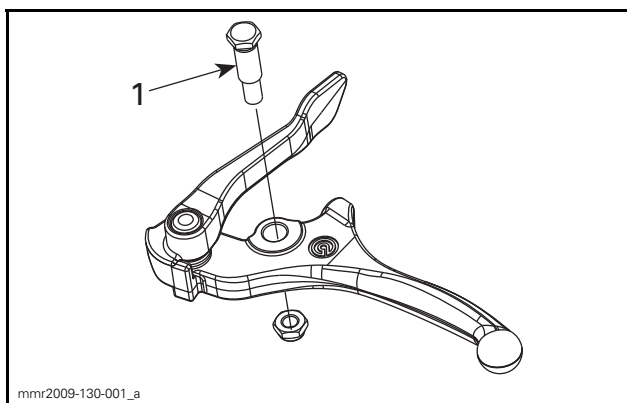


mmr2009-130-001_a
TYPICAL
1. Lubricate brake lever pivot

Torque pivot nut of brake lever to $6\text{ N}\cdot\text{m}$ ($53\text{ lbf}\cdot\text{in}$).

BRAKE LIGHT SWITCH

Brake Light Switch Resistance Test

1. Remove steering cover and disconnect the LH steering connector.

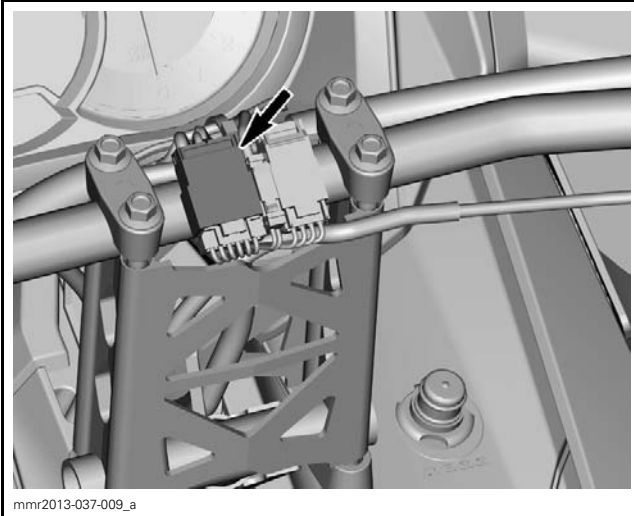

TYPICAL

2. Validate switch operation with an ohmmeter as follows.

STANDARD STEERING HARNESS AND RACING TYPE SWITCH		
SWITCH	WIRE	RESISTANCE
Released	Pin 4 and pin 5	Infinite (OL)
Squeezed and held		Close to 0 Ω


PREMIUM STEERING HARNESS		
SWITCH	WIRE	RESISTANCE
Released	Pin 3 and pin 4	Infinite (OL)
Squeezed and held		Close to 0 Ω

If readings do not correspond to the above specifications, replace switch.

If readings correspond to the above specifications, check fuse, wiring and connectors going to switch. Repair or replace defective part(s).


Brake Light Switch Removal

1. Slip a small screwdriver between brake light switch and brake lever and separate them.

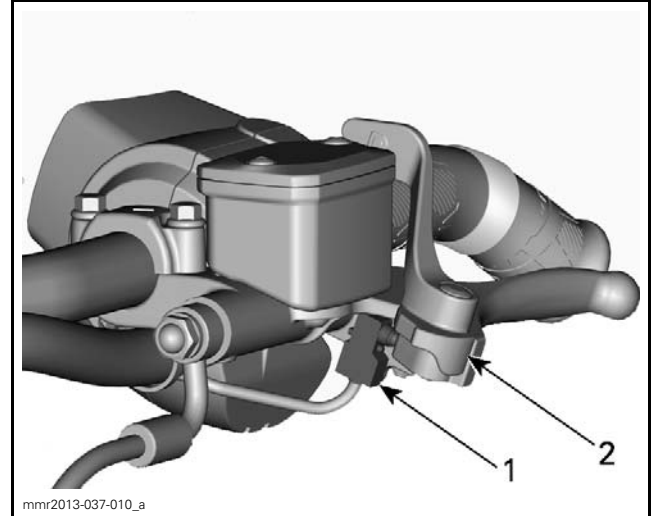

1. Brake light switch
2. Brake lever

2. Remove the steering cover and unplug the LH connector.

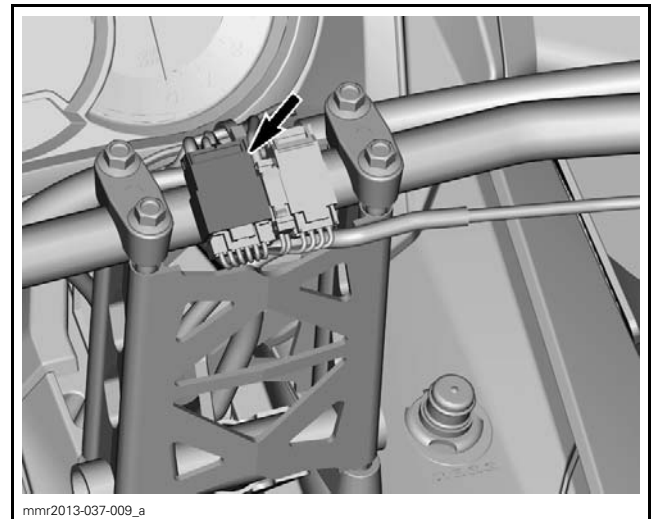

3. Cut all locking ties securing switch wires.
 4. Remove switch wires from connector.
- NOTE:** Check wires location for reinstallation.

Brake Light Switch Installation

1. Plug switch wires into connector as per following tables.

STANDARD STEERING HARNESS AND RACING TYPE SWITCH	
WIRE	CONNECTOR
GRAY	Pin 4
BROWN	Pin 5

Subsection XX (BRAKE)

PREMIUM STEERING HARNESS	
WIRE	CONNECTOR
GRAY	Pin 4
BROWN	Pin 3

2. Squeeze brake lever.
3. Insert the both tabs of switch into brake lever body.
4. Plug the connector.
5. Check if switch is working properly.
6. Install new locking ties and the steering cover.

CHAINCASE


SERVICE TOOLS

Description	Part Number	Page
BEARING PULLER/PUSHER	529 036 111	5
BEARING PULLER/PUSHER	529 036 112	5

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
SNAP-ON SEAL PULLER	YA105	5

Subsection XX (CHAINCASE)

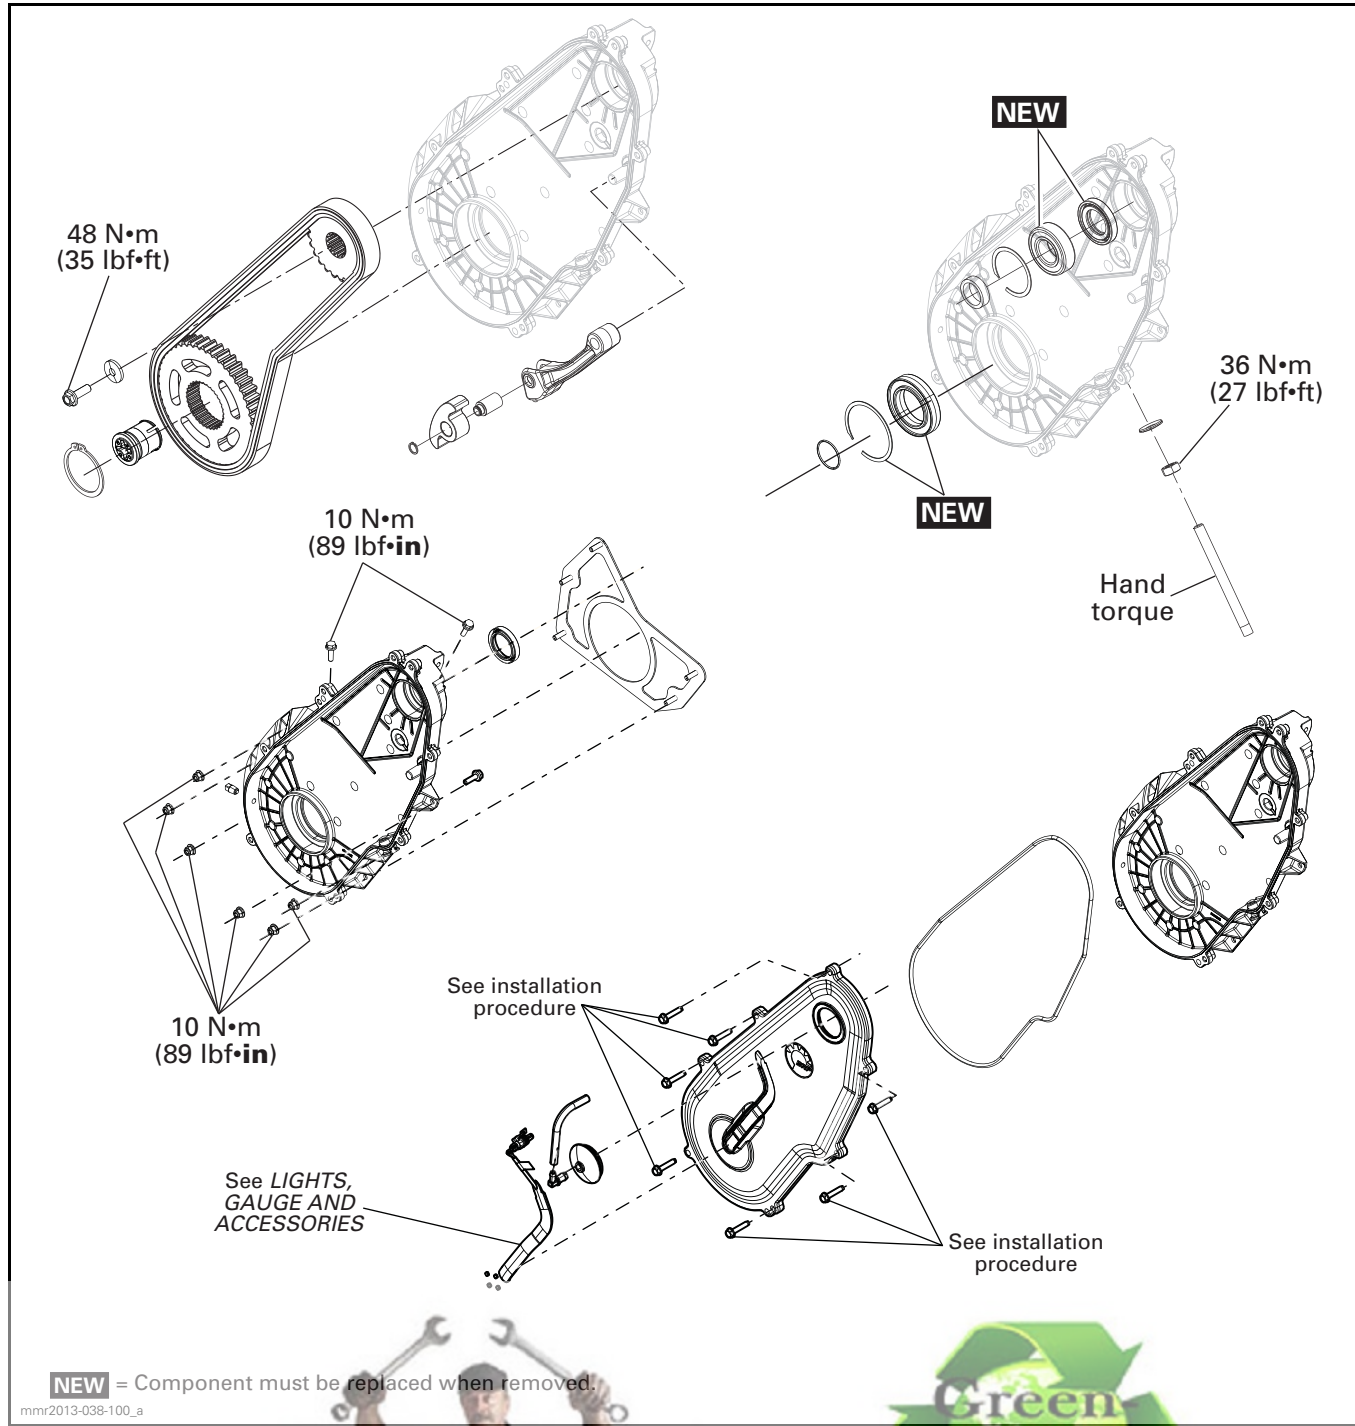

If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

GENERAL

During assembly/installation, use the torque values and service products as in the exploded view. Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices must be replaced with new ones when removed (e.g.: locking tabs, elastic stop nuts, cotter pin, etc.).

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.


PROCEDURES

CHAINCASE

Chaincase Disassembly


Chaincase Cover Removal

1. Apply parking brake.
2. Proceed with *MUFFLER REMOVAL*. Refer to *EXHAUST SYSTEM* subsection.
3. On electric start models, remove battery and battery rack. Refer to *CHARGING SYSTEM* subsection.
4. Remove filler plug on top of chaincase cover.

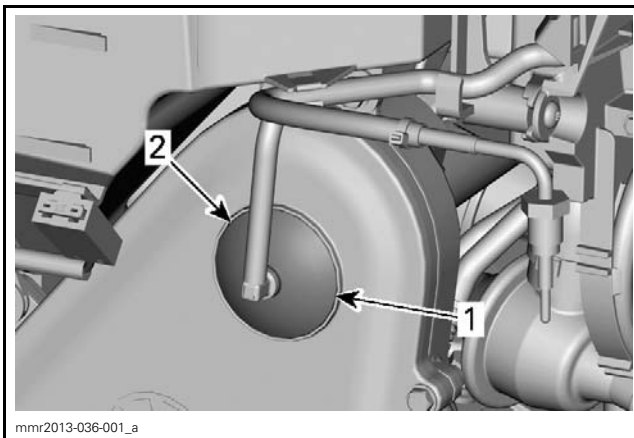


TYPICAL
1. Filler plug
2. Chaincase cover

5. Disconnect speed sensor connector.

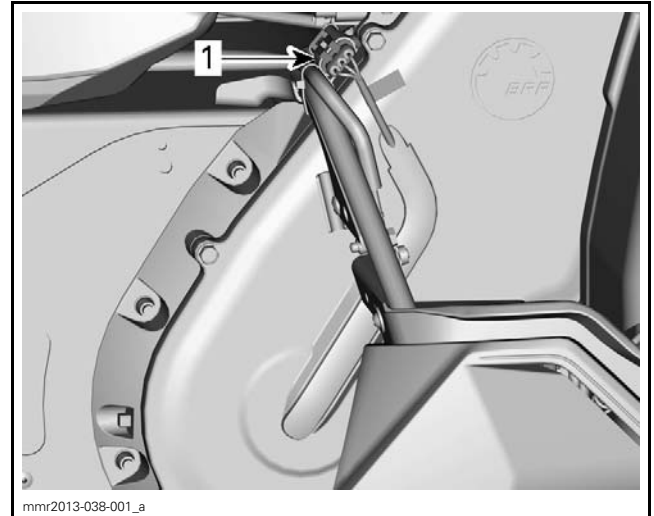

TYPICAL
1. Speed sensor connector

6. Place a container under vehicle in line with chaincase to catch chaincase oil.
7. Unscrew and remove chaincase cover screws.

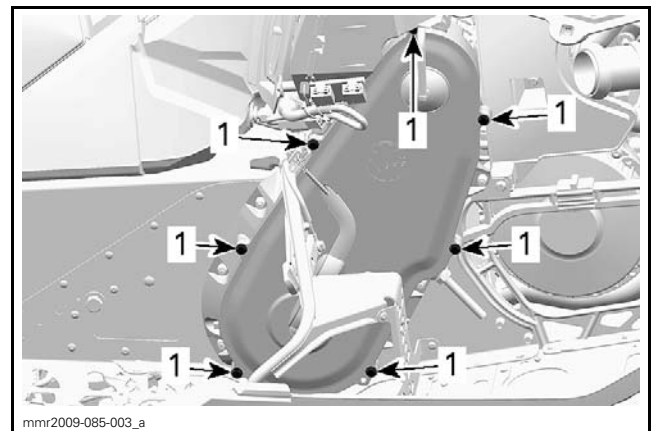


TYPICAL
1. Chaincase cover screws

8. Pull on bottom of chaincase cover to drain oil.
9. Wait a moment then remove the cover completely.

Chain Tensioner Removal

1. Release tension from drive chain by unscrewing the tensioner adjustment screw.


Subsection XX (CHAINCASE)

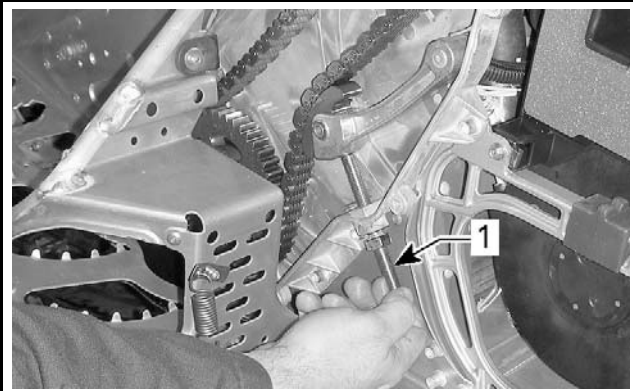

mmr2008-044-104_a

1. Tensioner adjustment screw

2. Remove tensioner arm.

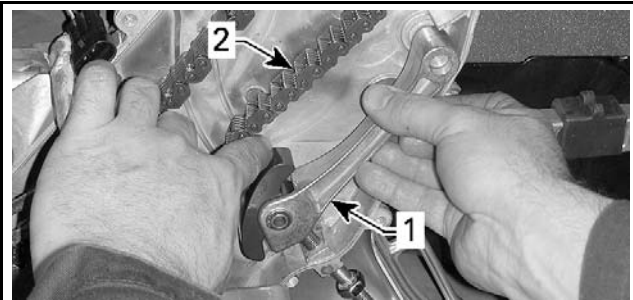


mmr2008-044-105_a

TYPICAL
1. Tensioner arm
2. Drive chain

NOTE: The following steps are required only if the tensioner or the slider is defective.

3. Remove the shaft ring securing the tensioner shaft to tensioner arm.

4. Remove the tensioner shaft to remove the slider.

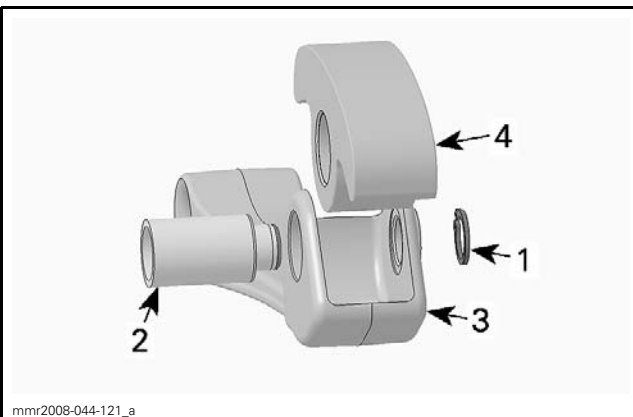


mmr2008-044-121_a

TYPICAL
1. Shaft ring
2. Tensioner shaft
3. Tensioner arm
4. Slider

Drive Chain and Sprocket Removal

NOTE: Prior to removing the drive chain, check the drive chain deflection.


1. Remove the upper sprocket screw and its conical spring washer.

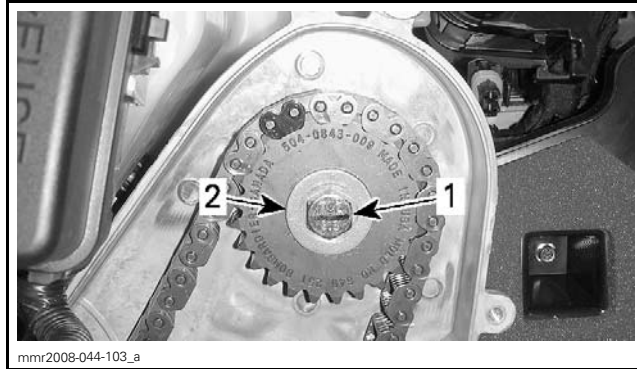

mmr2008-044-103_a

TYPICAL
1. Upper socket
2. Conical spring washer


2. Remove the lower sprocket circlip.

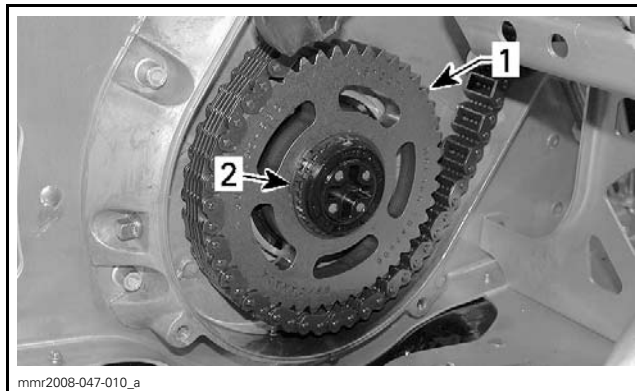

mmr2008-047-010_a

TYPICAL
1. Lower sprocket
2. Circlip


3. Remove the upper sprocket, lower sprocket and drive chain simultaneously.

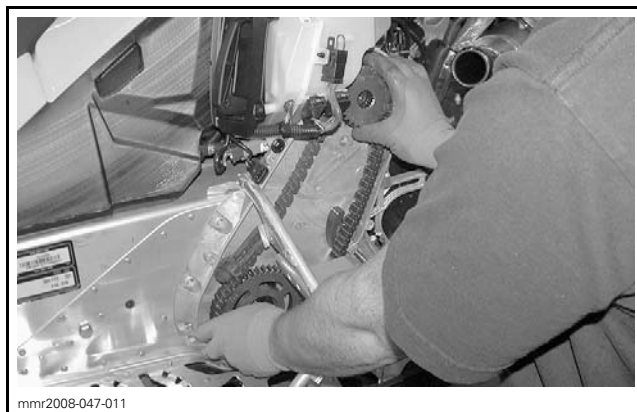

mmr2008-047-011

TYPICAL

4. Remove the countershaft spacer.

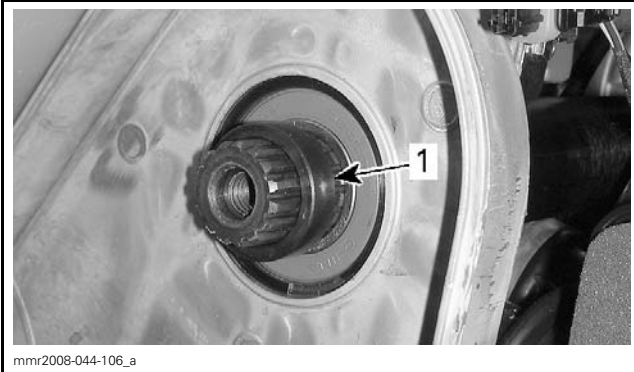


mnr2008-044-106_a

1. Countershaft spacer

Chaincase Bearing Removal

1. Remove countershaft or drive axle, depending which bearing is replaced. Refer to the appropriate subsection, *DRIVEN PULLEY AND COUNTERSHAFT* or *DRIVE AXLE*.
2. Remove snap ring securing bearing into chaincase.

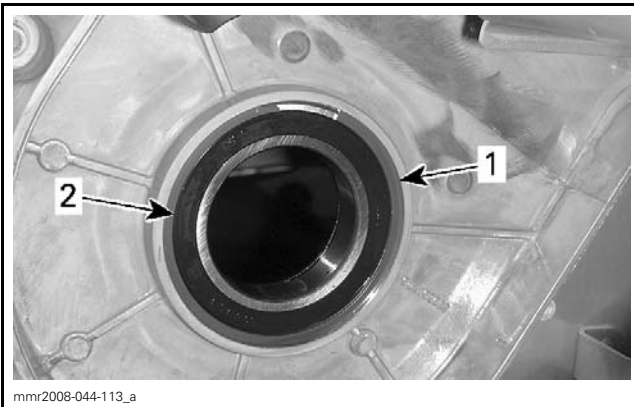


mnr2008-044-113_a

DRIVE AXLE BEARING SHOWN

1. Snap ring
2. Bearing


3. Install the appropriate bearing extractor:

BEARING	TOOL
Countershaft	BEARING PULLER/PUSHER (P/N 529 036 111)
Drive axle	BEARING PULLER/PUSHER (P/N 529 036 112)

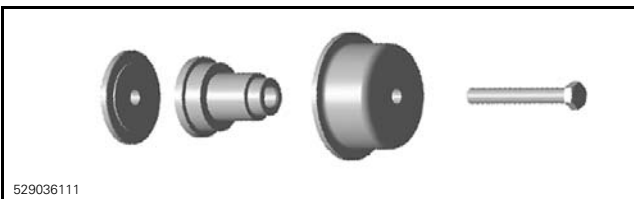

529036111


COUNTERSHAFT

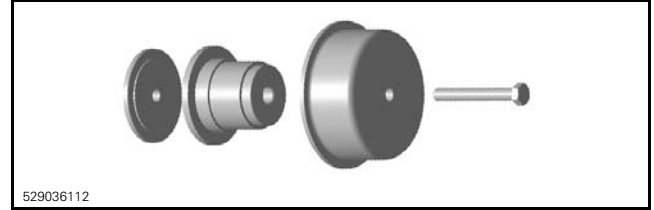

529036112

DRIVE AXLE


4. Install the extractor/installer tool behind the bearing.

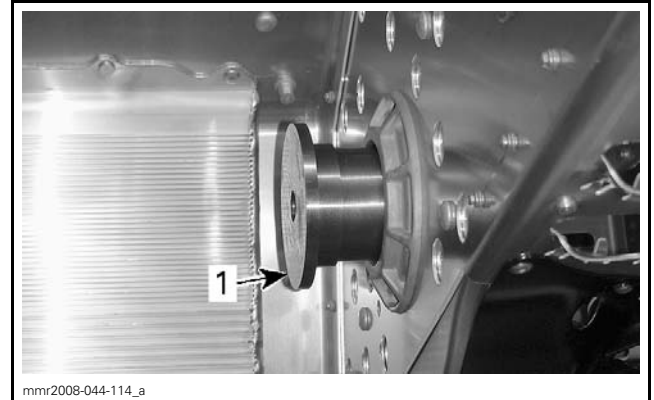

mnr2008-044-114_a

1. Extractor/installer tool

5. Install the extractor cup over bearing.
6. Tighten the extractor/installer tool screw to remove the bearing.

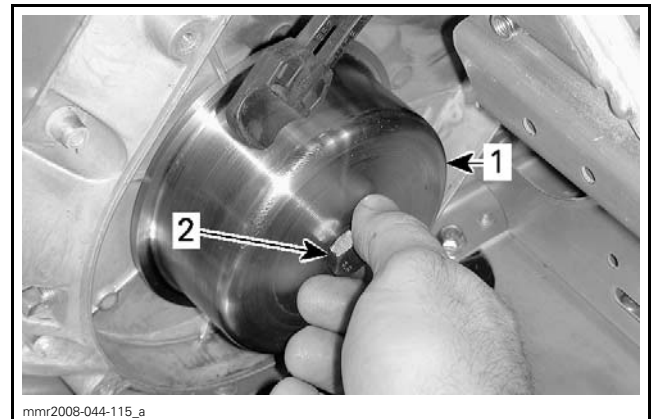


mnr2008-044-115_a

1. Extractor cup
2. Tighten to remove bearing


7. Using a seal puller such as the SNAP-ON SEAL PULLER (P/N YA105), remove and discard the oil seal.

Subsection XX (CHAINCASE)

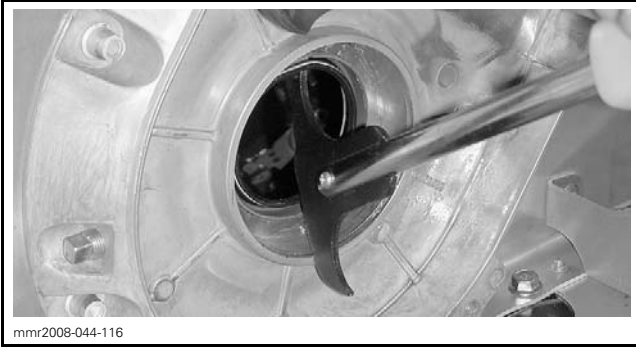


Chaincase Housing Removal

1. Proceed with *DRIVE AXLE REMOVAL*. Refer to *DRIVE AXLE* subsection.
2. Proceed with *COUNTERSHAFT REMOVAL*. Refer to *DRIVEN PULLEY AND COUNTERSHAFT* subsection.
3. Remove bolts securing the injection oil reservoir.

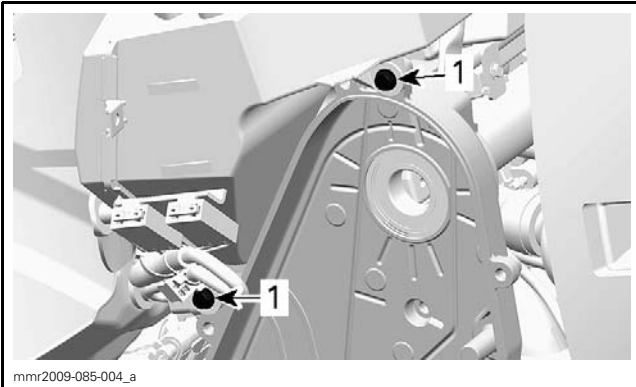


1. Reservoir retaining bolts

4. Remove the following Huck rivets. Refer to *FRAME* subsection for proper removal procedure.

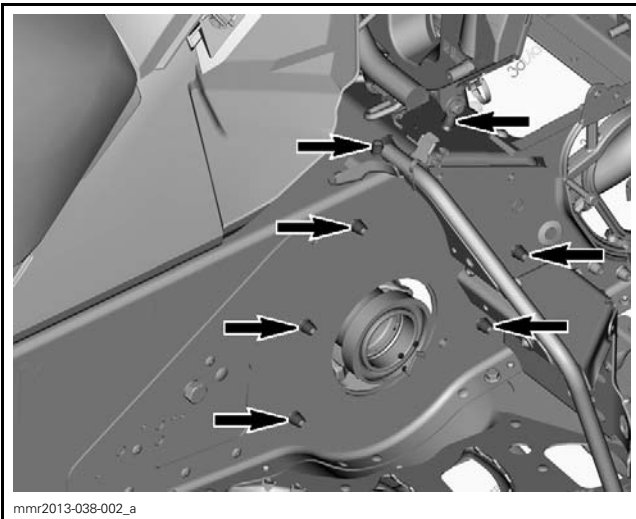

5. Unscrew bolt behind the top of chaincase.

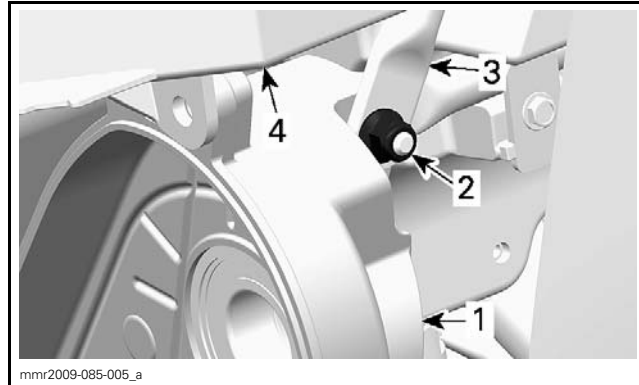

1. Chaincase
2. Retaining bolt
3. RH side frame member
4. Injection oil reservoir

6. Using 2 large pry bars inserted between chaincase and frame, pry chaincase out of vehicle.

Chaincase Inspection

Chaincase Cover Inspection

Check the cover for cracks or other damages. Replace it if necessary.

Check if O-ring inside cover is brittle, hard or damaged. Replace it if necessary.

Chain Tensioner Inspection

Check chain tensioner slider for wear or other damages. Replace if necessary.

Check threads of tensioner adjustment screw for damages or wear.

Replace screw if necessary and check chaincase for damages.

Check rubber washer condition, replace as required.

Drive Chain and Sprockets Inspection

Visually inspect the drive chain and sprockets for:

- Wear
- Cracks
- Damages teeth
- Missing links.

If a problem is detected, replace drive chain and sprockets as an assembly.

Check the drive chain deflection.

If the deflection is greater than 38 mm (1-1/2 in) without the chain tensioner, replace the drive chain.

Chaincase Bearing Inspection

Check for worn or defective bearings.

Chaincase Assembly


Chaincase Housing Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

Have the following parts in hands:

PARTS TO INSTALL CHAINCASE		
QTY	FASTENERS	PART NUMBER
1	Mounting plate	(P/N 518 325 816)
2	M6 x 20 hexagonal flanged bolt	(P/N 207 662 034)
8	M6 elastic flanged nut	(P/N 233 261 434)

Install the mounting plate on frame.

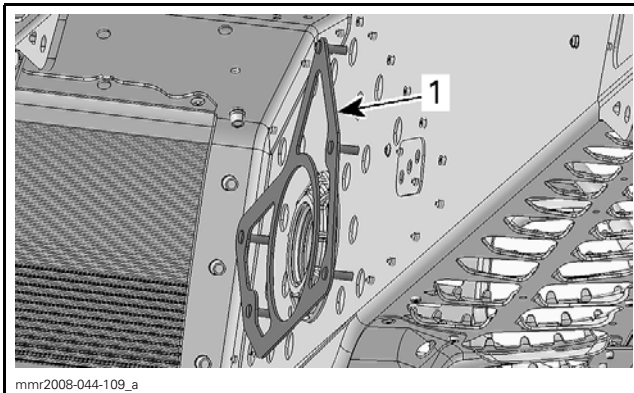


TYPICAL - UNDERNEATH FRAME
1. Mounting plate

Install 5 elastic flanged nuts to secure chaincase on mounting plate.

Bolts and nuts holding the chaincase must be installed loosely FIRST.


Install 2 flanged bolts and 2 elastic flanged nuts to secure chaincase on frame.

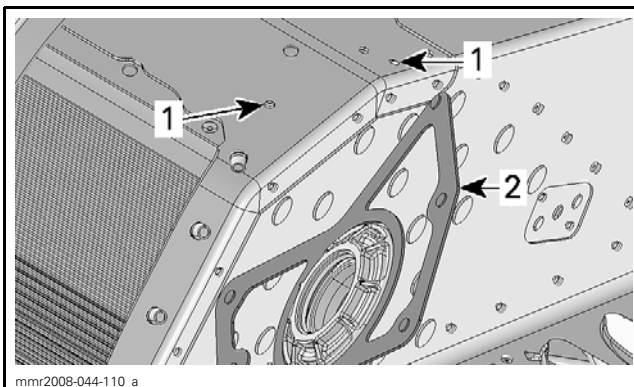


TYPICAL
1. Install bolt here (2x)
2. Mounting plate

Install bolt behind the top of chaincase.


Using the following sequence, tighten all nuts to 10 N•m (89 lbf•in).

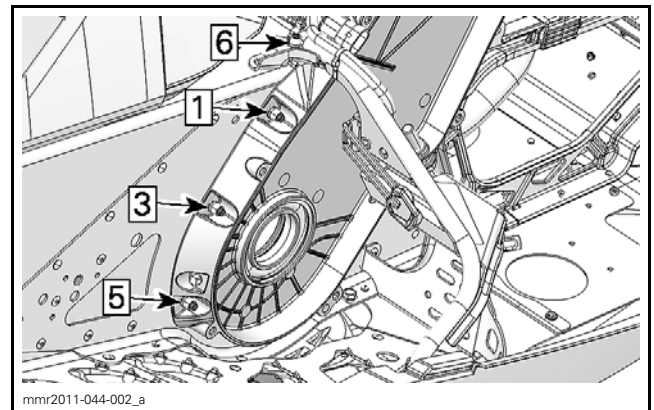

TYPICAL

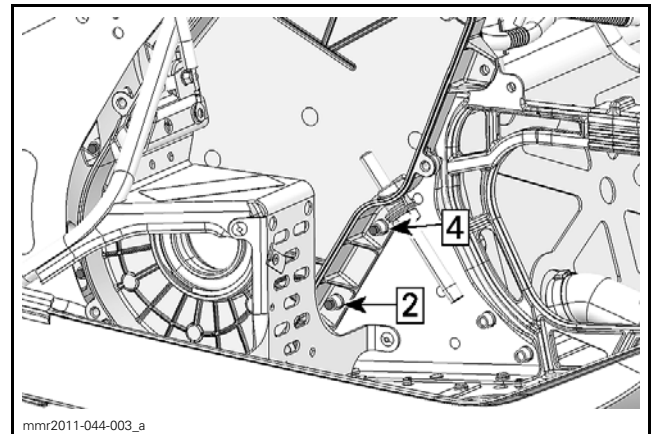

TYPICAL

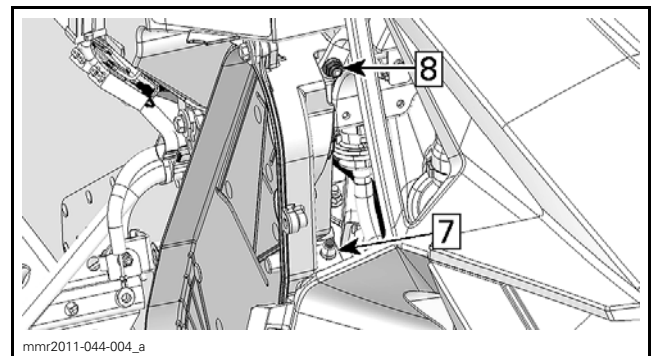

TYPICAL

Install all removed parts.


Proceed with *DRIVE CHAIN ADJUSTMENT*, refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

Refill chaincase with recommended oil, refer to *CHAINCASE OIL REPLACEMENT* in *PERIODIC MAINTENANCE PROCEDURES* subsection.

Subsection XX (CHAINCASE)


Chaincase Bearing Installation

The installation is the reverse of the removal procedure. However, pay attention to the following. Install the **NEW** oil seal on the extractor/installer tool. Position the lips toward bearing.

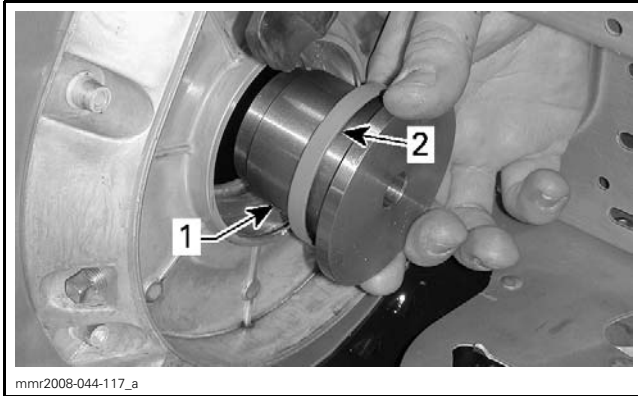

1. Extractor/installer tool
2. Oil seal lips on this side


Install the extractor cup inside frame.

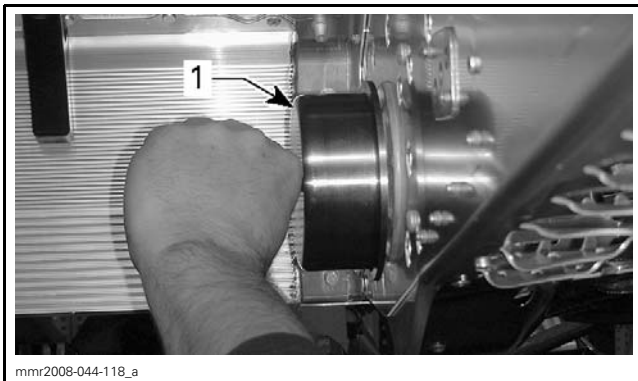

1. Extractor cup


Tighten the extractor/installer tool screw to install the oil seal.

Install the large washer and the extractor/installer tool screw inside frame.

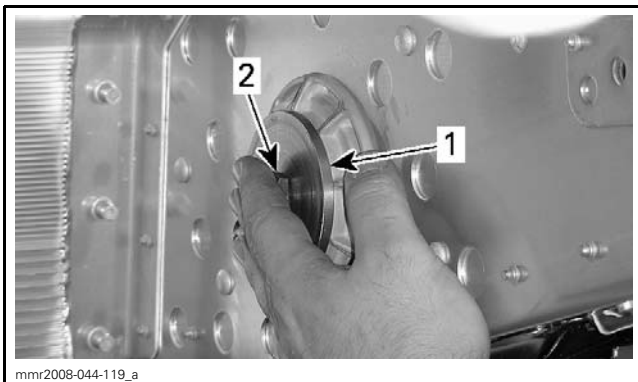

1. Large washer
2. Extractor/installer tool screw

In chaincase, install **NEW** bearing and the extractor/installer tool.

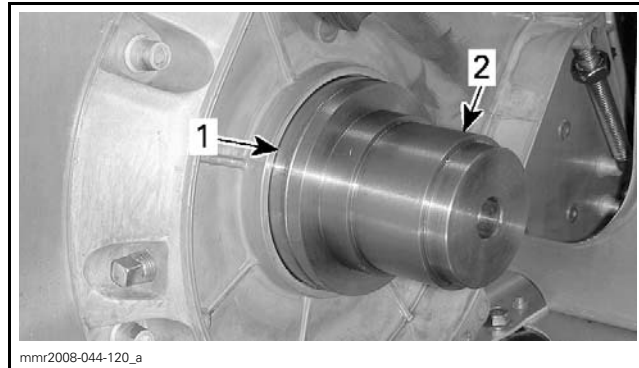

1. Bearing
2. Extractor/installer tool

Tighten the extractor/installer tool screw to install the bearing.

Drive Chain and Sprocket Installation

The installation is the reverse of the removal procedure. However, pay attention to the following. Make sure to install sprockets with their inscriptions outward.

Install the conical spring washer on the upper socket with its concave side toward sprocket.

Torque upper sprocket screw to 48 N•m (35 lbf•ft).

Chain Tensioner Installation


The installation is the reverse of the removal procedure. However, pay attention to the following. If the tensioner has been disassembled, make sure circlip turns freely and slider moves easily.

Proceed with *DRIVE CHAIN ADJUSTMENT*, see procedure in *PERIODIC MAINTENANCE PROCEDURES* subsection.

Chaincase Cover Installation

The installation is the reverse of the removal procedure. However, pay attention to the following. Ensure cover O-ring is positioned correctly in its groove.

Tighten chaincase cover screws in accordance with the following sequence.

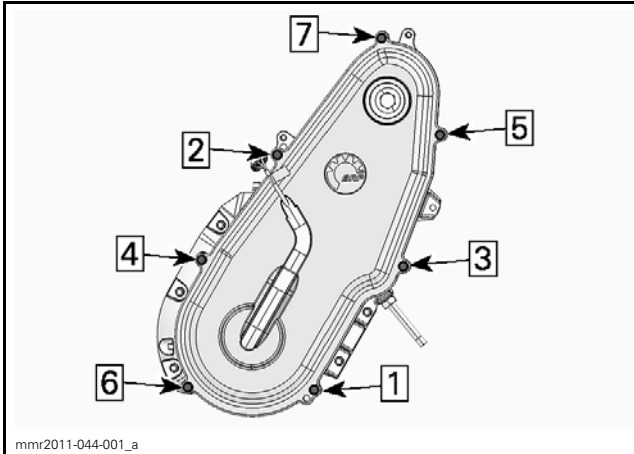

CHAINCASE COVER SCREWS TORQUE	
SAME CHAINCASE	10 N•m (89 lbf•in)
NEW CHAINCASE	15 N•m (133 lbf•in)

Refill chaincase with recommended oil, refer to *CHAINCASE OIL REPLACEMENT* in *PERIODIC MAINTENANCE PROCEDURES* subsection.

Reinstall all other removed parts.


DRIVE AXLE

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
SNAP-ON 3-JAW PULLER	CG273	3

SERVICE PRODUCTS

Description	Part Number	Page
SUSPENSION GREASE	293 550 033	4

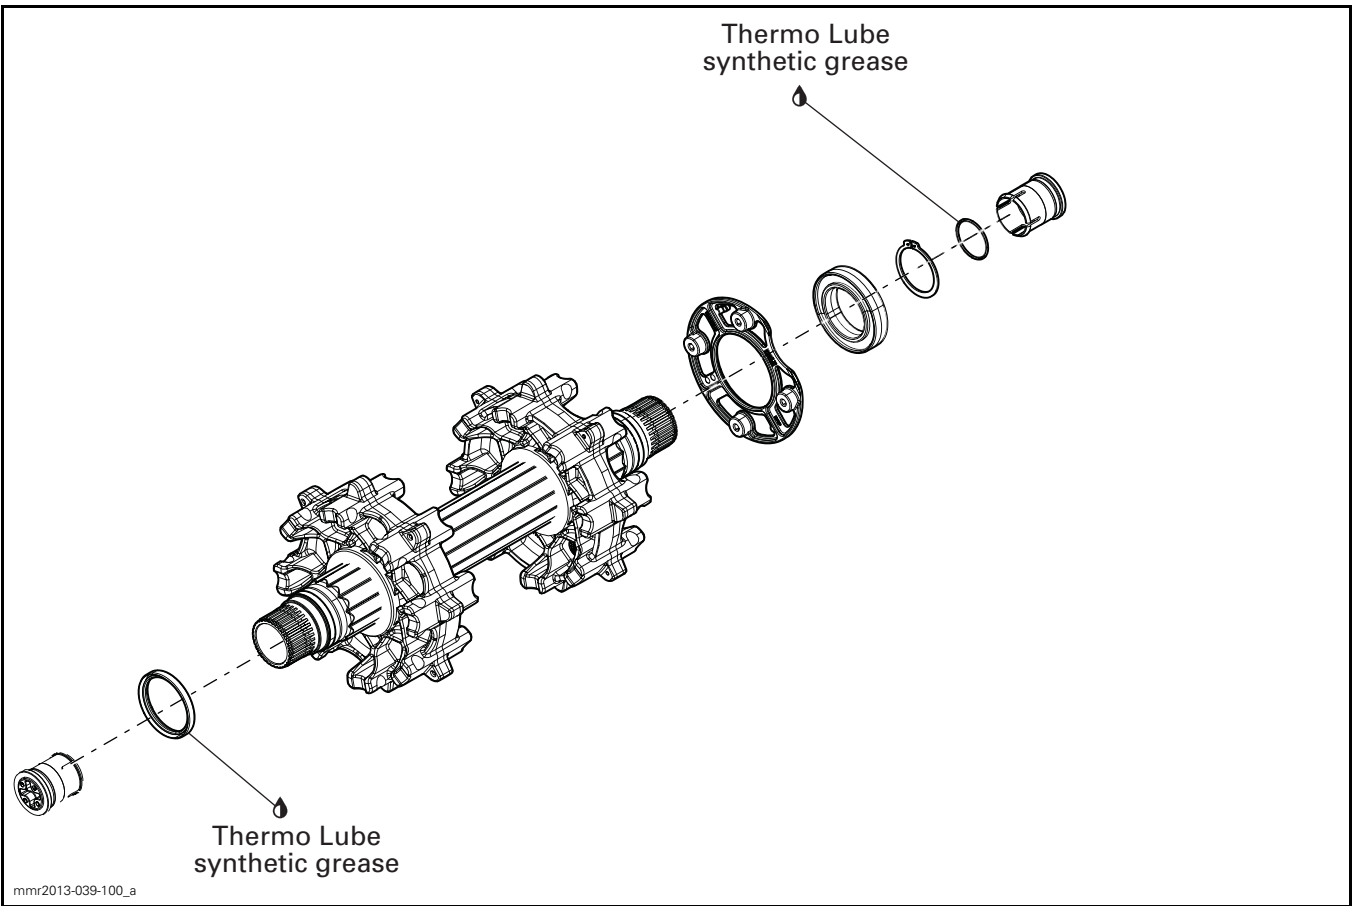

GENERAL

During assembly/installation, use torque values and service products as in the exploded view.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING


Torque wrench tightening specifications must be strictly adhered to. Locking devices must be replaced with new ones when removed (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.).

PROCEDURES

DRIVE AXLE


Drive Axle Removal

1. Remove the rear suspension. Refer to *REAR SUSPENSION* subsection.
2. Remove the chaincase cover. Refer to *CHAINCASE* subsection.
3. Release tension from drive chain by unscrewing the tensioner adjustment screw.

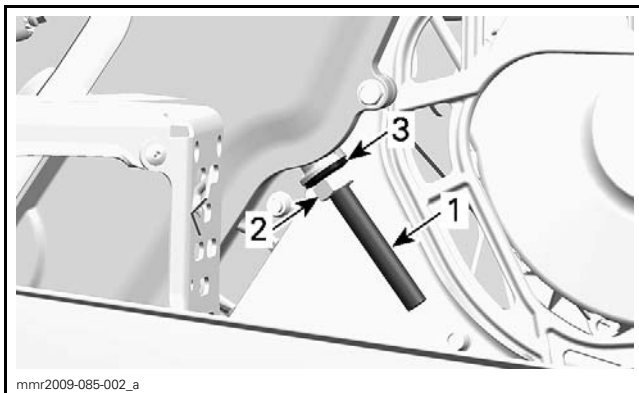


1. Tensioner adjustment screw
2. Lock nut
3. Washer with rubber surface

4. Remove the lower sprocket circlip.

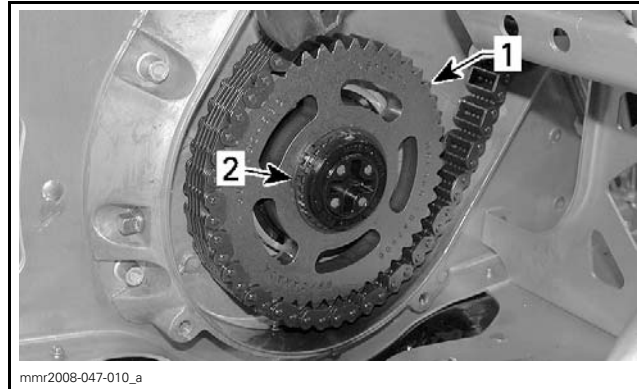

1. Lower sprocket
2. Circlip

5. Remove lower gear and drive chain.
6. Remove the caliper. Refer to *BRAKE* subsection.
7. From underneath of vehicle, turn the LH bearing flange counterclockwise to unlock it from frame.

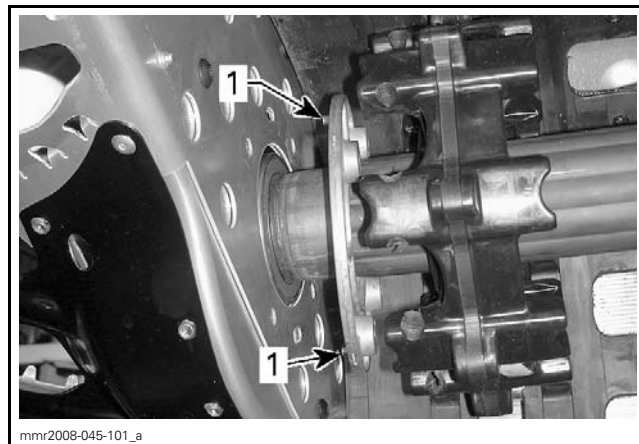

TYPICAL

1. Bearing flange locking tabs

8. Release drive axle sprockets from track and at the same time, push the drive axle toward the LEFT side.
9. Move the drive axle towards the right side to remove it from vehicle.

Drive Axle Inspection

Check if bearing turns smoothly and freely. Replace bearing if necessary.

Check if bearing seals are damaged. Replace bearing seals if necessary.

Check if the bearing flange is cracked, bent or otherwise damaged. Replace if required.


Replace drive axle if one of the following situations is detected:

- Cracked, worn or damaged drive axle
- Worn or damaged drive axle splines

- Worn or damaged sprockets
- Worn bearing journal.


Drive Axle Bearing Removal

1. Remove O-ring.

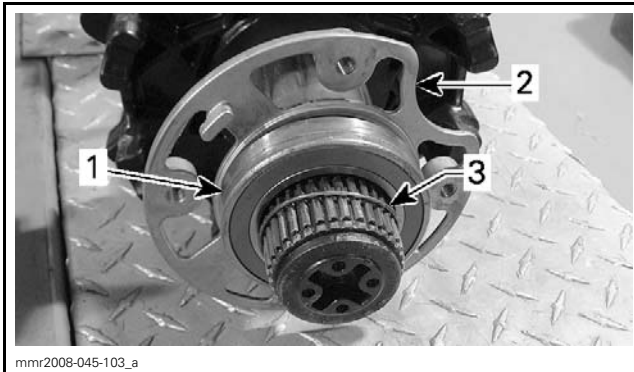

1. Drive axle bearing
2. Bearing flange
3. O-ring


2. Using a 3-jaw puller such as the SNAP-ON 3-JAW PULLER (P/N CG273), remove the drive axle bearing.

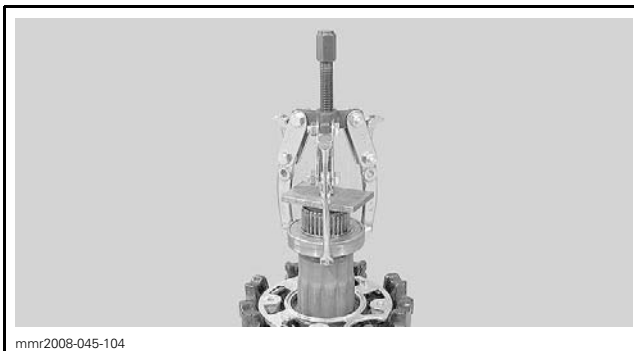

3. Remove the bearing flange.

Drive Axle Bearing Installation


1. Install bearing flange on drive axle.

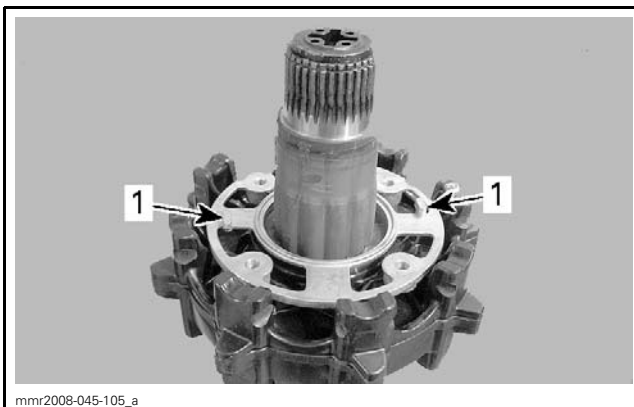

1. Locking tabs outwards

2. Using a press and a suitable pipe, push the bearing onto drive axel.

NOTICE Always push the bearing by inner race.

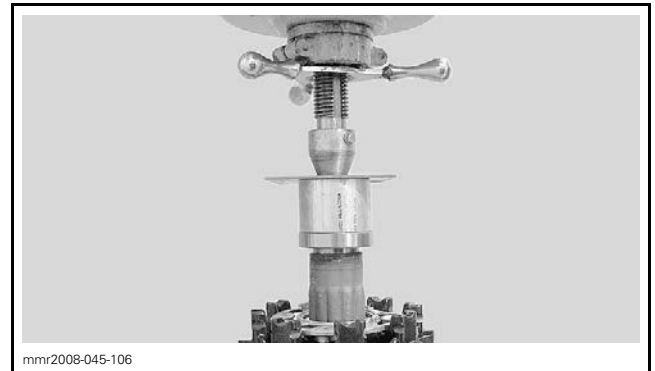


Drive Axle Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

1. Insert drive axle and lock the bearing flange on frame.

NOTE: Ensure bearing flange is properly locked. Tabs must be properly inserted in frame slots.

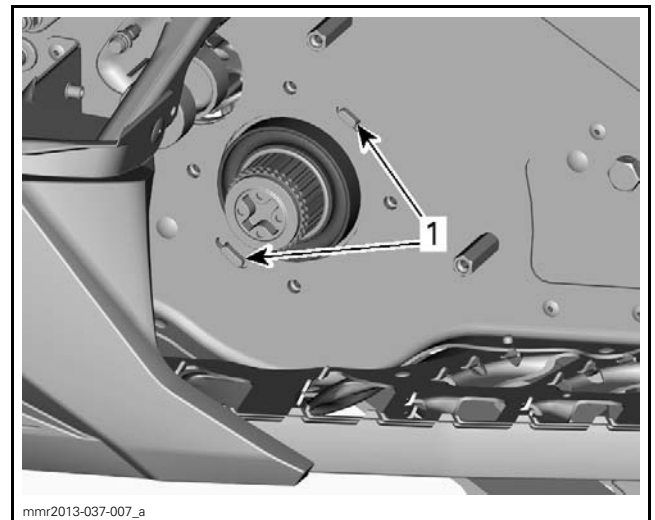

VIEW FROM OUTSIDE FRAME

1. Bearing flange locking tabs

2. Install the caliper and the disc brake. Refer to *BRAKE* subsection for the specific procedure.

3. Install all other removed parts. Refer to appropriate subsections.

MAGNETIC CAPS

Magnetic Cap Removal

1. For the LH cap, remove brake disc protective cover. Refer to *BRAKE* subsection.

Subsection XX (DRIVE AXLE)

2. For the RH cap, remove the chaincase cover.
Refer to *CHAINCASE* subsection.
3. Using two screwdrivers or pliers, pry or pull the magnetic cap out of drive axle end.
4. Discard the magnetic cap.

Magnetic Cap Installation

1. Apply SUSPENSION GREASE (P/N 293 550 033) on O-ring.
2. Insert **NEW** magnetic cap in drive axle.
3. Install all other removed parts.

TRACK

SERVICE TOOLS

Description	Part Number	Page
TRACK CLEAT INSTALLER.....	529 036 044	1

PROCEDURES

TRACK

Track Inspection

Visually inspect track for:

- Cuts and abnormal wear
- Broken rods
- Broken or missing track cleats
- Perforations in the track
- Tears in the track (particularly around traction product holes)
- Lugs that are broken or torn off, exposing portion of rods
- Delamination of the rubber
- Broken studs
- Bent studs
- Studs that are torn off the track
- Missing track guide(s).


If track is damaged or rods are broken, replace track. For damaged or missing cleats, replace by new ones.

⚠ WARNING

Do not operate a snowmobile with a cut, torn or damaged track.

Track Cleat Replacement

- Raise rear of vehicle off the ground.
- Lift snow guard.
- Rotate track to expose a cleat to be replaced.
- Remove cleat from track using plastic hammer and a big screwdriver.

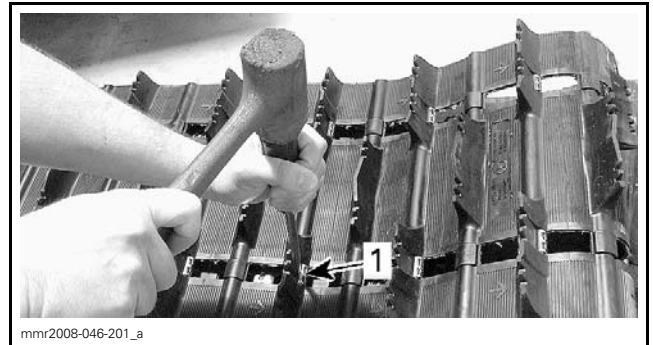


TYPICAL
1. Cleat

Place new cleat in position on the track.
Secure cleat using the TRACK CLEAT INSTALLER (P/N 529 036 044).



Bend cleat and push tabs into rubber.

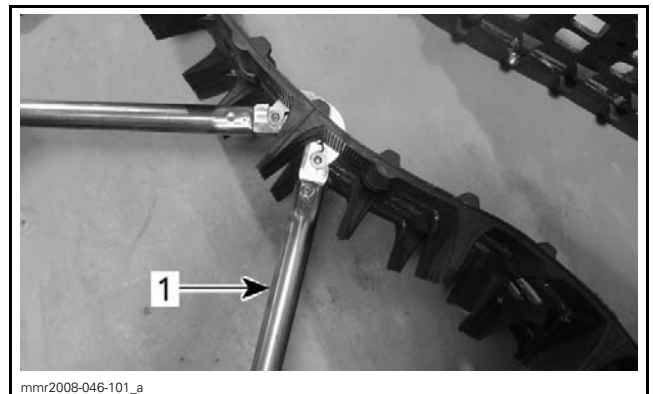

TYPICAL
1. Narrow-creat installer

Reopen narrow-creat installer.
Position cleat tabs on open end of tool.
Squeeze tabs until they are indented in rubber.

Subsection XX (TRACK)

Track Removal

Remove rear suspension from vehicle. Refer to *REAR SUSPENSION*.


Remove drive axle, refer to *DRIVE AXLE* subsection.

Remove track.

Track Installation

Reverse the removal procedure.

NOTE: When installing the track, respect rotation direction indicated by an arrow on track thread.

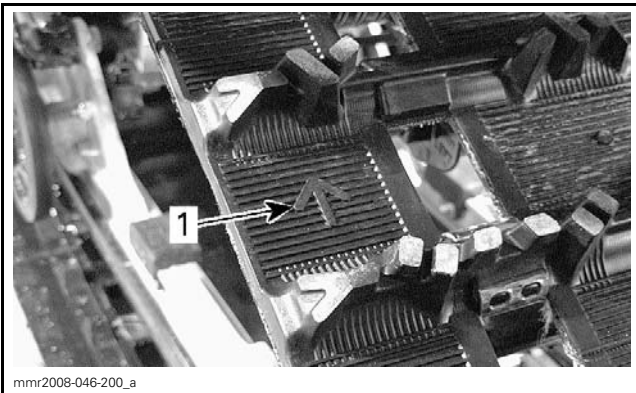

1. Arrow pointing forwards

Track Adjustment and Alignment

Refer to *PERIODIC MAINTENANCE PROCEDURE* subsection to adjust and align the track.

TRACTION ENHANCING PRODUCTS (STUDS)

Important Safety Rules

All REV-XS tracks use special single ply of fabric track to reduce weight and rolling resistance. The conventional track design is a 2 layers of fabric and one layer of high strength tensile cord. These new tracks design is a single layer of fabric and one layer of tensile cord. This results in a thinner track and if studded, absolutely requires the use of the 286 Phantom series designed studs.

⚠ WARNING

REV-XS require special studs. Use only the 286 Phantom series studs and support plates on these tracks. The use of other kinds of studs on these tracks may cause risks of injuries.

⚠ WARNING

Installing an incorrect number of studs or an improper installation could reduce the track life and possibly resulting in serious injury or death.

⚠ WARNING

- Never stud a track that has not been approved for studs. Installing studs on an unapproved track could increase the risk of the track tearing or severing, possibly resulting in serious injury or death. Approved tracks can be identified by a stud symbol molded into the track surface.
- Studs should only be installed in the locations indicated by molded bulges in the track surface.
- Never stud a track with a profile of 35 mm (1.378 in) or more.
- The maximum allowable stud penetration range is 6.4 mm to 9.5 mm (1/4 in to 3/8 in).
- The number of studs installed must match the number of molded bulges in the track.
- Strictly adhere to the specified tightening torque.

⚠ WARNING

To prevent serious injury to individuals near the snowmobile:

- NEVER stand behind or near a moving track.
- ALWAYS use a wide-base snowmobile stand with a rear deflector panel.
- When the track is raised off the ground, only run it at lowest possible speed. Centrifugal force could cause debris, damaged or loose studs, pieces of torn track, or an entire severed track to be violently thrown backwards out of the tunnel with tremendous force, possibly resulting in the loss of a leg or other serious injury.

Effects of Having a Studded track on the Life of the Snowmobile

The use of traction enhancing products can increase the load and the stress on certain snowmobile components, as well as the vibration level. This can cause premature wear on parts such as belts, brake lining, bearings, chain, and chain-case sprockets, and on approved studded tracks, shorten track life. For this reason, it is even more

important to follow the detailed maintenance program given in the *PERIODIC MAINTENANCE SCHEDULE*.

Studs on the track can also cause serious damage to the snowmobile if it is **not equipped** with the tunnel protectors designed for the particular model. Damage to the electrical wiring or perforation of the heat exchangers are potential hazards, that could cause the engine to overheat and be severely damaged.

⚠ WARNING
If tunnel protectors are excessively worn or not installed, the gas tank could be punctured, causing a fire.

Studs and Track Inspection

A visual inspection of the track should be performed before each use. Refer to *TRACK INSPECTION*.

Replace broken or damaged studs immediately. If the track shows signs of deterioration, it must be replaced immediately. In doubt, replace the track.

⚠ WARNING
Riding with a damaged track or studs could lead to loss of control, resulting in a risk of serious injury or death.

Stud Installation Tables

Use the following table for appropriate size and quantity of studs.

APPROVED STUDS ACCORDING TO TRACK LUG HEIGHT			
LUG HEIGHT	STUD SIZE	QTY OF STUDS FOR A 120" TRACK	QTY OF STUDS FOR A 137" TRACK
25.4 mm (1 in)	1.075 in	84	96
31.75 mm (1-1/4 in)	1.325 in	84	96

Ensure installed track is compatible with stud kit. Refer to proper studs application publication on *BOSSWEB*.

FRONT SUSPENSION

SERVICE TOOLS

Description	Part Number	Page
BALL JOINT EXTRACTOR.....	529 035 827	430
BALL JOINT INSTALLER.....	529 035 975	433
BALL JOINT REMOVER SUPPORT	529 036 121	433
SPRING COMPRESSOR	529 036 184	429
SUSPENSION ARM SUPPORT	529 035 637	431




Section 07 CHASSIS

Subsection 01 (FRONT SUSPENSION)



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

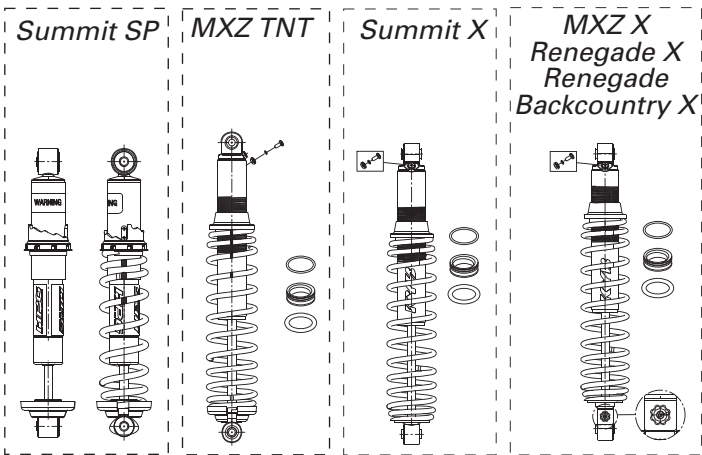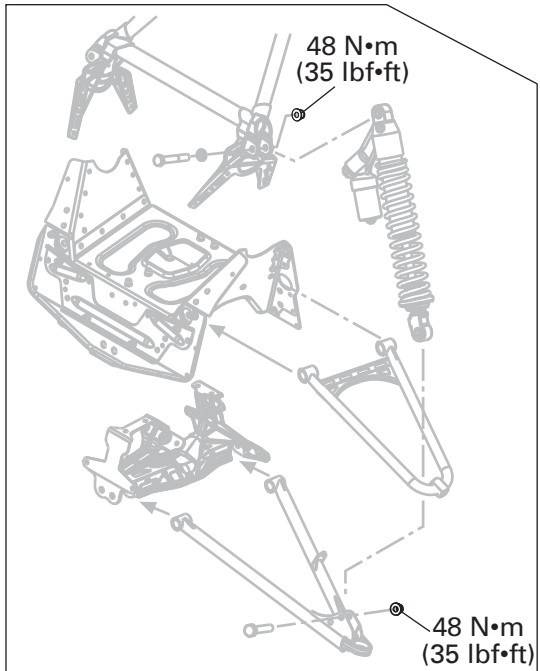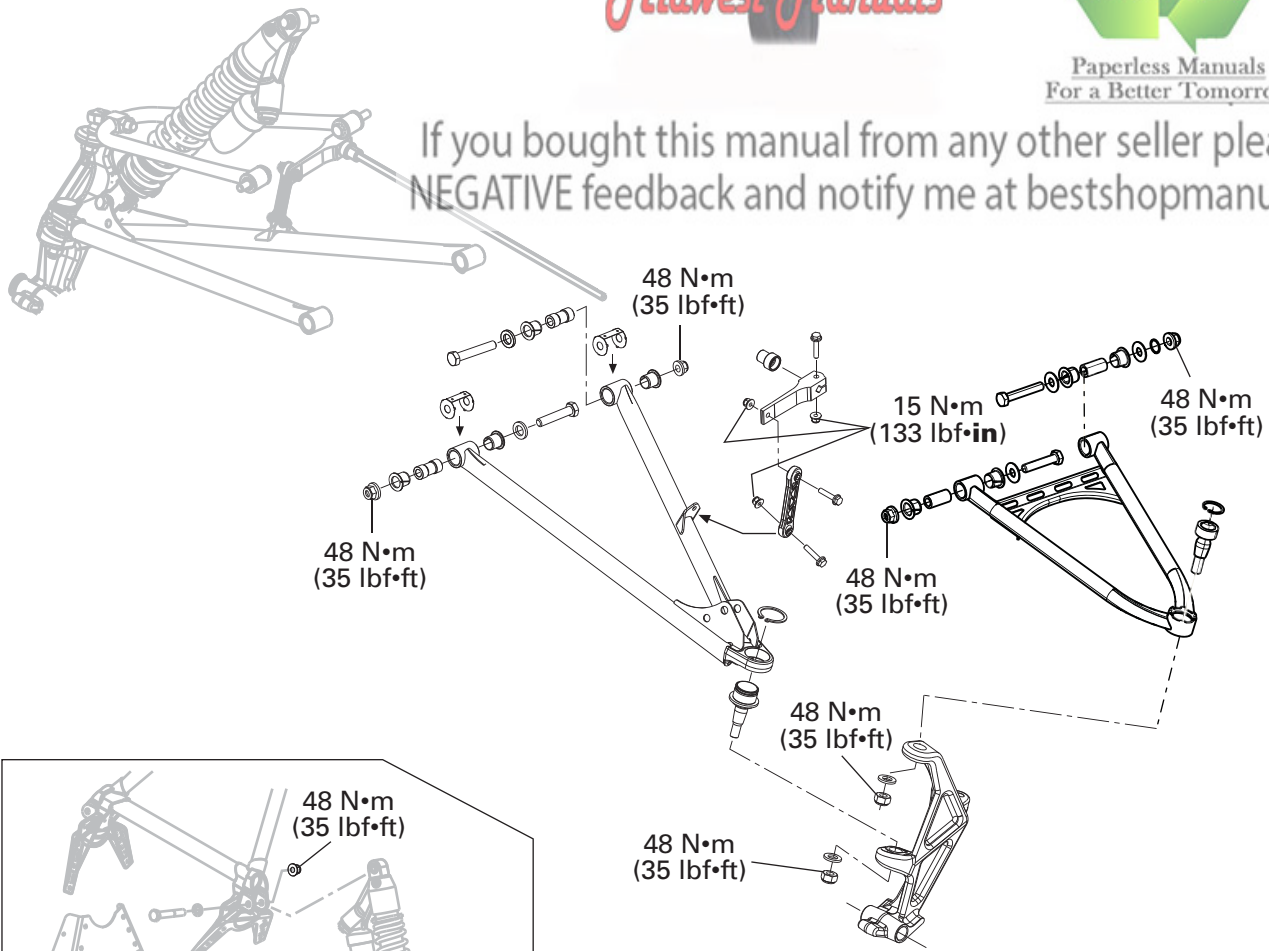

mnr2013-041-100_a

GENERAL

The procedure explained below is the same for the RH and LH sides unless otherwise noted.

During assembly/installation, use torque values and service products as in the exploded view.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.) must be replaced with new ones.

Check for loose, bent, worn out, rusted or otherwise damaged components. Replace the faulty components.

ADJUSTMENT

SPRINGS

Front spring preload has an effect on front suspension firmness.

Front spring preload also has an effect on the steering behavior.

ACTION	RESULT
Increasing preload	Firmer front suspension
	Higher front end
	More precise steering
	More bump absorption capability
Decreasing preload	Softer front suspension
	Lower front end
	Lighter steering
	Less bump absorption capability


⚠ WARNING

Adjust both springs to the same preload. Uneven adjustment can cause poor handling and loss of stability, and/or control, and increase the risk of an accident.

Spring Preload Adjustment

Ring Type Adjustment

Grab and turn the spring to increase or decrease spring preload.

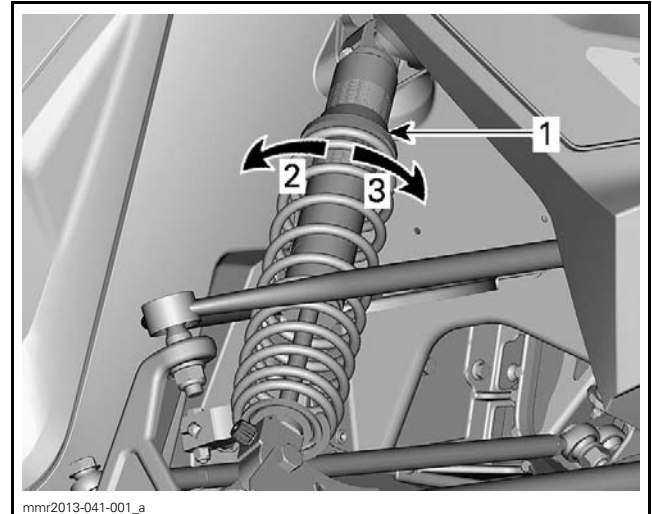


TYPICAL - RING TYPE

1. Spring preload adjustment ring
2. Increase preload
3. Decrease preload

Cam Type Adjustment

Using the suspension adjustment tool (included in the vehicle tool kit), turn the cam to increase or decrease spring preload.

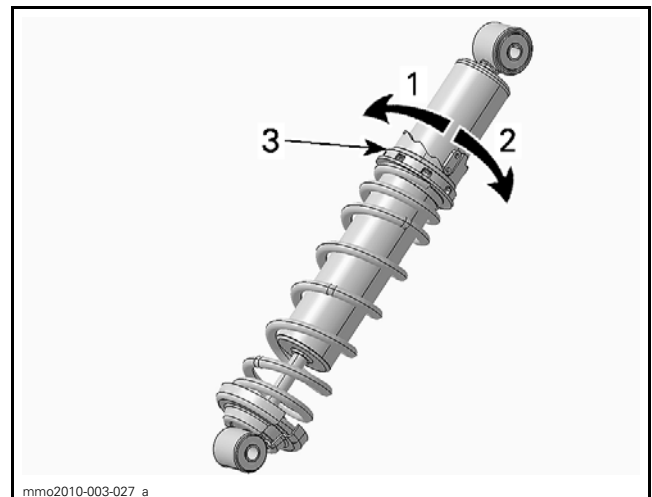

HPG SHOCK ABSORBER

1. Decrease preload
2. Increase preload
3. Spring preload adjustment cam

Section 07 CHASSIS

Subsection 01 (FRONT SUSPENSION)

SHOCK ABSORBER


Shock Absorber Rebound Damping

HPG Plus R only

Rebound damping controls how the shock absorber restrains the extension stroke.

ACTION	RESULT
Increasing rebound damping force	Firmer rebound damping (slower extension) More efficient on large bumps
Decreasing rebound damping force	Softer rebound damping (faster extension) More efficient on small repetitive bumps

NOTE: In repetitive short small bumps (ripple), it is recommended to use a lower rebound damping setting.

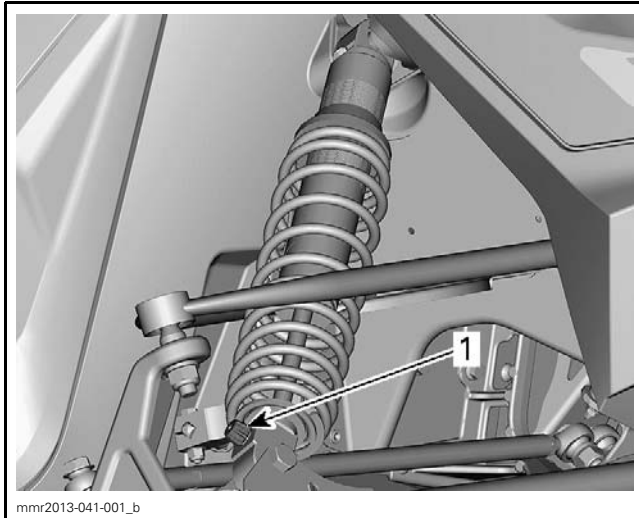

1. Rebound adjuster knob

PROCEDURES

SHOCK ABSORBER

Shock Absorber Removal


Refer to *BODY* section to remove the following:

- Upper body module
- Side panel(s)
- Bottom pan cover.

To remove the RH shock absorber, remove the muffler. Refer to *EXHAUST SYSTEM* section.


Lift the front of vehicle until skis are off the ground.

Remove the shock absorber upper bolt.

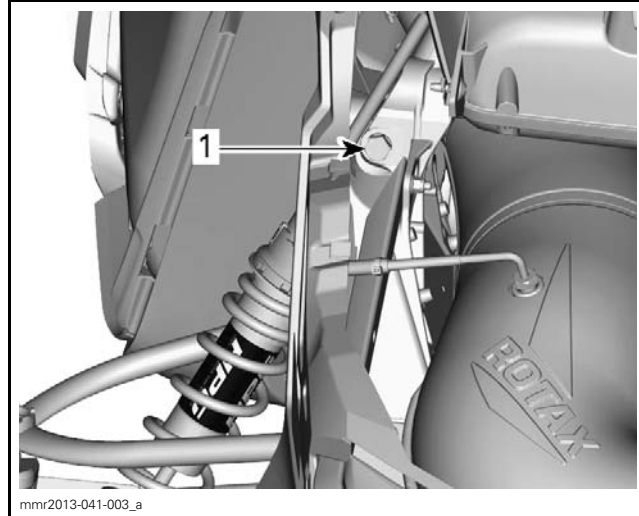

1. LH shock absorber upper bolt

Remove the shock absorber lower bolt.

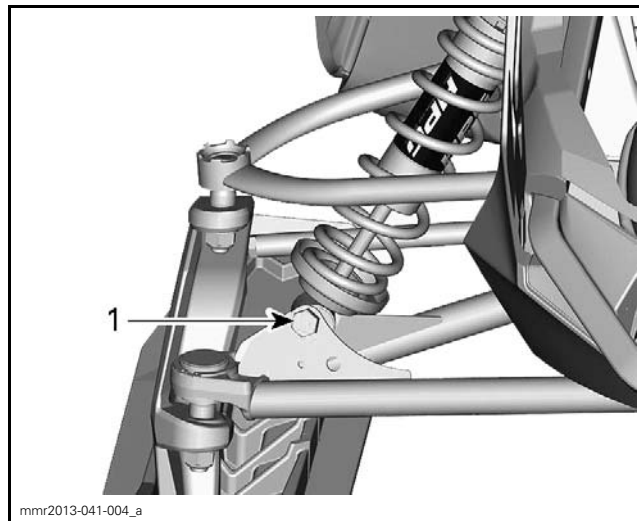

1. Lower bolt


Remove the shock absorber.

Shock Absorber Inspection

Refer to *REAR SUSPENSION (RMOTION)* subsection.


Shock Absorber Installation

For installation, reverse the removal procedure, however, pay attention to the layout.

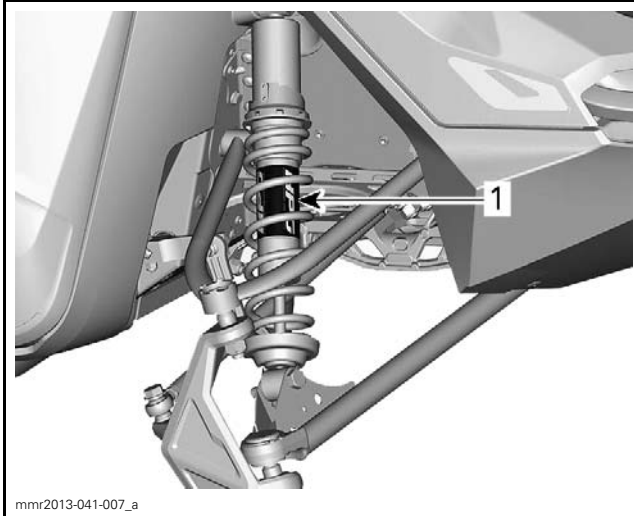


HPG

1. Body up, decal gap toward the inside

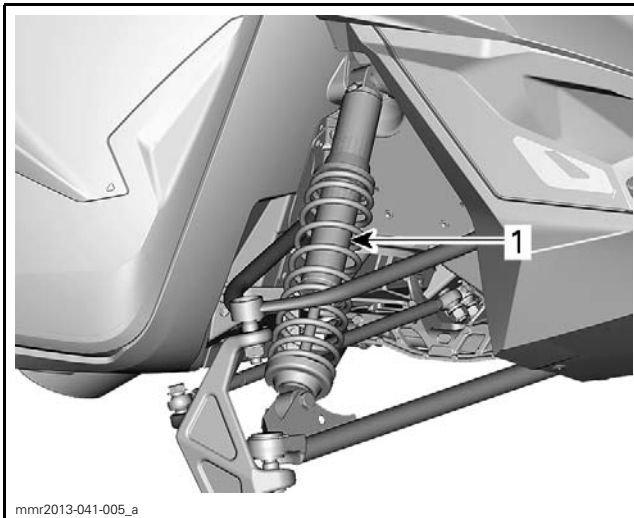

HPG PLUS

1. Body up

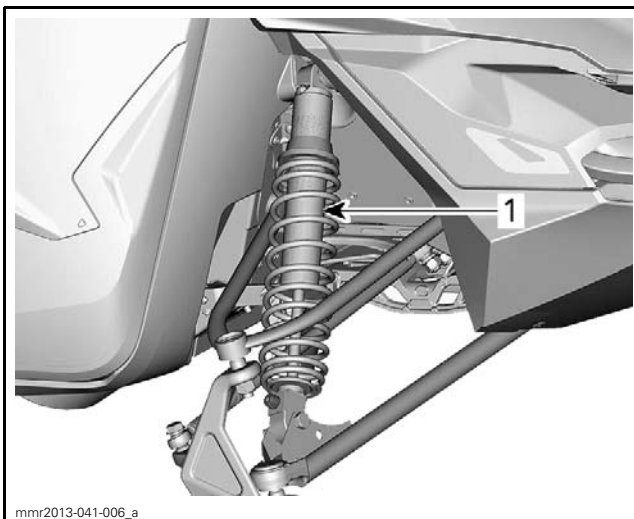


HPG PLUS R

1. Body up

SPRING


Spring Removal

1. Secure the SPRING COMPRESSOR (P/N 529 036 184) in a vise.

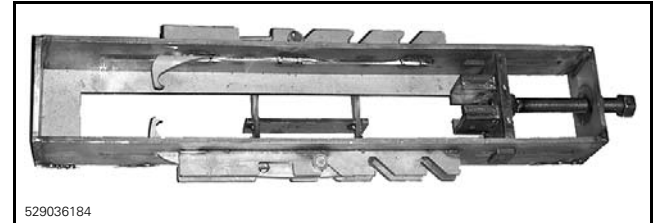

SPRING COMPRESSOR

2. Position the shock absorber in the tool and install the spring compressor hooks.

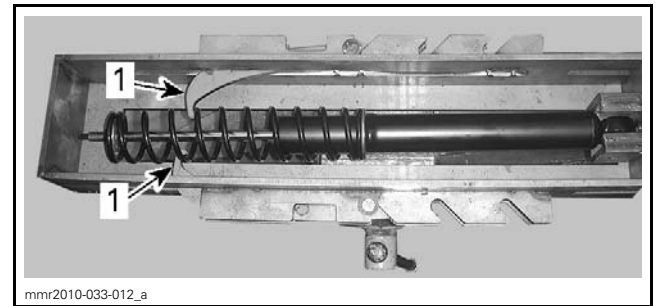

TYPICAL

1. Spring compressor hooks

3. Tighten the spring compressor tool screw until the spring is sufficiently compressed to remove spring stopper.
4. Release the spring compressor tool screw.
5. Remove spring from shock absorber.

Spring Inspection

Inspect spring for apparent damage.

When the adjustment is at the lowest preload, ensure that adjustment cam and spring stopper are not loose. They must be under spring pressure. Otherwise, the spring stopper might fall off.

Spring Installation

For installation, reverse the removal procedure.

UPPER SUSPENSION ARM

Upper Suspension Arm Inspection

1. Check suspension arm for distortion or damage. Replace if necessary.
2. Lift the front of vehicle until skis are off the ground.
3. Move suspension arm from side to side.

Section 07 CHASSIS

Subsection 01 (FRONT SUSPENSION)


4. Lower vehicle to the ground.
5. Move suspension up and down.
6. There should be no noticeable looseness. Replace bushings and/or sleeves if necessary.

NOTE: A play of 2 mm (.079 in) is acceptable when the suspension arm is moved forward and backward.

7. Check sleeves inside suspension arm attachments for wear or damage.


Upper Suspension Arm Removal

1. Lift the front of vehicle until skis are off the ground.
2. Remove muffler and tuned pipe. Refer to *EXHAUST SYSTEM* section.
3. Remove shock absorber upper bolt. See procedure in *SHOCK ABSORBER REMOVAL* in this section.
4. Remove the upper suspension arm bolts.

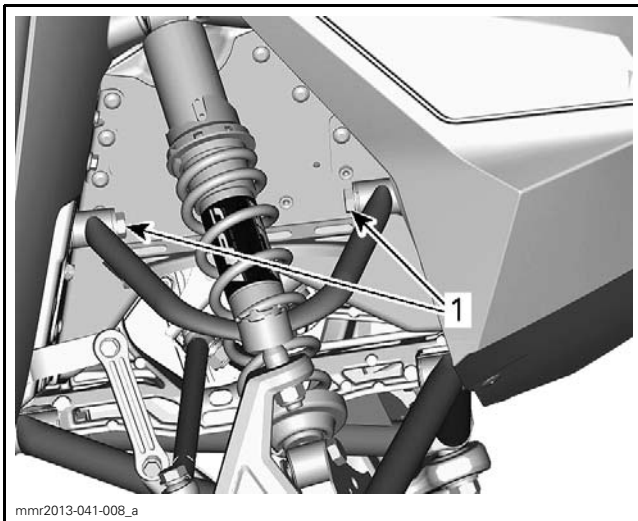

1. Upper suspension arm bolts

5. Detach ball joint from ski leg as follows.
 - 5.1 Remove nut securing ball joint to ski leg.

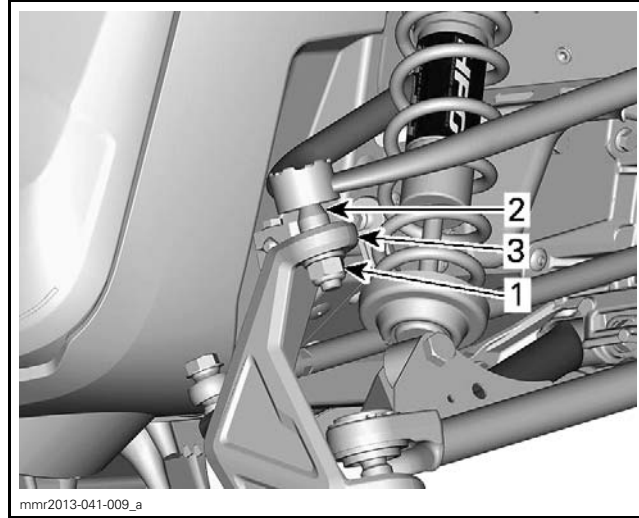

PRESS-FITTED BALL JOINT LAYOUT

1. Ball joint nut
2. Ball joint
3. Ski leg

- 5.2 Install the BALL JOINT EXTRACTOR (P/N 529 035 827) and detach ball joint from ski leg.



6. Remove upper suspension arm.

Upper Suspension Arm Installation

The installation is the reverse of the removal procedure. However, pay attention to the following. Ensure suspension arm ball joint socket is parallel to ski leg tab.

NOTE: Interchanging right and left ball joint sockets would result in them not being parallel.


UPPER BALL JOINT

Upper Ball Joint Inspection

Check both upper ball joints for damage, pitting, looseness and roughness. If so, replace with a new one.

Upper Ball Joint Removal


1. Remove the *UPPER SUSPENSION ARM*, see procedure in this subsection.
2. Remove circlip securing ball joint to suspension arm.

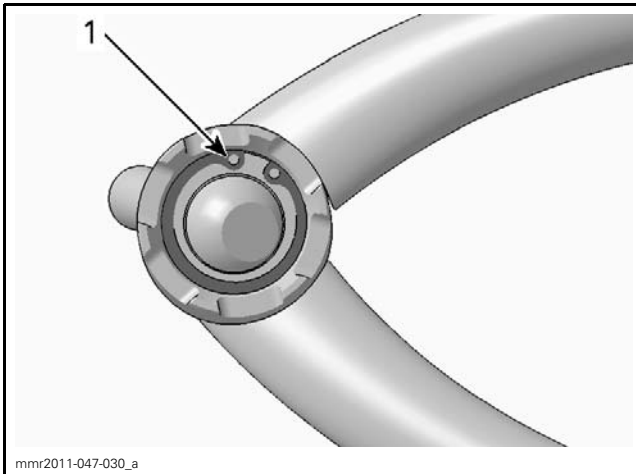


mnr2011-047-030_a

1. Circlip

3. Press ball joint out of the suspension arm.

REQUIRED TOOLS
Shop press
SUSPENSION ARM SUPPORT (P/N 529 035 637)

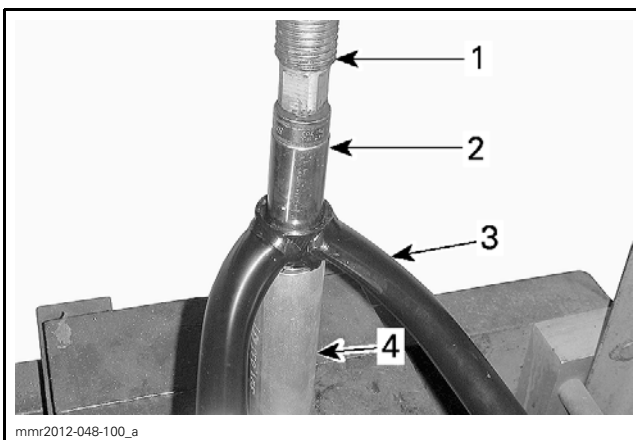Suitable socket




mnr2012-048-100_a


- TYPICAL**
1. Press rod
 2. Socket
 3. Suspension arm
 4. Suspension arm support (P/N 529 035 637)

Upper Ball Joint Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

1. Press ball joint into the suspension arm.


REQUIRED TOOLS
Shop press
SUSPENSION ARM SUPPORT (P/N 529 035 637)

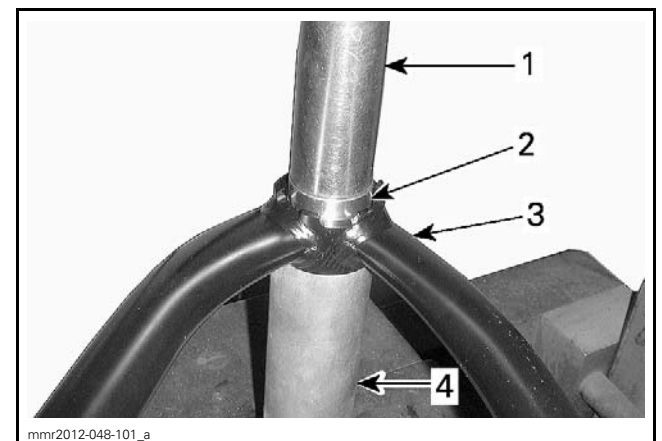Suitable socket



mnr2012-048-101_a

- TYPICAL**
1. Socket
 2. Ball joint
 3. Suspension arm
 4. Suspension arm support (P/N 529 035 637)

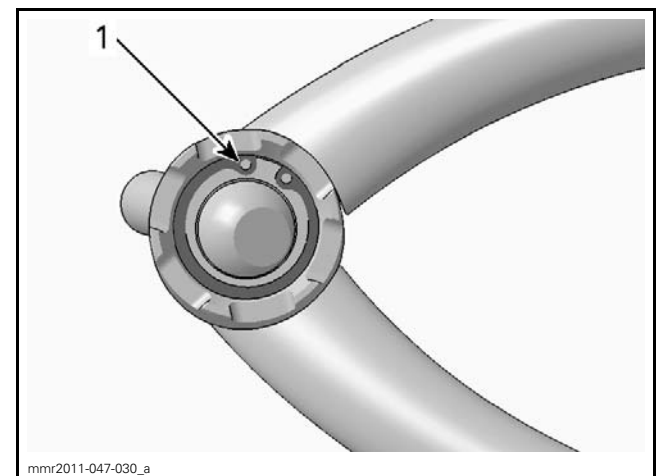2. Reinstall the circlip. If it seems loose, replace it with a new one.



mnr2011-047-030_a

1. Circlip

Section 07 CHASSIS

Subsection 01 (FRONT SUSPENSION)

LOWER SUSPENSION ARM

Lower Suspension Arm Inspection


1. Check suspension arm for distortion or damage. Replace if necessary.
2. Lift the front of vehicle until skis are off the ground.
3. Detach shock absorber and stabilizer bar link from lower suspension arm.
4. Move suspension arm from side to side.
5. Lower vehicle to the ground.
6. Move suspension up and down.
7. There should be no noticeable loose. Replace bushings and/or sleeves if necessary.

NOTE: A play of 2 mm (.079 in) is acceptable when the suspension arm is moved forward and backward.

8. Check sleeves inside suspension arm attachments for wear or damage.

Lower Suspension Arm Removal


1. Lift the front of vehicle until skis are off the ground.
2. Remove shock absorber lower bolt.

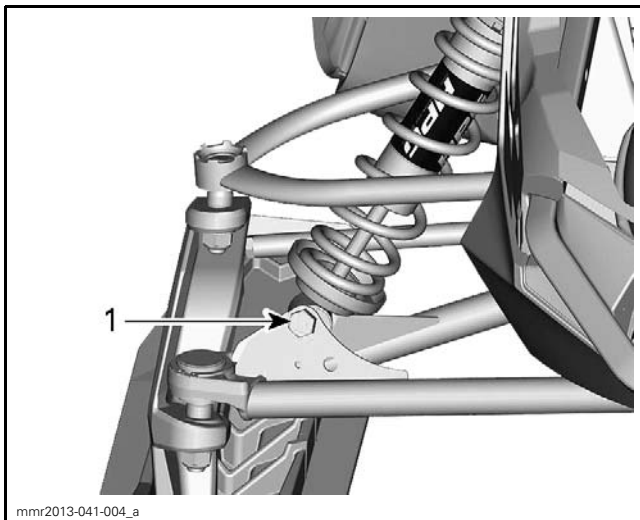

1. Lower bolt

3. Detach stabilizer bar link from lower suspension arm. Refer to *STABILIZER BAR* further in this section.

4. Remove lower ball joint nuts.

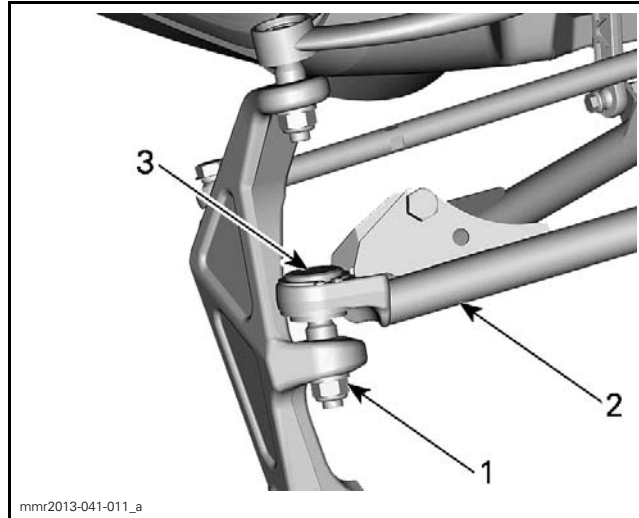


1. Ball joint nut
2. Lower suspension arm
3. Lower ball joint

5. Using a suitable ball joint remover, detach lower ball joint from ski leg.

NOTE: If no tool is available, turn ball joint nut until it is flush with the end of ball joint then, tap on nut with a hammer to release ball joint.

6. Remove suspension arm screws.

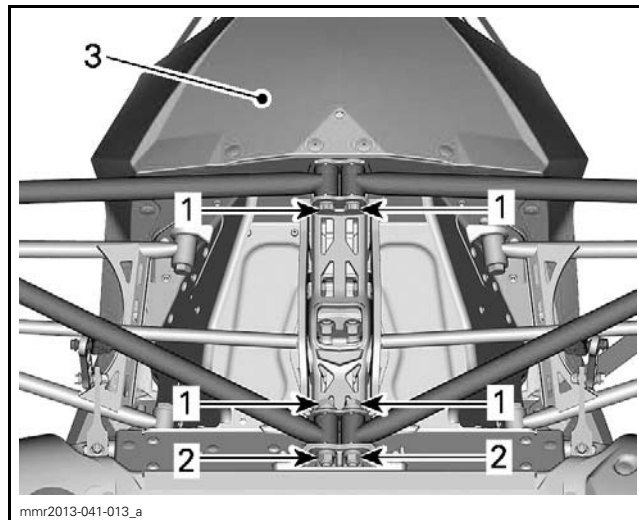

UNDERNEATH FRONT OF VEHICLE

1. Suspension arm screws
2. Rear nuts
3. Bottom pan

NOTE: To hold rear nuts, grind a 15 mm opened wrench as shown.




7. Remove lower suspension arm from vehicle.

Lower Suspension Arm Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

1. Install a wear plate over bushings.
2. Position the wear plate on top.
3. Fold all tabs against bushings.

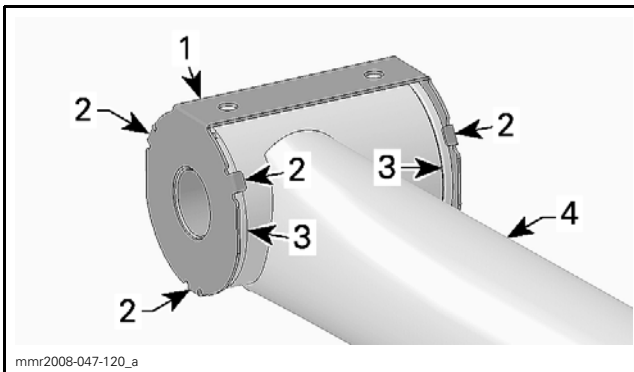

1. Wear plate
2. Wear plate tabs
3. Bushings
4. Lower suspension arm

Install all other removed parts.


LOWER BALL JOINT

Lower Ball Joint Inspection

Inspect ball joint end for damage. Ensure it's moving freely without play. Replace ball joints as required.


Lower Ball Joint Removal

1. Remove the *LOWER SUSPENSION ARM*, see procedure in this section.
2. Remove circlip securing ball joint to suspension arm.

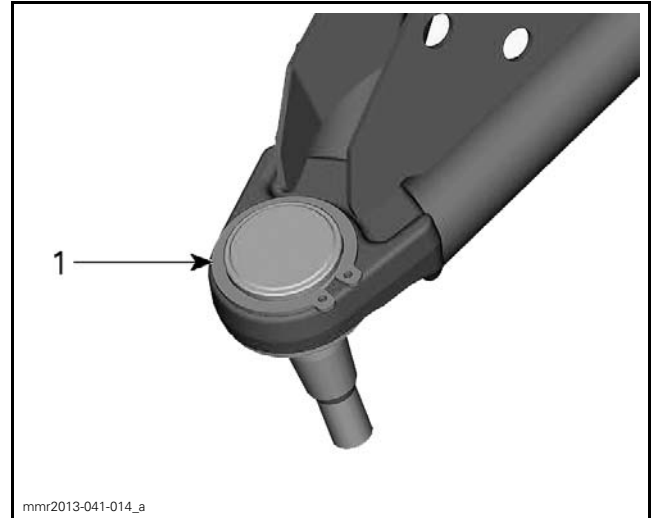

1. Circlip

3. Using a press and the BALL JOINT REMOVER SUPPORT (P/N 529 036 121), press ball joint out of the lower suspension arm.

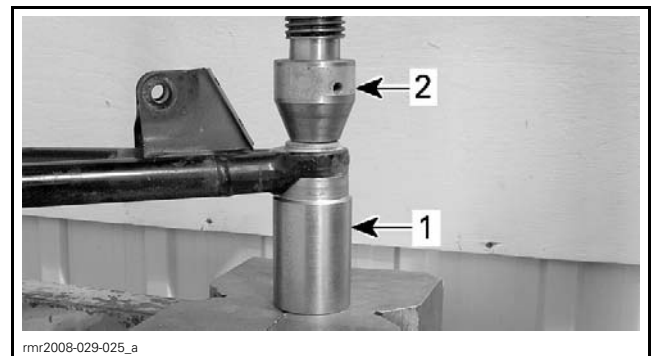


- TYPICAL**
1. Ball joint remover
 2. Press

Lower Ball Joint Installation

1. Using a press, the BALL JOINT REMOVER SUPPORT (P/N 529 036 121) and the BALL JOINT INSTALLER (P/N 529 035 975), press ball joint into the suspension arm end.

Section 07 CHASSIS

Subsection 01 (FRONT SUSPENSION)

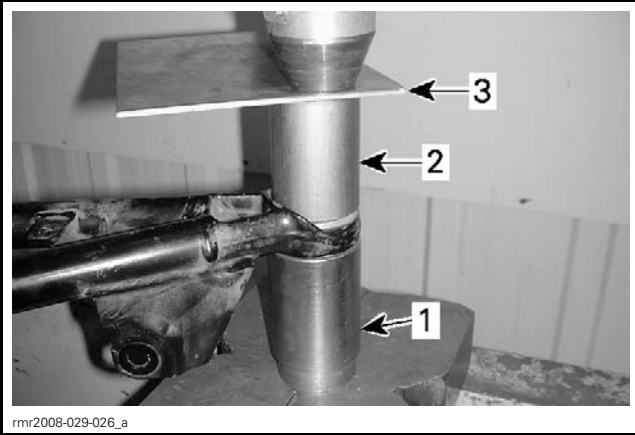

mnr2008-029-026_a

TYPICAL


1. Ball joint remover support
2. Ball joint installer
3. Steel plate

2. Reinstall the circlip. If the circlip seems loose, replace it with a new one.
3. Install the *LOWER SUSPENSION ARM* on vehicle, see procedure in this section.

SKI LEG

Ski Leg Removal

1. Remove ski from ski leg.
2. Detach tie-rod end from ski leg.

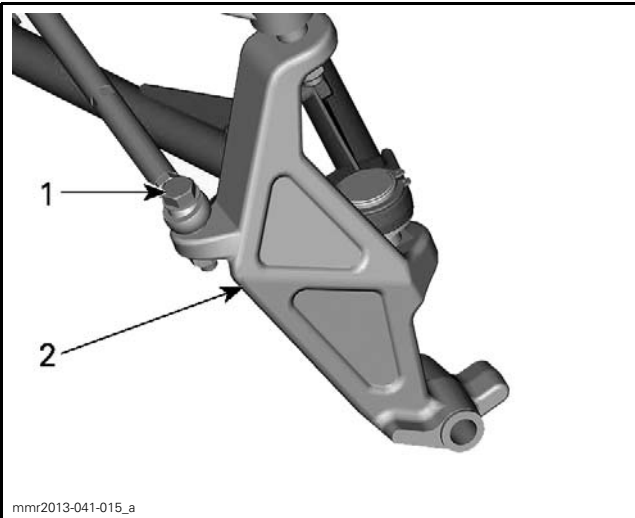

mnr2013-041-015_a

1. Tie-rod end bolt
2. Ski leg

3. Remove upper and lower ball joints from ski leg. Refer to *UPPER BALL JOINT* and *LOWER BALL JOINT* in this section.


Ski Leg Installation

The installation is the reverse of the removal procedure.

STABILIZER BAR

Stabilizer Bar Removal


1. Remove the RH side panel. Refer to *BODY* section.
2. Remove the muffler. Refer to *EXHAUST SYSTEM* section.
3. Remove the cap at the bottom of the RH side bottom pan.

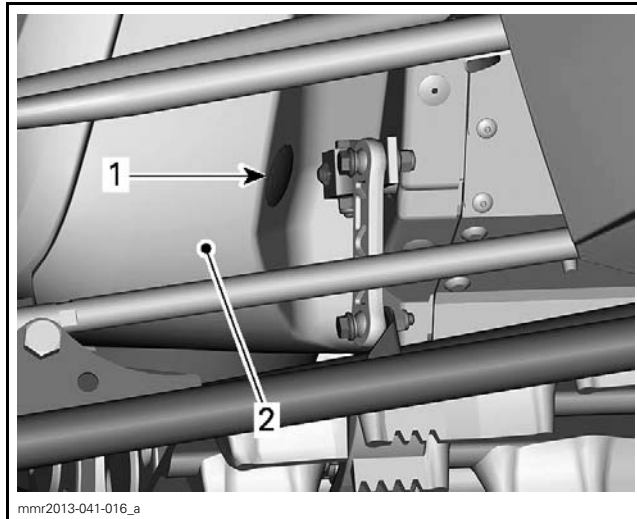

mnr2013-041-016_a

1. Stabilizer bar cap
2. RH side bottom pan

4. Remove bolts securing stabilizer links to lower suspension arms.

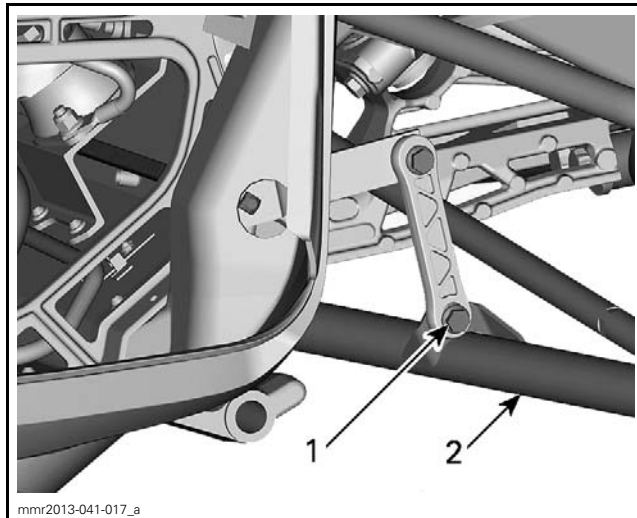


mnr2013-041-017_a

RH SIDE SHOWN


1. Stabilizer link bolt
2. Lower suspension arm

5. Remove stabilizer lever bolts.
6. Remove stabilizer levers from stabilizer bar.

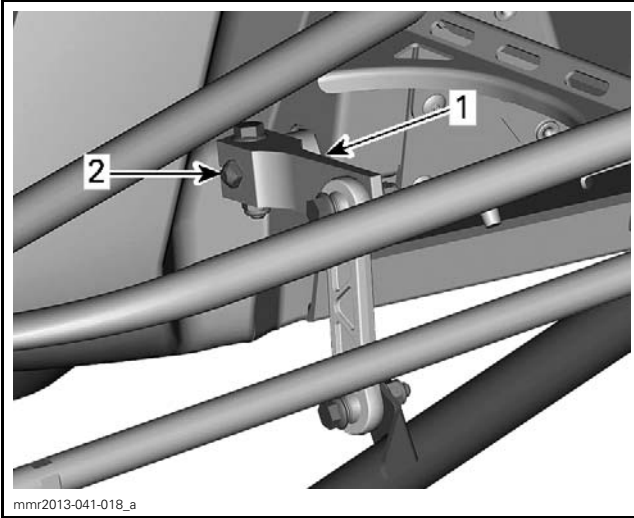

RH SIDE SHOWN
1. Stabilizer lever
2. Stabilizer bar

7. Slide stabilizer bar out of vehicle.

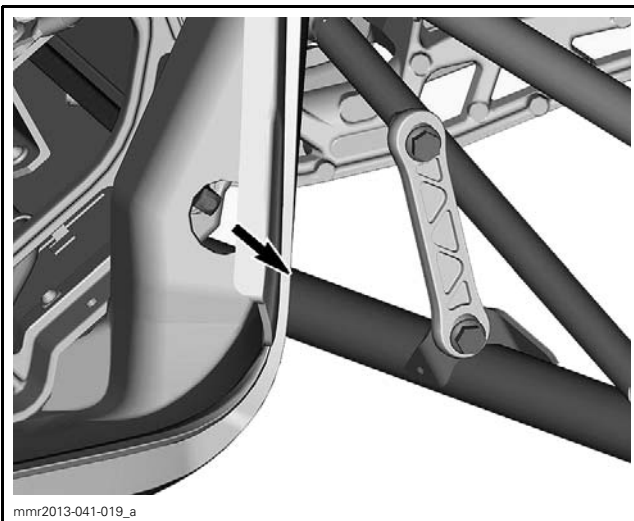

RH SIDE REMOVAL

Stabilizer Bar Installation

The installation is the reverse of the removal procedure.

REAR SUSPENSION (rMOTION)

SERVICE TOOLS

Description	Part Number	Page
RMOTION SUSPENSION TOOL	529 036 234	10, 23
SHOCK ABSORBER SUPPORTS	529 036 186	21


SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
BENCH SCALE SUCH AS SALTER BRECKNELL	PS 400	21

SERVICE PRODUCTS

Description	Part Number	Page
LOCTITE 243 (BLUE)	293 800 060	13


RAILS AND FRONT ARM

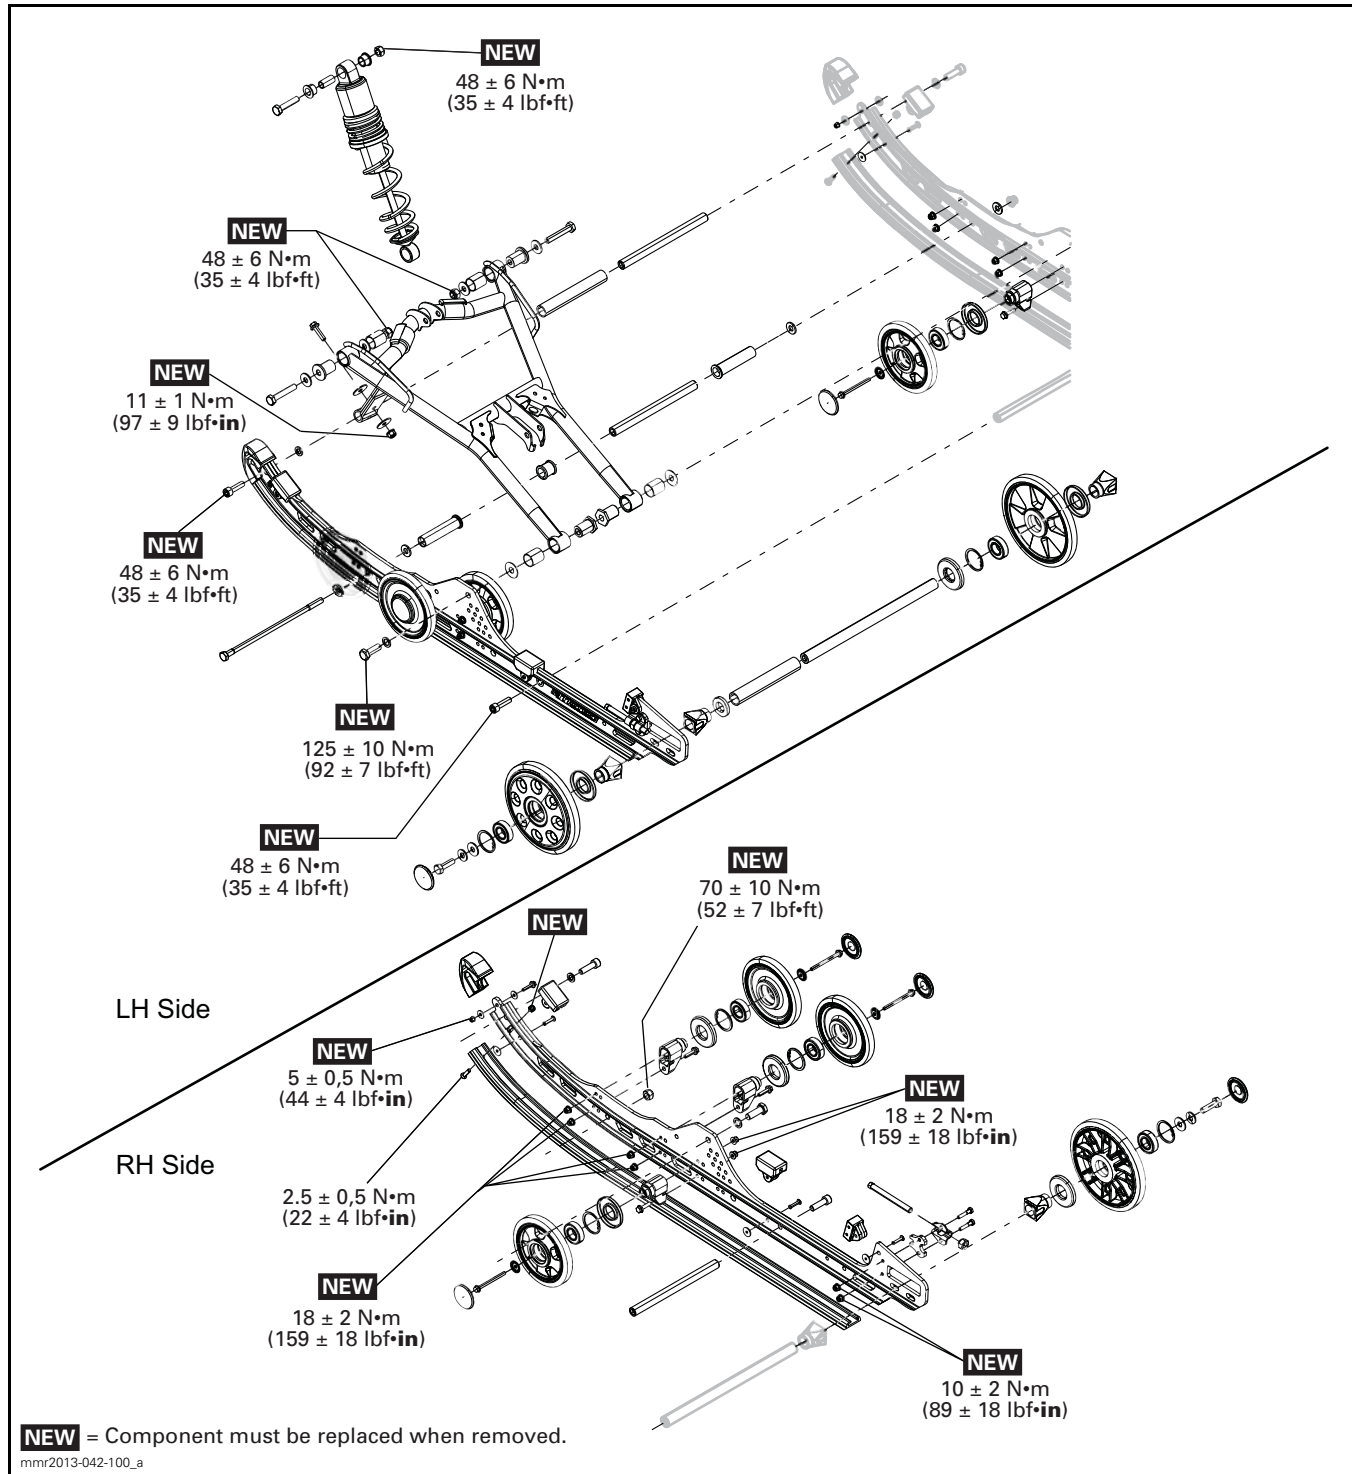

REAR ARM (MODELS WITHOUT ADJUSTABLE REAR SHOCK)




If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

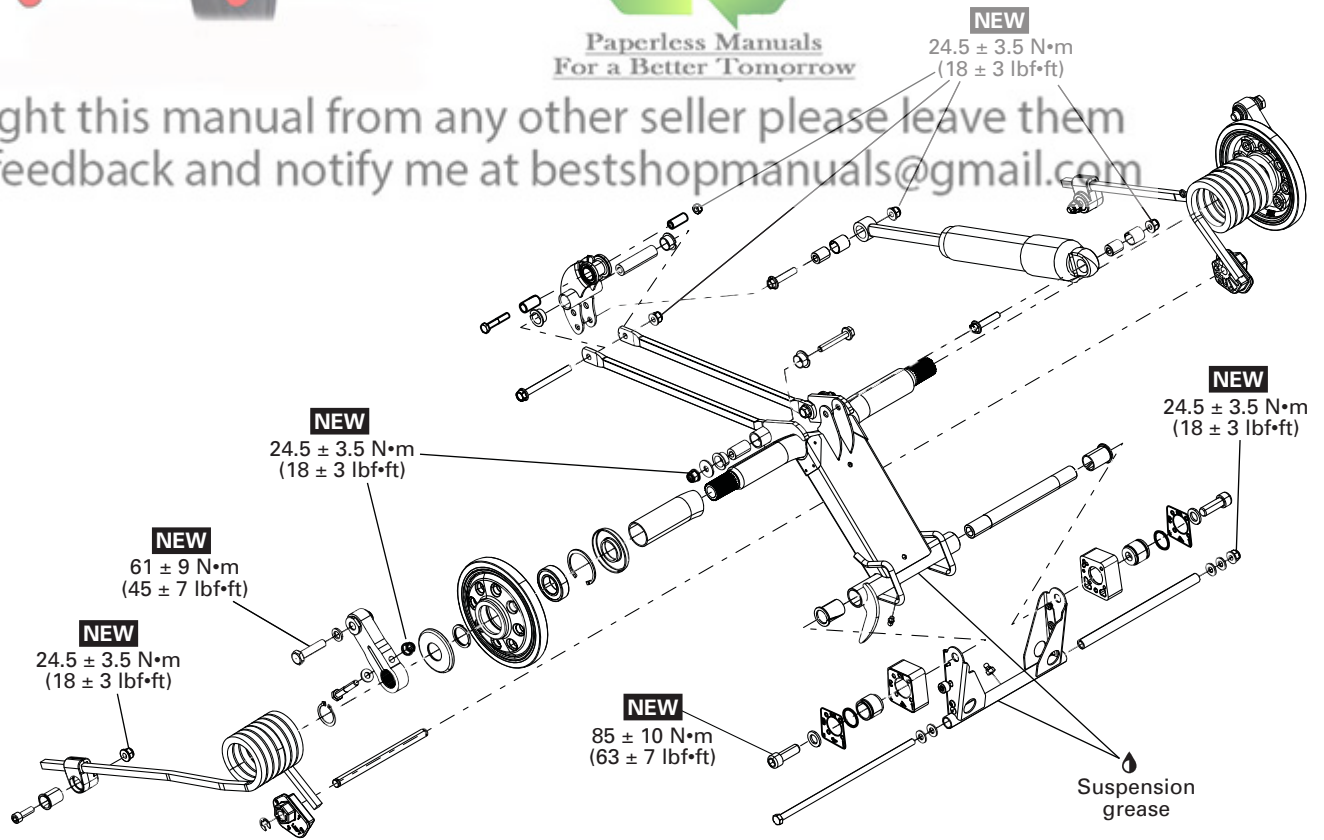


NEW = Component must be replaced when removed.

mnr2013-042-101_a

REAR ARM (MODELS WITHOUT QUICK ADJUST SYSTEM)

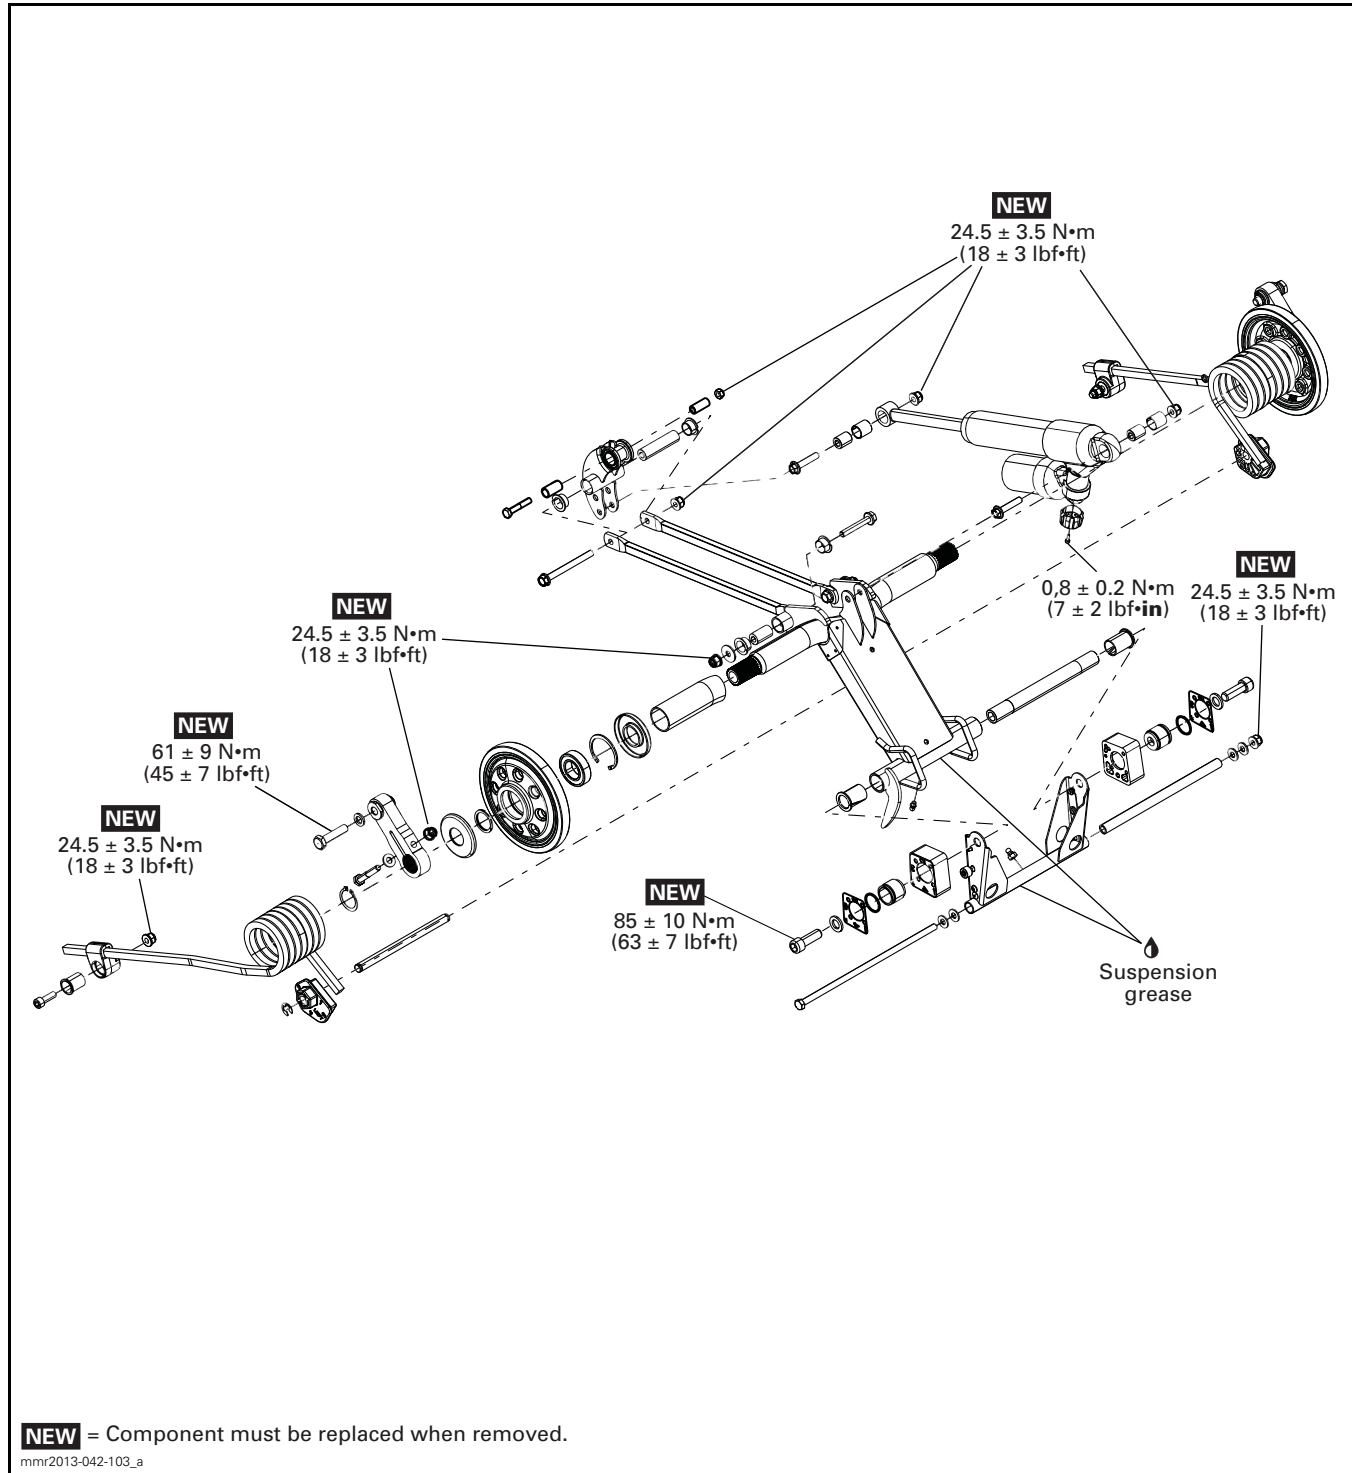

REAR ARM (MODELS WITH QUICK ADJUST SYSTEM)

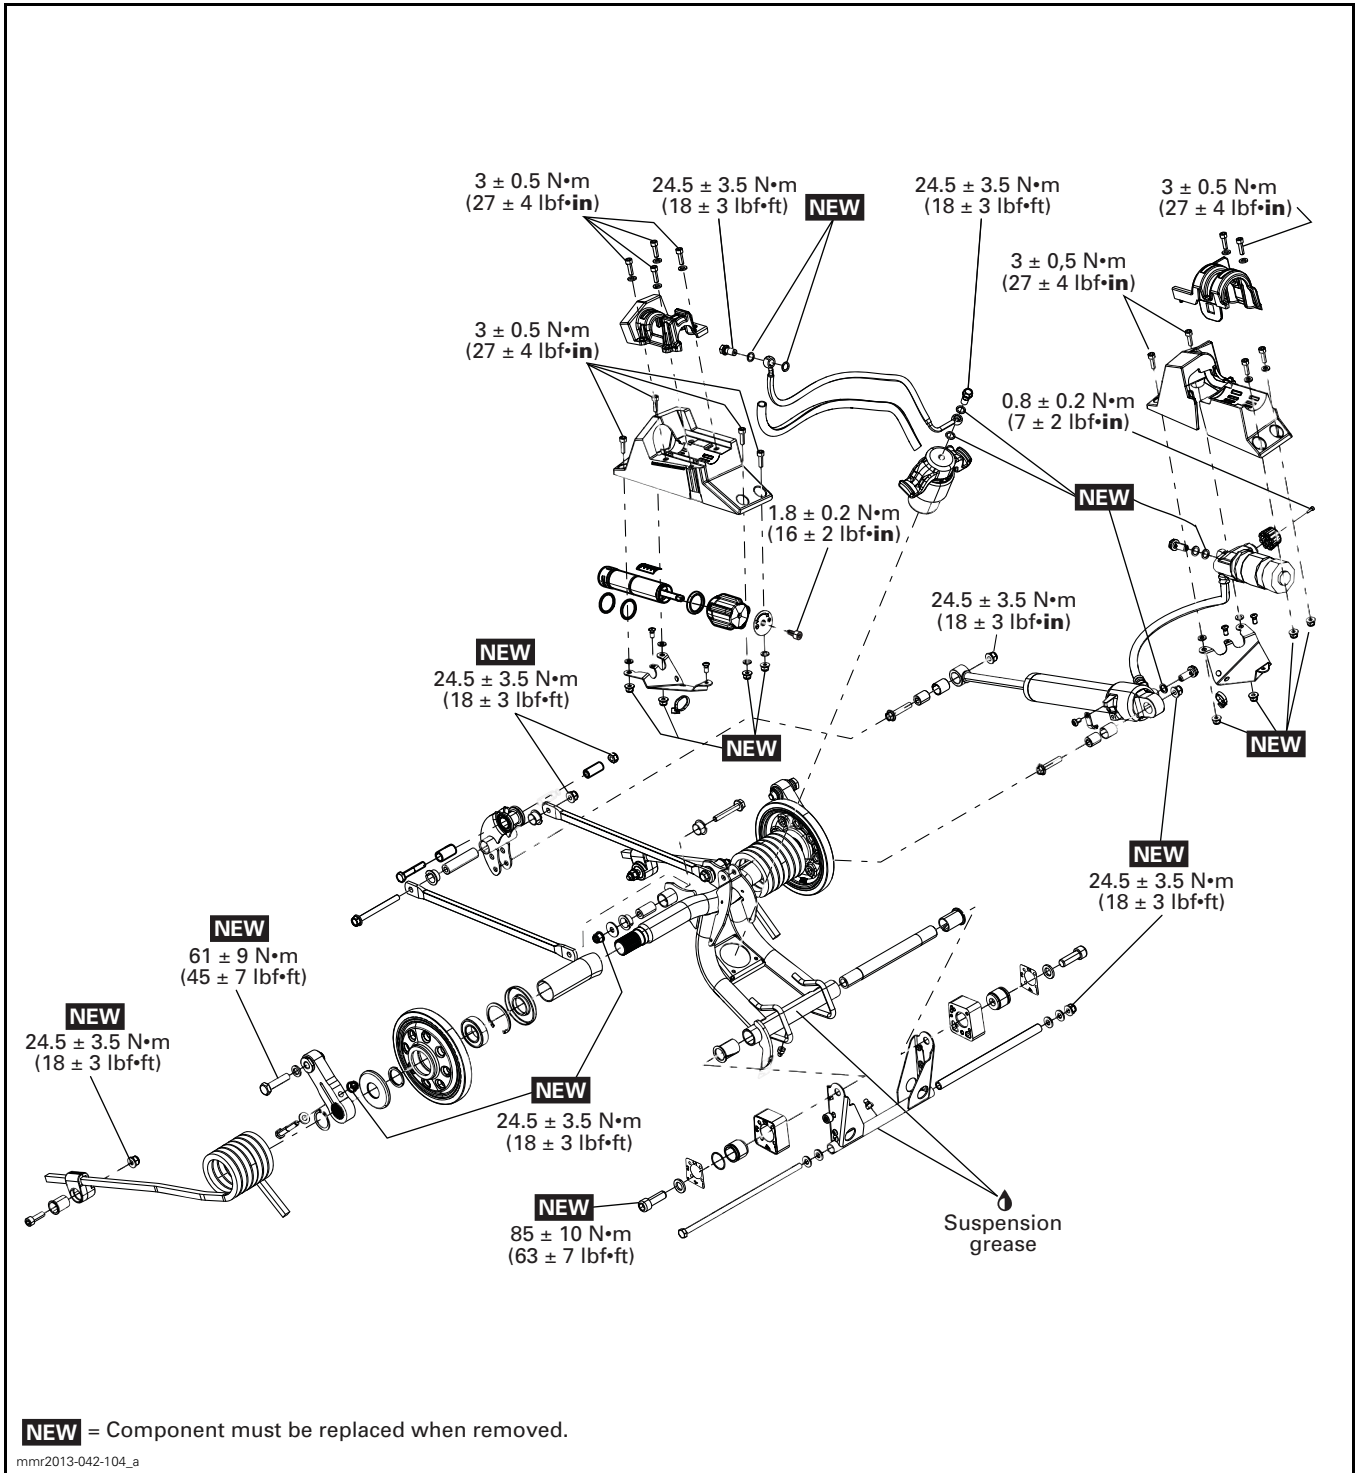

GENERAL

During assembly/installation, use torque values and service products as in the exploded views.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.


⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, cotter pins, etc.) must be replaced.

NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled as per factory standards.

ADJUSTMENT

REAR SUSPENSION ADJUSTMENTS

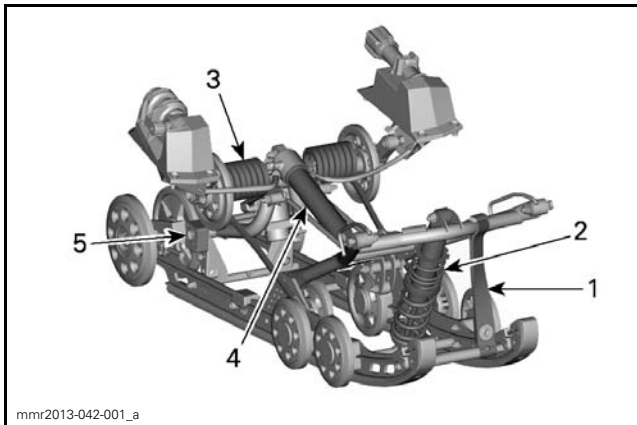

ADJUSTABLE COMPONENTS

1. Stopper strap
2. Center spring
3. Rear spring
4. Rear shock absorber
5. Coupling blocks (RH side shown)

NOTICE Whenever adjusting rear suspension, check track tension and adjust if necessary.


Stopper Strap

Stopper strap length has an effect on the amount of weight the center spring has to carry especially during acceleration, therefore on the front end up-lift.

Stopper strap length also has an effect on center spring travel.

NOTICE Whenever stopper strap length is changed, track tension must be checked.

ACTION	RESULT
Increasing stopper strap length	Lighter ski pressure under acceleration
	More center spring travel
	More bump absorption capability
Decreasing stopper strap length	Heavier ski pressure under acceleration
	Less center spring travel
	Less bump absorption capability

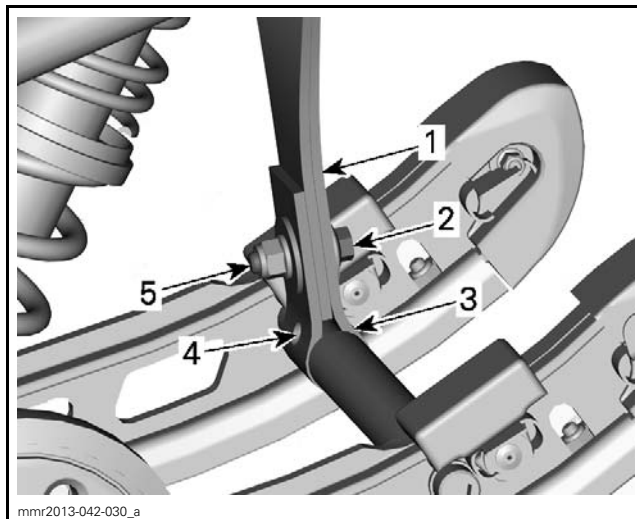

TYPICAL

1. Position 1
2. Position 2
3. Position 3
4. Position 4
5. Position 5 (factory setting)

NOTE: Decreasing the stopper strap length may reduce comfort. If too much weight transfer is felt, try to correct it by adjusting the coupling blocks first. Always install stopper strap bolt as close as possible to the lower shaft.

When operating the snowmobile in deep snow, it may be necessary to vary stopper strap length and/or riding position, to change the angle at which the track rides on the snow. Operator's familiarity with the various adjustments as well as snow conditions will dictate the most efficient combination.


Generally, a longer stopper strap setting gives better performance in deep snow on a flat landscape.

Center Spring

Center spring preload has an effect on steering effort, handling and bump absorption.

Also, since center spring preload adjustment puts more or less pressure on the front of the track, it has an effect on the performance in deep snow.

ACTION	RESULT
Increasing preload	Lighter steering
	More bump absorption capability
	Better deep snow starts
	Better deep snow performance and handling
Decreasing preload	Heavier steering
	Less bump absorption capability
	Better trail handling

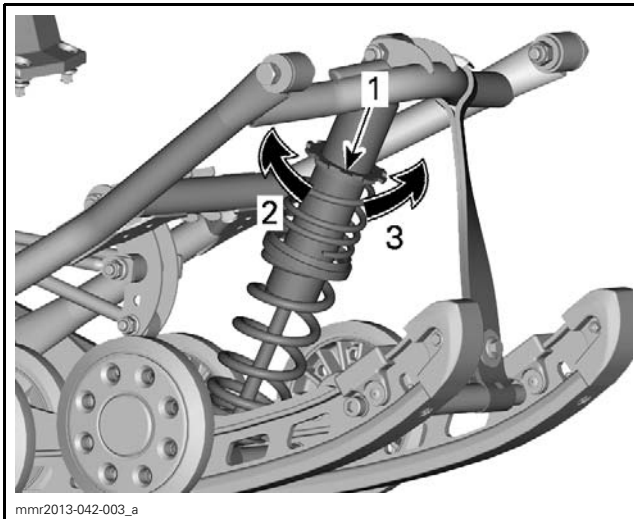

TYPICAL- RING TYPE SHOWN
 1. Spring preload adjustment ring
 2. Increase preload
 3. Decrease preload

Rear Spring


Rear spring preload has an effect on comfort, ride height and load compensation.

Also, adjusting rear spring preload shifts more or less weight to the snowmobile front end. As a result, more or less weight is applied to the skis. This has an effect on performance in deep snow, steering effort and handling.

Slight suspension bottoming occurring under the worst riding conditions indicates a good choice of spring preload.

ACTION	RESULT
Increasing preload	Firmer rear suspension
	Higher rear end
	More bump absorption capability
	Heavier steering
Decreasing preload	Softer rear suspension
	Lower rear end
	Less bump absorption capability
	Lighter steering
	Better performance and handling in deep snow

Refer to the following to determine if preload is correct.

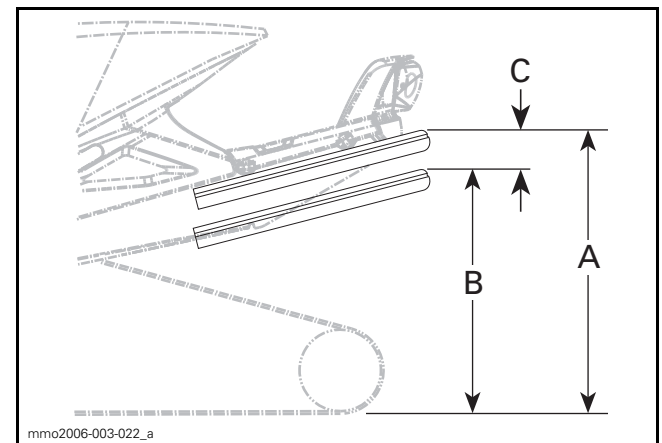

TYPICAL — PROPER ADJUSTMENT
 A. Suspension fully extended
 B. Suspension has collapsed with operator, passenger(s) and load added
 C. Distance between dimension "A" and "B", see table below

C	WHAT TO DO
50 mm to 75 mm (2 in to 3 in)	No adjustment required
More than 75 mm (3 in)	Adjusted too soft. Increase preload
Less than 50 mm (2 in)	Adjusted too firm. Decrease preload

NOTE: If the specification is unattainable with the original springs, refer to the applicable *SPRING CHART* bulletin for other available springs.

Subsection XX (REAR SUSPENSION (rMOTION))

rMotion Without Quick Adjust System (Except MXZ TNT)


To increase spring preload using tool, always turn the left side adjustment cam in a clockwise direction, and the right side cam in a counterclockwise direction.

⚠ CAUTION Never set preload cams directly from position 5 to 1 or directly from position 1 to 5.

⚠ WARNING

Both rear spring preload must be set at the same position. Otherwise vehicle behavior may be unpredictable and suspension may become warped.

The adjustment cams have 5 different settings, 1 being the softest.

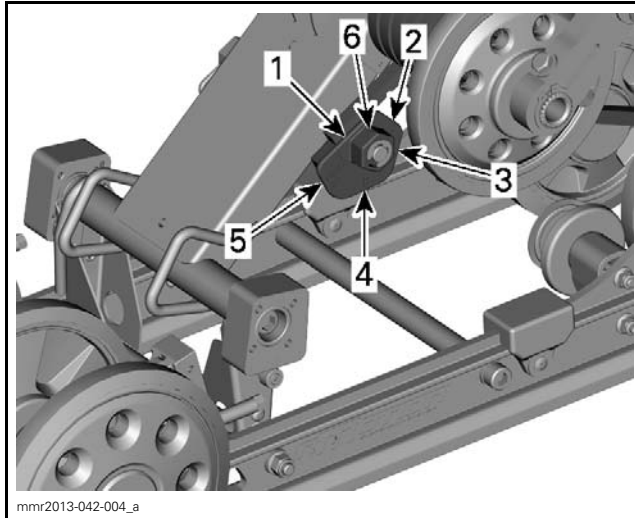


mmr2013-042-004_a

rMOTION WITHOUT QUICK ADJUST SYSTEM— RH SIDE

1. Position 1
2. Position 2
3. Position 3
4. Position 4
5. Position 5
6. Adjustment nut

rMotion With Quick Adjust System


Turn the LH side knob to adjust preload accordingly.

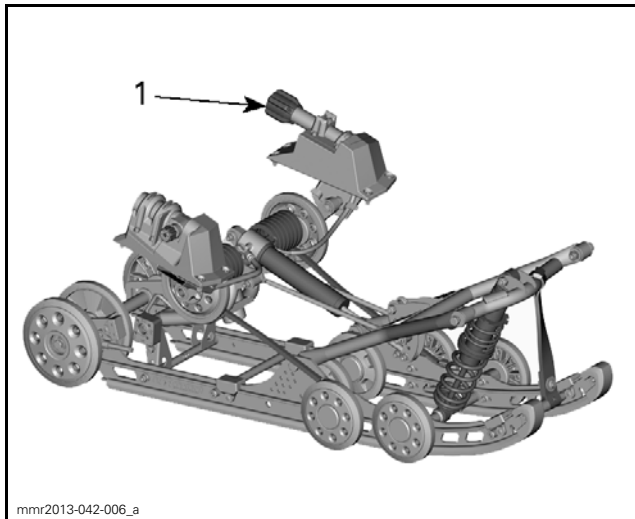

mmr2013-042-006_a

TYPICAL — rMOTION WITH QUICK ADJUST SYSTEM

1. LH side knob to adjust spring preload

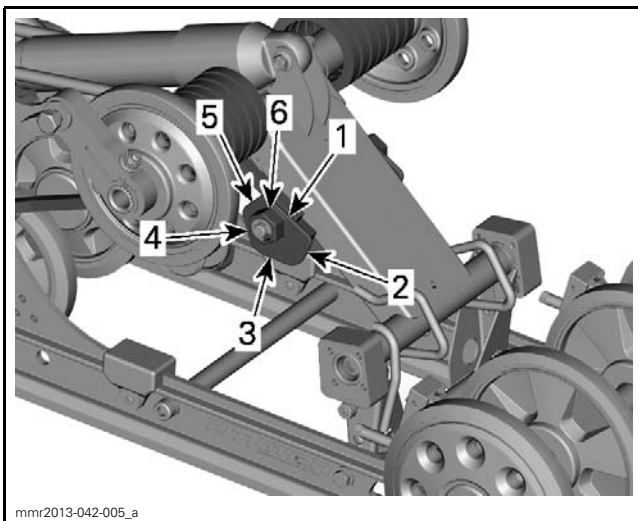

mmr2013-042-005_a

rMOTION WITHOUT QUICK ADJUST SYSTEM — LH SIDE

1. Position 1
2. Position 2
3. Position 3
4. Position 4
5. Position 5
6. Adjustment nut

Rear Shock Absorber

Rear Shock Compression Damping

NOTE: Both low and high speed compression damping are adjusted simultaneously.


Low speed compression damping controls how the shock absorber reacts to a low suspension velocity (slow compression strokes, in most cases when riding at lower speeds).

High speed compression damping controls how the shock absorber reacts to a high suspension velocity (quick compression strokes, in most cases when riding at higher speeds).

TURNING	ACTION	RESULT ON BIG AND SMALL BUMPS
Clockwise	Increasing compression damping force	Firmer compression damping
Counter Clockwise	Decreasing compression damping force	Softer compression damping

rMotion Without Quick Adjust System


To adjust, turn the adjuster button located on the oil reservoir on shock clockwise to increase compression damping force and counterclockwise to decrease compression damping force.

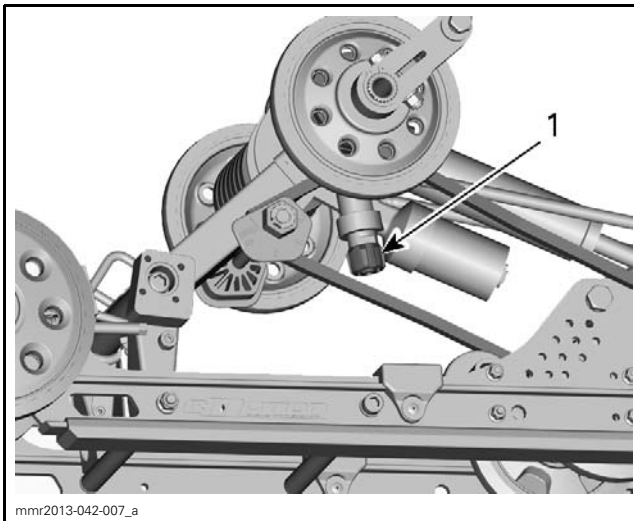

TYPICAL — *rMOTION WITHOUT QUICK ADJUST SYSTEM*
1. Compression damping adjustment button

rMotion With Quick Adjust System

Turn the RH side knob to adjust the shock compression speed.

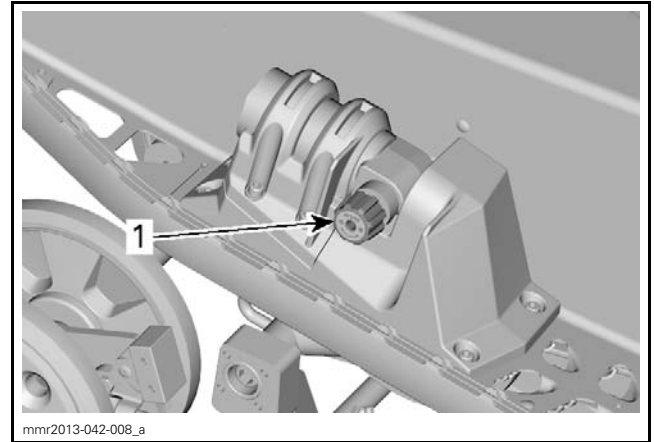


TYPICAL — *rMOTION WITH QUICK ADJUST SYSTEM*
1. Knob to adjust low/high speed compression damping

Rear Shock Mounting Position

Two rear shock mounting positions are available: high performance and sport.

Factory setting is set to lowest mounting position (high performance) which will suit most operators riding preferences. The sport mounting hole adjustment allows for another range of softer settings, but all other rear suspension adjustments should be performed before changing the rear shock mounting position.

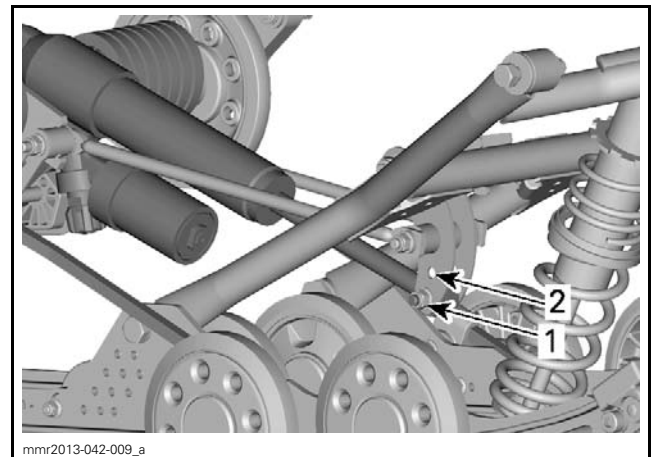

REAR SHOCK MOUNTING POSITION
1. High performance position
2. Sport position

Coupling Blocks

Coupling blocks adjustment has an effect on vehicle handling during acceleration only.


NOTE: A high coupling block setting will reduce both comfort and transfer under acceleration.

To adjust, push on release button under cam and turn coupling block to the desired setting.

Subsection XX (REAR SUSPENSION (rMOTION))

⚠ WARNING

Both blocks must be set at the same position. Otherwise vehicle behavior may be unpredictable and suspension may become warped.

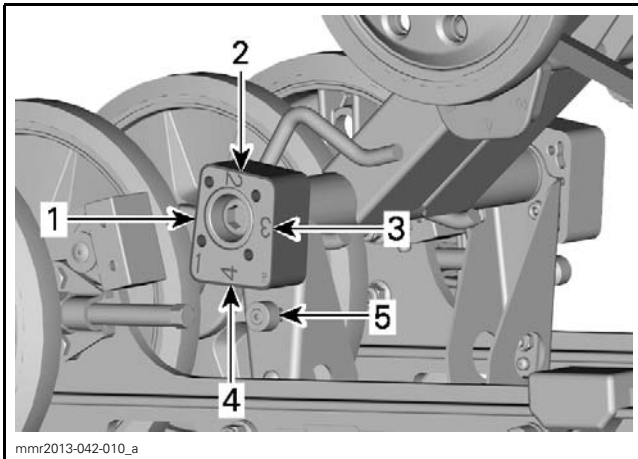

COUPLING BLOCK — RIGHT SIDE VIEW
("R" — RIGHT EMBOSSED ON BLOCK)

1. Position 1 (minimum)
2. Position 2
3. Position 3
4. Position 4 (maximum)
5. Release button

Coupling Blocks Setting

POSITION	USE
1	More ski lift during acceleration - and best comfort
2	Intermediate setting
3	Intermediate setting
4	Less ski lift during acceleration - and some comfort loss

MAINTENANCE

For rear suspension lubrication, mechanism and stopper strap inspection, refer to *PERIODIC MAINTENANCE PROCEDURES*.


PROCEDURES

NOTE: Parts can be replaced without suspension removal, unless otherwise noted.

SUSPENSION ASSEMBLY

Suspension Assembly Removal

1. Lift rear of vehicle and support it off the ground.
2. Completely loosen track tension by unscrewing both adjustment screws.

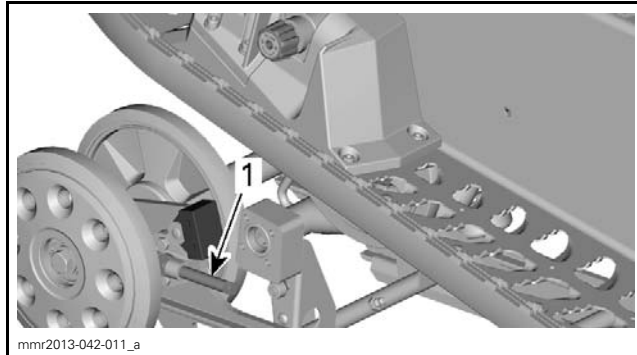


1. Adjustment screw

rMotion with Quick Adjust System

3. Remove quick adjuster control modules, refer to:
 - SHOCK DAMPING QUICK ADJUSTER SYSTEM
 - SPRING PRELOAD QUICK ADJUSTER SYSTEM.

All Models

4. Lower the rear of vehicle just enough to support suspension.
5. Remove rear arm connecting rods retaining screws.

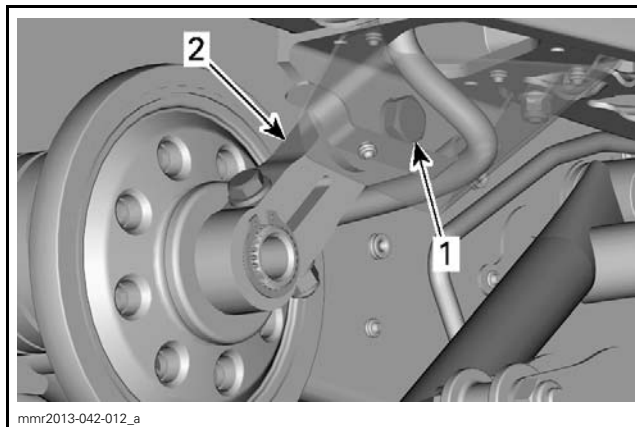


1. Retaining screw
2. Connecting rod

REQUIRED TOOL


RMOTION
SUSPENSION TOOL
(P/N 529 036 234)



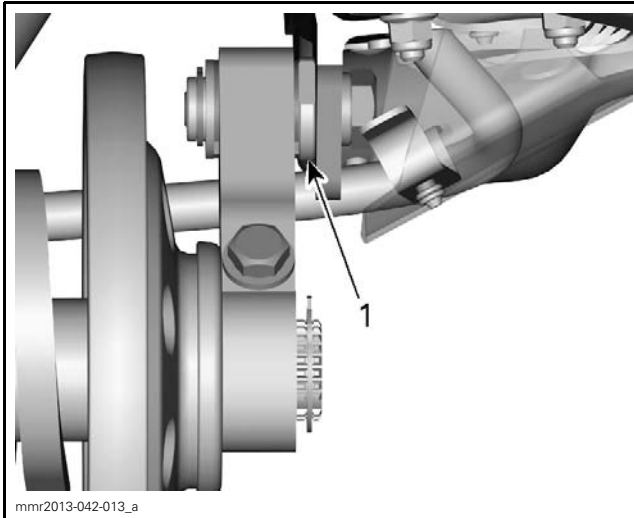


1. rMotion suspension tool to be installed here

6. Remove front arm retaining bolts.

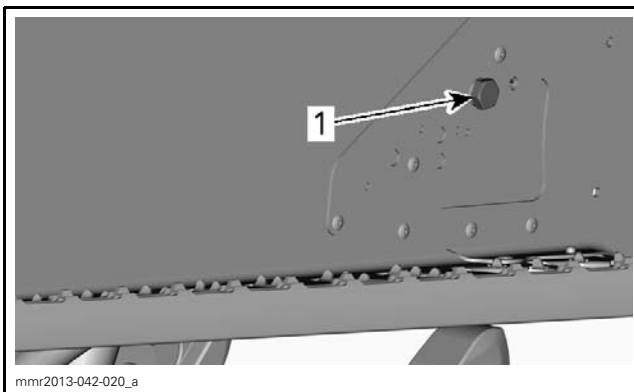


TYPICAL
1. Front arm bolt
2. Chaincase

7. Lift rear of vehicle until front arm as enough clearance to pass underneath tunnel.

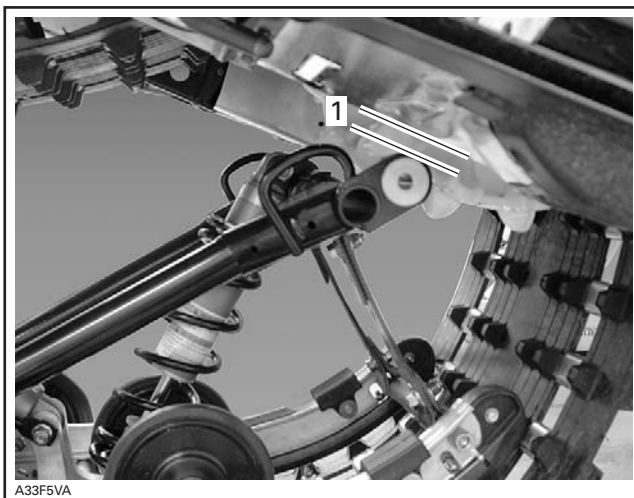

TYPICAL
1. Enough clearance

8. Remove suspension assembly from vehicle.

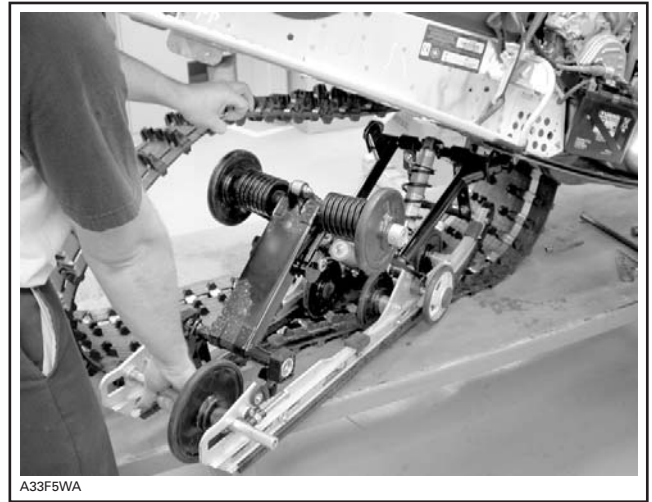

TYPICAL — REMOVE SUSPENSION

Suspension Assembly Installation

Installation is the reverse of removal procedure. Pay attention to the following.

Install suspension into track with front portion first.

Tighten screws to specified torque.

UPPER SUSPENSION ARM FASTENERS TIGHTENING TORQUE	
Front arm bolts (NEW)	48 N•m ± 6 N•m (35 lbf•ft ± 4 lbf•ft)
Rear arm connecting rod screws(NEW)	61 N•m ± 9 N•m (45 lbf•ft ± 7 lbf•ft)

Adjust track tension, refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

rMotion with Quick Adjust System

Install quick adjuster control modules, refer to:


- SHOCK DAMPING QUICK ADJUSTER SYSTEM
- SPRING PRELOAD QUICK ADJUSTER SYSTEM.

SHOCK DAMPING QUICK ADJUSTER SYSTEM

Shock Damping Quick Adjuster Control Module Removal

1. Remove the following parts:
 - Knob
 - Retaining clamp
 - Support.

Subsection XX (REAR SUSPENSION (rMOTION))

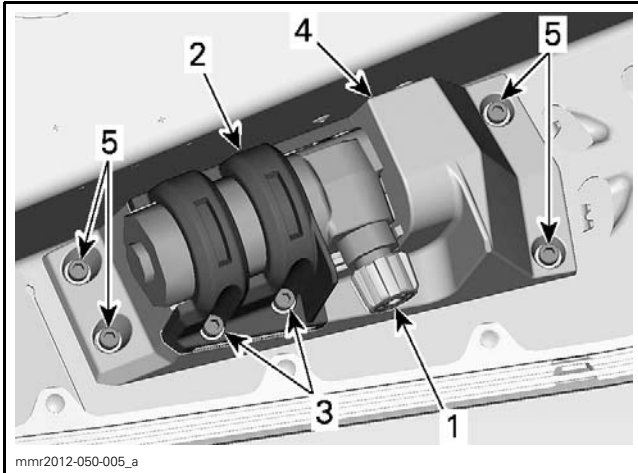


mmr2012-050-005_a

CONTROL MODULE

1. Knob screw
2. Clamp
3. Clamp screws
4. Support
5. Support screws


2. Remove front fasteners from hose guard.
3. Remove hose from its retainer tab and rotate hose guard outwards around rear rivet.

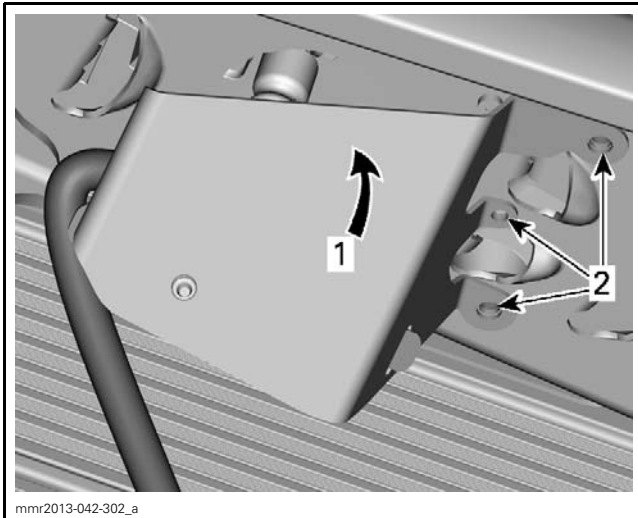

mmr2013-042-302_a

1. Pivot outwards
2. Front fasteners

4. Remove shock remote reservoir as follows:
 - Rotate
 - Pass through tunnel opening.

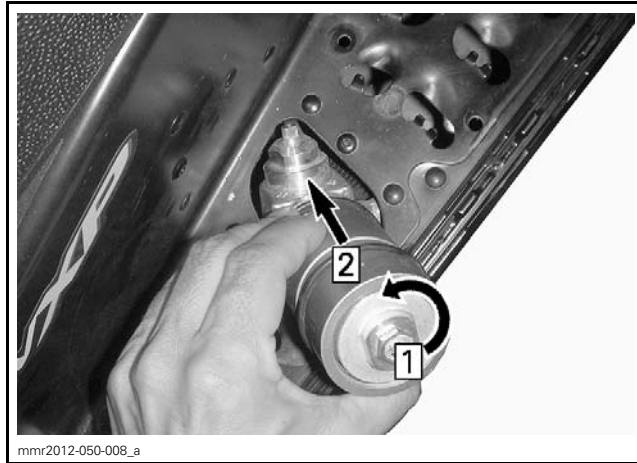

mmr2012-050-008_a


- Step 1: Rotate
- Step 2: Pass through tunnel opening

Shock Damping Quick Adjuster Control Module Installation

1. Align the hose guard front holes with the support front holes.

NOTE: No rivet needed at front of hose guard.

2. Install parts as follows:

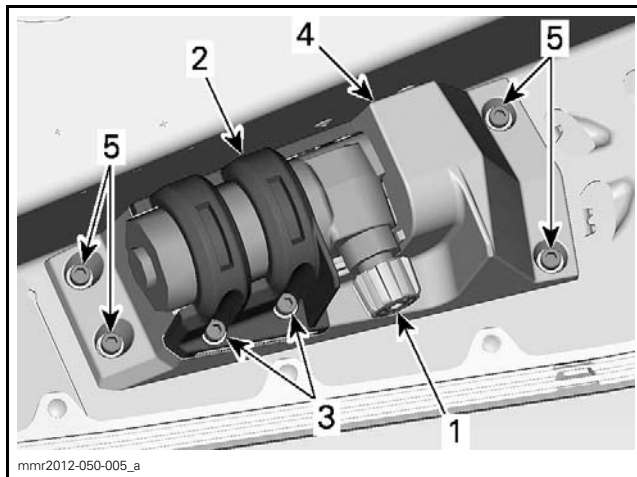


mmr2012-050-005_a

CONTROL MODULE


1. Knob screw
2. Clamp
3. Clamp screws
4. Support
5. Support screws

TIGHTENING TORQUE	
Support screws	5 N•m ± 1 N•m (44 lbf•in ± 9 lbf•in)
Clamp screws	2.5 N•m ± 0.5 N•m (22 lbf•in ± 4 lbf•in)
Knob screw	0.4 N•m ± 0.1 N•m (4 lbf•in ± 1 lbf•in)

3. Secure rear shock hose to hose guard bracket.

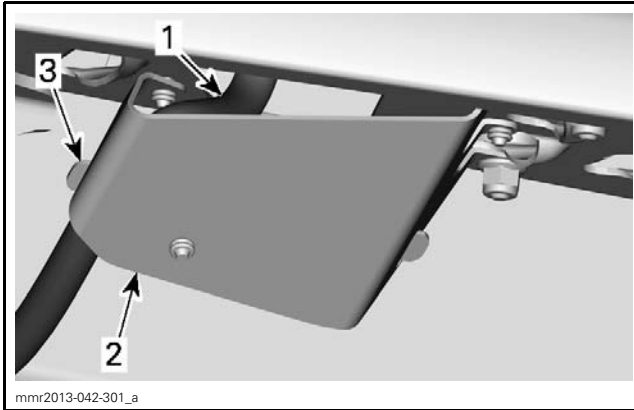

1. Hose
2. Hose guard
3. Hose guard bracket

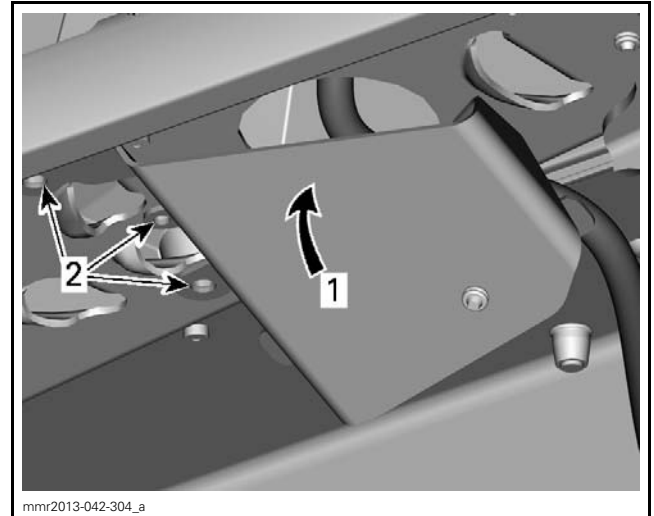


1. Pivot outwards
2. Front fasteners

SPRING PRELOAD QUICK ADJUSTER SYSTEM

Spring Preload Quick Adjuster Control Module Removal

This procedure removes only the control module from the tunnel, without disconnecting the hose and will not necessitate bleeding the system.

1. Remove the following parts:
 - Knob
 - Retaining clamp
 - Support.

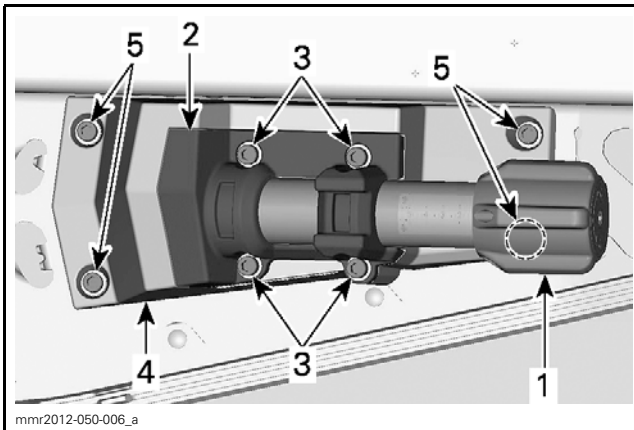

SPRING PRELOAD QUICK ADJUSTER CONTROL MODULE


1. Knob
2. Clamp
3. Clamp screws
4. Support
5. Support screws

2. Remove front fasteners from hose guard.
3. Remove hose from its retainer tab and rotate hose guard outwards around rear rivet.

4. Pass control cylinder through the opening in the tunnel.

Spring Preload Quick Adjuster Control Module Installation

1. Align the hose guard front holes with the support front holes.
2. Install parts as follows:

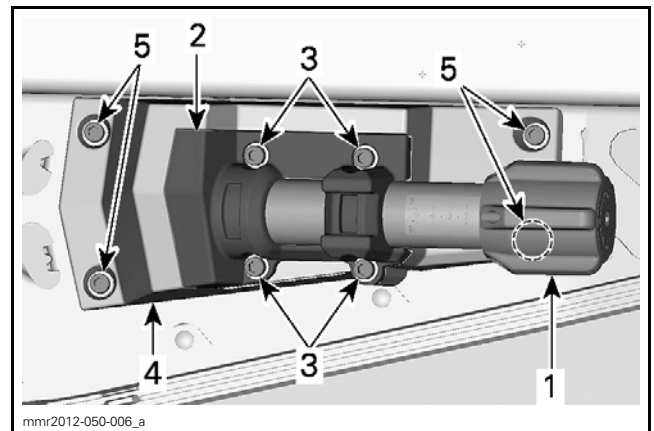


SPRING PRELOAD QUICK ADJUSTER CONTROL MODULE

1. Knob
2. Clamp
3. Clamp screws
4. Support
5. Support screws

TIGHTENING TORQUE	
Support screws	5 N•m ± 1 N•m (44 lbf•in ± 9 lbf•in)
Clamp screws	2.5 N•m ± 0.5 N•m (22 lbf•in ± 4 lbf•in)
Knob screw (apply LOCTITE 243 (BLUE) (P/N 293 800 060)	1.5 N•m ± 0.5 N•m (13 lbf•in ± 4 lbf•in)

Subsection XX (REAR SUSPENSION (rMOTION))

3. Secure rear shock hose to hose guard bracket.

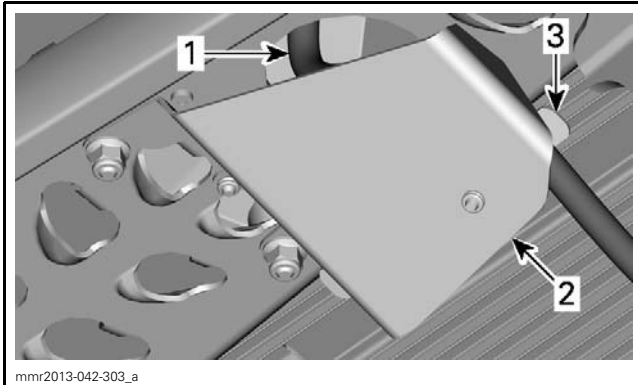


1. Hose
2. Hose guard
3. Hose guard bracket

Spring Preload Quick Adjuster System Removal

This procedure removes the following parts as an assembly and does not necessitate bleeding the system:

- Control module
- Hose
- Actuator.


1. Support the rear of vehicle just enough to remove load on the rear suspension.
2. Remove control module, refer to *SPRING PRELOAD QUICK ADJUSTER SYSTEM*.
3. Remove idler wheels to access spring support screws.

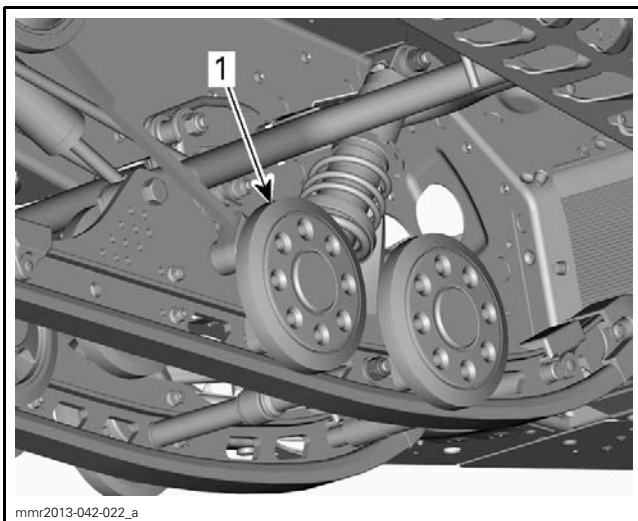

1. Idler wheel to be removed (on each side)

4. Firmly hold the spring supports and remove spring support bolts.

CAUTION Spring supports are spring loaded.

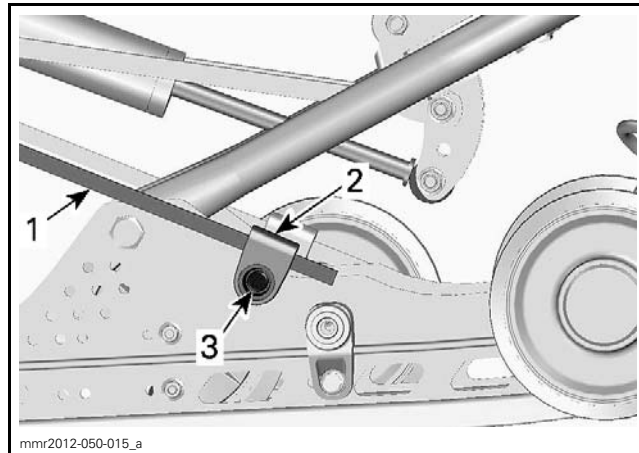


1. Spring
2. Spring support
3. Spring support bolt

5. Move spring supports with spring ends over the idler wheel supports and let them sit on the track.

NOTE: If the springs are still loaded, completely loosen track tension in order to make room to unload springs.

6. Move the other end of the springs off the spring adjuster actuator.
7. Remove hose retainer from shock assembly.

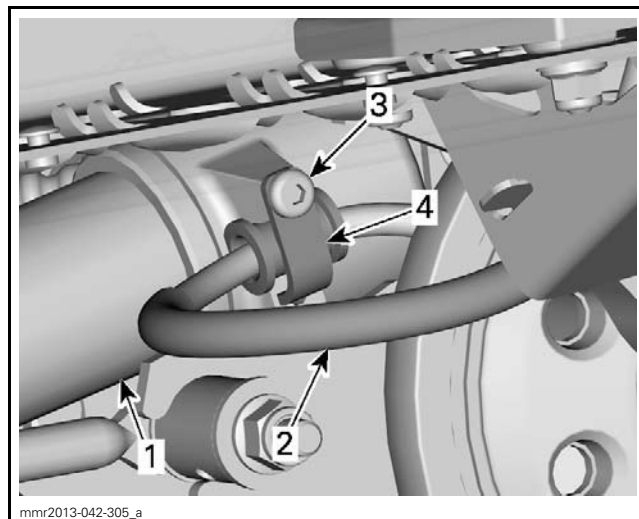

1. Shock
2. Hose
3. Retaining screw
4. Hose retainer

8. Remove actuator from rear arm.
9. Remove spring adjuster assembly.

Spring Preload Quick Adjuster System Disassembly

NOTE: System bleeding is required whenever the hose is disconnected.

NOTICE Thoroughly clean parts before disassembly. Work on a clean surface.


1. Set controller to the minimum preload.
2. Remove the banjo bolt(s) retaining the hose.
3. Drain fluid.

Spring Preload Quick Adjuster System Seals Replacement

NOTE: System bleeding is required whenever the hose is disconnected.

NOTICE Thoroughly clean parts before disassembly. Work on a clean surface.

1. Remove quick adjuster assembly from vehicle. Refer to *SPRING PRELOAD QUICK ADJUSTER CONTROL MODULE REMOVAL*.

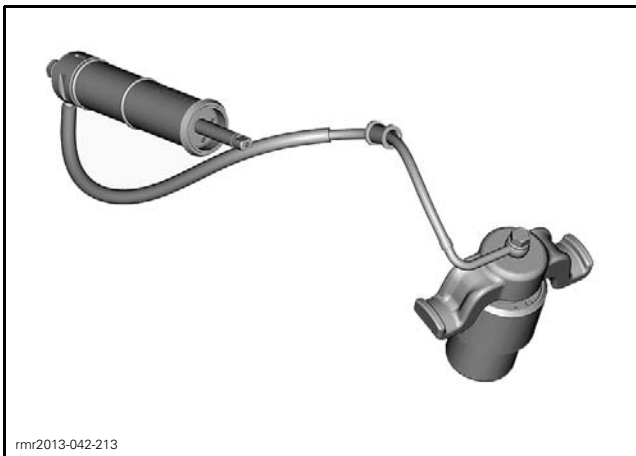


QUICK ADJUSTER ASSEMBLY

2. Use retainer tool 529 036 254 to hold cylinder while removing banjo bolt.



REMOVE BANJO BOLT


3. Remove banjo bolt, washers and hose from cylinder.

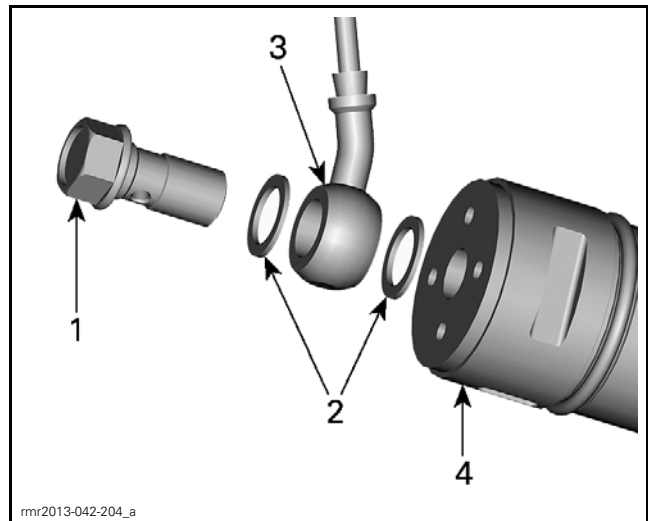

1. Banjo bolt
2. Washer
3. Hose fitting
4. Cylinder body


4. Hold cylinder body with tool 529 036 254 and unscrew end cap using tool 529 036 255.

Subsection XX (REAR SUSPENSION (rMOTION))

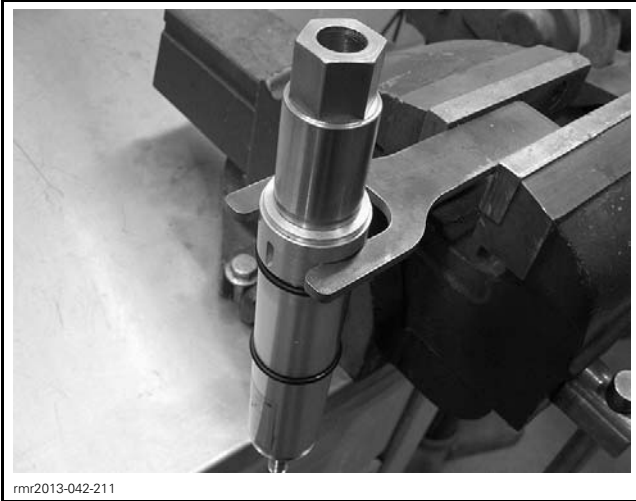


REMOVE END CAP

5. Remove end cap.

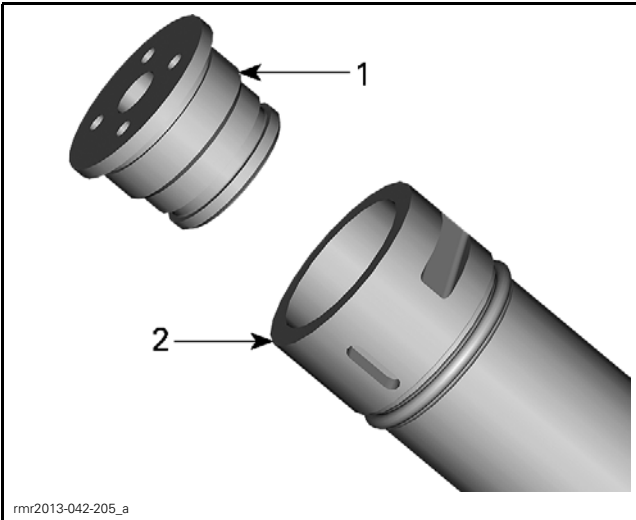


1. End cap
2. Cylinder body

6. At other end of cylinder, unscrew piston rod using tools (P/N 529 036 254) and (P/N 529 036 255).

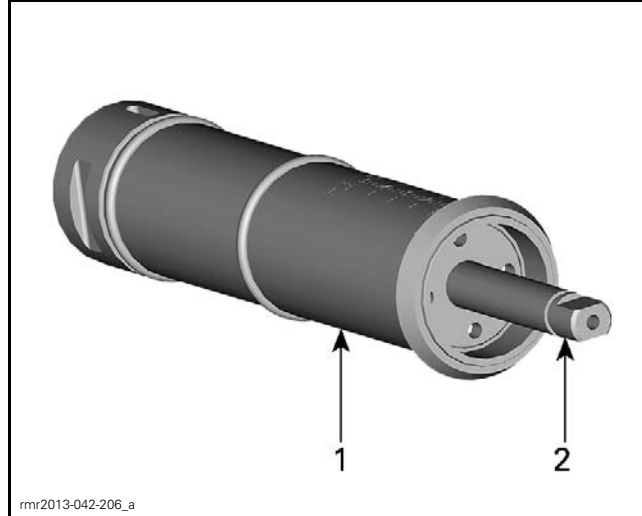


1. Cylinder body
2. Piston rod

7. Remove piston rod.

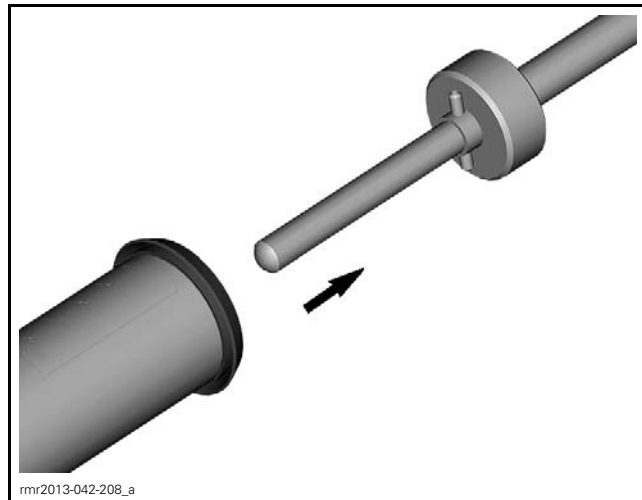

REMOVE PISTON ROD

8. Replace external seals if worn out or damaged.

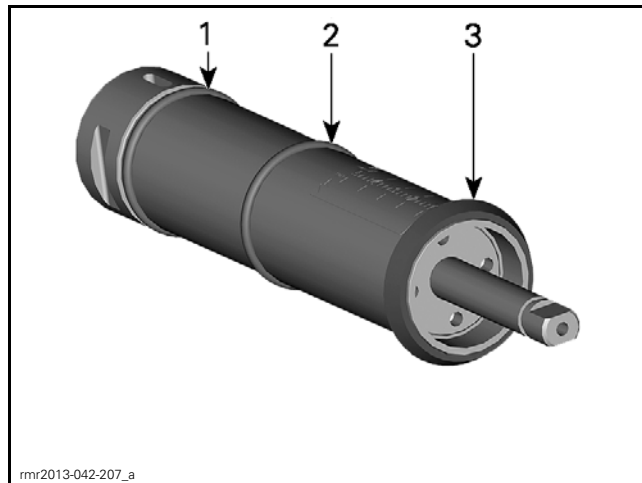

1. Cylinder Body front seal
2. Cylinder body rear seal
3. Knob seal

9. Installation is the reverse of removal.


Spring Preload Quick Adjuster System Bleeding and Reassembly

NOTE: Actuator, control module and hose have to be separated from each other before carrying out bleeding procedure.


1. Fully extend the actuator by hand.
2. Add fluid in the actuator, see table.

ACTUATOR FILLING	
FLUID TYPE	QUANTITY
ATF Dexron III	Approximately 40 ml (1.35 U.S. oz)

3. Maintain actuator with threaded hole upwards and:
 - 3.1 Compress the actuator by precisely 15 mm (19/32 in).
 - 3.2 Fill until fluid reaches the top of the threads.
 - 3.3 Install hose with **NEW** sealing washers as shown.

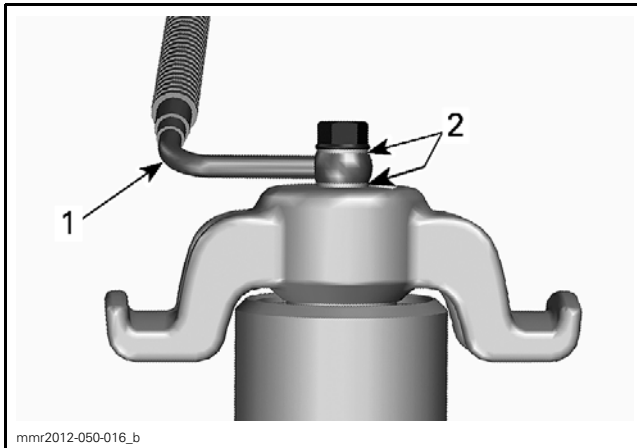

1. Hose
2. Sealing washers

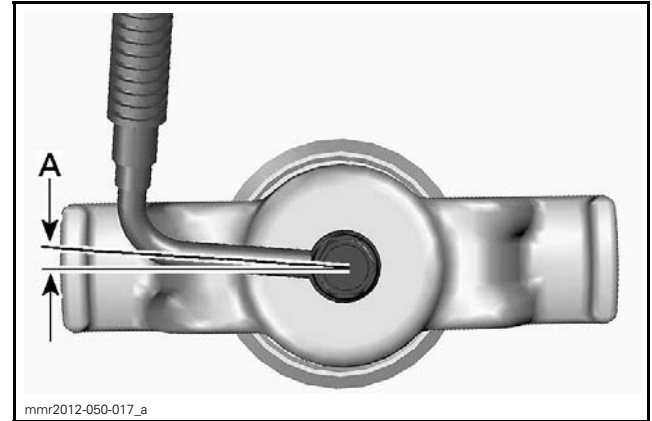


A. 5°

TIGHTENING TORQUE	
Banjo bolt	24.5 N•m ± 3.5 N•m (18 lbf•ft ± 3 lbf•ft)

4. With the hose open end up, compress the actuator by precisely 8 mm (5/16 in).

NOTE: Fluid should reach the open end of the hose.

5. Unscrew the control cylinder adjustment rod until it stops.
6. Using a small diameter punch through the M10 threaded hole, push the control cylinder piston all the way back.
7. With the threaded hole up, fill control cylinder until fluid reaches the top of the threads.
8. Install the hose on the control cylinder as shown.

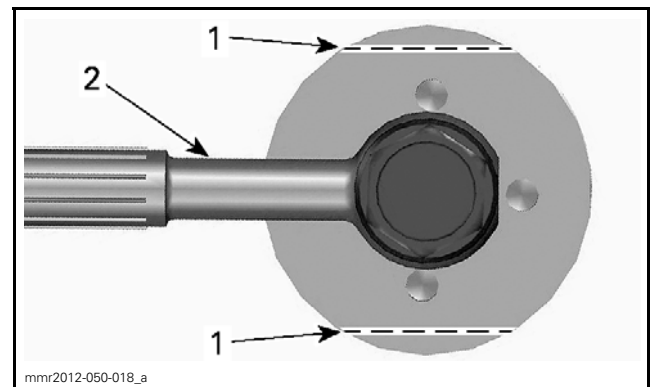

1. Notches
2. Hose

NOTE: The hose must on be the opposite side of the decal on the control cylinder.

TIGHTENING TORQUE	
Banjo bolt	24.5 N•m ± 3.5 N•m (18 lbf•ft ± 3 lbf•ft)

Subsection XX (REAR SUSPENSION (rMOTION))

9. Verify system operation. The actuator full stroke should be 22 mm (7/8 in).

Spring Preload Quick Adjuster System Installation


Installation is the reverse of removal procedure, however, pay attention to the following:

Set the preload to the minimum using the control cylinder adjustment rod first.

REAR AXLE


Rear Axle Removal

1. Lift rear of vehicle and support it off the ground.
2. Remove rear idler wheel caps.

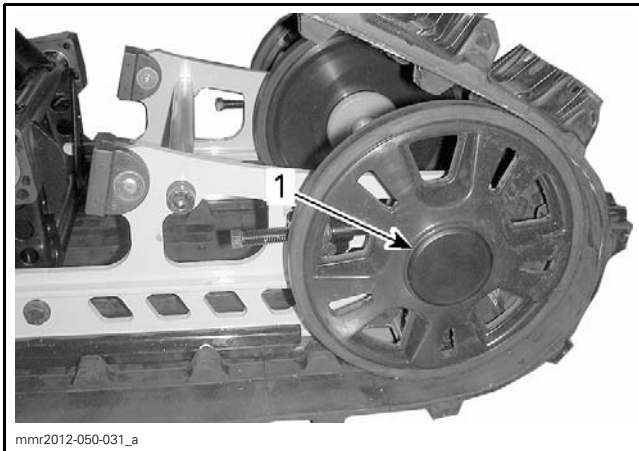


1. RH rear idler wheel cap

3. Loosen rear axle screws (one each side).

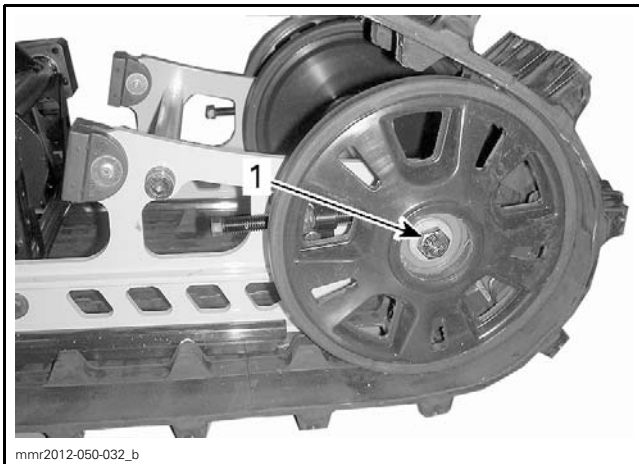

1. RH rear axle screw


4. Completely loosen track tension by unscrewing both adjustment screws.

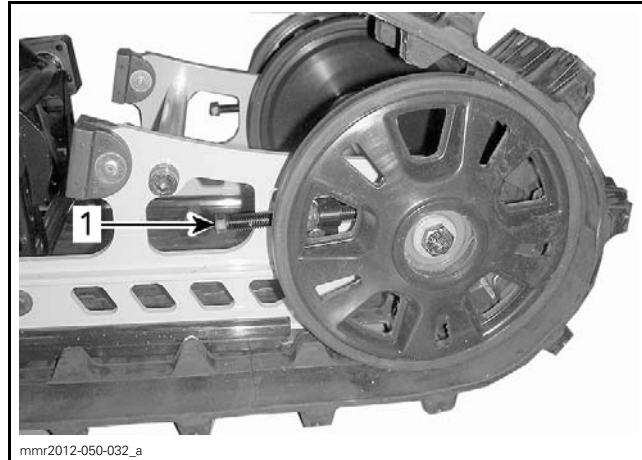

1. RH adjustment screw

5. Remove both rear axle screws.

6. Remove rear idler wheels, seals and wheel spacers.

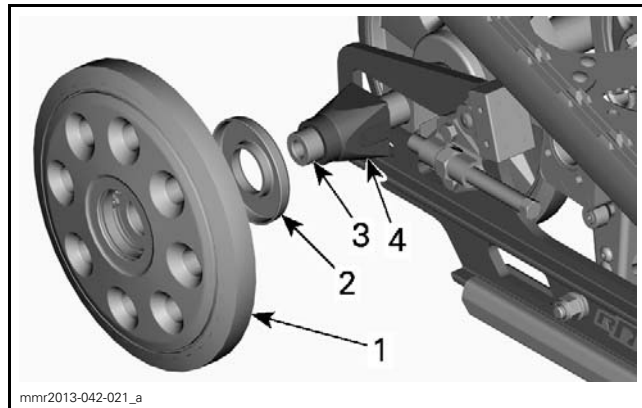

TYPICAL - RH SIDE SHOWN


1. Rear idler wheel
2. Seal
3. Rear axle
4. Wheel spacer

7. Pull out the rear axle.

Rear Axle Installation


Installation is reverse of removal procedure. However, pay attention to the following.

Make sure to position all parts correctly.

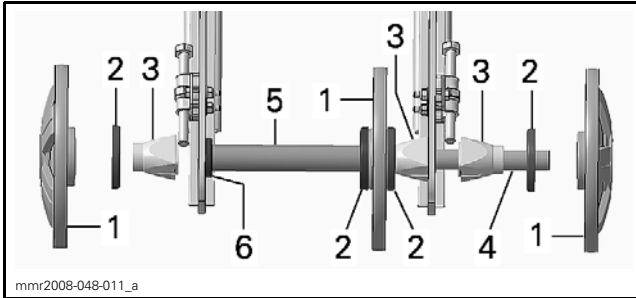

TYPICAL - 3 IDLER WHEELS LAYOUT


1. Idler wheels
2. Seals
3. Wheel spacers
4. Rear axle
5. Rear axle spacer
6. Washer

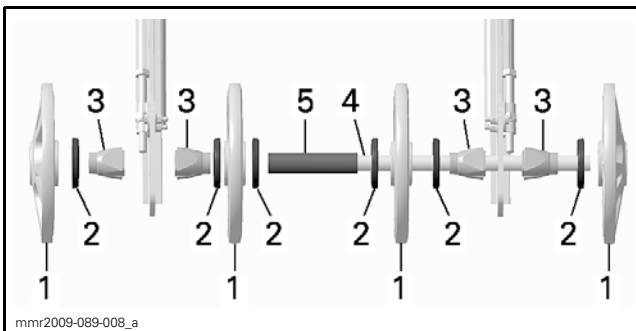

TYPICAL - 4 IDLER WHEELS LAYOUT

1. Idler wheels
2. Seals
3. Wheel spacers
4. Rear axle
5. Rear axle spacer


Position wheel spacers with a flat side up and a groove facing tensioner screw.

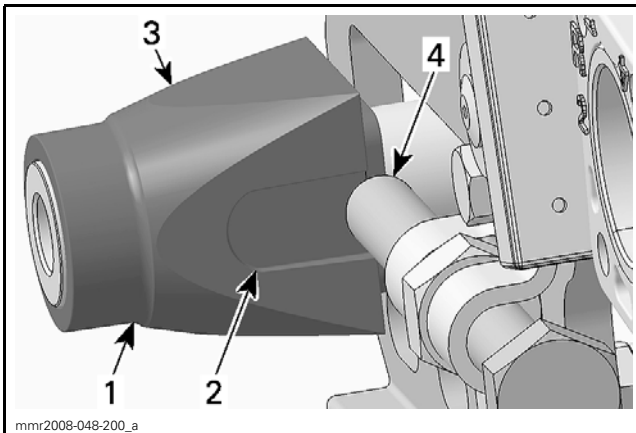

TYPICAL

1. Wheel spacer
2. Groove
3. Flat side
4. Tensioner screw

When tightening rear axle, make sure each wheel spacer protuberance is engaged into rail slot.

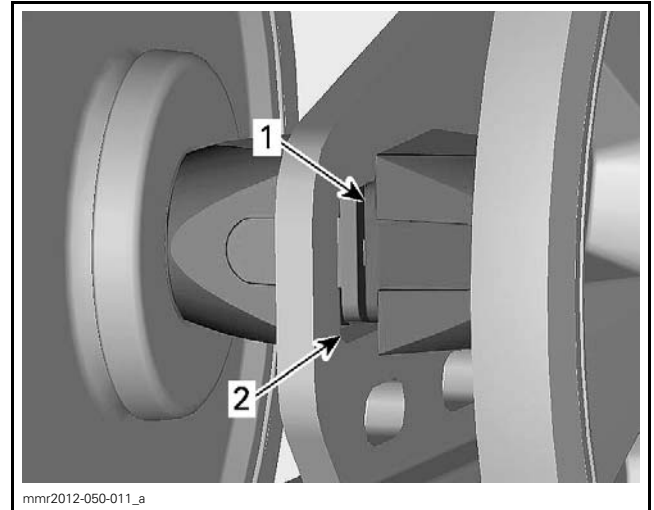

1. Wheel spacer protuberance
2. Rail slot

Adjust track tension. Refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

SHOCK ABSORBERS

Rear Shock Absorber Removal

1. Lift rear of vehicle and support it off the ground.


rMotion with Quick Adjust System

2. Carry out *SHOCK DAMPING QUICK ADJUSTER CONTROL MODULE REMOVAL*, see procedure in this subsection.

All Models

3. Remove the upper bolt.

NOTE: It may be necessary to lower the vehicle and slightly compress suspension to remove load.

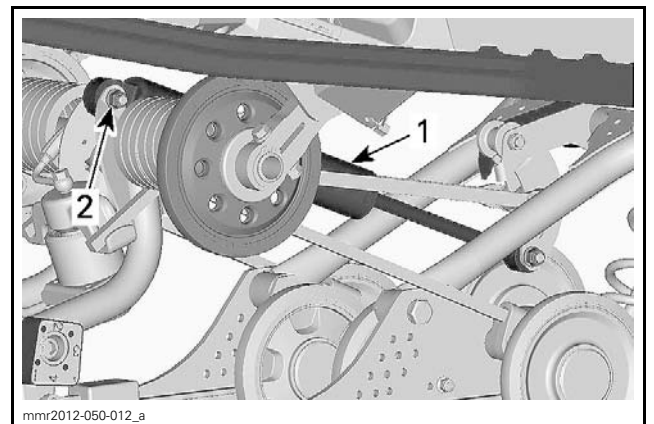


TYPICAL

1. Rear shock absorber
2. Upper bolt

4. Remove the lower bolt.

Subsection XX (REAR SUSPENSION (rMOTION))

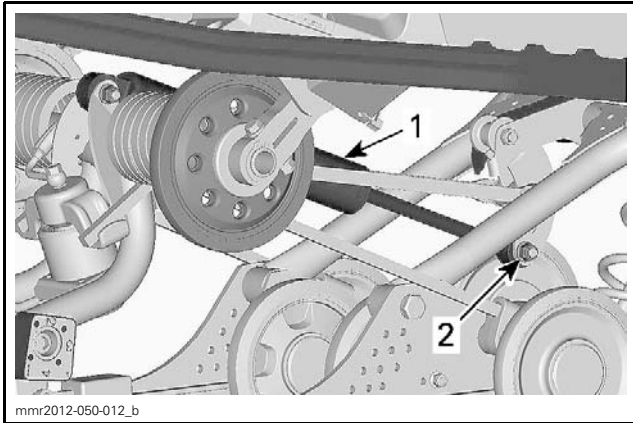

TYPICAL
 1. Rear shock absorber
 2. Lower bolt

5. Remove rear shock absorber from the vehicle.

Rear Shock Absorber Installation

Installation is reverse of removal procedure. However, pay attention to the following.

REAR SHOCK ABSORBER POSITIONING	
rMotion quick with adjust system	Body up hose on RH side
rMotion quick without adjust system	Body up reservoir downwards

Install **NEW** shock absorber retaining nuts and tighten to specified torque.


TIGHTENING TORQUE	
Shock absorber retaining bolts	24.5 N•m ± 3.5 N•m (18 lbf•ft ± 3 lbf•ft)

rMotion with Quick Adjust System

Carry out **SHOCK DAMPING QUICK ADJUSTER CONTROL MODULE INSTALLATION**.

Center Shock Absorber Removal


1. Lift the rear of vehicle and support it off the ground.
2. Unfasten stopper strap.

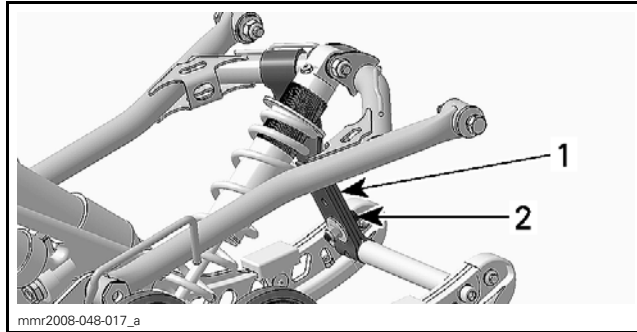

TYPICAL
 1. Stopper strap
 2. Stopper strap bolt

3. Remove idler wheels to access lower retaining bolt.

4. Remove shock retaining bolts.

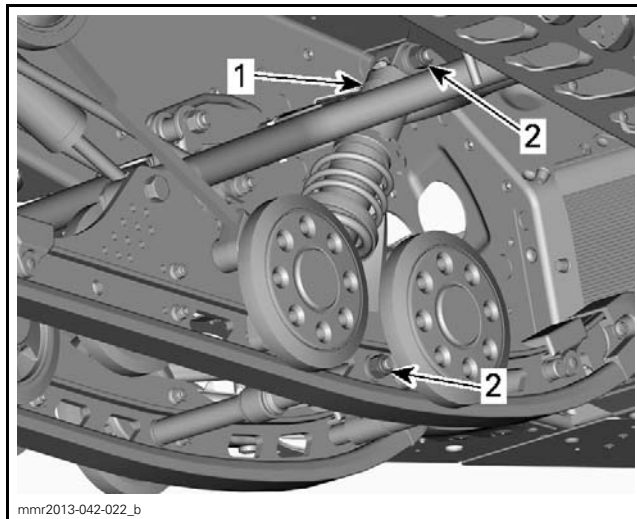

TYPICAL
 1. Center shock absorber
 2. Retaining bolts

5. Remove shock absorber from vehicle.

Shock Absorber Inspection

NOTE: All types of shock absorbers are covered in this topic, refer to **TECHNICAL SPECIFICATIONS** to identify the shock absorber relating to the vehicle model.

NOTE: Unless otherwise noted, shock absorber must be at normal room temperature (21°C ± 2°C (70°F ± 36°F)) during inspection.


MC Hydraulic Shock

1. Perform a visual inspection of the shock:
 - The shock must be exempt of any dent or scratch, especially on the rod.
 - Small dent on the shock body may not affect any performance or reliability of this shock.

- Any defect on the rod, as small as it is, can lead to seal failure and oil leak.
- If such defect (on rod) is detected, the shock must be replaced, and this will not be covered under warranty.

2. Secure the shock body end in a vise, clamping on eyelet, with its rod upward.

NOTICE Do not clamp directly on shock body.

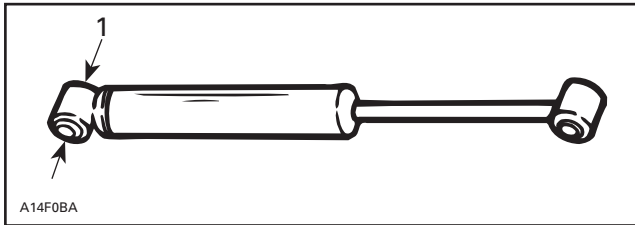

1. Shock body eyelet

3. Examine shock for leaks. Extend and compress the piston at least 5 complete strokes with its rod upward.

4. Check that shock moves smoothly and with uniform resistance over its entire stroke.

NOTE: For the first 5 complete strokes, it could be normal to note uneven resistance.

5. Check the following conditions that will denote a defective shock:

- A skip or a hang back when reversing stroke at mid travel.
- Seizing or binding condition except at extreme end of either stroke.
- Oil leakage.
- A gurgling noise, after completing one full compression and extension strokes.

6. If suspecting a shock is freezing, place shock in a freezer (temperature below 0°C (32°F)) for 4 hours.

7. Push down on rod and note its resistance. If shock is frozen it will be much more difficult to compress than one in normal condition.

8. If any faults are present, replace shock.

All HPG™ Shock (Including KYB PRO Series)

1. Perform a visual inspection of the shock:
 - The shock must be exempt of any dent or scratch, especially on the rod.
 - Any defect on the rod, as small as it is, can lead to seal failure and oil leak.
 - If such defect is detected, the shock must be replaced and this will not be covered under warranty.

2. Completely push down shock rod into the body and check result as per table.

HPG SHOCK	RESULT
All except 551 mm (21-11/16 in) rear shock	The rod should completely get in the shock body
551 mm (21-11/16 in) rear shock	The stroke must be at least 138 mm (5-7/16 in)

NOTE: For the HPG Variable Rate Shock, it should be stiff for approximately the first 25 mm (1 in), then softer for about 50 mm (2 in), and stiffer again. This stiff/soft/stiff phenomenon shows the normal operation of VR shock.

3. Release shock from completely collapsed position and check result as per table.

HPG SHOCK EXCEPT VARIABLE RATE
<ul style="list-style-type: none"> - The shock should extend unassisted. - The rod must come out at a steady speed.


HPG VARIABLE RATE SHOCK
<ul style="list-style-type: none"> - The shock should extend unassisted. - Rod must come out slowly first, then faster and finally slow again for the last 25 mm (1 in).

4. Proceed with *SHOCK ABSORBER COMPRESSION TEST*. See procedure in this subsection.


5. If any faults are present, replace shock.

Shock Absorber Compression Test

1. Ensure shock absorber is at normal room temperature (21°C ± 2°C (70°F ± 36°F)).
2. Remove spring from shock absorber (if applicable).
3. Place a BENCH SCALE SUCH AS SALTER BRECKNELL (P/N PS 400) (or an equivalent) on a suitable drill press.
4. Install SHOCK ABSORBER SUPPORTS (P/N 529 036 186) onto drill press.

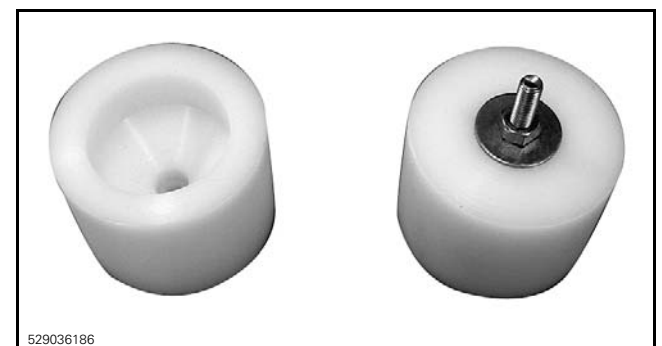


Subsection XX (REAR SUSPENSION (rMOTION))

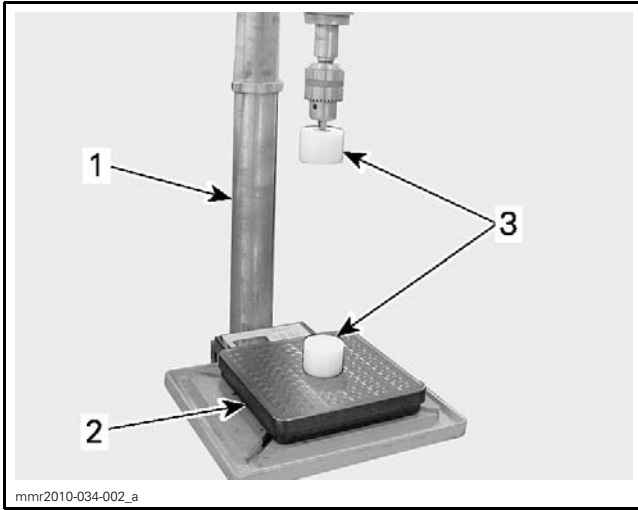


1. Drill press
2. Bench scale
3. Shock absorber supports

5. Set bench scale units to kg (or lb).
6. Press **TARE** to reset digits (must indicate (0) zero).

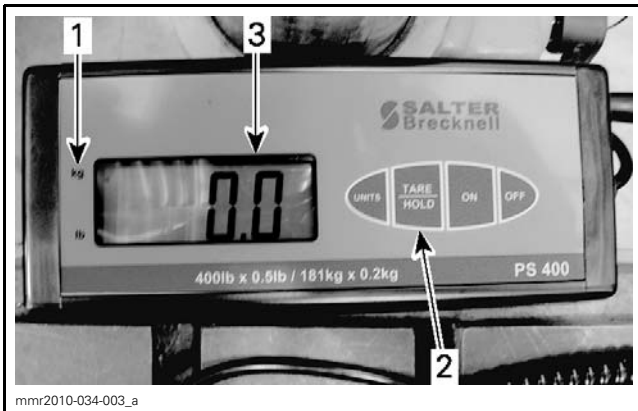


1. Units indicator lamp
2. TARE button
3. Digits

7. Install shock absorber into support with shock body upwards.
8. Adjust drill press table height in order to set the upper shock support flush with the shock body end.
9. Ensure shock absorber is aligned with drill press axis.

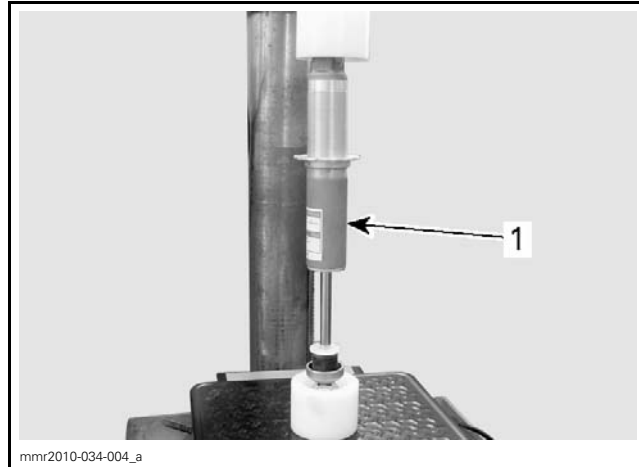

1. Shock body upwards

10. Set the drill press displacement to 10mm (.394 in) using locking nut.

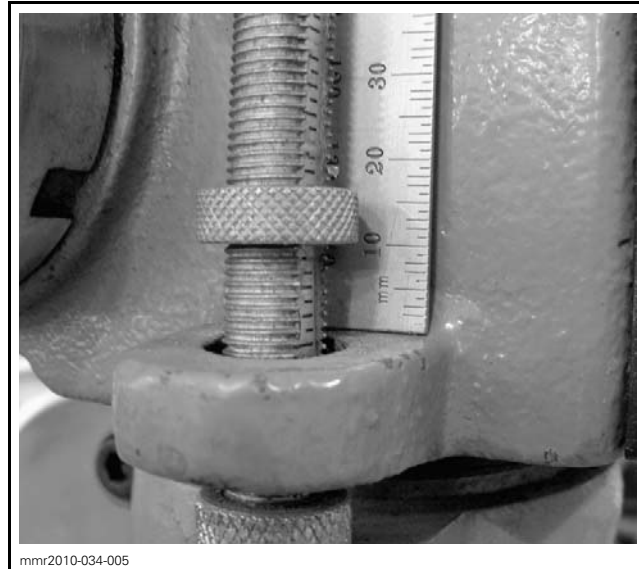

11. Compress shock absorber by 10 mm (.394 in) and hold it in position.
12. Read load recorded on the bench scale.



13. Load reading must be as per the following table.


MODEL	ROD DIAMETER	SERVICE RANGE
All HPG VR/Plus/Plus R	12.5 mm (1/2 in)	24 kgf ± 4 kgf (53 lbf ± 9 lbf)
All HPG KYB PRO	16 mm (5/8 in)	39 kgf ± 5 kgf (86 lbf ± 11 lbf)

Center Shock Absorber Installation

Installation is reverse of removal procedure. However, pay attention to the following.

CENTER SHOCK ABSORBER POSITIONING	
HPG Plus	Body up Valve upwards
KYB PRO	Body up Reservoir on the RH side

TIGHTENING TORQUE	
Upper bolt	48 N•m ± 6 N•m (35 lbf•ft ± 4 lbf•ft)
Lower bolt	70 N•m ± 10 N•m (52 lbf•ft ± 7 lbf•ft)

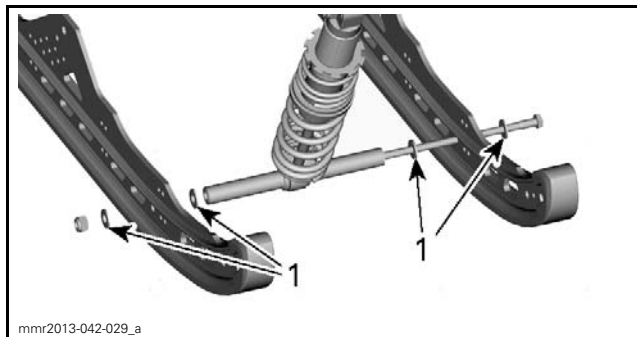

BOTTOM OF SHOCK ABSORBER
1. Washers location

REAR SPRINGS

Rear Spring Removal


1. Support the rear of vehicle just enough to remove load on the rear suspension.
2. Set rear spring preload to the minimum.

rMotion with Quick Adjust System

3. Remove quick adjuster control modules, refer to:
 - SHOCK DAMPING QUICK ADJUSTER SYSTEM
 - SPRING PRELOAD QUICK ADJUSTER SYSTEM.


All Models

4. Remove rear arm connecting rod retaining screws.

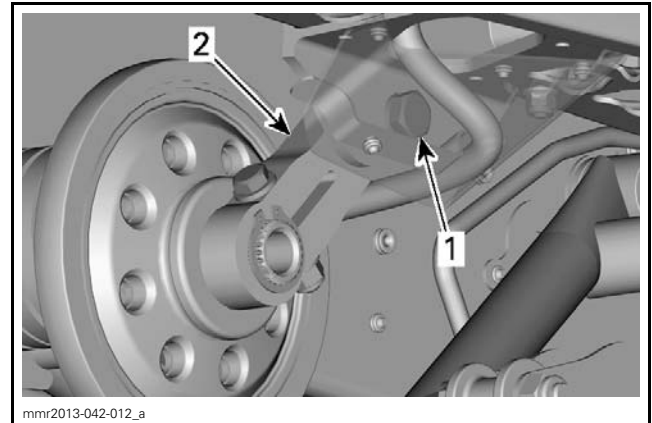

1. Connecting rod retaining screw
2. Connecting rod


REQUIRED TOOL	
RMOTION SUSPENSION TOOL (P/N 529 036 234)	

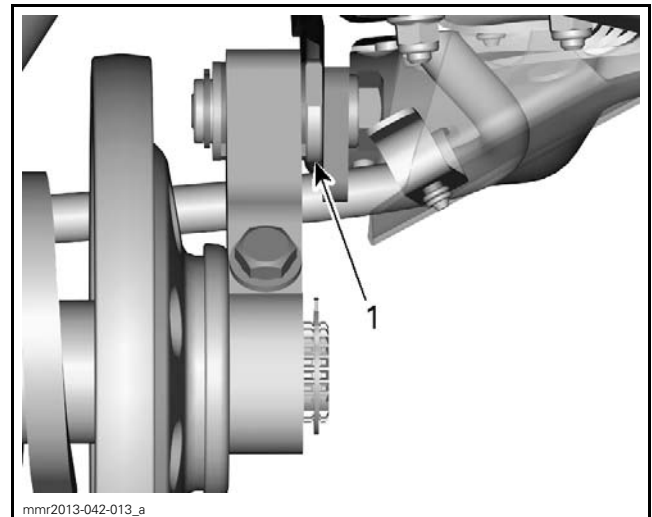

1. *rMotion* suspension tool to be installed here

5. Remove idler wheels to have access to spring support screws.


Subsection XX (REAR SUSPENSION (rMOTION))

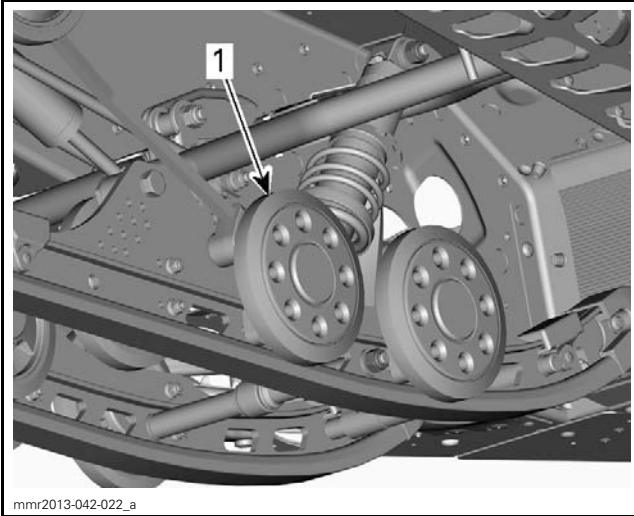

1. Idler wheel to be removed (on each side)

6. Firmly hold the spring supports and remove spring support bolts.

CAUTION Spring supports are spring loaded.

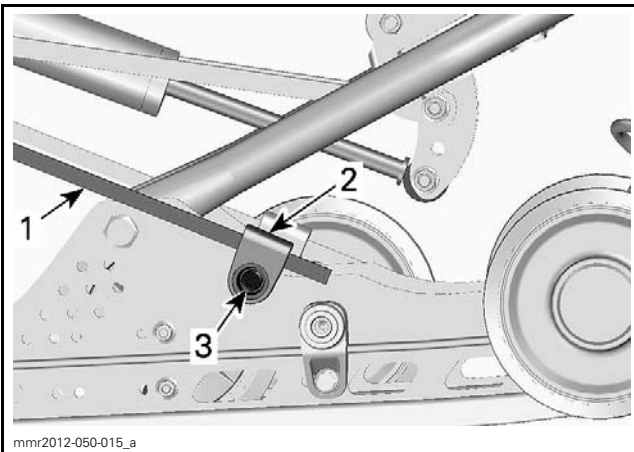

1. Spring
2. Spring support
3. Spring support bolt

7. Move spring supports with spring ends over the idler wheel supports and let them sit on the track.

NOTE: If the springs are still loaded, completely loosen track tension in order to make room to unload springs.

8. Raise and support the rear of vehicle just enough to clear the rear arm connecting rods.


NOTICE rMotion with Quick Adjust system: Avoid stretching the hoses.

9. Remove connecting rods from the rear arm.

9.1 Loosen bolt.

9.2 Remove circlip.

9.3 Pull connecting rod off the rear arm.

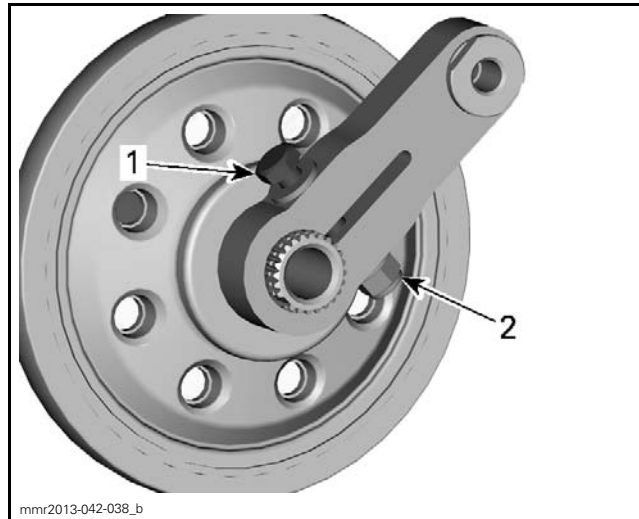

1. Retaining screw
2. Bolt


10. Remove upper idler wheels and hardware.

11. Remove rear spring from suspension.

Rear Spring Installation


Installation is reverse of removal procedure. However, pay attention to the following.

Make sure that spring end is in cam adjuster or actuator spring support.

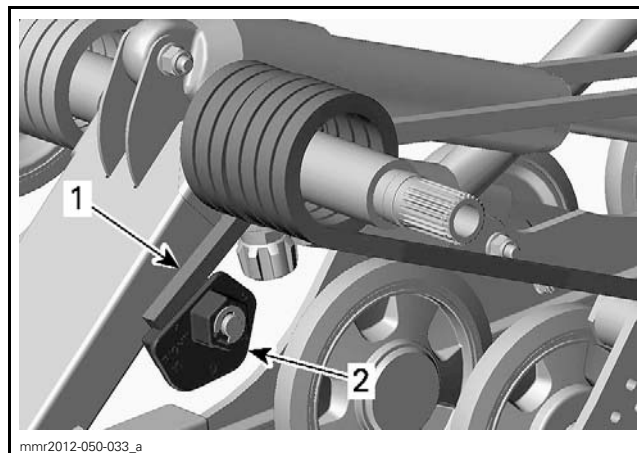


MODELS WITHOUT QUICK-ADJUST

1. Rear spring
2. Cams

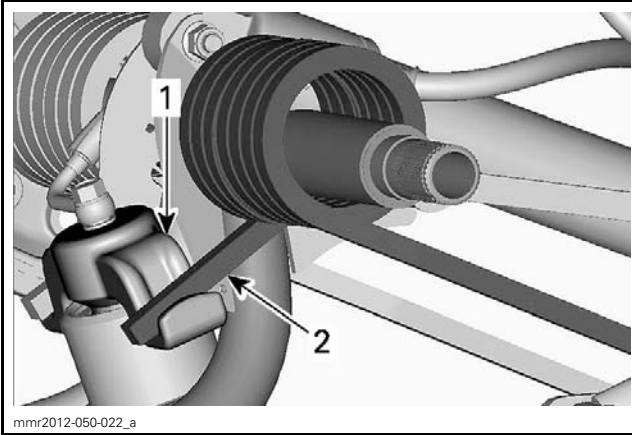


QUICK-ADJUST MODELS
 1. Actuator spring support
 2. Rear spring

Install spring supports upwards.

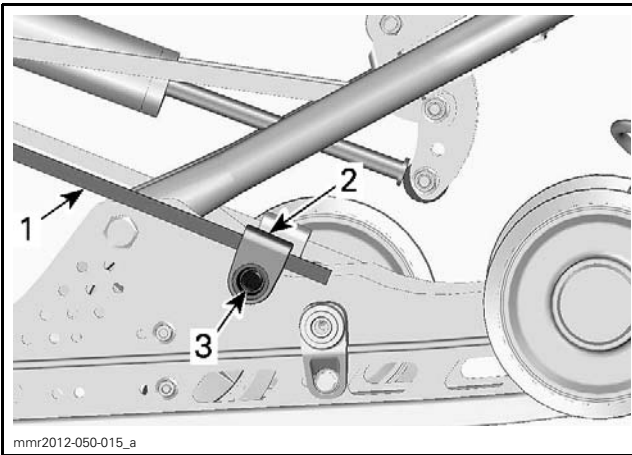

1. Spring
 2. Spring support
 3. Spring support bolt

Install rear arm connecting rod inserts with the shoulder outwards.

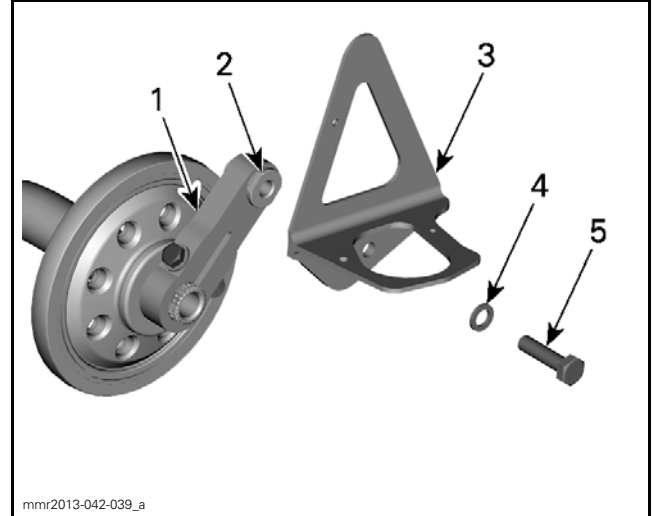

1. Connecting rod
 2. Insert with the shoulder outwards
 3. Support
 4. Washer
 5. Retaining screw

rMotion with Quick Adjust System


Install quick adjuster control modules, refer to:

- SHOCK DAMPING QUICK ADJUSTER SYSTEM
- SPRING PRELOAD QUICK ADJUSTER SYSTEM.

SLIDER SHOES

Slider Shoe Removal

1. Lift rear of vehicle and support it off the ground.
2. Completely loosen track tension by unscrewing both adjustment screws.

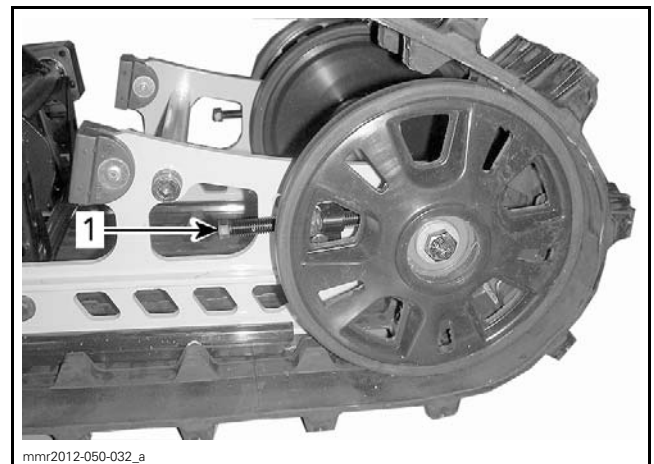

1. RH adjustment screw


3. Remove nut and screw of each runner.

Subsection XX (REAR SUSPENSION (rMOTION))



TYPICAL - REMOVE NUT AND SCREW OF EACH RUNNER

4. At the rear of vehicle, align a track window with slider shoe.

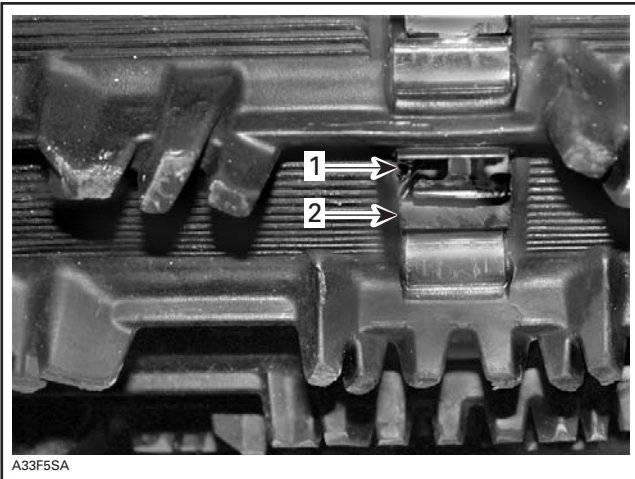

TYPICAL
1. Track window
2. Slider shoe

5. Lubricate widow edges.
6. Using a pry bar or a screwdriver, push slider shoe rearward until it comes in contact with track.



TYPICAL - PUSH ON SLIDER SHOE

7. Using locking pliers, pull slider shoe through track window to remove.



TYPICAL - PULL ON SLIDER SHOE TO REMOVE

Slider Shoe Installation


Installation is reverse of removal procedure. However, pay attention to the following.

Make sure to insert slider shoe end with hole first.

FRONT ARM

Front Arm Removal

1. Proceed with *SUSPENSION ASSEMBLY REMOVAL*. See procedure in this subsection.
2. Unfasten stopper strap.
3. Remove the following fasteners:
 - Center shock to front arm.
 - Front arm to rocker.
 - Front arm to rail.

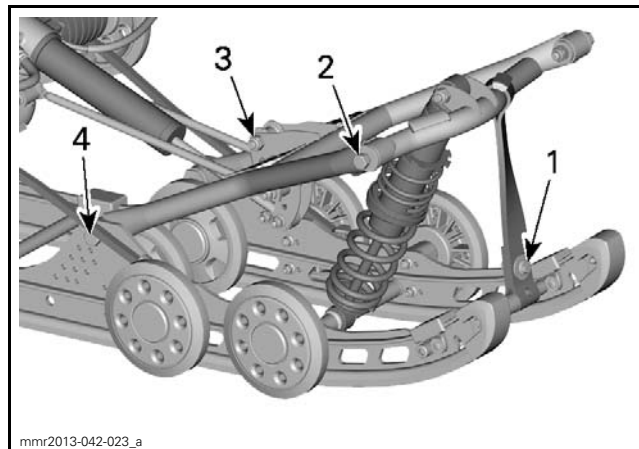


TYPICAL
1. Stopper strap bolt
2. Center shock to front arm bolt
3. Front arm to rocker bolt
4. Front arm to rail screw

4. Remove front arm from suspension assembly.

Front Arm Installation

Installation is reverse of removal procedure. However, pay attention to the following.

Install front arm to rail fasteners as shown.

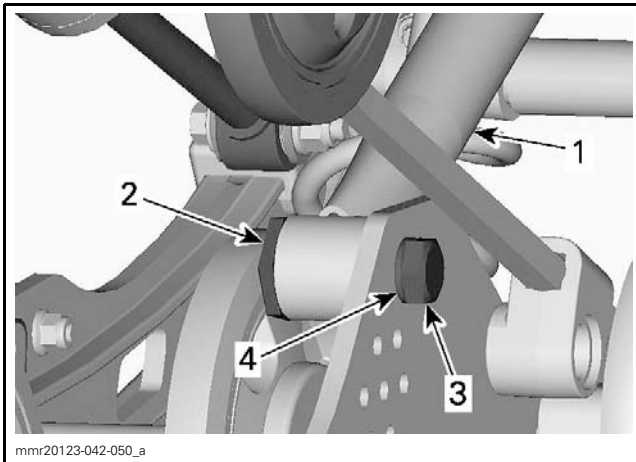

1. Front arm
2. Insert (shoulder inward)
3. Front arm to rail screw
4. Washer

Install stopper strap on the LH side of the vehicle.

NOTICE Incorrect stopper strap installation would cause suspension parts interference.


REAR ARM

Rear Arm Removal

1. Remove rear springs, refer to *REAR SPRING REMOVAL* in this subsection.


NOTE: On Quick Adjust models, set the spring preload actuator aside.

2. Remove the following fasteners:
 - Rear shock to rear arm.
 - Rear arm to throttle rods.
 - Coupling blocks retaining screws.

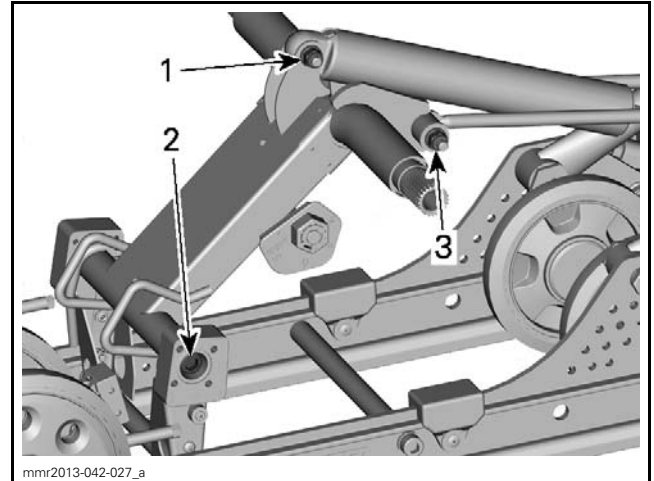

MODELS WITHOUT QUICK ADJUST SYSTEM

1. Rear shock to rear arm bolt
2. Coupling blocks retaining screw
3. Rear arm to throttle rods bolt

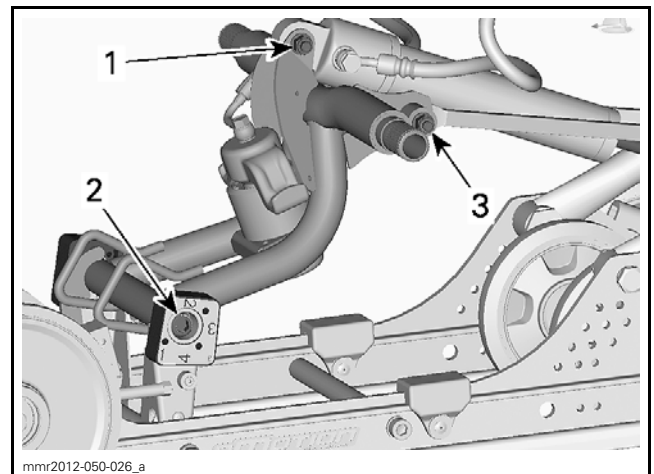

QUICK ADJUST SYSTEM

1. Rear shock to rear arm bolt
2. Coupling blocks retaining screw
3. Rear arm to throttle rods bolt

3. Remove rear arm from the vehicle.

Rear Arm Installation

Installation is the reverse of removal procedure. However, pay attention to the following.

rMotion without Quick Adjust System


Place rear arm grease fitting towards the front of the vehicle.

All Models

Install coupling block with **NEW** socket screws.

Install upper idler wheels as shown.


Subsection XX (REAR SUSPENSION (rMOTION))

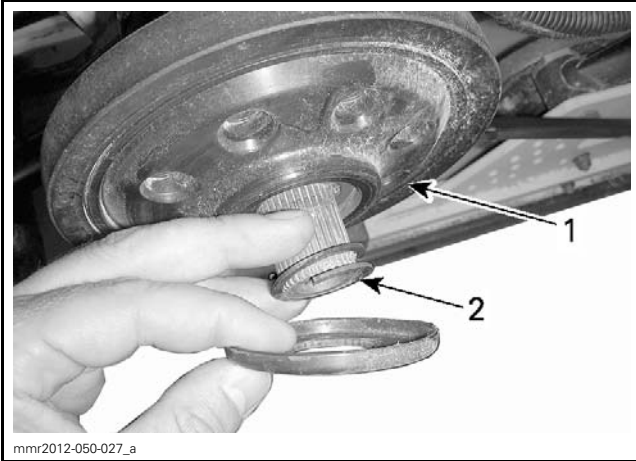

1. Convex side out
2. Spring between wheel and plastic cover

Install rear arm connecting rod inserts with the shoulder outwards.

Install circlip.

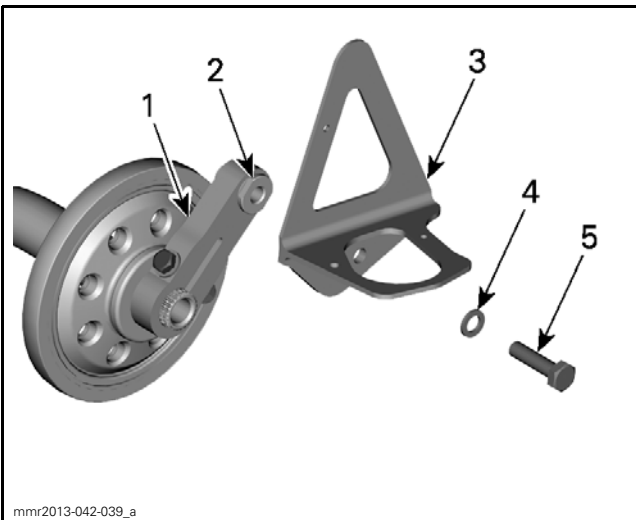

1. Connecting rod
2. Shoulder outwards
3. Support
4. Washer
5. Retaining screw

Install **NEW** connecting rod retaining screws.

TIGHTENING TORQUE	
Connecting rod retaining screw	61 N•m ± 9 N•m (45 lbf•ft ± 7 lbf•ft)
Connecting rod center retaining screw	24.5 N•m ± 3.5 N•m (18 lbf•ft ± 3 lbf•ft)


Lubricate rear arm pivot. Refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

PIVOT ARM

Pivot Arm Removal

1. Lift rear of vehicle and support it off the ground.

2. Completely loosen track tension by unscrewing both adjustment screws.
3. Set the rear springs preload to the minimum.
4. Remove rear spring supports.
5. Remove the following fasteners:
 - Coupling blocks retaining screws
 - Pivot arm to rails bolt.

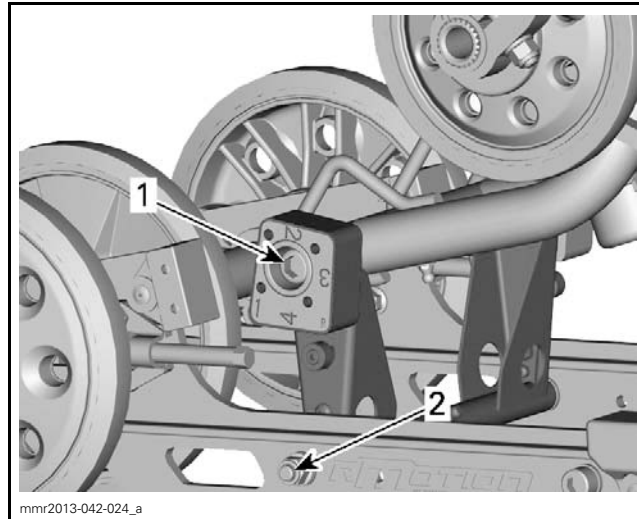

TYPICAL

1. Coupling block screw
2. Pivot arm to rails bolt

6. Carefully remove pivot arm from rear arm.

Pivot Arm Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

Install **NEW** coupling block screws.


Install pivot arm with the grease fitting towards front of the vehicle.

Lubricate pivot arm. Refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

COUPLING BLOCKS

Coupling Blocks Removal and Installation

LH and RH coupling blocks are different. There is a molded "R" (RH side) or "L" (LH side) on the back face of the coupling blocks.

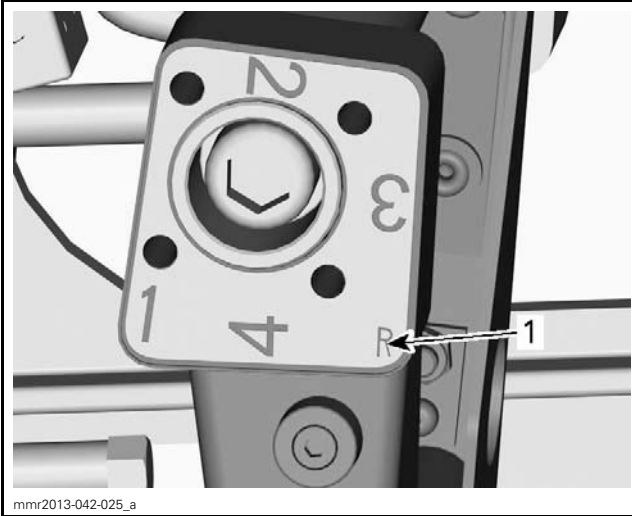


1. Side identification

Install **NEW** coupling block screws.

Set the coupling blocks to the same position on both sides.

MODELS	FACTORY BLOCK POSITION
All models	1

Fit riveted pin through coupling block.

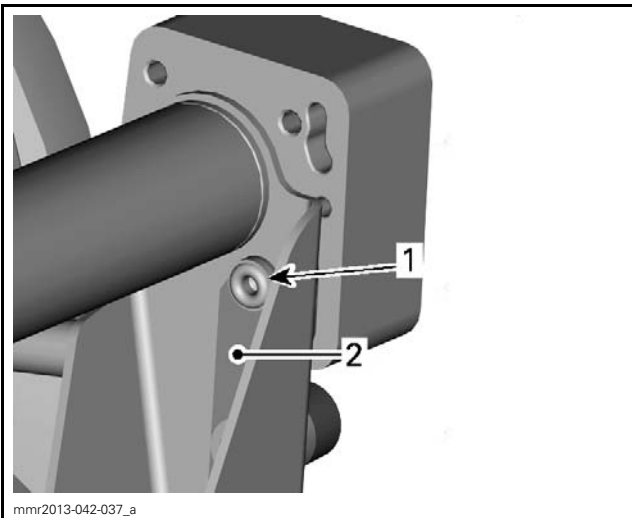

TYPICAL
 1. Riveted pin
 2. Spring pin

IDLER WHEELS AND SUPPORTS

Idler Wheels Removal and Installation

Refer to the exploded views at the beginning of this subsection for parts layout and fasteners tightening torque.

STOPPER STRAP

Refer to the exploded views at the beginning of this subsection for parts layout and fasteners tightening torque.

NOTICE Incorrect stopper strap installation would cause suspension parts interference.



REAR SUSPENSION (tMOTION)

RAILS AND IDLER WHEELS




Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

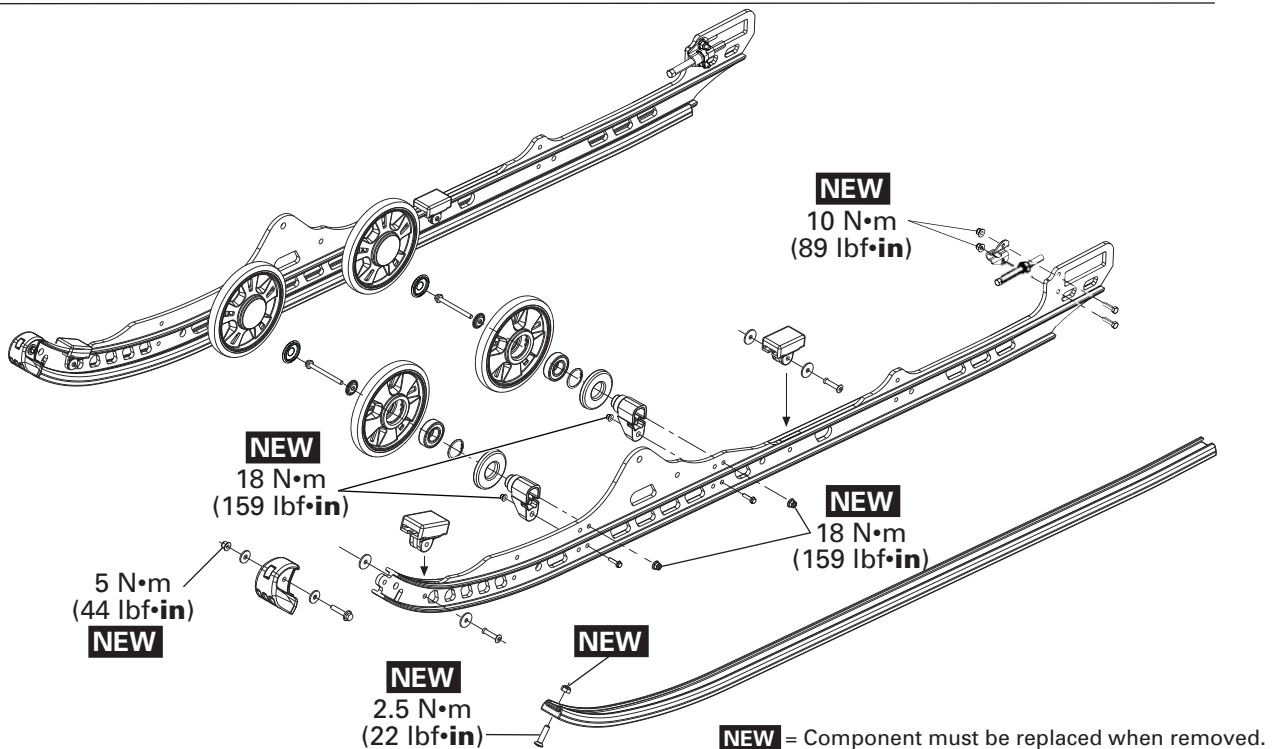
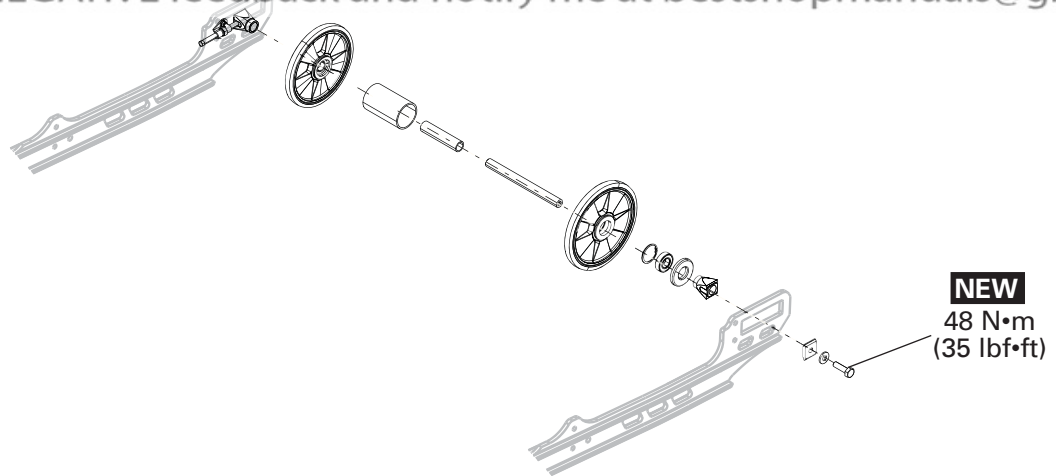


mmr2013-043-101_a

FRONT ARM

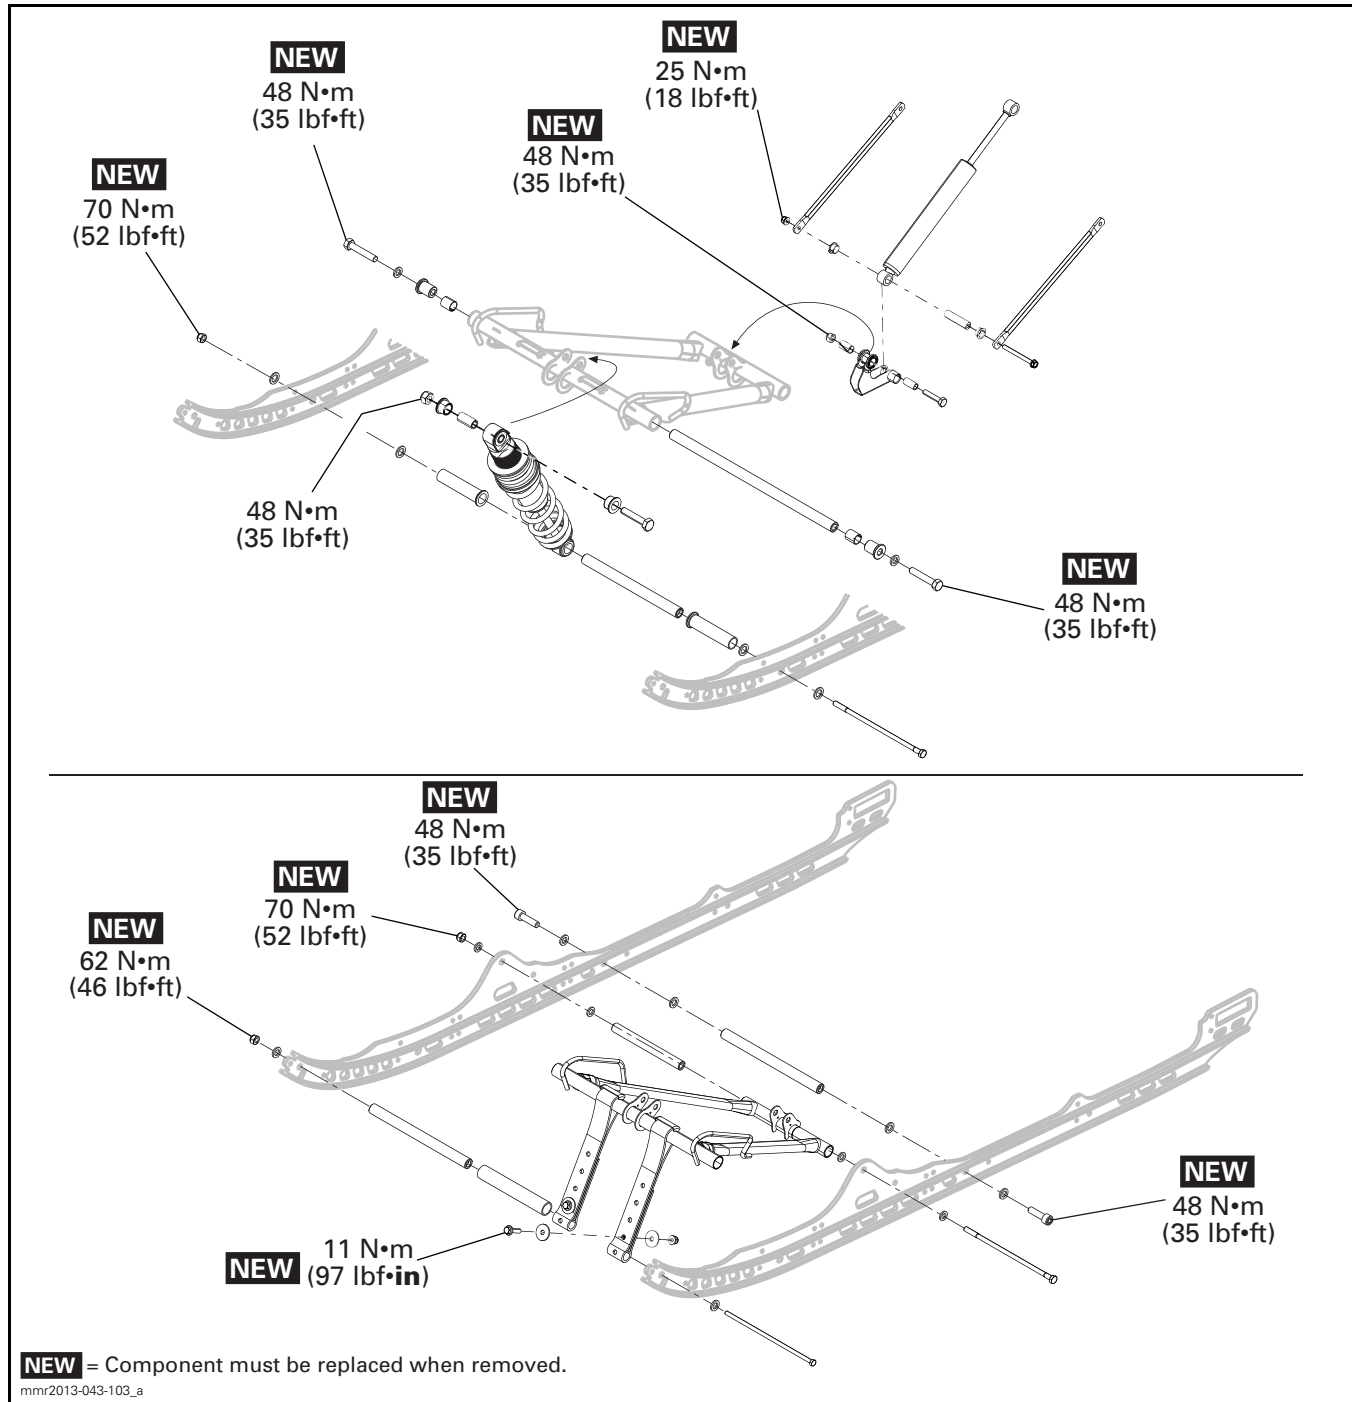


REAR ARM

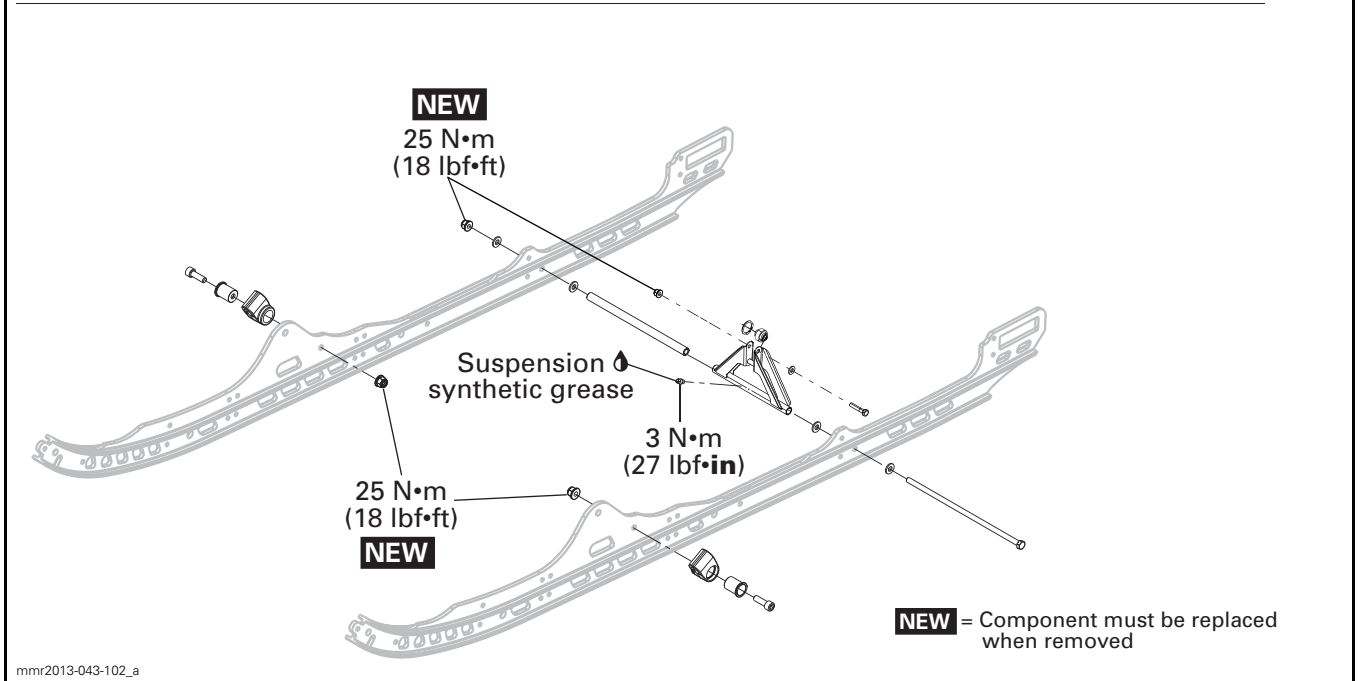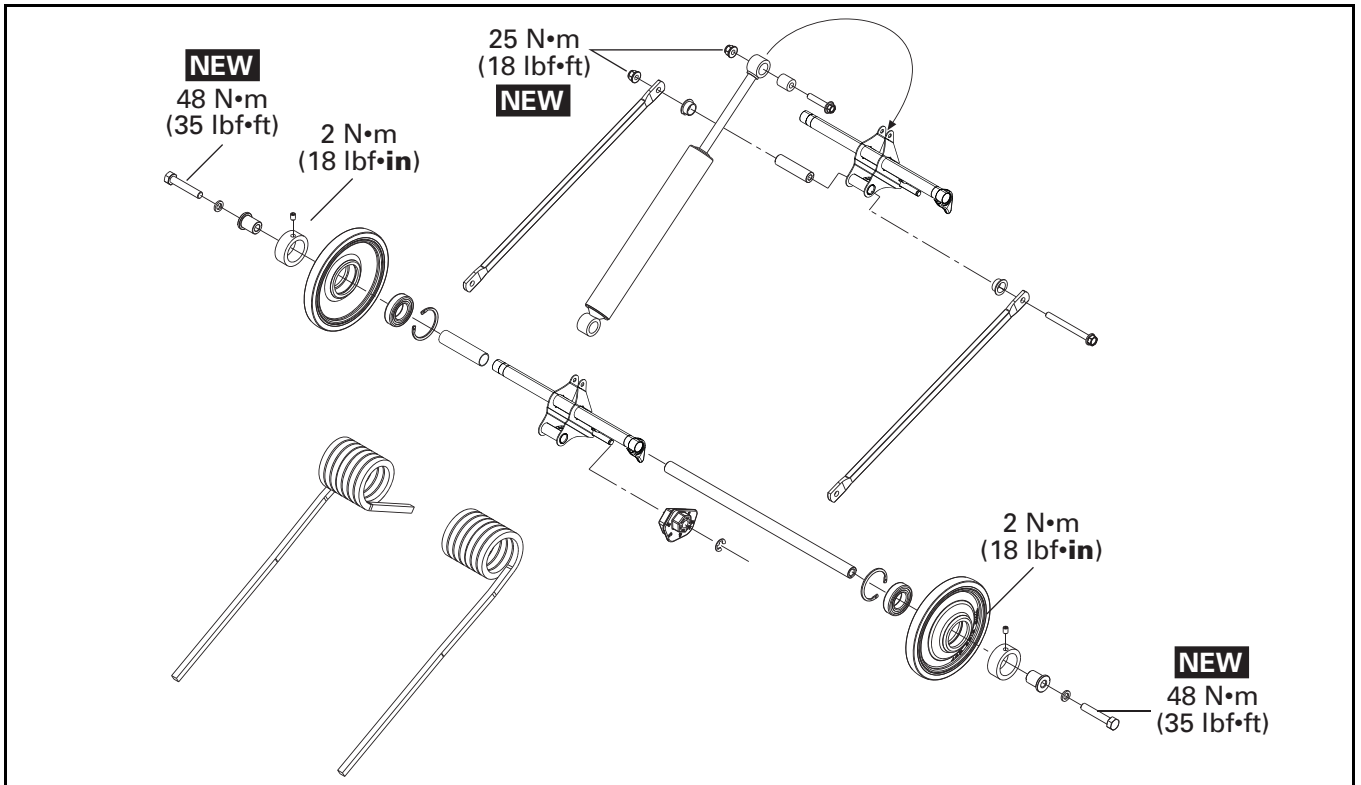

mmr2013-043-102_a

SHOCK ABSORBERS

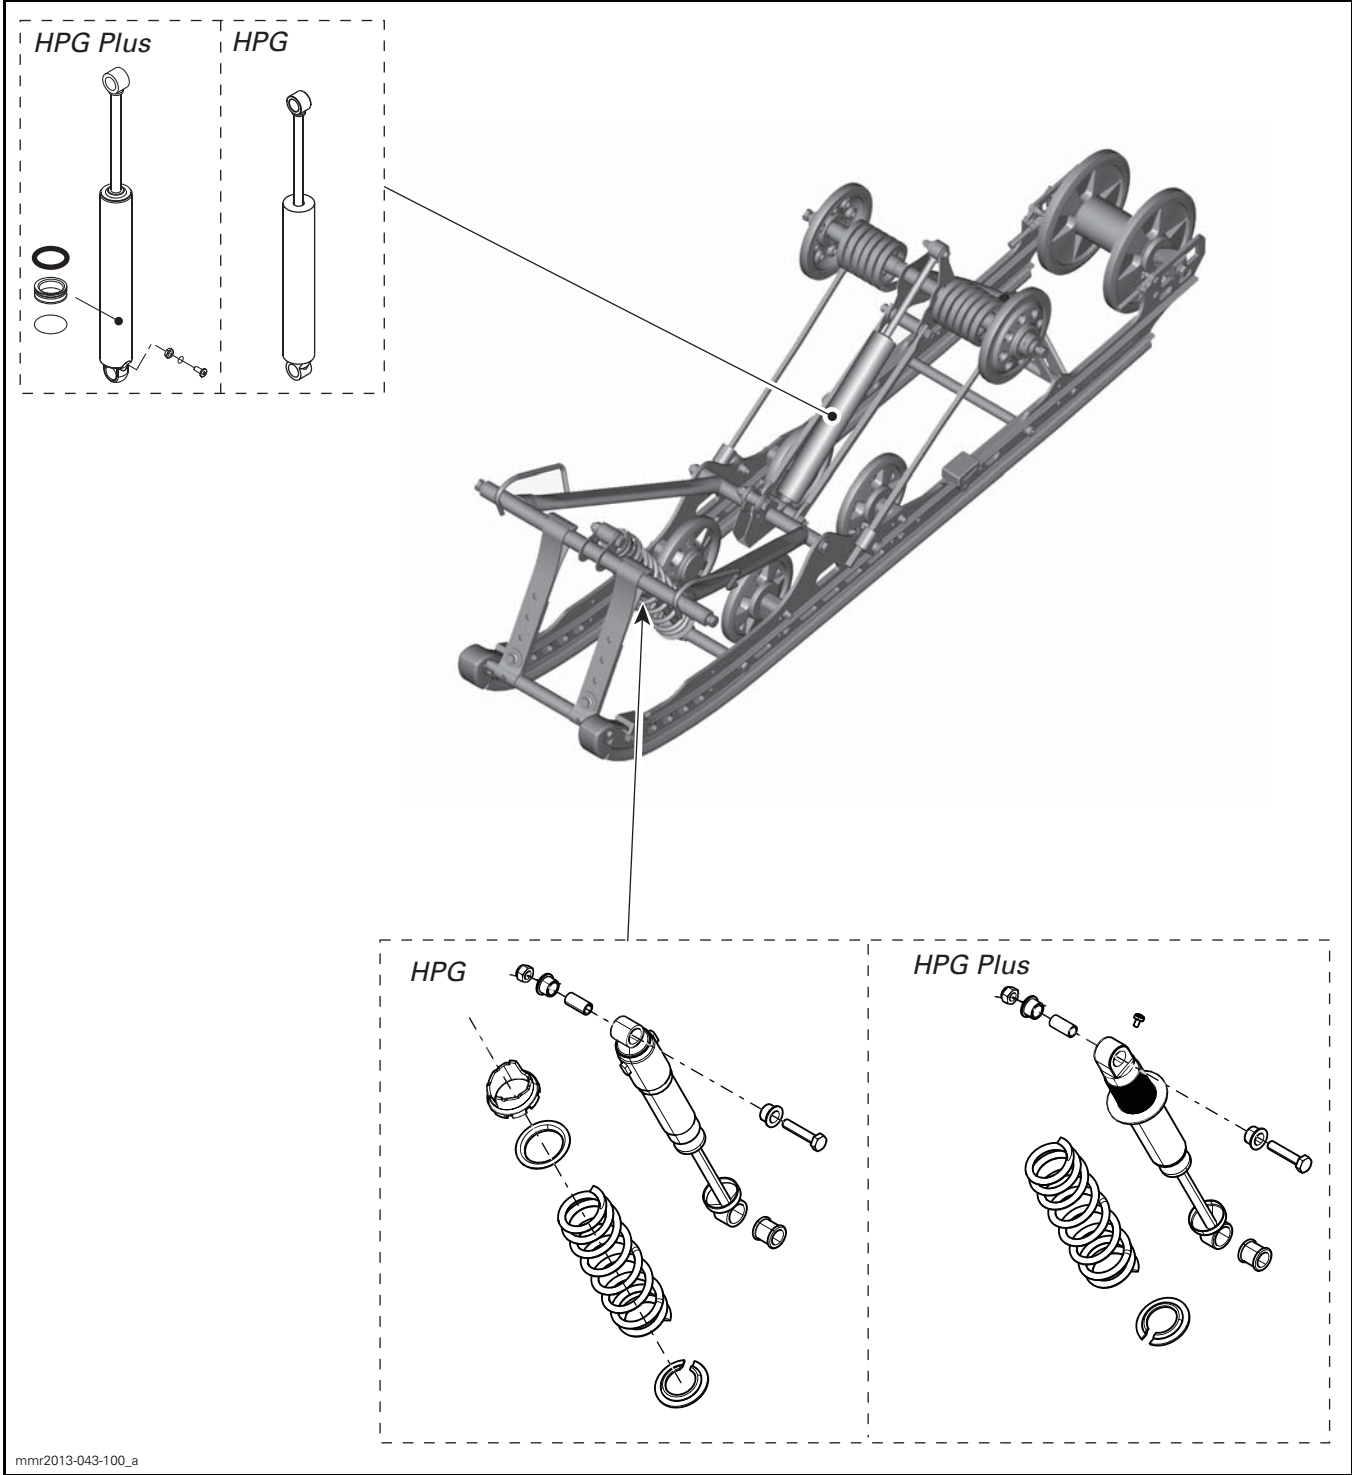

mmr2013-043-100_a

GENERAL

NOTE: Refer to *TECHNICAL SPECIFICATIONS* to identify the snowmobile suspension type.

During assembly/installation, use torque values and service products as in the exploded views.


Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, cotter pins, etc.) must be replaced.

ADJUSTMENT

REAR SUSPENSION ADJUSTMENTS

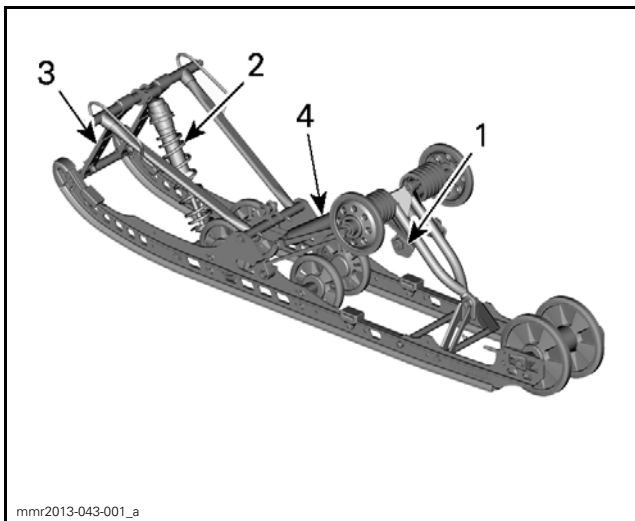

TYPICAL - ADJUSTABLE COMPONENTS

1. Rear springs
2. Center spring
3. Stopper strap
4. Rear shock absorber

NOTICE Whenever adjusting rear suspension, check track tension and adjust if necessary.


Stopper Strap

Stopper strap length has an effect on the amount of weight the center spring has to carry especially during acceleration, therefore on the front end up-lift.

Stopper strap length also has an effect on center spring travel.

NOTICE Whenever stopper strap length is changed, track tension must be checked.

ACTION	RESULT
Increasing stopper strap length	Lighter ski pressure under acceleration
	More center spring travel
	More bump absorption capability
Decreasing stopper strap length	Heavier ski pressure under acceleration
	Less center spring travel
	Less bump absorption capability

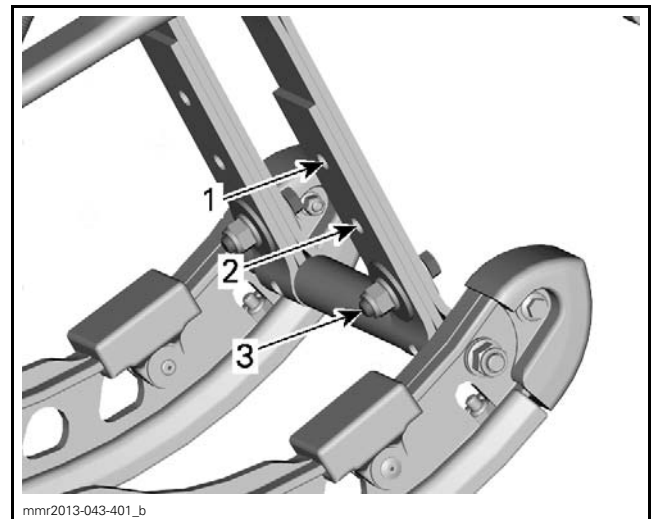

TYPICAL

1. Position 1 (longest)
2. Position 2
3. Position 3 (factory setting)
4. Position 4 (not shown)
5. Position 5 (not shown - shortest)

NOTE: Position 4 and 5 hidden on this illustration. Always install stopper strap bolt as close as possible to the lower shaft.

When operating the snowmobile in deep snow or hill climbing, it may be necessary to vary stopper strap length and/or riding position, to change the angle at which the track rides on the snow. Operator's familiarity with the various adjustments as well as snow conditions will dictate the most efficient combination.

Generally, a longer stopper strap setting gives better performance in deep snow on a flat landscape and a shorter setting will improve handling in steep hill climbing conditions.

Subsection XX (REAR SUSPENSION (tMOTION))


STOPPER STRAP SETTING	
POSITION	USE
1	Not used
2	Boon docking: – Better boon docking manoeuvrability – Better bump absorption – Better deep snow starts (forward and reverse)
3	Factory setting: Best overall setting (General use)
4	Hill climb: – Better track attack angle for hill climbing
5	Steep hill climb: – Better track attack angle for hill climbing – Less transfer – Lower ride height

Center Spring

Center spring preload has an effect on steering effort, handling and bump absorption.

Also, since center spring preload adjustment puts more or less pressure on the front of the track, it has an effect on the performance in deep snow.

ACTION	RESULT
Increasing preload	Lighter steering
	More bump absorption capability
	Better deep snow starts
	Better deep snow performance and handling
Decreasing preload	Heavier steering
	Less bump absorption capability
	Better trail handling

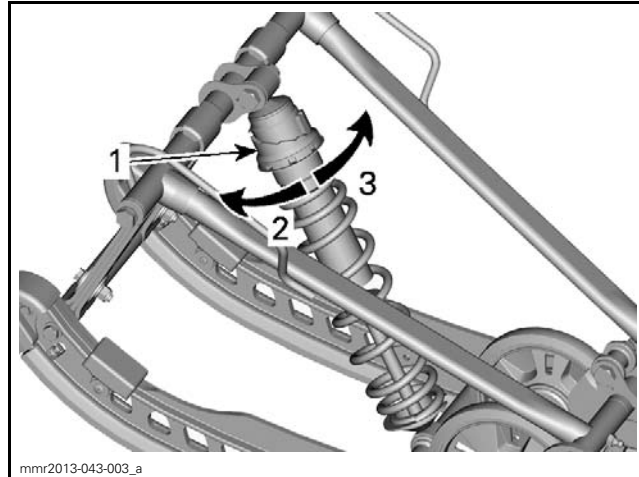

CAM TYPE SHOWN - HPG™ SHOCK ABSORBER

1. Spring preload adjustment cam
2. Decrease preload
3. Increase preload

NOTE: Use the suspension adjustment tool provided in the tool kit.

Rear Springs


Rear spring preload has an effect on comfort, ride height and load compensation.

Also, adjusting rear spring preload shifts more or less weight to the snowmobile front end. As a result, more or less weight is applied to the skis. This has an effect on performance in deep snow, steering effort and handling.

Slight suspension bottoming occurring under the worst riding conditions indicates a good choice of spring preload.

ACTION	RESULT
Increasing preload	Firmer rear suspension
	Higher rear end
	More bump absorption capability
	Heavier steering
Decreasing preload	Softer rear suspension
	Lower rear end
	Less bump absorption capability
	Lighter steering
	Better deep snow performance and handling

Refer to the following to determine if preload is correct.

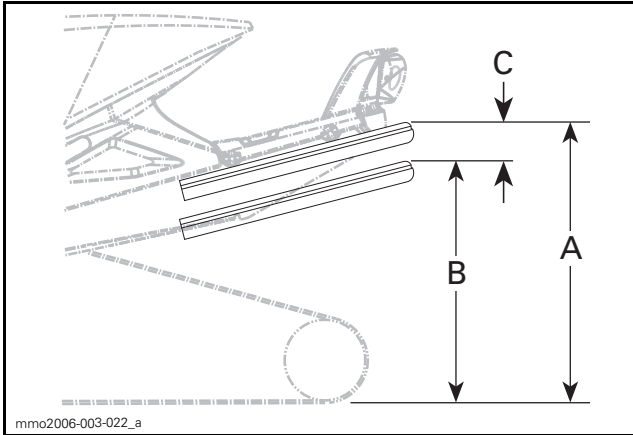

TYPICAL — PROPER ADJUSTMENT

- A. Suspension fully extended
- B. Suspension has collapsed with operator, passenger and load added
- C. Distance between dimension "A" and "B", see table below


146/154/163" MODELS	
"C"	WHAT TO DO
65 mm to 100 mm (2.5 in to 4 in)	No adjustment required
More than 100 mm (4 in)	Adjusted too soft. Increase preload
Less than 65 mm (2.5 in)	Adjusted too firm. Decrease preload

NOTE: If the specification is unattainable with the original springs, refer to the applicable *SPRING CHART* bulletin for other available springs.

NOTICE To increase spring preload, always turn the left side adjustment cam in a clockwise direction, and the right side cam in a counter-clockwise direction.


CAUTION Never set preload cams directly from position 5 to 1 or directly from position 1 to 5.

The adjustment cams have 5 different settings, 1 being the softest.

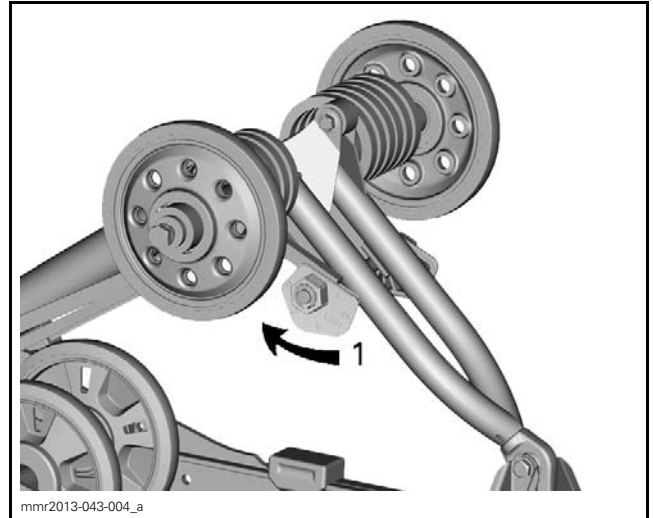

TYPICAL — LH SIDE

- 1. Adjust spring preload

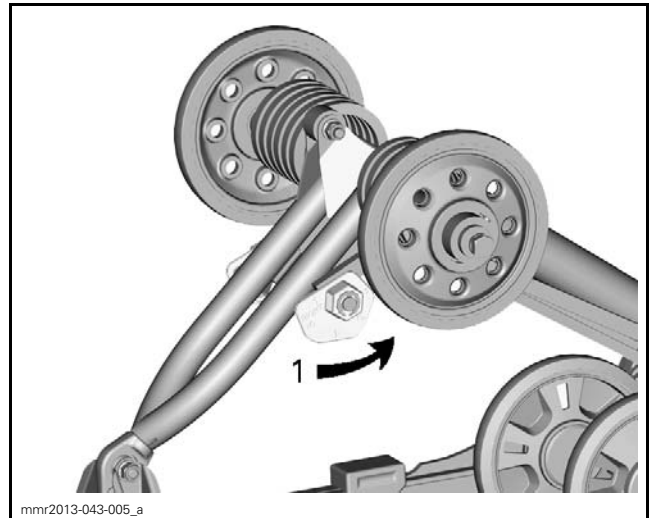

TYPICAL — RH SIDE

- 1. Adjust spring preload

MAINTENANCE

For rear suspension lubrication, mechanism and stopper strap inspection, refer to *PERIODIC MAINTENANCE PROCEDURES*.

For shock absorbers inspection, refer to *SHOCK ABSORBERS* in this subsection.

PROCEDURES

NOTE: Many parts can be changed with rear suspension in place. When specified, refer to *SUSPENSION ASSEMBLY* to remove rear suspension from vehicle.


SUSPENSION ASSEMBLY

Suspension Assembly Removal

- 1. Lift rear of vehicle and support it off the ground.

Subsection XX (REAR SUSPENSION (tMOTION))


2. Completely loosen track tension.
3. Remove and discard rear arm bolts from chassis. Use the following procedure to remove bolts easily.
 - 3.1 Unscrew one of the socket screws securing the rear arm to frame.

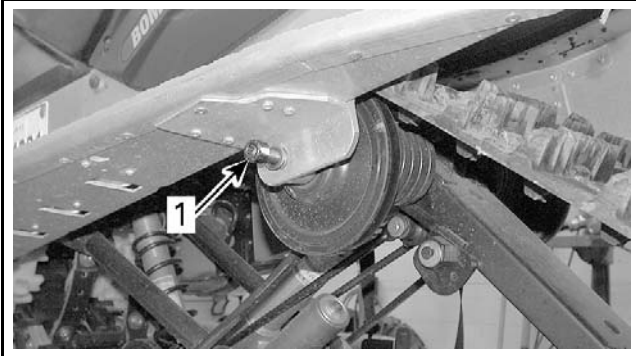

mnr2007-051-007_b

- TYPICAL**
1. Socket bolt

- 3.2 Replace this socket screw with an hexagonal bolt (longer than socket screw) and a nut.
- 3.3 Screw in the hexagonal bolt by approximately 7 turns.
- 3.4 Hold the hexagonal bolt and tighten locking nut.

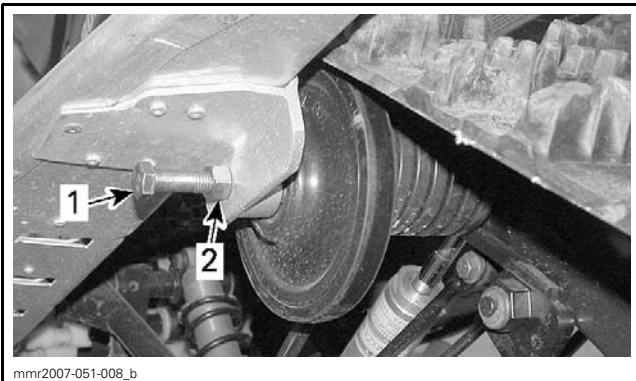


mnr2007-051-008_b

- TYPICAL**
1. Hexagonal bolt
2. Locking nut

- 3.5 Unscrew the socket screw on the other side then unlock nut and remove the hexagonal bolt.

4. Remove bolts retaining front arm to tunnel.


NOTE: Discard the front arm bolts.

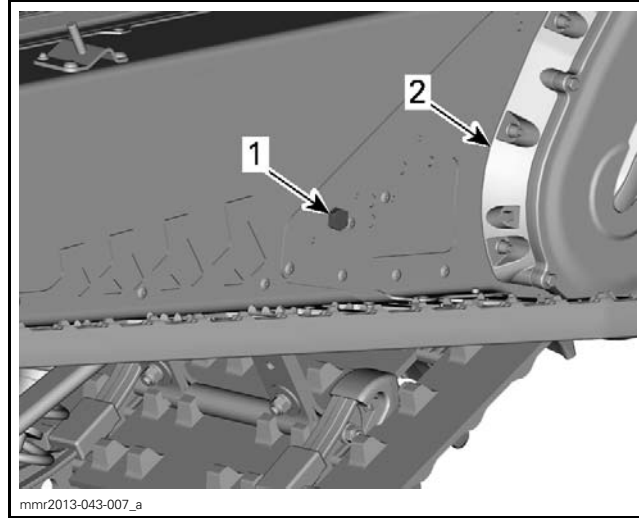

mnr2013-043-007_a


- TYPICAL**
1. Front arm bolt
2. Chaincase

5. Lift rear of vehicle until front arm as enough clearance to pass underneath tunnel.

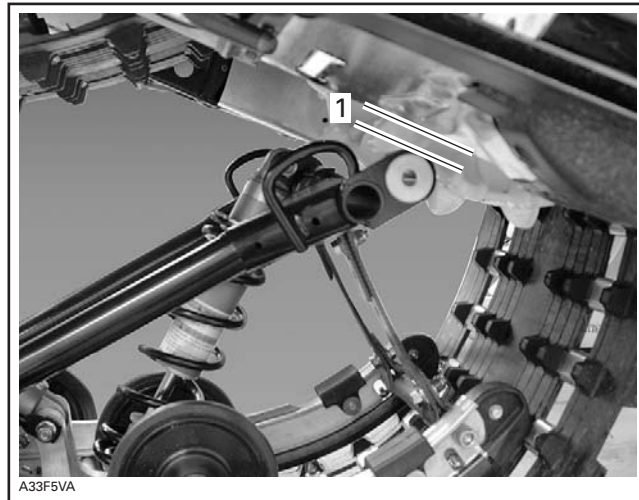

A33F5VA

- TYPICAL**
1. Enough clearance

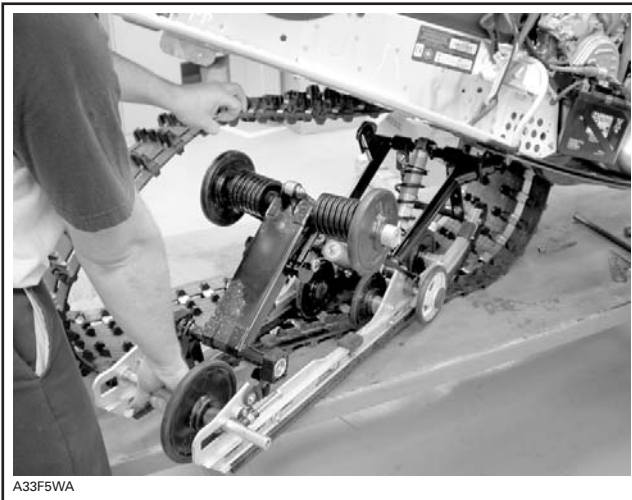

TYPICAL — REMOVE SUSPENSION

Suspension Assembly Installation

Installation is the reverse of removal procedure. Pay attention to the following.

Inspect track thoroughly before reinstalling suspension. Refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

Install suspension into track with front portion first.

Install **NEW** front arm nuts.

Install **NEW** rear arm screws.

Tighten screws to specified torque.


UPPER SUSPENSION ARM FASTENERS TIGHTENING TORQUE	
Front arm nuts	48 N•m (35 lbf•ft)
Rear arm screws	48 N•m (35 lbf•ft)

Adjust track tension, refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

REAR AXLE


Rear Axle Removal

1. Lift rear of vehicle and support it off the ground.
2. Loosen rear axle screws (one each side).
3. Completely loosen track tension by unscrewing both adjustment screws.

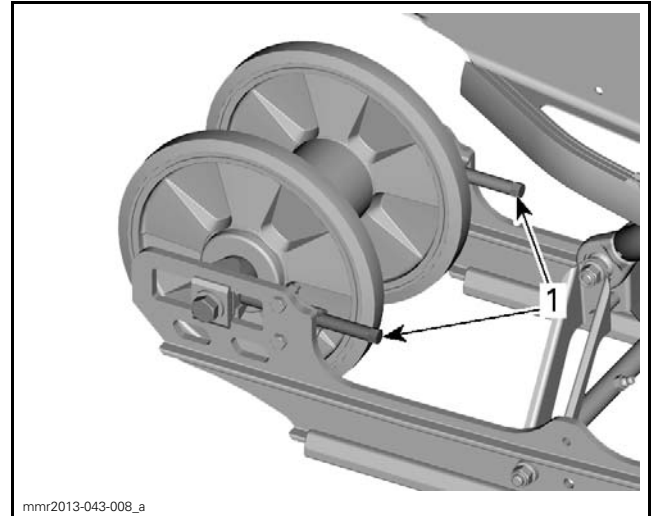

1. Adjustment screws

4. Remove both rear axle screws.
5. Remove rear idler wheels, seals and wheel spacers.

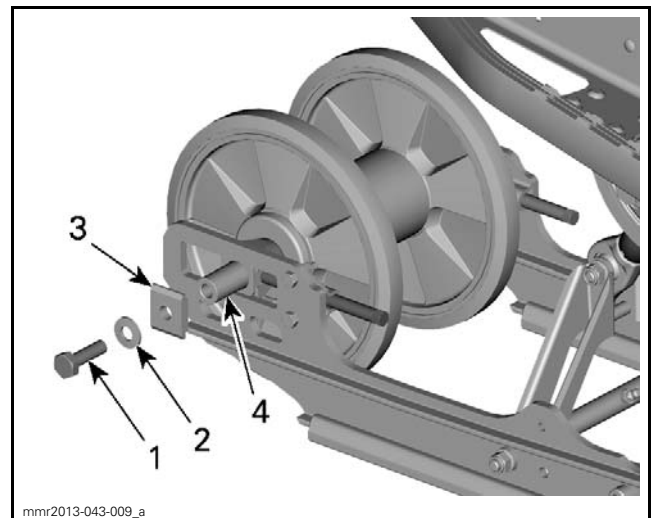

RH SIDE SHOWN

1. Retaining screw
2. Washer
3. Slider
4. Rear axle


6. Pull out the rear axle.
7. Remove spacer, washers and inner idler wheel(s).

Rear Axle Installation

Installation is the reverse of removal procedure. However, pay attention to the following.

1. Make sure to position all parts correctly.


Subsection XX (REAR SUSPENSION (tMOTION))

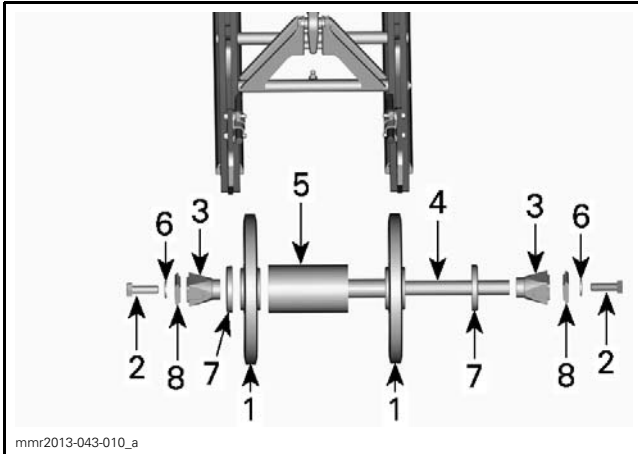

2 IDLER WHEELS LAYOUT


1. Idler wheels
2. Retaining screws
3. Slider
4. Rear axle
5. Rear axle spacer
6. Washers
7. Seals
8. Slider

2. Position wheel spacers with a flat side up and a groove in front of tensioner screw.

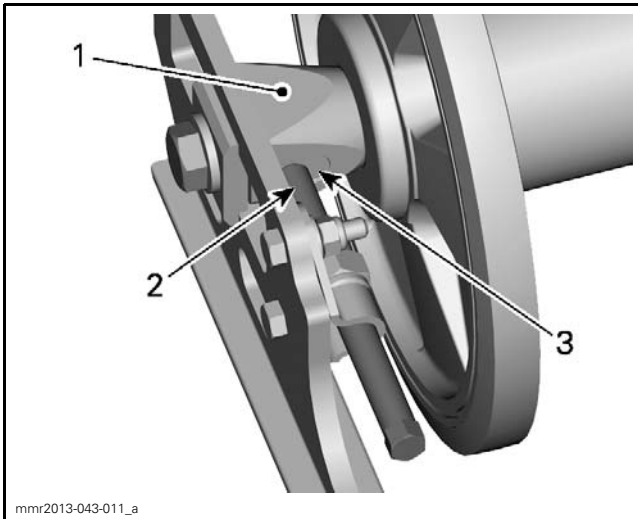

1. Flat side of wheel spacer
2. Tensioner screw
3. Tensioner screw

NOTE: When tightening rear axle, make sure each wheel spacer protuberance is engaged into runner slot.

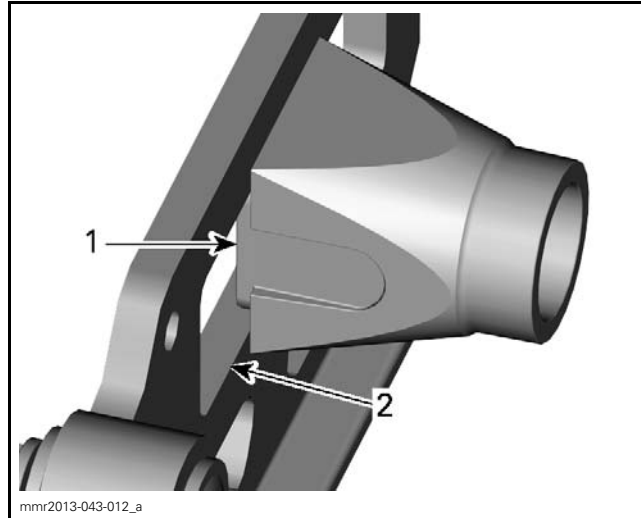


1. Wheel spacer protuberance
2. Runner slot

3. Adjust track tension. Refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

SHOCK ABSORBERS

Rear Shock Absorber Removal


1. Lift rear of vehicle and support it off the ground.
NOTE: If necessary, to ease shock removal, unfasten stopper strap to release shock pressure.
2. Remove bolts and nuts from shock.

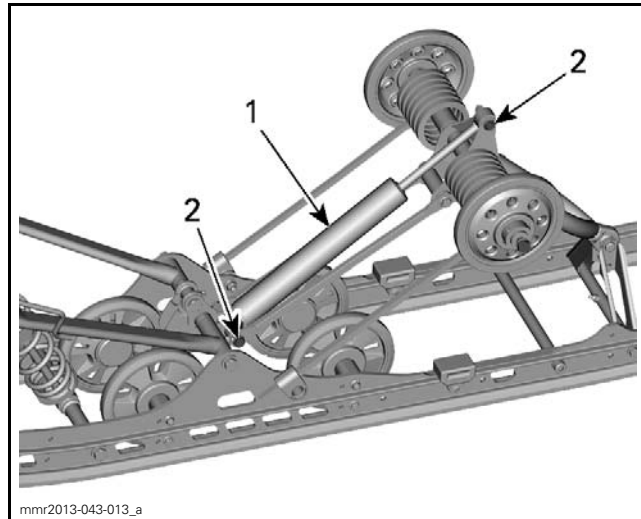

1. Rear shock absorber
2. Remove bolts and nuts


Center Shock Absorber Removal

1. Lift the rear of vehicle and support it off the ground.
2. Unfasten stopper strap(s).

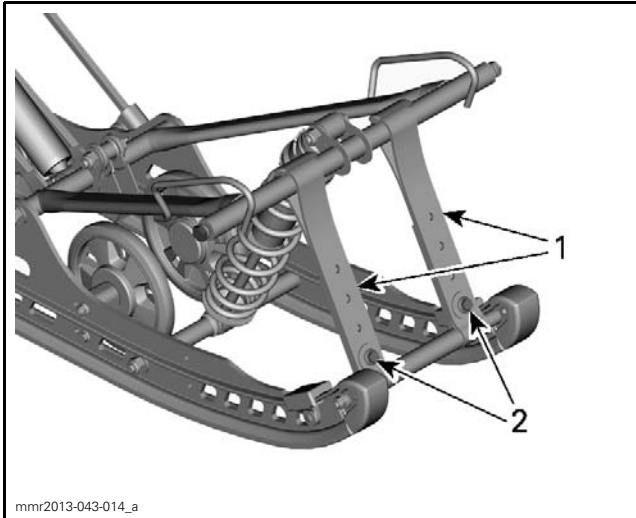


1. Stopper strap
2. Stopper strap bolt

3. Remove upper shock absorber bolt.

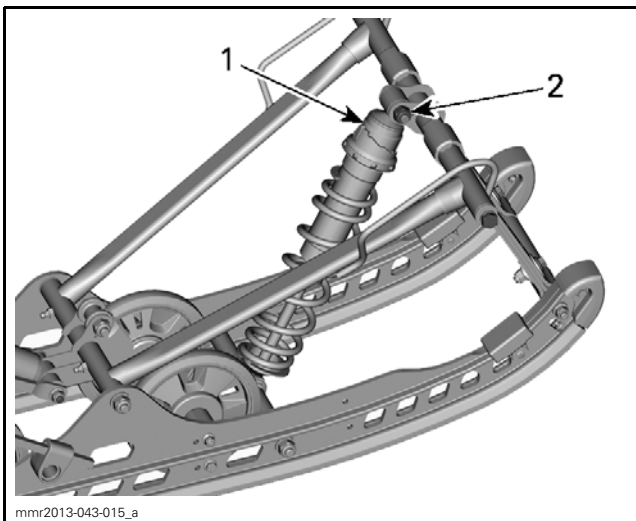

1. Front shock absorber
2. Remove bolt and nut

4. Remove and discard socket screws (one each side) securing shock shaft.

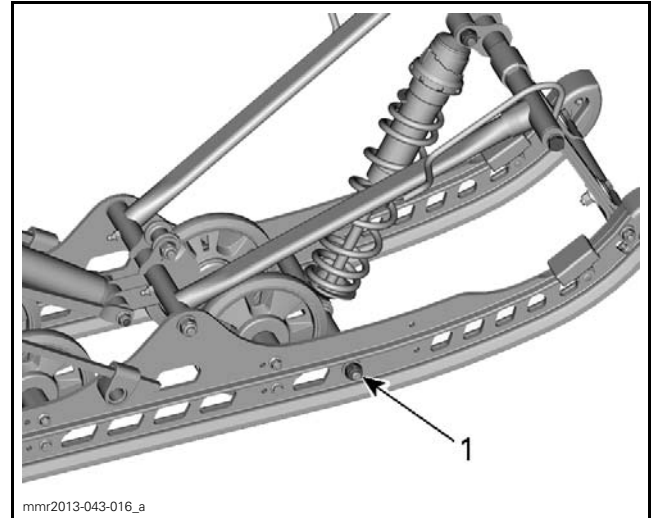

1. RH socket screw

5. Remove shock absorber from vehicle.

6. Remove bushings and shock shaft from shock absorber.

Shock Absorber Inspection

Refer to *REAR SUSPENSION (rMOTION)* subsection for complete procedures.

Shock Absorber Rebuilding

Refer to *REAR SUSPENSION (rMOTION)* subsection for complete procedures.

Rear Shock Absorber Installation

Installation is the reverse of removal procedure. Pay attention to the following.

To ease shock installation, secure upper side of shock first.

Install **NEW** shock absorber retaining nuts and tighten to specified torque.


REAR SHOCK ABSORBER FASTENERS TIGHTENING TORQUE	
Upper nut	25 N•m (18 lbf•ft)
Lower nut	25 N•m (18 lbf•ft)

Center Shock Absorber Installation

Installation is the reverse of removal procedure. Pay attention to the following.

1. Position the adjustment ring or cam upwards and the valve (if so equipped) towards the tunnel.


Subsection XX (REAR SUSPENSION (tMOTION))

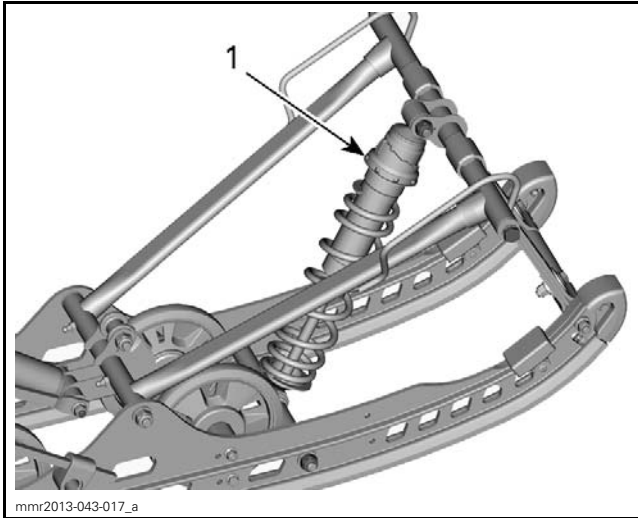

TYPICAL

1. Cam

- Using **NEW** socket screws, install shock shaft to runners.
- Position washers in proper position.

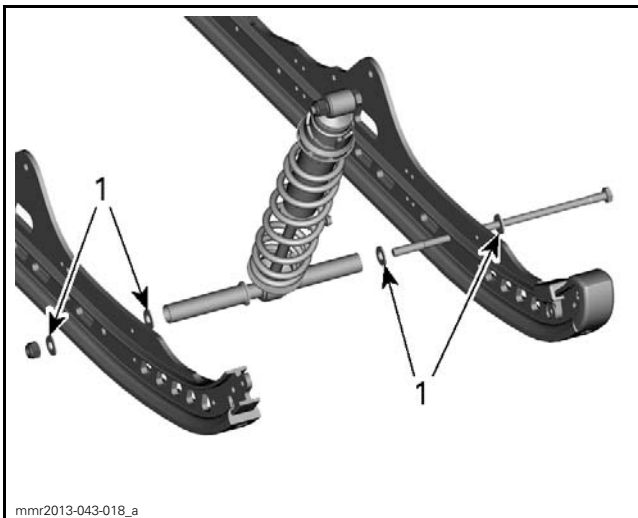

BOTTOM OF SHOCK ABSORBER

1. Washers location

Tighten screws to the specified torque.


CENTER SHOCK ABSORBER LOWER FASTENERS TIGHTENING TORQUE

70 N•m (52 lbf•ft)

REAR SPRINGS

Rear Spring Removal

- Lift rear of vehicle and support it off the ground.
- Completely loosen track tension by unscrewing both adjustment screws.
- Decrease springs preload by turning cams accordingly.

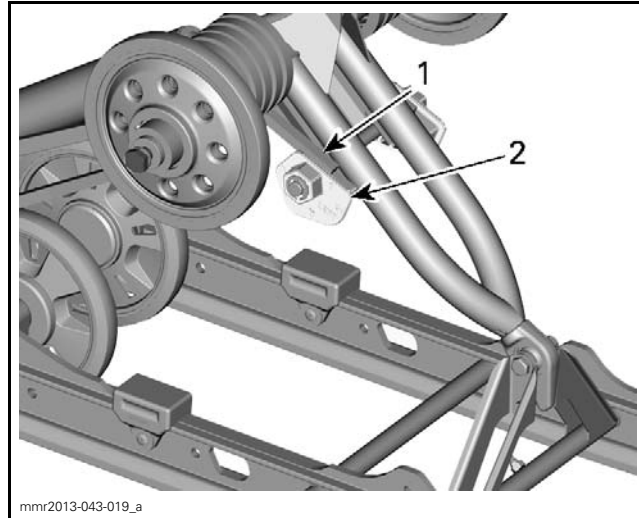


LH SIDE SHOWN

1. Rear spring
2. Cam

- Firmly hold the spring support and unscrew its retaining bolt (one each side).


⚠ WARNING

Supports are spring loaded.

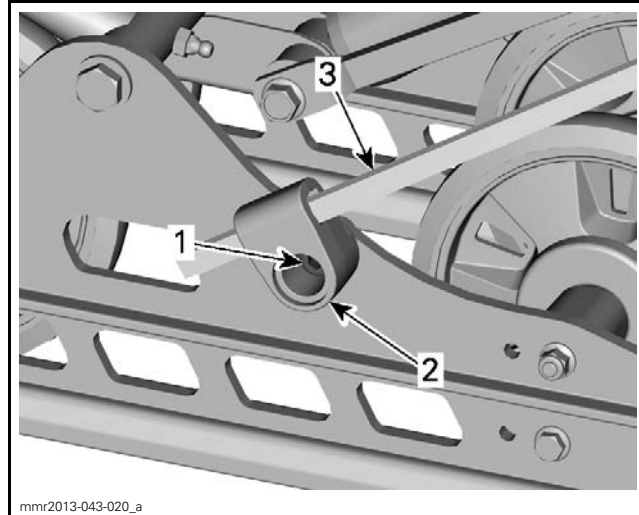

1. Spring support bolt
2. Spring support
3. Spring

- Remove screws and washers from rear arm top axle.
- Loosen set screw from locking rings.
- Remove locking rings.
- Remove upper idler wheels.
- Remove springs.

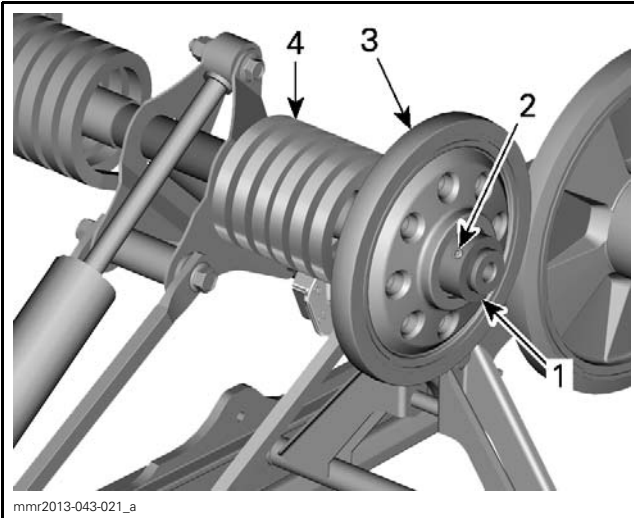


LH SIDE SHOWN
 1. Locking ring
 2. Set screw
 3. Upper idler wheel
 4. Rear spring

Rear Spring Installation


Installation is the reverse of removal procedure. Pay attention to the following.

1. Respect THIS SIDE OUT inscription on top idler wheels.
2. Make sure that spring end is in cam adjuster.

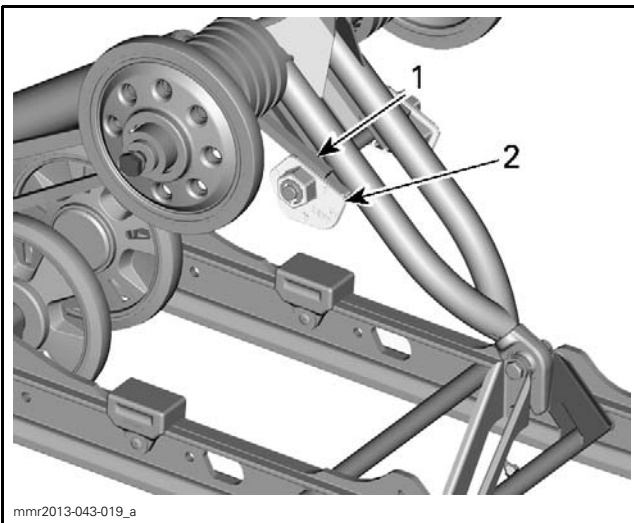

LH SIDE SHOWN
 1. Spring end
 2. Cam

3. Install spring supports upwards.

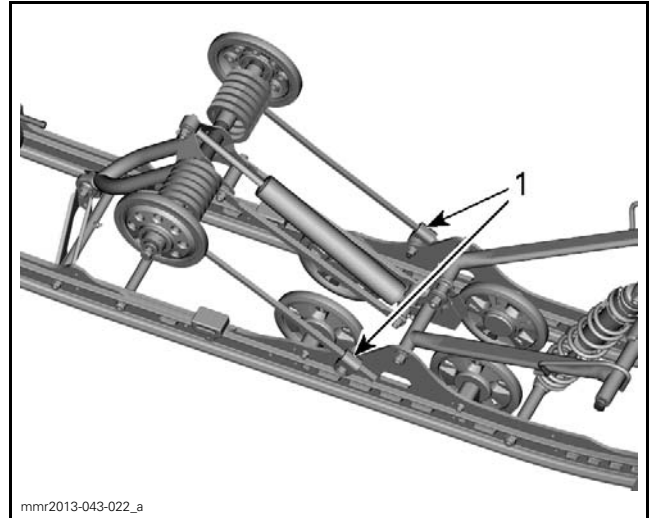


TYPICAL
 1. Spring supports upwards

SLIDER SHOES

Slider Shoe Removal


1. Lift rear of vehicle and support it off the ground.
2. Completely loosen track tension.
3. Remove nut and screw of each runner.

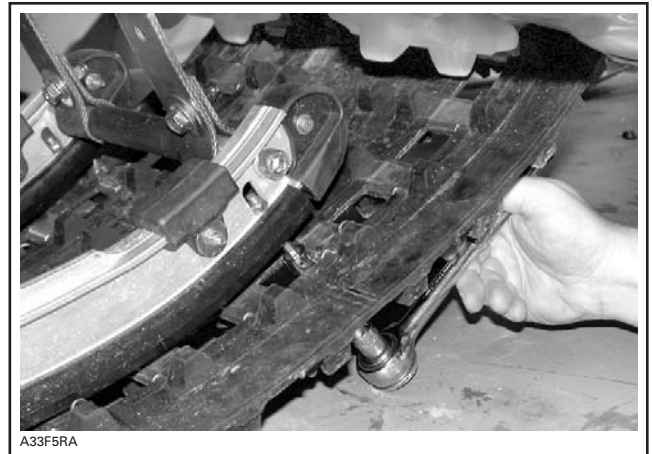

TYPICAL - REMOVE NUT AND SCREW OF EACH RUNNER

4. At the rear of vehicle, align a track window with slider shoe.

Subsection XX (REAR SUSPENSION (tMOTION))

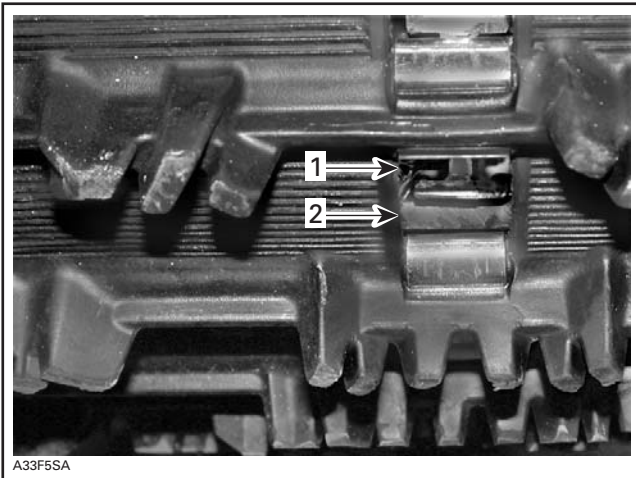

TYPICAL

1. Track window
2. Slider shoe

5. Using a pry bar or a screwdriver, push slider shoe rearward until it comes in contact with track.



PUSH ON SLIDER SHOE

6. Using locking pliers, pull slider shoe through track window to remove.

NOTE: If necessary, lubricate track window to facilitate slider shoe removal.



PULL ON SLIDER SHOE TO REMOVE

Slider Shoe Installation


Installation is the reverse of removal procedure. Pay attention to the following detail.

Make sure to insert slider shoe end with hole first.

FRONT ARM

Front Arm Removal


1. Proceed with *SUSPENSION ASSEMBLY REMOVAL*, see procedure in this subsection.
2. Remove the bolt securing rocker to front arm.

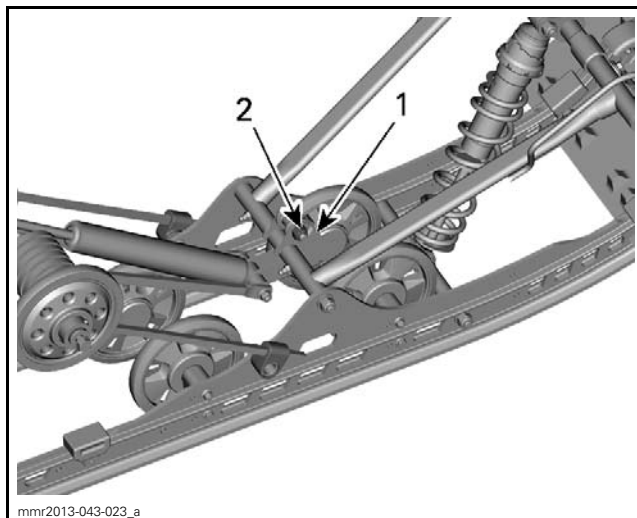

TYPICAL


1. Rocker
2. Retaining screw

3. Remove the front arm lower bolt, nut and washers. Discard retaining nut.

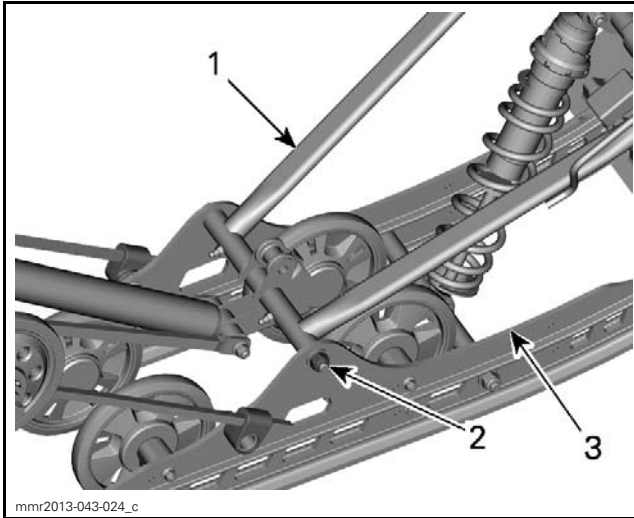


TYPICAL
 1. Front arm
 2. Lower bolt
 3. RH runner

4. Remove the shock absorber upper bolt.

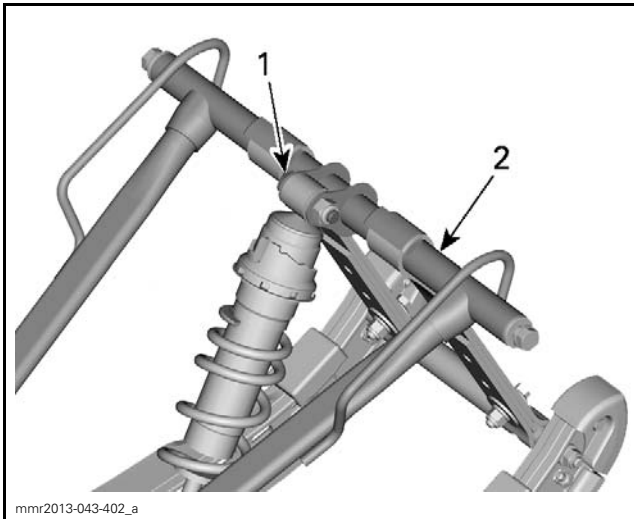


TYPICAL
 1. Shock absorber upper bolt
 2. Front arm

5. Unfasten stopper straps.

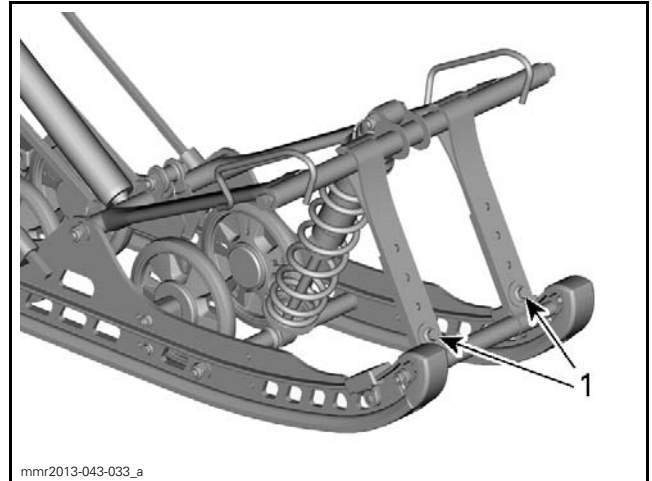

TYPICAL
 1. Stopper strap bolts

6. Remove and discard front arm upper bolts.

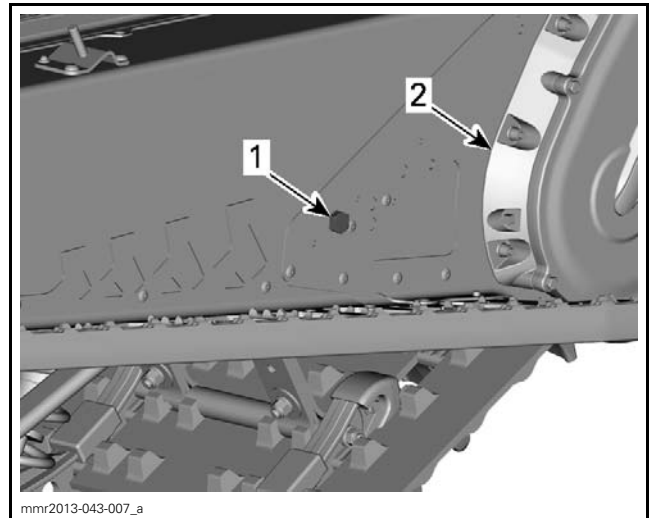

TYPICAL
 1. Front arm bolt
 2. Chaincase


7. Remove front arm.

Front Arm Installation

Installation is the reverse of removal procedure. Pay attention to the following.

1. Install **NEW** front arm lower nuts.
2. Install **NEW** front arm upper bolts.

Subsection XX (REAR SUSPENSION (tMOTION))

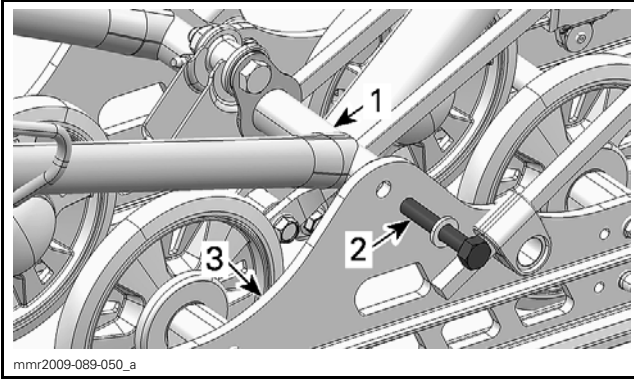

1. Front arm
2. Front arm lower bolt (LH side)
3. Runner

3. Tighten screws to the specified torque.

FRONT ARM LOWER FASTENERS TIGHTENING TORQUE

70 N•m (52 lbf•ft)


FRONT ARM UPPER FASTENERS TIGHTENING TORQUE

48 N•m (35 lbf•ft)

REAR ARM


Rear Arm Removal

1. Lift rear of vehicle and support it off the ground.
2. Completely loosen track tension.
3. Proceed with *REAR SPRING REMOVAL*, see procedure in this section.
4. Remove the rear shock absorber upper bolt and discard nut.

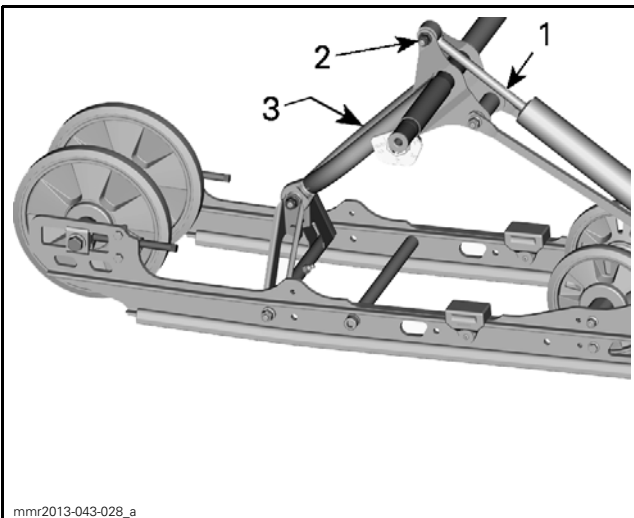


1. Rear shock absorber
2. Shock absorber bolt
3. Rear arm

5. Remove throttle rods from rear arm.

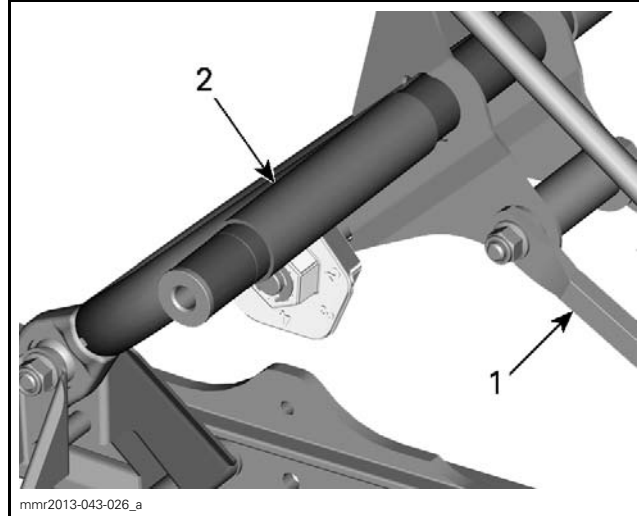


1. Throttle rods (1 not illustrated)
2. Rear arm

6. Remove bolt, nut and washer holding rear arm to pivot arm. Discard nut.

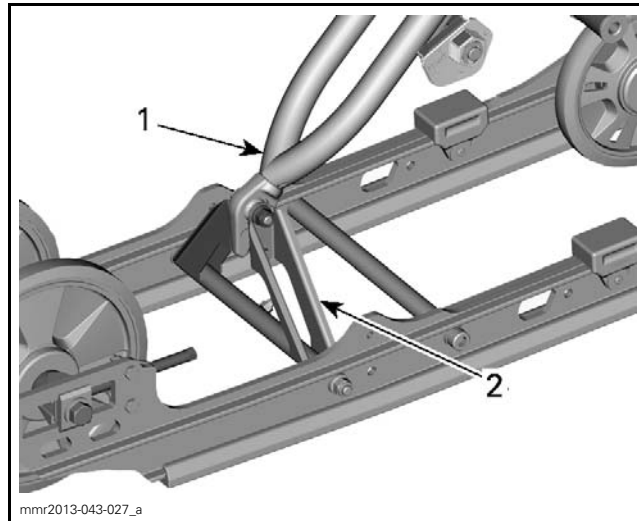

1. Rear arm
2. Pivot arm

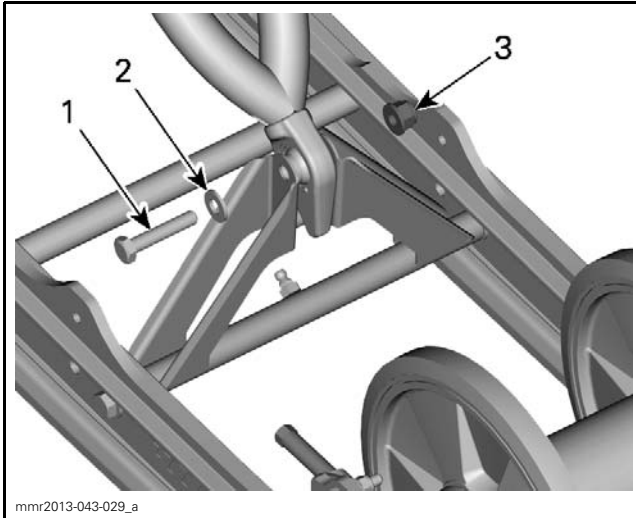


1. Retaining bolt
2. Washer
3. Retaining nut

Rear Arm Installation


Installation is the reverse of removal procedure. Pay attention to the following.

1. Pivot arm grease fitting must be towards the front of the vehicle.
2. At installation, rear arm stroke limiter must be at rear.
3. Install **NEW** nuts and tighten to the specified torque.

Assemble rear arm fasteners as per following illustrations.

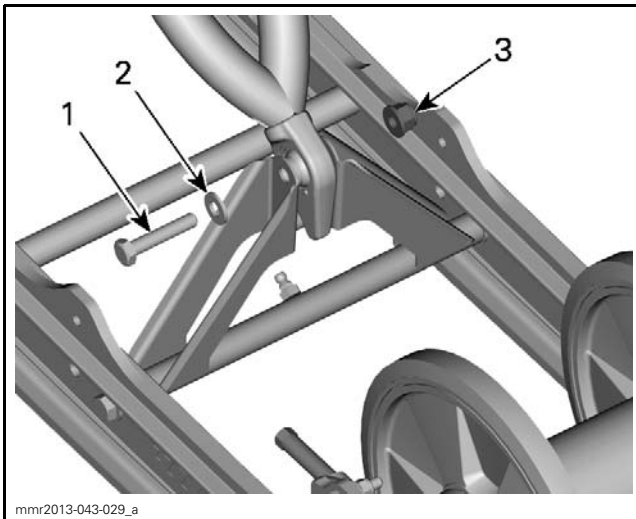

1. Retaining bolt
2. Washer
3. Retaining nut

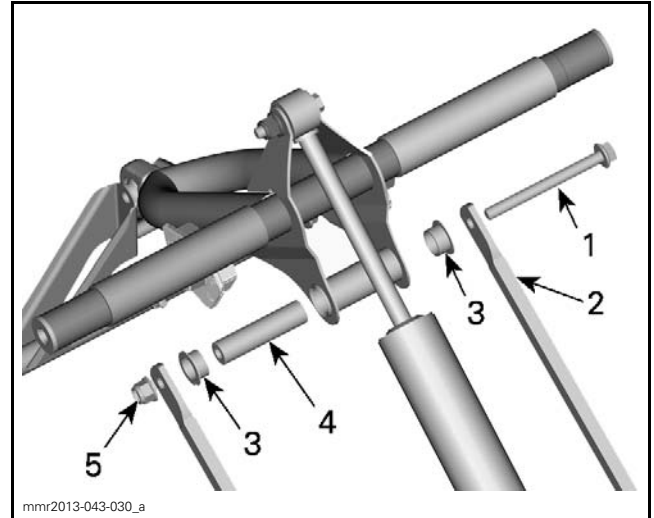

SOME PARTS REMOVED FOR CLARITY PURPOSES


1. Throttle rod upper bolt
2. Throttle rods
3. Bushings
4. Axle
5. Throttle rod upper nut

REAR ARM FASTENERS TIGHTENING TORQUE	
Rear shock absorber upper nut	25 N•m (18 lbf•ft)
Throttle rods upper nut	25 N•m (18 lbf•ft)
Pivot to rear arm nut	25 N•m (18 lbf•ft)

PIVOT ARM


Pivot Arm Removal

1. Lift rear of vehicle and support it off the ground.
2. Completely loosen track tension by unscrewing both adjustment screws.
3. Remove bolt and washers retaining rear arm to pivot arm. Discard nut.

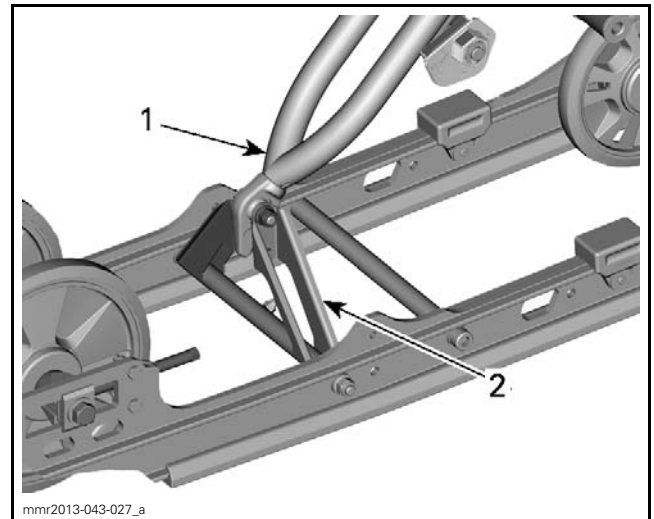


1. Rear arm
2. Pivot arm

Subsection XX (REAR SUSPENSION (tMOTION))

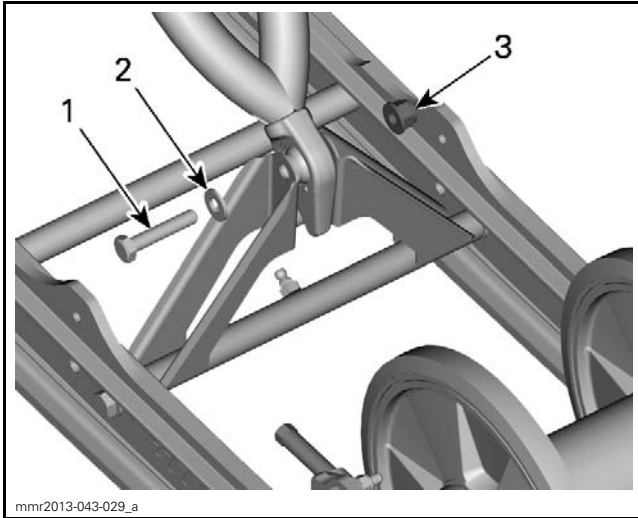


1. Retaining bolt
2. Washer
3. Retaining nut

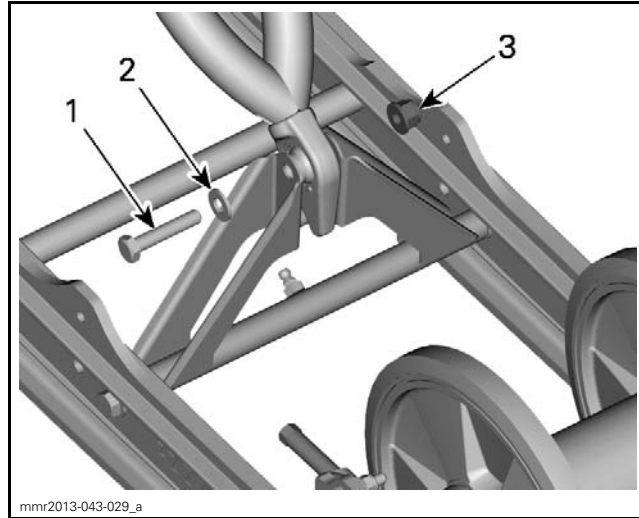

1. Retaining bolt
2. Washer
3. Retaining nut

4. Remove bolt, nut and 4 washers retaining pivot arm to runners.

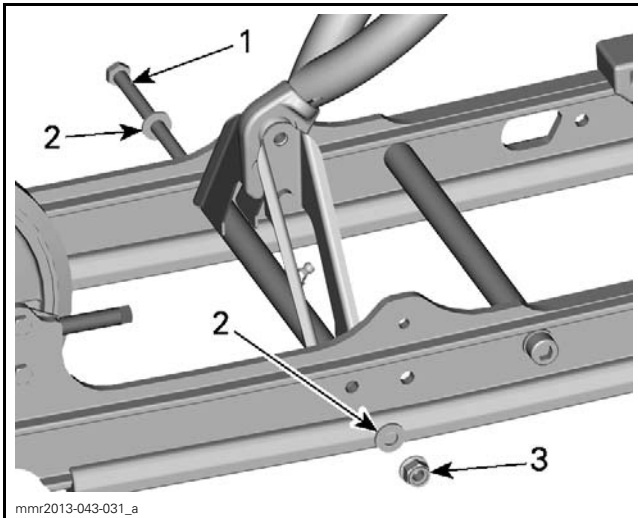


1. Retaining bolt
2. Outer washers
3. Retaining nut

NOTE: Make sure inner washers are properly removed from assembly to avoid losing them

5. Carefully remove pivot arm from rear arm.

Pivot Arm Installation

The installation is the reverse of the removal procedure. However, pay attention to the following. Assemble pivot arm fastener as per following illustrations.

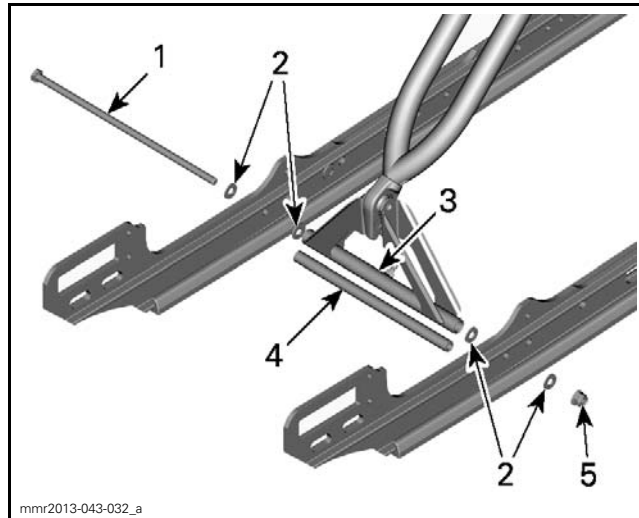

PARTS REMOVED FOR CLARITY PURPOSE

1. Pivot arm lower nut
2. Washers
3. Pivot arm
4. Axle
5. Pivot arm lower screw

Torque pivot arm lower nut to 25 N•m (18 lbf•ft). Lubricate pivot arm. Refer to *PERIODIC MAINTENANCE PROCEDURES* subsection.

IDLER WHEELS AND SUPPORTS

Refer to the exploded views at the beginning of this subsection for parts layout and fasteners tightening torque.

STOPPER STRAP

Refer to the exploded views at the beginning of this subsection for parts layout and fasteners tightening torque.

STEERING SYSTEM



SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
MULTILOCK - TERMINAL EXTRACTION TOOL.....	755430-2	10

SERVICE PRODUCTS


Description	Part Number	Page
SUSPENSION GREASE.....	293 550 033	15

SKIS

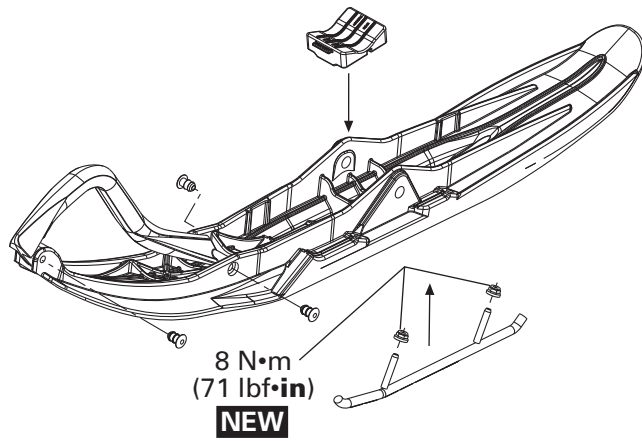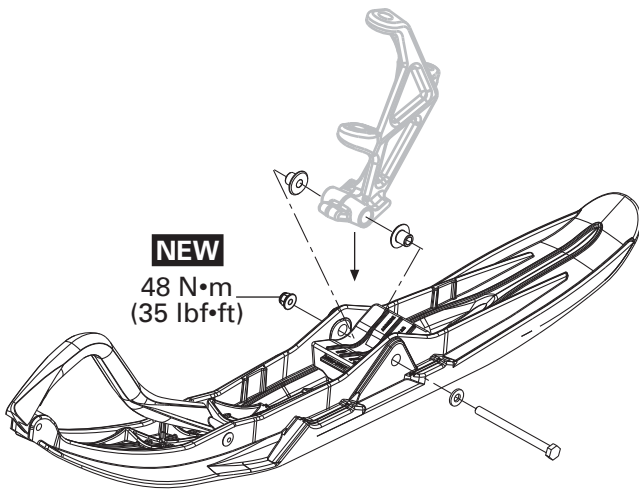


NEW = Component must be replaced when removed


Models without adjustable stance

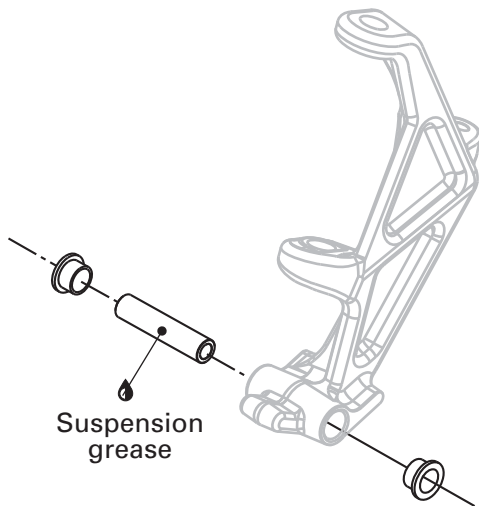

Models with adjustable stance


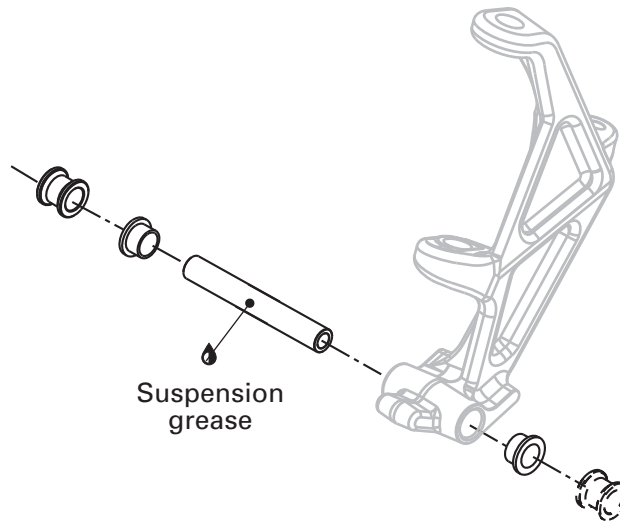


STEERING COLUMN AND TIE-RODS

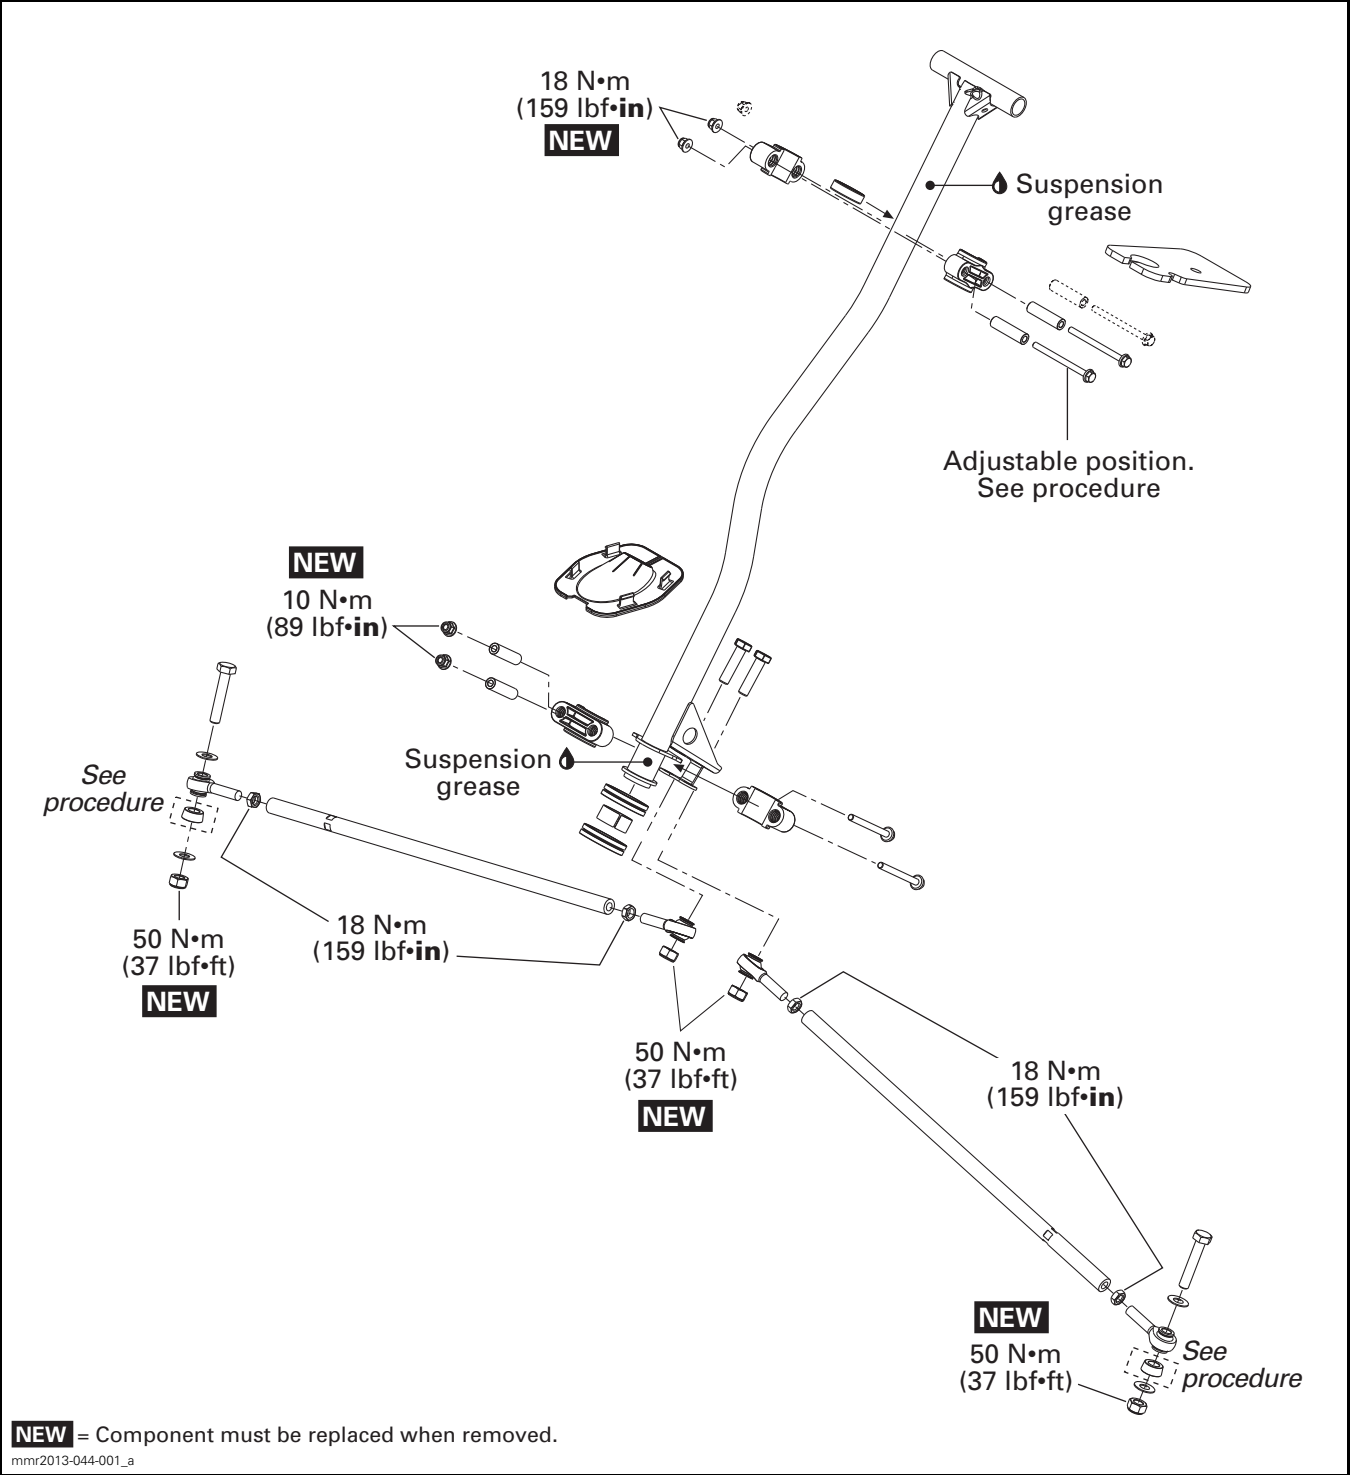


HANDLEBAR



Summit X

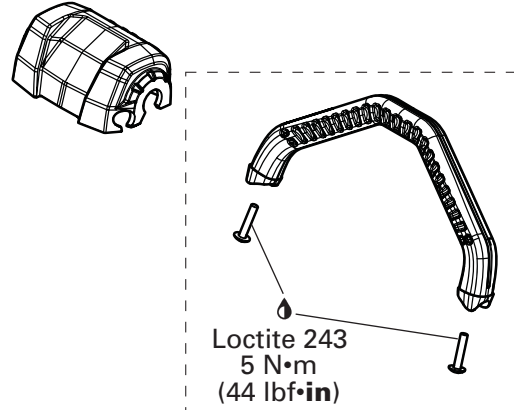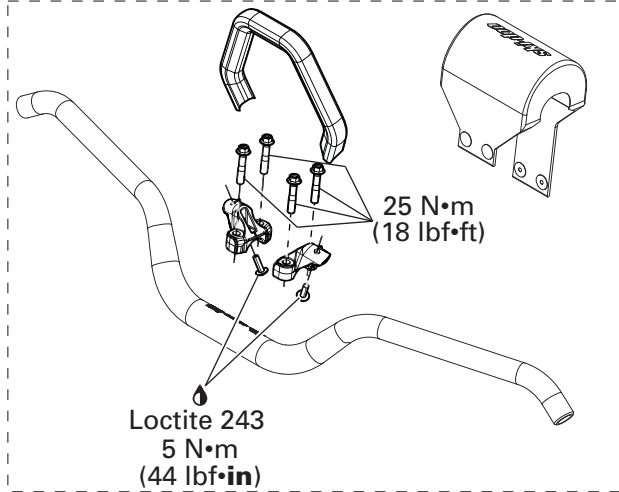

If equipped

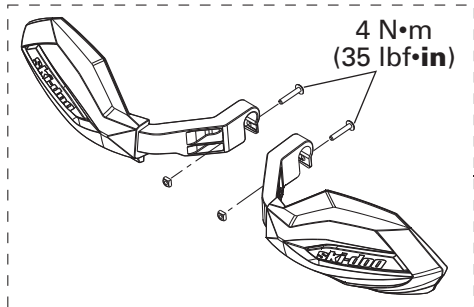

European models

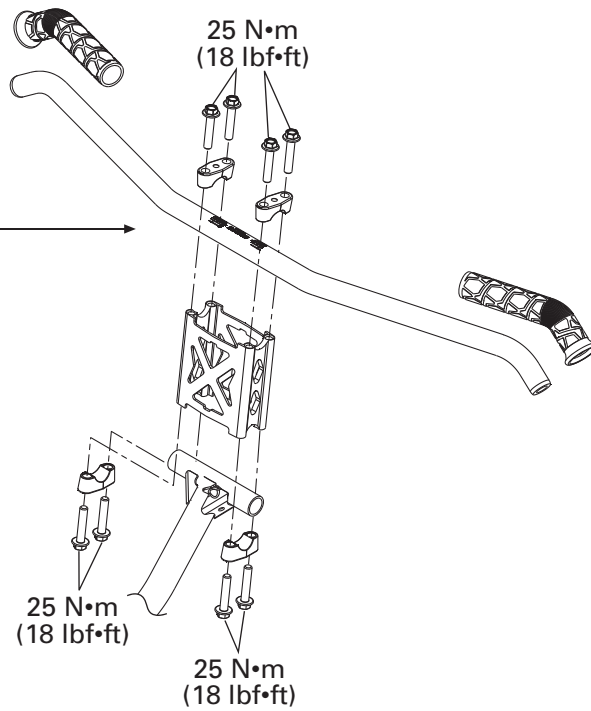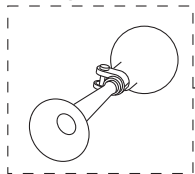

NEW = Component must be replaced when removed.

mnr2013-044-002_a

GENERAL

When removing or replacing a part of the steering mechanism, perform the steering alignment, refer to *STEERING ALIGNMENT* in this subsection.

During assembly/installation, use the torque values and service products as in the exploded views.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices when removed (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.) must be replaced.


NOTICE Hoses, cables and locking ties removed during a procedure must be reinstalled at the same location.

ADJUSTMENT

STEERING ALIGNMENT

Ski alignment is performed by adjusting the length of left and right tie-rods.


1. Leave the vehicle on the ground on its own weight.
2. Attach ski handles together with a bungee cord.

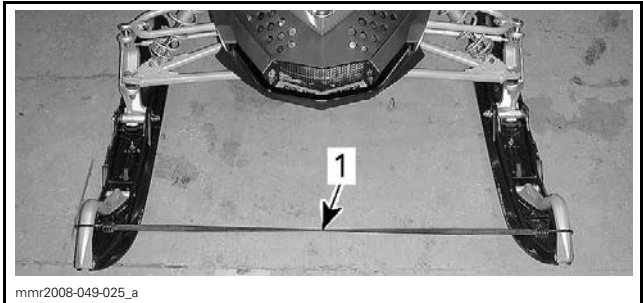

TYPICAL
1. Bungee cord


3. Position handlebar so that it is straight ahead position by measuring from the extremities of the grips to the rear most edge of the tunnel, as shown.

NOTE: The reference point must be the same to each side.

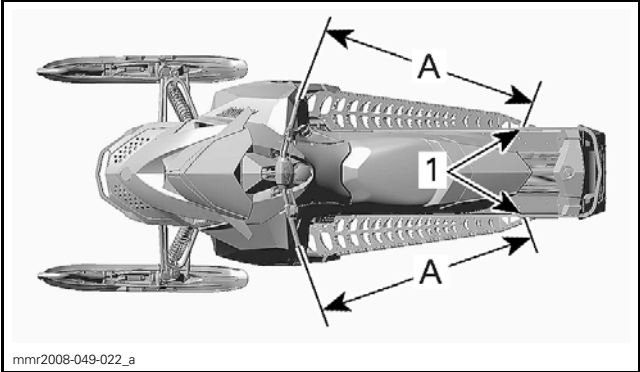

TYPICAL
1. Same reference point
A. Equal distance on each side

4. Ensure track is properly aligned.
5. Verify if skis are in straight-ahead position by placing a straight edge against track and measuring distance between front and rear ski bridges and straight edge.
6. With skis in straight ahead position, adjust the toe-out.
7. Measure the distance between front and rear ski bridges in line with arrows on skis.
8. Use the following illustration and this equation to determine the steering adjustment.

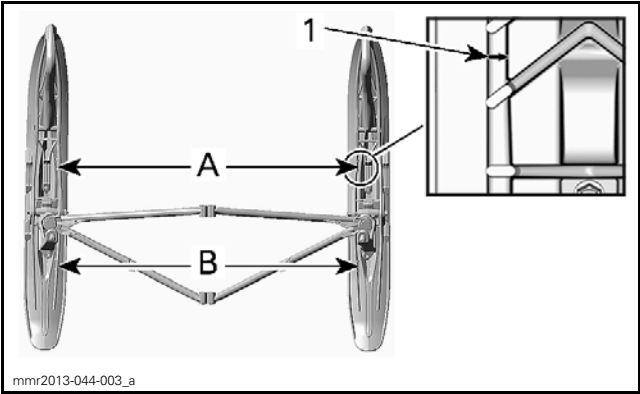


TYPICAL
1. Arrow on ski
 $A - B = 5 \text{ mm } (.197 \text{ in})$

STEERING ALIGNMENT	
Toe-out	5 mm (.197 in)


9. If adjustment is needed, loosen tie-rod jam nuts then turn tie-rods to change their length.
10. Tighten jam nuts and torque them to 18 N•m (159 lbf•in).

Subsection XX (STEERING SYSTEM)

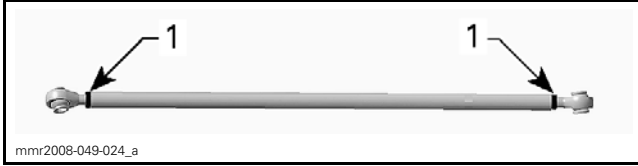

1. Jam nut

NOTE: The maximum tie-rod end length not engaged in the tie rod must not exceed 34 mm (1.339 in).

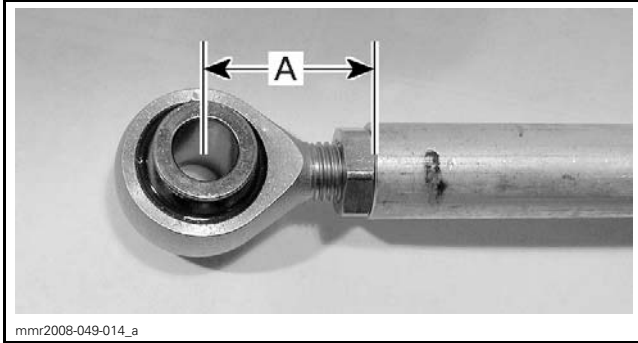

A. 34 mm (1.339 in) maximum

PROCEDURES


SKI RUNNER

Ski Runner Inspection

Refer to *PERIODIC MAINTENANCE PROCEDURES*.

Ski Runner Removal

1. Lift the front of vehicle and support it off the ground.
2. Unscrew the ski runner nuts then remove ski runners.

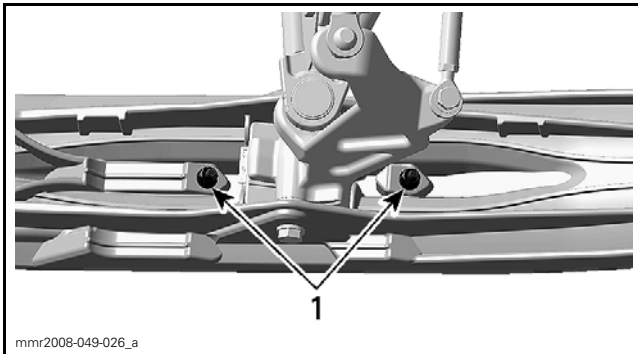

1. Ski runner nuts

Ski Runner Installation

The installation is the reverse of the removal procedure. Pay attention to the following.

Torque ski runner nuts to 8 N•m (71 lbf•in).


SKIS

Ski Inspection

Refer to *PERIODIC MAINTENANCE PROCEDURES*.

Ski Removal

1. Lift front of vehicle and support it off ground.
2. Unscrew nut then pull ski bolt out.

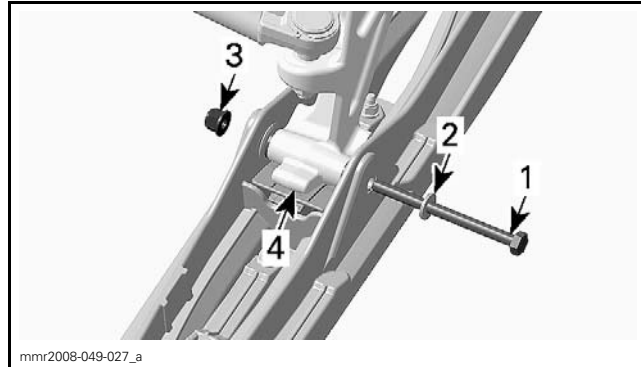

TYPICAL


1. Ski bolt
2. Washer
3. Nut
4. Ski leg

3. Remove ski from vehicle.

Ski Installation

Models Without Adjustable Stance

1. Make sure bushings are installed in ski holes.
2. Install the ski stopper. Position indicator in front and make sure the bump in the ski is in the groove of the ski stopper.

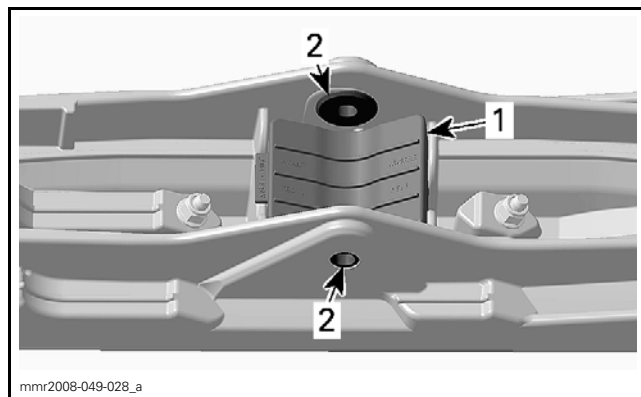


TYPICAL

1. Ski stopper
2. Bushings

3. Install ski bolt and torque it to 48 N•m (35 lbf•ft).

Models with Adjustable Stance


1. Make sure bushings are installed in ski holes.
2. Install the ski stopper. Position indicator in front and make sure the bump in the ski is in the groove of the ski stopper.

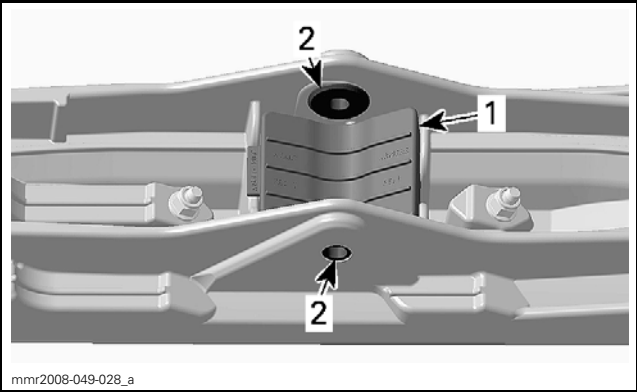


TYPICAL
 1. Ski stopper
 2. Bushings

3. Determine the desired ski stance (2 positions).
4. Install the spacer inside for the narrower stance and outside for the wider stance.

⚠ WARNING
 Proceed to the same setting for both skis.

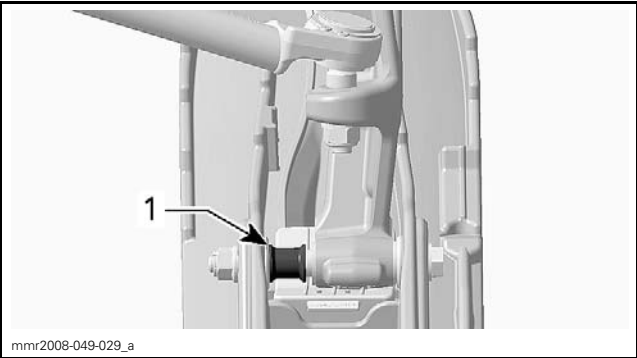

NARROWER STANCE — LEFT SKI SHOWN
 1. Spacer here for the narrower stance

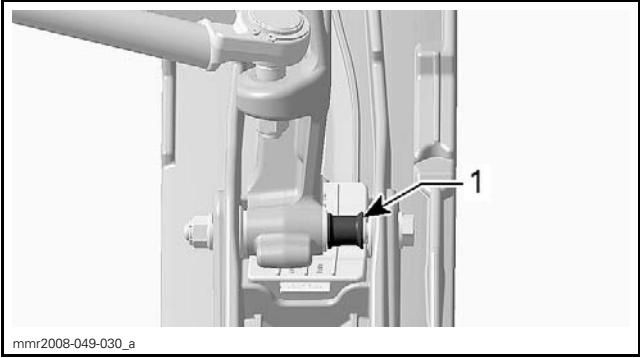

WIDER STANCE — LEFT SKI SHOWN
 1. Spacer here for the wider stance

5. Install ski bolt and torque it to 48 N•m (35 lbf•ft).


SKI HANDLES

Ski Handle Removal

1. Remove ski from vehicle.
2. Using a 9 mm (3/8 in) drill bit, remove ski handle rivets. Only drill the head of rivet. Do not try to drill all the way through the rivet. Angle the drill bit to reduce the chance of spinning the rivet in the ski.
3. Remove handle from ski.
4. Place handle in hot water for 10 minutes then using a punch, drive the inner part of rivet out of handle.

Ski Handle Installation


1. To install rivets, use a C-clamp and a short 10 mm socket.
2. Place a rivet in position and insert it into ski and ski handle. Repeat the procedure for the other side.

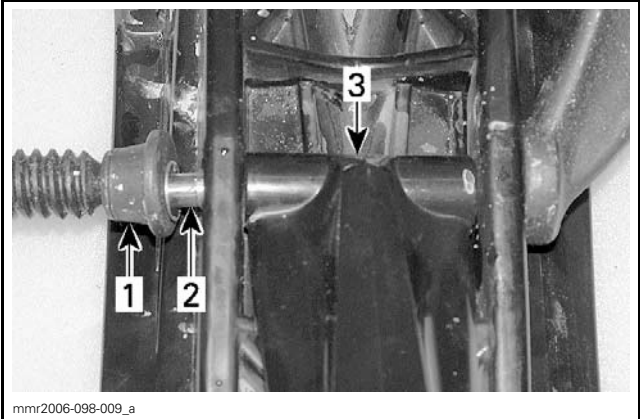

1. C-clamp
 2. Rivet
 3. Handle

Subsection XX (STEERING SYSTEM)

- When both rivets are installed, use the short 10 mm socket to push rivet heads against the ski.

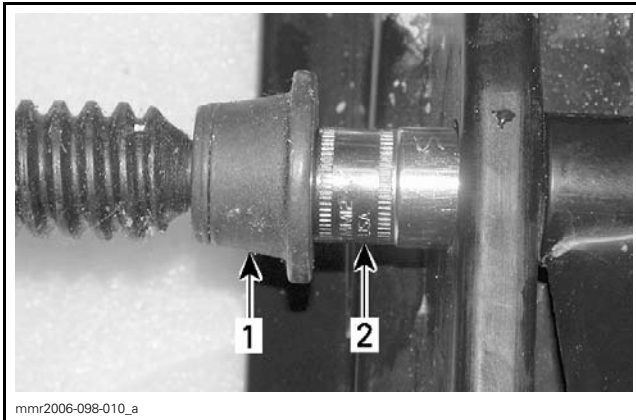

- C-clamp
- 10 mm socket

SKI LEG


To replace a ski leg, refer to *FRONT SUSPENSION* subsection.

HANDLEBAR GRIP

NOTE: To verify or replace heating elements, refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection.

Handlebar Grip Removal


Remove grips by pulling while using compressed air, which will inflate or loosen the fit between the grip and handlebar.

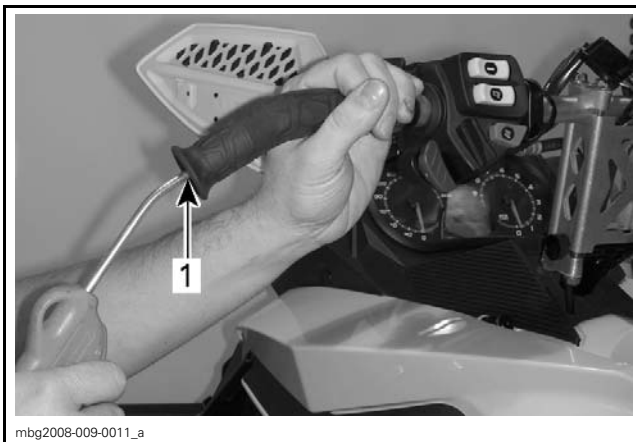

- TYPICAL**
- Blow air in the grip hole

Handlebar Grip Installation

Insert the handlebar grip on handlebar while blowing compressed air to inflate or loosen the fit between grip and handlebar.

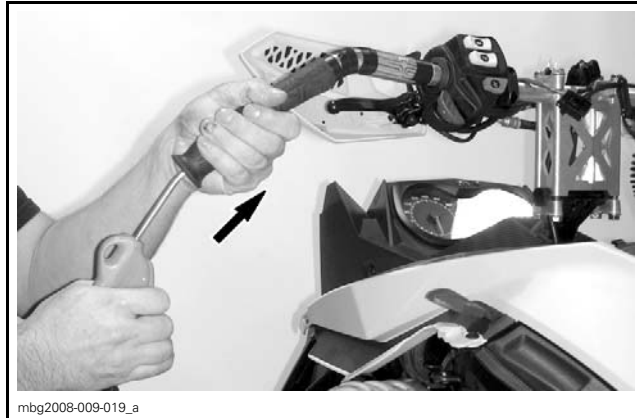


TYPICAL

MULTIFUNCTION SWITCH

Multifunction Switch Removal


- Cut locking tie securing multifunction switch harness.
- Unscrew master cylinder from handlebar.

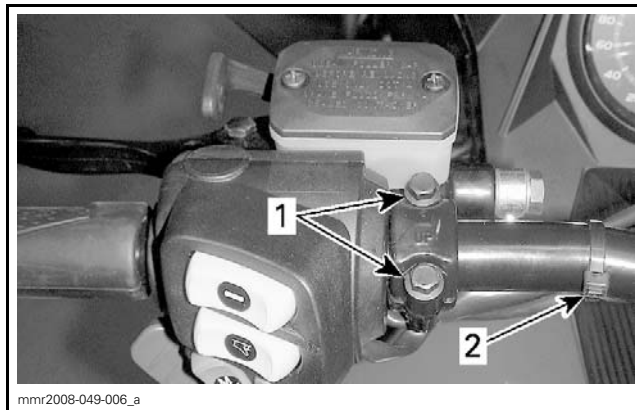

TYPICAL

- Master cylinder screws
- Cut this locking tie


- Slide master cylinder toward the steering column.
- Remove multifunction switch screws.

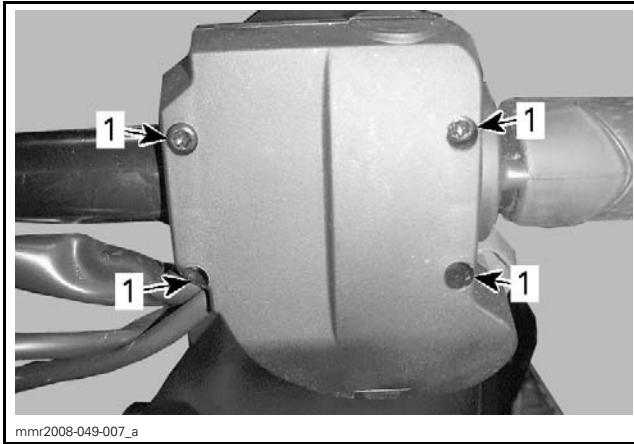

mnr2008-049-007_a


XS SERIES

1. Multifunction switch screws

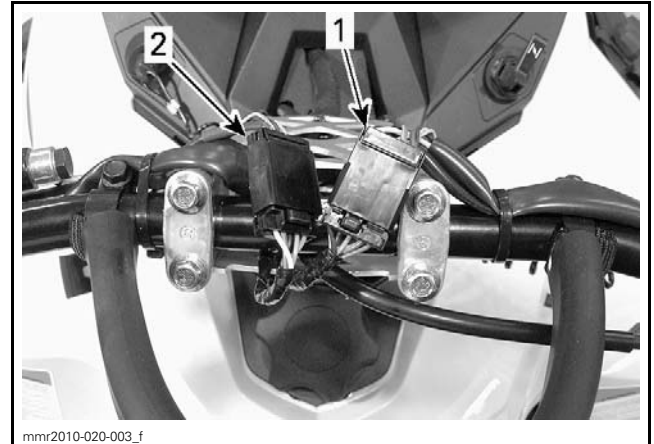

mnr2010-020-003_f

1. GD connector
2. GG connector

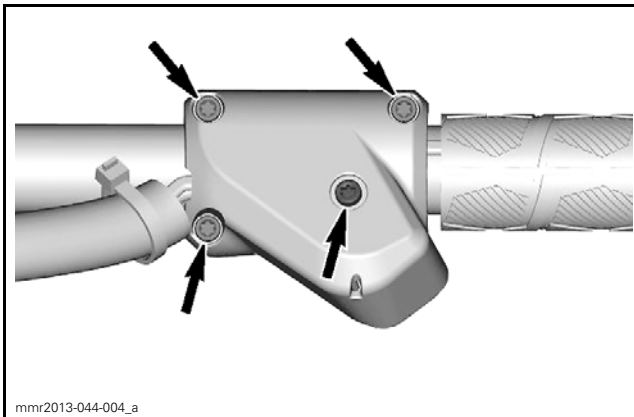

mnr2013-044-004_a

XM SERIES

5. Disconnect both multifunction switch connectors.
6. Remove multifunction switch from vehicle.

Multifunction Switch Installation


The installation is the reverse of the removal procedure. However, pay attention to the following. Turn handlebar completely from side to side making sure it does not exert unwanted tension on handlebar wires.

THROTTLE LEVER HOUSING

Throttle Lever Housing Removal

1. Proceed with RH *HANDLEBAR GRIP REMOVAL*, see procedure in this subsection.
2. Proceed with RH *HEATER ELEMENT REMOVAL*, see procedure in *LIGHTS, GAUGE AND ACCESSORIES* subsection.
3. Disconnect throttle cable from throttle lever.
4. Disconnect GD steering connector.

5. Cut locking ties securing throttle lever housing harness.
6. Remove throttle lever housing retaining screw.

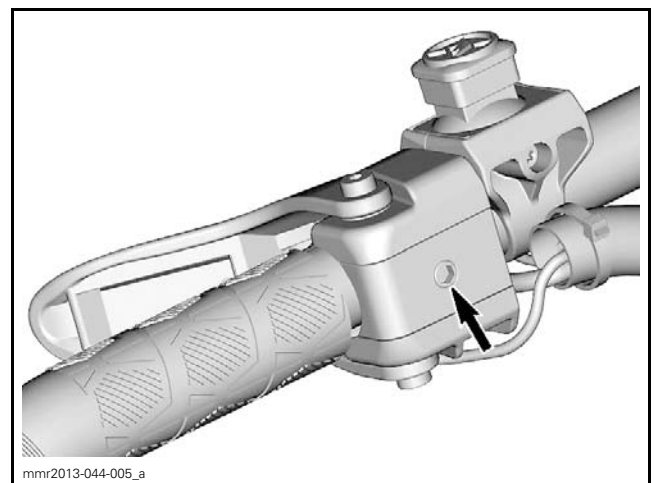

mnr2013-044-005_a

7. Slide throttle lever housing outwards to remove it from handlebar.
8. Remove circlip from throttle lever pin.
9. Remove throttle lever pin then throttle lever.

Throttle Lever Housing Installation

The installation is the reverse of the removal procedure. However, pay attention to the following. Turn handlebar completely from side to side making sure it does not exert unwanted tension on handlebar wires.


Install **NEW** circlip on throttle lever pin.

THROTTLE LEVER

Throttle Lever Removal

1. Remove steering cover from handlebar.
2. Disconnect GD steering connector.

Subsection XX (STEERING SYSTEM)

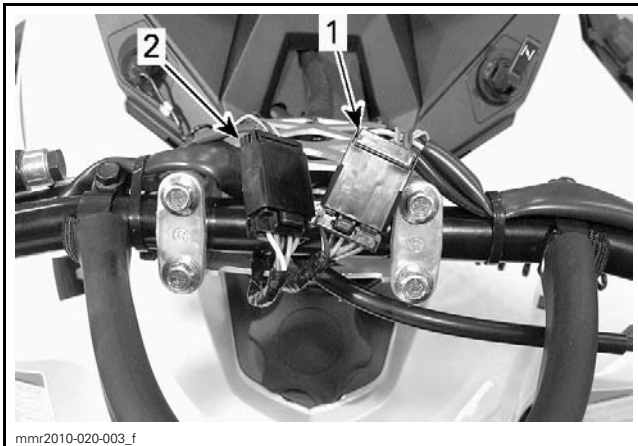


mmr2010-020-003_f

TYPICAL

1. GD connector
2. GG connector

3. Open cover on the back of connector housing.

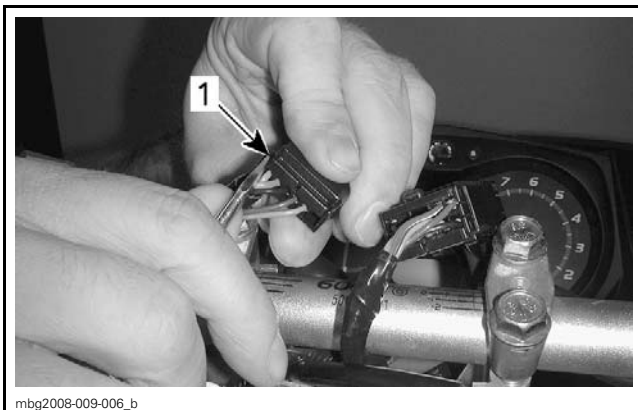

mbg2008-009-006_b


TYPICAL

1. Connector housing cover locks (one each side)

4. Unlock the heater wire terminals and pull them out of the connector housing.

REQUIRED TOOL

MULTILOCK - TERMINAL EXTRACTION TOOL (P/N 755430-2)

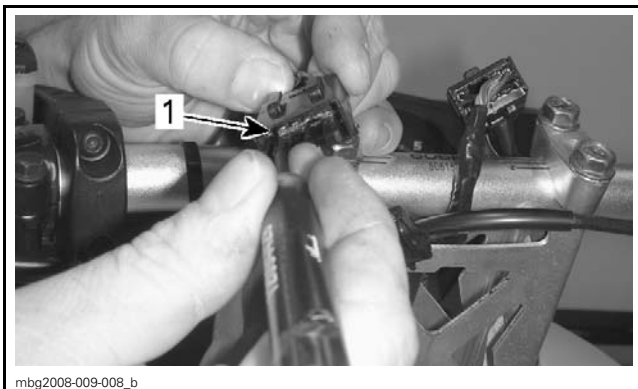


mbg2008-009-008_b

TYPICAL - UNLOCKING CONNECTOR PIN (FRONT SIDE)

1. Pin removal tool inserted above pin

NOTICE Take note of exact positioning of throttle lever heater before removing it from the connector.

5. Cut locking ties securing heater wires to handlebars.
6. Disconnect throttle cable from throttle lever.
7. Remove throttle lever retaining screws.

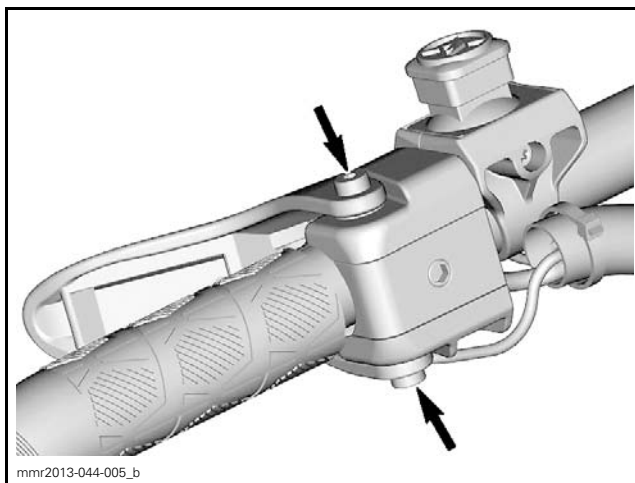

mmr2013-044-005_b

8. Remove throttle lever and heater wires.

Throttle Lever Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

Tighten throttle lever retaining screws to specification.

TIGHTENING TORQUE	
Throttle lever retaining screws	1.5 N•m (13 lbf•in)


Turn handlebar completely from side to side making sure it does not exert unwanted tension on handlebar wires.

HANDLEBAR

Handlebar Removal

NOTE: If the handlebar must be changed, remove all components (handlebar grip, throttle lever housing, etc.) before removing it from vehicle.


1. Remove steering cover.
2. Unplug all connectors.

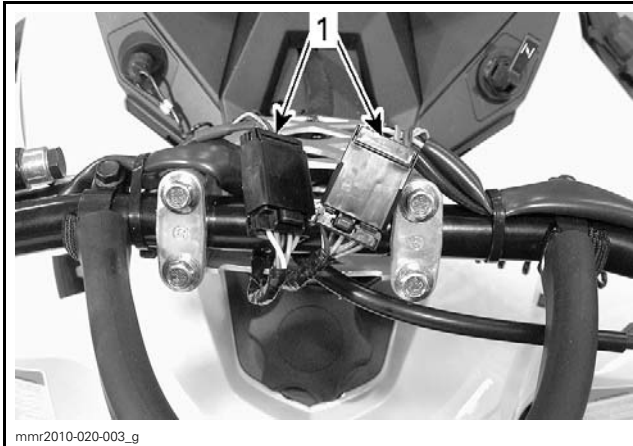

mnr2010-020-003_g

TYPICAL

3. Remove handlebar retaining clamp screws.

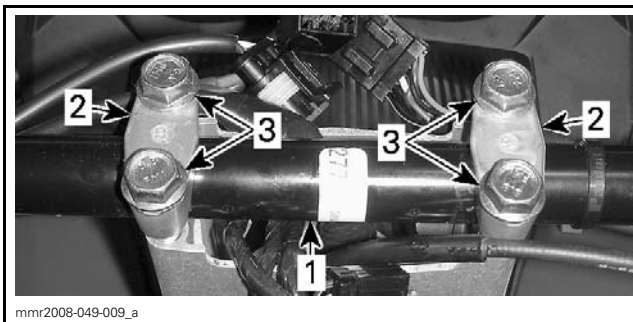

mnr2008-049-009_a

1. Handlebar
2. Retaining clamps
3. Screws

4. Remove handlebar from handlebar extension.

Handlebar Inspection

1. Inspect the handlebar for:
 - Damages
 - Cracks
 - Bending.
2. Replace if any of these problems is detected.


⚠ WARNING
Do not try to repair a defective handlebar.

3. Check handlebar clamps for cracks or distortion, replace if necessary.

Handlebar Installation

The installation is the reverse of the removal procedure. However, pay attention to the following. Tighten handlebar clamp screws to 25 N•m (18 lbf•ft).

Ensure handlebar clamps are parallel with handlebar extension.

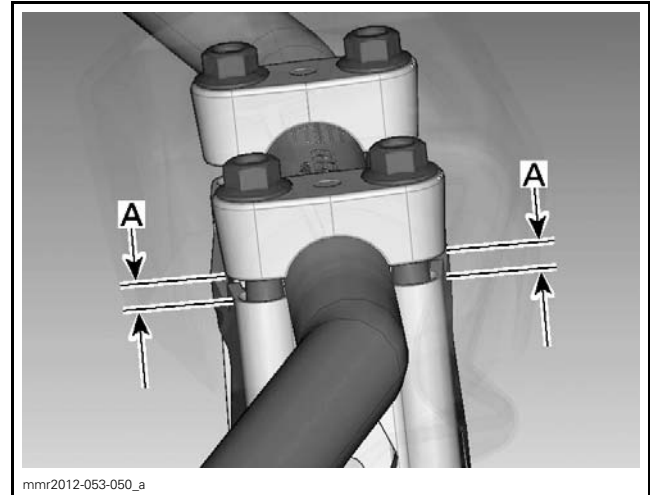

mnr2012-053-050_a

TYPICAL


A. Must be equal

Turn handlebar completely from side to side making sure it does not exert unwanted tension on handlebar wires.

HANDLEBAR EXTENSION

Handlebar Extension Removal

1. Proceed with *HANDLEBAR REMOVAL*, see procedure in this subsection.
2. Remove screws retaining the extension to steering column.

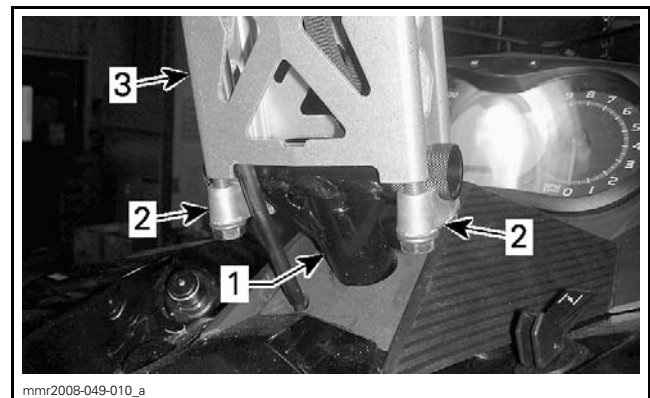

mnr2008-049-010_a

TYPICAL

1. Steering column
2. Handlebar extension clamps
3. Handlebar extension

3. Remove handlebar extension from vehicle.

Handlebar Extension Inspection


1. Check handlebar extension for:
 - Cracks
 - Bending
 - Other damages.
2. Replace if any of these problems is detected.

⚠ WARNING

Do not try to repair a defective handlebar extension.

Handlebar Extension Installation


The installation is the reverse of the removal procedure. However, pay attention to the following. When installing handlebar extension, ensure to leave a gap between handlebar extension and stop block on steering column.

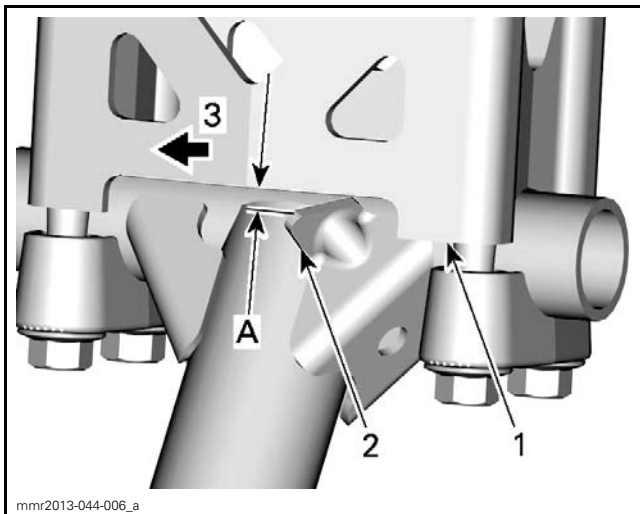

- 1. Bottom of handlebar extension
- 2. Steering column stop block
- 3. Front of vehicle
- A. 1 mm (.039 in) minimum

Torque handlebar extension retaining screws to 25 N•m (18 lbf•ft).

Ensure extension clamps are parallel with handlebar extension.

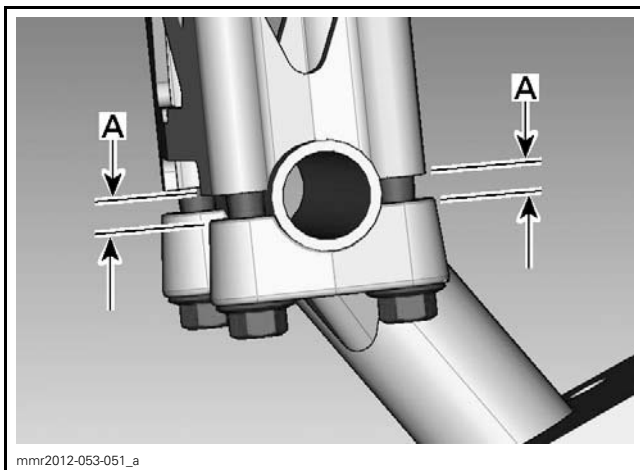

TYPICAL
A. Must be equal

⚠ WARNING

Handlebar and its components must not get in contact with anything (windshield, fuel tank cap, etc.) when steering is turned.

TIE-RODS

NOTE: The same procedure is applied on RH and LH side.


Tie-Rod Inspection

Check tie-rod ends for looseness. If play is excessive, replace tie-rod.


Check if the tie-rod is bent, cracked or otherwise damaged. Replace if necessary.

Tie-Rod Removal

1. Remove the tie-rod ends from the steering column and ski leg.

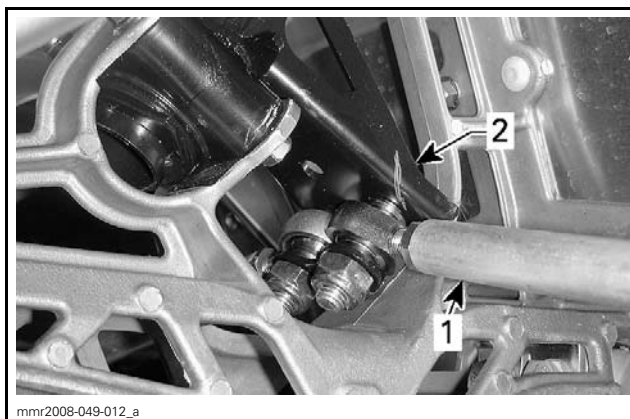

- 1. Tie-rod
- 2. Steering column

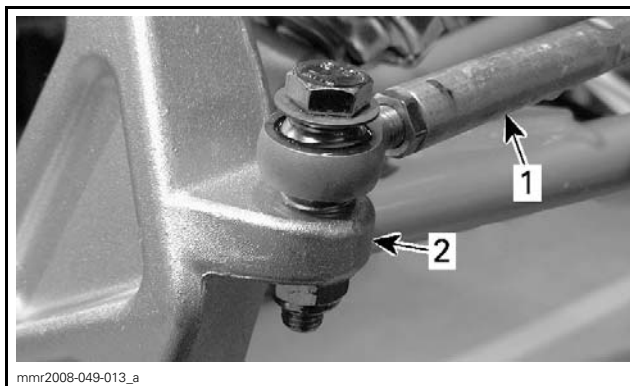


- 1. Tie-rod
- 2. Ski leg

2. Remove tie-rod from vehicle.

Tie-Rod Installation

1. The installation is the reverse of the removal procedure. However, pay attention to the following.
2. Adjust the length of all tie-rod end to 30 mm (1.181 in) without tightening the jam nuts.

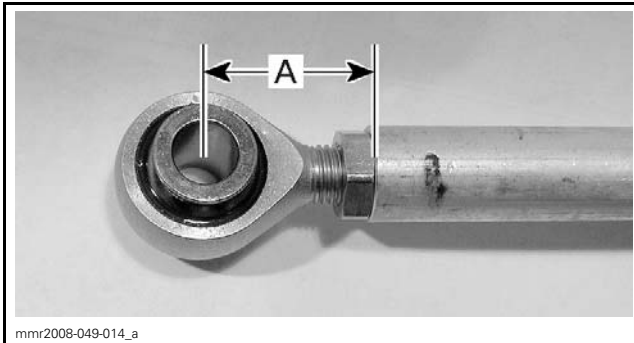


A. 30 mm (1.181 in)

⚠ WARNING

The maximum tie-rod end length not engaged in the tie rod must not exceed 34 mm (1.339 in).


3. Install tie-rod with the groove on ski leg side.

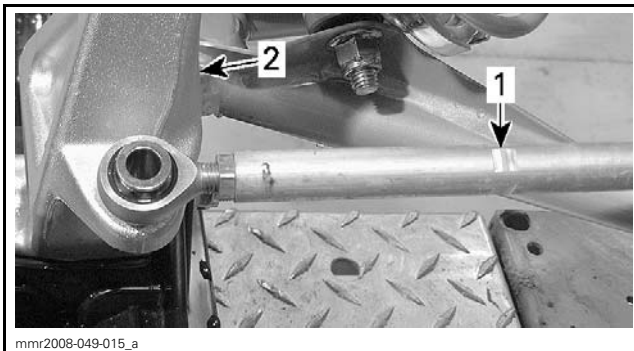

1. Tie-rod groove
2. Ski leg

4. On ski leg side, install hardened washers as shown.


NOTE: When steering column is installed at the front position, install spacers against the ski legs as shown. Refer to *STEERING COLUMN* in this subsection.

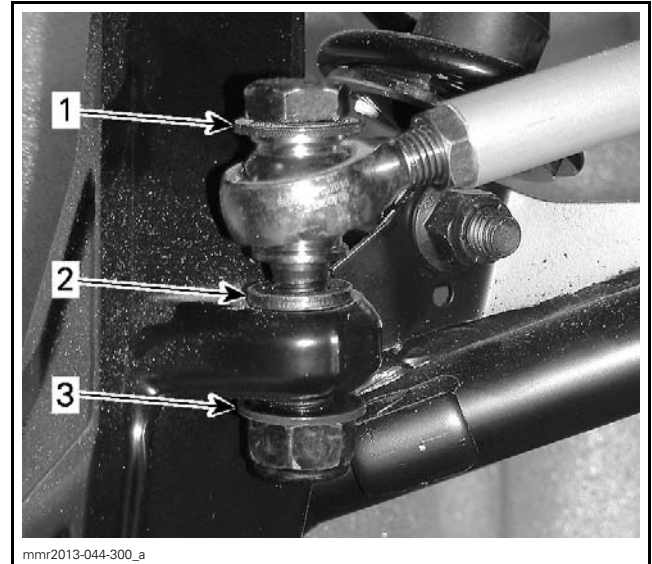

WHEN STEERING COLUMN IS INSTALLED AT THE FRONT POSITION

1. Hardened washer
2. Spacer (2.6 mm (3/32 in) thick)
3. Hardened washer

NOTE: When steering column is installed at the rear position, remove spacers against the ski legs as shown. Refer to *STEERING COLUMN* in this subsection.

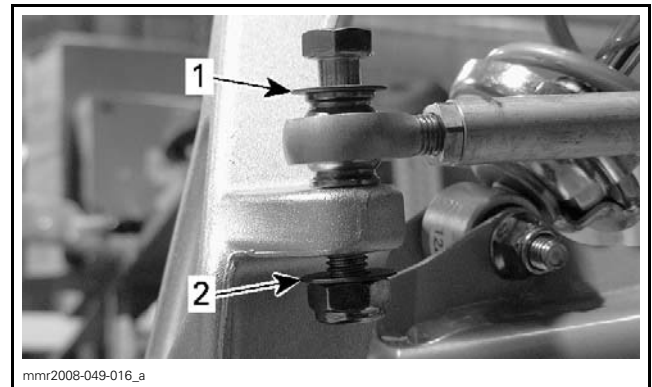

WHEN STEERING COLUMN IS INSTALLED AT THE REAR POSITION

1. Hardened washer
2. Hardened washer

5. Install nuts retaining tie-rod ends. Torque them to 48 N•m (35 lbf•ft).
6. Perform the steering alignment, refer to *STEERING ALIGNMENT* in this section.


STEERING COLUMN

Steering Column Removal

1. Remove bottom pan cover. Refer to *BODY* subsection.
2. Remove *HANDLEBAR EXTENSION* from steering column. See procedure in this section.

Subsection XX (STEERING SYSTEM)

3. Remove screws securing steering column upper support.
4. Remove the console front cap.

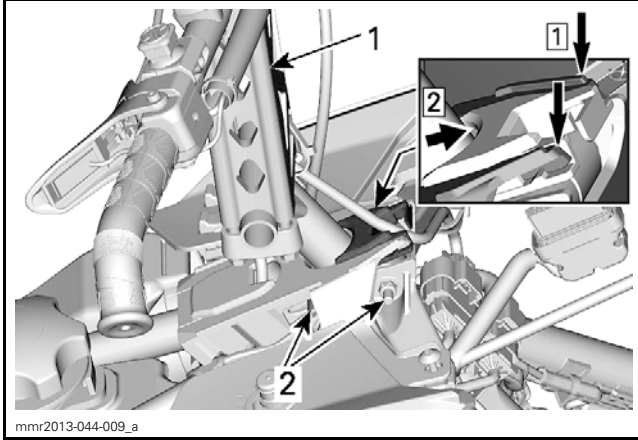


RH SIDE SHOWN

1. Handlebar extension
2. Screws of steering column upper support

Step 1: Push console support down and hold
Step 2: Pull out console front cap


5. From outside engine compartment, remove the tie-rod ends from the steering column.

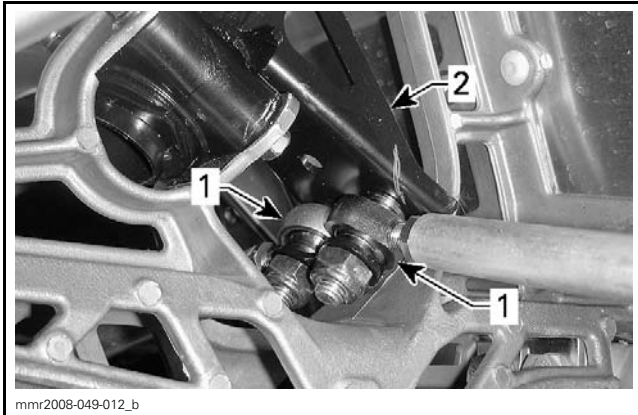

RH SIDE SHOWN

1. Tie-rod ends
2. Steering column


6. Remove screws securing the steering column lower support.

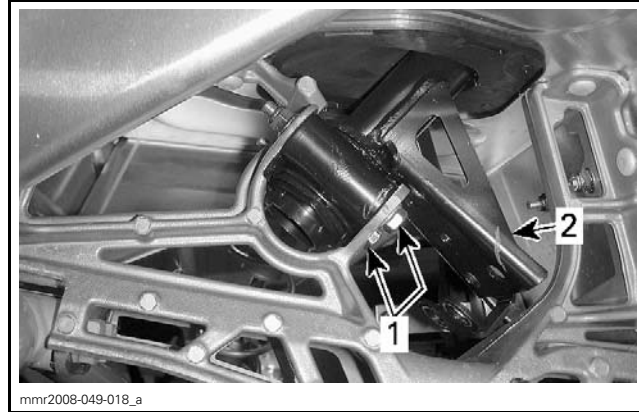

RH SIDE SHOWN

1. Steering column support screws
2. Steering column

7. From inside engine compartment, remove the steering column plate.

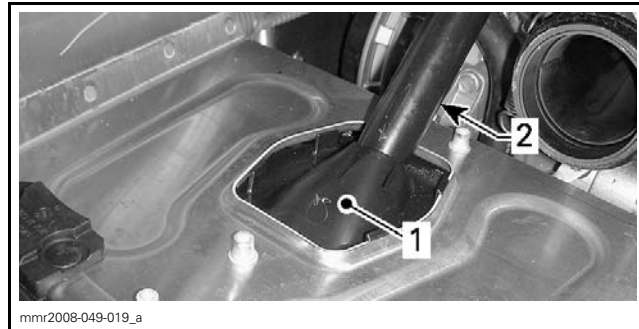

LH SIDE SHOWN

1. Steering column plate
2. Steering column

8. Pull steering column from top.

Steering Column Inspection

Check if steering column is:

- Cracked
- Bent
- Twisted
- Otherwise damaged.

Replace steering column if necessary.


⚠ WARNING

Do not try to repair a defective steering column.

Steering Column Position Adjustment

The steering column may be installed in one of two positions as desired.


Installation at the Front Position

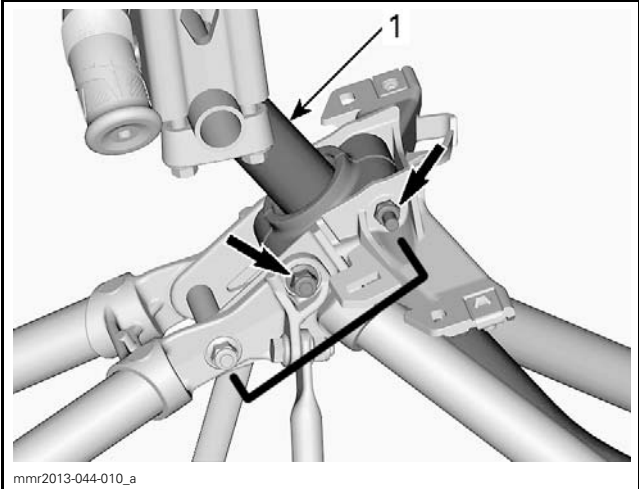

FRONT POSITION — PARTS REMOVED FOR CLARITY

- Install the console rear cap at the front of steering column.
- **Install** spacers against ski legs. Refer to *TIE-ROD INSTALLATION* in this subsection.

Installation at the Rear Position

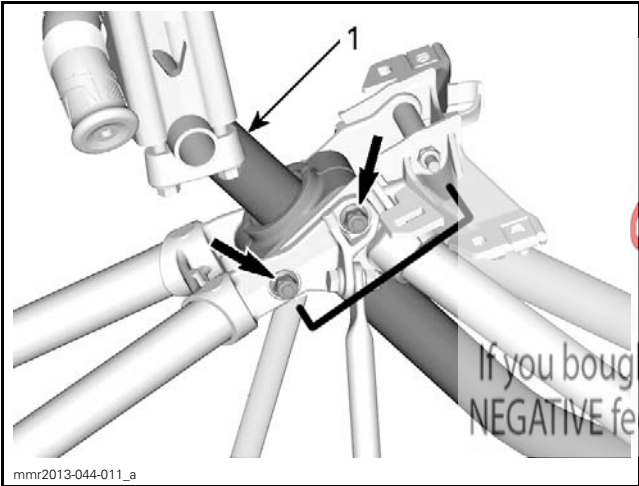

REAR POSITION — PARTS REMOVED FOR CLARITY

- Install the console rear cap at the rear of steering column
- **Remove** the spacers against ski legs. Refer to *TIE-ROD INSTALLATION* in this subsection.

Steering Column Installation

The installation is the reverse of the removal procedure. However, pay attention to the followings.

1. Apply SUSPENSION GREASE (P/N 293 550 033) on vibration dampers before installing upper and lower supports.

2. Install **NEW** elastic nuts on the steering column retaining screws.
3. Tighten nuts to the specified torque.

NUTS TIGHTENING TORQUE	
Upper steering column support	18 N•m (159 lbf•in)
Lower steering column support	10 N•m (89 lbf•in)



Paperless Manuals
For a Better Tomorrow

If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

BODY

SERVICE TOOLS

Description	Part Number	Page
CONSOLE NUT WRENCH	529 036 183	11
SUPERTANIUM DRILL BIT 3/16".....	529 031 800	12-15

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
ARROW TACKER	T-50	16

SERVICE PRODUCTS

Description	Part Number	Page
DIELECTRIC GREASE	293 550 004	4

GENERAL

CLEANING

Seat Cleaning

It is recommended to clean the seat with a solution of warm soapy water, using a soft clean cloth.

NOTICE Avoid use of harsh detergents such as strong soaps, degreasing solvents, abrasive cleaners, paint thinners, etc. that may cause damage to the seat cover.

Plastic Cleaning

Clean the vehicle thoroughly, removing all dirt and grease accumulation.

To clean use a soft clean cloth and either soapy water or isopropyl alcohol.

To remove grease, oil or glue use isopropyl alcohol.

NOTICE Do not apply isopropyl alcohol or acetone directly on decals.

Follow these recommendations to protect the glossy finish of polypropylene parts.

Apply a non abrasive wax on glossy finish only.

Non Compatible Cleaning Products

NOTICE Polypropylene is not compatible with PETROLEUM BASE PRODUCTS. Contact with petroleum base products, such as cleaners or lubricants will permanently alter the glossy finish of polypropylene parts.

NOTICE The following products must not be applied on the plastic components used on the vehicles:

- Gasoline
- Brake fluid
- Kerosene
- Diesel fuel
- Lighter fluid
- Varsol
- Naphtha
- Acetone
- Strong detergents
- Abrasive cleaners
- Waxes containing an abrasive or a cleaning agent in their formula.

MATERIAL TYPE	NON-COMPATIBLE CLEANING PRODUCTS
Polypropylene	ANY PETROLEUM BASE CLEANING PRODUCTS
	XP-S ATV Finishing Spray (P/N 219 701 704)
	XP-S ATV Cleaning Kit (P/N 219 701 713) (it contains the above XP-S ATV Finishing Spray)

Subsection XX (BODY)



vbs2012-006-002_a

DO NOT USE ON POLYPROPYLENE

Compatible Cleaning Products

MATERIAL TYPE	COMPATIBLE CLEANING PRODUCT
Polypropylene	XPS ATV Wash (P/N 219 701 702)
	Soapy water




vbs2012-006-001

SAFE FOR POLYPROPYLENE

BODY PARTS REPAIR

The very first step before repairing plastic materials is to find out exactly which type of material is involved.

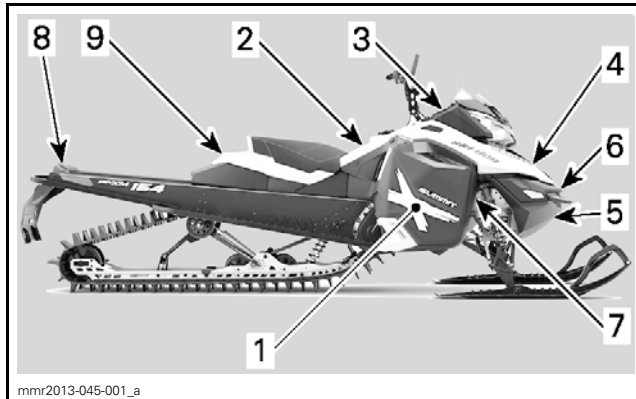

mnr2013-045-001_a

TYPICAL — SUMMIT X SHOWN

PLASTIC PARTS		
PARTS		MATERIAL
1	Side panel	XS models: Polypropylene for bottom section and surlyn for top section XM models: Polypropylene
2	Console	Surlyn
3	Gauge support	Polypropylene with glass fiber
4	Hood	Center section: Polypropylene Side section: Surlyn
5	Front bottom pan and side bottom pan	Polypropylene
6	Bottom pan cover	Polypropylene
7	Side bottom pan	Polypropylene
8	Tail light support	Polypropylene
9	Seat storage compartment	Polypropylene

NOTICE Some repair products are not compatible with certain plastics.

⚠ WARNING

Polycarbonate windshields must never be repaired by welding or otherwise.

The following company provides a complete line of products to repair plastic materials:

CREST INDUSTRIES, INC.
Trenton, MI 48183
Phone: 734 479-4141
Toll Free: 1 800 822-4100
Fax: 734 479-4040
E-Mail: info@crestauto.com
www.crestauto.com

PROCEDURES

NOTE: The same procedure applies for RH and LH side. Most of the time, only one side is described in this subsection.

DECAL

Decal Replacement

1. To remove a decal; heat old decal with a heat gun (low temperature) and peel off slowly.
2. Using isopropyl alcohol, clean the surface and dry thoroughly.

NOTICE Do not apply isopropyl alcohol or solvent directly on decals. Use only in a well ventilated area.

3. Just before beginning to affix the new decals, wipe the surface with a clean damp cloth and allow to dry.
4. Use a pallet to affix the decal. Always work from the center towards the edges.


NOTICE Do not remove the pre-mask yet.

5. Once the decal is correctly affixed, carefully make a final pass with the pallet. Apply enough pressure to make sure the glue sticks well on the surface.
6. Remove the pre-mask.

SIDE PANEL

Side Panel Removal

1. Unhook both rubber latches.
2. Firmly pull the upper latch **upwards**.

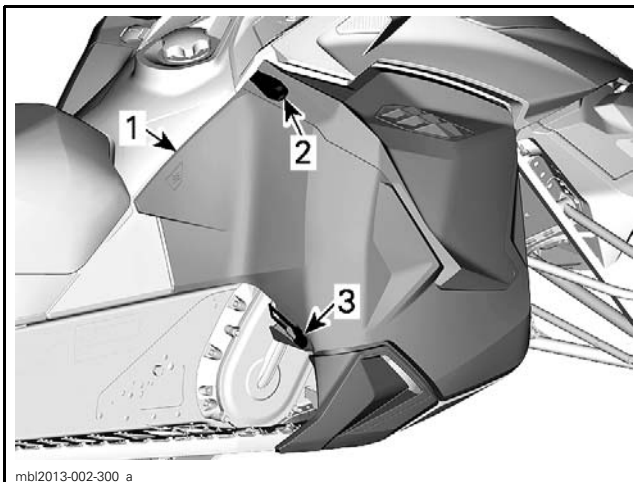

RH SIDE SHOWN
 1. Side panel
 2. Upper latch
 3. Lower latch

3. Open side panel.
4. Lift up the side panel and move the lower hinge out of its slot.
5. Free the upper hinge from its slot by lowering the side panel.

NOTICE Make sure to place panels in a safe place to avoid scratching.


Side Panel Installation

The installation is the reverse of the removal procedure.

REWIND STARTER HANDLE HOUSING


Rewind Starter Handle Housing Removal

1. Open RH side panel.
2. Remove screws retaining housing to oil reservoir.

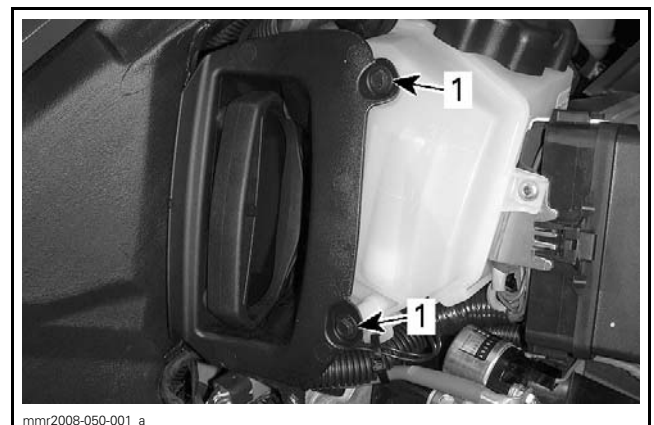

RH SIDE SHOWN
 1. Screws

3. Pull on housing to release it from oil reservoir.

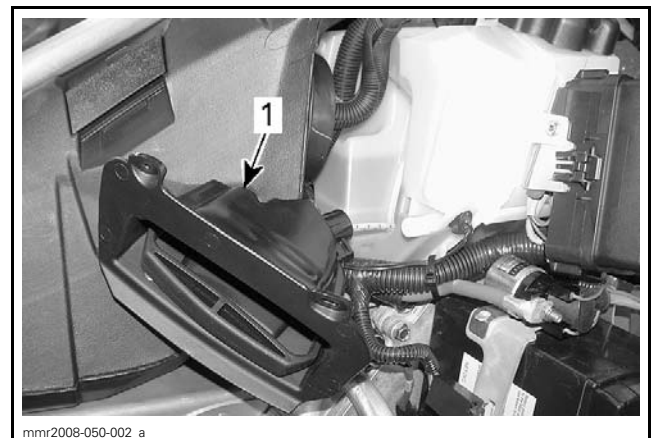

1. Housing

Subsection XX (BODY)


4. Remove rewind starter handle. Refer to *REWIND STARTER* subsection.

Rewind Starter Handle Housing Installation

Installation is the reverse of removal procedure. Pay attention to the following.

Push vigorously handle housing toward oil reservoir. Ensure it is properly set in place before installing hardware.


PART	TORQUE
Rewind starter handle housing screw	1 N•m (9 lbf•in)

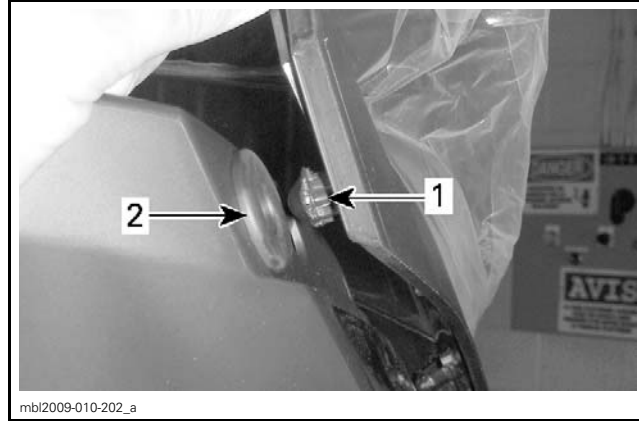

TYPICAL

1. Windshield tab
2. Gauge support front grommet

WINDSHIELD

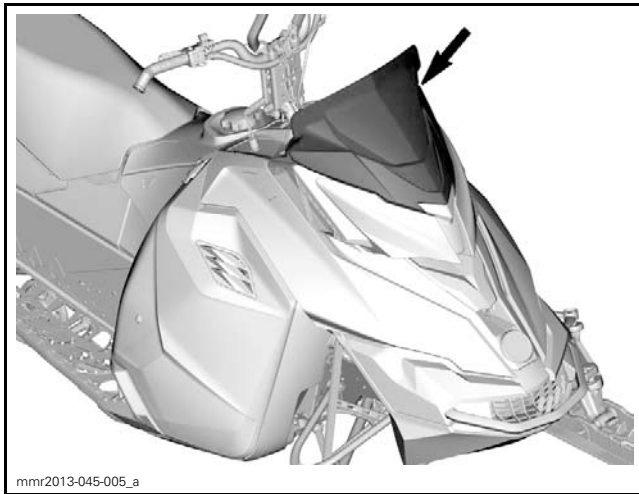

Windshield Removal

Place your hands on each side of windshield.

Pull the windshield until its pins come out of rubber grommets then pull in the center to remove center pin from grommet.


Windshield Installation

The installation is the reverse of removal procedure.


Lubricate the grommets using DIELECTRIC GREASE (P/N 293 550 004).

Secure windshield by inserting the windshield pins into the grommets.

NOTE: Make sure not to push grommets through gauge support holes.

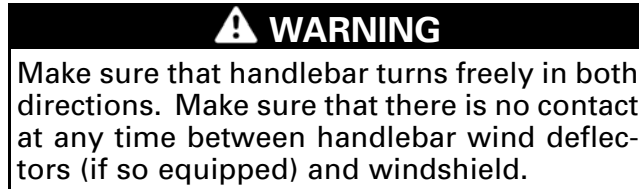


STORAGE COMPARTMENT COVER

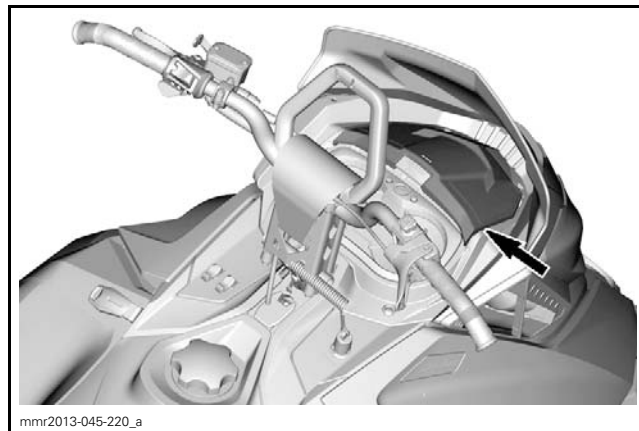

Storage Compartment Cover Removal

NOTICE First remove windshield. Otherwise, the storage cover could be damaged during removal.

1. Remove windshield.
2. Fully open storage cover until it is vertical.
3. Pull out storage cover.

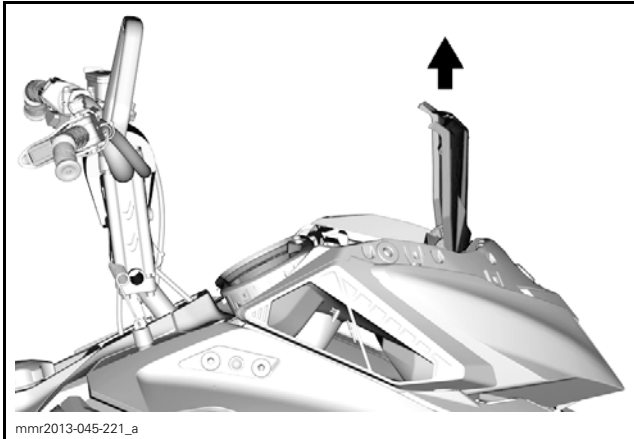


Storage Compartment Cover Installation

NOTICE Ensure windshield is NOT installed. Otherwise, the storage cover could be damaged during installation.


1. Position storage cover vertically.
2. Insert cover onto pivot pins.
3. Close and latch cover.
4. Install windshield.

GAUGE SUPPORT

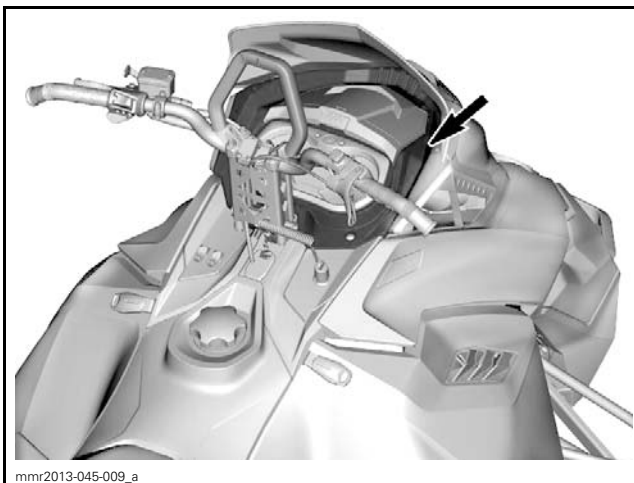

Gauge Support Removal

1. Remove *WINDSHIELD*. See procedure in this subsection.
2. Remove the multifunction gauge. Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection.
3. Remove the gauge support screws.

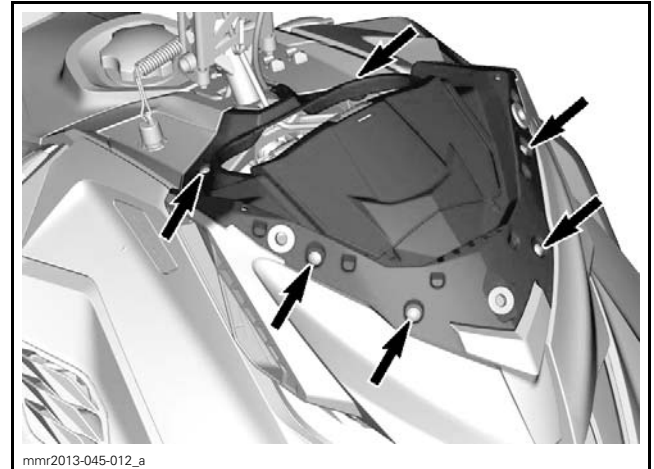


4. Pull out gauge support.

Gauge Support Installation


The installation is the reverse of removal procedure.

PART	TORQUE
Gauge support screws	2.3 N•m (20 lbf•in)

WIND DEFLECTORS (IF EQUIPPED)

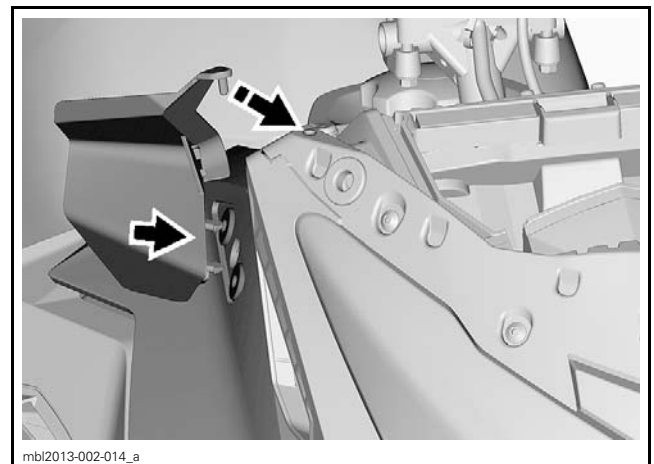


UPPER BODY MODULE

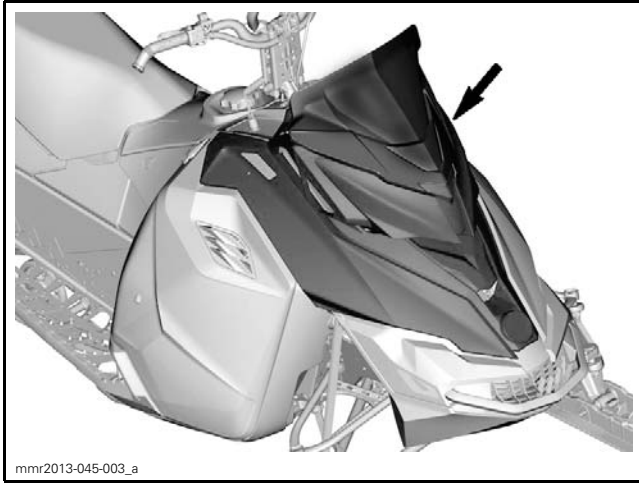

Upper Body Module Removal


NOTE: Upper body module can be removed with the windshield and gauge support installed as described in this procedure.

1. Remove the multifunction gauge. Refer to *LIGHTS, GAUGE AND ACCESSORIES* subsection.
2. Disconnect the headlight connector.

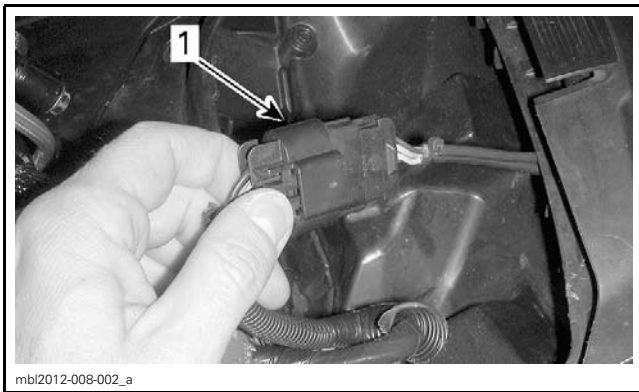


1. Headlights connector

3. Remove *SIDE PANELS*. See procedure in this subsection.
4. Remove gauge support rear screws.

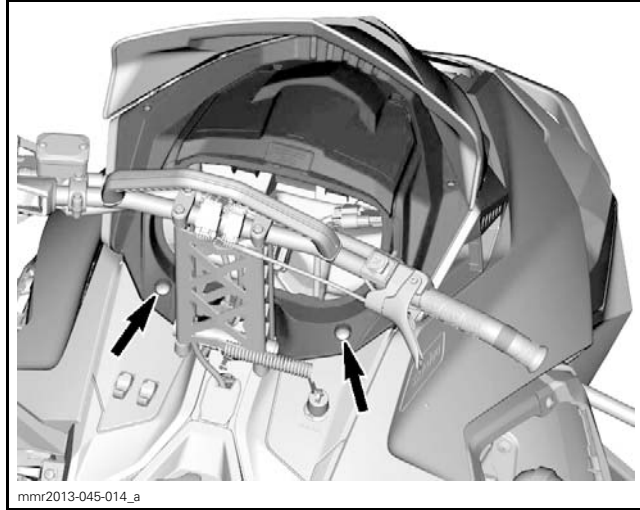


5. Remove the drive belt guard.
6. Disconnect the air intake connector tube.

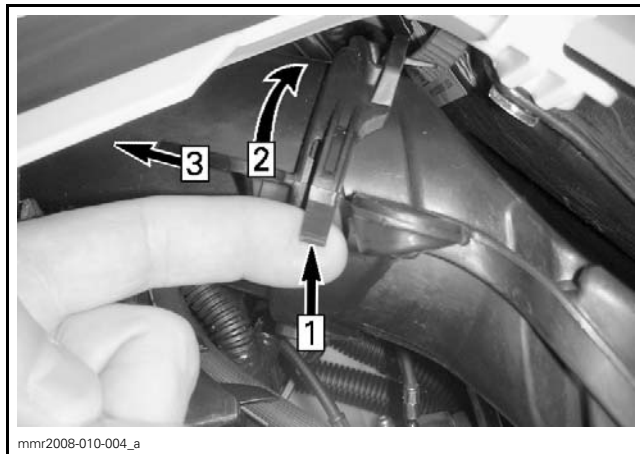

LH SIDE SHOWN

- Step 1: Lift tab
Step 2: Twist tube
Step 3: Pull forward


7. Disconnect air temperature sensor (ATS) on top of connector tube.

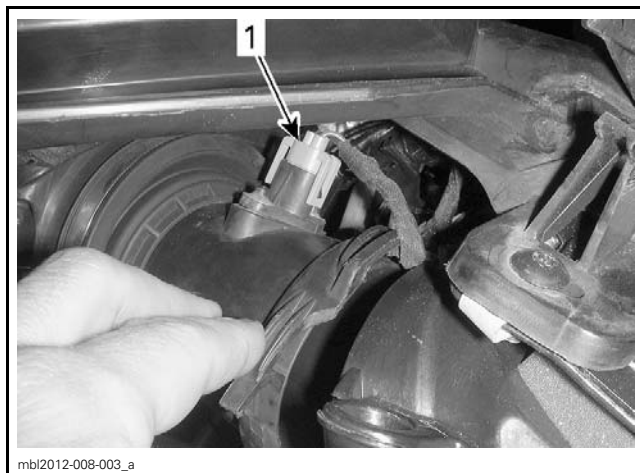

LH SIDE SHOWN

1. ATS connector


8. Disconnect the APS hose at the ECM.

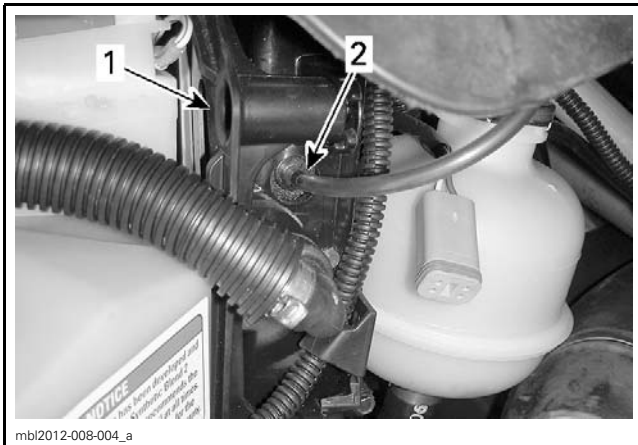

RH SIDE SHOWN

- 1. ECM
- 2. APS hose

9. Remove the upper body module retaining screws.

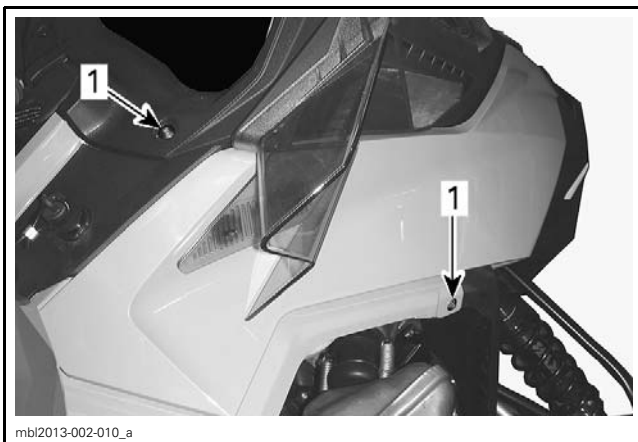

RH SIDE SHOWN

- 1. Retaining screws

- 10. Remove the upper body module.
 - 10.1 Grab the upper body module in the gauge support section.
 - 10.2 Lift the module by approximately 15°.
 - 10.3 Pull the module forward.




mbi2013-002-011_a

SLIDE TOWARDS FRONT

Upper Body Module Installation

- 1. Insert the upper body module tabs into the bottom pan cover openings.

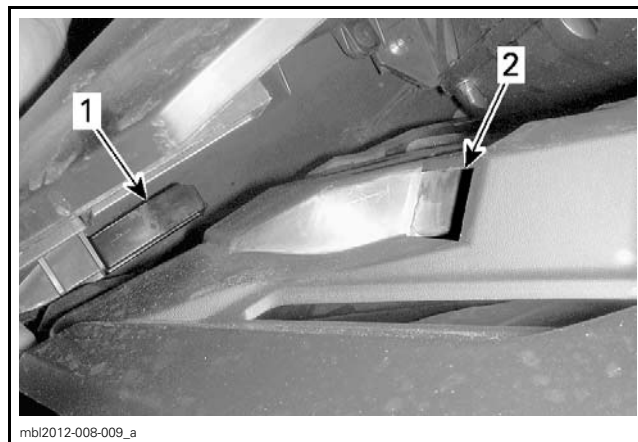

mbi2012-008-009_a

LH SIDE SHOWN


- 2. Slide the module towards rear with an angle of approximately 15°. When the pins are fully inserted in the slots, lower the module to reach the console screws.



mbi2013-002-011_b

Subsection XX (BODY)


3. On both sides, install the upper body module retaining screws.

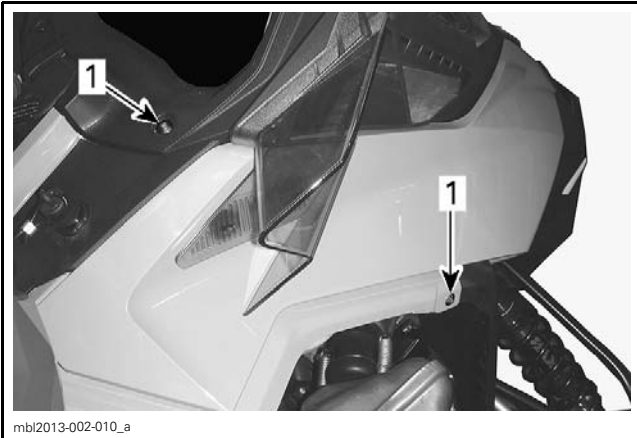

RH SIDE SHOWN
1. Retaining screws


4. Connect:
 - APS hose on the ECM
 - Headlights connector
 - Gauge connector
 - Air temperature sensor (ATS)
 - Air intake connector tube.
5. Install:
 - Gauge support rear screws
 - Gauge
 - Drive belt guard.
6. Install side panels

HOOD

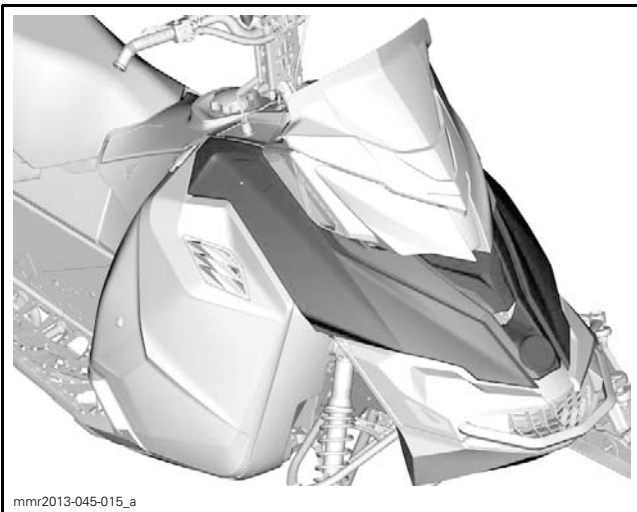


Hood Removal

1. See procedures in this subsection and remove:
 - Windshield
 - Upper body module
2. Remove hood access plate.

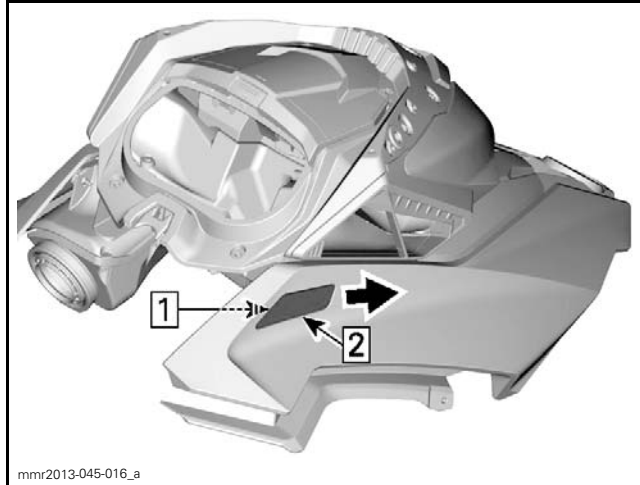

Step 1: Unlock from the back
Step 2: Slide plate forward

3. Remove hood screws.

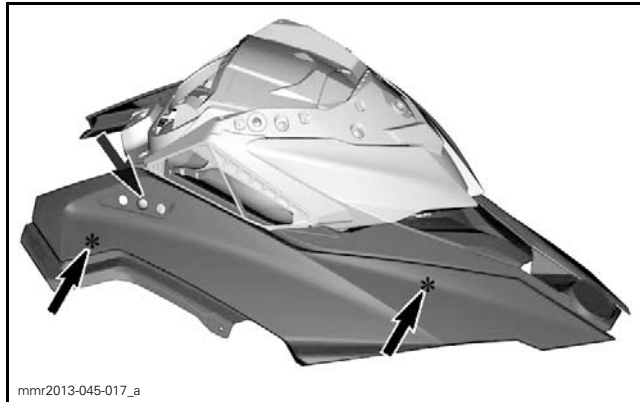

4. Pull out hood.

NOTE: You may need to twist the hood before pulling it out.




TOWARDS FRONT

Hood Installation

The installation is the reverse of removal procedure.


PART	TORQUE
Hood screws	1.7 N•m (15 lbf•in)

HEADLIGHT MODULE

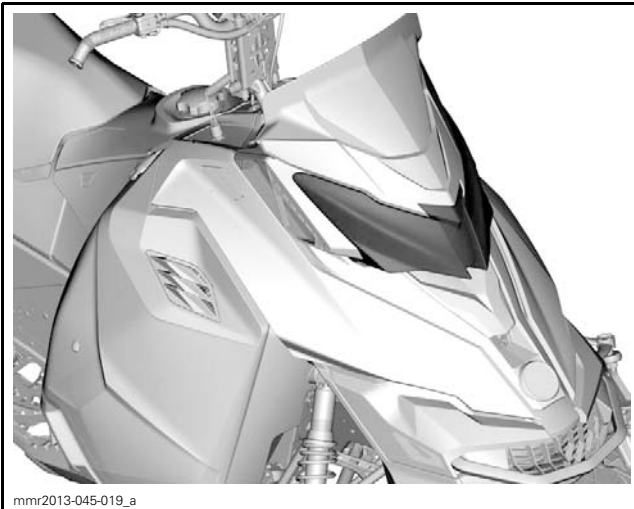


Headlight Module Removal

1. See procedures in this subsection and remove:
 - Hood
 - Gauge support
2. Remove retaining screws from mesh filter housing.

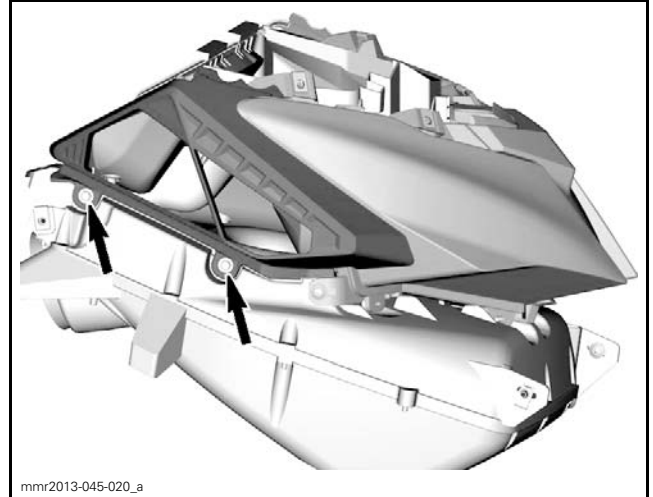


RH SIDE SHOWN

3. From top of upper body module, carefully release mesh filter housing tabs.
4. Detach connector from air intake silencer.

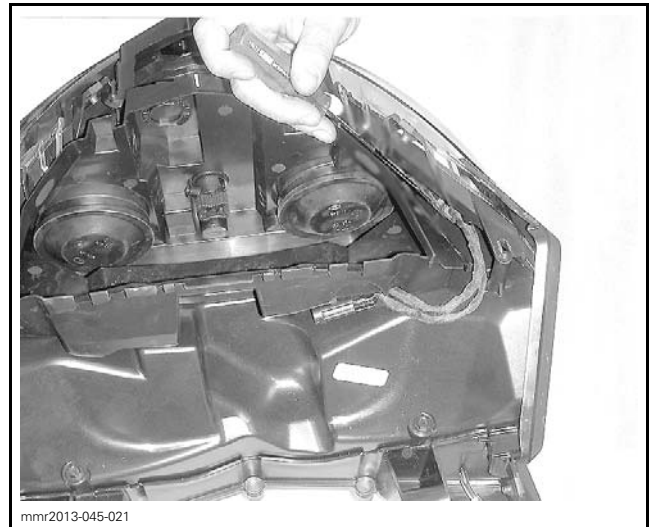

TOP OF UPPER BODY MODULE — RH SIDE TABS SHOWN


Subsection XX (BODY)

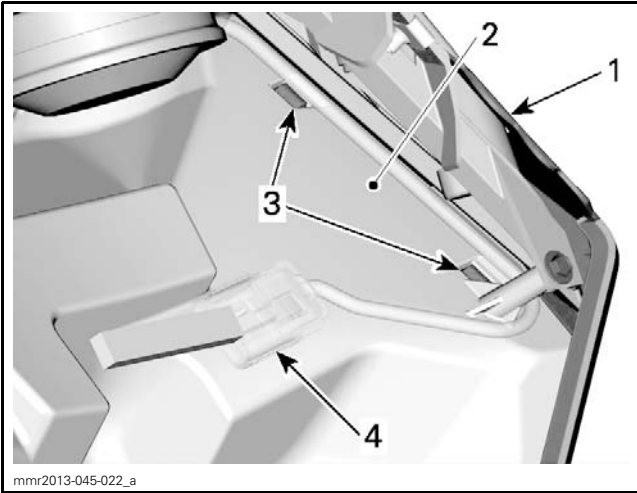

RH SIDE TABS SHOWN — RELEASE AND PUSH OUT BOTH TABS

1. Headlight housing
2. Air intake silencer
3. Mesh filter housing tabs
4. Connector

5. Remove headlight housing screws.

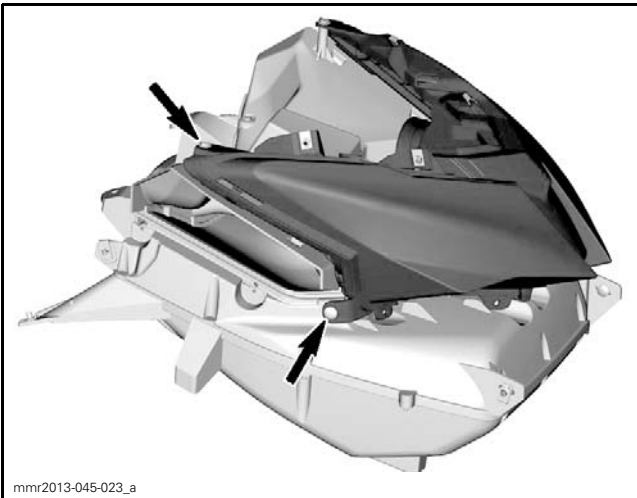

RH SIDE SHOWN

6. Pull out headlight housing.




Headlight Module Installation

The installation is the reverse of removal procedure.


PART	TORQUE
Mesh filter housing screws	1.7 N•m (15 lbf•in)
Headlight housing screws	1.9 N•m (17 lbf•in)

CONSOLE

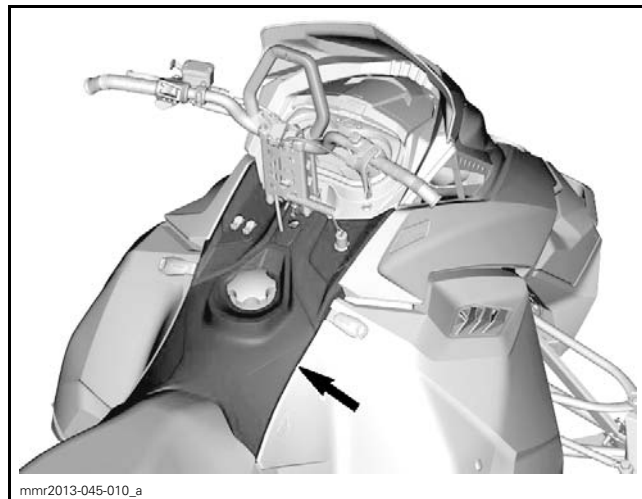

Console Removal

1. Remove *UPPER BODY MODULE*. See procedure in this subsection.
2. Remove seat.
3. Remove console screws.

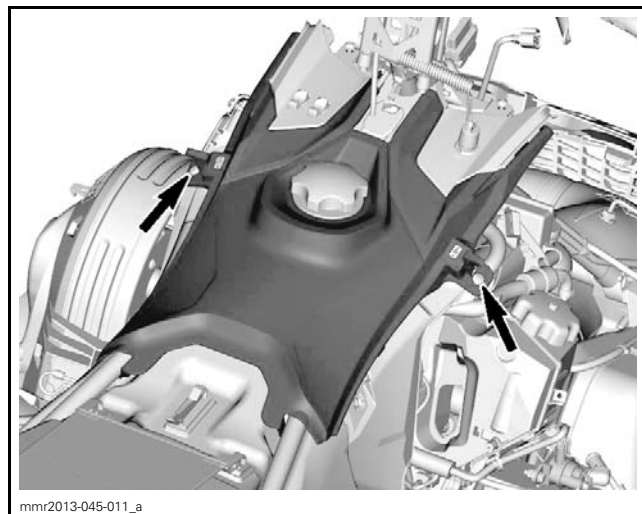

4. Remove fuel tank cap.

- Using the CONSOLE NUT WRENCH (P/N 529 036 183), unscrew the fuel tank nut.




- Lift up the console and unplug all connectors.
- Install fuel tank cap.

Console Installation

The installation is the reverse of removal procedure.


PART	TORQUE
Console screws	1.9 N•m (17 lbf•in)

BOTTOM PAN COVER

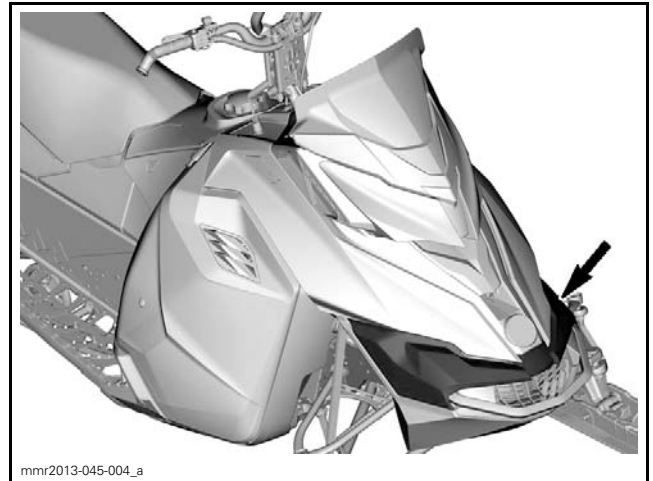

Bottom Pan Cover Removal

- Remove *HOOD*. See procedure in this subsection.
- Remove bottom pan cover screws.

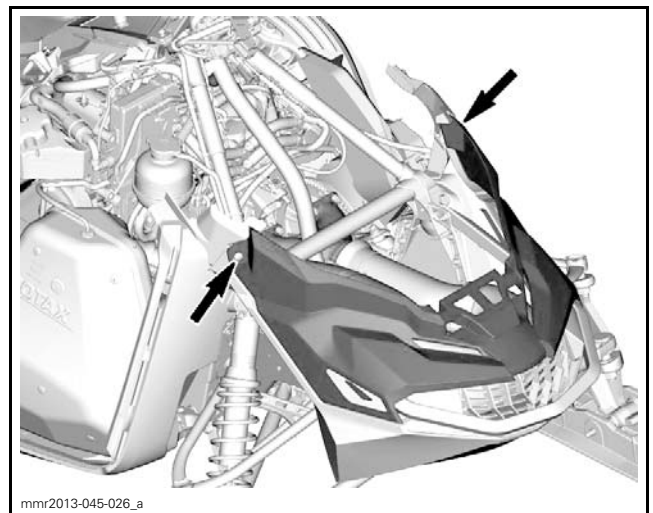

- Pull out bottom pan cover toward front.

FRONT BUMPER

Front Bumper Removal




mnr2013-045-027_a

Bottom Pan Cover Installation


The installation is the reverse of the removal procedure. However, pay attention to the following.

Ensure to slide front sides of bottom pan cover into bottom pan.

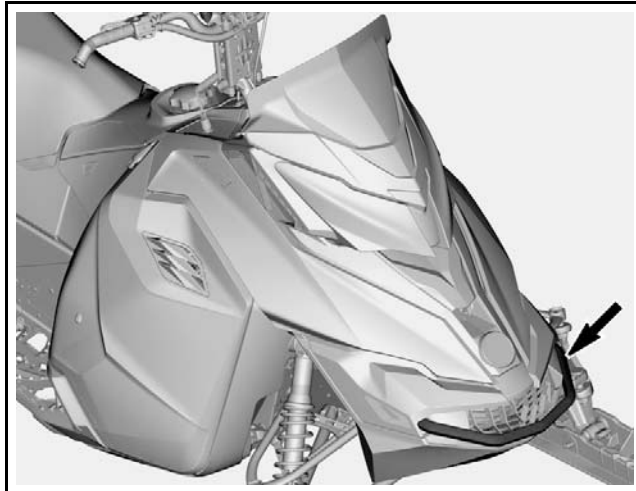


mnr2013-045-028_a

1. Remove *BOTTOM PAN COVER*. See procedure in this subsection.
2. Remove tuned pipe. Refer to *EXHAUST SYSTEM* subsection.
3. Using a SUPERTANIUM DRILL BIT 3/16" (P/N 529 031 800), drill out rivets from front bumper.
4. Remove front bumper bolts.

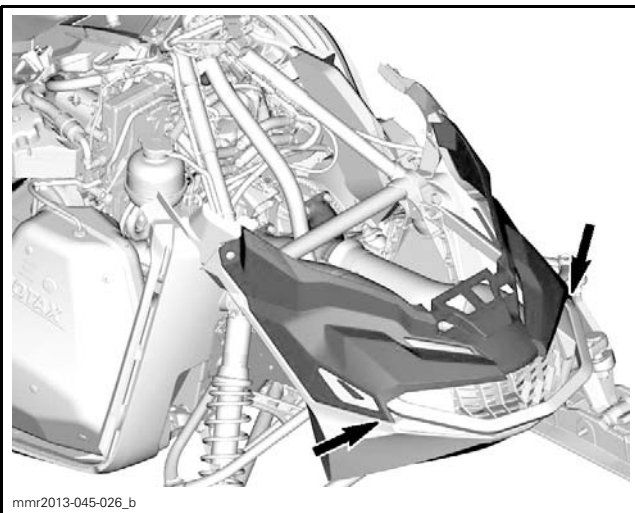

mnr2013-045-026_b

PART	TORQUE
Bottom pan cover screws	1.9 N•m (17 lbf•in)

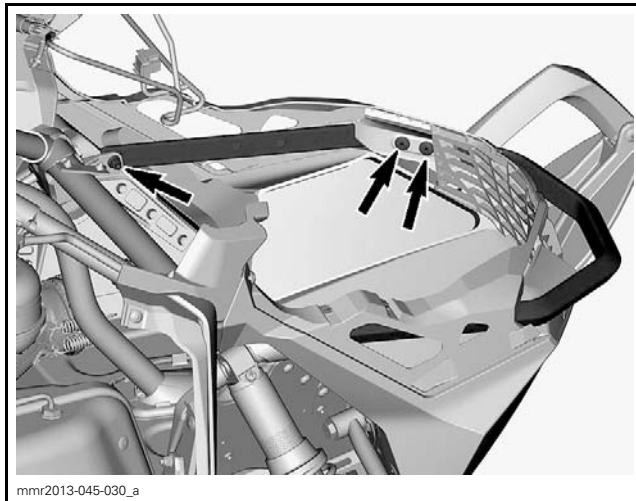

mnr2013-045-030_a

LH SIDE FASTENERS SHOWN

5. Pull out bumper toward front.

Front Bumper Installation

Install bumper on vehicle.


Install new rivets.

Install front bumper bolts and nuts.

PART	TORQUE
Front bumper screws	10 N•m (89 lbf•in)


Install remaining components.

FRONT BOTTOM PAN

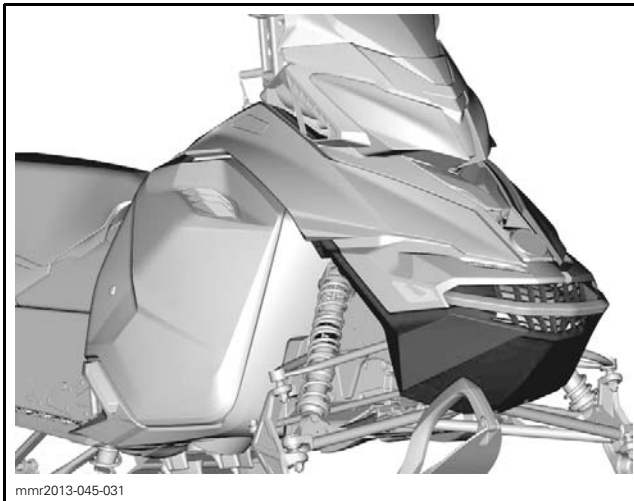


Front Bottom Pan Removal

1. Lift front of vehicle until skis are off the ground.
2. Place the front portion of frame on a wooden box to support it securely.

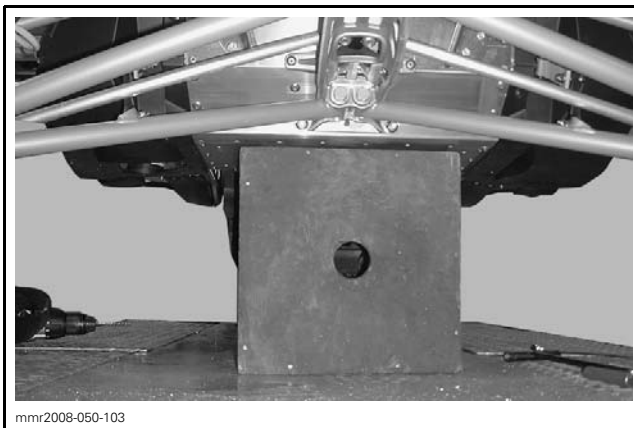


3. Remove *FRONT BUMPER*. See procedure in this subsection.

NOTE
Front bumper may remain attached to the front bottom pan. In this case, detach bumper from front member.

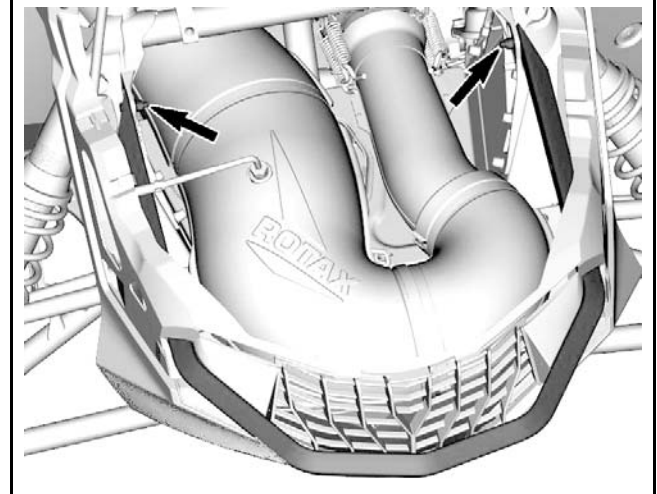

4. Remove tuned pipe. Refer to *EXHAUST SYSTEM* subsection.
5. On 800R models, detach TCM module harness from bottom pan.

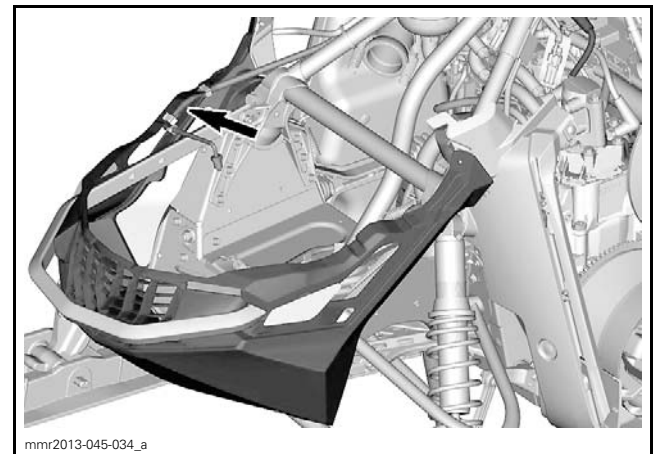


VIEW FROM LH SIDE — HARNESS ON RH SIDE

6. Remove front shock absorbers. Refer to *FRONT SUSPENSION* subsection.
7. Using an angle drill and a SUPERTANIUM DRILL BIT 3/16" (P/N 529 031 800), drill out all rivets retaining bottom pan.

NOTE: Refer to *FRAME* for proper procedure when drilling rivets retaining plastic parts.

Subsection XX (BODY)

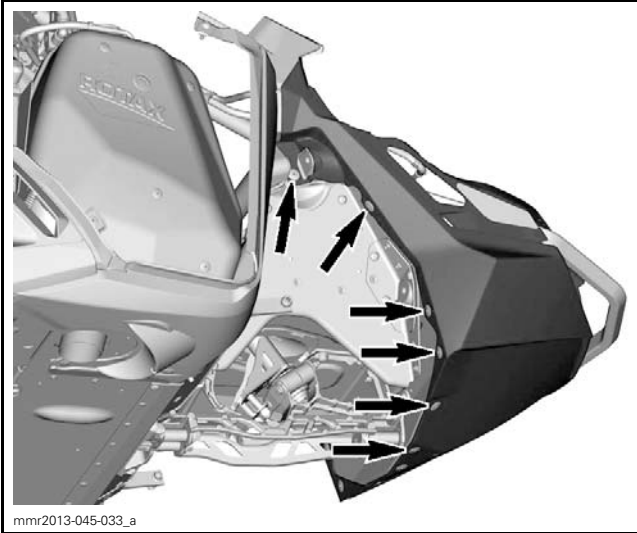

mnr2013-045-033_a


RH SIDE SHOWN — SOME PARTS REMOVED FOR CLARITY PURPOSE

8. Remove bottom pan.

Front Bottom Pan Installation

The installation is the reverse of removal procedure.

SIDE BOTTOM PAN CAP

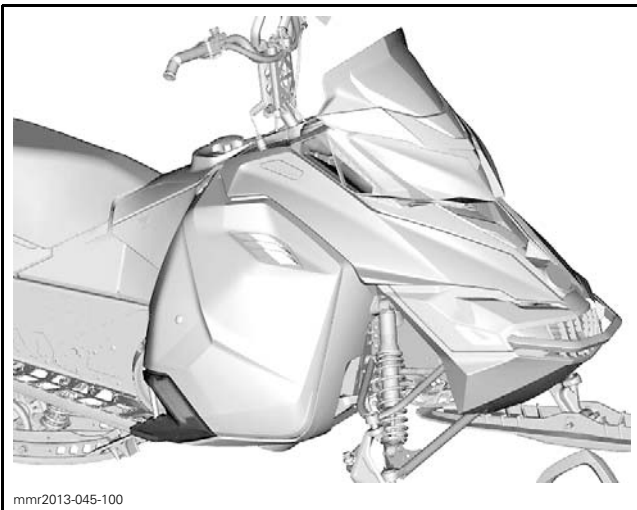


mnr2013-045-100

Side Bottom Pan Cap Removal

1. Remove LH and RH panels. Refer to procedure in this subsection.
2. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
3. Remove muffler. Refer to *EXHAUST SYSTEM* subsection.
4. Using an angle drill and a SUPERTANIUM DRILL BIT 3/16" (P/N 529 031 800), drill out all rivets retaining side bottom pan cap.


NOTE: Refer to *FRAME* for proper procedure when drilling rivets retaining plastic parts.

5. Remove screw retaining the rear of side bottom pan.

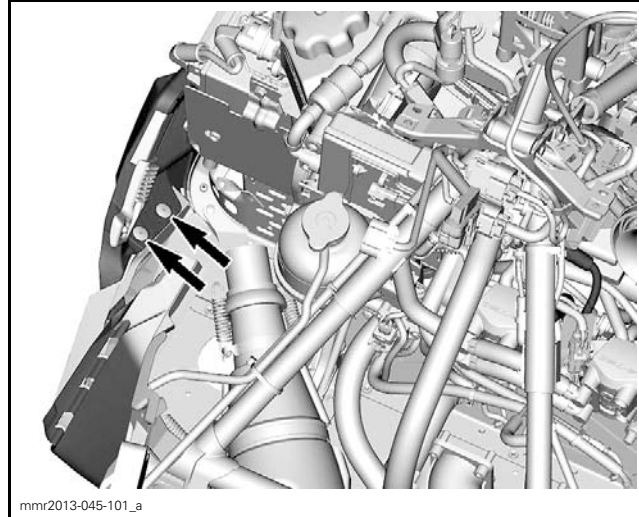

mnr2013-045-101_a

RH SIDE SEEN FROM FRONT LH SIDE

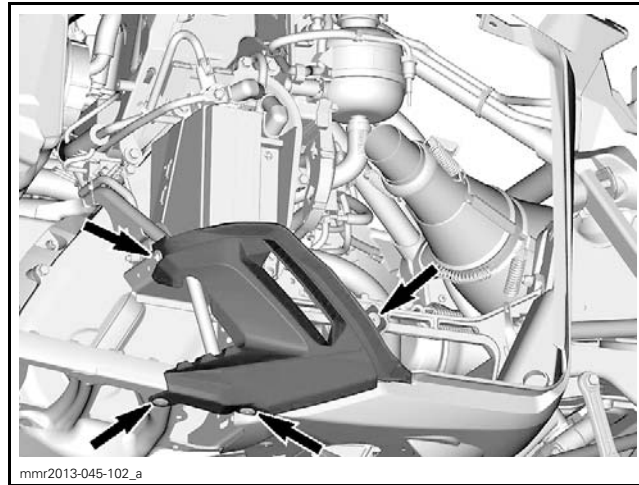

mnr2013-045-102_a


RH SIDE

Side Bottom Pan Cap Installation

The installation is the reverse of removal procedure.


PART	TORQUE
Side bottom pan cap screws	1.9 N•m (17 lbf•in)

SIDE BOTTOM PAN

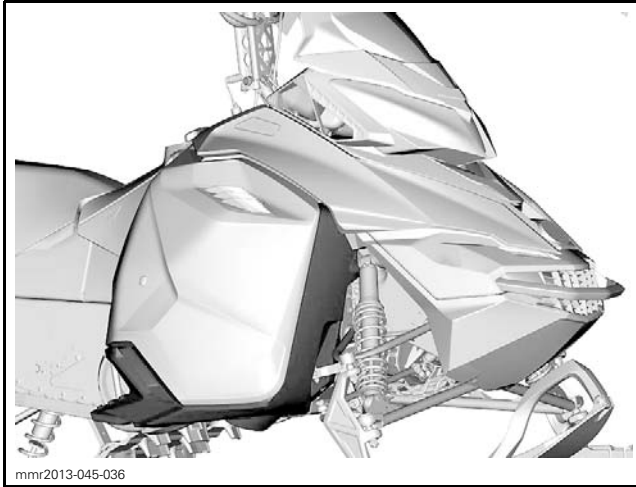


Side Bottom Pan Removal

1. Remove LH and RH panels. Refer to procedure in this subsection.
2. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
3. Lift front of vehicle until skis are off the ground.
4. Place the front portion of frame on a wooden box to support it securely.

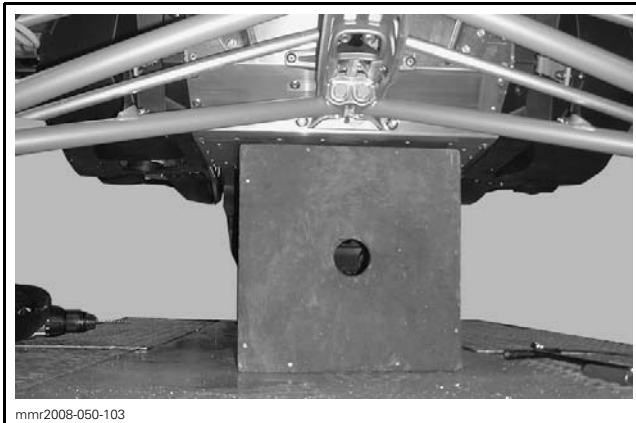

5. Remove *BOTTOM PAN COVER*. See procedure in this subsection.
6. Disconnect vent tube from side bottom pan.
7. Remove stabilizer bar lever. Refer to *FRONT SUSPENSION* subsection.

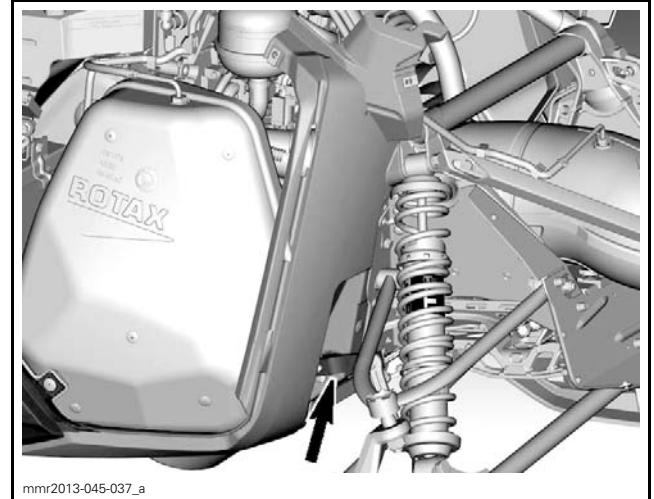

RH SIDE SHOWN

8. Using an angle drill and a SUPERTANIUM DRILL BIT 3/16" (P/N 529 031 800), drill out all rivets retaining side bottom pan.

NOTE: Refer to *FRAME* for proper procedure when drilling rivets retaining plastic parts.


9. Remove screws retaining the rear of side bottom pan.



RH SIDE SHOWN


NOTICE Be careful not to drill through muffler.

Subsection XX (BODY)

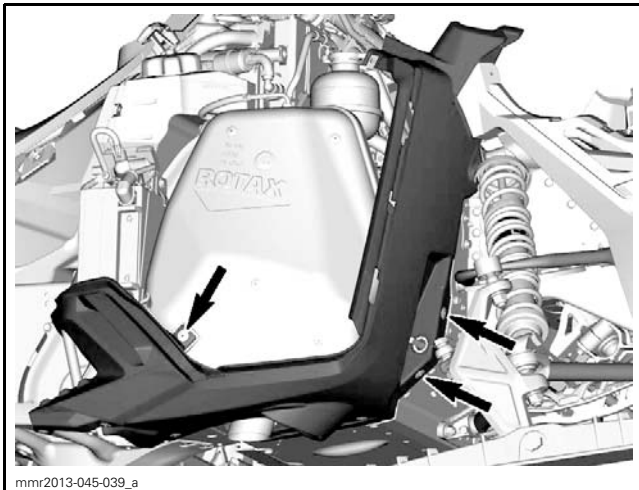

mmr2013-045-039_a

RH SIDE SHOWN

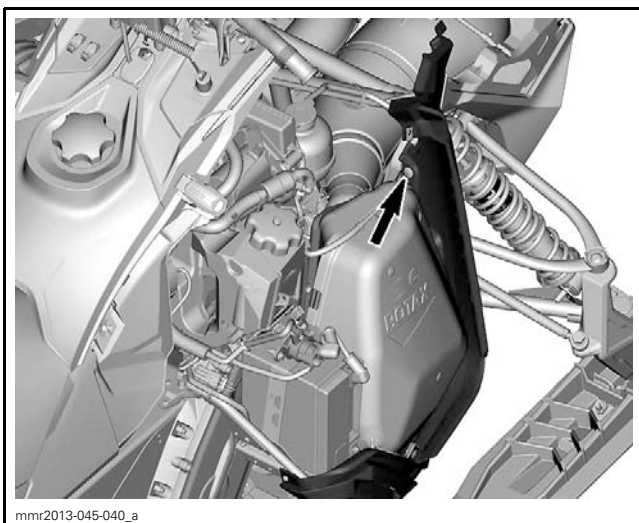

mmr2013-045-040_a

RH SIDE SHOWN

10. Remove bottom pan.

Side Bottom Pan Installation

The installation is the reverse of removal procedure.

PART	TORQUE
Side bottom pan screws	1.9 N•m (17 lbf•in)

SEAT COVER

Seat Cover Replacement

Remove seat.


Remove the old seat cover. Check the foam and replace it if necessary.

Install staples with an electric tacker such as Arrow tacker ETN-50 or with a manual tacker such as ARROW TACKER (P/N T-50).

NOTICE Ensure to use the proper length staples. Extra long staples would pierce the exposed side of the leatherette.

NOTE: For an easier installation, it is highly recommended to use an electric tacker.

Ensure that the seat rest firmly against a hard surface such as a piece of wood. This is done to get the staples completely pushed in place.

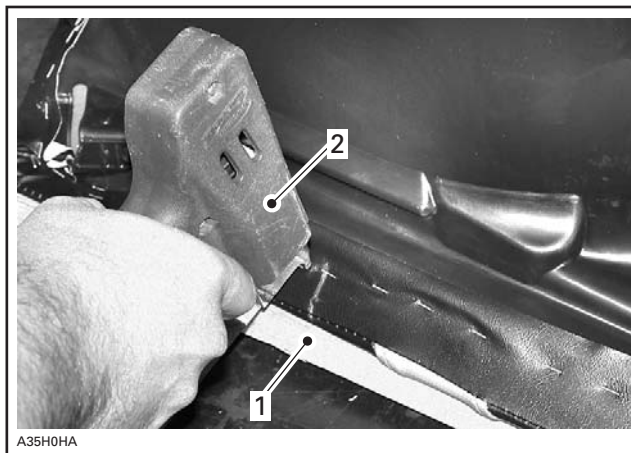

A35H0HA

TYPICAL

1. Piece of wood
2. Tacker


After seat cover installation, cut all around the excess of material.

REAR BUMPER

PART	TORQUE
Rear bumper screws	16 N•m (142 lbf•in)

TAIL LIGHT HOUSING

Release the locking tab from underneath tunnel.

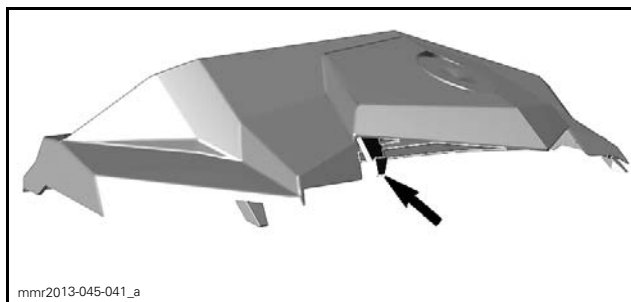

mmr2013-045-041_a

Pull housing toward rear.

FRAME


SERVICE TOOLS


Description	Part Number	Page
SUPERTANIUM DRILL BIT 3/16".....	529 031 800	6

SERVICE PRODUCTS


Description	Part Number	Page
LOCTITE 380 (BLACK MAX)	413 408 300	14
XPS SYNTHETIC CHAINCASE OIL	413 803 300	6

Subsection XX (FRAME)

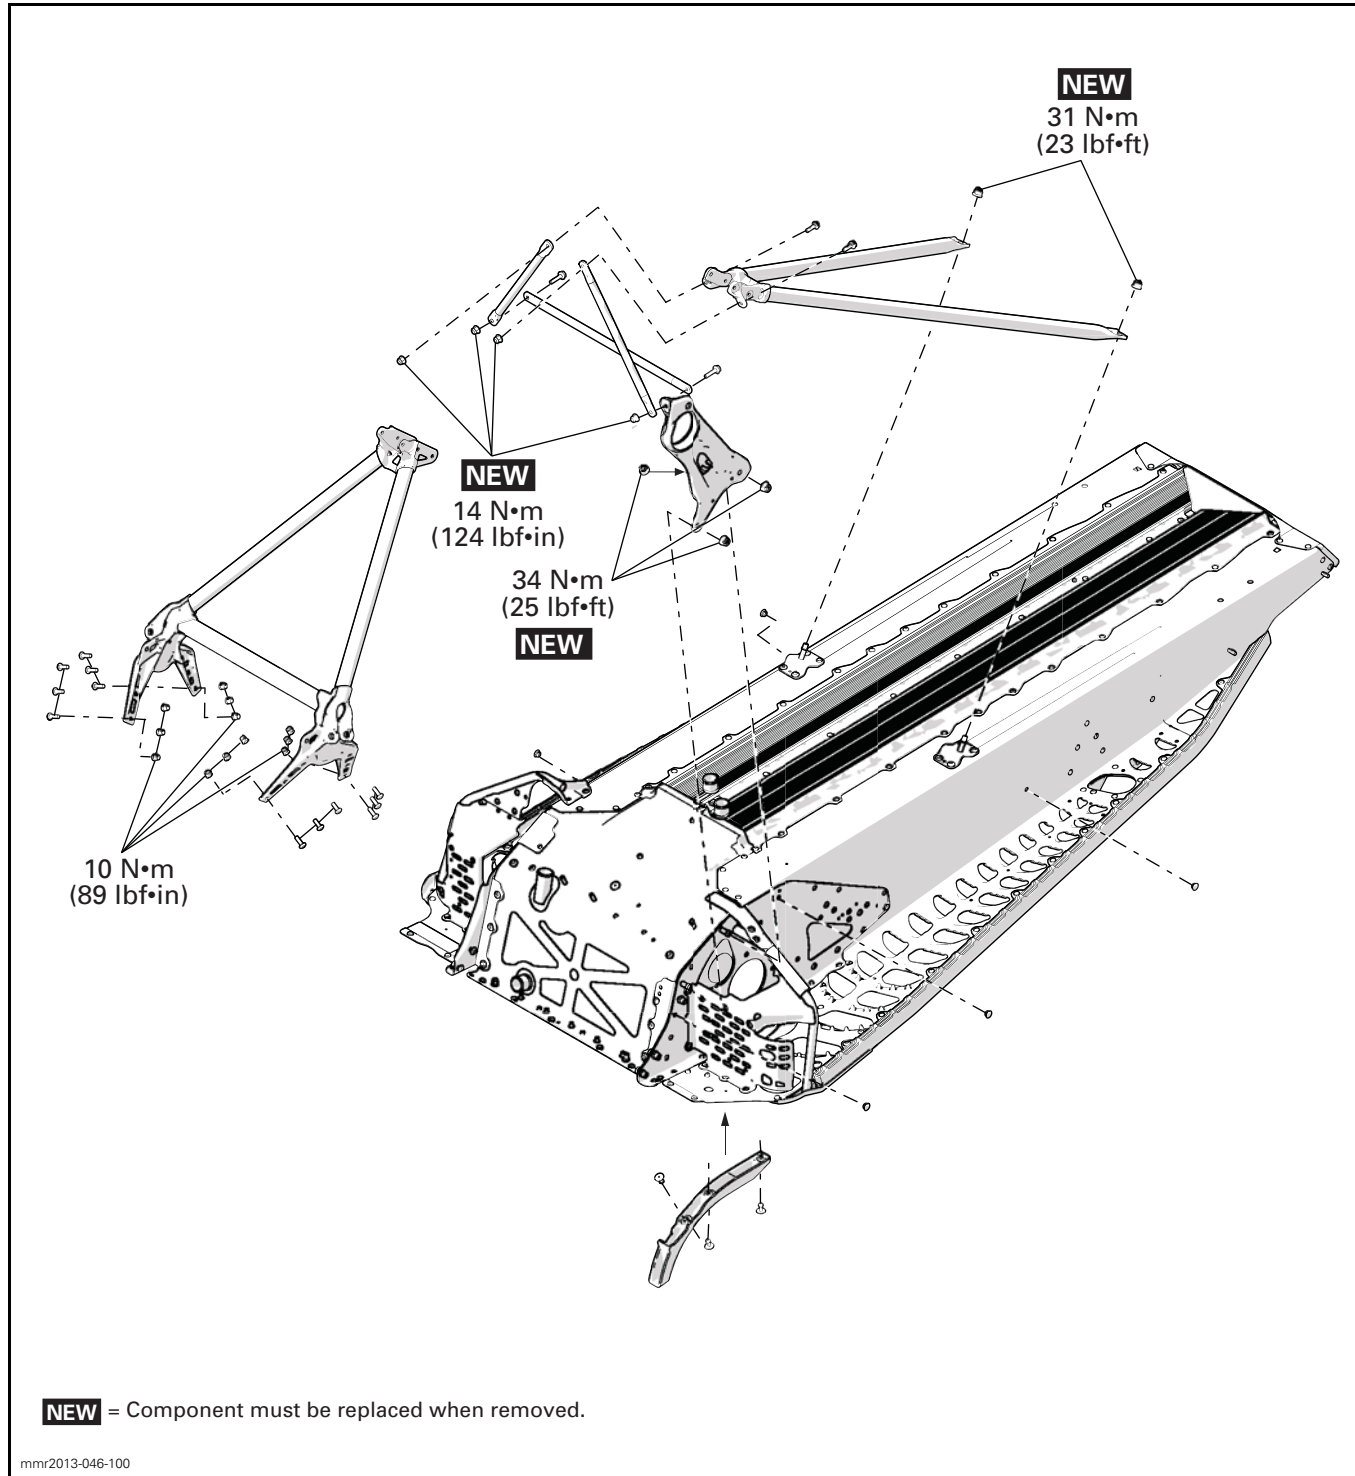


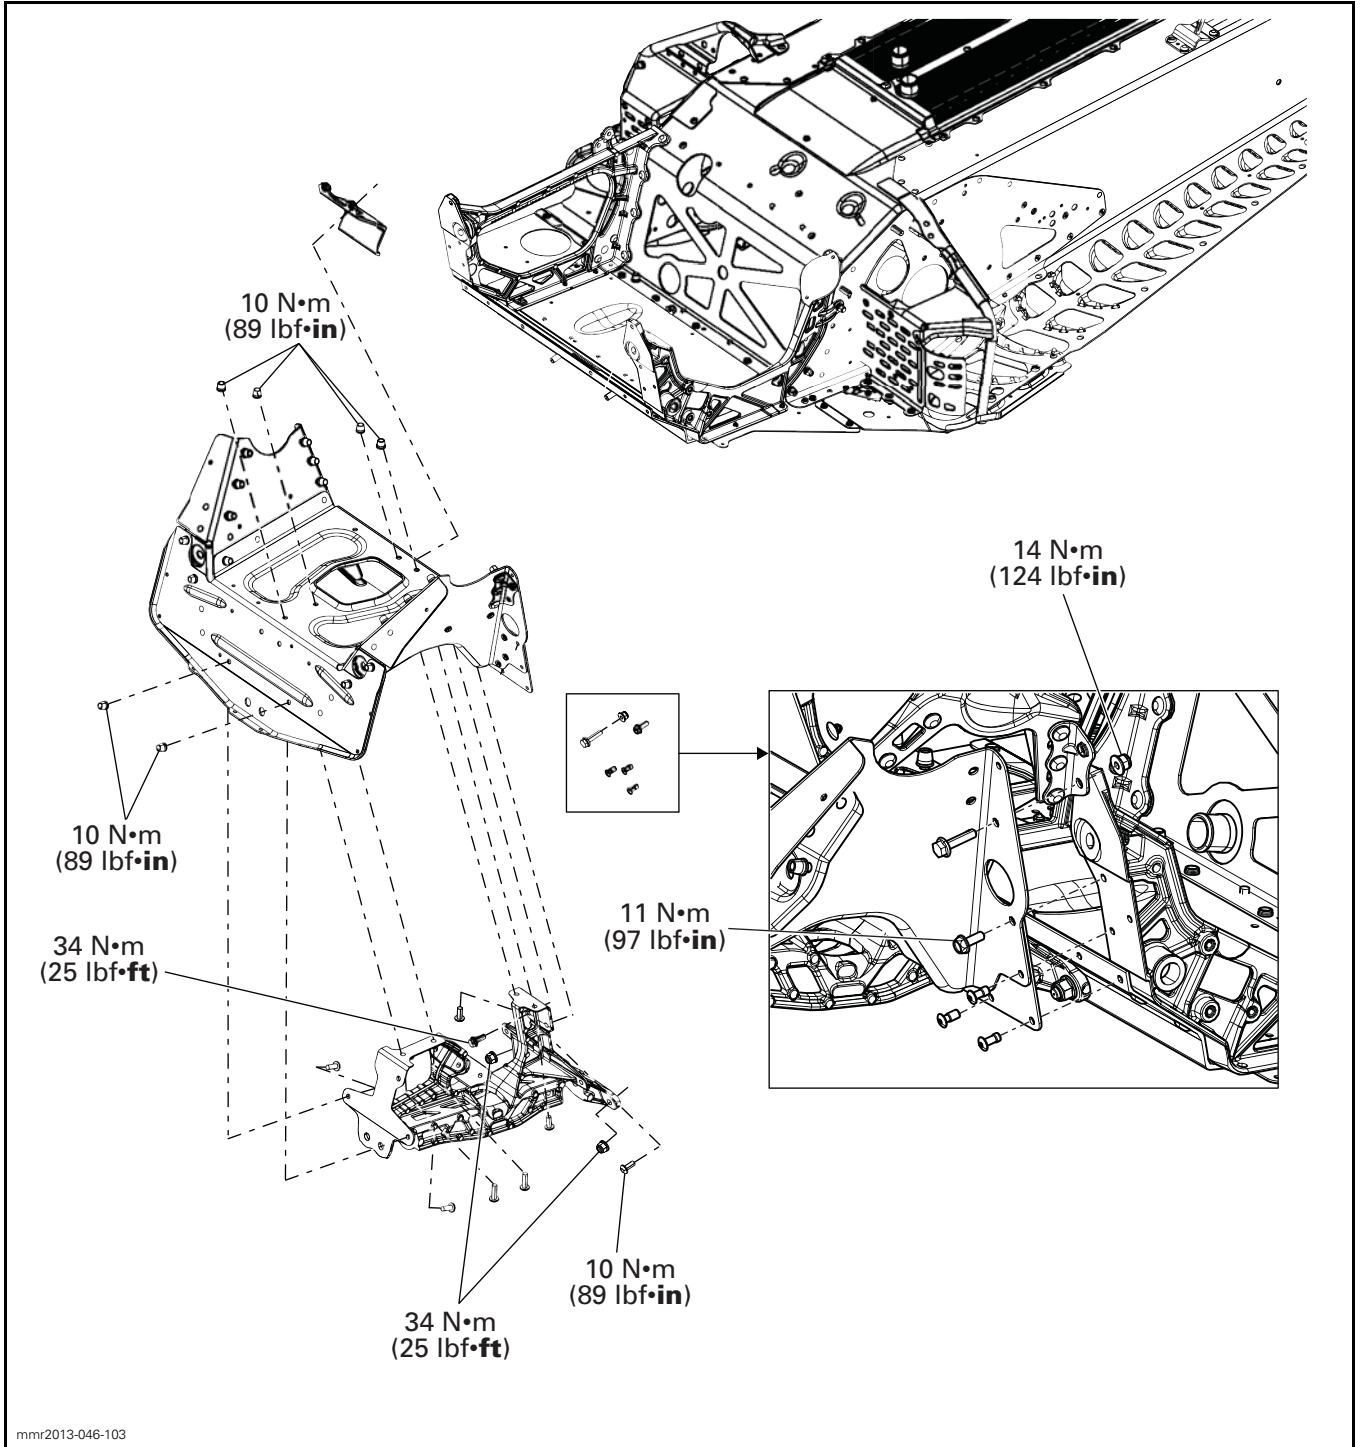

Subsection XX (FRAME)

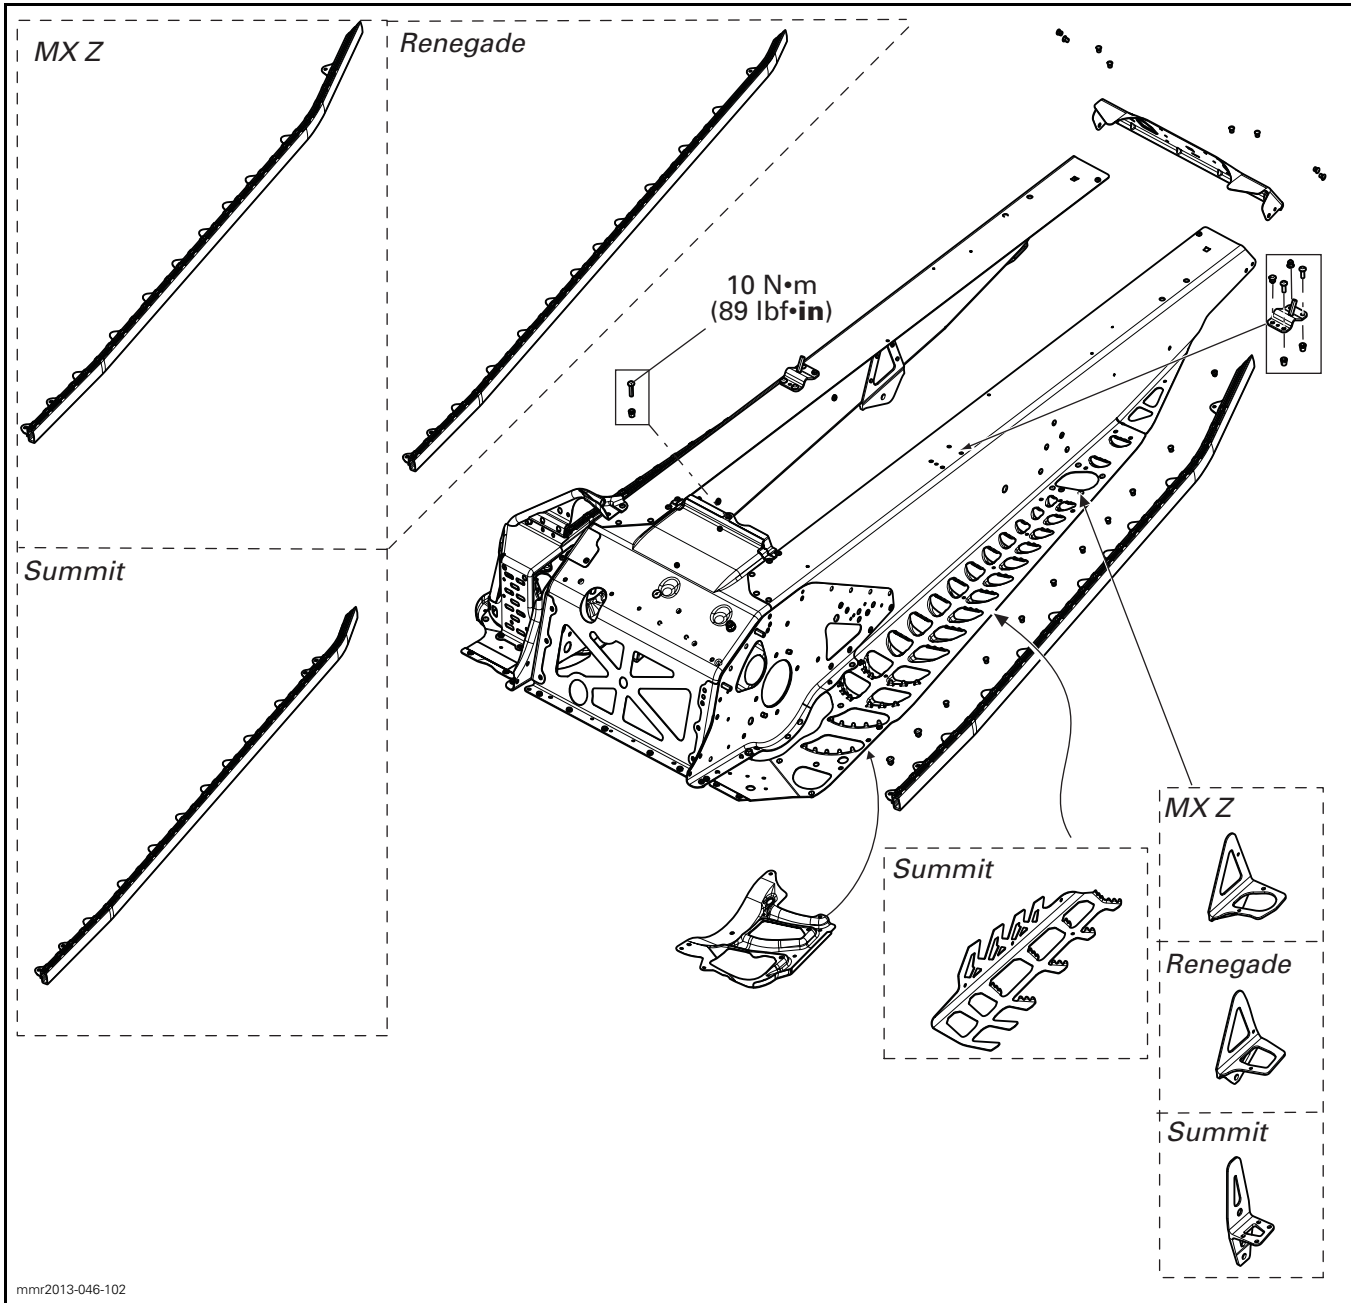

mmr2013-046-102

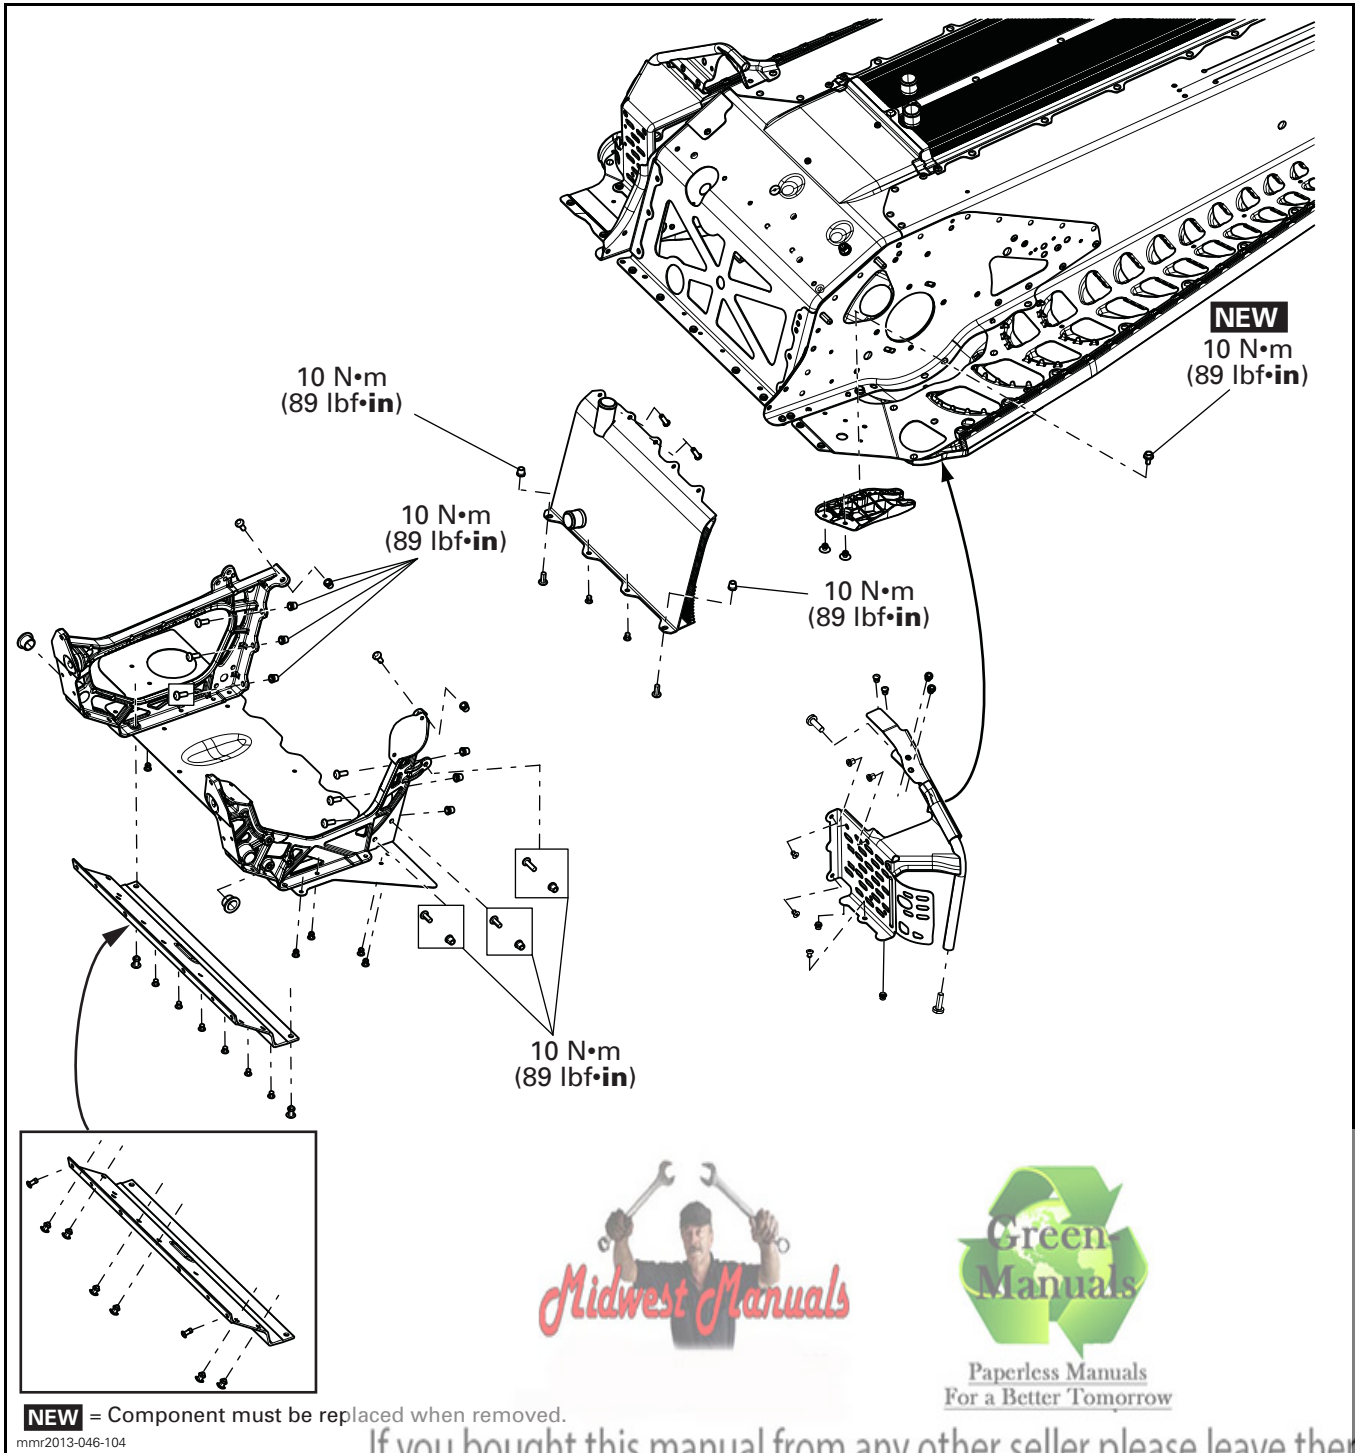

If you bought this manual from any other seller please leave them
NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

GENERAL

During assembly/installation, use the torque values and the service products as in the exploded views.

Clean threads before applying a threadlocker. Refer to *SELF-LOCKING FASTENERS* and *LOCTITE APPLICATION* at the beginning of this manual for complete procedure.

⚠ WARNING

Torque wrench tightening specifications must be strictly adhered to. Locking devices (e.g.: locking tabs, elastic stop nuts, cotter pins, etc.) must be replaced with new ones.

Check for loose, bent, worn out, rusted or otherwise damaged components. Replace the faulty components.

PROCEDURES

RIVETS


For proper drilling instructions and to prevent premature wear, follow the procedures as detailed.

NOTICE When removing rivets, do not enlarge or deform the rivet holes in the frame.

Self-Percing Rivet Removal

Recommended Method


1. Using a grinding disk, grind the rivet end.

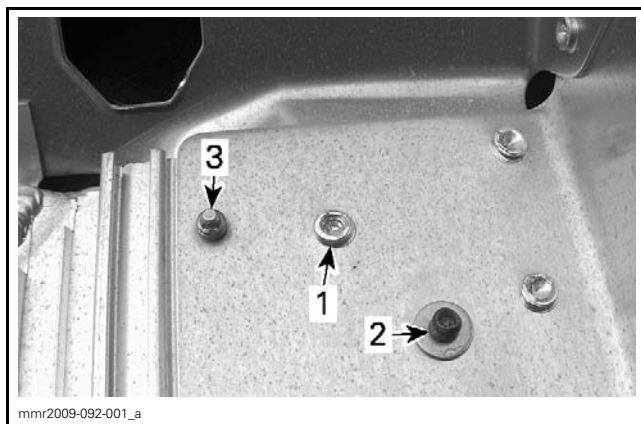

TYPICAL

1. Grind this side of self-drilling rivet
2. Pop rivet
3. STAVEX rivet

2. Support the frame around the rivet head with a socket on the opposite side to avoid warpage.

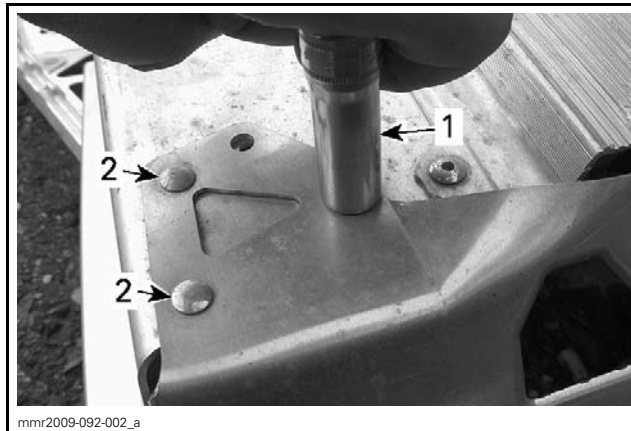

TYPICAL

1. 11 mm socket over a rivet head
2. Rivet heads

3. Drive out remaining rivet using a punch.

Alternative Method

1. Use a SUPERTANIUM DRILL BIT 3/16" (P/N 529 031 800) and a variable speed drill.
2. Partially drill **rivet end** — not the rivet head.

NOTICE High speed drilling will cause excessive heat which may destroy the cutting edge of the bit; therefore, avoid using pneumatic drills.

NOTE: To increase bit life, use XPS SYNTHETIC CHAINCASE OIL (P/N 413 803 300) as a cutting oil.

3. Cut rivet using a chisel.
4. Remove riveted part.
5. Drive out remaining rivet head using a punch.

Pop Rivet Removal

1. Use a SUPERTANIUM DRILL BIT 3/16" (P/N 529 031 800), and a variable speed drill.
2. Drill **rivet head** sufficiently to cut through rivet head.


NOTICE Drill only sufficiently to cut rivet head. Do not drill into frame material, or part secured using the rivet. When rivet is used to secure a plastic part, use pliers to avoid rotation of rivet with drill bit and heating or melting of the plastic part.

3. Using a small punch, drive out the remaining rivet end.

HUCK Rivet Removal

Recommended Method

1. Using a cut-off tool, cut the rivet retainer without touching the retainer's shoulder.

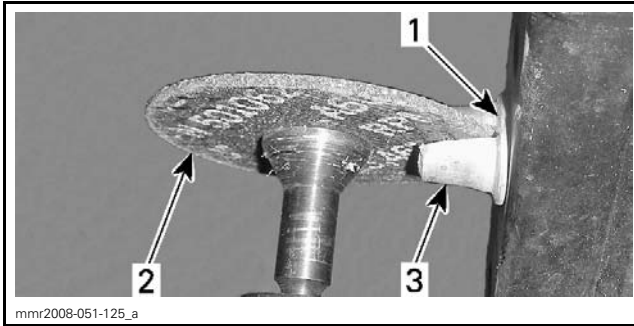

1. Rivet retainer's shoulder
2. Cutter wheel
3. Rivet retainer

NOTE: Apply a thin layer of grease on cutter wheel to increase its durability.

2. Break the rivet retainer's shoulder using a chisel.
3. Use a small punch to drive out the rivet stem.

Alternative Method

1. Measure outside diameter of rivet stem and select appropriate drill bit.
2. Drill the **rivet stem** — **not the rivet head** using a variable speed drill until rivet retainer is freed.

NOTE: When possible, use an angle grinder to grind rivet head or use an air hammer to cut the rivet retainer.

FRAME

Frame Cleaning

Clean frame and tunnel with appropriate cleaners and rinse with high pressure hose.

NOTE: For bare aluminum frames use only aluminum cleaner and follow instructions on container.

NOTICE Never direct high-pressure water jet towards decals. They will peel off.

Frame Welding

No welding is permitted unless it is specified on a BRP bulletin.

Frame Repair

NOTE: The following is specific information for aluminum chassis painting. Use common painting techniques.

1. Sand the area to be painted.
2. Clean and dry the area.
3. Apply a thin layer of paint of the appropriate color. Refer to *MINOR REPAIRS* and *MAJOR REPAIRS* for paint information.

4. Allow paint to dry before re-coating.

NOTE: Paint takes approximately 15 minutes to dry following application.

5. Apply a thin coat of clear.

NOTE: Immediately after the clear coat application, apply a thin coat of HR50 blending solvent **around** the painted area.

6. Allow clear coat to dry.

NOTE: Clear coat takes approximately 2 hours to dry following application.

Minor Repairs

BRP COLOR		PAINT STICK P/N
White	B-229	549 011 400
Black	B-160	549 011 404

Major Repairs

BLACK B-160 FORMULA (430g TOTAL)	
PRODUCT	QTY
UR50	41.35 g (1.46 oz)
BC200	388.65 g (13.71 oz)

WHITE B-229 FORMULA (430g TOTAL)	
PRODUCT	QTY
UR50	43 g (1.52 oz)
BC190	387 g (13.65 oz)

REAR BUMPER


Refer to *BODY* subsection for rear bumper removal and installation procedure.

REAR FRAME MEMBER

Rear Frame Member Removal


1. Refer to *BODY* subsection to remove the following:
 - Seat
 - Gauge and gauge support
 - Console.
2. Remove trim panel at the bottom of rear frame member (one each side).

Subsection XX (FRAME)

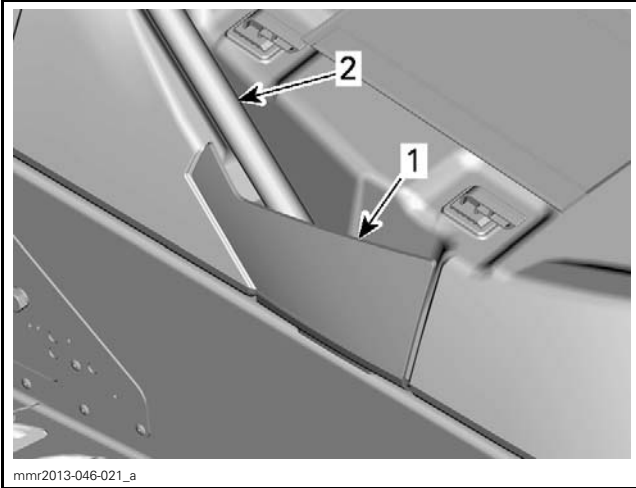


1. Trim panel
2. Rear frame member

3. Remove nut and shouldered washer securing rear frame member (one each side).

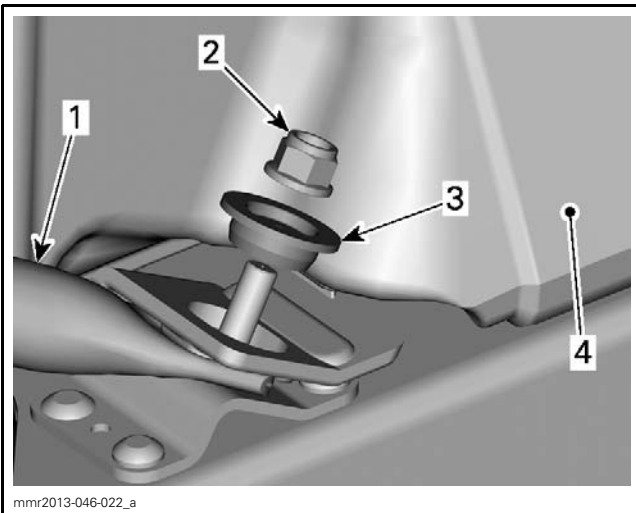

1. Rear frame member
2. Nut to remove
3. Shouldered washer
4. Fuel tank

4. Remove screws securing the rear frame member to steering column support and side frame members.

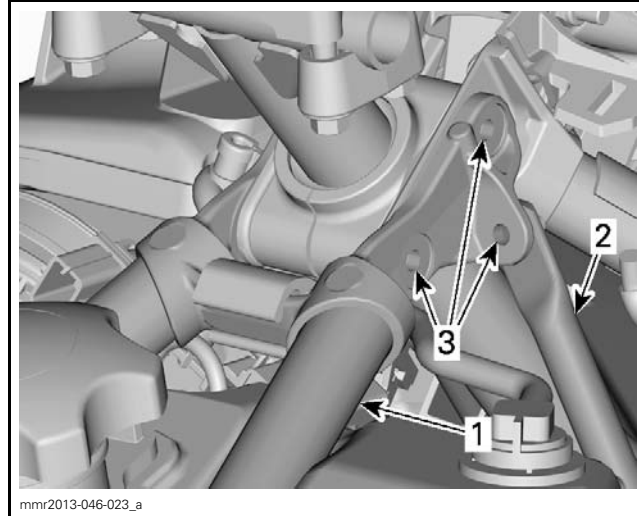

1. Rear frame member
2. LH side frame member
3. Bolts to remove

5. Remove rear frame member.

Rear Frame Member Installation

The installation is the reverse of the removal procedure.


NOTE: Install all bolts and nuts before tightening them.

TIGHTENING TORQUE	
Rear bolts	18 N•m (159 lbf•in)
Side bolts	14 N•m (124 lbf•in)


FRONT FRAME MEMBER

Front Frame Member Removal


1. Refer to *BODY* subsection to remove the following:
 - Hood
 - Console
 - Gauge and gauge support.
2. Remove the secondary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.
3. Remove the tuned pipe. Refer to *EXHAUST SYSTEM* subsection.
4. Lift front of vehicle until skis are off the ground.
5. Place the front portion of frame on a wooden box to support it securely.

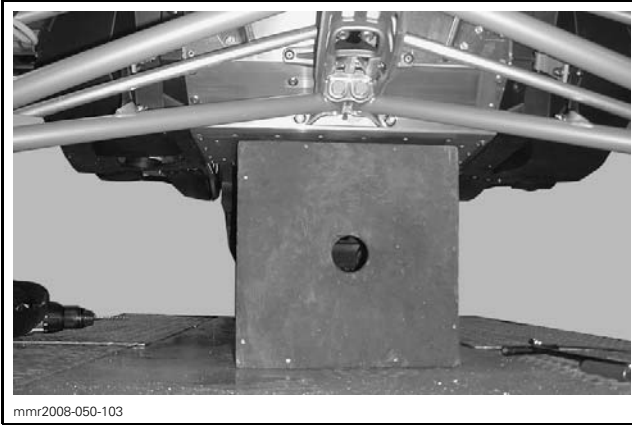

6. Remove front shock absorbers.
7. Drill the rivet retaining the front bottom pan to front frame member (one each side).

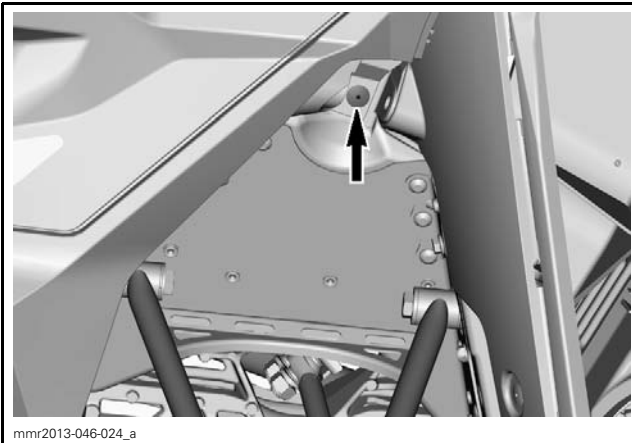


8. Remove HUCK rivets (six each side), see removal procedure at the beginning of this section.

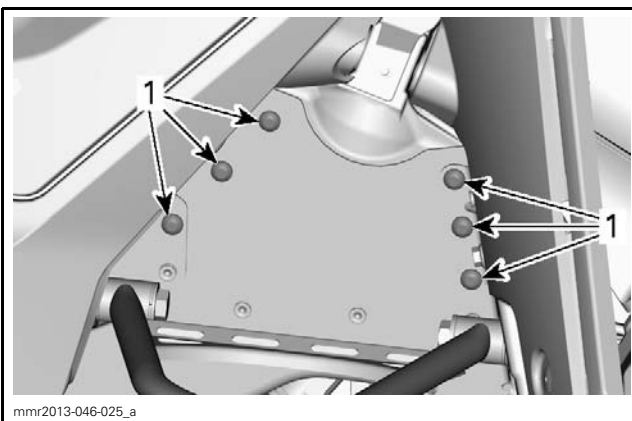

1. HUCK rivets

9. Remove bolts securing front frame member, rear frame member and steering column support.

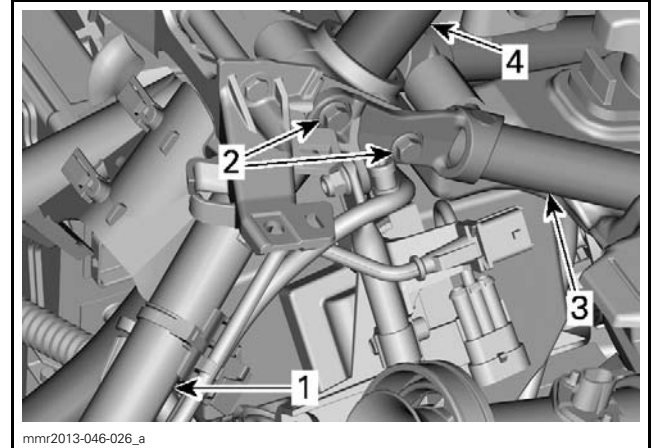

1. Front frame member
2. Bolts to remove
3. Rear frame member
4. Steering column

10. Remove the front frame member.

Front Frame Member Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

1. Replace the HUCK rivets with the following parts.

NEW FASTENERS	
Hexagonal flanged bolt M6 x 20	(P/N 207 662 044)
Hexagonal flanged elastic stop nut M6	(P/N 233 261 414)

NOTE: Unless stated otherwise, install bolt heads toward outside of the vehicle.


2. Torque new fasteners to 10 N•m (89 lbf•in).

FRONT SUSPENSION MODULE

Front Suspension Module Removal


1. Lift front of vehicle until skis are off the ground.
2. Place the front portion of frame on a wooden box to support it securely.

Subsection XX (FRAME)

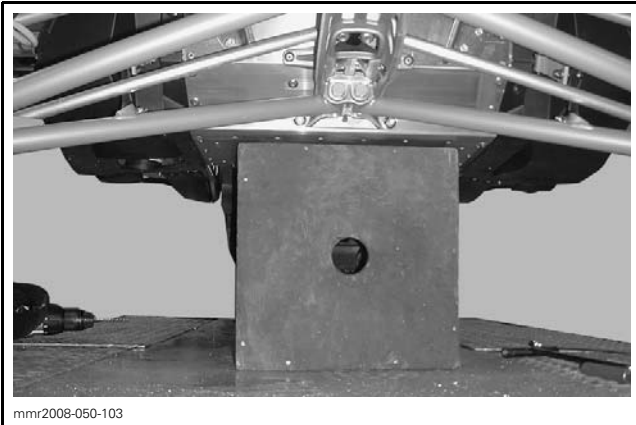


TYPICAL

3. Remove the muffler and the tuned pipe. Refer to *EXHAUST SYSTEM* subsection.
4. Remove the RH front suspension assembly in the following manner:
 - 4.1 Detach both tie-rod ends from steering column.

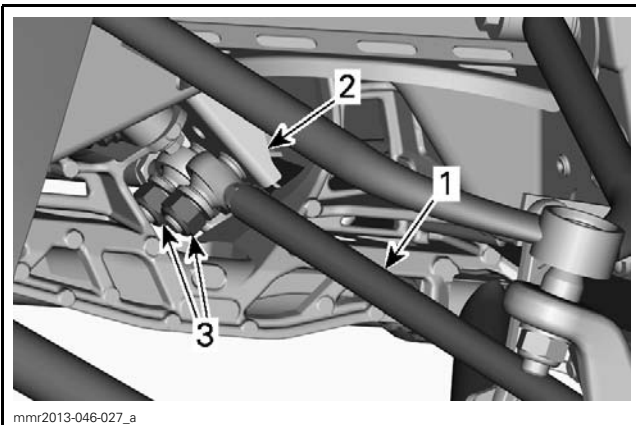


1. Tie-rod
2. Steering column
3. Tie-rod end nut

- 4.2 Remove upper mounting bolt from both front shock absorbers.
- 4.3 Remove bolt that secures stabilizer link to stabilizer lever (1 each side).

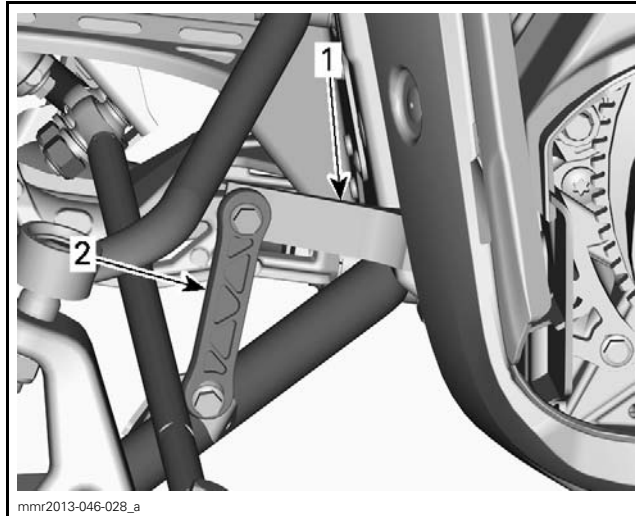


1. Stabilizer lever
2. Stabilizer link

- 4.4 Remove upper and lower suspension arms bolts (both sides). Refer to *FRONT SUSPENSION* subsection.
 - 4.5 Pull suspension arms from front suspension module to remove front suspension assembly from vehicle.
 5. Remove the stabilizer bar, refer to *FRONT SUSPENSION* subsection.
 6. Remove the front bottom pan. Refer to *BODY* subsection.
- NOTE:** Keep the front bumper installed on front bottom pan.
7. Remove the following pop rivets, refer to *POP RIVET REMOVAL* at the beginning of this subsection.

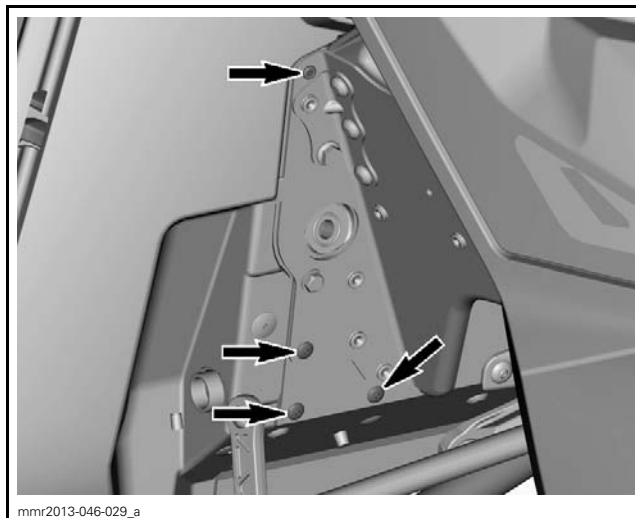


RH SIDE

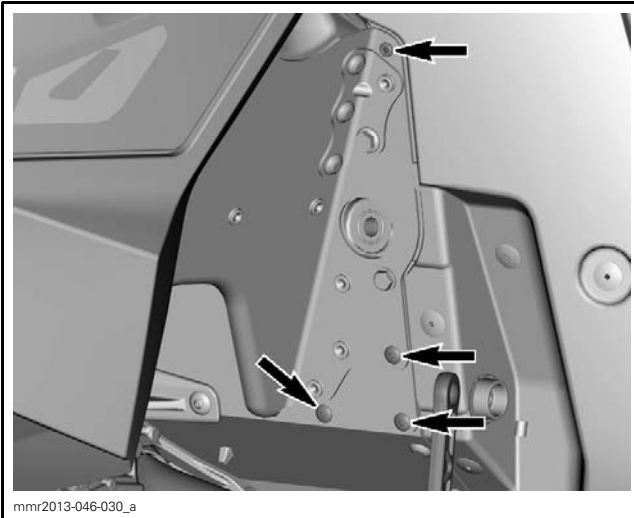

LH SIDE


8. Remove screws securing front suspension module to frame (2 each side).

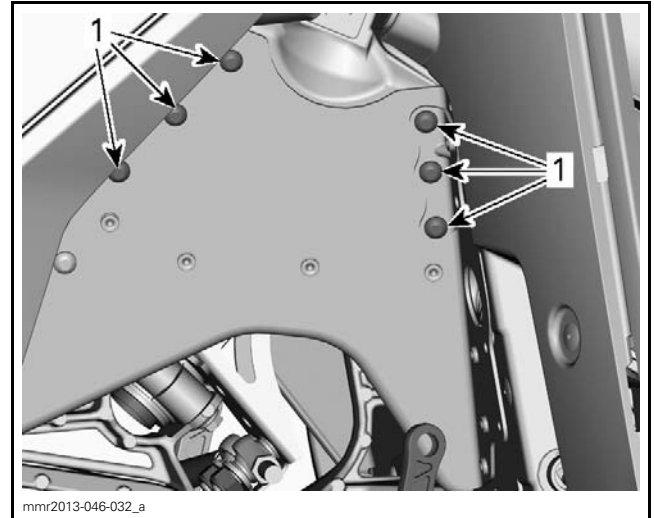

LH SIDE SHOWN

1. HUCK rivets


10. Grind rivets securing the lower suspension arm support to engine module.

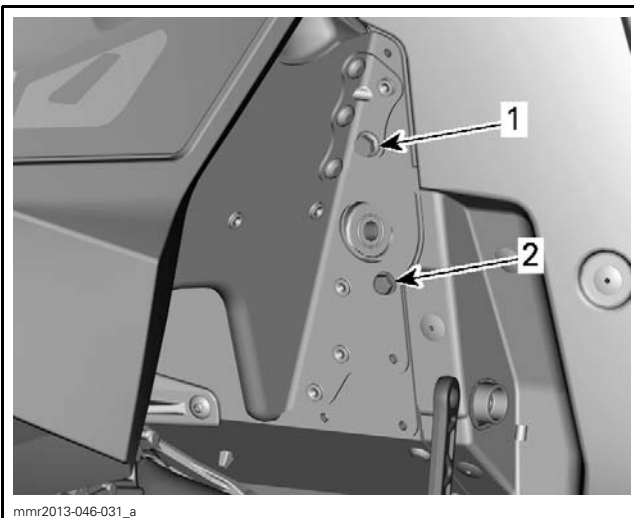

LH SIDE SHOWN

1. Hexagonal flanged bolt
2. Torx screw


9. Remove HUCK rivets (six each side), see removal procedure at the beginning of this subsection.

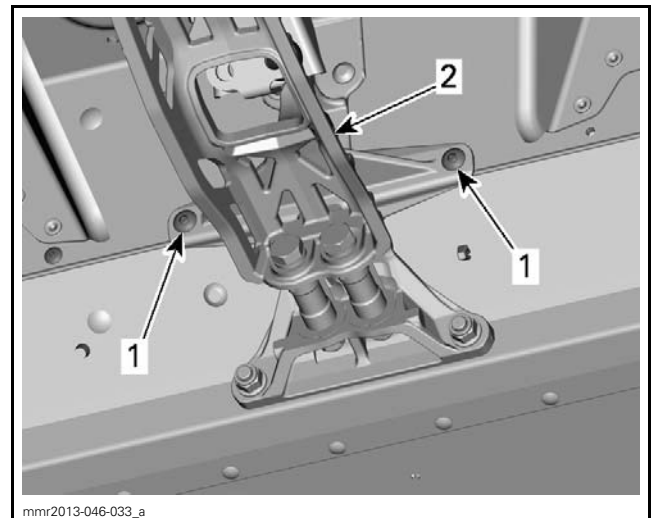

1. Rivets
2. Lower suspension arm support

11. Remove the following bolts and nuts.

Subsection XX (FRAME)

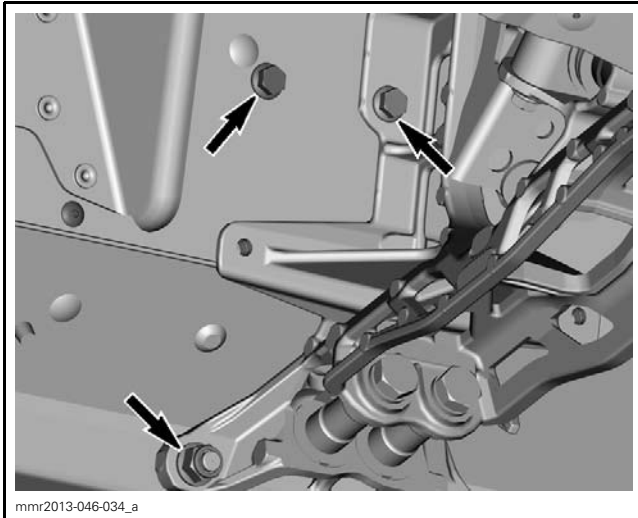

12. Remove the front suspension module.

Front Suspension Module Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

1. Replace the HUCK rivets with the following parts.

NEW FASTENERS	
Hexagonal flanged bolt M6 x 20	(P/N 207 662 044)
Hexagonal flanged elastic stop nut M6	(P/N 233 261 414)

NOTE: Unless otherwise stated, install bolt heads toward outside of the vehicle.

2. Torque new fasteners to 10 N•m (89 lbf•in).


3. Reinstall all removed parts by using the appropriate installation procedure.

TIGHTENING TORQUE	
Lower suspension arm nuts	34 N•m (25 lbf•ft)

ENGINE MODULE


Engine Module Removal

1. Remove engine from vehicle. Refer to *ENGINE REMOVAL AND INSTALLATION* subsection.
2. Remove track, refer to *TRACK* subsection.
3. Remove the *FRONT SUSPENSION MODULE*, see procedure in this subsection.
4. Remove side bottom parts. Refer to *BODY*.
5. On LH side, remove front and rear engine rubber mounts.

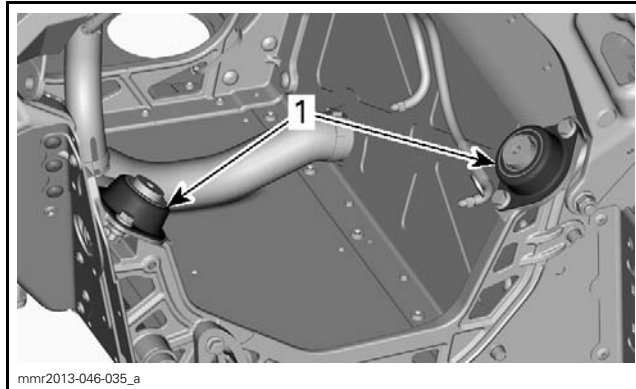

1. Engine rubber mounts


6. Remove HUCK rivets, see removal procedure at the beginning of this subsection.

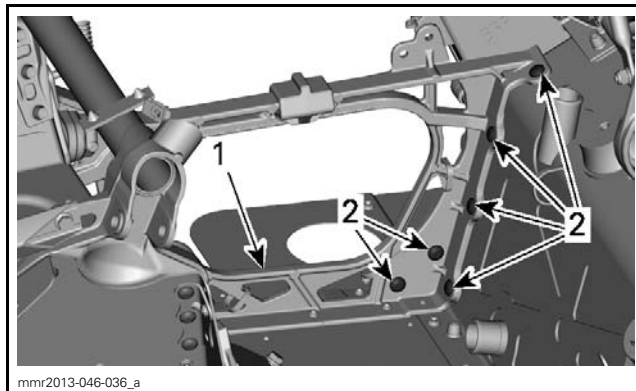

RH SIDE SHOWN

1. RH engine module
2. HUCK rivets

7. Drill or grind rivets securing engine module to frame.

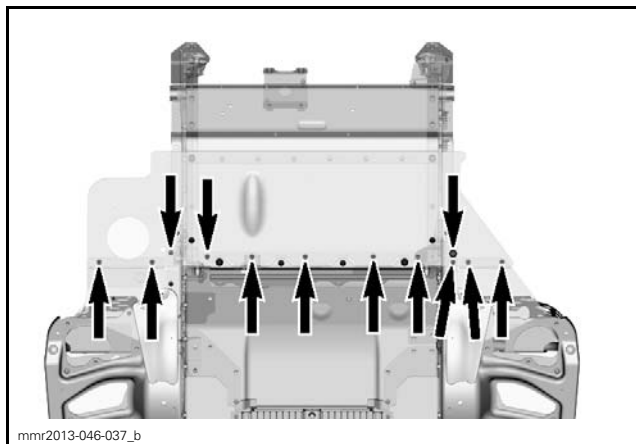

8. Remove the engine module.

Engine Module Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

1. Replace the HUCK rivets with the following parts.

NEW FASTENERS	
Hexagonal flanged bolt M6 x 20	(P/N 207 662 044)
Hexagonal flanged elastic stop nut M6	(P/N 233 261 414)

NOTE: Install bolt heads toward outside of the vehicle, except the one securing chaincase.

2. Torque new fasteners to 10 N•m (89 lbf•in).
3. Reinstall all removed parts by using the appropriate installation procedure.

HEAT EXCHANGERS

Heat Exchanger Cleaning and Inspection


Remove all debris between heat exchanger fins. Check if heat exchanger fins are damaged. Replace heat exchanger if necessary.

NOTE: A heat exchanger with many broken fins does not work properly.

Front Heat Exchanger Removal

1. Drain cooling system. Refer to *COOLING SYSTEM DRAINING* in *PERIODIC MAINTENANCE PROCEDURES* subsection.
2. Remove LH and RH body panels. Refer to *BODY* subsection.
3. Remove drive belt guard. Refer to *DRIVE BELT* subsection.
4. Remove primary air intake silencer. Refer to *AIR INTAKE SYSTEM* subsection.
5. Remove throttle body. Refer to *E-TEC-DIRECT FUEL INJECTION* subsection.


NOTE: To remove the front heat exchanger rivets, refer to *RIVETS* in this subsection for procedure according to rivet type.

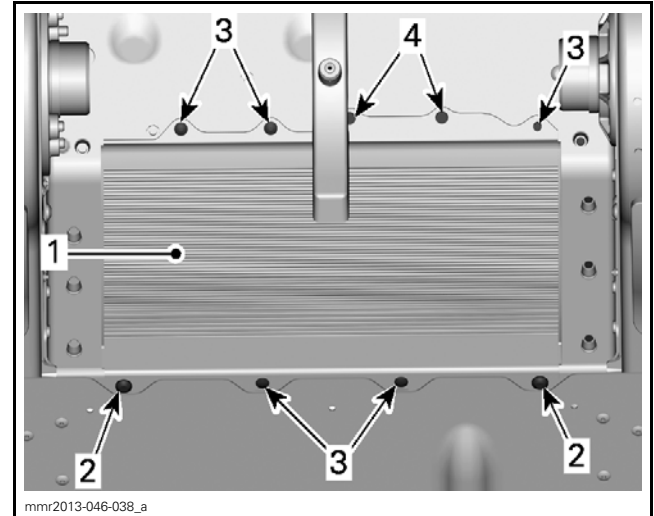

TYPICAL FRONT HEAT EXCHANGER FASTENERS - VIEW IN TUNNEL LOOKING FORWARD

1. Front heat exchanger
2. HUCK rivets
3. AVEX rivets
4. Studs (RH aft engine mount)


6. From underneath the frame, remove rivets securing bottom of front heat exchanger.

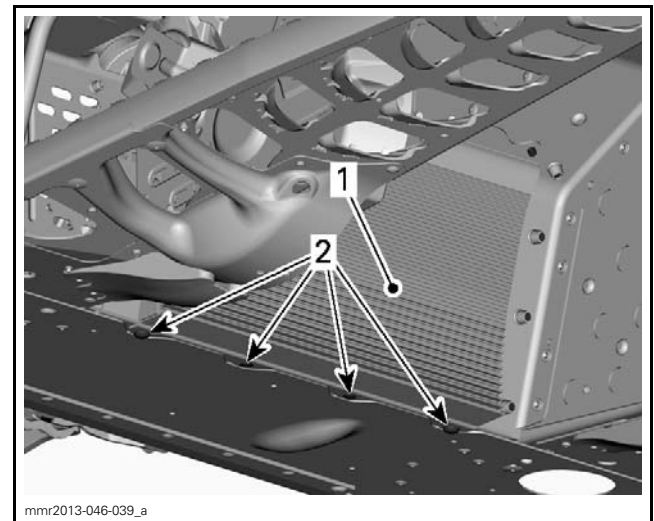

TYPICAL
1. Front heat exchanger
2. Rivets to remove


7. From engine compartment, remove rivets (3x) retaining heat exchanger protector.

Subsection XX (FRAME)

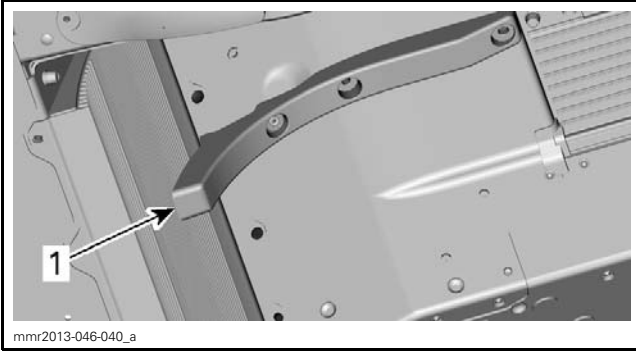


TYPICAL
1. Heat exchanger protector (in front of track)

8. Remove upper rivets retaining front heat exchanger to frame.

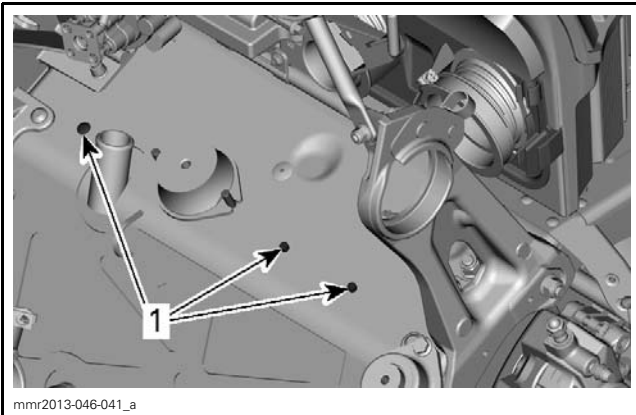


TYPICAL - SOME PARTS REMOVED FOR CLARITY
1. Upper rivets of front heat exchanger

9. Remove nuts retaining RH rear engine mount.

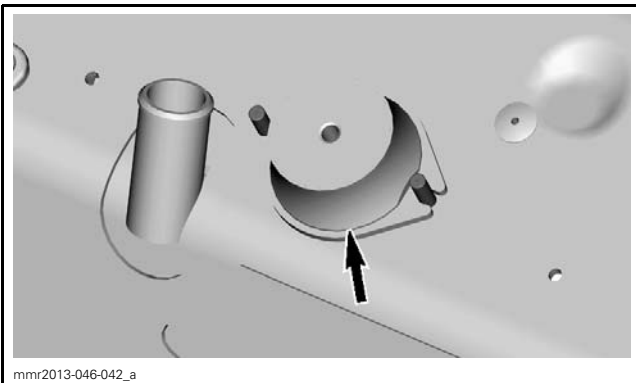

TYPICAL - ENGINE MOUNT SHOWN WITHOUT COUNTERSHAFT FOR CLARITY

10. Remove Oetiker clamp securing upper coolant hose.

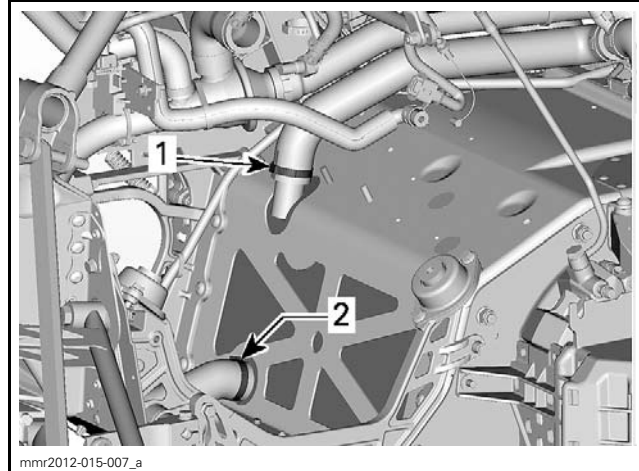

TYPICAL
1. Upper coolant hose
2. Lower coolant hose

11. Disconnect upper coolant hose from heat exchanger.
12. Carefully pull out on bottom of heat exchanger to expose Oetiker clamp on lower coolant hose.
13. Remove Oetiker clamp securing lower coolant hose.
14. Disconnect lower coolant hose from heat exchanger.
15. Remove heat exchanger.

Front Heat Exchanger Installation


The installation is the reverse of the removal procedure. However, pay attention to the following. Install heat exchanger protector as follows to avoid removing track:

Lift and secure rear of vehicle.

Use 3 washers (P/N 517 124 300).

Glue washers in protector bores using LOCTITE 380 (BLACK MAX) (P/N 413 408 300).


NOTE: Only apply a slight quantity of glue between washers and protector.

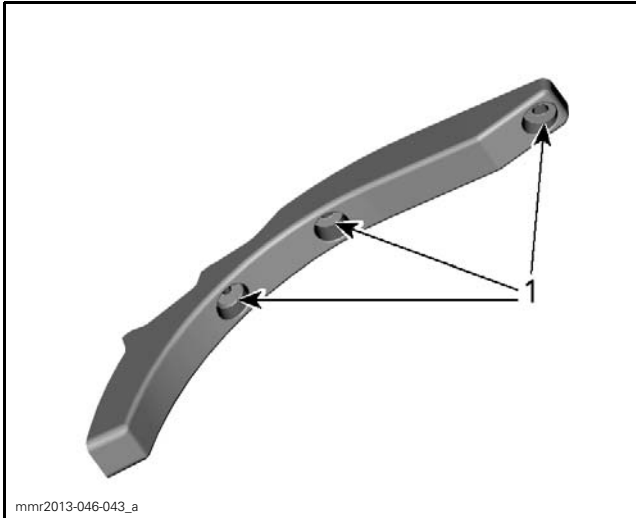

mmr2013-046-043_a

1. Glue washers here

From underneath frame, position protector.

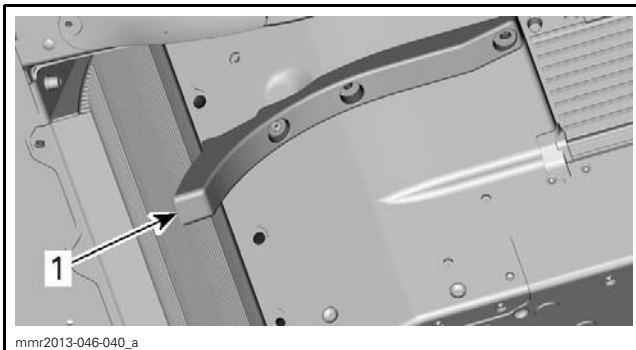

mmr2013-046-040_a

1. Heat exchanger protector (in front of track)

Apply pressure on protector to ensure that it makes contact with frame.

From engine compartment, secure protector with rivets.

NOTE: Ensure to insert rivet ends in washers.

Replace the HUCK rivets with the following parts.


NEW FASTENERS	
Hexagonal flanged bolt M6 x 20	(P/N 207 662 044)
Hexagonal flanged elastic stop nut M6	(P/N 233 261 414)
TORQUE	
10 N•m (89 lbf•in)	

NOTE: Install bolt head towards outside of vehicle.

Properly refill cooling system. Refer to *COOLING SYSTEM REFILL AND BLEEDING* in *PERIODIC MAINTENANCE PROCEDURES* subsection.

Rear Heat Exchanger Removal

1. Drain cooling system, Refer to *COOLING SYSTEM DRAINING* in *PERIODIC MAINTENANCE PROCEDURES* subsection.
2. Remove rear suspension. Refer to the *REAR SUSPENSION* subsection.
3. Remove fuel tank. Refer to *FUEL TANK AND FUEL PUMP* subsection.
4. Remove luggage rack if necessary.
5. Remove snow guard.
6. Remove all rivet rows retaining rear heat exchanger to frame.

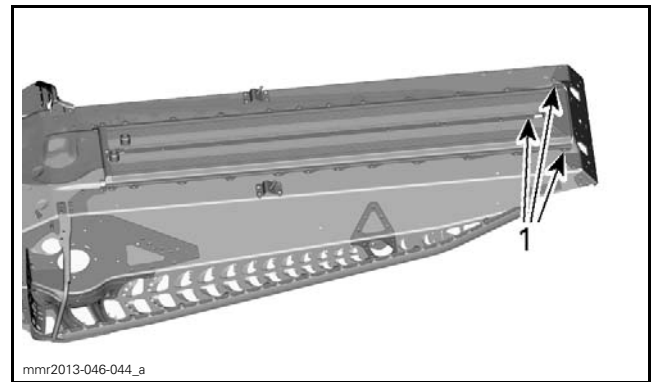

mmr2013-046-044_a

1. Remove all rivet rows

NOTE: When pushing the rivets out, support the frame around the rivet with a socket on the opposite side to avoid frame warping.

7. Unplug coolant hoses from rear heat exchanger then remove it from vehicle.

Rear Heat Exchanger Installation

The installation is the reverse of the removal procedure. However, pay attention to the following.

NOTE: If traction enhancing products (studs) are used on vehicle, install the appropriate heat exchanger protector. Refer to *TRACK* subsection to choose the proper protectors kit.

Properly refill cooling system. Refer to *COOLING SYSTEM REFILL AND BLEEDING* in *PERIODIC MAINTENANCE PROCEDURES* subsection.


COUNTERSHAFT BEARING SUPPORT

Countershaft Bearing Support Removal

1. Remove *DRIVEN PULLEY*, see procedure in this section.
2. Remove drive belt guard bracket.

Subsection XX (FRAME)


- Remove nuts securing the bottom of countershaft bearing support.

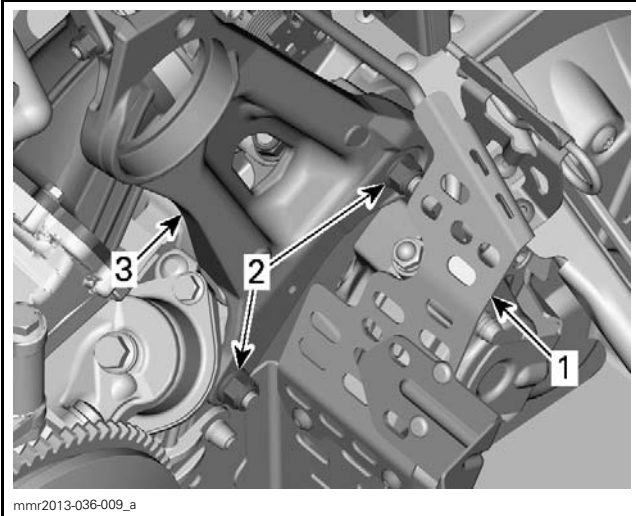

TYPICAL


- Drive belt guard bracket
- Nuts to remove
- Countershaft bearing support

- Remove bolt retaining top of countershaft bearing support.

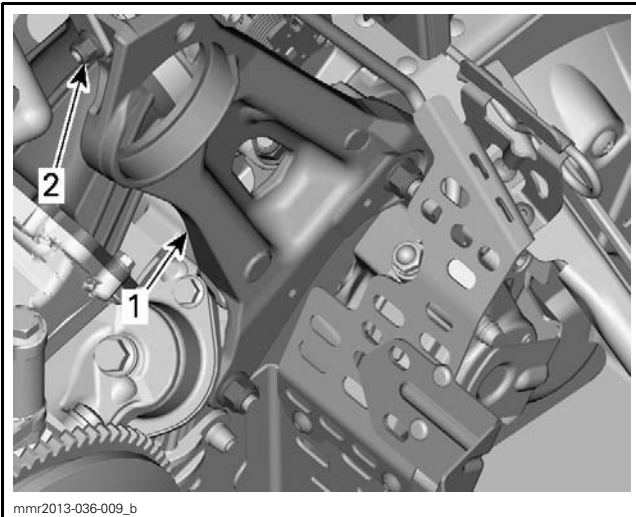

- Countershaft bearing support
- Upper bolt

- Remove primary air intake silencer.
- Loosen lower nut located behind support.

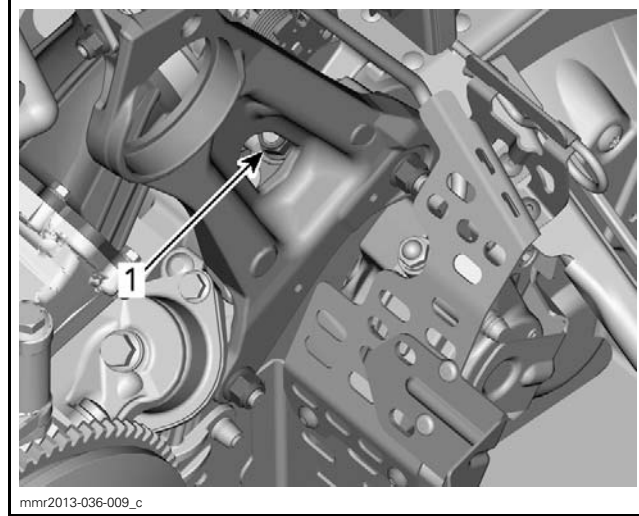

- Loosen this nut

- Remove the countershaft bearing support.

Countershaft Bearing Support Installation

- Position the countershaft bearing support in vehicle.
- Install all bolts and nuts loosely.
- Torque all fasteners in the order specified.

TIGHTENING TORQUE	
1) Lower bearing support (2 outer nuts)	34 N•m (25 lbf•ft)
2) Lower bearing support (inner nut)	
3) Upper bearing support nut and bolt	14 N•m (124 lbf•in)

- Install drive belt guard bracket.

TIGHTENING TORQUE	
Drive belt guard bracket	3.3 N•m (29 lbf•in)

- Install the driven pulley with the countershaft then all other removed parts.

600 HO E-TEC MODELS

ENGINE			
Engine type		Rotax 593 E-TEC	
Number of cylinder		2	
Bore		72 mm (2.835 in)	
Stroke		73 mm (2.874 in)	
Displacement		594.4 cm ³ (36.27 in ³)	
Compression ratio		12.25 ± 0.50	
Combustion chamber volume		2642 cc + 1.23/-1.12	
Maximum power engine speed		8100 ± 100 RPM	
3D RAVE spring	Compression spring	Color	Red
		Wire diameter	0.8 mm (.031 in)
		Minimum free length	45 mm (1.772 in)
	Valve springs	Color	Red
		Wire diameter	0.7 mm (.0276 in)
		Minimum free length	35 mm (1.378 in)
Piston ring type		Semi-trapezoidal	
Ring end gap	New	0.4 mm to 0.55 mm (.016 in to .022 in)	
	Wear limit	1 mm (.039 in)	
Ring/piston groove clearance	New	0.05 mm to 0.1 mm (.002 in to .0039 in)	
	Wear limit	0.2 mm (.0079 in)	
Piston/cylinder wall clearance	New	0.130 mm ± 0.022 mm (.0051 in ± .0009 in)	
	Wear limit	0.2 mm (.0079 in)	
Piston projection		0.9 mm - 1.1 mm (.035 in - .043 in)	
Piston skirt wear	Wear limit	0.15 mm (.006 in)	
Cylinder head warpage	Wear limit	0.5 mm (.0197 in)	
Cylinder taper	New (max.)	0.05 mm (.002 in)	
	Wear limit	0.1 mm (.0039 in)	
Cylinder out of round	New (max.)	0.012 mm (.0005 in)	
	Wear limit	0.08 mm (.0031 in)	
Crankshaft end play	New	MIN.: 0.10 mm (.0039 in) MAX.: 0.30 mm (.0118 in)	
Crankshaft deflection	Max.	MAG: 0.06 mm (.0024 in) CENTER: 0.08 mm (.0031 in) PTO: 0.06 mm (.0024 in)	
Connecting rod big end axial play	New	0.28 mm to 0.68 mm (.011 in to .0268 in)	
	Wear limit	1.2 mm (.0472 in)	

Subsection XX (600 HO E-TEC MODELS)

COOLING SYSTEM			
Coolant	Type	Ethyl glycol and distilled water (50%/50%). Use BRP premix coolant (P/N 219 700 362) or coolant specifically formulated for aluminum engines	
	Quantity	MX Z X	5.42 L (183.3 U.S. oz)
Renegade X Renegade Backcountry X		5.77 L (195.1 U.S. oz)	
Thermostat opening temperature		37°C (99°F)	
Cap opening pressure		110 kPa (16 PSI)	
LUBRICATION SYSTEM			
Oil injection pump type		Electronic oil injection pump	
Injection oil	Type	XPS synthetic blend 2-stroke oil (P/N 293 600 100)	
	Quantity	3.7 L (125.1 U.S. oz)	
FUEL SYSTEM			
Fuel delivery		E-TEC direct injection	
Throttle body		Dell'Orto 46 mm	
Fuel pump		In-tank electrical fuel pump	
Idle speed (not adjustable)		1200 ± 200 RPM	
Fuel	Type	Premium unleaded gasoline (fuel which may contain up to 10% MAX ethanol)	
	Octane rating	Inside North America	91 (R+M)/2)
		Outside North America	95 (RON)
Fuel tank capacity		40 L (10.6 U.S. gal.)	
ELECTRICAL SYSTEM			
Lighting system output		1340 W @ 6000 RPM	
Ignition type		Inductive	
Spark plug	Make and type	NGK PZFR6F	
	Gap	Not adjustable 0.75 mm ± 0.05 mm (.03 in ± .002 in)	
Ignition timing BTDC @ 3500 RPM		28°	
		5.39 mm (.212 in)	
Crankshaft position sensor (CPS)		190 to 290 Ω	
Stator		0.63 ± 0.03 Ω	
Battery		12 V, 18 A•h	

Subsection XX (600 HO E-TEC MODELS)

ELECTRICAL SYSTEM (cont'd)			
Headlamp		2 x 60/55 W (H4)	
Taillight and stoplight		2.6 W / 139mW LED	
Fuses	RER	5 A	
	Fuel level sensor	0.25 A	
	Main	25 A	
DRIVE SYSTEM			
Chaincase oil	Type	XPS synthetic chaincase oil (P/N 413 803 300)	
	Quantity	350 ml (12 U.S. oz)	
Chain drive ratio	MX Z X	25/45	
	Renegade X	23/45	
	Renegade Backcountry X	21/49	
Chain	Pitch	9.530 mm (.375 in)	
	Type/links qty/ plate qty	Renegade Backcountry X	Silent 106/13
		MX Z X Renegade X	Silent 104/13
Drive pulley type		TRA III	
Drive pulley calibration	Clutch engagement		3400 ± 100 RPM
	Spring color		Blue/Green
	Spring length	Blue/Green	105.7 mm (4.161 in)
	Pin		Solid
	Ramp		412
	Screw position		3
Driven pulley type	Type		QRS
	Spring color		Green
	Spring preload		0
	Cam angle		48°
Pulley distance	Z	Not adjustable 20.9 mm (.823 in)	
Pulley distance	X	Not adjustable 36.40 mm ± 1.80 mm (1.433 in ± .071 in)	
Offset	Y - X	New	Not adjustable 3 mm (.118 in)
		After break-in	Not adjustable 2 mm ± .5 mm (.079 in ± .02 in)
Drive belt	Width		38.5 mm (1.516 in)
	Wear limit		36.1 mm (1.421 in)



Subsection XX (600 HO E-TEC MODELS)

DRIVE SYSTEM (cont'd)			
Track	Width	Renegade Backcountry X	406.4 mm (16 in)
		MX Z X Renegade X	381 mm (15 in)
	Length	MX Z X	3 051 mm (120 in)
		Renegade X Renegade Backcountry X	3 486 mm (137 in)
	Profile height	MX Z X Renegade X	31.8 mm (1-1/4 in)
		Renegade Backcountry X	44.5 mm (1-3/4 in)
Track adjustment	Deflection		3.2 cm (1.26 in)
	Force		6.0 kgf to 8.5 kgf (13 lbf to 19 lbf)
BRAKE SYSTEM			
Brake lining minimum thickness			1 mm (.039 in)
Brake disk minimum thickness			4.5 mm (.177 in)
Brake fluid	Type		DOT 4
	Quantity		65 ml (2.2 U.S. oz)
SUSPENSION			
<i>FRONT</i>			
Suspension type			REV-XP
Suspension maximum travel	MX Z X Renegade X		229 mm (9 in)
	Renegade Backcountry X		210 mm (8.3 in)
Shock absorber type			HPG Plus R
Stabilizer bar type			Link
<i>REAR</i>			
Suspension type			rMotion
Suspension maximum travel	Renegade X Renegade Backcountry X		406 mm (16 in)
	MX Z X		394 mm (15.5 in)
Shock absorber type	Center		HPG Plus
Shock absorber type	Rear		KYB PRO 36 EA
Stroke limiter standard position	Renegade X Renegade Backcountry X		3
	MX Z X		2
STEERING SYSTEM			
Ski type	MX Z X Renegade X		Pilot 5.7
	Renegade Backcountry X		Pilot DS
Toe-out			5 mm (.197 in)
Camber			0°

Subsection XX (600 HO E-TEC MODELS)

WEIGHT AND DIMENSIONS		
Mass (dry)	MX Z X	210 kg (462 lb)
	Renegade X	215 kg (474 lb)
	Renegade Backcountry X	217 kg (478 lb)
Length	MX Z X	290.5 cm (114.4 in)
	Renegade X Renegade Backcountry X (CA/US)	311 cm (122.4 in)
	Renegade Backcountry X (EUR)	317.7 cm (125.1 in)
Width	Renegade Backcountry X	120.4 cm (47.4 in)
	MX Z X Renegade X	121.7 cm (47.9 in)
Height	MX Z X Renegade X	121 cm (47.6 in)
	Renegade Backcountry X	124.5 cm (49 in)
Ski stance (carbide to carbide)	Renegade Backcountry X	101.9 cm (40.1 in)
	MX Z X Renegade X	107.7 cm (42.4 in)
MATERIAL		
Frame		Aluminum
Side bottom pan, front hull cover, gauge support, gauge support cover, side panel XM, bottom side panel XS, center hood, and front console		Polypropylene
Lateral hood, rear console, and XS top side panel		Polypropylene and/or Surlyn

800R E-TEC MODELS

ENGINE			
Engine type	  <p>Paperless Manuals For a Better Tomorrow</p>		Rotax 797 E-TEC
Number of cylinder			2
Bore			82 mm (3.228 in)
Stroke			75.7 mm (2.98 in)
Displacement	If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com		799.5 cm ³ (48.79 in ³)
Compression ratio			12.30 ± 0.3
Combustion chamber volume			35.39 cc ± 0.93
Maximum power engine speed			7900 ± 100 RPM
3D RAVE spring	Compression spring	Color	Red
		Wire diameter	0.8 mm (.031 in)
		Minimum free length	45 mm (1.772 in)
	Valve springs	Color	Red
		Wire diameter	0.7 mm (.0276 in)
		Minimum free length	35 mm (1.378 in)
Piston ring type			Semi-trapezoidal
Ring end gap	New	0.4 mm to 0.6 mm (.016 in to .024 in)	
	Wear limit	1 mm (.039 in)	
Ring/piston groove clearance	New	0.06 mm to 0.1 mm (.0024 in to .0039 in)	
	Wear limit	0.2 mm (.0079 in)	
Piston/cylinder wall clearance	New	0.148 mm ± 0.013 mm (.0058 in ± .0005 in)	
	Wear limit	0.2 mm (.0079 in)	
Piston projection			1.82 mm - 1.92 mm (.072 in - .076 in)
ENGINE (cont'd)			
Piston skirt wear	Wear limit	0.15 mm (.006 in)	
Cylinder head warpage	Wear limit	0.5 mm (.0197 in)	
Cylinder taper	New (max.)	0.05 mm (.002 in)	
	Wear limit	0.1 mm (.0039 in)	
Cylinder out of round	New (max.)	0.010 mm (.0004 in)	
	Wear limit	0.08 mm (.0031 in)	
Crankshaft end play	New	MIN.: 0.10 mm (.0039 in) MAX.: 0.30 mm (.0118 in)	
Crankshaft deflection	Max.	MAG: 0.05 mm (.002 in) CENTER: 0.04 mm (.0016 in) PTO: 0.06 mm (.0024 in)	
Connecting rod big end axial play	New	0.23 mm to 0.617 mm (.0091 in to .0243 in)	
	Wear limit	1.2 mm (.0472 in)	

Subsection XX (800R E-TEC MODELS)

COOLING SYSTEM			
Coolant	Type		Ethyl glycol and distilled water (50%/50%). Use BRP premix coolant (P/N 219 700 362) or coolant specifically formulated for aluminum engines
	Quantity	MX Z TNT MX Z X	6.12 L (206.9 U.S. oz)
		Renegade X Renegade Backcountry X	6.47 L (218.8 U.S. oz)
		Summit SP 146"	5.74 L (194.1 U.S. oz)
		Summit X 146"	5.77 L (195.1 U.S. oz)
		Summit SP 154" Summit X 154"	6 L (202.9 U.S. oz)
		Summit SP 163" Summit X 163"	6.06 L (204.9 U.S. oz)
Thermostat opening temperature			37°C (99°F)
Radiator cap opening pressure			90 kPa (13 PSI)
LUBRICATION SYSTEM			
Oil injection pump type			Electronic oil injection pump
Injection oil	Type		XPS synthetic 2-stroke oil (P/N 293 600 132)
	Quantity		3.7 L (125.1 U.S. oz)
FUEL SYSTEM			
Fuel delivery			E-TEC direct injection
Throttle body			Dell'Orto 52 mm
Fuel pump			In-tank electrical fuel pump
Idle speed (not adjustable)			1200 ± 200 RPM
Fuel	Type		Premium unleaded gasoline (fuel which may contain up to 10% MAX ethanol)
	Octane rating	Inside North America	91 (R+M)/2
		Outside North America	95 (RON)
Fuel tank capacity			40 L (10.6 U.S. gal.)

Subsection XX (800R E-TEC MODELS)

ELECTRICAL SYSTEM		
Lighting system output		1340 W @ 6000 RPM
Ignition type		Inductive
Spark plug	Make and type	NGK PFR7AB (engine and spark plug threads are indexed)
	Gap	Not adjustable 0.75 mm ± 0.05 mm (.03 in ± .002 in)
Ignition timing BTDC @ 3500 RPM		28°
		5.63 mm (.222 in)
Crankshaft position sensor (CPS)		190 to 290 Ω
Stator		0.63 ± 0.03 Ω
Battery		12 V, 18 A•h
Headlamp		2 x 60/55 W (H4)
Taillight and stoplight		2.6 W / 139mW LED
Fuses	RER	5 A
	Fuel level sensor	0.25 A
	Main	25 A
DRIVE SYSTEM		
Chaincase oil	Type	XPS synthetic chaincase oil (P/N 413 803 300)
	Quantity	350 ml (12 U.S. oz)
Chain drive ratio	MX Z TNT MX Z X (CA/US)	27/45
	MX Z X (EUR) Renegade X	25/45
	Renegade Backcountry X	23/45
	Summit SP 154" Summit X 154" (CA/US)	19/49
	Summit SP 146" Summit X 146" Summit X 154" (EUR)	21/49
	Summit SP 163" Summit X 163"	19/51

Subsection XX (800R E-TEC MODELS)

DRIVE SYSTEM (cont'd)			
Chain	Pitch		9.530 mm (.375 in)
	Type		Silent
	Links qty/ plate qty	MX Z TNT MX Z X (CA/US) Summit SP 146" Summit SP 163" Summit X 146" Summit X 154" (EUR) Summit X 163"	106/13
		MX Z X (EUR) Renegade X Renegade Backcountry X Summit SP 154" Summit X 154" (CA/US)	104/13
Drive pulley type			TRA VII
Drive pulley calibration	Clutch engagement		3800 ± 100 RPM
	Spring color	Summit X 146" (EUR) Summit X 154" (EUR) Summit X 163" (EUR)	Yellow/Green
		MX Z TNT MX Z X Renegade X	Blue/Green
		Renegade Backcountry X	Purple/Blue
		Summit SP Summit X 146" (CA/US) Summit X 154" (CA/US) Summit X 163" (CA/US)	Purple/Pink
	Spring length	Yellow/Green	94.61 mm (3.725 in)
		Blue/Green	105.7 mm (4.161 in)
		Purple/Blue	114.6 mm (4.512 in)
		Purple/Pink	101.8 mm (4.008 in)
	Pin	Summit SP Summit X (CA/US)	Hollow threaded
		MX Z TNT MX Z X Renegade X Renegade Backcountry X Summit X (EUR)	Solid long
	Ramp	Renegade Backcountry X Summit X (EUR)	413
		Summit SP Summit X (CA/US)	441
MX Z TNT MX Z X Renegade X		414	

Subsection XX (800R E-TEC MODELS)

DRIVE SYSTEM (cont'd)			
Drive pulley calibration	Screw position	Summit SP Summit X (CA/US)	1
		Summit X (EUR)	2
		MX Z TNT MX Z X Renegade X Renegade Backcountry X	3
Driven pulley type	Type		QRS
	Spring color	Summit	Blue
		MX Z TNT MX Z X Renegade X Renegade Backcountry X	Green
		Spring preload	
	Cam angle	MX Z TNT MX Z X	47°/44°
		Renegade X Renegade Backcountry X	44°/42°
Summit		40°	
Pulley distance	Z		Not adjustable 20.9 mm (.823 in)
	X	Summit	Not adjustable 39.4 mm ± 1.8 mm (1.551 in ± .071 in)
		All others	Not adjustable 36.4 mm ± 1.8 mm (1.433 in ± .071 in)
Offset	Y - X	New	Not adjustable 3 mm (.118 in)
		After break-in	Not adjustable 2 mm ± .5 mm (.079 in ± .02 in)
Drive belt	Width		38.3 mm (1.508 in)
	Wear limit		35.9 mm (1.413 in)

Subsection XX (800R E-TEC MODELS)

DRIVE SYSTEM (cont'd)			
Track	Width	MX Z TNT MX Z X	381 mm (15 in)
		Renegade X Renegade Backcountry X Summit	406.4 mm (16 in)
	Length	Renegade X Renegade Backcountry X	3 486 mm (137 in)
		MX Z TNT MX Z X	3 051 mm (120 in)
		Summit 146"	3.7 m (146 in)
		Summit 154"	3.9 m (154 in)
		Summit 163"	4.14 m (163 in)
	Profile height	MX Z Renegade X	31.8 mm (1-1/4 in)
		Renegade Backcountry X	44.5 mm (1-3/4 in)
Summit		63.5 mm (2.5 in)	
Track adjustment	Deflection	3.2 cm (1.26 in)	
	Force	6.0 kgf to 8.5 kgf (13 lbf to 19 lbf)	
BRAKE SYSTEM			
Brake lining minimum thickness		1 mm (.039 in)	
Brake disk minimum thickness		4.5 mm (.177 in)	
Brake fluid	Type	DOT 4	
	Quantity	65 ml (2.2 U.S. oz)	

SUSPENSION		
<i>FRONT</i>		
Suspension type		REV-XP
	MX Z Renegade X Summit	229 mm (9 in)
	Renegade Backcountry X	210 mm (8.3 in)
Shock absorber type	Summit SP	HPG
	MX Z TNT Summit X	HPG Plus
	MX Z X Renegade	HPG Plus R
Stabilizer bar type		Link
<i>REAR</i>		
Suspension type	MX Z Renegade	rMotion
	Summit	tMotion
Suspension maximum travel	Summit 146"	356 mm (14 in)
	MX Z TNT Summit 154"	381 mm (15 in)
	MX Z X	394 mm (15.5 in)
	Renegade Summit 163"	406 mm (16 in)

Subsection XX (800R E-TEC MODELS)

SUSPENSION (cont'd)			
Shock absorber type	Center	Summit SP	HPG
		MX Z Renegade Summit X	HPG Plus
		Summit SP	HPG
	Rear	MX Z TNT Summit X	HPG Plus
		MX Z X Renegade	KYB PRO 36 EA
		MX Z X	2
Stroke limiter standard position	MX Z TNT Renegade Summit X (CA/US) Summit XP	3	
	Summit X (EUR)	4	
STEERING SYSTEM			
Ski type	MX Z Renegade X	Pilot 5.7	
	Renegade Backcountry X	Pilot DS	
	Summit	Pilot DS 2	
Toe-out		5 mm (.197 in)	
Camber		0°	

WEIGHT AND DIMENSIONS		
Mass (dry)	MX Z TNT	212 kg (468 lb)
	MX Z X	215 kg (474 lb)
	Renegade X	219 kg (483 lb)
	Renegade Backcountry X (CA/US)	222 kg (489 lb)
	Renegade Backcountry X (EUR)	231 kg (509 lb)
	Summit SP 163"	213 kg (469 lb)
	Summit X 146"	206 kg (454 lb)
	Summit X 154" Summit XP 146"	209 kg (461 lb)
	Summit X 163" Summit XP 154"	215 kg (472 lb)
Length	MX Z	290.5 cm (114.4 in)
	Summit 146"	322.6 cm (127 in)
	Summit 154"	333.5 cm (131.3 in)
	Renegade X Renegade Backcountry X (CA/US)	311 cm (122.4 in)
	Renegade Backcountry X (EUR)	317 cm (125 in)
	Summit 163"	344.5 cm (135.6 in)
Width	Renegade Backcountry X	120.4 cm (47.4 in)
	Summit	112.6 cm (44.3 in)
	MX Z Renegade X	121.7 cm (47.9 in)
Height	MX Z Renegade X	121 cm (47.6 in)
	Renegade Backcountry X	124.5 cm (49 in)
	Summit	134.6 cm (53 in)
Ski stance (carbide to carbide)	Renegade Backcountry X	101.9 cm (40.1 in)
	Summit	90.7 cm - 95 cm (35.7 in - 37.4 in)
	MX Z Renegade X	107.7 cm (42.4 in)
MATERIAL		
Frame		Aluminum
Side bottom pan, front hull cover, gauge support, gauge support cover, side panel XM, bottom side panel XS, center hood, and front console		Polypropylene
Lateral hood, rear console, and XS top side panel		Polypropylene and/or Surllyn



If you bought this manual from any other seller please leave them **NEGATIVE** feedback and notify me at bestshopmanuals@gmail.com

WIRING DIAGRAM INFORMATION


GENERAL

WIRING DIAGRAM LOCATION

Wiring diagrams are found in the *WIRING DIAGRAM BOOKLET*.


WIRING DIAGRAM CODES

The wiring diagrams use the following codes.

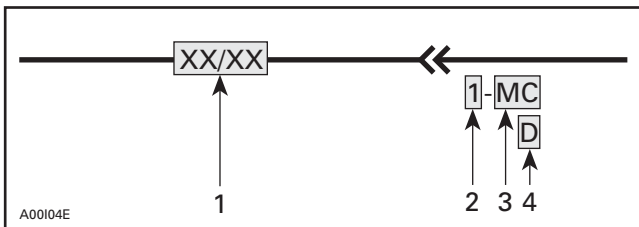

1. Wire colors
2. Connector location
3. Connector code
4. Terminal position in connector

Wire Colors

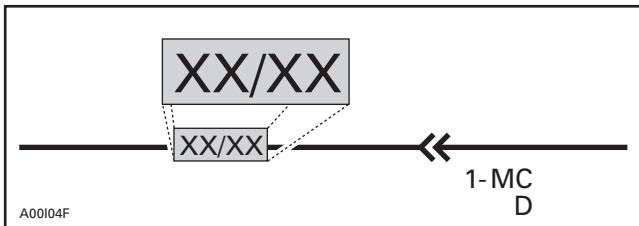

The first color of a wire is the main color, second color is the stripe.


Example: YE/BK is a YELLOW wire with a BLACK stripe.

COLOR CODE					
BG	—	BEIGE	OG	—	ORANGE
BK	—	BLACK	RD	—	RED
BU	—	BLUE	VT	—	VIOLET
BN	—	BROWN	WH	—	WHITE
GN	—	GREEN	YE	—	YELLOW
GY	—	GRAY	PK	—	PINK


LT prefix means a "light" color. E.g: LT GN = Light green

Connector Location

The first digit of the connector identification number presents the location of the connector on the vehicle. It may also describe the part removal that is required to reach the connector.

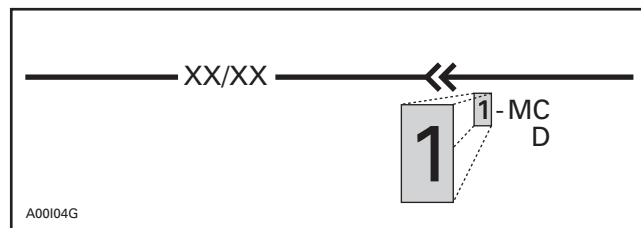


The location of the connectors are indicated on the wiring diagram with a vehicle schematic as illustrated below.

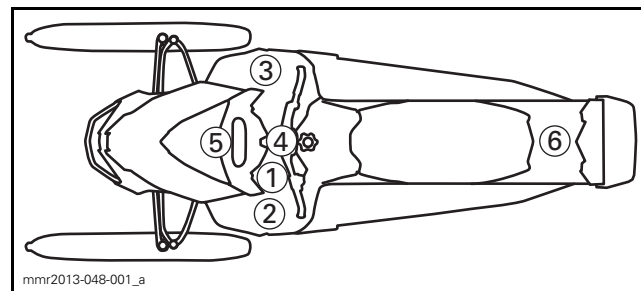

VEHICLE SCHEMATIC FOR CONNECTOR LOCATION (SEE WIRING DIAGRAM)

Connector Code

The letters (up to 8 letters) in the second part of a connector identification number represents the connector reference to a system or component. If there are many connectors in the same area, this helps to identify which wire is in which connector.

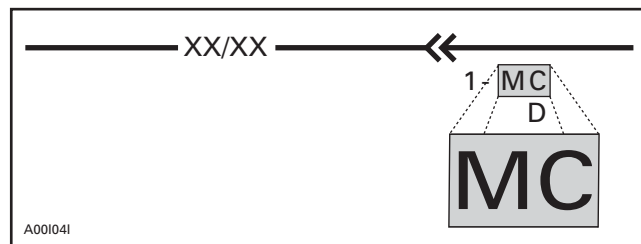


Terminal Position in Connector


The third portion of the connector identification number represents the location of the terminal in the connector. This could be identified by either a number or by a letter depending on the type of connector used.

Subsection XX (WIRING DIAGRAM INFORMATION)

NOTE: The terminal position identifier may also be the right most portion of the description.

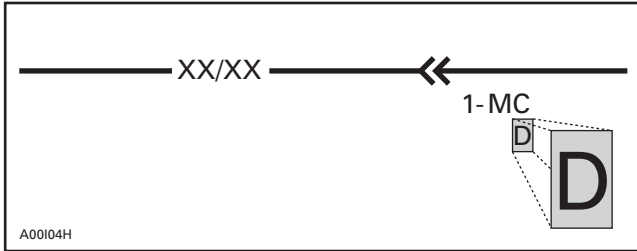


NOTE: On the 12-pin steering harness connector (SH), the letter "i" is skipped in the terminal lettering. See illustration.

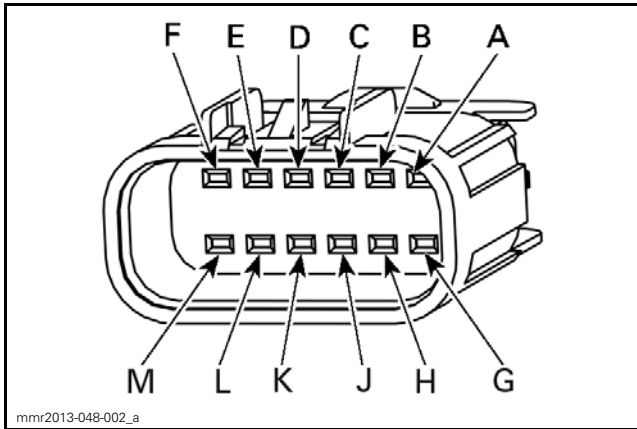

NOTICE THE MISSING "I" LETTER

Splices in Wiring Harness

Splices in wiring harness are indicated on the wiring diagram as follows.

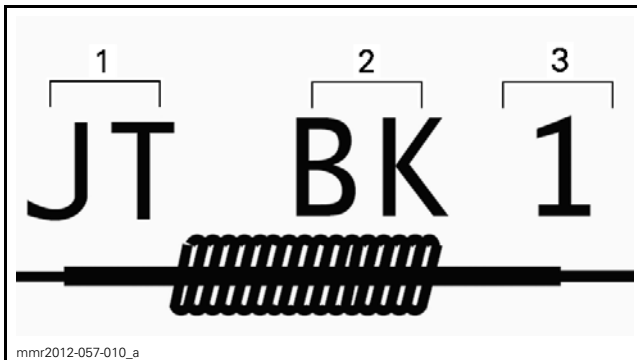

1. JT: Splice indication
2. Spliced wire color
3. Splice number on the wire

CONNECTOR INFORMATION

SERVICE TOOLS

Description	Part Number	Page
CRIMPING TOOL (HEAVY GAUGE WIRE)	529 035 730	6
CRIMPING TOOL (KOSTAL).....	529 035 909	5
KOSTAL DIE	529 035 906	5

SERVICE TOOLS – OTHER SUPPLIER

Description	Part Number	Page
AMP EXTRACTION TERMINAL TOOL.....	726503-1	4
AMP EXTRACTION TERMINAL TOOL.....	755430-2	2–3
DELPHI METRI-PACK REMOVAL TOOL (GREEN).....	12094429	5
JAE EXTRACTION TOOL	ET-MX44-1	5
SNAP-ON SCREWDRIVER	TT600-5	1


GENERAL

DEUTSCH CONNECTOR


Connector Disassembly

Male Housing

Insert SNAP-ON SCREWDRIVER (P/N TT600-5) under lock and twist to lift it.

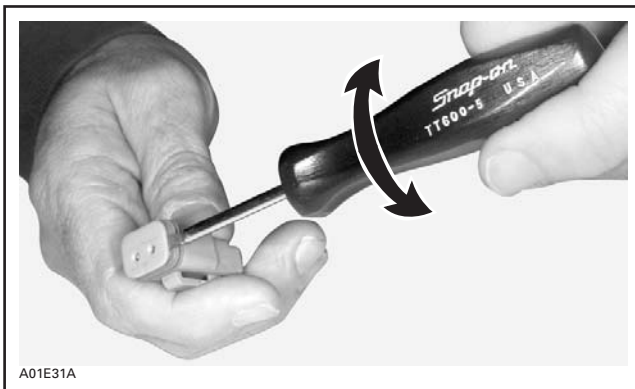


Pry tab to free connector then pull wire out of housing.

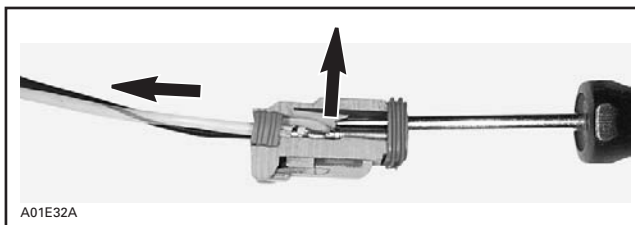


FEMALE CONNECTOR HOUSING — CUT-AWAY

Female Housing

Using a small hook, pull out the lock.

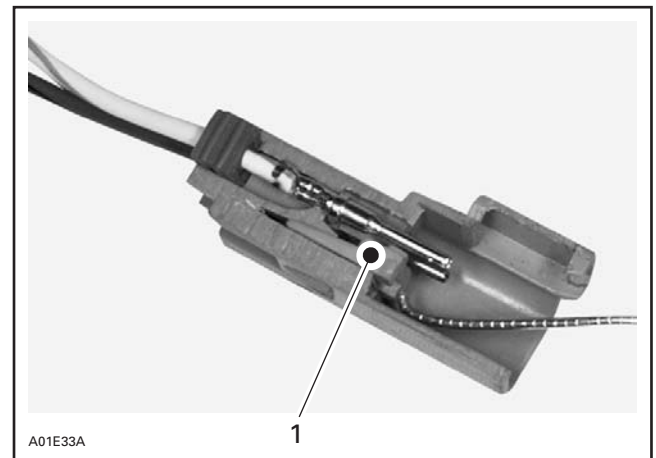


1. Lock

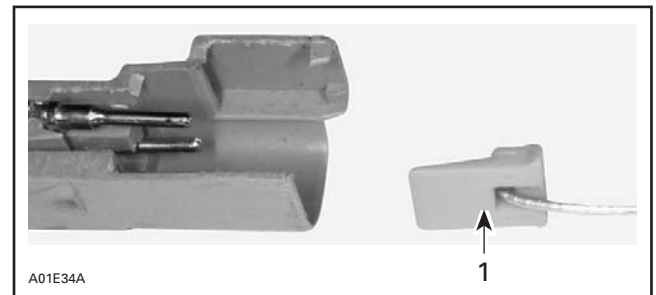

1. Lock

Pry tab to free connector then pull wire out of housing.

Subsection XX (CONNECTOR INFORMATION)

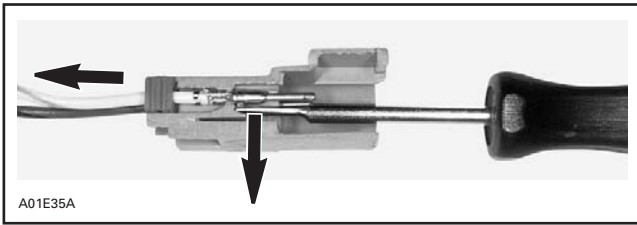


FEMALE HOUSING — CUT-AWAY

PACKARD CONNECTOR

Connector Disassembly

Multifunction Gauge


Push on both tabs to remove retainer.

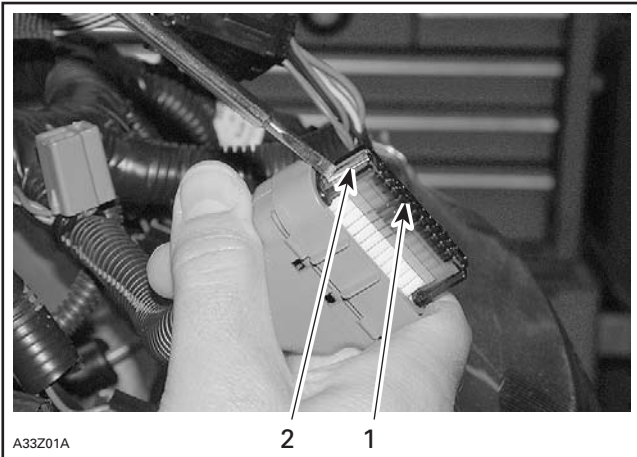

TYPICAL

1. Retainer
2. Tab (one on each side)


Open connector housing by lifting 3 retaining tabs.

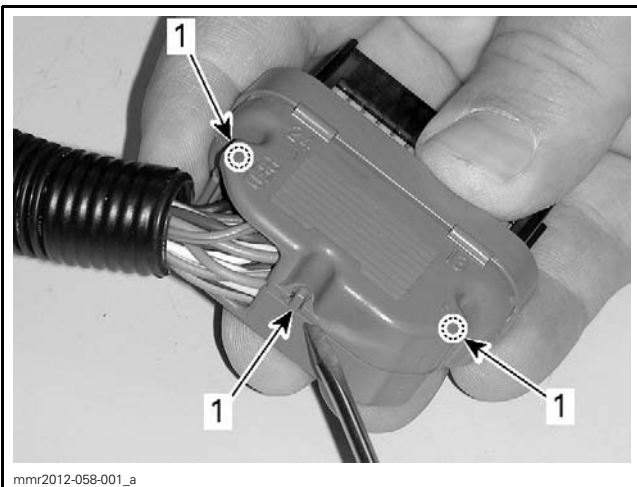

TYPICAL

1. Tabs (2 are hidden from view)


Lift the top plastic lock of the female terminal to be removed and hold in position. Lift the female terminal to unlock from the housing and push out of housing.

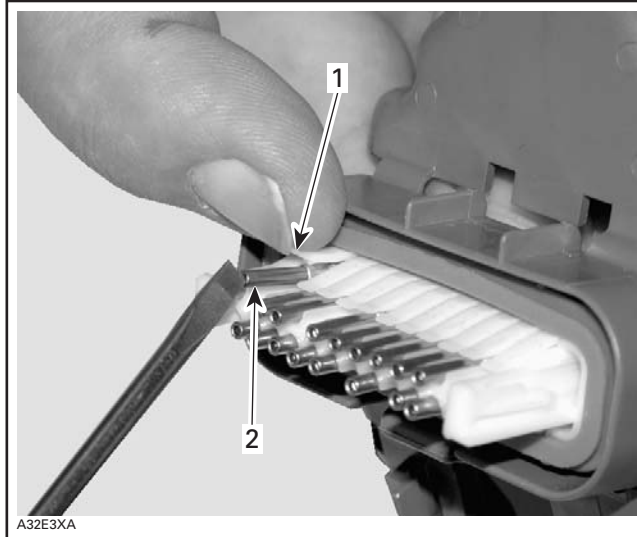

1. Lift and hold plastic lock
2. Lift to unlock and push out


AMP MULTILOCK CONNECTOR (e.g: DESS (DS))

Connector Disassembly

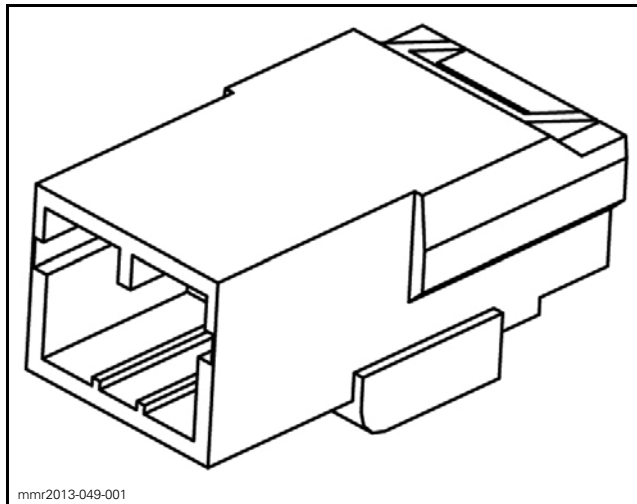

Male Housing

Insert AMP EXTRACTION TERMINAL TOOL (P/N 755430-2) under lock and twist to lift it.

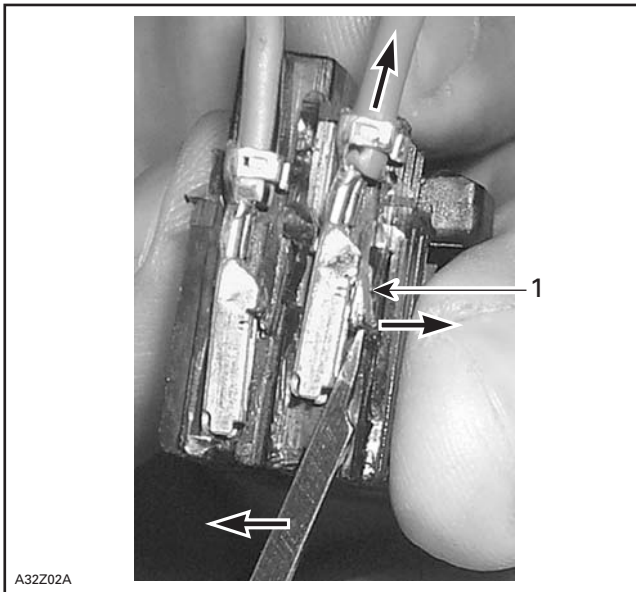


TYPICAL MALE HOUSING — CUT-AWAY
1. Lock

Female terminals can be removed from housing with sharp head pin.

Female Housing

Insert AMP EXTRACTION TOOL (P/N 755430-2) under lock and twist to lift it.

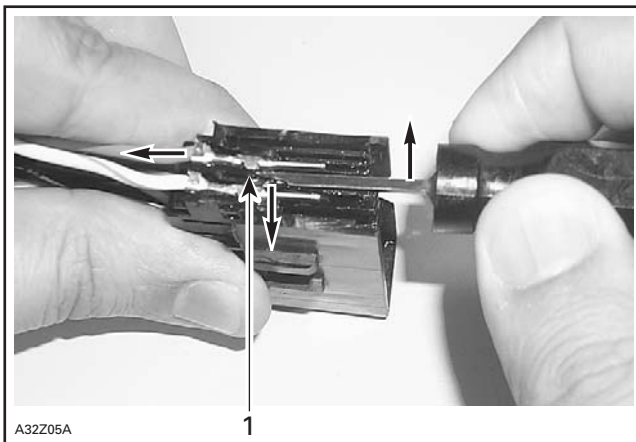

TYPICAL FEMALE HOUSING — CUT-AWAY
1. Lock


Terminal Crimping

Refer to *TERMINAL CRIMPING (AMP 8-CIRCUIT AND MULTILOCK)* further in this subsection.

AMP CONNECTOR (8-CIRCUIT)


Connector Disassembly

Pry housing to release lock.

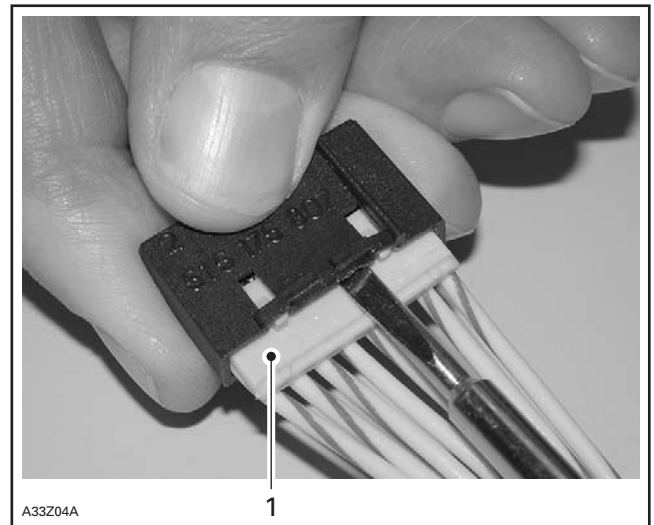

1. Lock

Insert AMP EXTRACTION TOOL (P/N 755430-2) under tab and pry it to free connector. Pull on the female terminal wire to remove female terminal from housing.

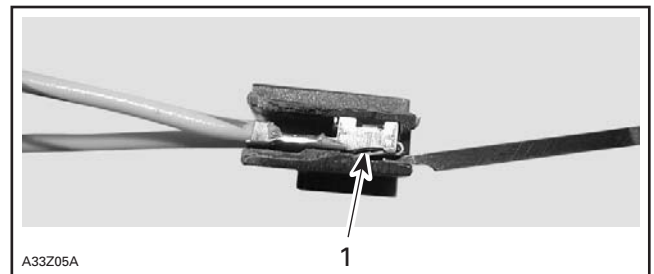


AMP 8-CIRCUIT CONNECTOR — CUT-AWAY
1. Tab

Terminal Crimping

Refer to *TERMINAL CRIMPING* further in this subsection.

AMP CONNECTOR (ALL E-TEC ECM)

Connector Identification

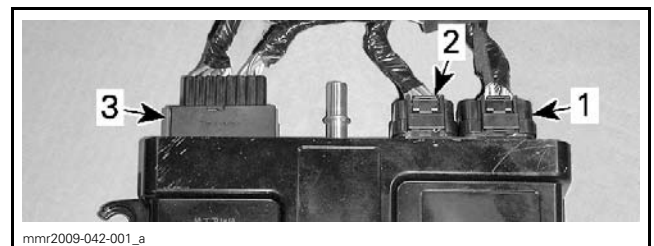


1. J1A connector
2. J1B connector
3. J2 connector

Subsection XX (CONNECTOR INFORMATION)

Connector Removal

J1A and J1B Connectors


Depress both latches and pull connector housing.

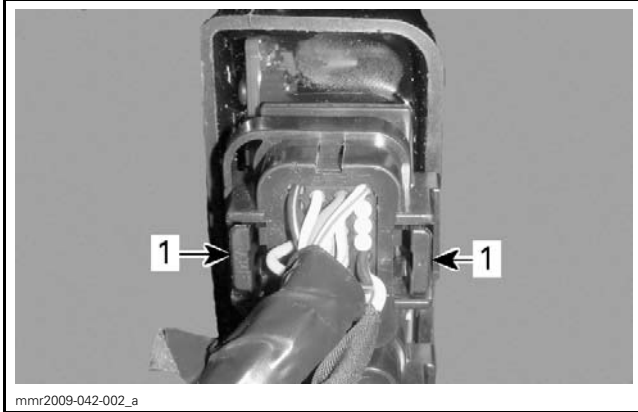

1. Latches


J2 Connector

Using a small screwdriver, open the connector lock.

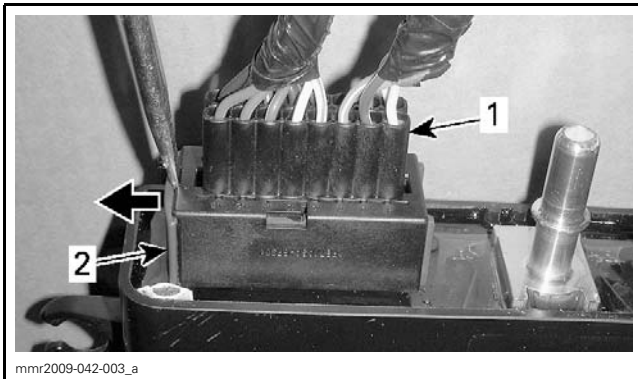

1. Connector
2. Connector lock

Pull the lock approximately 20 mm (3/4 in) to remove the connector.

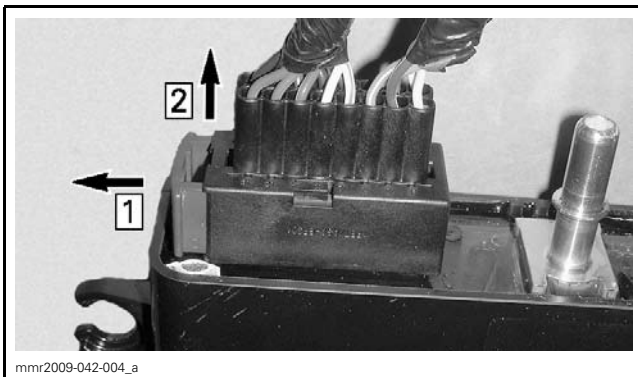


Step 1: Pull lock
Step 2: Lift the connector

Connector Disassembly

J1A and J1B Connectors

Push the lock mechanism to open it.

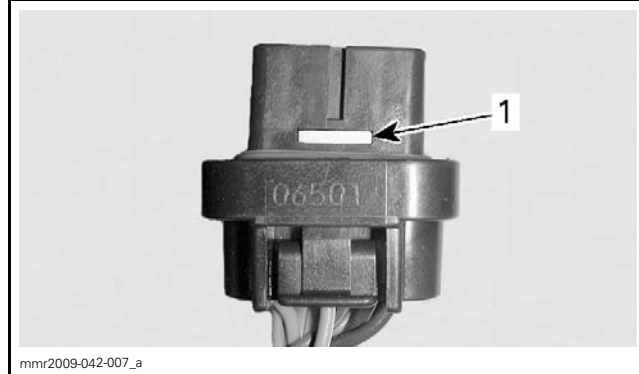


1. Lock mechanism


Pull on wire to extract terminal from connector housing.

J2 Connector

Using the AMP EXTRACTION TERMINAL TOOL (P/N 726503-1), release both locking tabs of connector. Pull terminal from housing.

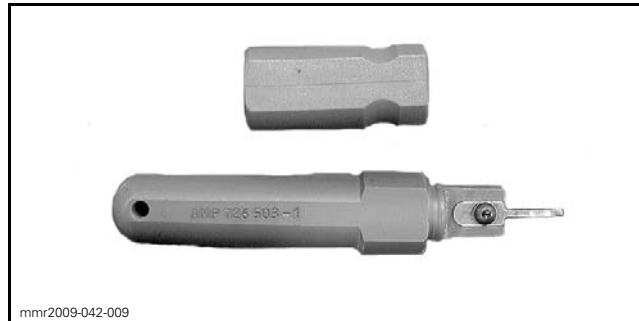

AMP EXTRACTION TERMINAL TOOL

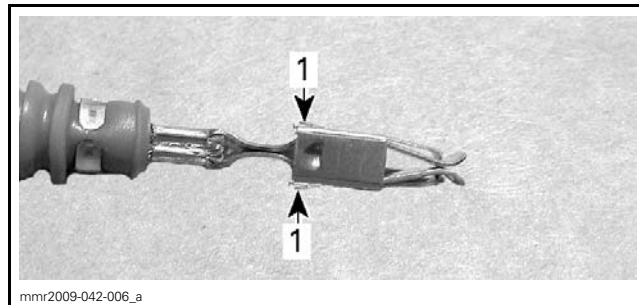


1. Locking tabs

Connector Assembly

J1A and J1B Connectors


Push terminal through seal until it is seated in connector housing.

Close the lock mechanism.

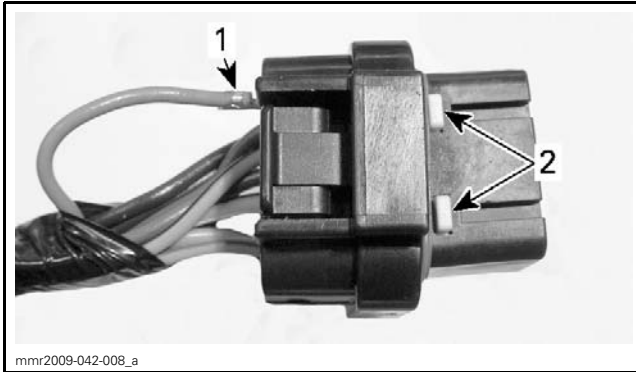

1. Insert terminal into housing
2. Push here to close the lock mechanism

NOTE: If the locking mechanism does engage, it is likely due to an improperly inserted terminal. Look at the end of connector to see if a terminal is partially out. If, so push the corresponding wire fully into connector then lock mechanism.

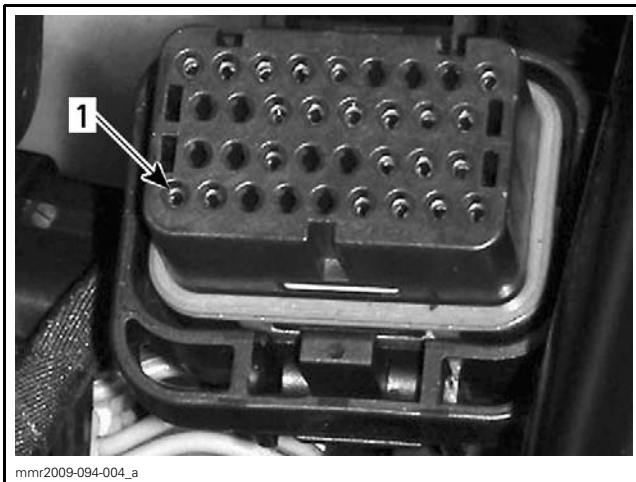

1. Terminal fully inserted in connector

J2 Connector

Align terminal with connector housing and push terminal with seal into connector housing until seated.

Terminal Crimping

Refer to *TERMINAL CRIMPING (AMP 8-CIRCUIT AND MULTILOCK)* further in this subsection for procedure.

DELPHI CONNECTOR (GT 150) (e.g: HEADLAMP (HL), STEERING HARNESS (SH, WMS))

TERMINAL EXTRACTION TOOL
DELPHI METRI-PACK REMOVAL TOOL (GREEN) (P/N 12094429)

JAE CONNECTOR (MX44) (e.g: THCM)

TERMINAL EXTRACTION TOOL
JAE EXTRACTION TOOL (P/N ET-MX44-1)

TERMINAL CRIMPING (AMP 8-CIRCUIT AND MULTILOCK)


To crimp a new connector terminal, use the CRIMPING TOOL (KOSTAL) (P/N 529 035 909) and the KOSTAL DIE (P/N 529 035 906).



CRIMPING TOOL

To properly crimp the terminal on the wire, strictly follow this procedure.

Strip the wire to a maximum of 3 mm (1/8 in).

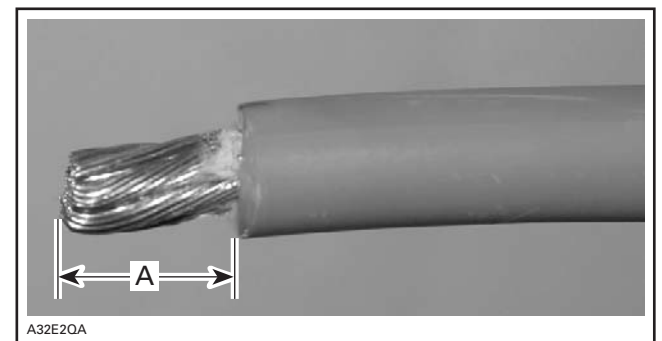


TYPICAL

A. 3 mm (1/8 in) maximum


Position wire in terminal.

Squeeze the terminal tabs with your fingers to temporarily retain terminal in place.

Subsection XX (CONNECTOR INFORMATION)

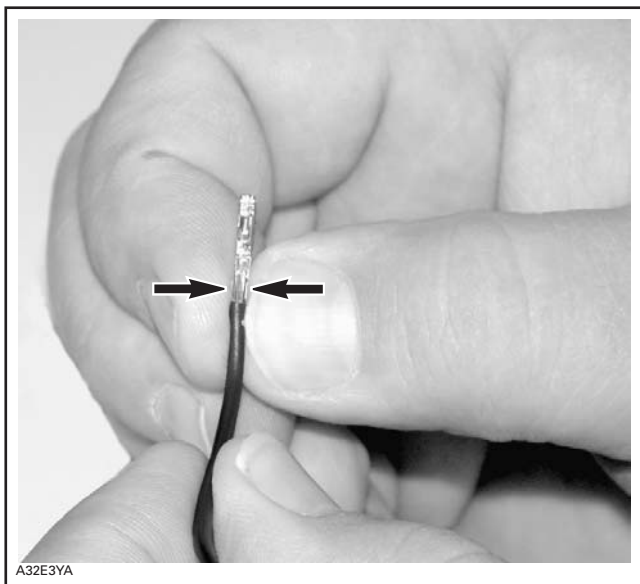

Insert terminal with wire in crimping pliers and position it so the top of the terminal tabs are flush with the pliers edge, or a little bit lower as shown.

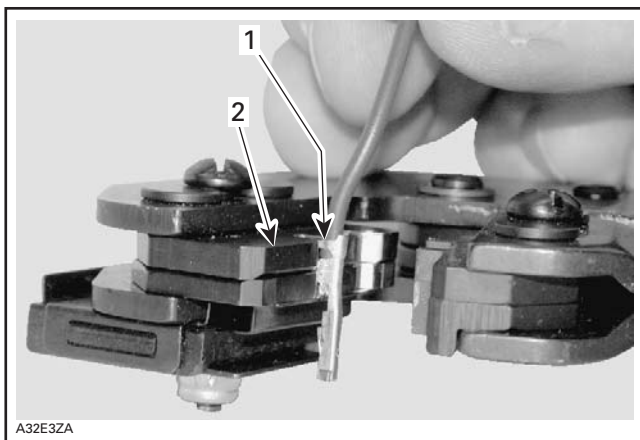


1. Top of terminal tabs
2. Align tabs with pliers edge

Crimp terminal. Ensure all wire strands are in the terminal. If not, the loose strands may cause strange problems in the electrical system.

BATTERY CABLE TERMINAL

Terminal Installation


Carefully strip the wire approximately to 10 mm (1/2 in) in length using a wire stripping tool or sharp blade/knife.

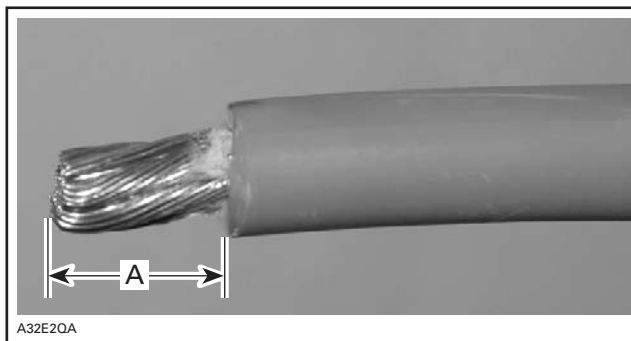

A. 10 mm (1/2 in)


NOTE: Make sure not to cut wire strands while stripping the wire.

Install the appropriate terminal on the wire according to the requirement. Refer to appropriate *PARTS CATALOG*.

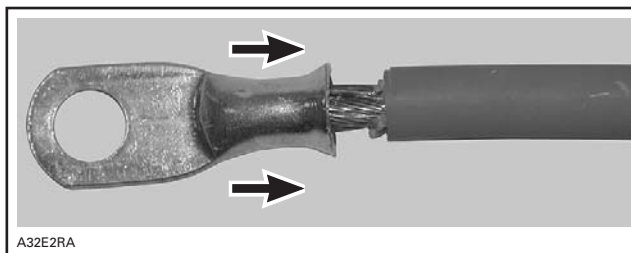


INSTALLATION OF TERMINAL

Follow the instructions provided with the CRIMPING TOOL (HEAVY GAUGE WIRE) (P/N 529 035 730) to select the proper position of the tool.

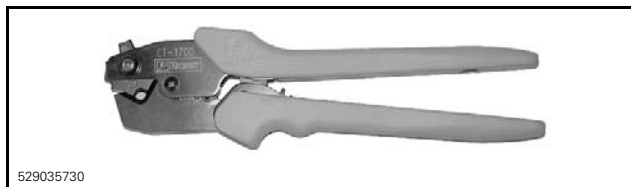

NOTE: Different wires require different crimp plier settings. Make sure to follow the instructions supplied with the tool.

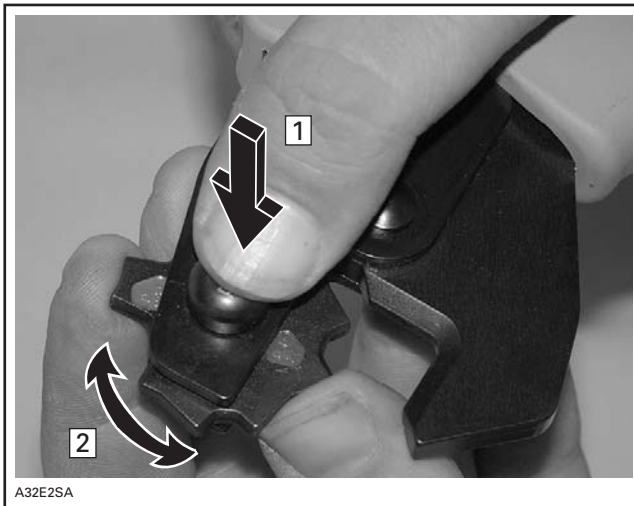

POSITIONING THE CRIMP PLIERS

- Step 1: Press
- Step 2: Rotate

After positioning the crimp pliers, crimp the terminal already installed on wire.



CRIMPING OF WIRE



PROPERLY CRIMPED WIRE

To verify if the wire is properly crimped, simultaneously pull on the wire and on the terminal in opposite directions using moderate force.


NOTICE Never solder the wire to the terminal. Soldering can change the property of the wire and it can become brittle and break.

Install the protective heat shrink rubber tube on the terminal. Heat the heat shrink rubber tube using the heat gun so that it grasps the wire and the terminal.


NOTICE Make sure that the protective heat shrink rubber tube has been properly installed and no part of wire is exposed.

SPLICE INFORMATION

MAIN HARNESS

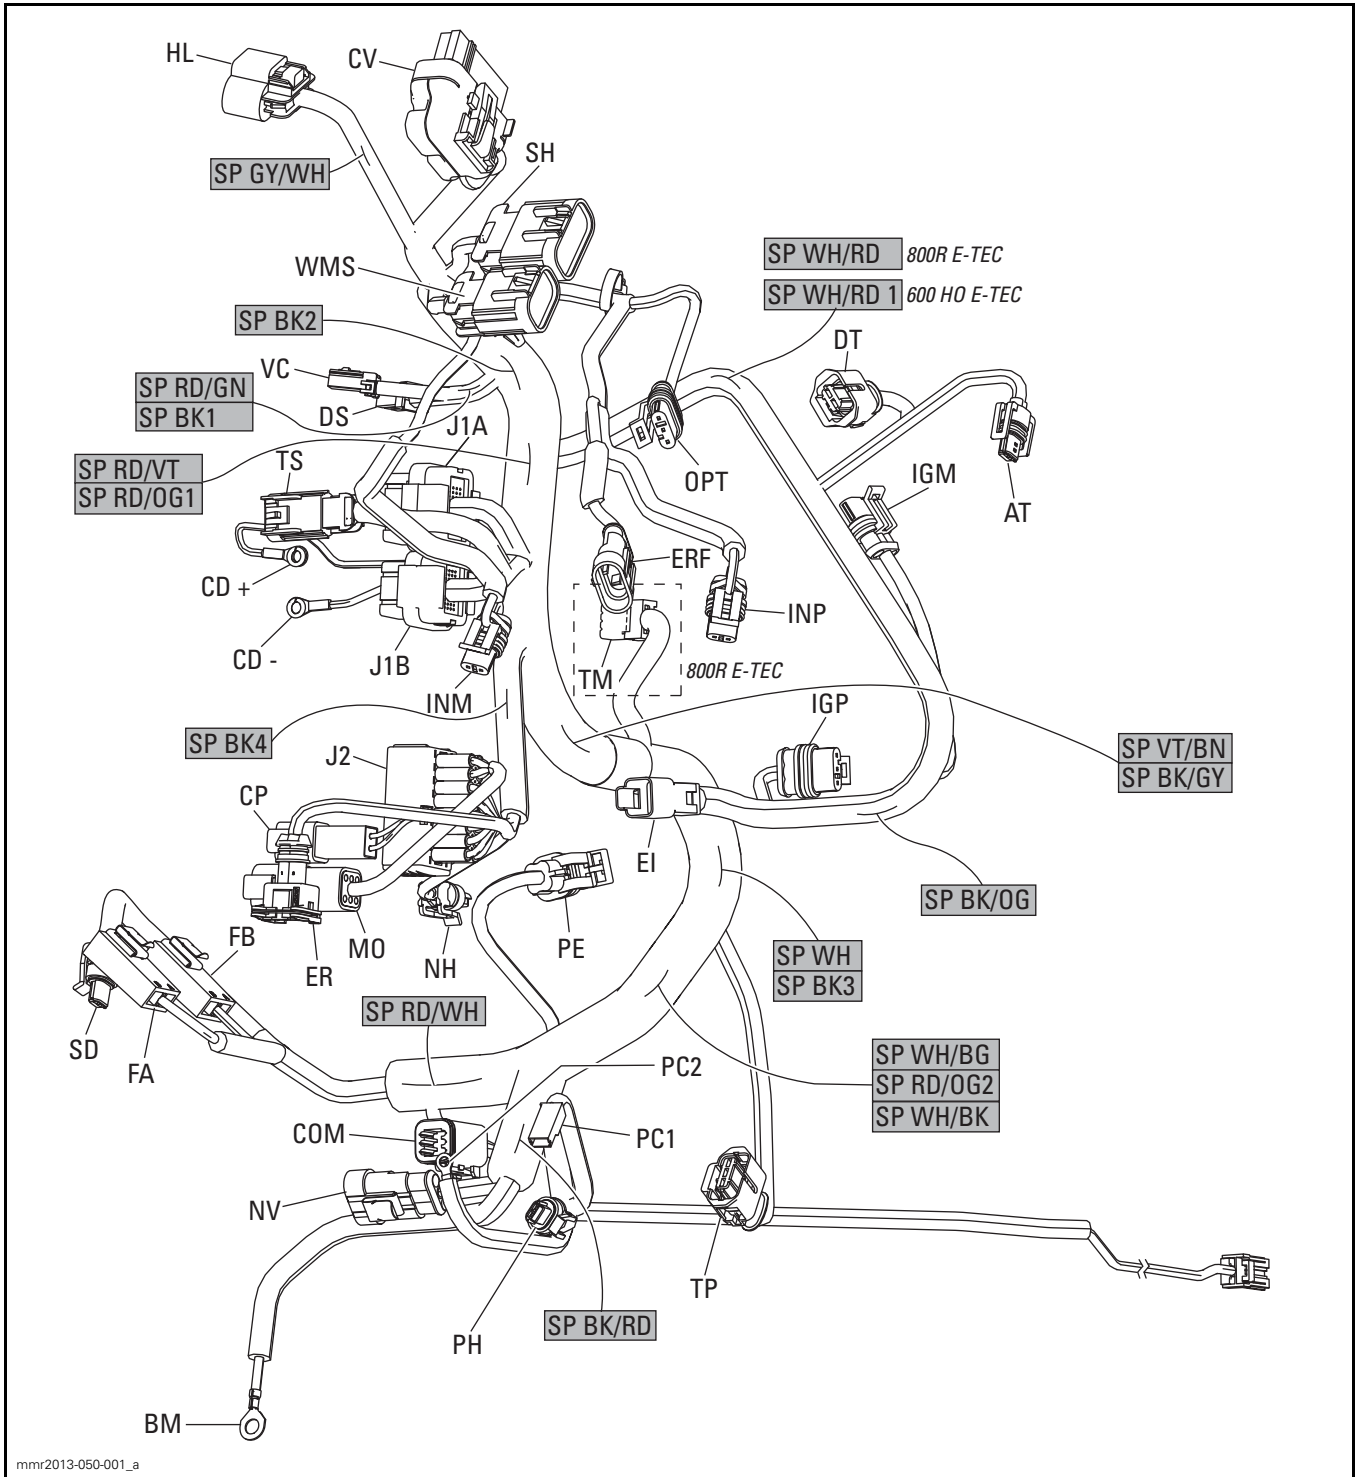

STEERING HARNESS

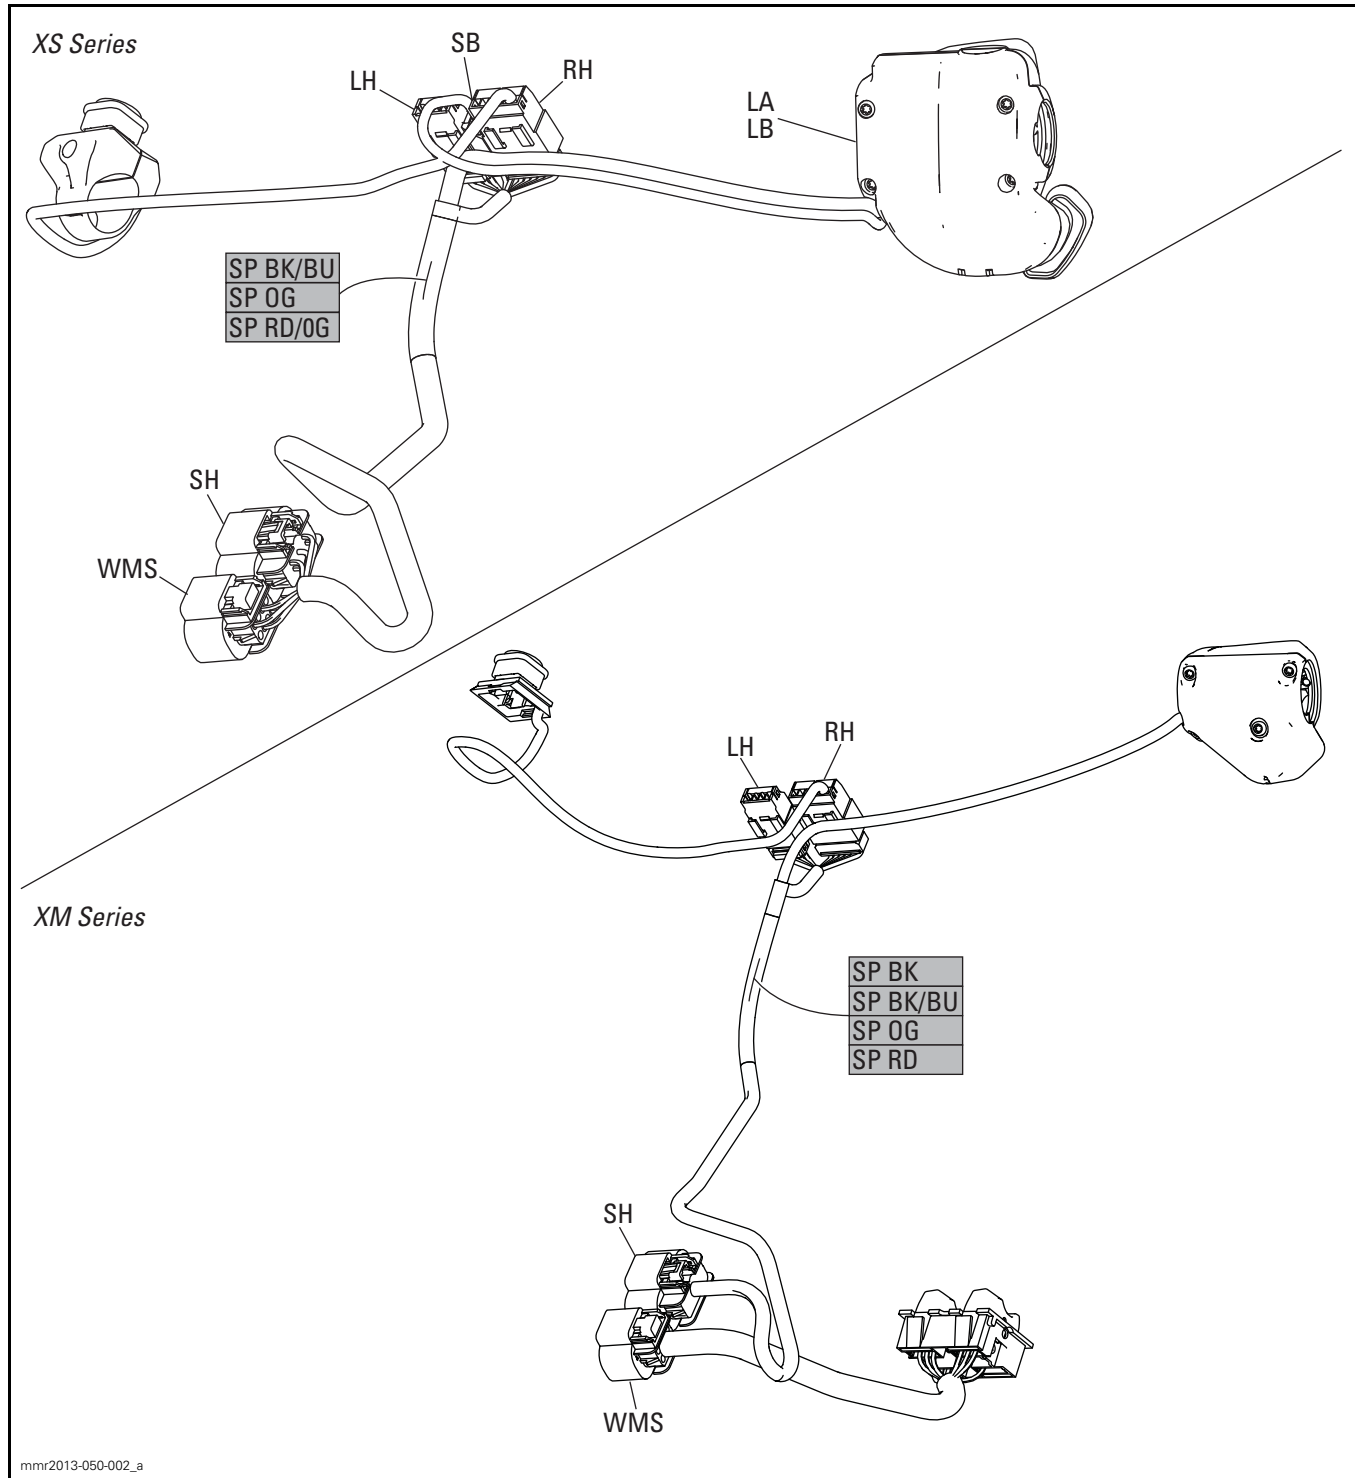

mmr2013-050-002_a

PROCEDURES

This section gives the procedures and the location diagrams in order to quickly repair electrical harness splices and should be used in conjunction with the *WIRING DIAGRAM INFORMATION* subsection.


1. Make sure to perform the usual tests described in *ELECTRICAL SYSTEM* sections before investigating the harness splices.
2. If an electrical issue can not be found with the usual tests, locate the main harness splice that is involved in the faulty circuit and repair it as per the *SPLICES REPAIR PROCEDURE*.
3. To repair a splice, we recommend the use of a tin solder meeting the followings requirements or an equivalent.

TIN SOLDER REQUIREMENTS
SN 60
PB 40
DIA 0.062
FLUX RA 2%

SPLICES REPAIR PROCEDURE

CASE 1: Wire Detached from Splice

1. Locate splice. Refer to splices location diagrams.
2. Remove wires from protector tube.
3. Locate the shrink tube protecting the defective splice.

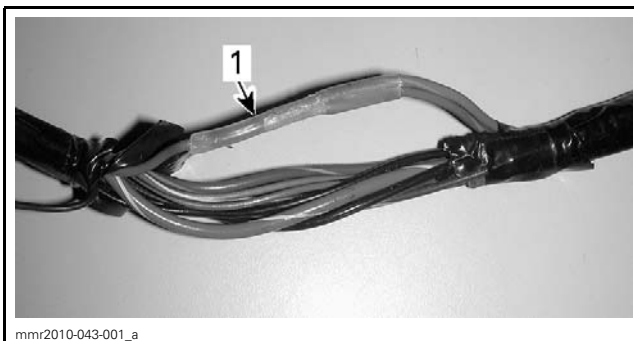


1. Shrink tube

4. Remove the shrink tube.
 - 4.1 Using a blade, cut the shrink tube.




NOTICE Be careful with the blade to avoid cutting wires insulation.

- 4.2 Slightly heat the shrink tube using a heat gun.

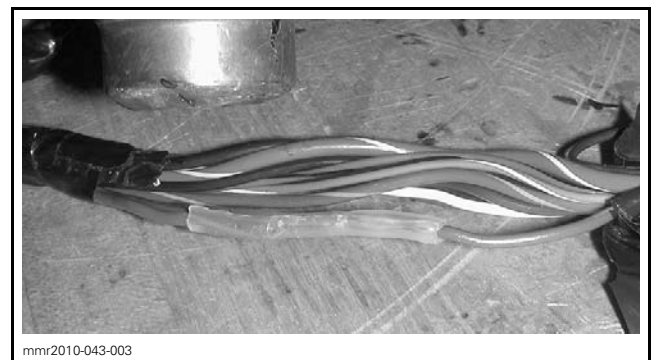

- 4.3 Remove the shrink tube with long nose pliers.


5. Locate detached wire from splice.

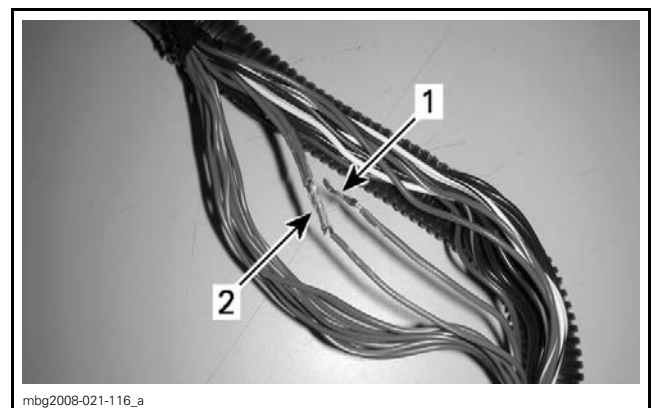

1. Detached wire
2. Splice

6. Twist detached wire around splice.

Subsection XX (SPLICE INFORMATION)

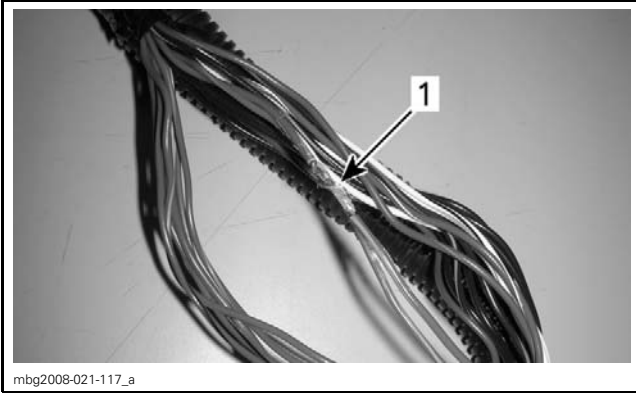

1. Twisted wire

7. Perform a tin solder on twisted wire.

8. Apply electrical tape to cover splice.

NOTE: Make sure tape overlaps on wire insulation, approximately 13 mm (1/2 in) each side.


9. Reinstall wires into protector tube.

CASE 2: Wire Broken from Splice

1. Locate splice. Refer to splices location diagrams.

2. Remove wires from protector tube.

3. Locate the shrink tube protecting the defective splice.

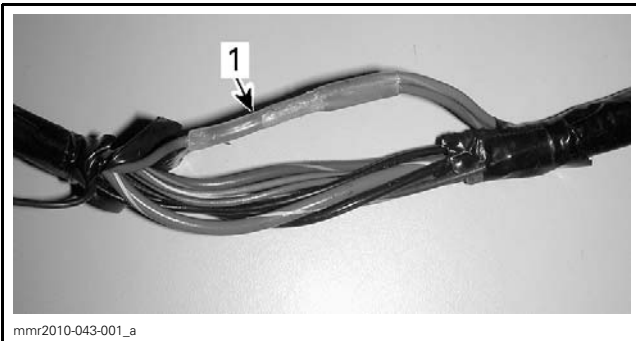


1. Shrink tube

4. Remove the shrink tube.

4.1 Using a blade, cut the shrink tube.




4.2 Slightly heat the shrink tube using a heat gun.

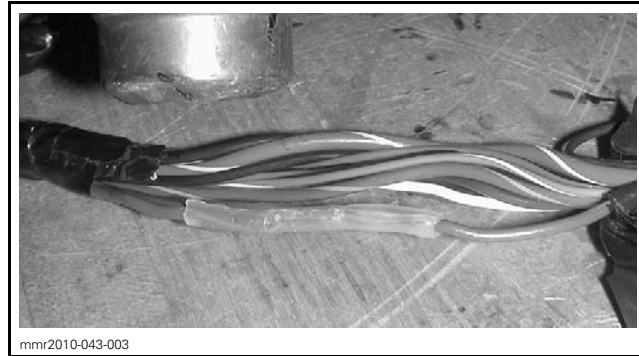

4.3 Remove the shrink tube with long nose pliers.


5. Locate broken wire from splice.

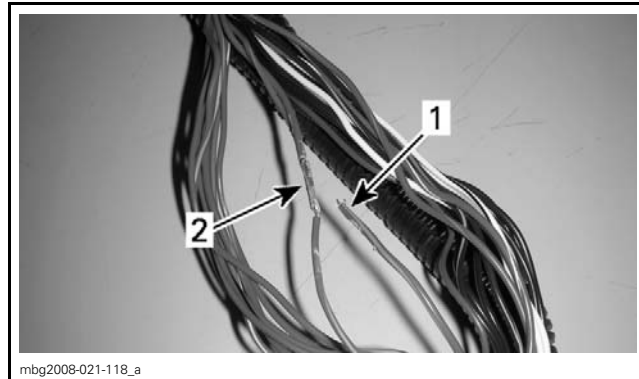

1. Broken wire
2. Splice

6. Strip wire insulation at the end of broken wire.


7. Strip wire insulation below the splice.

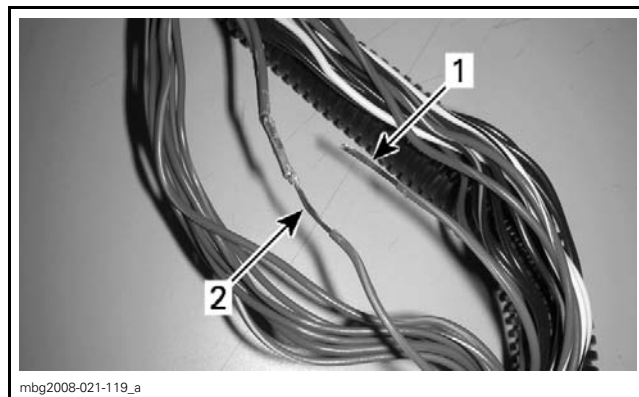

1. Broken wire stripped
2. Splice wire stripped

8. Twist wire around stripped wire.

NOTICE Be careful with the blade to avoid cutting wires insulation.

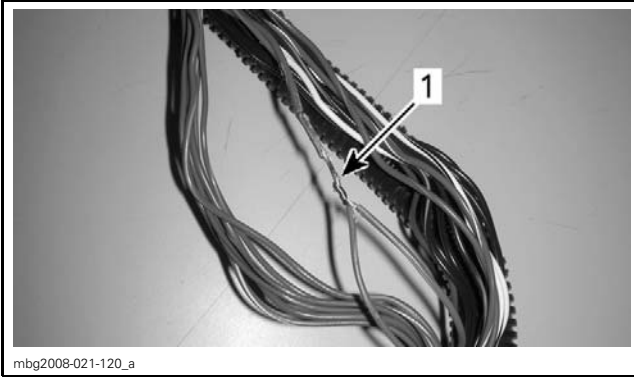

1. Twisted wire

9. Perform a tin solder on twisted wire.

10. Apply electrical tape to cover splice.

NOTE: Make sure tape overlaps on wire insulation, approximately 13 mm (1/2 in) each side.

11. Reinstall wires into protector tube.

NOTE: Always perform a solder on a bigger wire (lower gage).




If you bought this manual from any other seller please leave them NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

2013 REV-XS 600 HO E-TEC
2013 REV-XM 600 HO E-TEC




Paperless Manuals
For a Better Tomorrow

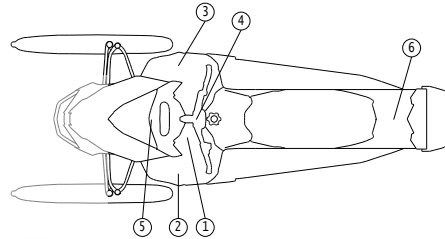

CONNECTOR LOCATION	
1	ENGINE RELATED CONNECTOR
2	LH SIDE PANEL
3	RH SIDE PANEL
4	HANDLEBAR AREA
5	BEHIND MULTI-FUNCTION GAUGE
6	REAR PART OF FRAME

COLOR CODE	
BG	BEIGE
BK	BLACK
BN	BROWN
BU	BLUE
GN	GREEN
GY	GRAY
OG	ORANGE
PK	PINK
RD	RED
VT	VIOLET
YE	YELLOW
LT	LIGHT COLOR
JT	JUNCTION


If you bought this manual from any other seller please leave them
NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

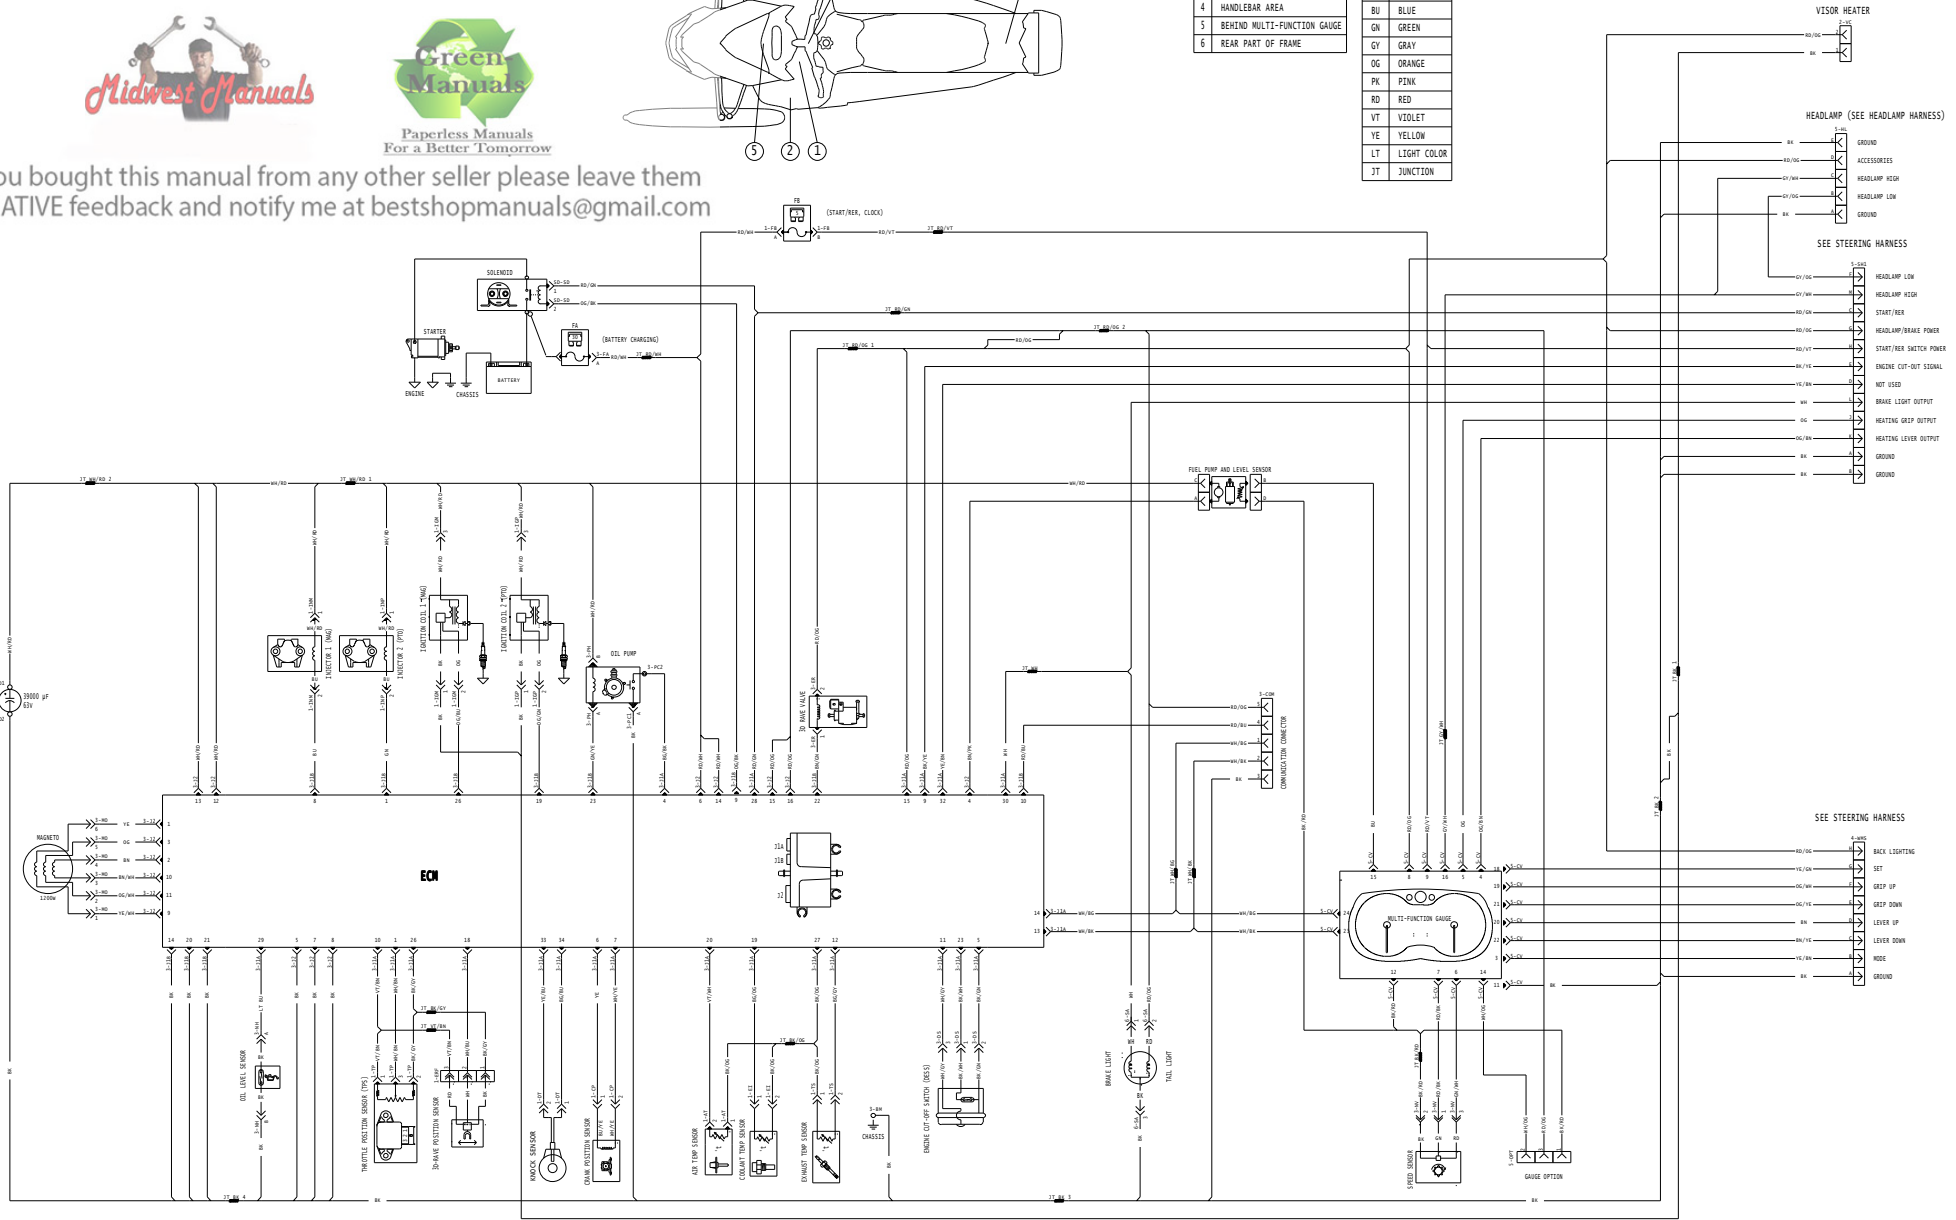

2013 REV-XS 800R E-TEC
2013 REV-XM 800R E-TEC




Paperless Manuals
For a Better Tomorrow

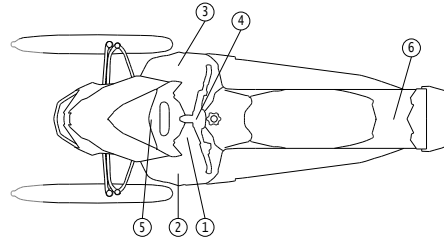


CONNECTOR LOCATION	
1	ENGINE RELATED CONNECTOR
2	LH SIDE PANEL
3	RH SIDE PANEL
4	HANDLEBAR AREA
5	BEHIND MULTI-FUNCTION GAUGE
6	REAR PART OF FRAME

COLOR CODE	
BG	BEIGE
BK	BLACK
BN	BROWN
BU	BLUE
GN	GREEN
GY	GRAY
OG	ORANGE
PK	PINK
RD	RED
VT	VIOLET
YE	YELLOW
LT	LIGHT COLOR
JT	JUNCTION


If you bought this manual from any other seller please leave them
NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

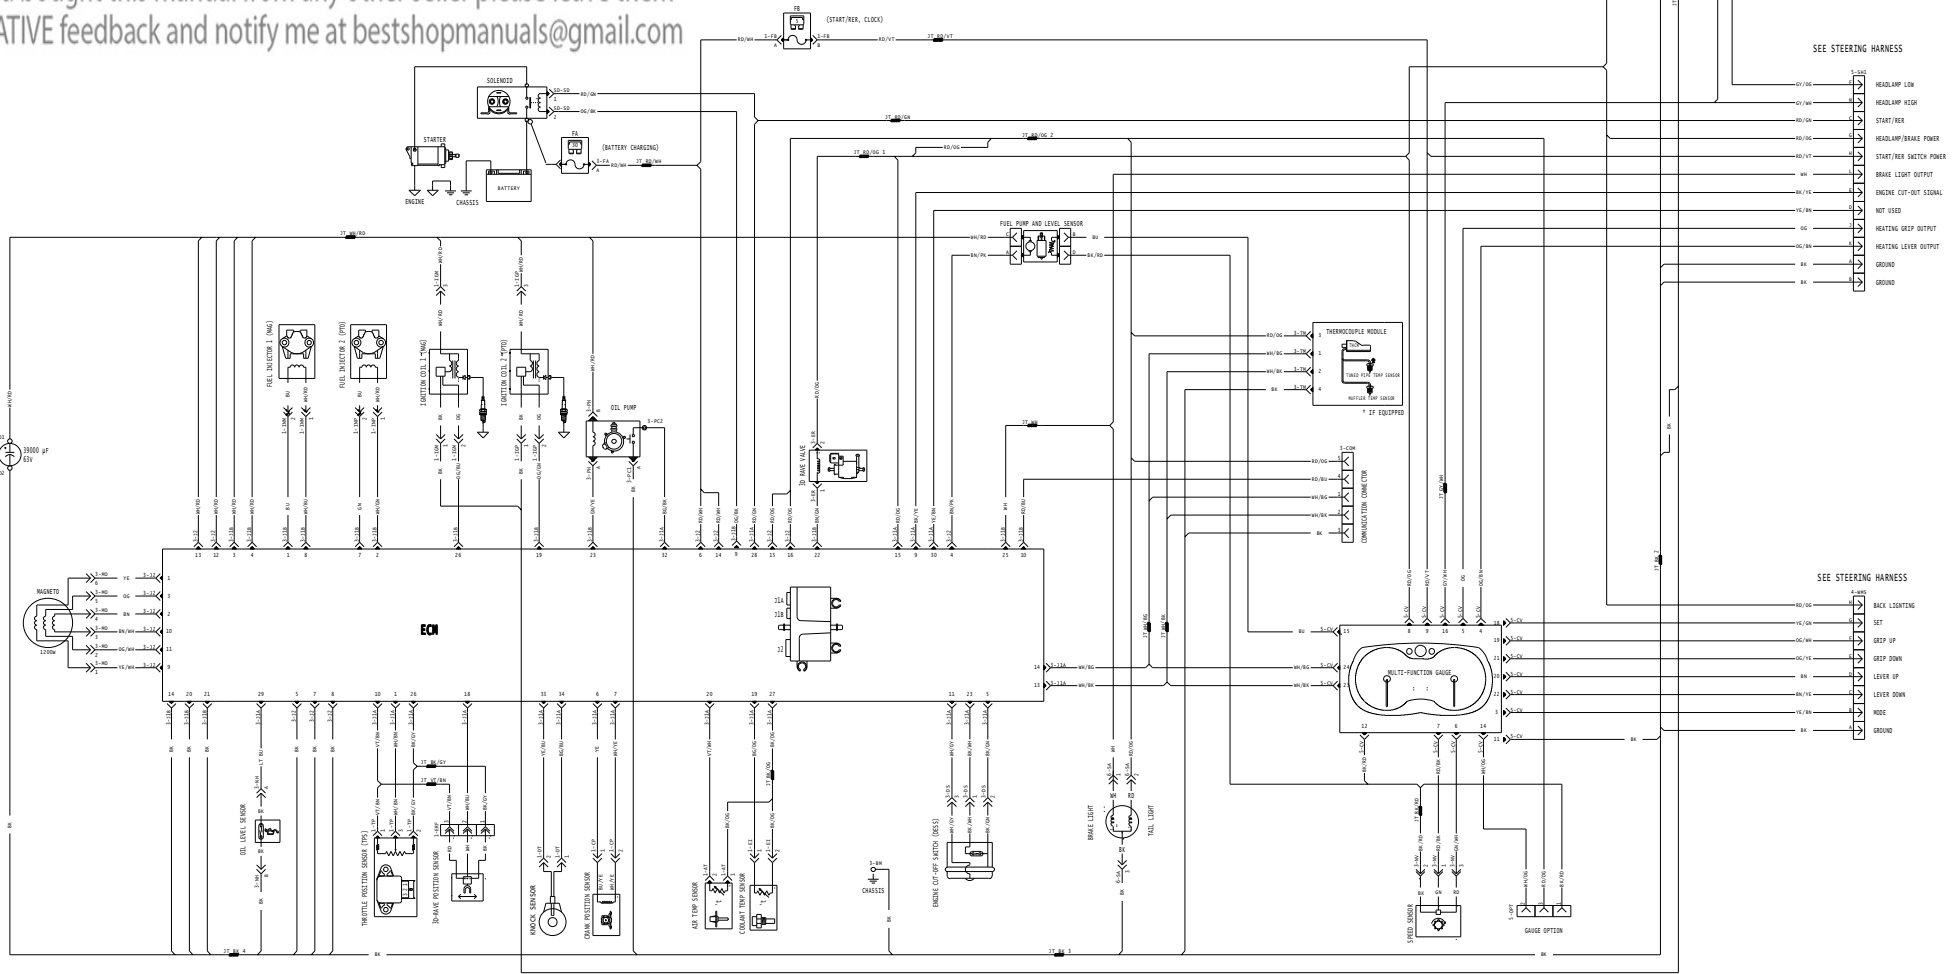


2013 REV-XM STEERING HARNESS
 2013 REV-XS AND REV-XM HEADLAMP HARNESS
 2013 REV-XS STEERING HARNESS

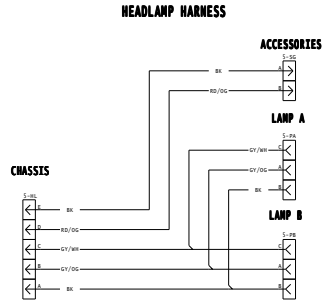

REV-XM SETTERING AND CONSOLE HARNESSES

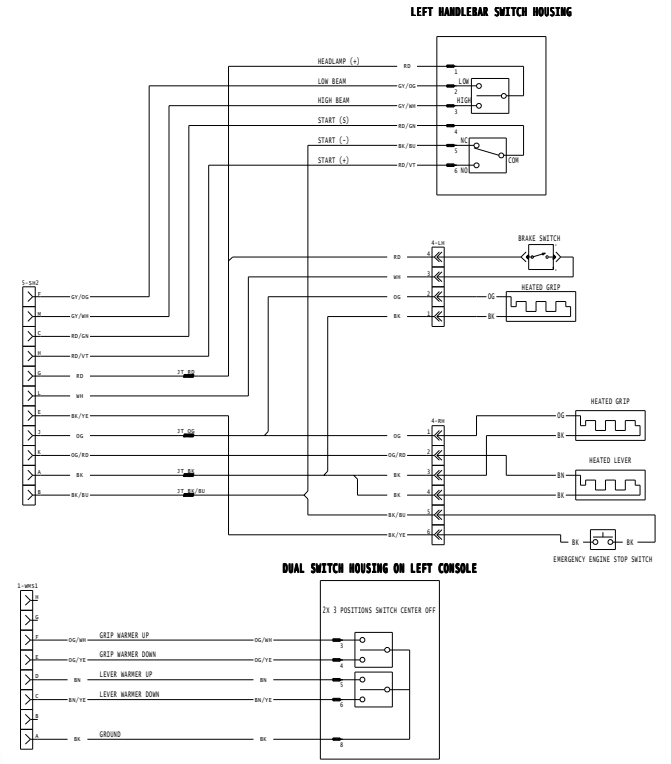

REV-XS SETTERING HARNESS

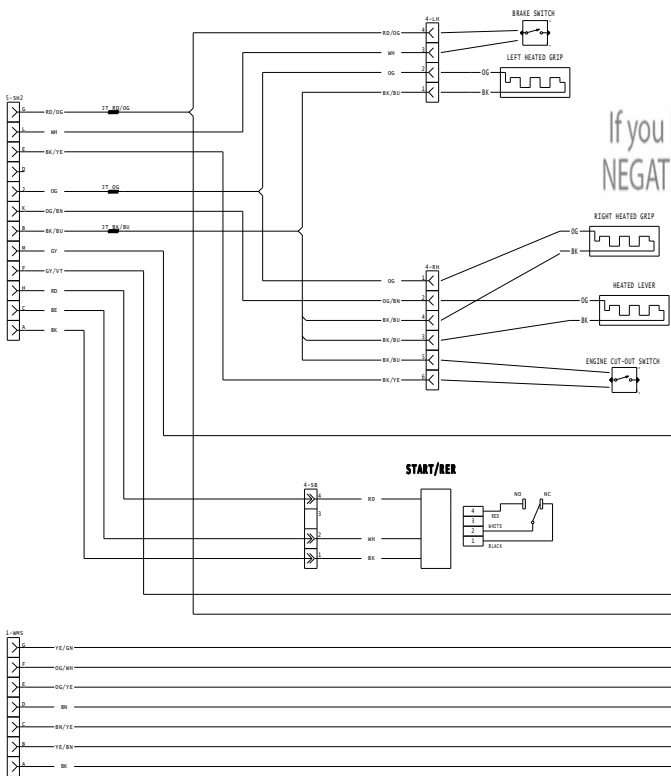

Paperless Manuals
 For a Better Tomorrow

If you bought this manual from any other seller please leave them
 NEGATIVE feedback and notify me at bestshopmanuals@gmail.com



Paperless Manuals
 For a Better Tomorrow

If you bought this manual from any other seller please leave them
 NEGATIVE feedback and notify me at bestshopmanuals@gmail.com

NY: 2013	TITRE	REVISION 0
ING: MP	TECH: JL	DATE: 2012-12-04

ski-doo

RIDING GEAR • ACCESSORIES • GENUINE PARTS

2014

MORE THAN
10,000
WAYS TO
CUSTOMIZE
YOUR SLED

MADE ON THE MOUNTAIN
GEAR FOR
MAXIMIZING
YOUR
POWDER
PLEASURE

+

**NEW X-TEAM
RIDING GEAR**

GUIDE TO MAINTAINING
THE **ORIGINAL PERFORMANCE**
OF YOUR SLED

WHAT **RIDERS** ARE SAYING
ABOUT SKI-DOO RIDING GEAR
AND ACCESSORIES

**YOUR GUIDE
TO LIVING THE
SKI-DOO LIFE**



ski-doo®





STORE.SKI-DOO.COM



ONLINE STORE FOR
PARTS, ACCESSORIES
AND RIDING GEAR



CHECK OUT OUR
LATEST VIDEOS



GET YOUR **OILS** AND
LUBRICANTS ONLINE



ACCESS THE **SLED WRAP**
ONLINE STORE



THE **2014 SKI-DOO**
LINE-UP WILL BE
AVAILABLE AT YOUR
AUTHORIZED SKI-DOO
DEALER AND ONLINE
IN SEPTEMBER 2013



SIGN UP FOR SKI-DOO eNEWS AND GET **FREE SHIPPING**
THE NEXT TIME YOU BUY ONLINE.
VALID WITH ORDER OF \$150 AND MORE.

2014 RIDING GEAR :: ACCESSORIES :: GENUINE PARTS



4 RIDING GEAR

MOUNTAIN	6
PERFORMANCE	20
TOURING	28
RECREATIONAL	40
HELMETS	48
GOGGLES	58
BALACLAVAS	61
GLOVES & MITTS	62
HEADWEAR	66
BOOTS	68
BAGS	69
TECHNICAL WEAR	72
BASE LAYERS FOR MEN	77
SOCKS	78
BASE LAYERS FOR LADIES	80
KIDSWEAR	84
SPORTSWEAR	92
SIZING CHART	105
TECHNOLOGY	
MOUNTAIN TECHNOLOGY	8
TOURING TECHNOLOGY	30
TECHNICAL WEAR TECHNOLOGY	74
OUTER LAYER GUIDE	82

108 PARTS & ACCESSORIES

ACCESSORIES FIT GUIDE	110
2014 TOP ACCESSORIES	113
CUSTOMIZED SLEDS	
REV-XS MX Z TNT	115
REV-XS GSX LE	116
REV-XM FREERIDE	117
REV-XS RENEGADE BACKCOUNTRY	118
ACCESSORIES	
CUSTOM ACCESSORIES	120
DECALS	131
WINDSHIELDS	132
LIGHT & MIRRORS	137
LinQ™ SYSTEM	138
BAGS, BOXES & RACKS	140
BUMPERS & HITCHES	146
SEATS	148
COVERS	150
PARTS	
TRACTION & CONTROL	154
PARTS	162
ELECTRICAL	164
BELTS	168
SPARK PLUGS & NSK BEARINGS	169
XPS ENGINE OILS	172
MAINTENANCE	174

LEARN MORE AT A GLANCE

LOOK FOR THESE ICONS THROUGHOUT THE CATALOG TO LEARN A BIT MORE ABOUT KEY PRODUCTS:



NEW
New item for 2014.



INNOVATION
An item BRP pioneered that takes your ride to the next level.



DID YOU KNOW
An interesting tidbit about an item beyond the product description.

GET THE RIGHT GEAR

WEARING GEAR FOR THE TYPE OF RIDING YOU DO WILL MAXIMIZE YOUR SNOWMOBILING EXPERIENCE. LOOK FOR THE ICON THAT BEST MATCHES YOUR RIDING STYLE:



MOUNTAIN



TOURING



PERFORMANCE



RECREATIONAL

For advertising purposes, some scenes depicted in this brochure include professional riders and racers executing maneuvers or performances under ideal and/or controlled conditions. Do not attempt any of these or any other risky maneuvers if they're beyond your level of riding ability, as well as your understanding and respect for the performance of your snowmobile. Always ride responsibly and safely. Always observe applicable local laws and regulations. Always wear the appropriate protective clothing, including a helmet. And remember, if you're going to drink, please don't ride. Because of its ongoing commitment to product quality and innovation, Bombardier Recreational Products Inc. (BRP) reserves the right, at any time, to discontinue or change specifications, prices, designs, features, models or equipment without incurring any obligation. Some models depicted herein may include optional equipment. Prices are based on Manufacturer Suggested Retail Prices. Dealer may sell for a different price. Taxes are not included. BRP is a proud member of SSCC (Snowmobiling Safety Certification Committee), Machine Safety Standard, Operator Safety Training, Safe Trails, ISMA (International Snowmobile Manufacturers Association), National Snowmobile Foundation and Tread Lightly! Inc. By being a member of these important snowmobiling associations, we recognize and support their efforts in sharing the responsibility in promoting the growth of our sport. In the U.S.A., products are distributed by BRP US Inc. In Canada, products are distributed by Bombardier Recreational Products Inc. ® are registered trademarks and ™ and the BRP logo trademarks of Bombardier Recreational Products Inc. or its affiliates. ABS is a registered trademark of ABS Peter Aschauer GmbH. Hipora is a registered trademark of Kolon Industries, Inc. Isolfil is a registered trademark for Yarns and Threads For Textile. mcFIT and mcTEX are registered trademarks of MCTECH Corporation. Microban is a registered trademark of Microban International. Primaloft Cresta, Primaloft Sport and Primaloft One are registered trademarks of Albany International Corp. Recco is a registered trademark of Recco AB. SympaTex is a registered trademark of SympaTex Technologies GmbH. Dri-Release is a registered trademark of Optimer brands. Max Flow is a trademark of Moyno, Inc. and Kevlar are trademarks of E.I. DuPont de Nemours & Co. ThermoCool, Lycra, CORDURA and Coolmax are registered trademarks of INVISTA for durable fabrics. ThermoCool is a registered trademark of ADVANSA. 3M and Thinsulate are registered trademarks of 3M Corporation. Velcro is a registered trademark of Velcro Industries. X-Static is a registered trademark of Noble Biomaterials Europe srl. GTX is a trademark of Castrol Limited used under license. KYB is a registered trademark of Kayaba. Montana is a registered trademark of Garmin Ltd. NGK is a registered trademark of NGK Spark Plugs, Ltd. Extender Trail III, Trail Blazer IV, Executive, Flat-top and Dooly are trademarks and registered trademarks of Woody's International Engineering and Manufacturing, Inc. RipSaw, RipSaw Lite, ICE Ripper, ICE Ripper XT, ICE Attak, Powder Max and ICE Wide are trademarks of Camoplast Inc. Lexan is a registered trademark of SABIC Innovative Plastics. Silicone is a trademark of Dow Corning Corporation. Superclamp II is a trademark of Bowdriks Industries. YUASA is a registered trademark of YUASA Batteries Inc. All other company and/or product names are trademarks or registered trademarks of their respective holders. © 2013 BRP. All rights reserved.

COVER SHOT
RIDER: ROB ALFORD
PLACE: LOST PEAK
RIDING GEAR: P.14 / ACCESSORIES: P.117





SKI-DOO RIDING GEAR

INNOVATION + PERFORMANCE + STYLE

“WELCOME TO MY OFFICE. HOPE YOU LIKE THE VIEW.”

— NADINE OVERWATER

Professional mountain snowmobile guide, Revelstoke, BC
10 years riding in the ditches of Alberta, and 10 more in
the mountains of British Columbia.



MOUNTAIN

Sometimes you're on top of the snow, and sometimes you're in the snow. So our lightweight mountain gear keeps you warm and dry with waterproof and highly breathable technologies. And it's designed specifically for mountain riding, to move with you around the sled and through the powder.



PLACE: LOST PEAK
LOCATION: SILENT TOWN, BC
ELEVATION: 7795 FEET
AVERAGE SNOWFALL: 142 INCHES
DATE: 12/16/12
TEMPERATURE: 27° F

First ride of the year with my best buds, new equipment and some of the best terrain you could find anywhere. The snow was deep and untracked, we were the first to thrash the powder on that mountain. The feeling was awesome!



2014 MOUNTAIN GEAR TECHNOLOGY

MCODE 3-IN-1 JACKET

- 1 SHELL
- 2 INSULATED LINER JACKET
- 3 SHELL+INSULATED JACKET

MCODE

STAY DRY AND COMFORTABLE ALL DAY WITH A FRESH LOOK

HELIUM series items are made with INNOVATIVE MATERIALS and TESTED for ultimate performance in active mountain riding conditions.

HELIUM 50

Jacket and Highpants

LIGHTWEIGHT AND FLEXIBLE WITH ADDED TOUGHNESS



HELIUM 30

Jacket and Highpants

THE LIGHTEST OPTION IN OUR LINE-UP






PERFORMANCE FOR ACTIVE SPORTS

100%

WATERPROOF / WINDPROOF / BREATHABLE

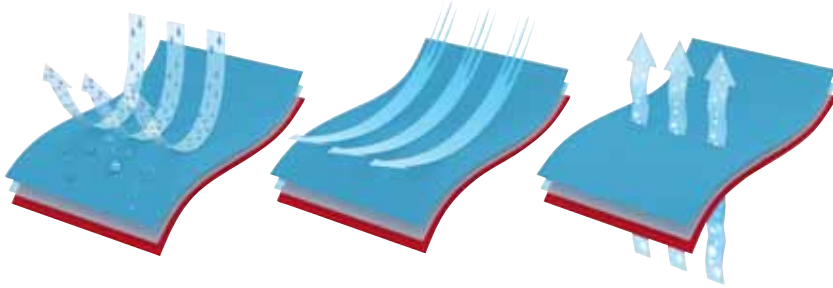

	NON POROUS SYMPATEX MEMBRANE	MICRO POROUS PTFE MEMBRANE
Performance meter	◆◆◆◆◆	◆◆◆◆◇
Defense against laundering and/or chemicals	Very resistant to almost everything	Won't resist everything; pores will clog and diminish the membrane's effect, especially breathability
Stretchability	To 300% of its size	To 100% of its size
Breathability	With increased heat and humidity, breathability will increase	Limited to a level in time, then sweat builds up inside
Waterproofness	100% waterproof - non porous membrane will never quit	Yes, but micro pores can become weak due to the pressure of water on fabric and will eventually stretch
Windproofness	100% windproof - non porous, meaning that wind has no way of entering	Yes, but micro pores can eventually stretch with age and will no longer be efficient
Durability / life cycle of garment	Extremely durable and tough	Relatively durable - will eventually break at flex points and pores will become blocked



DESIGNED TO HELP KEEP YOU SAFE

MORE THAN 100 ORGANIZATIONS, INCLUDING SEARCH AND RESCUE TEAMS, UTILIZE RECCO® TECHNOLOGY.

When used with avalanche awareness training, a transceiver and other backcountry safety essentials, the RECCO system adds another layer of protection.

It can pinpoint the exact location of a burial with harmonic radar and is an additional tool that does not interfere with other rescue methods such as avalanche dogs, transceiver searches or probe lines.

Since the reflector is integrated into the jacket and/or highpants, it requires no action on the part of the snowmobiler to function properly. RECCO-equipped gear can be washed without damage and will not interfere with any electronic device since it does not transmit any sort of signal.

It is not intended for self-rescue and is not an alternative to transceiver use in the backcountry.

SKI-DOO RIDING GEAR WITH SYMPATEX COMES WITH A LIFETIME WARRANTY.



Invest in gear that will perform AND last.

Go to store.ski-doo.com/warranty for complete details.



WARRANTY COVERAGE PERIOD

Bombardier Recreational Products Inc. (BRP) warrants that all its 2014 SympaTex® Riding Gear sold as New and Unused by an authorized North American BRP dealer will be free from any defect in material and/or workmanship for the lifetime of the product*.

* The lifetime of a product does not mean your lifetime. The intensity under which the product is used determines this factor. Rips, tears, punctures, holes and burns will void the product lifetime warranty even if the warranty issue is not related to these damages.

WATCH

OUR MOUNTAIN GEAR AND FEEL

THE EXPERIENCE ON

STORE.SKI-DOO.COM/VIDEO





Black (90)



Back



Yellow (10)

HELIUM GEAR USES AN ADVANCED SYMPATEX WATERPROOF MEMBRANE THAT ACTUALLY BECOMES MORE BREATHABLE THE HARDER YOU RIDE.



HELIUM 50 JACKET

Built with the best and most innovative materials, Helium 50 jacket brings lightweight comfort, breathability and durability to mountain riding.

- Highly windproof, waterproof and breathable membrane.
- Stretch panels.
- All seams sealed.
- Underarm venting design for better air entry without compromising comfort.
- Water-resistant zipper at front opening, pockets and vents.
- Powder skirt.

Shell: Sympatex 3-Ply Laminated Nylon Cordura

440580 - XS, S, M, L, XL, 2XL, 3XL
Yellow (10), Black (90)

\$399.99



FOR EXTRA WARMTH WEAR THIS VEST **OVER** THE HELIUM 30 AND 50 JACKETS.



HELIUM 50 HIGHPANTS

- Highly windproof, waterproof and breathable membrane.
- All seams sealed.
- Stretch fabric at waist, crotch and upper knee.
- Designed with high front and back bib panels.
- Integrated removable knee pads and storm gaiter.
- 2-way front zipper.
- 2-way full-length water-resistant side zippers with inner flap.

Shell: Sympatex 3-ply Laminated Nylon Cordura

441491 - XS, S, M, L, XL, 2XL, 3XL
Black (90)

\$399.99



Comes with its own packable bag

SKI-DOO DOWN VEST

Versatile and lightweight comfort with extreme packability.

- Quilted down vest can be worn over or under a shell jacket.
- Ripstop fabric for great durability.

Shell: Nylon
Insulation: Duck down

440595 - S, M, L, XL, 2XL, 3XL
Black (90)

\$129.99

“I RELY ON MY HELIUM GEAR.”

— CARL KUSTER

Carl Kuster spends 110 days per year riding BC Powder showing people what Ski-Doo snowmobile sleds and gear can do in British Columbia.

“There is something about sitting on some mountain peak overlooking a hundred miles in 360 degrees and seeing nothing but snow-pasted peaks 3,000 feet above the last lingering trees in the valley. That’s why I’m so dedicated to bringing people out here. And when I do, I need gear that performs, in varying conditions, day-in and day-out. I’ve been riding the Helium series, and it is the best gear I’ve ever worn.”





Black (90)



Back



White (01)

SYMPATEX NON-POROUS MEMBRANE WASHES WITHOUT CLOGGING OR BREAKING DOWN TO KEEP YOU DRY.



Sympatex



HELIUM 30 JACKET

The most lightweight option in our collection. Built with the most innovative materials for breathability, performance and durability for mountain riding.

- All seams sealed.
- Underarm venting design for better air entry without compromising comfort.
- Water-resistant zippers at front opening, pockets and vents.
- Removable hood.
- Powder skirt.

Shell: Sympatex 2-Ply Laminated Polyester
 440576 • XS, S, M, L, XL, 2XL, 3XL
 White (01), Black (90)

\$359.99

Tall sizes
 440591 • MT, LT, XLT, 2XLT
 White (01), Black (90)

\$379.99

THE SYMPATEX MEMBRANE CAN STRETCH TO 300% ITS SIZE. THAT HELPS IT KEEP YOU DRY IN HIGH USE AREAS, LIKE THE SEAT AND KNEES.



Sympatex



HELIUM 30 HIGHPANTS

- Stretch fabric at waist and crotch.
- Lightweight fleece and mesh at front and seat.
- Integrated knee pads and storm gaiter.
- Water-resistant zippered hip pockets and front pocket.
- 2-way front zipper.
- 2-way full-length water-resistant side zippers with inner flap.

Shell: Sympatex 2-Ply Laminated Polyester

441490 • XS, S, M, L, XL, 2XL, 3XL
 Black (90)

\$349.99

Tall sizes
 441503 • MT, LT, XLT, 2XLT
 Black (90)

\$369.99



SKI-DOO SOFT SHELL

A versatile warm-weather jacket. Can double as great street gear or can be worn as a mid layer with our Helium jackets.

- Wind and water resistant breathable fabric.
- Water-resistant zipper at front opening.
- Underarm venting.
- Shaped sleeves.
- Adjustable hem.

Shell: 94% Polyester, 6% Spandex
 440589 • XS, S, M, L, XL, 2XL, 3XL
 Black (90)

\$124.99



White (01)



Yellow (10)

RPM | SLALOM JACKET

Combines the features of a shell for mountain and off trail riding with a racing look.

- 100% seams and logos sealed.
- Underarm and back venting.
- Adjustable collar, hem and wrists.
- Shaped sleeves and articulated shoulders.
- Water-resistant zippered handpockets.
- Powder skirt.

Shell: 95% Nylon, 5% Polyester

440634 - XS, S, M, L, XL, 2XL, 3XL

White (01), Yellow (10), Red (30), Black (90)

\$229.99



Red (30)



Black (90)

RPM | ACTION PANTS

Lightweight pants with light insulation for aggressive riders.

- Critical seams sealed.
- High venting.
- Articulated, shaped knees.
- Shin and knee padding.
- Adjustable removable suspenders.

Shell: Nylon

Insulation: Thermal Loft

441502 - XS, S, M, L, XL, 2XL, 3XL

Black (90)

\$199.99



MICCODE



Orange (12)



Blue (80)



Green (70)



Back



Orange (12)



Green (70)



Black (90)



MICCODE JACKET WITH INSULATION

3 in 1 versatile jacket to mix and match colors to create your own style.



- 100% seams and logos sealed.
- Water-resistant zippers.
- Underarm and back venting.
- Shaped sleeves.
- Removable zippered powder skirt and zippered hood.

Shell: Nylon

Insulation: Primaloft Cresta

440609 - XS, S, M, L, XL, 2XL, 3XL
Orange (12), Green (70), Blue (80)

\$309.99



MICCODE PANTS

Lightly insulated, designed for jacket-pants mixing and matching to create personal style.



- 100% seams and logos sealed.
- Removable suspender system.
- Jacket to pants attachment system.
- Adjustable waist.
- Full length side zippers.
- Storm gaiters to shield snow entry.

Shell: Nylon


Insulation: Primaloft Cresta

441515 - XS, S, M, L, XL, 2XL, 3XL
Orange (12), Green (70), Black (90)

\$229.99





 MCODE GEAR IS DEVELOPED WITH FEEDBACK FROM MOUNTAIN FREERIDERS.



Back

 **LADIES' MCODE JACKET WITH INSULATION**
 Shell: Nylon
 Insulation: Primaloft Cresta
 440614 • XS, S, M, L, XL, 2XL, 3XL
 Hi-Vis Yellow (26)
 \$309.99


 **LADIES' PRINTED MCODE JACKET WITH INSULATION**
 Shell: 65% Nylon, 35% Polyester
 Insulation: Primaloft Cresta
 440649 • XS, S, M, L, XL, 2XL, 3XL
 Mixed Color (18)
 \$309.99



Orange (12)

Hi-Vis Yellow (26)

Black (90)

 **LADIES' MCODE PANTS**
 Shell: Nylon
 Insulation: Primaloft Cresta
 441518 • XS, S, M, L, XL, 2XL, 3XL
 Orange (12), Hi-Vis Yellow (26), Black (90)
 \$229.99





SYMPATEX IS THE ONLY NON-POROUS MEMBRANE AVAILABLE IN THE MOTORSPORTS WORLD, AND UNIQUE TO BRP.



HELIUM JACKET

Nothing but the best for Ladies of the Mountains. Built with the best materials for lightweight comfort and added robustness.

- Highly windproof, waterproof and breathable.
- All seams sealed.
- Stretch fabric insert for ease of movement.
- Water-resistant zipper at front opening, pockets and vents.
- Underarm venting design for better air entry without compromising comfort.
- Powder skirt.

Shell: Sympatex 3-ply Laminated Nylon
 440583 • XS, S, M, L, XL, 2XL, 3XL
 White (01)
 \$399.99



HELIUM HIGHPANTS

- Highly windproof, waterproof and breathable.
- All seams sealed.
- Stretch fabric at waist, crotch and upper knee.
- Designed with high front and back bib panels.
- 2-way full-length water-resistant side zippers with inner flap.
- Integrated removable knee pads and storm gaiter.
- 2-way front zipper.

Shell: Sympatex 3-Ply Laminated Polyester
 441493 • XS, S, M, L, XL, 2XL, 3XL
 Black (90)
 \$389.99

FOR EXTRA WARMTH, WEAR THIS VEST OVER THE HELIUM JACKET.



SKI-DOO SOFT SHELL

A versatile warm-weather jacket. Can double as great street gear or can be worn as a mid layer with our Helium jacket.

- Wind and water resistant breathable fabric.
- Water-resistant zipper at front opening.
- Underarm venting.
- Shaped sleeves.
- Adjustable hem.

Shell: 94% Polyester, 6% Spandex
 440590 • XS, S, M, L, XL, 2XL, 3XL
 Black (90)
 \$124.99



Comes with its own packable bag

SKI-DOO DOWN VEST

Versatile and lightweight comfort with extreme packability.

- Quilted down vest that can be worn over or under a shell jacket.
- Ripstop fabric for great durability.

Shell: Nylon
 Insulation: Duck down
 440594 • S, M, L, XL, 2XL, 3XL
 Black (90)
 \$129.99

YOUR GUIDE
TO FINDING
THE MOUNTAIN
RIDING GEAR
THAT MATCHES
YOUR PERSONAL
RIDING STYLE
QUICKLY AND
EFFECTIVELY.



Black (90)

White (01)



Black (90)



Green (70)

Mixed Color (18)

HELIUM 50 JACKET (MEN'S) HELIUM JACKET (LADIES')

Lightweight, ultra durable and breathable.
LIFETIME WARRANTY

HELIUM 30 JACKET (MEN'S)

Lightweight, ultra breathable.
LIFETIME WARRANTY

MCODE JACKET (MEN'S AND LADIES')

Lightweight, breathable and 3 in 1 jacket.

Colors available	Yellow (10), Black (90)	Men's: White (01), Black (90) Ladies': White (01)	Men's: Orange (12), Green (70), Blue (80) Ladies': Hi-Vis Yellow (26), Mixed Color (18)
Performance meter	◆◆◆◆◆	◆◆◆◆◇	◆◆◆◆◇◇
Shell / Membrane	Sympatex Performance 3-ply Laminated Nylon Cordura (men's) Laminated Nylon (ladies')	Sympatex Performance 2-ply Laminated Polyester	RPM MAX Nylon
Insulation	NA (Shell)	NA (Shell)	Primaloft Cresta
Lining	Comfortable softbrushed poly membrane	Mesh lining	Removable insulated lining jacket
Recco Avalanche Rescue System	Yes RECCO®	Yes RECCO®	Yes RECCO®
Durable Water Repellency & color treatment	Yes (Performance DWR by Sympatex)	Yes (Performance DWR by Sympatex)	Yes (Teflon treated colors)
Seams and logos sealed	All	All	All
Venting	Side	Underarm & back	Underarm & back
Adjustments	Waist (core), collar, wrists & hem	Waist (core), collar, wrists, hem & hood	Collar, wrists & hem
Shaped sleeves	Yes	Yes	Yes
Stretch fabric	At elbow & shoulder blades	NA	NA
Number of external pockets	3	4	3
Inner pockets	NA	Yes	Yes
YKK† zippered pockets	Yes (water-resistant)	Yes (water-resistant)	Yes (water-resistant)
YKK front zipper	Yes (water-resistant, one way)	Yes (water-resistant, one way)	Yes (2-way regular zipper)
Inner cuffs, collar or wrists	<ul style="list-style-type: none"> Integrated inner Lycra wrists with thumb Neoprene inner collar (men's), brushed tricot (ladies') 	<ul style="list-style-type: none"> Integrated inner Lycra wrists with thumb Micro-polyester at collar 	<ul style="list-style-type: none"> Integrated inner Lycra wrists with thumb Micro-polyester at collar
Powder skirt	Yes	Yes	Yes
Special features	<ul style="list-style-type: none"> Tested for ultimate high aerobic activity in deep snow 	<ul style="list-style-type: none"> Tested for ultimate high aerobic activity in deep snow Hood 	<ul style="list-style-type: none"> Removable hood Collar gusset (men's)

RELATED PRODUCTS

Pants	Helium 50 highpants (men's), Helium highpants (ladies')	Helium 30 highpants	MCode pants
Gloves	Grip gloves	Mountain gloves	Action gloves

“I TRIED IT, THE STUFF REALLY WORKED, SO I SWITCHED.”

— ROB ALFORD

You might not have ever met Rob Alford, but if you've ever watched an extreme backcountry riding video with people doing huge drops and catching big air, then you've probably seen him in action. He's been in 90 plus videos over the past 15 years, usually the most popular ones. But the real story on Alford is his riding skills in all kinds mountain terrain and situations, not just big air. Rob rides over 120 days every year in some of the most varied terrain, snow packs and temperatures mountain riders can find. He guides, instructs, rides with friends and then of course films with some of the best crews in the world.

“The day starts out at 5 °F at the trailer. Then we're 30 clicks out on Zipper Mouth Creek or Lost My Way Peak, the sun comes out and we're hitting it hard – really hard – while the temp is up to 32 °F or above. For that, you need gear that performs in all conditions. Helium and MCode do that extremely well. I stay dry and comfortable all day.”



EXTREME RIDE, EXTREME GEAR!



MOUNTAIN SNOWMOBILERS AREN'T ONLY BORN, THEY'RE MADE, TOO.

Not every mountain rider starts as a mountain rider. Take Dave Harris. He was a backcountry skier in Alaska who raced dirt bikes as a kid. Then his friends beckoned him to go cross-country riding with them. Using borrowed sleds, he was quickly hooked on "snowmachining."

So much so that when one of his friends asked him to race the Iron Dog (the 3,200 km/2,000 mile race across the Alaskan bush), he jumped at the chance. That was in 1998 and not only did Harris and his partner finish, they took 12th place.

When some other friends took him deep snow riding in the mountains south of his Anchorage home, he found his passion. Today, Harris and his small circle of riding buddies head all over Alaska to ride powder.

"We go to Turnagain, but we like to get to more remote areas, such as Placer River, Skookum Glacier and Squirrel Flats," said Harris. "Some of our rides are pretty epic, a whole day journey. We pack up at beginning of day, ride through the trees, across frozen rivers and over several

mountain tops, through chutes and couloirs to get to where we want to ride."

He's only ever owned Ski-Doo snowmobiles. "I started racing on Ski-Doo sleds and had good luck with them. We always kept them and passed them onto family members. As far as I know, they're all still out there running."

His current sled? A 2013 Ski-Doo Summit X 154. "I tried it in a demo and the changes made it so much easier to ride...ride longer, ride further without getting exhausted. I tell people that 'you just imagine it and the sled does it.'"

Harris also is a believer in Ski-Doo gear. He added a LinQ system fuel caddy and a bag, plus the Auxiliary LED light to his Summit and he rides with a Helium 30 jacket.

"I like to layer my gear and I only wear a light shell over a jersey or light mid-layer," he said. "Active riding generates a lot of body heat and insulated gear gets too hot. I wore the Helium 30 jacket all last season, and found it to be the perfect jacket for all conditions, from minus 40 to

plus 40 degrees (F). It's so lightweight and breathes great. I retired my snowboarding and heavyweight Klim jackets."

According to Harris, riding in Alaska is unique, with its varied terrain. The powder riding is epic as the mountains start at sea level and then climb to more than 8,000 feet. It's plenty steep, deep and scenic, but because it's not too high, there's not the power loss due to altitude like in other riding areas. And while the beginning of the season has only about five hours of daylight, in the Spring, Harris and his buddies can ride until 10 at night.

Harris shares his passion for Ski-Doo and mountain riding in the DooTalk.com forums, under the handle IronDog. He has posted more than 14,000 times and is a volunteer moderator.

"I don't just love riding snowmobiles, I love talking snowmobiles and sharing my experiences," said Harris. "There are a lot of great people on there and great information - just like Ski-Doo owners in general. I hope I can help people enjoy their Ski-Doo sleds to the fullest."



**WE PACK UP AT
BEGINNING OF DAY,
RIDE THROUGH THE
TREES, ACROSS FROZEN
RIVERS AND OVER
SEVERAL MOUNTAIN
TOPS, THROUGH
CHUTES AND COULOIRS
TO GET TO WHERE
WE WANT TO RIDE."**

PERFORMANCE

You don't just ride any sled... you ride a Ski-Doo snowmobile. And you want people to know it as you carve corners on the number one sled in the industry. Our Performance gear features technologies and designs inspired and proven by champions on race tracks around the globe.







Back



WARM-UP TEAM COAT

The ultimate racer's overcoat is here for all racers and fans. Stay warm at the races and show your colors.

- Insulated pre-race overcoat.
- 100% waterproof and windproof.
- Removable hood fits over Ski-Doo Snocross helmet.

440629 • One size
Black (90)

\$239.99

Shell: 95% Polyester, 5% Nylon
Insulation: Thermal Loft



X-TEAM WINTER RACE EDITION JACKET

Worn by the fastest - this is the official X-Team factory racing jacket. Show your Ski-Doo passion on the trail and at the race track.

- 100% seams and logos sealed.
- Removable insulated quilted lining.
- Adjustable collar, hem and wrists.
- Underarm and back venting.
- Front double flap.
- Shaped sleeves.
- Articulated shoulders.
- Powder skirt.

Shell: Polyester
Insulation: Primaloft Cresta

440621 • XS, S, M, MT, L, LT, XL, XLT, 2XL
Mixed Color (18)

\$369.99

Tall sizes
442410 • 2XLT, 3XL, 3XLT, 4XL
Mixed Color (18)

\$389.99



X-TEAM WINTER RACE EDITION HIGHPANTS

Fully-insulated Pro Race edition. The perfect pants for aggressive riders and cold temperatures.

- 100% seams and logos sealed.
- Fleece-lined seat.
- Thigh venting with water-resistant zippers.
- Articulated, padded, shaped knees.
- Reinforced inner leg.
- Adjustable waist.
- Reinforced crotch.
- Full-length double flap side zipper.

Shell: 95% Polyester, 5% Nylon
Insulation: Primaloft Cresta

441519 • XS, S, M, L, XL, 2XL
Mixed Color (18)

\$279.99

Tall sizes
442414 • 2XLT, 3XL, 3XLT, 4XL, 4XLT
Mixed Color (18)

\$299.99





Yellow (10)



Orange (12)

Black (90)

Black with graphics (94)



X-TEAM WINTER JACKET

X-Team style and performance to match your ride.

- 100% seams and logos sealed.
- Underarm venting.
- Adjustable collar, hem and wrist.
- Shaped sleeves.
- Articulated shoulders.
- Front double flaps.
- Powder skirt.

Shell: 100% Polyester
Insulation: Primaloft Cresta

440623 • XS, S, M, MT, L, LT, XL, XLT, 2XL
Yellow (10), Orange (12), Black (90),
Black with graphics (94)

\$309.99

Tall sizes

442411 • 2XLT, 3XL, 3XLT, 4XL
Yellow (10), Black (90)

\$339.99

442412 • 5XL

Black (90)

\$339.99



X-TEAM WINTER HIGHPANTS

The preferred factory pants of most riders.

- Critical seams sealed.
- Fully-insulated highpants.
- Articulated, padded, shaped knees.
- Adjustable waist.
- Reinforced crotch.
- Full-length double flap side zipper.

Shell: 100% Polyester
Insulation: Primaloft Cresta

441521 • XS, S, M, L, XL, 2XL
Yellow (10), Black (90)

\$259.99

Tall sizes

442413 • 2XLT, 3XL,
3XLT, 4XL, 4XLT, 5XL
Black (90)

\$269.99



Yellow (10)

Black (90)



OUR RACE CLOTHING HAS BEEN DEVELOPED WITH PROFESSIONAL RACERS FROM WARNERT RACING AND INDEPENDENT RACERS SINCE 2002.



THE HARDER YOU RIDE, THE MORE BREATHABLE THE RACE EDITION SNO-X SHELL AND PANTS GET, THANKS TO THE SYMPATEX WATERPROOF MEMBRANE.



SNO-X SHELL RACE EDITION JACKET

Co-designed with professional racers. Highly windproof, waterproof and breathable.

- Removable neck brace collar with neoprene replacement panel.
- Seams and logos sealed.
- Mesh inner lining.
- Underarm venting and water-resistant zipper at back venting.
- Water-resistant zippered pocket and front offset opening with flap.
- Articulated shoulder.

Shell: Sympatex 2-ply Laminated Polyester, Nylon Cordura
 440628 • XS, S, M, L, XL, 2XL, 3XL
 Orange (12)
 \$359.99



SNO-X SHELL RACE EDITION PANTS

Lightweight non-insulated Pro Race Edition pants. Highly windproof, waterproof and breathable.

- Hip pockets and thigh venting with water-resistant zippers.
- Articulated, shaped knees.
- Knee padding.
- Reinforced bottom inner leg and crotch.
- Mesh lining.
- Seams and logos sealed.
- Adjustable waist and removable suspenders.
- Full-length side zippers.

Shell: Sympatex 2-ply Laminated Nylon Cordura, Polyester
 441522 • XS, S, M, L, XL, 2XL, 3XL
 Orange (12)
 \$329.99





Back

SPORT SHELL

You won't find a waterproof, windproof shell that offers more style at such an affordable price than our Sport Shell.

- Water resistant front zipper closure.
- Shaped sleeves.
- Underarm venting.
- Oversized front pocket.

Shell: Nylon

440577 • XS, S, M, L, XL, 2XL, 3XL

Yellow (10)

\$159.99



Yellow (10)

Black (90)

Back



SNO-X SHELL

Lightweight performance shell for active trail rider with a racing look.

- 100% seams and logos sealed.
- Water-resistant zippered venting and front offset opening.
- Oversized front pocket.
- Underarm and back venting.
- Shaped sleeves and articulated shoulders.

Shell: Nylon

440635 • XS, S, M, L, XL, 2XL, 3XL

Yellow (10), Black (90)

\$214.99



SNO-X PANTS

Lightweight Pro Race edition with light insulation for active riders.

- 100% seams and logos sealed.
- Thigh venting.
- Articulated, shaped knees with padding and stretch fabric.
- Reinforced bottom inner leg and crotch.
- Adjustable waist and removable suspenders.
- Full-length side zippers.

Shell: Textured Nylon

Insulation: Primaloft Cresta

441504 • XS, S, M, L, XL, 2XL, 3XL

Black (90)

\$239.99



X-TEAM WINTER RACE EDITION JACKET

Worn by the fastest - this is the official X-Team factory racing jacket. Show your Ski-Doo passion on the trail and at the race track. Built with high performance materials for high performance riders in cold temperatures.

- 100% seams and logos sealed.
- Removable insulated quilted lining for extra warmth.
- Adjustable collar, hem and wrists.
- Shaped sleeves.
- Underarm and back venting.
- Front double flap.
- Articulated shoulders.
- Powder skirt.

Shell: Polyester

Insulation: Primaloft Cresta

440622 - XS, S, M, L, XL, 2XL, 3XL
Mixed Color (18)

\$359.99





X-TEAM JACKET

X-Team style and performance to match your ride.

- 100% seams and logos sealed.
- Underarm venting.
- Adjustable collar, hem and wrists.
- Shaped sleeves.
- Articulated shoulders.
- Front double flaps.
- Powder skirt.

Shell: 70% Polyester, 30% Nylon
Insulation: Primaloft Cresta

440624 • XS, S, M, L, XL,
2XL, 3XL

Yellow (10), Raspberry (39),
Aqua (76), Black (90)

\$309.99



Yellow (10)

Back



Raspberry (39)

Aqua (76)

Black (90)



X-TEAM HIGHPANTS

The woman's race pants. Cold temperature racing performance with a feminine cut.

- 100% seams and logos sealed.
- Removable bib straps.
- Micro-fleece at seat and back bib.
- Shaped leg and reinforced knees.
- Adjustable waist.
- Thigh vent with water-resistant zippers.
- Storm gaiters to shield snow entry.

Shell: 80% Polyester, 20% Nylon
Insulation: Primaloft Cresta

441525 • XS, S, M, L, XL, 2XL, 3XL

Yellow (10), Raspberry (39),
Aqua (76), Black (90)

\$229.99



Yellow (10)

Raspberry (39)

Aqua (76)

Black (90)

TOURING

You're out to enjoy all Winter has to offer. You can't do that if you're not comfortable. So our Touring gear has innovative features and smart design to keep you warm and relaxed on even the most epic rides.





2014

TOURING GEAR

TECHNOLOGY


HIGH PERFORMANCE GEAR FOR LONG RIDES AND MAXIMUM WARMTH

SYMPATEX MEMBRANE

THE ULTIMATE TECHNOLOGY FOR ULTIMATE COMFORT



100% WATERPROOF / WINDPROOF / BREATHABLE

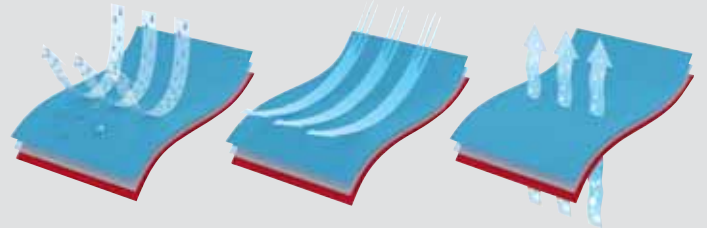


In our search for a waterproof/breathable technology for our highest performing outerwear, the advanced SympaTex membrane came out the clear solution. Unlike other technologies, it has no tiny holes to get clogged or weakened; perspiration escapes through the material itself.

It not only keeps you totally warm, dry and comfortable, but it lasts. So much so that Ski-Doo gear with SympaTex technology comes with a lifetime warranty. Go to store.ski-doo.com/warranty for complete details.

RPM TECHNOLOGY

DEVELOPED FOR SNOWMOBILERS


No matter how steep the run or cold the environment, no skier or outdoorsperson will encounter the ergonomics or wind speeds that snowmobilers do. That's why we developed our own waterproof/windproof/breathable technology specifically for snowmobiling gear: RPM.

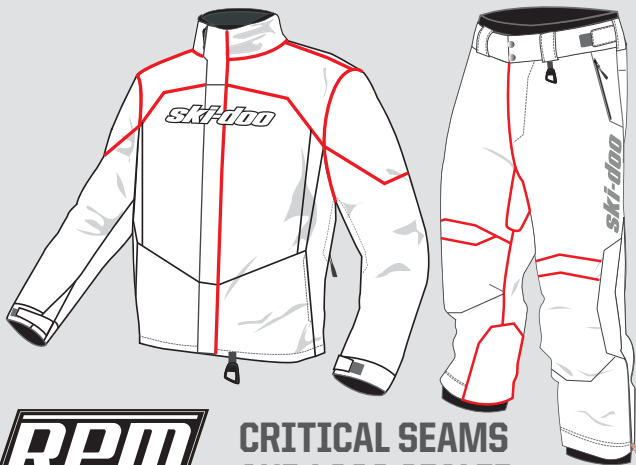

CRITICAL SEAMS AND LOGO SEALED



ALL SEAMS AND LOGO SEALED

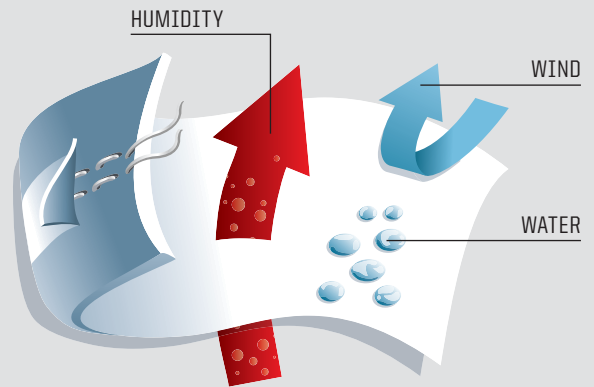


To make sure they perform for you on your sled, we test RPM fabrics under 160 PSI (11 bar) of pressure, simulating snowmobiling air speeds. Not only must it keep wind and water out, it must still allow perspiration to escape. We also seal the seams and logos. With RPM Max gear, all seams and logos are sealed. In value-oriented RPM gear, critical seams and logos are sealed.

So know that the next time you're straightlining across a lake and the wind is trying to force cold air and snow through every fabric and every seam, RPM is keeping you comfortable.

PRIMALOFT INSULATION

WHEN IT COMES TO INSULATION, WE CHOOSE THE BEST. WE CHOOSE PRIMALOFT.

PrimaLoft supplies us with the world's best synthetic insulation and we use it as the heart of most of our Touring riding gear.

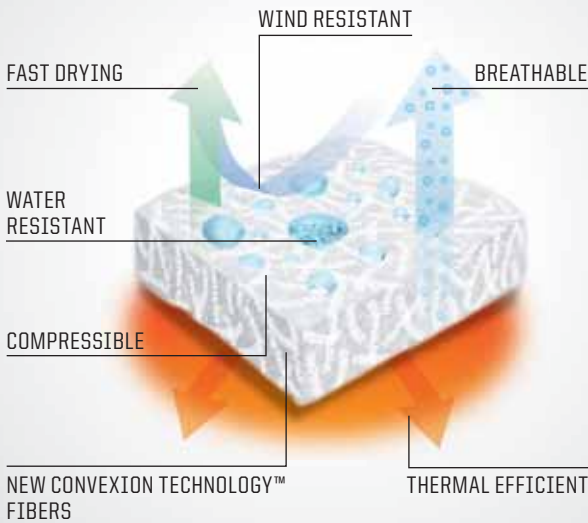

WARMER

Fine fibers form tiny air pockets that more effectively trap body heat to keep you warm.

SOFT

The fine fibers flex easily, so you have total freedom of movement.

BREATHABLE

Moisture vapor is transported through the fine fibers and away from the skin.

WATER RESISTANT

PrimaLoft insulation dries faster than goose down because its fine fibers create a tight surface tension that resists moisture penetration.

Learn more about PrimaLoft. See p. 38-39



ABSOLUTE O JACKET AND HIGHPANTS are insulated with **PrimaLoft ONE** for extreme warmth while staying soft and flexible. Our absolute warmest gear.

P. 32 and 36






GLIDE JACKET is insulated with **PrimaLoft Sport** for very good warmth and added flexibility.

P. 35



INSULATION PROPERTIES

BEST		<p>Ultimate performance, developed for the US Military for extreme Arctic conditions.</p> <ul style="list-style-type: none"> • 14% warmer, 24% warmer than competitive insulation. • Performance of down, but maintains its thermal efficiency even when wet. • Very lightweight, soft and flexible for comfort, freedom of movement. • Superior water resistance and breathability. • Excellent wind resistance.
BETTER		<p>Premium performance in warmth, water-resistance and lightweight.</p> <ul style="list-style-type: none"> • One of the warmest synthetic insulations available. • Breathable water resistant and fast-drying to keep you dry and warm. • Warmer than competitive insulations - wet or dry • Lightweight and compressible.
GOOD		<p>Good performance at a good price, especially for more active riders.</p>



ABSOLUTE TRAIL JACKET AND HIGHPANTS uses **PrimaLoft CRESTA** insulation to keep you warm at a good price.

P. 33



WATCH

SKI-DOO TOURING GEAR IN ACTION AT

STORE.SKI-DOO.COM/VIDEO





THE FIBERS IN THE PRIMALOFT ONE INSULATION USED IN ABSOLUTE O GEAR ARE MODELED AFTER ACTUAL GOOSE DOWN FIBERS.



SEAMS AND LOGOS SEALED

ACCORDION STRETCH INSERT AT LOWER BACK

ADJUSTABLE WAIST AND WRISTS

BACK AND THIGH VENTING

MAXIMUM WEATHER PROTECTION AND SNOW ENTRY SHIELDING



Sympatex



ABSOLUTE O JACKET

A no-compromise jacket worn by Nick Musters to set the Guinness World Record in arctic temperatures. For extreme temperatures and conditions.

- Center front quadruple flaps with 2 unaligned zippers that make front opening 100% waterproof and windproof.
- Removable and adjustable synthetic down collar to seal air entry.
- Removable hood.
- All seams sealed.
- Underarm venting.
- Shaped sleeves.
- Powder skirt.

Shell: Sympatex 2-ply Laminated Polyester
Insulation: Primaloft One

440584 • S, M, L, XL, 2XL, 3XL
Yellow (10), Black (90)
\$459.99



Sympatex



ABSOLUTE O HIGHPANTS

The best materials and practices are used in these no-compromise pants. Highly windproof, waterproof and breathable.

- Fully-insulated for extreme cold conditions.
- All seams sealed.
- Full-length water-resistant side zippers with double flap.
- Polar fleece-lined seat.
- Adjustable waist.
- Shaped, padded and reinforced knees.
- Reinforced crotch and seat.
- Storm gaiter.

Shell: Sympatex 2-ply Laminated Polyester
Insulation: Primaloft One

441494 • XS, S, M, L, XL, 2XL, 3XL
Black (90)
\$399.99



CRESTA

HERO ONE-PIECE SUIT

Keep snow intrusion out while staying comfortable and dry. Enhances rider mobility in all conditions.

Shell: Nylon
Insulation: Primaloft Cresta

440559 • S, M, L, XL, 2XL, 3XL
Black (90)
\$509.99



WITH SYMPATEX, RATHER THAN MOISTURE PASSING THROUGH TINY HOLES, IT PASSES THROUGH FIBERS.



ABSOLUTE TRAIL JACKET

Highly windproof, waterproof and breathable Sympatex 2-ply poly membrane laminate that protects against the elements.

- All seams sealed.
- Underarm and back venting.
- Front double flap.
- Shaped sleeves.
- Borderless V-neck shaped collar with micro-fleece polyester.
- Powder skirt.

Shell: 98% Polyester, 2% Nylon
Insulation: Primaloft Cresta

440625 • XS, S, M, L, XL, 2XL, 3XL
Orange (12), Black (90)

\$399.99



CRESTA

PRIMALOFT

SYMPATEX

WATERPROOF BREATHABLE

WINDPROOF

INSULATION

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER



ABSOLUTE TRAIL HIGHPANTS

Pants that bring the best in performance and breathability and that protect against the elements.

- All seams sealed.
- Fully-insulated garment.
- Thigh venting.
- Full length side zippers.
- Shaped and padded knees.
- Adjustable waist and removable suspenders.
- Hip pockets.
- Storm gaiter.

Shell: 80% Polyester, 20% Nylon
Insulation: Primaloft Cresta

441523 • XS, S, M, L, XL, 2XL, 3XL
Orange (12), Black (90)

\$379.99



CRESTA

PRIMALOFT

SYMPATEX

WATERPROOF BREATHABLE

WINDPROOF

INSULATION

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER

UNDERARM VENTING

SHAPED SLEEVES

V-NECK COLLAR

POWDER SKIRT

STORM GAITER







WITH ONLY 2 AA BATTERIES YOU CAN BECOME MORE VISIBLE AT NIGHT WITH THE LED LIGHTS IN THE BACK OF THE JACKET.



GLIDE LED JACKET

Increase your visibility in low light conditions with the same great features as the Glide Jacket.

- Removable insulated lining.
- Seams and logos sealed.
- Underarm and back venting.
- Adjustable waist and wrists.
- Shaped sleeves, stretch fabric at elbow.

- Handwarmer pockets.
- Double front flap.
- Includes removable battery pack.
- Requires 2 AA batteries, not included.

Shell: Nylon

Insulation: Primaloft Sport

440605 • XS, S, M, L, XL, 2XL, 3XL

Black (90)

\$399.99



GLIDE LED JACKET IS THE FIRST SNOWMOBILE GARMENT TO OFFER LED LIGHTING FOR VISIBILITY.



White (01)

Yellow (10)

Red (30)

Black (90)



GLIDE JACKET

Classic lines and refined cut deliver great fit and style. Versatile, with a removable liner to keep you warm in all conditions.

- 100% seams and logos sealed.
- Underarm and back venting.
- Adjustable waist and wrists.
- Shaped sleeves, stretch fabric at elbow.

Shell: Nylon

Insulation: Primaloft Sport

440553 • XS, S, M, L, XL, 2XL, 3XL

White (01), Yellow (10), Red (30), Black (90)

\$339.99



VOYAGER HIGHPANTS

One of our warmest pants with all the features for comfort and convenience.

- 100% seams and logos sealed.
- Composite insulation for extra warmth where needed most.
- 1000 denier nylon-lined seat, knees and inner legs.
- Polar fleece-lined seat and knees.
- Shaped knees and padded knees.
- 2-way full-length side zippers.
- Adjustable waist.

Shell: Nylon

Insulation: Primaloft Sport

441479 • XS, S, M, MT, L, LT, XL, XLT, 2XL
Black (90)

\$269.99

Tall sizes

442395 • 2XLT, 3XL, 3XLT, 4XL, 4XLT, 5XL
Black (90)

\$289.99





THE FIBERS IN THE PRIMALOFT ONE INSULATION USED IN ABSOLUTE 0 GEAR ARE MODELED AFTER ACTUAL GOOSE DOWN FIBERS.



SYMPATEX IS A PIONEER WITH 100% RECYCLABLE MEMBRANE - TOP PERFORMANCE FOR MAN AND NATURE.



ABSOLUTE 0 JACKET

Built with the best materials on the market including Sympatex and Primaloft. For extreme temperatures and conditions.

- Center front quadruple flaps with 2 unaligned zippers that make front opening 100% waterproof and windproof.
- Removable and adjustable synthetic down collar to seal air entry.
- Removable hood.
- All seams sealed.
- Shaped sleeves.
- Powder skirt.
- Underarm venting.

Shell: Sympatex 2-ply Laminated Polyester
Insulation: Primaloft One

440585 - XS, S, M, L, XL, 2XL, 3XL
Ice (38)

\$459.99



Sympatex

PRIMALOFT



ABSOLUTE 0 HIGHPANTS

The best materials and practices are used in these no-compromise pants. Highly windproof, waterproof and breathable. Protects against the elements for maximum performance in all conditions and fit for women.

- Fully-insulated garments for extreme cold conditions.
- All seams sealed.
- Full-length water-resistant side zippers with double flap.
- Polar fleece-lined seat.
- Adjustable waist.
- Shaped, padded and reinforced knees.
- Reinforced crotch and seat.
- Storm gaiter.

Shell: Sympatex 2-ply Laminated Polyester
Insulation: Primaloft One

441495 - XS, S, M, L, XL, 2XL, 3XL
Black (90)

\$399.99



Yellow (10)



Raspberry (39)



Aqua (76)



MUSKOKA JACKET

A classy, high style look for the ladies out on the trails. Refined look and cut, with colors that complement.



- 100% seams and logos sealed.
- Adjustable collar, hem and wrists.
- Handwarmer pockets.
- Powder skirt.
- Removable synthetic fur around detachable insulated hood.
- Front flap and additional inner flap.

Shell: Nylon

Insulation: Primaloft Sport

440633 - XS, S, M, L, XL, 2XL, 3XL

Yellow (10), Raspberry (39), Aqua (76)

\$279.99



Ice (38)

Black (90)



SKI-DOO PANTS

Stylish pants blending attractive lines and the warmth needed for a comfortable all-day ride.

- Critical seams sealed.
- Fully insulated.
- Shaped legs.
- Storm gaiters to shield snow entry.
- Adjustable waist.
- Water-resistant hip pockets.

Shell: Nylon

Insulation: Primaloft Cresta

441442 - XS, S, M, L, XL, 2XL, 3XL

Ice (38), Black (90)

\$214.99



VOYAGER HIGHPANTS

One of our warmest pants with all the features for comfort and convenience, plus a fit for a woman.

- 100% seams and logos sealed.
- Composite insulation for extra warmth where needed most.
- Polar fleece-lined seat and knees.
- Stretch fleece bib.
- Drop seat design.
- Shaped knees.
- 2-way full-length side zippers.
- Adjustable waist.

Shell: Nylon

Insulation: Primaloft Sport

441478 - XS, S, M, MT, L, LT, XL, XLT, 2XL, 3XL

Black (90)

\$269.99





INSULATE YOURSELF FROM THE COLD, NOT THE FUN

WARMER

WARMER | DRIER | SOFTER



PrimaLoft® insulations are the world's best synthetic insulations, because they're the warmest, driest, softest and most compressible. And unlike down, they maintain their insulating properties when wet. That's why BRP chooses PrimaLoft® insulations to deliver warmth and comfort in Ski-Doo riding gear.

PRIMALOFT.



PrimaLoft® is a registered trademark of PrimaLoft® Inc. © 2013 PrimaLoft® Inc.

PRIMALOFT INSULATION

In the 1980s, the US Army asked PrimaLoft® former parent company, Albany International Corp., to develop a water resistant synthetic alternative to goose down for use in military sleeping bags and clothing systems in variable environments. They wanted something comparable to down in weight, compressibility and warmth, but to retain heat when wet, and with less bulk.

Ounce-for-ounce, down's thermal efficiency is unmatched. But it stops working when it gets wet.

Albany International Corp delivered with the first PrimaLoft® synthetic insulation PLL, now called PrimaLoft® One. It is just as warm as down, but loses almost none of its effectiveness when wet. Dry, PrimaLoft® One has a Clo rating (the standard measure of

insulation effectiveness) of 0.92 Clo/oz./yard². When wet, the Clo only drops to 0.90 Clo/oz./yd². It's that kind of performance that led the US Military to outfit more than 1 million servicemen and women with PrimaLoft® One cold weather gear. It's also why BRP chooses PrimaLoft® insulations for its Ski-Doo snowmobile riding gear. The key to PrimaLoft® insulation's performance is its thin fibers. Other insulations' fibers are 1.0 denier or more in size. PrimaLoft® One fibers are predominantly one denier or less.

Because the fibers are so thin, there are more air pockets to trap body heat. And their very tight matrix creates a high surface tension that water drops don't generally penetrate. What if water is forced into the insulation? A waterproof coating on the microscopic fibers prevents it from being absorbed.

BRP uses Cresta by PrimaLoft® for many Ski-Doo garments, including the popular X-Team jacket; PrimaLoft® Sport in the performance-touring Glide jacket; and PrimaLoft® One in the Absolute 0 line.

"We heard from people who didn't enjoy riding as much as they could have because it was very cold where they lived or they ended up cold no matter what gear they were wearing," said Milaine Perron, BRP Project Leader Riding Gear Ski-Doo. "So we set out to create an entire riding gear collection that would be the industry standard for warmth - jacket, bibs, and mitts. We decided on PrimaLoft® One as the core technology and the Absolute 0 line was born."

One other benefit of PrimaLoft® One insulated snowmobile gear is its down-like compressibility. The Absolute 0 jacket and highpants are insulated with PrimaLoft® ONE for extreme warmth while staying soft and flexible. Our absolute warmest gear. And when you



"SO WE SET OUT TO CREATE AN ENTIRE RIDING GEAR COLLECTION THAT WOULD BE THE INDUSTRY STANDARD FOR WARMTH - JACKET, BIBS, AND MITTS. WE DECIDED ON PRIMALOFT ONE AS THE CORE TECHNOLOGY AND THE ABSOLUTE 0 LINE WAS BORN."

— MILAINE PERRON
PROJECT LEADER RIDING GEAR SKI-DOO

remove the inner liner, it compresses to fit easily into a corner of a bag or backpack.

Finally, PrimaLoft® insulations are easier on the environment without sacrificing performance. It is the first branded insulation to achieve bluesign® system partner status, meaning it has eliminated the use of potentially harmful substances without compromising the product's functionality, quality or design.

"PrimaLoft® is the best synthetic insulation in the marketplace, delivering a warmer, drier experience for the snowmobilers," said Mike Joyce, CEO of

PrimaLoft®, Inc. "Our performance insulations and technical fabrics add more comfort and range for your outdoor activities, and its warm when wet performance in Ski-Doo riding gear is proof of that. We promise to keep innovating to keep snowmobilers warm, dry and comfortable."

But that's what you would expect from a company that has developed insulation products for NASA, the Space Shuttle, B-2 Stealth Bomber and X-33 Technology Demonstrator Vehicle.



RECREATIONAL

You want to get out snowmobiling. Period. We've got the gear for you. Rugged, all-purpose Recreational gear with real features at a real value, so you can have a great time.







Yellow (10)

Orange (12)



Black (90)

RPM | HOLESHOT PRINTED JACKET

- Critical seams sealed.
- Shaped sleeves.
- Adjustable collar, hem and wrists.
- Powder skirt.
- Handwarmer pockets.

Shell: 81% Nylon, 19% Polyester
 Insulation: Thermal Loft
 440647 • S, M, L, XL, 2XL
 Black (90)

\$189.99

Tall sizes
 442418 • 2XLT, 3XL
 Black (90)
\$209.99



HOLESHOT JACKET

For decades, our Holeshot Jacket has bundled more affordable value than any other jacket on the market.

- Critical seams sealed.
- Shaped sleeves.
- Adjustable collar, hem and wrists.
- Powder skirt.
- Handwarmer pockets.

Shell: Nylon
 Insulation: Thermal Loft

440618 • XS, S, M, MT, L, LT, XL, XLT, 2XL
 Yellow (10), Orange (12)

\$189.99

Tall sizes
 442409 • 2XLT, 3XL
 Yellow (10), Orange (12)
\$209.99



RPM | CLASSIC HIGHPANTS

A traditional look with great features for comfort in all conditions.

- Critical seams sealed.
- Articulated knees.
- Storm gaiters.
- 2-way full-length side zippers.
- Length adjustment at bottom.

Shell: Nylon
 Insulation: Thermal Loft
 441476 • XS, S, M, L, XL, 2XL, 3XL
 Black (90)
\$139.99

RPM | TRAIL HIGHPANTS

Classic look, for all-around winter warmth.

- Critical seams sealed.
- Waterproof nylon at seat and knees.
- Articulated knees.
- Storm gaiters.
- 2-way full-length side zippers.

Shell: Nylon
 Insulation: Reg. sizes: Thermal Loft
 Tall sizes: Primaloft Sport
 441481 • XS, S, M, MT, L, LT, XL, XLT, 2XL
 Black (90)
\$179.99

Tall sizes
 442396 • 2XLT, 3XL, 3XLT, 4XL, 4XLT, 5XL
 Black (90)
\$199.99





TRACK & TRAIL JACKET



A perfect all around jacket that is packed with technical features at an affordable price.

- Critical seams and logos sealed.
- Shaped sleeves.
- Handwarmer pockets.
- Adjustable collar, hem and wrists.

Shell: Polyester
 Insulation: Thermal Loft
 440619 - XS, S, M, MT, L, LT, XL, XLT, 2XL, 3XL
 Yellow (10), Orange (12), Black (90)
 \$199.99



Yellow (10)



Black (90)



Orange (12)



Back



RPM TECHNOLOGY WAS DEVELOPED BY BRP TO PROVIDE EXCELLENT WATERPROOFNESS AND BREATHABILITY TO VALUE-PRICED GEAR.





Yellow (10)

Raspberry (39)

White (01)

Back



TRACK & TRAIL JACKET

A perfect all around jacket that is packed with technical features at an affordable price.



- Critical seams and logos sealed.
- Shaped sleeves.
- Handwarmer pockets.
- Adjustable collar, hem and wrists.

440620 • XS, S, M, L, XL, 2XL, 3XL
 White (01), Yellow (10), Raspberry (39)
\$199.99

Shell: Polyester
 Insulation: Thermal Loft



TRAIL HIGHPANTS

Classic look for anytime winter wear warmth.

- Critical seams sealed.
- Waterproof nylon at seat and knees.
- Articulated knees.
- Storm gaiters.
- 2-way full-length side zippers.

Shell: Nylon
 Insulation: Thermal Loft
 441480 • XS, S, M, L, XL, 2XL, 3XL
 Black (90)
\$179.99



CLASSIC HIGHPANTS

A traditional look with great features for comfort in all conditions.

- Critical seams sealed.
- Articulated knees.
- Storm gaiters.
- 2-way full-length side zippers.
- Length adjustment at bottom.

Shell: Nylon
 Insulation: Thermal Loft
 441477 • XS, S, M, L, XL, 2XL, 3XL
 Black (90)
\$139.99



COOL IS
THE NEW HOT



LADIES'

**TRACK
& TRAIL**
COMBO
JACKET & HIGHPANTS
ONLY \$295.99



MEN'S

PRICED SO YOU CAN AFFORD
THE LATEST SMARTPHONE
AND AN UNLIMITED
TEXTING PLAN



© 2013 Bombardier Recreational Products Inc (BRP). All rights reserved. ®, ™ and the BRP logo are trademarks of BRP or its affiliates. Offer valid in U.S.A and Canada only from August 1, 2013 until November 30, 2013, while supplies last. The rebate applies only on Track & Trail jackets and highpants. Cannot be combined with any other offer. BRP reserves the right to modify or discontinue this promotion at any time without prior notice.

PAUL GELINAS
of Trois-Rivières,
Québec, has been
riding snowmobiles
for 54 years now.



"THE **ABSOLUTE 0 GEAR** IS REALLY WARM, BREATHABLE AND FLEXIBLE. COMBINED WITH **BV&S HELMET**, I AM ALWAYS COMFORTABLE AND IN CONTROL."



↑ GELINAS' FAVORITES INCLUDE REGIONS ALONG THE ST. LAWRENCE RIVER WHERE THE SNOW COVER IS DEEP, LIKE **ABITIBI, HAUTE MAURICE, LAC ST. JEAN, AND GASPÉSIE.**

9,300 MILES PER YEAR TEACHES YOU A LOT ABOUT GEAR

M eet snowmobiler extraordinaire Paul Gelinas. Gelinas, of Trois-Rivières, Québec, has been riding snowmobiles for 54 years now. Yes, if you do the math, you see that he has been enjoying this sport since the first commercially produced Ski-Doo snowmobiles debuted. With that kind of experience to draw on, you can bet he's seen and done just about everything there is to do on a snowmobile.

Gelinas is a proud Ski-Doo owner whose loyalty runs about 57 machines deep... or maybe we should say 77 machines deep. That's because Gelinas has owned 57 Ski-Doo snowmobiles and another 20 Moto-Ski sleds (Moto-Ski was acquired by Bombardier in 1971). He has owned pretty much every model on the spectrum, from racing machines to utility sleds.

What sled does he enjoy the most? Right now it's the GSX models supplying all the performance you could ask for with the comfort and adjustability to enjoy his longest rides. His all time most memorable sled? It's his GSX SE with E-TEC engine and Air Controlled Suspension (ACS) for its lightweight handling, fuel efficiency, smoke- and odor- free operation and comfortable ride.

Many snowmobilers cover a lot of ground in a season, but few spend the time Gelinas does on the seat of a sled. He averages about 15,000 km (9,300 miles) each


season over about forty days - that's an average of 375 km (232 miles) per day!

Logging that many kilometers helps a person get to know some great riding spots, and Gelinas' favorites include regions along the St. Lawrence River where the snow cover is deep. Areas like Abitibi, Haute Maurice, Lac St. Jean, and Gaspésie provide epic rides on great trails that are well groomed, scenery that is spectacular and restaurants and hotels that offer fantastic hospitality.

When asked about his riding gear and any tips on staying warm throughout those long trail rides, Gelinas offers some sage advice: "Get good gear. Stuff you can depend on in snow, rain, cold, wind and even warm days" said Gelinas. A final word of wisdom was "Wear thin polyester socks under normal Ski-Doo socks, I've never had cold feet using this combination."

Experience has taught Gelinas how to make every ride a great one. He wears Ski-Doo Absolute 0 products on really cold, long rides and changes to the Glide Jacket with LED lights when the temperature and wind is less severe, or visibility is a concern. Combined with the BVeS helmet, Gelinas is always comfortable and in control. "The Absolute 0 gear is really warm, breathable and flexible - like nothing else - it feels different than every other type of jacket and very lightweight on top of it."

"GET GOOD GEAR. STUFF YOU CAN DEPEND ON IN SNOW, RAIN, COLD, WIND AND EVEN WARM DAYS"

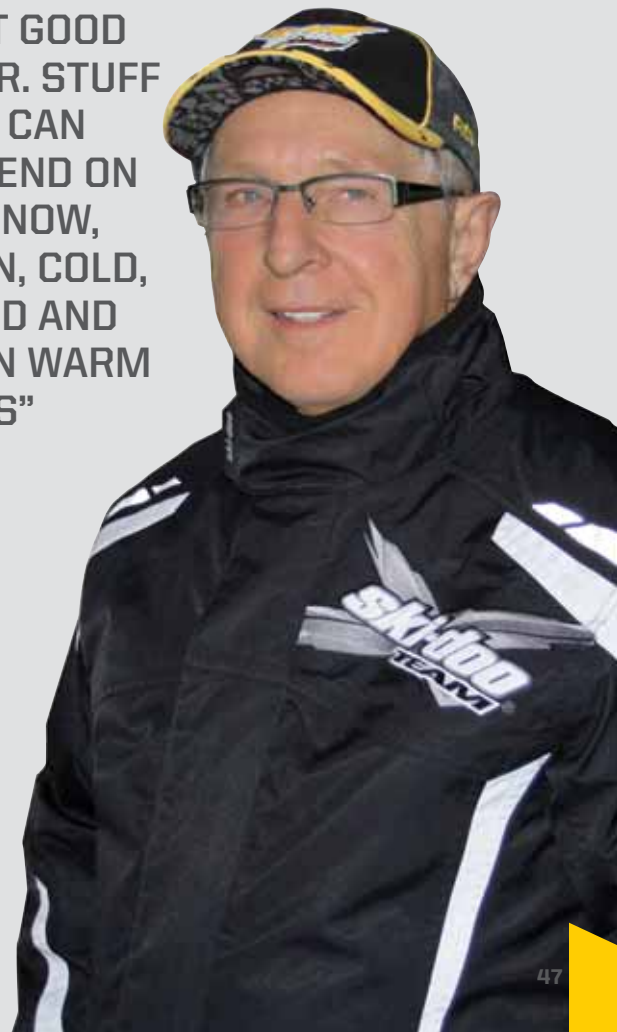

HELMETS

We innovate while others imitate. High quality helmets with one-of-a-kind features and designs specifically for snowmobilers. Because they're not just for safety, but an expression of your signature style.





BV₂S

Simply the **highest tech** helmet available, delivering **picture window-like visibility** with its **fog-resistant mask system** and **crystal clear visor**. Ideal for extra cold conditions.



Push-button front release for easy-access



180° PERIPHERAL VISION



Integrated rear light for added visibility

Sunshield activates with the flip of a lever (not shown)

Dual-lens visor is injection-molded for distortion-free vision



Removable, washable interior



BV₂S fog-resistant mask system adapts to all faces with soft rubber seal

ACCEPT NO IMITATIONS.

BV2S

The most advanced snowmobile helmet available, designed for great vision and warmth in the worst of cold conditions. Unique BV2S fog-resistant mask system adapts to all faces.

- Backlight batteries included
- D.O.T. approved

- Dual lens visor featuring enhanced 180° peripheral vision
- Front push-button release

- Quick-release chin strap
- Shell: Polycarbonate Composite



White (01)



Yellow (10)



Matte Black (93)



BV2S HELMET

447404 • S, M, L, XL, 2XL, 3XL
White (01), Yellow (10), Black (90), Matte Black (93)
\$449.99



Black (90)



BV2S ELECTRIC SE HELMET

All the great features of the standard BV2S helmet - with the addition of an electric shield.

447468 • S, M, L, XL, 2XL, 3XL
Black (90)
\$529.99



LIMITED TIME OFFER



GET A **FREE SKI-DOO HELMET CASE** when you buy a BV2S or Modular 2 helmet.

RETAIL VALUE OF \$29.99

- Easy-carry ergonomic handle.
- Soft synthetic protective liner.
- Helmet accessory outer pocket (helmet not included).

*Limited time offer.

*Offer valid from August 1 to December 31, 2013.

*At participating dealers only and while supplies last.



ELECTRIC VISOR

447517 • One size
Clear (00)
\$169.99



REPLACEMENT VISOR

447508 • One size
Clear (00)
\$109.99



SUNSHIELD VISOR

445720 • One size
Orange (12)
\$59.99



BREATHING MASK

444695 • One size
Yellow (10)
\$49.99



ABSORBENT MASK

• Pack of 5.
447282 • One size
White (01)
\$7.99



HELMET LIGHTING SYSTEM KIT

• Batteries are not included.
447465 • One size
Black (90)
\$39.99

MODULAR 2

This helmet increases peripheral vision and reduces glare to enhance your riding experience.

- Completely redesigned second generation of original Modular helmet that reinvented snowmobiling.
 - Clear Vision Technology with optically-correct dual lens visor.
 - Adjustable sunshield lowers or raises at the touch of a button.
 - Front push-button release integrated into jaw section facilitates manipulation when wearing gloves.
 - BREATH EVAC fog-resistant mask system and increased vent diameter control breathing airflow.
 - Quick-release chin strap.
 - Spacious design allows room for eyeglasses.
 - Graphics applied with ink transfer process for high quality finish and increased scratch resistance.
 - D.O.T. approved.
- Shell: Polycarbonate Composite



MODULAR 2 X-TEAM FURIOUS HELMET

447781 • S, M, L, XL, 2XL, 3XL • Black (90)
\$359.99



MODULAR 2 VISORS ARE INJECTION MOLDED, GIVING THEM A CONSISTENCY AND CLARITY OTHER HELMETS LACK BECAUSE THEIR VISOR STARTS FLAT AND ARE BENT UNDER HEAT.



LADIES' MODULAR 2 CHROMA HELMET

447782 • S, M, L, XL, 2XL, 3XL • White (01)
\$359.99



White (01)

Grey (09)

Yellow (10)

Black (90)

MODULAR 2 HELMET

447521 • S, M, L, XL, 2XL, 3XL • White (01), Grey (09), Yellow (10), Black (90)
\$329.99



MODULAR 2 ELECTRIC SE HELMET

447652 • S, M, L, XL, 2XL, 3XL • Black (90)
\$399.99



HELMET ELECTRIC VISOR

• Cord included.
• Sun visor not included.
447897 • One size
Clear (00)
\$149.99



REPLACEMENT VISOR

• Double lens.
• Sun visor not included.
447896 • One size
Clear (00)
\$99.99



ANTI-SCRATCH SUN VISOR

447744 • One size
Yellow (10),
Smoke (57)
\$59.99



ABSORBENT MASK

• Pack of 10.
445953 • One size
White (01)
\$7.99

XP-R2

Our best-of-the-best Multi Directional Carbon Fiber lightweight helmet with carbon and aramid fiber reinforced shell.

- Weighs only: +/- 1275 g for size Large.
- Tool-less multi-adjustable wide angle front peak with anti-reflecting sticker.
- Flexible face trim design with a large nose protector area.
- Anti-slip goggle strap design.
- EPS foam upper insert between inner fabric and outer shell.
- Integrated rear fin for added stability and aerodynamic performance.
- Double D racing buckle and pocket for sweat absorbent front pad.
- Removable and washable cheek and head pads.
- Morpho System Plus - Ergonomic 3D cheek pads available in your size.
- Liner features sanitized treatment with Coolmax moisture-wicking action.
- F.A.S. (Full Air System) with 10 ventilation points and double rear extractor.
- Aluminum screws, protective coated parts.
- Ergonomic helmet bag.
- D.O.T. and ECE 22.05 certified.

Shell: Carbon Fiber Composite



XP-R2 CARBON LIGHT CHILI HELMET

447779 • XS, S, M, L, XL • Black with graphics (94)
\$449.99

Back



XP-R2 CARBON LIGHT ORIGINAL HELMET

447826 • XS, S, M, L, XL • Hi-Vis Yellow (26)
\$449.99

Back



Orange (12)



Bronze (92)

XP-R2 CARBON LIGHT BLAZE HELMET

447657 • XS, S, M, L, XL • Orange (12), Bronze (92)
\$499.99



XP-R2 CARBON LIGHT HELMET

447656 • XS, S, M, L, XL • Black (90)
\$479.99



MORPHO KIT

- For a perfect custom fit.
 - Extra cheek pads, for a better fit inside the helmet.
 - Left and right pads included.
- 447754 • XS, S, M, L, XL, 2XL, 3XL • Clear (00)
\$14.99



SWEAT ABSORBENT PAD

- Pack of 10.
- 447435 • One size • White (01)
\$7.99

XP-2

The lightweight performance of Kevlar and Fiberglass, with a lightweight price.

- Hi tech, lightweight and tough.
- Fully-adjustable, aero-tuned visor reduces lift at high speeds.
- Ventilation system.
- Moisture-wicking and breathable chin strap, liner and cheek pads.
- Easily removable and washable liner and cheek pads.
- Provides maximum visibility, fits all goggles.
- Strap grip keeps goggle strap in place.
- Snell M2010 and D.O.T. certified.
- Available with clear-coated bold waterslide graphics.

Shell: Lightweight Fiberglass / Kevlar



Back



XP-2 PIKES HELMET

447783 • XS, S, M, L, XL, 2XL • Black with graphics (94)
\$254.99



White (01)



Yellow (10)



Orange (12)



XP-2 X-TEAM DIMENSION HELMET

447780 • XS, S, M, L, XL, 2XL • White (01), Yellow (10), Orange (12)
\$254.99



XC-3

Style and features that deliver with value that impresses.

- Lightweight and tough.
 - Fully-adjustable, aero-tuned visor that reduces lift at high speeds.
 - Ventilation system.
 - Moisture-wicking and breathable chin strap, liner and cheek pads.
 - Removable, washable liner and cheek pads.
 - Provides maximum visibility, fits all goggles.
 - Strap grip keeps goggle strap in place.
 - Snell M2010 and D.O.T. certified.
- Shell: Polycarbonate Composite



Yellow (10)



Black (90)



Back

XC-3 INTRUDER HELMET

447666 • XS, S, M, L, XL, 2XL • Yellow (10), Black (90)
\$179.99



SKI-DOO XC-3 HELMET

447664 • XS, S, M, L, XL, 2XL • Black (90)
\$159.99

SELECTING THE RIGHT HELMET



RIDING STYLE

- M** MOUNTAIN
- P** PERFORMANCE
- T** TOURING
- R** RECREATIONAL

WEIGHT

- LIGHT
- VERY LIGHT
- ULTRA LIGHT



BV₂S

High mileage riders.
Ultimate comfort from warmer to very cold temperatures.
Peripheral and optical vision.
Great wind protection.

MODULAR 2

Hardcore snowmobilers.
Excellent comfort from warmer to cold temperatures.
Great surround visibility.
Versatility.

COLORS AVAILABLE	BV ₂ S: White (01), Yellow (10), Black (90), Matte Black (93) BV ₂ S Electric SE Helmet: Black (90)	Modular 2 Helmet: White (01), Grey (09), Yellow (10), Black (90) Modular 2 X-Team Furious Helmet: Black (90) Ladies' Modular 2 Chroma Helmet: White (01) Modular 2 Electric SE Helmet: Black (90)
PERFORMANCE METER / WEIGHT	◆◆◆◆◆ /	◆◆◆◆◇ /
SHELL	Polycarbonate Composite	Polycarbonate Composite
ELECTRIC MODEL AVAILABLE	Yes	Yes
FOG MANAGEMENT SYSTEM	Yes (Mask system)	Yes (Mask system)
SUNSHIELD	Yes (integrated)	Yes (integrated)
VENT SYSTEM	N/A	Front and rear vents
CHARACTERISTICS (VISION)	<ul style="list-style-type: none"> • Clear Vision Technology • Anti-Fog treatment • Optical polycarbonate • Dual lens visor • Enhanced 180° peripheral vision 	<ul style="list-style-type: none"> • Clear Vision Technology • Anti-Fog treatment • Optical polycarbonate • Dual lens visor • 180° peripheral vision
PEAK	N/A (Full-face helmet)	N/A (Full-face helmet)
PADS	<ul style="list-style-type: none"> • Ergonomic 3D cheek pads • Removable and washable cheek and head pads 	<ul style="list-style-type: none"> • Ergonomic 3D cheek pads • Removable and washable cheek and head pads
INTERIOR / LINING	Washable interior liner	Washable interior liner
FEATURES FOR GOGGLES	N/A (Full-face helmet)	N/A (Full-face helmet)
CHIN STRAP	Quick release	Quick release
SNELL / D.O.T. ECE 22.05 APPROVED	D.O.T. approved	D.O.T. approved
SPECIAL FEATURES AND ADDED VALUE	<ul style="list-style-type: none"> • Integrated backlight • Backlight front push-button • Detachable breathing mask • Mask adapts to all wearer's morphology • Optional accessory side mount light 	<ul style="list-style-type: none"> • Combination of full and open face helmet advantages • Front push-button release



M

P



XP-R2

Extreme riders.
Lightest helmet available.
Breathability and visibility.
Ultimate performance.

XP-R2 Carbon Light Chili Helmet: Black with graphics (94)
XP-R2 Carbon Light Original Helmet: Hi-Vis Yellow (26)
XP-R2 Carbon Light Blaze Helmet: Orange (12), Bronze (92)
XP-R2 Carbon Light Helmet: Black (90)



Carbon Fiber Composite / Aramid reinforced

No

Yes (Breath deflector system)

N/A (Open-face helmet)

- Full Air System
- 10 ventilation points
- Double rear extractor

Maximum visibility

- Tool-less multi-adjustable wide angle front peak
- Anti-reflecting sticker below peak to deflect glare

- Ergonomic 3D cheek pads
- Removable and washable cheek and head pads
- Pocket for sweat absorbent front pad

Sanitized treated interior with Coolmax¹ moisture wicking action

Anti-slip goggles strap grip

Double D racing buckle

D.O.T. approved

- Ultra-lightweight: ±1300 g (2.8 lb) (for size large)
- Large flexible nose protector
- Aluminum screws, protective coated parts
- EPS foam upper insert between inner fabric and outer shell for optimized user protection
- Rear fin for added stability

M

P



XP-2

High energy riders.
Breathability and visibility.
Lightweight.
Excellent comfort.

XP-2 X-Team Dimension Helmet: White (01), Yellow (10), Orange (12)
XP-2 Pikes Helmet: Black with graphics (94)



Lightweight Fiberglass / Kevlar

No

Yes (Breath deflector system)

N/A (Open-face helmet)

Ventilation system

Maximum visibility

Fully-adjustable, aero-tuned visor

Washable, removable moisture-wicking and breathable cheek pads

Moisture-wicking and breathable liner

- Strap grip keeps goggles strap in place
- Fits all goggles

Moisture-wicking and breathable chin strap

D.O.T. and Snell M2010

- Lightweight: ±1550 g (3.4 lb) (for size large)
- Best \$/performance value

M

P



XC-3

High energy riders.
Breathability and visibility.
Comfort.
Good value.

XC-3 Intruder Helmet: Yellow (10), Black (90)
Ski-Doo XC-3 Helmet: Black (90)



Polycarbonate Composite

No

Yes (Breath deflector system)

N/A (Open-face helmet)

Ventilation system

Maximum visibility

Fully-adjustable, aero-tuned visor

Washable, removable moisture-wicking and breathable cheek pads

Washable, removable moisture-wicking liner

- Strap grip keeps goggles strap in place
- Fits all goggles

Moisture-wicking and breathable chin strap

D.O.T. and Snell M2010

- Weight: ±1700 g (3.7 lb) (for size large)
- Best \$/quality value



M

HELIUM GOGGLES

- Anti-fog, scratch-resistant mirrored dual maxflow lens for good visibility in varied light conditions.
- Large, flexible, assembled urethane frame with integrated vents for strength, flexibility and comfort-flow ventilation.
- Oversized, hypoallergenic triple density face foam for comfort and increased shock and sweat absorption.
- Premium silicone backed strap system for long lasting slip-free performance.
- Dual hinged strap system for optimum fit on any facial geometry.
- Included clip-on nose guard shield.



HELIUM ELECTRIC WIRELESS GOGGLES (110V)

- Same great features as the Helium goggles with patent-pending wireless electric dual lens system for maximum anti-fog performance and rider mobility.
- 110V battery charger.

447827 • One size
Silver (08)
\$229.99



ELECTRIC GOGGLES

The Helium and Adrenaline Electric goggles are the only heated goggles in snowmobiling.

Electric dual lens system for maximum ANTI-FOG performance and rider mobility.



White (01)

HELIUM GOGGLES

447552 • One size
White (01), Silver (08)
\$89.99



White (01)

HELIUM QUICK-STRAP GOGGLES

- Same great features as the Helium goggles with fast, clever quick-strap system that delivers easy attachment convenience and fits any open face helmet.

447670 • One size
White (01), Silver (08)
\$99.99



Silver (08)



Silver (08)



P

ADRENALINE & HOLESHOT GOGGLES

- Large molded urethane frame for strength, flexibility and style.
- Oversized, hypoallergenic dual density face foam for comfort and shock absorption.
- Anti-fog, scratch-resistant amber dual maxflow lens for long lasting clear vision.
- Premium silicone backed strap system for long lasting slip-free performance.
- Hinged strap system for better fit on any facial geometry.
- Includes clip-on nose guard shield.



ADRENALINE ELECTRIC WIRED GOGGLES

• Same great features as the Adrenaline quick-strap goggles with patent-pending electric dual lens system for ultimate sub-zero anti-fog and optical performance.

447867 • One size
Yellow (10)
\$159.99



Red (30)



Black (90)



Yellow (10)

HOLESHOT GOGGLES

447549 • One size
Yellow (10), Red (30), Black (90)
\$59.99



Yellow (10)

ADRENALINE QUICK-STRAP GOGGLES

• Fast, clever quick-strap system delivers easy attachment convenience and fits any open face helmet.

447551 • One size
Yellow (10), Red (30), Black (90)
\$69.99



Black (90)



Red (30)



White (01)

Yellow (10)

Black (90)

R TRAIL GOGGLES

- Large molded urethane frame for flexibility and style.
- Hypoallergenic face foam for long lasting comfort and performance.
- Anti-fog, scratch-resistant amber dual lens.
- Silicone backed strap system for slip-free performance.

447554 • One size
White (01), Yellow (10), Black (90)
\$39.99

M P R



HELIUM DUAL LENS TEAR-OFFS KIT

- Rip away the dirt from your field of vision instantly.
- Includes one tear-off ready replacement dual lens.
- Also includes 5 clear tear-off tabs ready to be used.

447698 • One size
Amber (95)
\$29.99



HELIUM REPLACEMENT TEAR-OFFS

- Ready to be used clear tear-off tabs.
- Pack of 10.

447699 • One size
Clear (00)
\$9.99

GOGGLE MASK

(Not illustrated)
• Clips onto goggles for added protection from the elements.

HELIUM 447553 • One size Black (90) \$24.99	HOLESHOT / ADRENALINE 447550 • One size Black (90) \$19.99
---	--

GOGGLE REPLACEMENT LENSES

(Not illustrated)
• Anti-fog, scratch-resistant dual maxflow lens for long lasting clear vision in the toughest conditions.
• Spare ventilation tabs included (except for Trail goggles).

HELIUM 447583 • One size Clear (00), Pink (36), Amber (95) \$19.99	HELIUM MIRRORRED 447558 • One size Mirror Silver (22) \$24.99	HOLESHOT / ADRENALINE 447557 • One size Clear (00), Amber (95) \$19.99	TRAIL 447586 • One size Amber (95) \$19.99
--	---	--	--

N**P****T****R****SUBLIMATED BALACLAVA**

- Stretch, antibacterial fabric with brushed inner surface.
- Moisture-wicking anti-odor treatment.
- Flatlocked seams prevent skin chafing.

91% Polyester, 9% Spandex

**MEN'S**

447815 • One size
Orange (12)
\$24.99

**LADIES'**

447816 • One size
Raspberry (39)
\$24.99



BALACLAVAS & NECK GAITERS

T**MASK SYSTEM BALACLAVA**

- Perfect to use with BV:S or Modular 2.
- Keeps you warm while providing breathable and windproof performance.
- Moisture-wicking and waterproof fabric.
- Elastic adjustment at side.

60% Polyester, 30% Nylon, 10% Spandex

447630 • S/M, L/XL
Black (90)
\$29.99

**M****MOUNTAIN BALACLAVA**

- Stretch, quick-dry fabric with brushed inner surface.
- Neoprene face guard for effective moisture exchange to promote breathing in extreme cold with removable rubber part in pocket.
- Flatlocked seams prevent skin chafing.
- Good fit with open face helmets.

80% Nylon, 15% Spandex, 5% Synthetic Rubber

447631 • One size
Black (90)
\$24.99

**M****TECHNICAL BALACLAVA**

- Strategically placed mesh for breathability, micro-fleece for warmth.
- Windproof neck bib.
- Higher at back of neck for increased motion range.
- Flatlocked seams prevent skin chafing.

92% Polyester, 8% Spandex

445950 • One size
Black (90)
\$24.99

**M****MICRO-FLEECE BALACLAVA**

- Stretch, antibacterial warming fleece fabric with brushed inner surface.
- Flatlocked seams prevent skin chafing.

92% Polyester, 8% Spandex

447565 • One size
Black (90)
\$19.99

**M****BASIC BALACLAVA**

Designed for warmth, dryness and comfort.

- Flatlocked seams prevent skin chafing.

80% Nylon, 20% Spandex

447449 • One size
Black (90)
\$12.99

**M****TECHNICAL NECK GAITER**

- Keeps you warm while providing breathable, windproof and waterproof performance.
- Moisture-wicking fabric.
- Ergonomic patterning with micro-fleece at side and back panel for more stretchability.
- Elastic adjustment at back.
- Laser-cut breather holes.

89% Polyester, 8% Spandex, 3% Synthetic Rubber

447636 • One size
Black (90)
\$24.99

**M****NECK GAITER**

- Spandex binding and elastic at back for a better fit.
- Anti-pilling fleece.

100% Polyester

447634 • One size
Yellow (10), Black (90)
\$19.99



Yellow (10)



Black (90)



GRIP GLOVES

- mctEX waterproof, windproof and breathable glove insert.
- mcFIT technology for a better grip and added tactility and dexterity.
- Insulated backhand only, for warmth without compromising feel.
- Print design on backhand to minimise snow accumulation.
- Rubber finger print for improved grip.
- Shaped fingers.
- Box fingertips to avoid air infiltration.
- Neoprene wrist with adjustment.
- Padded and reinforced palm.
- Visor wiper.

Shell: Leather / Nylon / Chloroprene Rubber / Polyester
 Insulation: Primaloft One
 446234 • S, M, L, XL, 2XL, 3XL
 Black (90)
 \$74.99



mcFIT | MOUNTAIN GLOVES

- mcFIT technology for a better feel.
- Mild-weather glove with lining.
- Hipora¹ waterproof, windproof and breathable glove insert.
- Shaped fingers.
- Velcro adjustment for easy sleeve fit.

Shell: 50% Nylon, 50% Leather
 446222 • S, M, L, XL, 2XL, 3XL
 Black (90)
 \$59.99



FOR ALL GLOVES AND MITTS WITH SYMPATEX TECHNOLOGY SEE P.9



ACTION GLOVES


- For aggressive riding.
- Good for deep snow and intense riding in off trail conditions.
- Sympatex membrane.
- Stay-dry moisture management lining.
- Stretch fabric facilitates movement.
- Padded knuckles.
- Neoprene wrists for easy sleeve fit.
- Rubber palm and finger print for improved grip.

Shell: Nylon / Spandex / Neoprene
 Palm: Synthetic Nash Suede
 Insulation: Primaloft One
 446203 • S, M, L, XL, 2XL, 3XL
 Black (90)
 \$74.99



- / While sewing procedure, there is a severe danger of defecting insert
- / During turn inside out there is a possibility of punctured membrane insert
- / MAXIMUM COMFORT FIT TECHNOLOGY
- / ONE LAYER FITTING AND SUPERIOR FIRM GRIP

mcFIT PERFORMS BEST TACTILITY & DEXTERITY WITHOUT LOOSING MEMBRANE INSERT BY REMOVING TAB & SEWING

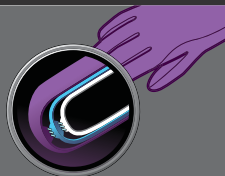

Conventional way



mcFIT way



P



Yellow (10)

Black (90)

Charcoal Grey (07)

Yellow (10)

Black (90)



X-TEAM LEATHER GLOVES

- mcFIT technology for a better grip.
 - Rugged, proven leather construction in a warm insulated glove.
 - Hipora waterproof, windproof and breathable glove insert.
 - Antibacterial, stay-dry moisture management lining.
 - Padded knuckles.
 - Shaped, articulated fingers.
 - Box fingertips to avoid air infiltration.
 - Reinforced rubberized non-slip grip.
 - Visor wiper.
 - Wide opening gauntlet with adjustable wrist.
- Shell: 96% Leather, 3% Nylon, 1% Polyester
Insulation: Primaloft One
446219 - S, M, L, XL, 2XL, 3XL
Yellow (10), Black (90)
\$109.99



X-TEAM NYLON GLOVES

- Top-line nylon glove for maximum warmth Hipora waterproof, windproof and breathable membrane.
 - mcFIT technology for a better grip.
 - Antibacterial, stay-dry moisture management lining.
 - Padded knuckles.
 - Rubber palm and fingertips for improved grip.
 - Shaped, articulated knuckles and fingers.
 - Box fingertips to avoid cold air infiltration.
 - Added backhand insulation for maximum protection.
 - Wrist adjustment strap system inspired by wakeboard gloves for optimal fitting to the wrist.
 - Visor wiper.
- Shell: Nylon
Insulation: Primaloft One
446220 - XS, S, M, L, XL, 2XL, 3XL
Charcoal Grey (07), Yellow (10), Black (90)
\$84.99



Yellow (10)

Black (90)

Yellow (10)

Red (30)

Black (90)

SNO-X GLOVES

- A favorite among riders for good reason. An excellent glove for comfort in all riding conditions.**
- Stay-dry moisture management lining.
 - Hipora membrane for more breathability.
 - Stretch texturized fabric to facilitate movement.
 - Padded knuckles.
 - Rubber palm and finger tips for improved grip.
 - Adjustable wrists.
- Shell: Spandex / Neoprene / Nylon
Palm: Synthetic Nash Suede
Insulation: Thermolite
446202 - S, M, L, XL, 2XL, 3XL
Yellow (10), Black (90)
\$64.99

X-TEAM CREW GLOVES

- A lightweight glove without insulation for warm weather riding or for hand protection during short stops.**
- Soft, durable, flexible and breathable.
 - Backhand lined with 2-way stretch texturized Spandex for maximum flexibility and fit.
 - Neoprene wrists for easy sleeve fit.
 - Durable rubber finger patches.
- Shell: Spandex
Palm: Synthetic Nash Suede
446196 - S, M, L, XL, 2XL, 3XL
Yellow (10), Red (30), Black (90)
\$44.99

FOR
MEN

**BATTERY HEATED
BACKHAND, INDEX
FINGER AND THUMB
FOR WARMTH AND
CONTROL EVEN
IN EXTREME COLD.**



T



THE HEATED GLOVES PROVIDE UP TO 4.5 HOURS OF HEAT ON A SINGLE CHARGE.



HEATED GLOVES

- Offers 3 heating positions: Low, Medium and High.
- Hipora waterproof, windproof and breathable glove insert.
- Ultra comfortable micro-fleece lining.
- Added backhand insulation for maximum protection.
- Thinner-insulated palm for increased dexterity.
- Box fingertips avoid cold air infiltration.
- Shaped fingers.
- Wide opening gauntlet with adjustable wrist.



Shell: 85% Nylon, 10% Genuine Leather, 5% PU
Insulation: Primaloft One
**446248 • XS, S, M, L, XL, 2XL, 3XL
Black (90)
\$199.99**



2 LITHIUM-ION RECHARGEABLE BATTERIES

(Not illustrated).
**488058 • One size
White (01)
\$49.99**



HYBRID MITTS

- Hipora waterproof, windproof and breathable glove insert.
- Added backhand insulation for maximum protection.
- Thinner-insulated palm for increased dexterity.
- Antibacterial, stay-dry moisture management lining.
- 3 fingers for maximum warmth.
- Extra-grip rubberized palm and thumb.
- Adjustable gauntlet.

Shell: Nylon
Insulation: Primaloft One
446239 • S, M, L, XL, 2XL
Black (90)
\$69.99



ABSOLUTE 0 MITTS

A mitt built for extreme cold.

- Nylon outer construction with leather reinforced palm.
- Inner glove design.
- Antibacterial, stay-dry moisture management lining.
- Visor wiper.

Shell: Nylon, Leather
Insulation: Down, Primaloft One
446200 • S, M, L, XL, 2XL
Black (90)
\$109.99



THUNDER GLOVES

A classic glove for very cold conditions.

- Leather palm.
- Adjustable insulation with integrated soft shell glove.
- Antibacterial, stay-dry moisture management lining.
- Visor wiper.
- Plush fabric at left thumb.
- Wide opening gauntlet with adjustable wrists.

Shell: Nylon, Leather, Polyester
Insulation: Primaloft One
446224 • XS, S, M, L, XL, 2XL, 3XL
Black (90)
\$94.99



THUNDER MITTS

A classic mitt for very cold conditions.

- Leather palm.
- Wrapped up top hand construction for added warmth and minimal air intrusion.
- Adjustable insulation with integrated soft shell glove.
- Wide opening gauntlet with adjustable wrists.

Shell: Nylon, Leather, Polyester
Insulation: Primaloft One
446223 • S, M, L, XL, 2XL
Black (90)
\$89.99



LEATHER HYBRID MITTS

Offers the heat advantage of a mitt and the tactile precision of a glove.

- Hipora waterproof, windproof and breathable glove insert.
- Antibacterial, stay-dry moisture management lining.
- Knuckle protectors.
- Strategic padding for extra protection.
- Shaped, articulated finger with stretch for more flexibility.
- Reinforced rubberized non-slip grip.
- Visor wiper.
- Adjustable wrist.

Shell: Leather, Polyurethane
Insulation: Primaloft One
446240 • S, M, L, XL, 2XL, 3XL
Black (90)
\$109.99



White (01)



Yellow (10)



Red (30)



Black (90)

HOLESHOT GLOVES

A great glove for comfort in all riding conditions.

- High wrist cuffs to keep wind out.
- Hipora waterproof, windproof and breathable glove insert.
- Added backhand insulation for maximum protection.
- Thinner-insulated palm for increased dexterity.
- Articulated, shaped fingers.
- PVC padded knuckles.
- Extra-grip rubberized palm and thumb.
- Adjustable gauntlet and wrists.

Shell: Nylon
Insulation: Thermal Loft
446206 • S, M, L, XL, 2XL, 3XL
White (01), Yellow (10), Red (30), Black (90)
\$64.99



FOR LADIES

T



ABSOLUTE 0 MITTS

A mitt built for extreme cold.

- Nylon outer construction with leather reinforced palm.
- Inner glove design.
- Antibacterial, stay-dry moisture management lining.
- Visor wiper.

Shell: Nylon, Leather
 Insulation: Down, PrimaLoft One
 446201 • S, M, L, XL, 2XL
 Black (90)
 \$109.99



Ice (38) Raspberry (39) Black (90)



White (01) Black (90)



MUSKOKA GLOVES

Extra warm nylon gloves with leather palm and fingers.

- Hipora waterproof, windproof and breathable glove insert.
- Ultra comfortable synthetic fur lining.
- Added backhand insulation for maximum protection.
- Thinner-insulated palm for increased dexterity.
- Box fingertips to avoid cold air infiltration.
- Shaped fingers.
- Silicone fingertips for better grip.
- Wide opening gauntlet with adjustable wrist.

Shell: Nylon
 Insulation: PrimaLoft One
 446238 • S, M, L, XL, 2XL
 Ice (38), Raspberry (39), Black (90)
 \$79.99



MUSKOKA MITTS

Extra warm nylon mitts with leather palm.

- Inner glove design for cozy feeling.
- Antibacterial, stay-dry moisture management lining.
- Water-resistant zippered vent at backhand for ventilation.
- 5.5" (14 cm) gauntlet with adjustable wrists.

Shell: Nylon
 Insulation: PrimaLoft One
 446190 • S, M, L, XL, 2XL
 White (01), Black (90)
 \$79.99



Ice (38) Charcoal Grey (07)

KNITTED CAP

- Micro-fleece lining.
- 85% Acrylic, 15% Wool

447486 • One size
 Charcoal Grey (07), Ice (38)
 \$24.99



White (01) Black (90)

VINTAGE RABBIT FUR HAT

- Soft leather-lined with real rabbit fur.
- Attachment on side.
- 100% Genuine Leather

447580 • One size
 White (01), Black (90)
 \$79.99



Charcoal Grey (07) Aqua (76) Black (90)



KNITTED HAT

- Micro-fleece lining.
- 100% Acrylic

447810 • One size
 Charcoal Grey (07), Aqua (76),
 Black (90)
 \$19.99




Charcoal Grey (07) Ice (38) Raspberry (39)

MUSKOKA HAT

- Micro-fleece lining.
- 50% Acrylic, 50% Wool

447488 • One size
 Charcoal Grey (07), Ice (38),
 Raspberry (39)
 \$19.99

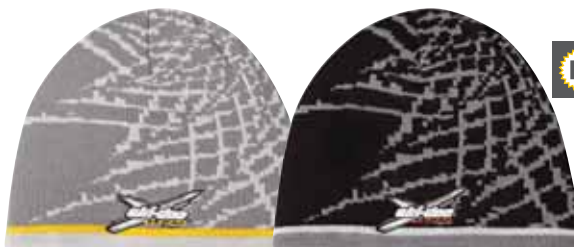

RACING BEANIE

• Micro-fleece lining.
100% Acrylic
447820 • One size
Yellow (10), Black (90)
\$19.99

Yellow (10)

Black (90)



SKI-DOO KNITTED HAT

• Micro-fleece lined.
50% Acrylic, 50% Wool
447632 • One size
Charcoal Grey (07), Black (90)
\$19.99

Charcoal Grey (07)

Black (90)



REVERSABLE BEANIE

• 2 in 1 beanie.
50% Acrylic, 50% Wool
447633 • One size
Charcoal Grey (07)
\$24.99



VINTAGE RABBIT FUR HAT

• Soft leather-lined with real rabbit fur.
• Attachment on side.
100% Genuine Leather
445897 • One size
Black (90)
\$79.99



HELIUM BOOTS

- EZ-lace system (twin lock).
- Waterproof Sympatex membrane.
- Removable liner and insole.
- Thinsulate insulation.
- Ankle protection rubber mold.
- Abrasion-resistant rubber toe cap.
- Racing/Mountain flex feature.
- Comfort-rated to -75 °F (-59 °C).



SKI-DOO HELIUM BOOTS

444166 - 7, 8, 9, 10, 11, 12, 13
Charcoal Grey (07)
\$199.99



HELIUM BOOTS

444167 -
7, 8, 9, 10, 11, 12, 13
Grey (09)
\$199.99



FOR INNOVATION
ON SYMPATEX
SEE P. 9



HOLESHOT BOOTS

- Ultra grip outsole design.
- Removable liner and insole.
- Thinsulate insulation.
- Rubber protection on side.
- Lacing system with eyelets.
- Riding flex feature.
- Comfort rated to -60 °F (-51 °C).

444165 -
5, 6, 7, 8, 9, 10, 11, 12, 13
Grey (09)
\$154.99



SKI-DOO REBEL BOOTS

- Designed for all-purpose trail riding.
- Waterproof membrane.
- Synthetic leather upper.
- Thinsulate insulation.
- Removable insole.
- Waterproof rubber bottom.
- Ultra grip outsole design.
- Comfort-rated to -49 °F (-45 °C).

444160 - 7, 8, 9, 10, 11, 12, 13
Black (90)
\$154.99



LADIES' SKI-DOO REBEL BOOTS

- Feminine styling and warmth for an all-around winter recreational boot.
- Waterproof membrane.
- Synthetic leather upper.
- Thinsulate insulation.
- Removable insole.
- Ultra grip outsole design.
- Comfort-rated to -49 °F (-45 °C).

444168 - 6, 7, 8, 9, 10
Charcoal Grey (07)
\$154.99





SKI-DOO CARRIER BACKPACK BY OGIO

- Padded interior laptop compartment fits most 17" laptops.
- iFom[®] integrated panels keep your electronics and other valuables protected.
- Padded iPad[®] / tablet / e-reader sleeve.
- Large main compartment.
- Comfortable padded back panel.
- Adjustable ergonomic shoulder straps.
- Zippered fleece lined top valuables pocket.
- Dual side beverage / accessory holders.
- 19" H x 13" W x 7.5" D (48 cm x 83 cm x 19 cm)

100% Polyester
447836 - One size
Black (90)
\$79.99



SKI-DOO CARRIER 9800 GEAR BAG BY OGIO

Premium carry bag for all your gear.

- Structural Load Equalization Deck (SLED) wheeled chassis system.
- Wide mouth lid opening for easy access to all compartments and specialty pockets.
- iFom integrated foam panel construction throughout entire bag for added protection.
- Adjustable main compartment dividers.
- Multiple zippered mesh organization pockets.
- Front accessory pocket and secure hold compression straps.
- Oversized heavy duty treaded wheels.
- Telescoping pull handle.
- 16" H x 17" W x 36" D (40 cm x 43 cm x 91 cm)

75% Polyester, 25% Plastic
447837 - One size
Black (90)
\$279.99



SKI-DOO CARRIER HELMET BAG BY OGIO

- Oversized helmet bag fits all helmet brands and sizes with fins and without.
- iFom integrated foam panels and fleece interior provide the ultimate in protection.
- Protective zipper closure prevents scratches from zippers.
- Easy access oversized external pocket for goggles, lenses and tear-offs.
- Exterior zippered accessory pocket.
- Durable reinforced bottom.
- 11" H x 13" W x 19" D (28 cm x 33 cm x 48 cm)

100% Polyester
447707 - One size
Black (90)
\$49.99



SKI-DOO CARRIER DUFFLE BAG BY OGIO

- High-tensile strength, durable, lightweight construction.
- Ventilated shoe compartment (holds two pairs).
- Zippered front accessory pocket.
- Large main compartment with additional end storage pocket.
- Padded, ventilated and adjustable shoulder strap.
- Molded carry handle.
- Durable abrasion-resistant base.
- High visibility liner.
- 11" H x 9.75" W x 25" D (28 cm x 25 cm x 64 cm)

100% Polyester
447838 - One size
Black (90)
\$64.99



SKI-DOO CARRIER 8800 GEAR BAG BY OGIO

- Heavy duty chassis with oversized treaded wheels.
- Wide mouth U-Shaped opening for easy access to all gear.
- Large main ventilated compartment and multi-use dual end pockets.
- Secondary end pocket with accessory organization sleeves.
- iFom integrated foam panel construction throughout for added gear protection.
- Telescoping pull handle and padded adjustable shoulder strap.
- Easy grab end handles for transport.
- 15" H x 18" W x 32" D (38 cm x 46 cm x 81 cm)

90% Polyester, 10% Plastic
447851 - One size
Black (90)
\$179.99



SKI-DOO ALTITUDE BACKPACK

- 2-point shoulder strap adjustment with torso adjustment.
- Ergonomic waist strap.
- Dual exit points.
- Removable tool pouch.
- Side attach accessory holder (e.g. snow shovel and probe).
- 1 expandable storage compartment, 1 main compartment and 1 easy-access pocket.
- Circulation back channels.

100% Polyester
447339 - One size
Black (90)
\$89.99




SKI-DOO HELMET CASE

- Easy-carry ergonomic handle.
- Helmet accessory outer pocket (helmet not included).

100% Polyester
447640 - One size
Black (90)
\$29.99



Activation handle

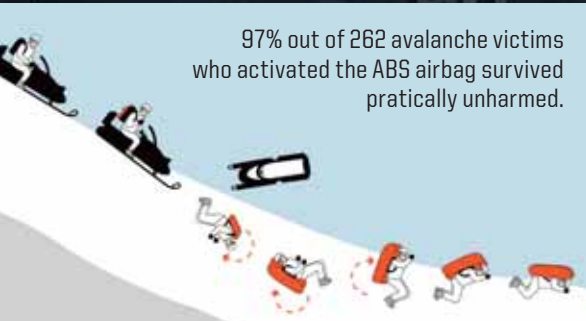

97% out of 262 avalanche victims who activated the ABS airbag survived practically unharmed.

ABS: THE ORIGINAL AVALANCHE AIRBAG SYSTEM, INTRODUCED IN 1985.

The Avalanche Airbag is an intelligent system used to prevent complete burial in an avalanche and provide the best chance to survive the accident as unharmed as possible.

The rescue concept: with one pull on the activation handle on the backpack, the two airbags will inflate in mere seconds to a total volume of 170 liters. This additional volume will likely prevent the burial of the carrier.

Two airbags, located on both sides, provide enhanced safety and superior buoyancy effect as well as unobstructed view and full freedom of movement. Please note that the cartridge as well as the activation handle can be re-filled by ABS. The bag itself can be used many times.



With the Vario-Line, ABS provides the most flexible avalanche backpacks of all time.

- Zip-on pack specially designed for snowmobiling applications that require perfect freedom of movement.
- Made of strong and tough nylon material.
- Easy-to-open main compartment with XL ³/₄ zip.
- Quick access outside holders for shovel blade and shovel shaft.
- Inside probe holder.
- Multiple storage compartments for safe storage of wallet, keys and mobile phone.
- Emergency assistance sheet with international emergency numbers on the inside.
- Reflective material at back.

1 Get the ABS Avalanche Airbag System Base Unit and Activation Unit

2 Choose between 5 Liters and 15 Liters SB Backpacks, ABS or Ski-Doo branded



ABS AVALANCHE AIRBAG SYSTEM BASE UNIT
447590 • S/M, M/L • Black (90)
\$994.99

ABS AIRBAG ACTIVATION UNIT
• Includes activation steel cartridge and release handle.
447593 • One size
\$149.99



ABS VARIO SUMMIT SB BACKPACK
100% Nylon
5 Liters • 447690 • One size • Red (30)
\$128.99
15 Liters • 447643 • One size • Blue (80)
\$168.99

SKI-DOO VARIO SUMMIT SB BACKPACK BY ABS
100% Nylon
5 Liters • 447691 • One size • Red (30)
\$128.99
15 Liters • 447669 • One size • Blue (80)
\$168.99



AVALANCHE SAFETY ESSENTIALS FOR MOUNTAIN RIDERS

BY MIKE DUFFY,
AVALANCHE1 INSTRUCTOR

Mountain snowmobiling is exhilarating, with the beautiful views and riding experiences you can't get anywhere else. But often that riding takes place in avalanche areas. If you are riding in these areas you need to be prepared to stay safe. Snowmobile avalanche fatalities are dropping because riders are being both properly trained and equipped. The most important thing to have when riding in avalanche country is awareness and knowledge, especially:

- Contributing factors to avalanches
- Signs of instability
- Recognizing avalanche terrain and terrain traps
- Identifying trigger points
- Escape routes / group dynamics
- How to rescue effectively
- Stability analysis
- Knowledge of the area: slide history, avalanche report, recent snowfall, wind loading, weak layers

I recommend that mountain riders attend an avalanche awareness seminar (like the ones BRP has been offering at Ski-Doo dealers) and then more comprehensive training courses available from organizations like mine or the Canadian Avalanche Centre.

It is also very important to have the right gear. It might not only save your own life, but your riding buddy's. Choose carefully. Here is my list of essential gear items and some tips on how to choose the best stuff.

ABS AIRBAG SYSTEM/ BACKPACK

An airbag pack, when deployed, provides the best chance for surviving an avalanche and are responsible for hundreds of saves. Keep your pack on at all times and keep your avalanche essentials in the pack. That way if you get separated from the sled or the sled gets buried and you do not, you will always have the gear with you to perform a rescue or spend the night out. Get a pack that fits you, doesn't interfere with arm movement and does not bounce around while riding. The ABS packs sold at BRP dealers are specifically designed for riding snowmobiles and have built-in spots for your other safety equipment, like shovels and probes. Packs are used in conjunction with beacons and avalanche training.

AVALANCHE BEACON

This is the only way you can efficiently find someone who is completely buried. Choose one that is digital 3 antenna,

457khz frequency, a proven design and that is easy to use. Carry spare batteries. Most importantly, practice with it often. Have a friend hide another beacon in your yard. Then try to find it with your beacon. Too many riders just wear a beacon - that's not enough! Have the skills to perform an effective rescue.

SHOVEL

Choose one with a large metal blade, an extendable handle, and a solid design.

AVALANCHE PROBE

This is the only way to find someone without a beacon (in case a beacon fails) or to locate the snowmobile. Choose one that's eight feet, six inches (260cm) or longer with large diameter aluminum tubing or carbon fiber.

Remember to purchase good products, practice often and make sure your riding buddies know how to use their equipment. The life they save might be yours.

Mike Duffy, of Avalanche1, provides snowmobile-specific avalanche classes throughout the US. He has been conducting avalanche awareness classes at Ski-Doo dealerships for two seasons. Avalanche1.com

"IT MIGHT NOT ONLY SAVE YOUR LIFE, IT MIGHT SAVE YOU BUDDY'S TOO."



TECHNICAL WEAR

Everything good starts with a solid foundation and your snowmobile riding gear is no exception. Ski-Doo technical wear is critical for you to stay warm, stay dry and have fun.




2014 TECHNICAL WEAR

TECHNOLOGY

LAYERING SYSTEM SOLUTION

The key to staying warm - whether you're working up a sweat in deep powder or cruising trails - is layering. By selecting the right base, mid and outer layer, you'll have the best rides ever, no matter what the conditions.

HOW DOES IT WORK

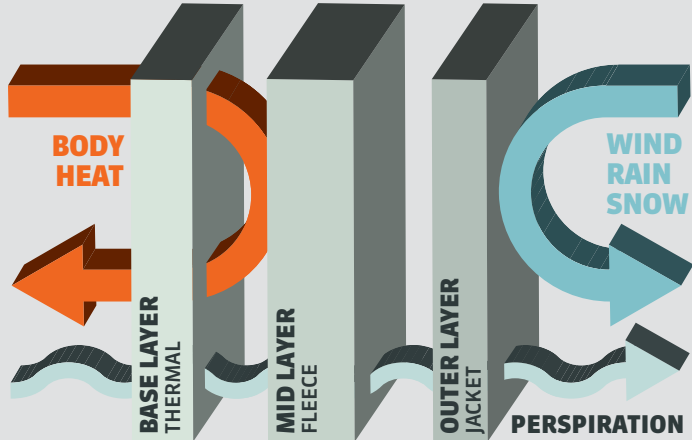

BRP TECHNICAL WEAR IS MADE WITH INNOVATIVE AND PROVEN FABRICS AND FIBERS



X-STATIC

- X-static fibers are made with a layer of 99.9% pure silver permanently bonded to the fiber.
 - X-static material eliminates 99.9% of bacteria and neutralizes ammonia proteins, eliminating odors.
 - X-static maintains its properties because it's not a coating; the silver is permanently bonded to the fibers.
- See our Active Base Layers p. 77 and 80**



MERINO WOOL

When worn against the skin, Merino wool is excellent at regulating body temperature, keeping you warm without overheating you. Not too hot. Not too cold. Just right. Plus, it draws cooling sweat away from skin. Like cotton, it absorbs water, but unlike cotton, it retains warmth when wet.

See our Sock collection p. 78 and 80



COCONUT FIBER

This natural fiber is integrated with polyester to speed up the evaporation of moisture/sweat. It increases breathability by 40% and is naturally odor resistant. It's eco-friendly, too.

See Ultralight Base layer p. 77 and 80



ULTRA LIGHT BASE LAYER

32% Coconut Fiber

Ski-Doo riding gear is divided into 4 segments based on your riding style, so it's easy to choose the gear that fits you best. To help you find the right technical wear you must:

STEP 1

IDENTIFY YOUR RIDING STYLE

Based on your riding style, these are the features you should be looking for.

M MOUNTAIN

In active powder riding, you need gear that is **highly breathable** and **wicks perspiration away from your skin**.



P PERFORMANCE

If you are carving corners, pushing you and your sled to the limits, you need **superior breathability** **perspiration management**.



T TOURING

As driver or passenger, you **need to keep warm** on even the longest cruises, with **more thermal gear and mid-layers**.



R RECREATIONAL

At the intersection of comfort, value and style, Ultralight Base Layer top and bottom will provide **ventilation, ease of movement and additional warmth**.



STEP 2

SELECT THE LAYER CORRESPONDING TO YOUR RIDING STYLE

M ACTIVE P BASE LAYER

Ventilated panels in key areas dry faster.



T THERMAL BASE LAYER

Slight brushing on the interior traps heat and provides softness and warmth.



R ULTRALIGHT BASE LAYER

Filter moisture out while trapping warmth in.



SOCKS

Keep your feet dry and warm with added support in the right spots.

M Active/ Mountain Socks

P Active/ Race Socks

T Thermal Socks



FOR MEN



TECHNICAL FLEECE TOP

Waterproof, windproof and breathable full zip top, ideal as a second layer.

- Fleece interior for ultimate comfort.
- Zippered handwarmer pockets.
- One sleeve with welded zippered pocket.

100% Polyester

453619 • S, M, L, XL, 2XL

Black (90)

\$119.99

TECHNICAL FLEECE PANTS

Waterproof, windproof and breathable pants.

- Fleece interior for ultimate comfort.
- Adjustable waistband.
- Zippered front and back pockets.

100% Polyester

453621 • S, M, L, XL, 2XL

Black (90)

\$119.99

RACING TECHNICAL ZIP NECK

Ideal top to wear as first or second layer.

- Sublimated half-zip mockneck.
- Ultra-comfortable and stretch fabric with brushed inner surface.
- Moisture-wicking anti-odor treatment.

91% Polyester, 9% Spandex

453637 • S, M, L, XL, 2XL, 3XL

Black (90)

\$59.99



White (01)

Charcoal Grey (07)

Black (90)

TECHNICAL MOCKNECK

Built especially for first-layer warmth.

- Dry-light stretch fabric with brushed inner surface.
- Moisture-wicking anti-odor treatment.

100% Polyester

453612 • S, M, L, XL, 2XL

White (01), Charcoal Grey (07), Black (90)

\$44.99

M

ACTIVE BASE LAYER


- Thoroughly X-Static[†] enhanced through to the fiber to thermodynamically regulate your temperature by reflecting body heat back to the skin in cold weather.
 - Permanently treated for long-lasting antibacterial performance undiminished even after 250+ washes.
 - Silver woven into fiber immediately binds with odor-causing agents such as ammonia and denatured proteins to instantly reduce odor.
 - Extra paneled in specific areas for better ventilation and accelerated drying.
 - Compressed for added comfort.
- 92% Polyester, 6% Spandex, 2% X-Static



Top
453554 • S, M, L, XL, 2XL, 3XL
Black (90)
\$59.99



Bottom
453555 • S, M, L, XL, 2XL, 3XL
Black (90)
\$54.99

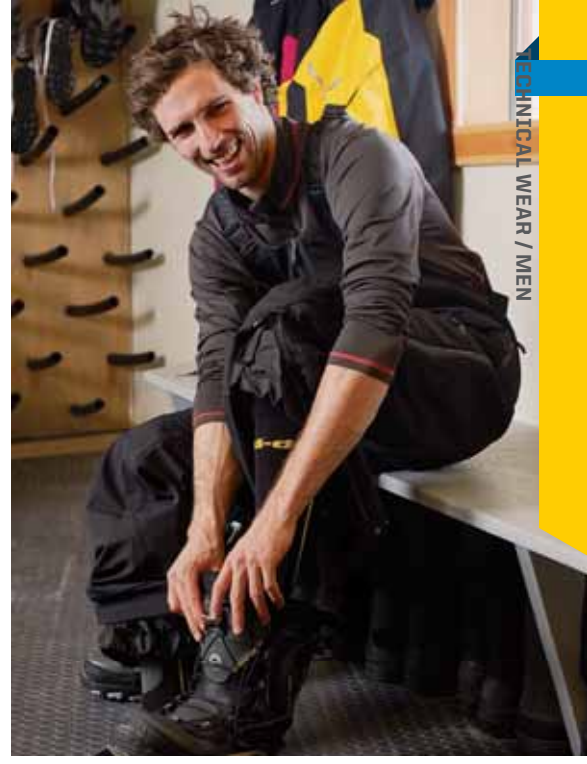

COTTON DOES NOT BREATHE EFFECTIVELY, TRAPPING MOISTURE AGAINST YOUR SKIN AND CAUSING YOU TO CHILL. USE ONE OF TODAY'S HIGH PERFORMANCE BASE LAYERS AND YOU'LL BE DRY AND WARM.

T

THERMAL BASE LAYER

- Made of high-filament polyester enhanced by slight brushing to provide softness and warmth.
 - Spandexed for ease of movement.
- 95% Polyester, 5% Spandex



Charcoal Grey (07)
Top
453569 • S, M, L, XL, 2XL, 3XL
Charcoal Grey (07), Yellow (10), Red (30)
\$64.99



Yellow (10)



Red (30)



Bottom
453553 • S, M, L, XL, 2XL, 3XL
Charcoal Grey (07)
\$49.99

R

ULTRALIGHT BASE LAYER

- Coconut fibered to actively promote evaporative cooling and odor absorption, and to filter moisture out while trapping warmth in.
 - Mesh paneled in specific areas for better ventilation and accelerated drying.
 - Spandexed for ease of movement.
- 68% Polyester, 32% Coconut Fiber



Top
453544 • S, M, L, XL, 2XL, 3XL
Charcoal Grey (07)
\$44.99



Bottom
453545 • S, M, L, XL, 2XL, 3XL
Charcoal Grey (07)
\$34.99

T

THERMAL PANTS

- Suitable as first-layer wear.
 - Made of high-filament polyester enhanced by slight brushing to provide softness and warmth.
 - Spandexed for ease of movement.
- 95% Polyester, 5% Spandex
453592 • XS, S, M, L, XL, 2XL
Charcoal Grey (07)
\$59.99





Yellow (10)

Red (30)



M

ULTRALIGHT SOCKS

- Warm and comfortable moisture-wicking for dry feet at all times.
- Extreme resistance to cold and active management of perspiration moisture.
- Dri-release[®] wool combines latest-generation ease of care of synthetic fabric and look of natural fiber.
- Elastic ankle and arch support for pro feel.
- Ventilated mesh panel keeps feet aerated for dry, warm comfort.

42% Polyester, 34% Polyamide Nylon, 16% Polypropylene, 6% Merino Wool, 2% Elastane

444136 • S/M, L/XL
Black (90)

\$9.99

P

T

R

M

ACTIVE / MOUNTAIN SOCKS

- Made with world's fastest moisture evaporating fabric: ADVANSA ThermoCool[®].
- Feet stay dry and insulated from cold, and temperature regulation feature keeps body comfortable.
- Antibacterial silver filament manages odor.
- Stay-up comfort top keeps socks up.
- Elastic ankle and arch support for pro feel.
- Reinforced toe and heel, plus added protection above the boot line thanks to over-the-calf length.
- Special padding for pressure reduction and buffered protection.

73% Polyester Thermocool, 24% Polyamide Nylon, 2% Elastane, 1% Silver

444137 • S/M, L/XL
Red (30)

\$29.99

P

ACTIVE / PERFORMANCE SOCKS

- Moisture-wicking for dry feet at all times.
- Engineer-knitted with Isolfil[®] yarn designed to keep skin dry, with built-in polypropylene fibers that trap warm air and slow the dispersion of body heat.
- Stay-up comfort top keeps socks up.
- Elastic ankle and arch support for pro feel.
- Reinforced toe and heel, plus added protection above the boot line thanks to over-the-calf length.
- Special padding for pressure reduction and buffered protection.

45% Polyamide Nylon, 35% Merino Wool, 18% Polypropylene, 2% Elastane

444138 • S/M, L/XL
Yellow (10), Red (30)

\$24.99

T

R

THERMAL SOCKS

- Socks for extreme cold.
- Same thickness as competing thermal socks, but lighter, warmer and better moisture-wicking performance.
- Thermolite[®] hollow-core fibers deliver new generation of warmth-comfort fusion.
- Stay-up comfort top keeps socks up.
- Elastic ankle and arch support for pro feel.
- Fully cushioned shin segment.

50% Polyester Thermolite, 32% Polyamide Nylon, 13% Merino Wool, 3% Acrylic, 2% Elastane

444140 • S/M, L/XL
Black (90)

\$19.99



FOR LADIES



TECHNICAL FLEECE TOP

- Semi-fitted waterproof, windproof and breathable full zip top.
- Fleece interior for ultimate comfort.
- Zippered handwarmer pockets.
- One sleeve with welded zippered pocket.

100% Polyester
453620 • S, M, L, XL, 2XL
Ice (38), Black (90)
\$119.99



Ice (38)

Black (90)

TECHNICAL FLEECE PANTS

- Waterproof, windproof and breathable.
- Fleece interior for ultimate comfort.
- Adjustable waistband.
- Zippered front and back pockets.

67% Polar Fleece, 30% Polyester Mesh, 3% Membrane
453622 • S, M, L, XL, 2XL
Ice (38), Black (90)
\$119.99



Ice (38)

Black (90)



White (01)

Black (90)

MYSTIQUE TECHNICAL ZIP NECK

- Wear as first or second layer.
- Sublimated half-zip mockneck.
- Ultra-comfortable and stretch fabric with brushed inner surface.
- Moisture-wicking anti-odor treatment.

91% Polyester, 9% Spandex
453638 • XS, S, M, L, XL, 2XL
Black (90)
\$59.99

TECHNICAL MOCKNECK

- Built for first-layer warmth.
- Dry-light stretch fabric with brushed inner surface.
- Moisture-wicking anti-odor treatment.

100% Polyester
453613 • S, M, L, XL, 2XL
White (01), Black (90)
\$44.99

M

ACTIVE BASE LAYER

- Thoroughly X-Static¹ enhanced through to the fiber to thermodynamically regulate your temperature by reflecting body heat back to the skin in cold weather.
- Permanently treated for long-lasting antibacterial performance undiminished even after 250+ washes.
- Silver woven into fiber immediately binds with odor-causing agents such as ammonia and denatured proteins to instantly reduce odor.
- Extra paneled in specific areas for better ventilation and accelerated drying.
- Compressed for added comfort.

92% Polyester, 6% Spandex, 2% X-Static



Top
453548 • XS, S, M, L, XL, 2XL
Black (90)
\$59.99



Bottom
453549 • XS, S, M, L, XL, 2XL
Black (90)
\$54.99



P

ACTIVE / PERFORMANCE SOCKS

- Moisture-wicking for dry feet at all times.
- Engineered with Isolfil yarn designed to keep skin dry, with built-in polypropylene fibers that trap warm air and slow the dispersion of body heat.
- Stay-up comfort top keeps socks up.
- Elastic ankle and arch support for pro feel.
- Reinforced toe and heel, plus added protection above the boot line thanks to over-the-calf length.
- Special padding for pressure reduction and buffered protection.

45% Polyamide Nylon, 35% Merino Wool, 18% Polypropylene, 2% Elastane

444153 • S/M, L/XL
Black (90)
\$24.99

T

THERMAL BASE LAYER

- Made of high-filament polyester enhanced by slight brushing to provide softness and warmth.
- Spandexed for ease of movement.

95% Polyester, 5% Spandex



White (01)

Charcoal Grey (07)



Top
453568 • XS, S, M, L, XL, 2XL
White (01), Charcoal Grey (07)
\$64.99

Bottom
453551 • XS, S, M, L, XL, 2XL
Charcoal Grey (07)
\$49.99

R

ULTRALIGHT BASE LAYER

- Coconut fibered to actively promote evaporative cooling and odor absorption, and to filter moisture out while trapping warmth in.
- Mesh paneled in specific areas for better ventilation and accelerated drying.
- Spandexed for ease of movement.

68% Polyester, 32% Coconut Fiber



Top
453546 • XS, S, M, L, XL, 2XL
Charcoal Grey (07)
\$44.99



Bottom
453547 • XS, S, M, L, XL, 2XL
Charcoal Grey (07)
\$34.99

T

THERMAL SOCKS

- Socks for extreme cold.
- Same thickness as competing thermal socks, but lighter, warmer and better moisture-wicking performance.
- Thermolite hollow-core fibers deliver new generation of warmth-comfort fusion.
- Stay-up comfort top keeps socks up.
- Elastic ankle and arch support for pro feel.
- Fully cushioned shin segment.

50% Polyester Thermolite, 32% Polyamide Nylon, 13% Merino Wool, 3% Acrylic, 2% Elastane

444150 • S/M, L/XL
Black (90)
\$19.99

R





OUTER LAYER GUIDE



YOU HAVE OPTIONS

Choosing an outer layer depends on the temperatures you are riding in, how actively you ride and your own personal preference. Some people want a jacket that does it all in almost all conditions. Others prefer just a shell and then control their warmth with layering.

Whichever method you choose, we offers many options at many price levels so you can get the gear that suits your ride - and your wallet - the best.

The chart below will help you choose the jacket/pants insulation that will make you the most comfortable, most of the time with the appropriate layer. Then, as you browse the catalog, look for items that use that insulation.

		OUTSIDE TEMPERATURE	EXTREME COLD	VERY COLD	COLD
EASY	T TOURING		Primaloft One Primaloft Sport Primaloft Cresta	Primaloft One Primaloft Sport Primaloft Cresta	Primaloft One Primaloft Sport Primaloft Cresta
	R RECREATIONAL		Thermal Loft	Thermal Loft	Thermal Loft
MODERATE	T TOURING		Primaloft One Primaloft Sport Primaloft Cresta	Primaloft One Primaloft Sport	Primaloft Cresta
	P PERFORMANCE		Primaloft Cresta Thermal Loft	Primaloft Cresta Thermal Loft	Primaloft Cresta
	M MOUNTAIN		Primaloft Cresta Thermal Loft	Primaloft Cresta Thermal Loft	Primaloft Cresta
INTENSE	P PERFORMANCE		Primaloft Cresta Thermal Loft	Primaloft Cresta Thermal Loft	Thermal Loft
	M MOUNTAIN		Primaloft Cresta Thermal Loft	Primaloft Cresta Thermal Loft	Thermal Loft

■ ULTRA LIGHT BASE LAYER
 ■ THERMAL BASE LAYER
 ■ ACTIVE BASE LAYER
 ■ NO MID LAYER NEEDED

INSULATION PROPERTIES



- Absorbs 3 times less water, is 14% warmer when dry and is 24% warmer when wet than the competitive insulation.
- Wind resistant and breathable

- Superior water resistance
- Compresses like down
- Dries faster than down
- You'll stay warm even when wet

- Highest insulating density and water repellency without bulk
- Thermally efficient: retain body warmth without absorbing water



- Breathable
- Fast drying
- Water-resistant

- Warmer wet or dry
- Lightweight and compressible
- Thermally efficient



- Keeps you warm & comfortable throughout the day

- Offers warmth without weight and extra bulk



- Bundles extreme warmth

- Excellent quality-price value

- Machine washable for hassle-free maintenance



SHELL + LAYER GEAR

Very active riders and those who ride in changing conditions often prefer a waterproof/windproof/breathable shell, and then use layers to dial in the right warmth. This style offers a lot of flexibility.

M MOUNTAIN



HELIUM SERIES

Shell with ultra-high performance Sympatex membrane.

T TOURING



ABSOLUTE O SERIES

Shell with Sympatex membrane, Primaloft ONE insulation. Jacket includes additional zip-out Primaloft ONE insulation layer.

P PERFORMANCE



RACE EDITION SNO-X SHELL JACKET AND PANTS

Shell with ultra-high performance Sympatex membrane.

T TOURING



ABSOLUTE TRAIL SERIES

Shell with Sympatex membrane, more moderate Primaloft CRESTA insulation.

KIDSWEAR

They're not just kids, but future Ski-Doo riders! Get them started off right with fun gear that uses the same materials and designs as their sledding role model - you.





Orange (12)

Raspberry (39)

Black (90)



KIDS' X-TEAM JACKET

X-Team style in a smaller-size jacket.

- Critical seams and logos sealed.
- Adjustable hem and wrist.
- Shaped sleeves.
- Removable insulated hood.

Shell: Nylon (Orange), Nylon Polyester (Raspberry and Black)
Insulation: Thermal Loft

440630 - 2, 3, 4, 5, 6
Orange (12), Raspberry (39), Black (90)

\$119.99



Mixed Color (18)

Hi-Vis Yellow (26)

Black with graphics (94)



TEEN X-TEAM JACKET

Stylish jacket for the teens. Includes all the features required for cold temperatures.

- Critical seams and logos sealed.
- Adjustable hem and wrist.
- Shaped sleeves.
- Removable insulated hood.

Shell: Nylon (Hi-Vis Yellow), Nylon Polyester (Mix color and Black with graphics)
Insulation: Thermal Loft

440631 - 7, 8, 10, 12, 14, 16
Mixed Color (18), Hi-Vis Yellow (26), Black with graphics (94)

\$134.99



Aqua (76)

Black (90)



TEEN PANTS

New innovative and improved growing-leg system for lengthening legs as child gets taller.

- Critical seams sealed.
- Adjustable waist.
- Shaped and reinforced knees.
- Reinforced seat.
- Fleece at seat for more comfort.
- Side zipper opening at bottom.
- Storm gaiters.

Shell: 80% Nylon, 20% Polyester
Insulation: Thermal Loft

441524 - 7, 8, 10, 12, 14, 16
Aqua (76), Black (90)

\$109.99



PRINTED TEEN PANTS

- Critical seams sealed.
- Adjustable waist.
- Growing-leg system.
- Shaped and reinforced knees.
- Reinforced seat.
- Fleece at seat for more comfort.
- Side zipper opening at bottom.
- Storm gaiters.

Shell: 100% Polyester
Insulation: Thermal Loft

441538 - 7, 8, 10, 12, 14, 16
Black with graphics (94)

\$109.99



Kids'

Teen



KIDS' & TEEN X-TEAM HIGHPANTS

Rugged design and construction for active kids. 100% waterproof. Growing-leg system with zipper for lengthening legs by 4" (10 cm) as child gets taller.

- Critical seams sealed.
- Full front and back bib.
- Shaped and reinforced knee.
- Side zipper opening.
- Elastic waist.
- Storm gaiters.

Shell: 68% Nylon, 32% Polyester
Insulation: Thermal Loft

Kids' 441528 - 2, 3, 4, 5, 6
Black (90)

\$109.99

Teen 441529 - 7, 8, 10, 12, 14, 16
Black (90)

\$119.99



OUR KIDSWEAR IS BUILT WITH THE SAME FEATURES AND MATERIALS AS OUR ADULT GEAR. SO YOU'LL KNOW IT WILL PERFORM AND LAST.



JUNIOR HELMETS

- High-tech, lightweight and tough.
- Fully-adjustable, aero-tuned peak.
- Ventilation system.
- Moisture-wicking and breathable chin strap, liner and cheek pads.
- Easily removable and washable liner and cheek pads.
- Provides maximum visibility.

- Fits all goggles.
- Breath deflector mask included.
- Strap grip keeps goggle strap in place.
- Available with clear-coated bold waterslide graphics.
- D.O.T. certified.
- 100% ABS

Shell: Polycarbonate Composite



JUNIOR X-1 BLAZE HELMET

447673 - S, M, L
Orange (12)
\$109.99



JUNIOR X-1 CIRCUIT CHALLENGE HELMET

447672 - S, M, L
Black with graphics (94)
\$119.99

YOUTH BASIC BALACLAVA

- Designed for warmth, dryness and comfort.
 - Flatlocked seams to prevent skin chafing.
- 80% Nylon, 20% Spandex
445685 - S/M, L/XL
Black (90)
\$12.99



JUNIOR TRAIL GOGGLES

- Molded urethane frame for flexibility and style.
 - Hypoallergenic face foam.
 - Anti-fog, scratch-resistant amber dual lens.
 - Silicone backed strap system for slip-free performance.
- 100% Plastic
447563 - One size
Black (90)
\$34.99



TEEN X-TEAM GLOVES

- Waterproof and breathable membrane.
- 4-way stretch fleece cuff.
- Drawstring closure.
- Adjustable hook and loop web strap with slip keep.
- Brushed polyester lining with Microban® anti-microbial product protection.

Shell: Nylon
 Insulation: Thermal Loft
446211 • 6-8, 10-12, 14-16
Black (90)

\$39.99



KIDS' X-TEAM MITTS

- Waterproof and breathable membrane.
- Drawstring closure.
- Adjustable hook and loop web strap with slip keep.
- Micro-polyester lining with Microban anti-microbial product protection.
- Heat pack pocket built into inner mitt lining.

Shell: Nylon
 Insulation: Thermal Loft
446227 • 2, 4, 6
Black (90)

\$29.99



Hi-Vis Yellow (26) Black (90)



TEEN X-TEAM MITTS

Same great features as kids' X-Team mitts. Fit for teen racers.

Shell: Nylon
 Insulation: Thermal Loft
446245 • 6-8, 10-12, 14-16
Hi-Vis Yellow (26), Black (90)

\$34.99



Charcoal Grey (07) Yellow (10)

TEEN ACTIVE SOCKS

- Engineered with Isolfil yarn designed to keep skin dry, with built-in polypropylene fibers that trap warm air and slow the dispersion of body heat.
- Stay-up comfort top keeps socks up.
- Elastic ankle and arch support.
- Reinforced toe and heel, plus added protection above the boot line thanks to over-the-calf length.
- Special padding for pressure reduction and buffered protection.

50% Polyamide Nylon, 17% Acrylic, 17% Merino Wool, 14% Polypropylene, 2% Elastane

444152 • One size
Charcoal Grey (07)
\$14.99

KIDS' THERMAL SOCKS

- Dependable comfort sourced from the durability of polyamide nylon and the warmth of Merino wool.
- Itch-free and shrink treated to retain their size and shape for years.
- Stay-up comfort top keeps socks up.
- Elastic ankle and arch support.
- Fully cushioned shin segment.

35% Merino Wool, 35% Acrylic, 28% Polyamide Nylon, 2% Elastane
444151 • S/M, L/XL
Charcoal Grey (07), Yellow (10)
\$14.99



TEEN SKI-DOO X-TEAM BOOTS

- Unisex boots.
- Waterproof.
- Rubber outline.
- 6mm thick removable liner.
- Height 12" (30 cm).
- Comfort-rated to -61°F (-52 °C).

444194 • 1, 2, 3, 4, 5, 6
Black (90)
\$109.99



Yellow (10) Pink (36)

KIDS' FLIP BOOTS

- Waterproof boots.
- Blown EVA outline.
- Very lightweight.
- One-powerstrap system.
- Height 11" (28 cm).
- 6mm felt removable liner.
- Comfort-rated to -31°F (-35 °C).

444193 • 1, 2, 3, 11, 12, 13
Yellow (10), Pink (36)
\$59.99



TEEN OVERSIZE HOODIE

- Brushed inner surface.
- Handwarmer pockets.
- Ski-Doo signature at back.

100% Polyester Mesh
 453661
 7-8, 10-12, 14-16
 Charcoal Grey (07)
 \$59.99



KIDS' SKI-DOO LONG SLEEVE T-SHIRT

- Short sleeve combined with long sleeve effect.

95% Cotton, 5% Spandex
 453596
 2, 3-4, 5-6
 Yellow (10), Raspberry (39)
 \$24.99



Yellow (10)

Raspberry (39)



TEEN HOODIE FOR GIRL

- Semi-fitted hooded sweatshirt.
- Integrated handwarmer pockets.

72% Cotton, 23% Polyester, 5% Spandex
 453660
 7-8, 10-12, 14-16
 Yellow (10), Raspberry (39)
 \$59.99



Yellow (10)

Raspberry (39)

X-TEAM FLEECE

• Zippered handwarmer pockets. • X-Team embroidery at back. • 100% Polyester



Yellow (10)

Raspberry (39)

Black (90)



Charcoal Grey (07)

Camo (37)

Raspberry (39)

Aqua (76)



TEEN X-TEAM FLEECE

453635 • 7-8, 10-12, 14-16 • Yellow (10), Raspberry (39), Black (90)
 \$54.99



KIDS' X-TEAM FLEECE

453636 • 2, 3-4, 5-6 • Charcoal Grey (07), Camo (37), Raspberry (39), Aqua (76)
 \$49.99



Charcoal Grey (07)

Black (90)



Raspberry (39)

Charcoal Grey (07)

Back



TEEN HOODIE

- Semi-fitted hooded sweatshirt.
 - Integrated handwarmer pockets.
 - Print Ski-Doo signature on side hood.
- 72% Cotton, 23% Polyester, 5% Spandex

453658 • 7-8, 10-12, 14-16
Charcoal Grey (07), Black (90)
\$54.99



KIDS' HOODIE

- Semi-fitted hooded sweatshirt.
 - Integrated handwarmer pockets.
- 72% Cotton, 23% Polyester, 5% Spandex

453659 • 2, 3-4, 5-6
Charcoal Grey (07), Raspberry (39)
\$49.99



KIDS' OVERSHIRT

- Plaid flannel overshirt.
 - Front opening with press buttons.
- 100% Cotton

453656 • 2, 3-4, 5-6
Red (30)
\$64.99

X-TEAM TURTLENECK

• Stretch fabric. • Collar rib and cuff rib. 95% Cotton, 5% Spandex



Yellow (10)

Black (90)

White (01)

Black (90)

TEEN X-TEAM TURTLENECK

453614 • 7-8, 10-12, 14-16
Yellow (10), Black (90)
\$24.99

KIDS' X-TEAM TURTLENECK

453615 • 2, 3-4, 5-6
White (01), Black (90)
\$24.99

JERSEYS

- V-neck made from quick-dry, antibacterial, moisture-wicking fabric.
- Underarm meshing.
- Sublimated print.
- 100% Polyester



WE NAMED THE FRONT FLIP JERSEY AFTER SKI-DOO RIDER HEATH FRISBY WHO IS THE FIRST FREESTYLER TO ACCOMPLISH A FRONT FLIP.



Yellow (10)

Raspberry (39)



KIDS' ROBOTIC SKI-DOO JERSEY

453644 • 2, 3-4, 5-6
Yellow (10), Raspberry (39)
\$44.99



TEEN SKI-DOO FRONT FLIP JERSEY

453643 • 7-8, 10-12, 14-16
Black (90)
\$49.99



KIDS' BEE CAP

- Adjustable cap.
 - Ski-Doo embroidery at center back and on right side.
- 100% Cotton

447818 • One size
Yellow (10),
Raspberry (39)
\$17.99



Yellow (10)



Raspberry (39)



Grey (09)

Raspberry (39)



KIDS' T-SHIRT

100% Cotton
453652 • 2, 3-4, 5-6
Grey (09), Raspberry (39)
\$21.99

TEEN SKI-DOO ROCKY LONG SLEEVE T-SHIRT

• Short sleeve combined with long sleeve effect.
95% Cotton, 5% Spandex
453604 • 7-8, 10-12, 14-16
Black (90)
\$24.99



Charcoal Grey (07)



Yellow (10)

TEEN CAP

- Tone on tone comics wallpaper design.
- 100% Cotton

447639 • One size
Charcoal Grey (07),
Yellow (10)
\$24.99



Charcoal Grey (07)

Black (90)

TEEN SKI-DOO KNITTED CAP

• Pre-shaped peak beanie.
70% Acrylic, 30% Wool
447484 • One size
Charcoal Grey (07), Black (90)
\$19.99



Charcoal Grey (07)

Yellow (10)

Aqua (76)

TEEN RACING BEANIE

• Micro-fleece lining.
100% Merino Wool
447492 • One size
Charcoal Grey (07), Yellow (10), Aqua (76)
\$14.99



Charcoal Grey (07)

Pink (36)

KIDS' EAR HAT

• Knitted hat with micro-fleece lining.
59% Acrylic, 26% Nylon, 15% Wool
447494 • One size
Charcoal Grey (07), Pink (36)
\$19.99



Charcoal Grey (07)

Grey (09)

Raspberry (39)

KIDS' BEANIE

• Micro-fleece lining.
100% Acrylic
447829 • One size
Charcoal Grey (07), Grey (09), Raspberry (39)
\$14.99



TEEN LONG KNITTED HAT

• Band micro-fleece lining.
100% Acrylic
447894 • One size
Black (90)
\$19.99



TEEN LONG KNITTED HAT FOR GIRL

• Band micro-fleece lining.
100% Acrylic
447868 • One size
Mixed Color (18)
\$19.99



Beige (02)

Charcoal Grey (07)

Black (90)

KIDS' RACING PERUVIAN HAT

• Knitted hat with micro-fleece lining.
100% Acrylic
447493 • One size
Beige (02), Charcoal Grey (07), Black (90)
\$19.99



Charcoal Grey (07)

Yellow (10)

KIDS' BABY HAT

• Knitted hat with fleece lining.
100% Acrylic
447495 • One size
Charcoal Grey (07), Yellow (10)
\$14.99

SPORTSWEAR

Your passion for the sport and Ski-Doo snowmobile doesn't end when sled's parked. Show your Ski-Doo pride with our full sportswear line for men and women.





Charcoal Grey (07)



Yellow (10)



Black (90)

**SNO-X FLEECE**

- Half-zip fleece with front pocket.
- Ski-Doo signature logo on both sleeves.

100% Polyester
 453633 - XS, S, M, L, XL,
 2XL, 3XL
 Charcoal Grey (07),
 Yellow (10), Black (90)
 \$74.99



Charcoal Grey (07)



Orange (12)



Black (90)

**X-TEAM MICRO-FLEECE**

- Zippered handwarmer pocket.
- X-Team embroidery logo on back.

100% Polyester
 453632 - S, M, L, XL, 2XL, 3XL
 Charcoal Grey (07),
 Orange (12), Black (90)
 \$69.99



Charcoal Grey (07)



Black (90)

**X-TEAM HOODIE**

- Integrated handwarmer pockets.
- 72% Cotton, 23% Polyester, 5% Spandex

453673 - S, M, L, XL, 2XL, 3XL
 Charcoal Grey (07), Black (90)
 \$74.99



JERSEYS

- V-neck made from quick-dry, antibacterial, moisture-wicking fabric.
 - Underarm meshing.
 - Sublimated print.
- 100% Polyester



SKI-DOO JERSEY

453640 -
S, M, L, XL, 2XL
Black (90)
\$59.99



SKI-DOO FRONT FLIP JERSEY

453642 -
S, M, L, XL, 2XL
Black (90)
\$54.99



SKI-DOO JERSEYS CAN BE WORN WITH A TECHNICAL BASE LAYER, OR AS ONE.



WE NAMED THE FRONT FLIP JERSEY AFTER SKI-DOO RIDER HEATH FRISBY WHO IS THE FIRST FREESTYLER TO ACCOMPLISH A FRONT FLIP.



MOUNTAIN JERSEY

453639 -
S, M, L, XL, 2XL
Black (90)
\$54.99



Charcoal Grey (07)



Orange (12)



X-TEAM JERSEY

453641 -
S, M, L, XL, 2XL
Charcoal Grey (07),
Orange (12)
\$59.99



**SKI-DOO
ZIP UP VEST**

- Vest with brush effect fabric inside.

100% Polyester Mesh
453663 • S, M, L,
XL, 2XL, 3XL
Charcoal Grey (07),
Black (90)
\$69.99



Charcoal Grey (07)

Black (90)

**OVERSHIRT**

- Plaid flannel overshirt.
- Front opening with press buttons.
- Two chest pockets.

100% Cotton
453655 • XS, S,
M, L, XL, 2XL
Red (30)
\$69.99

**X-TEAM LONG
SLEEVE SHIRT**

- Stretch yarn dyed twill shirt.

65% Polyester,
35% Cotton
453609 • S, M, L,
XL, 2XL, 3XL
Charcoal Grey (07),
Black (90)
\$74.99



Charcoal Grey (07)

Black (90)

**ARCTIC
FLEECE**

- Mid-layer thermal fleece with slight brushing for more comfort.
- Moisture-wicking fabric.
- Antibacterial and anti-pilling.
- Handwarmer pockets.

95% Polyester,
5% Spandex
453676 • S, M,
L, XL, 2XL, 3XL
Black (90)
\$99.99

**SKI-DOO POLO**

- Rib collar.
- Printed sponsor logos on sleeves.

65% Polyester,
35% Cotton

453624 • S, M, L,
XL, 2XL, 3XL
Black (90)
\$49.99

**SHORT SLEEVE MECHANIC SHIRT**

- Stretch yarn dyed twill shirt.
- Mesh side panels.
- Large embroidered X-Team logo on back.

65% Polyester, 35% Cotton

453575 • S, M,
L, XL, 2XL, 3XL
Black (90)
\$64.99



Yellow (10)

X-TEAM TURTLENECK

- Stretch fabric.
- Collar rib and cuff rib.

95% Cotton, 5% Spandex

453610 • M, L, XL, 2XL
White (01), Charcoal Grey (07),
Yellow (10), Black (90)

\$29.99



White (01)
Charcoal Grey (07)
Black (90)



CREW SWEATSHIRT

- One side brushed fleece.
 - Ski-Doo print on side.
- 80% Cotton,
20% Polyester
453665 - S, M, L, XL,
2XL, 3XL
Heather Grey (27),
Black (90)
\$64.99



Heather Grey (27)

Black (90)



SKI-DOO GENERIC HOODIE

- One side brushed fleece.
 - Integrated handwarmer pockets.
- 80% Cotton,
20% Polyester
453664 - S, M,
L, XL, 2XL, 3XL
Black (90)
\$69.99



CREW JACKET

The perfect Spring and Fall factory streetwear team jacket.

- Windproof and micro-fleece lining.
- Zippered inner pockets.

Shell: Nylon
440578 - XS, S, M,
L, XL, 2XL, 3XL
Black (90)
\$139.99



SKI-DOO LONG SLEEVE T-SHIRT

- Ski-Doo print on right side front.
- 100% Cotton
453648 - S, M, L, XL,
2XL, 3XL
Heather Grey (27),
Black (90)
\$34.99



Heather Grey (27)

Black (90)



Yellow (10)

Black (90)



White (01)

Black (90)

Back



SKI-DOO INFERNO T-SHIRT

100% Cotton • 453688 • S, M, L, XL, 2XL, 3XL • Yellow (10), Black (90)

\$24.99



REV-XM T-SHIRT

100% Cotton • 453646 • S, M, L, XL, 2XL, 3XL • White (01), Black (90)

\$24.99



White (01)



Heather Grey (27)



Black (90)



SKI-DOO FRONT FLIP T-SHIRT

100% Cotton • 453651 • S, M, L, XL, 2XL • White (01), Heather Grey (27), Black (90)

\$24.99



White (01)

Yellow (10)

Red (30)

Black (90)



SKI-DOO T-SHIRT

100% Cotton • 453647 • S, M, L, XL, 2XL, 3XL • White (01), Yellow (10), Red (30), Black (90)

\$21.99



YOU LITERALLY DIAL-IN THE FIT OF THE ADJUSTABLE CAP BY TURNING THE DIAL ON THE SIDE.

ADJUSTABLE CAP

- Boa system™ technology for an adjustable-fitted cap.
- Fully adjustable to fit most head sizes.
- No pressure points.
- Consistent closure.

66% Polyester, 34% Cotton

447637 • One size

Black (90)

\$34.99



Charcoal Grey (07)



Black (90)



X-TEAM CAP

- Adjustable cap.
- Ski-Doo signature at center back.
- 100% Cotton

447814 • One size • Charcoal Grey (07), Black (90)

\$19.99



Charcoal Grey (07)



Black (90)



MECHANIC CAP

- Fitted cap.
- Ski-Doo signature at center back.
- 98% Cotton, 2% Spandex

447807 • S/M, L/XL • Charcoal Grey (07), Black (90)

\$24.99



Yellow (10)



Black (90)



RACING CAP

- Fitted cap.
- 98% Cotton, 2% Spandex

447813 • S/M, L/XL • Yellow (10), Black (90)

\$24.99



Yellow (10)



Red (30)



Black (90)

SNO-X FIGHTER CAP

- Adjustable twill cap.
- 100% Cotton

447629 • One size • Yellow (10), Red (30), Black (90)

\$24.99



LOUNGE JACKET

- Comfortable fit.
- Handwarmer pockets.
- 95% Polyester, 5% Spandex
- 453666 • XS, S, M, L, XL, 2XL
- Black (90)
- \$59.99



LOUNGE PANTS

- One side brushed.
- Comfortable fit.
- 95% Polyester, 5% Spandex
- 453667 • XS, S, M, L, XL, 2XL
- Black (90)
- \$54.99

JERSEYS

- Semi-fitted.
- V-neck made from quick-dry, antibacterial, moisture-wicking fabric.

- Underarm meshing.
- Sublimated print.
- 100% Polyester



Raspberry (39)



Aqua (76)



Yellow (10)



Raspberry (39)



X-TEAM JERSEY

- 453645 • XS, S, M, L, XL, 2XL • Raspberry (39), Aqua (76)
- \$59.99

MUSKOKA JERSEY

- 453595 • S, M, L, XL, 2XL • Yellow (10), Raspberry (39)
- \$59.99



White (01)



Black (90)



SKI-DOO TANK TOP

- Ski-Doo signature on back.
- 95% Cotton, 5% Spandex
- 453670 • XS, S, M, L, XL, 2XL
- White (01), Black (90)
- \$19.99



POLAR HOODIE

- Fleece pop-over hoodie.
- 100% Polyester
- 453675 • XS, S, M, L, XL, 2XL
- Ice (38)
- \$69.99





Yellow (10)



Raspberry (39)



TEAM SKI-DOO HOODIE

- Semi-fitted hooded sweatshirt.
 - Integrated handwarmer pockets.
 - Embroidered Ski-Doo signature on bottom at back.
- 72% Cotton, 23% Polyester, 5% Spandex

453657 • XS, S, M, L, XL, 2XL
 Yellow (10), Raspberry (39)
 \$74.99



Ice (38)

Raspberry (39)

Black (90)

LODGE SUIT SWEATSHIRT

- Comfortable fit, brushed inner surface.
- Handwarmer pockets.

80% Cotton, 20% Polyester

453571 • S, M, L, XL, 2XL
 Ice (38), Black (90), Raspberry (39)
 \$54.99



Ice (38)



Raspberry (39)



Black (90)

LODGE SUIT BOTTOM

- Comfortable fit, brushed inner surface.
- Rib at waistband.
- Front small pocket on left side.

80% Cotton, 20% Polyester

453570 • S, M, L, XL, 2XL
 Ice (38), Raspberry (39), Black (90)
 \$39.99



Charcoal Grey (07)



Raspberry (39)



Black (90)



SKI-DOO VEST

- Integrated handwarmer pockets.
 - Ski-Doo signature on left sleeve.
- 50% Nylon, 36% Cotton, 12% Polyester, 2% Spandex
 453662 •
 XS, S, M, L, XL, 2XL
 Charcoal Grey (07),
 Raspberry (39),
 Black (90)
 \$79.99



Ice (38)



Raspberry (39)



Aqua (76)



Black (90)



SUPREME FLEECE

- Slim cut to flatter your figure.
 - Stand-up collar helps keep neck cozy.
 - Zippered handwarmer pockets and one zip-pocket on left chest.
- 100% Polyester
 453631 •
 XS, S, M, L, XL, 2XL
 Ice (38), Aqua (76),
 Raspberry (39),
 Black (90)
 \$69.99



MUSKOKA FLEECE

- Feminine-fit fleece.
- Perfect under Muskoka jacket.
- Heat embossed details.
- Handwarmer pockets.

100% Polyester
453630 •
 XS, S, M, L, XL, 2XL, 3XL
 Ice (38), Raspberry (39), Black (90)
\$69.99

Ice (38) Raspberry (39) Black (90)



X-TEAM MICRO-FLEECE

- Zippered handwarmer pocket.
- X-Team embroidery on back.
- Embroidered Ski-Doo signature on left sleeve.

100% Polyester
453634 •
 XS, S, M, L, XL, 2XL
 Ice (38), Raspberry (39), Black (90)
\$69.99

Ice (38) Raspberry (39) Black (90)



MUSKOKA SWEATSHIRT

- Semi-fitted with asymmetric full-length zipper.
- Integrated zippered pockets.

72% Cotton, 23% Polyester, 5% Spandex
453623 •
 XS, S, M, L, XL, 2XL
 Charcoal Grey (07), Red (30), Ice (38)
\$69.99

Charcoal Grey (07) Red (30) Ice (38)



SKI-DOO HOODIE

- Semi-fitted hooded sweatshirt.
- Integrated handwarmer pockets.
- Ski-Doo velvet flock at front.

80% Cotton, 20% Polyester
453435 •
 S, M, L, XL, 2XL
 Ice (38), Raspberry (39), Black (90)
\$74.99

Ice (38) Raspberry (39) Black (90)



SKI-DOO POLO

- Rib collar.
- Printed sponsor logos on sleeves.

65% Polyester,
35% Cotton

453603 •
S, M, L, XL, 2XL, 3XL
Black (90)
\$44.99



Ice (38)



Raspberry (39)



Black (90)



X-TEAM T-SHIRT

- Fitted style.
- Stretch fabric.
- Rhinestone details over print at front.

95% Cotton, 5% Spandex

453650 • XS, S, M, L, XL, 2XL
Ice (38), Raspberry (39), Black (90)
\$24.99



Ice (38)



Black (90)

MUSKOKA LONG SLEEVE T-SHIRT

- Stretch fabric.
- 95% Cotton, 5% Spandex

453602 • XS, S, M, L, XL, 2XL
Ice (38), Black (90)
\$34.99



Raspberry (39)



Black (90)

MUSKOKA T-SHIRT

- Fitted style.
 - Stretch fabric.
- 95% Cotton, 5% Spandex

453653 • XS, S, M, L, XL, 2XL
Raspberry (39), Black (90)
\$24.99



Yellow (10)



Ice (38)



Raspberry (39)



MUSKOKA CAP

- Adjustable cap.
 - Ski-Doo signature at center back.
- 100% Cotton Twill

447812 • One size
Yellow (10), Ice (38), Raspberry (39)
\$17.99



Ice (38)



Black (90)

SD CAP

- Vintage-look cap with synthetic fur lining.
- 100% Nylon
447479 • One size
Ice (38), Black (90)
\$17.99



White (01)

Charcoal Grey (07)




Black (90)

X-TEAM TURTLENECK

- Stretch fabric.
 - Collar rib and cuff rib.
- 95% Cotton, 5% Spandex
453611 • S, M, L, XL, 2XL
White (01), Charcoal Grey (07), Black (90)
\$29.99

SIZEING CHART

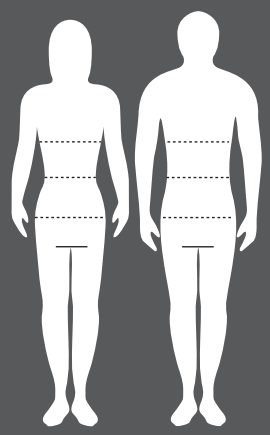

HOW TO MEASURE

- For best results, have someone else take measurements.
- Measure body in underwear.
- Tape must be snug but not tight.
- If measurements fall between two sizes, order the larger size.

HEIGHT: Without shoes, standing with heels and back against a wall.

CHEST: Measure under your arm, around the fullest part of your chest.

WAIST: Immediately below the lowest rib.

HIPS: Across the fullest part of the seat.

ARM LENGTH: Hand on hip, from center back neck bone, along shoulder point, around elbow to bottom of wrist bone.

INSEAM: Without shoes, from crotch to the floor.

HEAD: Around your head, from the center of the forehead, above the ears and over the natural bump at the back of the head.

MEN - REGULAR 5'8" - 6'0"

	XS	S	M	L	XL	2XL	3XL
CHEST	33-35	36-38	39-41	42-44	46-48	50-52	54-56
WAIST	28-30	30-32	33-35	36-39	41-43	45-48	50-52
HIPS (SEAT)	32-34	35-37	38-40	41-43	45-47	49-51	53-55
ARM LENGTH	31	33	33	34	34	35	35
INSEAM	31	32	32	32	33	33	33

MEN - TALL 6'1" - 6'4" Arm length + 1.5" Inseam + 2.0"

	MT	LT	XLT	2XLT	3XLT	4XL	4XLT	5XL
CHEST	39-41	42-44	46-48	50-52	54-57	58-60	58-60	61-63
WAIST	33-35	36-39	41-43	45-48	50-54	54-56	56-58	64-68
HIPS (SEAT)	38-40	41-43	45-47	49-51	53-56	56-57	57-58	66-67
ARM LENGTH	34 1/2	35 1/2	35 1/2	36 1/2	36 1/2	36	37 1/2	36
INSEAM	34	34	35	35	35	33	35	33

LADIES - REGULAR 5'4" - 5'8"

	XS	S	M	L	XL	2XL	3XL
CHEST	32 1/2 - 33 1/2	34 1/2 - 35 1/2	36 1/2 - 38	39 1/2 - 41	43 - 45 1/2	47 - 49 1/2	51 - 53
WAIST	24 1/2 - 25 1/2	26 1/2 - 27 1/2	28 1/2 - 30	31 1/2 - 33	35 - 37	39 - 41	43 - 45
HIPS (SEAT)	34 1/2 - 35 1/2	36 1/2 - 37 1/2	38 1/2 - 40	41 1/2 - 43	45 - 47	49 - 51	53 - 55
ARM LENGTH	29	30	31	32	32	32	32
INSEAM	29	29	30	30	30	30	30

LADIES - TALL 5'9" - 6'0" Arm length + 1.5" Inseam + 2.0"

	MT	LT	XLT
CHEST	36 1/2 - 38	39 1/2 - 41	43 - 45 1/2
WAIST	28 1/2 - 30	31 1/2 - 33	35 - 37
HIPS (SEAT)	38 1/2 - 40	41 1/2 - 43	45 - 47
ARM LENGTH	32 1/2	33 1/2	33 1/2
INSEAM	32	32	32

KIDS & TEEN

	2	3	4	5	6	7	8	10	12	14	16
HEIGHT	2'11"	3'2"	3'5"	3'8"	3'11"	4'2"	4'5"	4'8"	4'11"	5'2"	5'5"
CHEST	21	22	23	24	25	26	27	28 1/2	30	31 1/2	33
WAIST	20	20 1/2	21	21 1/2	22	22 1/2	23	24	25	26	27
HIPS (SEAT)	21	22	23	24	25	26	27	28 1/2	30	31 1/2	33
ARM LENGTH	15 1/2	17	18 1/2	20	21 1/2	23	24 1/2	28 1/2	30	31 1/2	33
INSEAM	13 1/2	15 1/2	17 1/2	19 1/2	21	22 3/4	24 1/2	26 1/2	28	29 1/2	31

SOCKS

	S/M	L/XL
MEN	6 1/2 - 9	9 1/2 - 12 1/2
LADIES	5 1/2 - 7 1/2	8 - 10 1/2
KIDS	9 1/2 - 12 1/2	13 - 3
TEEN	ONE SIZE 3 1/2 - 6	

GLOVES & MITTS Measure palm width

	XS	S	M	L	XL	2XL	3XL
MEN							
INCHES	3	3 1/4	3 1/2	4	4 1/2	5	5 1/2
CM	7 1/2	8	9	10	11 1/2	13	14
LADIES							
INCHES	2 1/2	2 3/4	3	3 1/2	4	4 1/2	-
CM	6	7	8	9	10	11 1/2	-

HELMETS

	XS	S	M	L	XL	2XL	3XL
HAT SIZE	6 5/8 - 6 3/4	6 7/8 - 7	7 1/8 - 7 1/4	7 3/8 - 7 1/2	7 5/8 - 7 3/4	7 7/8 - 8	8 1/8 - 8 1/4
HEAD (CM)	53 - 54	55 - 56	57 - 58	59 - 60	61 - 62	63 - 64	65 - 66
HEAD (INCHES)	20 7/8 - 21 1/4	21 5/8 - 22	22 3/8 - 22 3/4	23 1/8 - 23 5/8	24 - 24 3/8	24 3/4 - 25 1/8	25 1/2 - 25 7/8

JUNIOR HELMET

	S	M	L
HAT SIZE	6 1/8 - 6 1/4	6 3/8 - 6 1/2	6 5/8 - 6 3/4
HEAD (CM)	49 - 50	51 - 52	53 - 54
HEAD (INCHES)	19 1/4 - 19 3/4	20 - 20 1/2	20 1/8 - 21 1/4



WHAT CODE REPRESENTS YOUR SIZE?

- 1 Find your size.
- 2 The corresponding code is **THE CODE** you use to complete the part number on your order.
Example: 440 227 90
Size: M = code "06",
Therefore 440 227 06 90

SIZE	CODE	SIZE	CODE
ONE SIZE	00	5	24
XS	02	6	25
S	04	7	27
M	06	8	28
MT	07	9	29
L	09	10	30
LT	10	11	31
XL	12	12	32
XLT	13	13	33
2XL	14	14	34
2XLT	15	16	35
3XL	16	3-4	79
3XLT	17	5-6	52
4XL	18	6-8	48
4XLT	19	7-8	54
5XL	88	10-12	49
1	20	14-16	50
2	21	S/M	72
3	22	M/L	91
4	23	L/XL	73

HERE'S WHAT RIDERS LIKE YOU ARE SAYING ABOUT BRP RIDING GEAR & ACCESSORIES

LADIE'S HELIUM JACKET



ASHLEY CHAFFIN
BACK COUNTRY EXPERT

"With some other brands, the gear is so heavy, it feels like you're working against it when working your sled," "The Helium gear is so light and flexible. And it's a perfect fit for my body, and that is really hard to find when looking for women's outerwear."



STEPHANIE SCHWARTZ
BACK COUNTRY EXPERT

"I've ridden in it 90% of the time for almost two seasons and its performance has been second to none, even through my tree rubbing and bails – or checking the track as I like to say – it shows no signs of wear and it's still perfectly waterproof, breathable and windproof after many washings. It's what I have been looking for in a ladies technical mountain riding jacket and definitely it's a staple in my gear."



STEVE JANES
SNOWEST MAGAZINE EDITOR

"...every now and then we come across something that just works perfectly for how we ride. Such was the case with the Ski-Doo Helium SympaTex snowmobile suit... it kept us warm when it is cold and dry when it is wet. Not only are the jacket and bibs lightweight, but the design is extremely functional." - SnoWest magazine, Vol. 39 No. 8



"IT KEPT US WARM WHEN IT IS COLD AND DRY WHEN IT IS WET."

LinQ SYSTEM



DAVE NORONA
BACK COUNTRY EXPERT

"The worst part of the day used to be trying to fight your jerry can webbing back together at the end of the day. With the latest LinQ system the jerry can and bags lock on and off in seconds. Amazing!!"



KEVIN BEIKLE
ON DOOTALK.COM:

"The design and simplicity of the LinQ system is so far ahead of the other accessories it's incredible. At first the ease of use will amaze you, then you'll notice the quality of construction and the way it looks on the sled and realize just how good the product is."



CRAIG NICHOLSON
THE INTREPID SNOWMOBILER

"This is a really handy way to make the new heated glove box even more useful. I couldn't believe the amount of stuff it holds. No more need for a handlebar bag and the narrow space between the extension and the inside of the windshield is great for holding my trail map while riding."



GLOVE BOX EXTENSION

ABSOLUTE 0 JACKET



3inaline
ON DOOTALK.COM:
"This jacket is very warm, comfortable and durable. On the coldest days, I would not think of wearing any of my other jackets."




XP-R 2 CARBON LIGHT



REV*BARON
ON DOOTALK.COM:
"After the ride, my friend was begging me to sell it to him. I said no thanks. This is a keeper and I'll cherish it for years to come. It is just amazing how much better your neck feels after riding with a lighter helmet on all day."



mxzwild
ON DOOTALK.COM:
"Not once did I feel the slightest bit of coolness. I actually thought it was warmer than it was, until I took my gloves off. Then knew how cold it was. Even cruising at 70+mph (110 km/h) with the wind blowing I still stayed warm. Very impressed with the jacket."

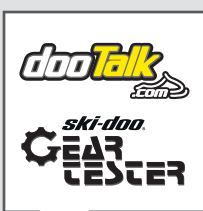

800cc
ON DOOTALK.COM:
"Anyone who has a hard time staying warm out there, this is the absolute answer."

MODULAR 2

"The biggest problem I have ALWAYS had with helmets is that my shield was always fogged up...This helmet gets a GOLD medal. Zero fog with this baby."



bdschuch
ON DOOTALK.COM:



CRAIG NICHOLSON
THE INTREPID SNOWMOBILER
"Talk about bright. When I flipped these on at night, the deer had to put on sunglasses! That LED beam illuminates everything that I have never been able to see properly before and makes night riding a whole new ball game."

AUXILIARY LED LIGHT

BV2S



norcan
ON DOOTALK.COM:
"Overall, I was very happy with the Modular 2 helmet. I've been battling visor fogging issues forever and this helmet is definitely a cure. The ability to stop on the trail open up the front and talk to your buddies without removing your helmet is very handy. Combined with a great sun visor, a quick release neck strap and you can't go wrong."



cutlass7
ON DOOTALK.COM:

"I LOVE MY BV2S, DON'T THINK I WILL EVER WEAR ANYTHING ELSE."

JOIN THE SKI-DOO COMMUNITY

SHARE. LEARN. CONNECT.

OUR MAIN WEBSITE
ski-doo.com

SKI-DOO TRAIL ON FACEBOOK
facebook.com/skidoo

ON TRACK BLOG
ontrack.ski-doo.com

SKI-DOO MOUNTAIN ON FACEBOOK
facebook.com/skidoomountain

ELEVATION MOUNTAIN BLOG
mountainblog.ski-doo.com



SKI-DOO ACCESSORIES

**“NOT JUST
ANOTHER
DAY AT THE
OFFICE!”**

.....
CHRISTIAN LABBÉ

Senior Project Engineer
Ski-Doo Accessories

TESTING 2014
ACCESSORIES
IN DEEP POWDER
WITH CARL KUSTER
AND ROB ALFORD.

MAKE IT
YOURS
WITH TOTAL
INTEGRATION

ABS
WILLIAMS HUMAN ATTITUDE



 /ski-doo

Share your ideas for accessories, get new product releases, enter contests on our Facebook online community.



WHICH ACCESSORIES FIT YOUR RIDE?

Descriptions in this catalog are followed by a list of platforms such as **REV**, **REV-XP**, **REV-XR**, **REV-XS**, **REV-XM** and **REV-XU**, which tell what accessories fit which models.

by install
 • Left & Right.
 • See your dealer for
REV-XP
 517303937 • Grey -
 517303934 • Grey
 517304100 • L

Use this chart to determine which **PLATFORM** you have.



REV



REV-XP



REV-XP

	MODEL	ENGINE	PLATFORM
2008	MX Z®	500SS, 600 E-TEC®, 800R POWERTEK, 600RS	REV-XP®
	MX Z	550F	REV®
	MX Z RENEGADE®	600SDI, 800R POWERTEK	REV-XP
	GSX®	500SS, 600 SDI, 800 POWERTEK	REV-XP
	GSX	550F	REV
	SUMMIT®	800R POWERTEK	REV-XP
	SUMMIT	550F, 600 SDI	REV
GTX†	550F, 500SS, 600 SDI	REV	
2009	MX Z	500SS, E-TEC 600, 800R POWERTEK, 600RS	REV-XP
	MX Z	1200	REV-XR
	MX Z	550F	REV
	MX Z RENEGADE	E-TEC 600, 800R POWERTEK	REV-XP
	MX Z RENEGADE	1200	REV-XR
	GSX	E-TEC 600, 500SS	REV-XP
	GSX	1200	REV-XR
	GSX	550F	REV
	GTX	1200, E-TEC 600	REV-XR
	GTX	500SS	REV-XP
	GTX	550F	REV
	SUMMIT	800R POWERTEK, E-TEC 600, 600	REV-XP
	SUMMIT	550F	REV
EXPEDITION® TUV	600 SDI	REV-XU™	
2010	MX Z	550F, 600, E-TEC 600, 800R POWERTEK, 600RS	REV-XP
	MX Z	1200	REV-XR
	RENEGADE	550F, E-TEC 600, 800R POWERTEK	REV-XP
	RENEGADE	1200	REV-XR
	GSX	550F, E-TEC 600, 600	REV-XP
	GSX	1200	REV-XR
	GRAND TOURING	1200, E-TEC 600	REV-XR
	GRAND TOURING	550F, 600	REV-XP
	SUMMIT	600, E-TEC 600, 800R POWERTEK	REV-XP
	EXPEDITION®	600 SDI, 1200	REV-XU
	TUNDRA	550F	REV-XU



REV-XU Tundra



REV-XP



REV-XU Expedition



REV-XM



REV-XS



REV-XR

You can also visit the Ski-Doo Owners Center:
ski-doo.com/owner-center/previous-models.aspx

2011

MODEL	ENGINE	PLATFORM
MX Z	550F, 600, ACE 600, E-TEC 600, 800R POWERTEK, E-TEC 800R, 600RS	REV-XP
MX Z	1200	REV-XR
RENEGADE	550F, ACE 600, E-TEC 600, 800R POWERTEK, E-TEC 800R	REV-XP
RENEGADE	1200	REV-XR
GSX	E-TEC 600	REV-XP
GSX	1200	REV-XR
GRAND TOURING	1200, E-TEC 600	REV-XR
GRAND TOURING	550F, ACE 600, 600	REV-XP
SUMMIT	600, E-TEC 600, 800R POWERTEK, E-TEC 800R	REV-XP
FREERIDE™	E-TEC 800R	REV-XP
EXPEDITION	E-TEC 600, 1200	REV-XU
EXPEDITION	550F, ACE 600	REV-XP
TUNDRA	550F, ACE 600, E-TEC 600	REV-XU
SKANDIC® WT	ACE 600, E-TEC 600	REV-XU

2012

MX Z	550F, 600, ACE 600, E-TEC 600, E-TEC 800R, 600RS	REV-XP
MX Z	1200	REV-XR
RENEGADE	550F, ACE 600, E-TEC 600, E-TEC 800R	REV-XP
RENEGADE	1200	REV-XR
GSX LE	E-TEC 600	REV-XP
GSX SE	1200, E-TEC 600, E-TEC 800R	REV-XR
GRAND TOURING	1200, E-TEC 600	REV-XR
GRAND TOURING	550F, ACE 600, 600	REV-XP
SUMMIT	600, E-TEC 600, 800 POWERTEK, E-TEC 800R	REV-XP
FREERIDE	E-TEC 800R	REV-XP
EXPEDITION	E-TEC 600, 1200	REV-XU
EXPEDITION	550F, ACE 600	REV-XP
TUNDRA	550F, ACE 600, E-TEC 600	REV-XU
SKANDIC	550F, ACE 600, E-TEC 600	REV-XU

2013

MX Z X-RS™	E-TEC 600, E-TEC 800R, 600RS	REV-XP
MX Z X®	E-TEC 600, E-TEC 800R	REV-XS™
MX Z X	1200	REV-XR
MX Z TNT™	E-TEC 800R	REV-XS
MX Z TNT	E-TEC 600	REV-XP
MX Z TNT	1200	REV-XR
MX Z SPORT	550F, ACE 600, 600	REV-XP
RENEGADE X®	E-TEC 600, E-TEC 800R	REV-XS
RENEGADE X	1200	REV-XR
RENEGADE BACKCOUNTRY™ X®	E-TEC 600, E-TEC 800R	REV-XS
RENEGADE ADRENALINE	E-TEC 600, E-TEC 800R	REV-XP
RENEGADE ADRENALINE	1200	REV-XR
RENEGADE BACKCOUNTRY	E-TEC 600, E-TEC 800R	REV-XP
RENEGADE SPORT	550F, ACE 600	REV-XP
GSX LE	E-TEC 600	REV-XP
GSX SE	1200, E-TEC 600, E-TEC 800R	REV-XR
GRAND TOURING	1200, E-TEC 600	REV-XR
GRAND TOURING	550F, ACE 600, 600	REV-XP
SUMMIT	E-TEC 800R	REV-XM™
SUMMIT	600, E-TEC 600, 800R POWERTEK	REV-XP
FREERIDE	E-TEC 800R	REV-XP
EXPEDITION	E-TEC 600, 1200	REV-XU
EXPEDITION	550F, ACE 600	REV-XP
TUNDRA	550F, ACE 600, E-TEC 600	REV-XU
SKANDIC	550F, ACE 600, E-TEC 600	REV-XU



REV-XS



REV-XS



REV-XS



REV-XU Expedition



REV-XS



REV-XM



REV-XU Tundra

2014

MODEL	ENGINE	PLATFORM
MX Z X-RS, X	E-TEC 600, E-TEC 800R	REV-XS
MX Z X	1200	REV-XR
MX Z TNT	E-TEC 600, E-TEC 800R, ACE 900	REV-XS
MX Z TNT	1200	REV-XR
MX Z SPORT	550F, ACE 600, 600	REV-XP
RENEGADE X, ADRENALINE	E-TEC 600, E-TEC 800R, ACE 900	REV-XS
RENEGADE X, ADRENALINE	1200	REV-XR
RENEGADE BACKCOUNTRY X	E-TEC 600, E-TEC 800R	REV-XS
RENEGADE BACKCOUNTRY	E-TEC 600, E-TEC 800R	REV-XS
RENEGADE SPORT	550F, ACE 600	REV-XP
GSX LE	E-TEC 600, ACE 900	REV-XS
GSX SE	1200, E-TEC 600, E-TEC 800R	REV-XR
GRAND TOURING	1200, E-TEC 600	REV-XR
GRAND TOURING	550F, ACE 600, 600	REV-XP
SUMMIT	E-TEC 800R, E-TEC 600	REV-XM
SUMMIT	600, 800R POWERTEK	REV-XP
FREERIDE	E-TEC 800R	REV-XM
EXPEDITION	E-TEC 600, 1200	REV-XU
EXPEDITION	550F, ACE 600	REV-XP
EXPEDITION	ACE 900	REV-XS
TUNDRA	550F, ACE 600, E-TEC 600	REV-XU
SKANDIC	550F, ACE 600, E-TEC 600	REV-XU



p. 124



p. 142



p. 133



p. 143

p. 137

2014 TOP ACCESSORIES

MODEL	PLATFORM	TOP ACCESSORIES	
MX Z	• REV-XS	<ul style="list-style-type: none"> • Skid Plate • Medium Windshield • Low Windshield • LinQ Tunnel Bag 	<ul style="list-style-type: none"> • Mirrors • Colored Body Panels • Auxiliary Led Light • Riser Block Bags • 286 Phantom Series Studs
SUMMIT FREERIDE	• REV-XM	<ul style="list-style-type: none"> • Skid Plate • LinQ Jerry Can • Medium Windshield • Vented Side Panels 	<ul style="list-style-type: none"> • Ice Scratchers • Riser Block Bags • Adjustable Riser Block • Powder Plow® • Fox Float II Shocks • Slim Tunnel Bag
RENEGADE	• REV-XR • REV-XS	<ul style="list-style-type: none"> • LinQ Jerry Can • LinQ Tunnel Bag • Sport Performance Flared Windshield • Adjustable Riser Block • Glove Box Extension 	<ul style="list-style-type: none"> • Montana GPS • Auxiliary LED Light • 1 + 1 Seat • LinQ Saddlebag
GSX	• REV-XS	<ul style="list-style-type: none"> • LinQ Tunnel Bag • LinQ Saddlebag • Glove Box Extension • Montana GPS • 1 + 1 Seat and backrest 	<ul style="list-style-type: none"> • Auxiliary LED Light • Riser Block Bag • LinQ Jerry Can
GTX GRAND TOURING	• REV-XS • REV-XP • REV-XR	<ul style="list-style-type: none"> • Tunnel Bag • Saddlebag • Auxiliary Outlet 12V 	<ul style="list-style-type: none"> • Heated Tank Bag • 2 + 1 Seat
EXPEDITION	• REV-XP • REV-XU	<ul style="list-style-type: none"> • Extra High Windshield • Cargo Center Box • Extra Bumper 	<ul style="list-style-type: none"> • Full Body Skid Plate • Riser Block Bag
SKANDIC	• REV-XU	<ul style="list-style-type: none"> • Cargo Box • Rear Rack Extension • Extra Front Bumper • Heavy Duty Rear Bumper 	<ul style="list-style-type: none"> • Mirrors • Full Body Skid Plate • Ultra High Windshield
TUNDRA	• REV-XU	<ul style="list-style-type: none"> • Full Body Skid Plate • Cargo Bag • Full Wrap-around Bumper 	<ul style="list-style-type: none"> • Heavy Duty Rear Bumper • Front Grill Enclosure • Lateral Bumpers • Adjustable Backrest



p. 144



p. 134



p. 149



p. 128



p. 129



p. 139



p. 125

SKI-DOO.COM/**BUILD**

The complete “**BUILD YOUR SLED EXPERIENCE**”
with a fully customization feature:

INSTANTLY VIEW YOUR DREAM SLED AS YOU BUILD IT.



CUSTOMIZE YOUR MX Z TNT



OPTION 1

Your monthly payment for 60 months: **\$10.67**



OPTION 2

Your monthly payment for 60 months: **\$16.89**

01 LinQ PREMIUM TUNNEL BAG - SHORT 10 + 3L \$119.99

02 FULL BODY SKID PLATE \$119.99

03 AUXILIARY LED LIGHT \$299.99

OPTION 1 ACCESSORIES COST: \$539.97

04 RISER BLOCK BAG - SHORT 3L \$79.99

05 SPORT PERFORMANCE FLARED WINDSHIELD - MEDIUM \$119.99

06 CHASSIS REINFORCEMENT KIT \$64.99

07 GLOVEBOX LINER \$49.99

OPTION 1 + OPTION 2 ACCESSORIES COST: \$854.93

In the U.S.A. products are distributed by BRP US Inc. In Canada products are distributed by Bombardier Recreational Products Inc. ® are registered trademarks and ™ and the BRP logo are trademarks of Bombardier Recreational Products or its affiliates. BRP reserves the right, at any time, to discontinue or change specifications, prices, designs, features, models, or equipment without incurring any obligations. Prices are based on Manufacturer Suggested Retail Price. Dealers may sell for a different price. Taxes not included. Prices and payments are estimated only (Based on a financing rate of 6.9% for 60 months). They do not include the vehicle, pre-delivery inspection, freight, taxes, title and registration fees. Your actual purchase price may be different due to rebates, promotions, fees and credit qualifications. This is not an offer of direct financing, you may not be able to finance your accessories at the price entered. Please consult your dealer for details. ©2013 Bombardier Recreational Products Inc. (BRP). All rights reserved. Printed in Canada.



CUSTOMIZE YOUR GSX LE



OPTION 1

Your monthly payment for 60 months: **\$21.33**

01 1+1 COMPLETE SEAT SYSTEM \$749.99

02 ULTRA HIGH WINDSHIELD \$179.99

03 1+1 BACKREST BAG \$149.99

OPTION 1 ACCESSORIES COST: \$1,079.97

04 LinQ SADDLEBAG \$229.99

05 GLOVEBOX EXTENSION \$69.99

06 MONTANA GPS & MOUNT KIT \$649.99

07 AUXILIARY LED LIGHT \$299.99

08 XC BUMPER \$219.99

09 WINDSHIELD-MOUNT MIRRORS \$39.99



OPTION 2

Your monthly payment for 60 months: **\$51.16**

OPTION 1 + OPTION 2 ACCESSORIES COST: \$2,589.91

In the U.S.A. products are distributed by BRP US Inc. In Canada products are distributed by Bombardier Recreational Products Inc. © are registered trademarks and ™ and the BRP logo are trademarks of Bombardier Recreational Products or its affiliates. BRP reserves the right, at any time, to discontinue or change specifications, prices, designs, features, models, or equipment without incurring any obligations. Prices are based on Manufacturer Suggested Retail Price. Dealers may sell for a different price. Taxes not included. Prices and payments are estimated only (Based on a financing rate of 6.9% for 60 months). They do not include the vehicle, pre-delivery inspection, freight, taxes, title and registration fees. Your actual purchase price may be different due to rebates, promotions, fees and credit qualifications. This is not an offer of direct financing, you may not be able to finance your accessories at the price entered. Please consult your dealer for details. ©2013 Bombardier Recreational Products Inc. (BRP). All rights reserved. Printed in Canada.

CUSTOMIZE YOUR FREERIDE



Your monthly payment for 60 months: **\$8.20**

Your monthly payment for 60 months: **\$15.90**

01 VENT KIT FOR SIDE PANELS \$164.99

02 ADJUSTABLE RISER \$149.99

03 EXTREME SKID PLATE \$99.99

OPTION 1 ACCESSORIES COST: \$414.97

04 SNOWFLAP \$89.99

05 REAR FOOTREST KIT \$69.99

06 PREFILTER GRILL KIT \$99.99

07 SLIM TUNNEL BAG \$129.99

OPTION 1 + OPTION 2 ACCESSORIES COST: \$804.93

In the U.S.A. products are distributed by BRP US Inc. In Canada products are distributed by Bombardier Recreational Products Inc. © are registered trademarks and ™ and the BRP logo are trademarks of Bombardier Recreational Products or its affiliates. BRP reserves the right, at any time, to discontinue or change specifications, prices, designs, features, models, or equipment without incurring any obligations. Prices are based on Manufacturer Suggested Retail Price. Dealers may sell for a different price. Taxes not included. Prices and payments are estimated only (Based on a financing rate of 6.9% for 60 months). They do not include the vehicle, pre-delivery inspection, freight, taxes, title and registration fees. Your actual purchase price may be different due to rebates, promotions, fees and credit qualifications. This is not an offer of direct financing, you may not be able to finance your accessories at the price entered. Please consult your dealer for details. ©2013 Bombardier Recreational Products Inc. (BRP). All rights reserved. Printed in Canada.



CUSTOMIZE YOUR RENEGADE BACKCOUNTRY



03 *(not shown)

OPTION 1

Your monthly payment for 60 months: **\$6.32**

01 LINQ FUEL CADDY	\$124.99
02 ADJUSTABLE RISER	\$149.99
03 OIL SUPPORT CADDY/ GOGGLE BAG	\$44.99

OPTION 1 ACCESSORIES COST: \$319.97



OPTION 2

Your monthly payment for 60 months: **\$30.81**

04 GLOVEBOX EXTENSION	\$69.99
05 MONTANA GPS & MOUNT KIT	\$649.99
06 AUXILIARY LED LIGHT	\$299.99
07 PREFILTER GRILL KIT	\$99.99
08 FULL BODY SKID PLATE	\$119.99

OPTION 1 + OPTION 2 ACCESSORIES COST: \$1,559.92

In the U.S.A. products are distributed by BRP US Inc. In Canada products are distributed by Bombardier Recreational Products Inc. © are registered trademarks and ™ and the BRP logo are trademarks of Bombardier Recreational Products or its affiliates. BRP reserves the right, at any time, to discontinue or change specifications, prices, designs, features, models, or equipment without incurring any obligations. Prices are based on Manufacturer Suggested Retail Price. Dealers may sell for a different price. Taxes not included. Prices and payments are estimated only (Based on a financing rate of 6.9% for 60 months). They do not include the vehicle, pre-delivery inspection, freight, taxes, title and registration fees. Your actual purchase price may be different due to rebates, promotions, fees and credit qualifications. This is not an offer of direct financing, you may not be able to finance your accessories at the price entered. Please consult your dealer for details. ©2013 Bombardier Recreational Products Inc. (BRP). All rights reserved. Printed in Canada.

*Installs on top of the CVT cooling system.

EXCLUSIVE SLED WRAP KITS



TRANSITION



RISE ABOVE



GUARDIAN



PLAID OUT



COLOR BURST



CUBIC

- These Ski-Doo exclusive sled wraps are the product of choice for the avid Ski-Doo snowmobiler.
- Whether you want to make your snowmobile stand out from the crowd or give it a facelift, this is the product for you.
- Customizing kits also available for more color logo options.
- The wraps are composed of 4 mm engineer grade vinyl with an aggressive, permanent pressure-sensitive adhesive, subsequently overlaid with an 8 mm UV protective laminate that will hold up to the various rigors of snowmobiling.
- The digital print designs will not fade in the sunlight and the sled wraps are designed to bond to "hard-to-stick" surfaces as well as low energy surfaces.

If you want your sled to be as unique as your signature, visit: www.scsskidoowraps.com to see our full lineup of wrap kits.



Product Authorized
Licensed Product

CUSTOM ACCESSORIES

Turn a Ski-Doo snowmobile into YOUR Ski-Doo snowmobile with accessories designed, engineered and manufactured by the same people that built the sled.



VENT KIT FOR SIDE PANELS

- Fast air- evacuating overmolded prefilter vents.
- Easy do-it-yourself installation onto premarked production side panels.
- 1 3/4" holesaw required.
- Use in conjunction with your stock vehicle panels.
- For racing applications only.



REV-XM

REV-XS

- Kit includes vents for both side panels (24X).
- Foam with foil included.

REV-XM side panels
860200609 • Black
\$164.99

- Kit includes vents for both side panels (13X).
- Foam with foil included.

REV-XS side panels
860200750 • Black
\$99.99



THE INSIDE OF ALL REV-XM AND REV-XS SIDE PANELS ARE PRE-MARKED FOR OPTIMAL PLACEMENT OF THE VENTS.



VENT KIT

- Assortment of replacement or additional vents (7x) with hardware.
- Can be installed on most body panels with relatively flat surface and 2.5 to 3.2 mm thickness.

All models
860200684
\$49.99

VENTED SIDE PANEL KIT *

- Fully integrated vented REV-XP side panels.
- Overmolded prefilter snap in vents.
- Strategically placed to maximize underhood venting.
- Side panels sold as a full set with venting kit preinstalled.
- Bottom panel and right side panel grill not included.
- For racing applications only.
- See your dealers for more details.

REV-XP - Left & Right
860200313 • Black
860200325 • Yellow
860200326 • Blue
860200327 • White
\$449.99



VENT KIT

- Use as replacement part solution/ alternative to vented side panel kit.
- Assortment of full and half vent kits.
- Pack of 6 (4 full, 2 half).

REV-XP - Left & Right
860200328 • Black
\$39.99

*Foam, warning labels are sold separately.



PREFILTER GRILL KIT

- Fully integrated overmolded prefilter snap-in grills.
- Repel and prevent snow from entering bottom pan and hood openings.
- Kit includes easily removable bottom pan grill, lower pan cover plugs, hood grill, and air-box pop-off valve prefilter.

REV-XM, REV-XS
860200610 • Black
\$99.99

REPLACEMENT FRONT PREFILTER

- Bottom pan grill, replacement part.
- REV-XM, REV-XS**
517305029 • Black
\$74.99



REPLACEMENT DECAL KIT FOR VENTED SIDE PANELS

- Complete set includes left and right decals.
- REV-XP**
860200661
\$24.99



REWIND COVER PLATE

- Plastic cover to hide rewind handle access hole in side panels on vehicle without rewind handle.

REV-XP
860200548 • Black
\$29.99

PREFILTER GRILL KIT

- Repels and prevents snow from entering the hood.

REV-XP (For use with regular hood)
860200056
\$69.99



LIGHTWEIGHT HOOD

- 2 mm polycarbonate hood provides an additional 1lb (0.45 kg) saving over stock.
- Custom graphics with glossy finish allows for a great look and easy cleaning.
- Includes silencing foam.

REV-XP

860200045 • Clear (For racing use only)

\$254.99

860200063 • Black with Rocket Bee

860200064 • Yellow X Package

\$279.99



REV-XP



REV-XR

HOOD*

- Customize your sled with the color of your choice.

REV-XP

517304402 • Blue

517304403 • Orange

517304529 • Yellow

517304530 • Black

517304531 • White

517304535 • Royal Red

\$119.99

REV-XR

517303739 • Black

517304037 • Royal Red

517304374 • White

\$134.99



REV-XP

BODY PANELS*

- Interchangeable color-ranging side panels.
- Easy installation for personalizing your sled in minutes.
- Left & Right.
- See your dealer for more details.

REV-XP

517303937 • Grey - RH

517303934 • Grey - LH

517304100 • Loyal Blue - RH

517304099 • Loyal Blue - LH

517303609 • Yellow - RH

517303610 • Yellow - LH

517304422 • White - RH

517304426 • White - LH

\$129.99

517304029 • Black - RH

517304030 • Black - LH

\$104.99

REV-XR

517304046 • Royal Red - RH

517304054 • Royal Red - LH

517304368 • White - RH

517304355 • White - LH


517303753 • Black - LH

517304006 • Black - RH

\$149.99



REV-XR

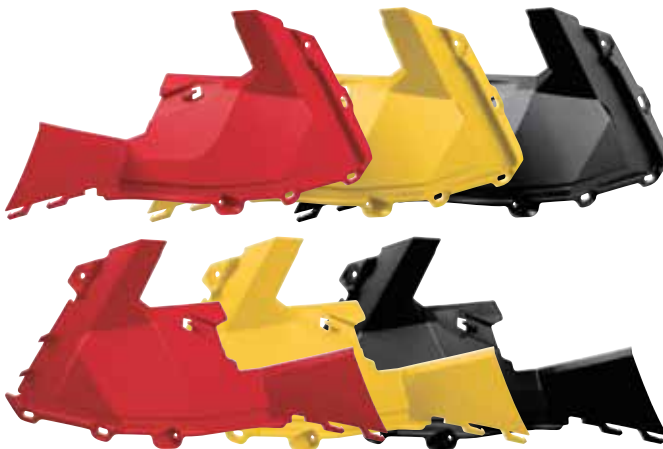

BOTTOM PANELS

- Left & Right.

REV-XP

517303671 • Black - RH

517303673 • Black - LH

517304420 • Red - RH

517304427 • Red - LH

517304424 • Yellow - RH

517304431 • Yellow - LH

\$15.99



BOTTOM PAN*

- See your dealer for more details.

REV-XP

502006971 • Black

502007052 • Yellow

502007053 • White

502007076 • Blue

\$69.99

*Foam, warning labels and decals are sold separately.

Note: To find out the specific part for your snowmobile, please refer to the platform chart on page 110, 111 and 112 or ask your dealer.

CENTER CONSOLE*

• Combine the console with hood to customize your sled.

REV-XP
 517303778 - Yellow
 517303922 - Black
 517304033 - Regal Red
 517304411 - Orange
 517304503 - Blue

REV-XP Fan
 517304404 - White
 517304409 - Yellow

REV-XR
 517303741 - Black
 517304041 - Yellow
 517304042 - Royal Red
 517304115 - White
 517304381 - White
\$129.99

Note: Will not fit on E-TEC 800R models, which use a different center console shape. To find out the specific part for your snowmobile, please refer to your dealer.



FRONT BOTTOM PAN COVER

• Customizes your sled with the color of your choice.

REV-XP
 502007068 - Black
 502007074 - Loyal Blue
 502007075 - Yellow
\$36.99

REV-XR
 502006898 - Black
 502006951 - Regal Red
 502006953 - Silver
 502007050 - White
\$79.99



LATERAL SHELL

• Personalize your sled with different colors.

REV-XP Fan
 502006914 - Black - RH
 502007051 - Black - LH

REV-XP, except Fan
 502006831 - Black - RH
 502006832 - Black - LH
 502007119 - Yellow - RH
 502007120 - Yellow - LH
\$39.99



INDICATOR SUPPORT

• Customize your sled with the color of your choice.

REV-XP
 517304575 - Black
 517304579 - White

REV-XP Fan
 517304578 - Black
REV-XP MX Z X-RS
 517304580 - White
\$36.99



FRONT GRILL ENCLOSURE

• Prevents snow intrusion in all riding conditions.

REV-XU Tundra, except ACE™ engine
 860200398 - Black
\$14.99



SHOCK PROTECTORS

• Protect your shocks against tough weather conditions.
 • Easy installation.
 • Sold in pairs.
 • Color-matched nylon protectors.

280000327 - Bee
\$24.99
 860200338 - White
 861775500 - Yellow
 861775600 - Black
 861778000 - Red
 861781000 - Blue
 861785300 - Titanium
\$19.99

*Foam, warning labels and decals are sold separately.

Note: To find out the specific part for your snowmobile, please refer to the platform chart on page 110, 111 and 112 or ask your dealer.



THESE ARE THE ONLY INJECTION-MOLDED SKID PLATES IN SNOWMOBILING FOR ADDED STRENGTH, SMOOTH BOTTOM SURFACE AND PERFECT FIT.

REV-XM/REV-XS

HIGH PERFORMANCE SKID PLATES

- Injection molded process provides smooth surface, better definition, a perfect fit and easier installation.
- For assertive riders who demand the utmost protection.
- Smooth bottom surface to reduce drag.
- 4mm thick high impact resistance polypropylene for durability.
- Extra wide, covers vital primary clutch chaincase and front heat exchanger components to provide maximum underbelly protection.
- Attachment kit included.
- Premarked chassis to match the OEM skid plate for easy installation.
- Pre-marked for oil change (cut-out on 4-stroke models).



FULL BODY SKID PLATE

- Wide shape for full protection and maximum flotation.

REV-XM, REV-XS

- 860200605 • Black
- 860200739 • Yellow
- 860200740 • Orange
- 860201034 • Lava Red
- 860201035 • White

\$119.99



EXTREME SKID PLATE

- Relieved A-arms that reduce chance of snow buildup.

REV-XM, REV-XS

- 860200606 • Black
- 860200741 • Yellow
- 860200742 • Orange
- 860201032 • Lava Red
- 860201033 • White

\$99.99

REV-XU EXPEDITION



FULL BODY SKID PLATE

- Provides additional underbelly protection in off trail conditions.
- Made of high molecular weight polyethylene.
- Helps glide on snow and prevents snow from sticking to the frame.
- Also suitable for A-Arms with protectors.
- Standard on REV-XU Expedition SE.

REV-XU Expedition SE/LE 2009 and up

860200563 • Black

\$149.99



REAR SKID PLATE

- Extra underbelly protection.
- Protects components such as brakes and gearbox from impacts.
- High molecular weight polyethylene.
- Can be combined with full body skid plate 860200563 for maximum protection.

REV-XU Expedition SE/LE

860201001 • Black

\$129.99



FULL BODY SKID PLATE

- High molecular weight polyethylene embossed with Ski-Doo logo.
- For assertive riders who demand the utmost protection.
- Attachment kit included.
- Premarked chassis to match the OEM skid plate for easy installation.

REV-XP

860200203 • White
 860200204 • Loyal Blue
 860200287 • Black
 860200288 • Yellow
 860200558 • Viper Red
 \$99.99

REV-XR

860200167 • Black
 860200190 • Yellow
 \$99.99



EXTREME SKID PLATE

- High molecular weight polyethylene embossed with Ski-Doo logo.
- Bulk head wrap industry-first, extended length covers front exchanger, extra width covers vital primary clutch and chaincase, provides maximum underbelly protection.
- Relieved A-Arms reduce chance of snow buildup.

REV-XP

860200302 • Black
 860200329 • Yellow
 860200330 • White
 \$129.99

860200331 • Blue
 860200445 • Red



RACING SKID PLATE

- High molecular weight polypropylene embossed with Ski-Doo logo.
- Bulk head wrap industry-first, extended length covers front exchanger, provides maximum lightweight underbelly protection.
- Relieved A-Arms reduce chance of snow buildup.

REV-XP

*860200303 • Black
 *860200334 • White
 \$119.99

*While supplies last.

• High molecular weight polyethylene.

• Provides maximum underbelly protection in off trail conditions.

• Helps glide on snow and prevents snow from sticking to the frame.



FULL BODY SKID PLATE

REV-XU Tundra
 860200601 • Black
 \$149.99



SKID PLATE

REV-XU Tundra
 860200410 • Black
 \$64.99



FULL BODY SKID PLATE

REV-XU WT
 860200702 • Black
 \$169.99

REV-XU SWT
 860200713 • Black
 \$209.99



RACING FOOTREST SKID PLATES

- Allows floor boards to slide across bumps easily.

REV-XP RS
 860200409 • Black
 \$39.99



FRAME UNDERBELLY BRACE KIT / S-MODULE REINFORCEMENT KIT

- S module reinforcement, standard on 600 RS racing sled.
- Compatible with Ski-Doo skid plates.

REV-XM, REV-XS, REV-XP, REV-XR, REV-XU Expedition
 860200905 • Black
 \$34.99

SKID PLATE FASTENER KIT

- (Not illustrated)
- Made to fit and hold your skid plate securely in place.

REV-XP, REV-XR, REV, RT, REV-XS, REV-XM
 860200808 • Skid rivet
 \$9.99



REV-XS

REV-XM

SNOWFLAP

- Customize your sled.
- Hardware included.

REV-XM

860200688 • Yellow/Black
 860200689 • White/Black
 860201038 • Lava Red / White
\$89.99

REV-XS 120"

860200925 • Yellow/Black
 860200926 • White/Black

REV-XS 137"

860200764 • Yellow/Black
 860200765 • White/Black



860200107

860200106

SNOWFLAP

REV-XP, REV-XR, except GTX, Grand Touring,
 REV-XU Expedition 2009 and up

860200106 • Black/Yellow
 860200107 • Yellow/Black
 860200466 • Black//Red
 860200467 • Black/Grey
\$69.99



REV-XP



REV-XR

KNEE PAD KIT

- 3/8" (9.5 mm) vinyl-coated polyethylene padding softens contact with rear panels.

REV-XP

860200599 • Yellow
 860200598 • Black
\$49.99

REV-XR

860200179 • Black
\$54.99



CONSOLE PROTECTOR

- Lower console protector positioned directly in front of seat to provide extra padding.
- Standard equipment on GTX SE models.

REV-XR, REV-XU Tundra
 860200310 • Black

\$44.99



STARTER ROPE LINER PROTECTOR

- Easy-install side panel protector prevents starter rope burn while customizing the look of your vehicle.

REV-XP

860200183 • Black
\$20.99

REWIND HANDLE

- Lightweight handle ideal for customizing your sled.

REV-XM, REV XS, REV-XP,

REV-XR, REV-XU Tundra
 512060136 • Black
 512060325 • Yellow
\$10.99



KNEE AIR DEFLECTORS

- Redirect the wind away from your knees while adding a finishing touch to your sled.
- Sold in pairs.

REV-XP

860200087 • Black
 860200088 • Yellow
\$19.99



SIDE PANEL DEFLECTOR KIT

- Integrated-look additional wind protection.
- Sold in pairs.

REV-XR

860200201 • Black
\$69.99



ADJUSTABLE TOE HOLD KIT

• Kit provides easy adjustment to the toe hold to match your riding style.

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM, except 600 ACE & 900 ACE

860200743 • Aluminum

\$29.99

860200744 • Black

\$34.99

FRONT FOOTREST

• A must for aggressive riders.
• Sloped plate provides a relaxed ankle position during long rides.

REV-XP, REV-XR, REV-XU Tundra

860200669 • Black

\$79.99

860200314 • Aluminum

\$59.99



REV-XS, REV-XM,
860200906 • Black

\$79.99



860200906



REAR FOOTREST KIT

• Provides additional boot grip at the rear of the tunnel when climbing.

REV-XU Tundra, REV-XP Summit except Freeride

860200081 • Aluminum

\$49.99

860200670 • Black

\$54.99



REV-XM
860200889 • Black

\$69.99



REV-XM



RADIATOR COVER GRIP PLATE

• Lightweight rear tunnel top grip plate provides maximum boot traction in extreme riding conditions.

146" & 154" vehicles

860200382

\$49.99



SUMMIT RAIL REINFORCEMENT

• Increases rail strength and longevity.

REV-XP 2008-2012

860200163

\$59.99

REV-XP & REV-XM 2013 and up

860201005



TUNNEL GRIP PLATES

• Lightweight plastic grip plates for extra side boot grip in rough riding conditions.
• Developed for the 600 RS.
• Sold in pairs with complete hardware.

REV-XP, REV-XR, REV-XS, REV-XM, REV-XU Tundra

860200164

\$29.99



CHASSIS REINFORCEMENT KIT

• Provides additional reinforcement to your tunnel along with improved grip.
• Easy installation.

REV-XS, REV-XP, REV-XR, REV-XU Tundra

860200520 • Loyal Blue

860200521 • Viper Red

860200814 • Black

860200815 • Yellow

860200816 • White

860201030 • Lava Red

860201031 • Orange

\$64.99

860200813 • Aluminum

\$54.99

ADJUSTABLE RISERS

- Mountain and backcountry sleds require a wide range of riding positions to maximize your experience.
- Handlebar positioning is key.
- The fast way to modify your handlebar height adapting to changing riding conditions.
- Utilize the lower position for trail / sit down riding / extend to maximum height in seconds to convert to stand up riding.
- Works in conjunction with all stock cables and wiring.
- Easily and quickly adjustable without tools.



130 mm



205 mm

185 mm



250 mm



ADJUSTABLE RISER FOR STRAIGHT HANDLEBAR

• Adjustable length: 130 mm to 205 mm high.

Renegade Backcountry, Summit SP - Vehicles with 165 mm or 205 mm riserblock
860200634 - Black / Aluminum
\$149.99



ADJUSTABLE RISER FOR TAPERED HANDLEBAR


• Adjustable length: 185 mm to 250 mm high.

Summit SP - Vehicles with 205 mm riserblock
860200972 - Black / Aluminum
\$149.99

• Adjustable length: 115 mm to 175 mm high.
Summit X & Freeride - Vehicles with 130 mm riserblock
860200973 - Black / Aluminum
\$159.99



WATCH THE FULL ADJUSTABLE RISERS VIDEO: STORE.SKI-DOO.COM/VIDEO

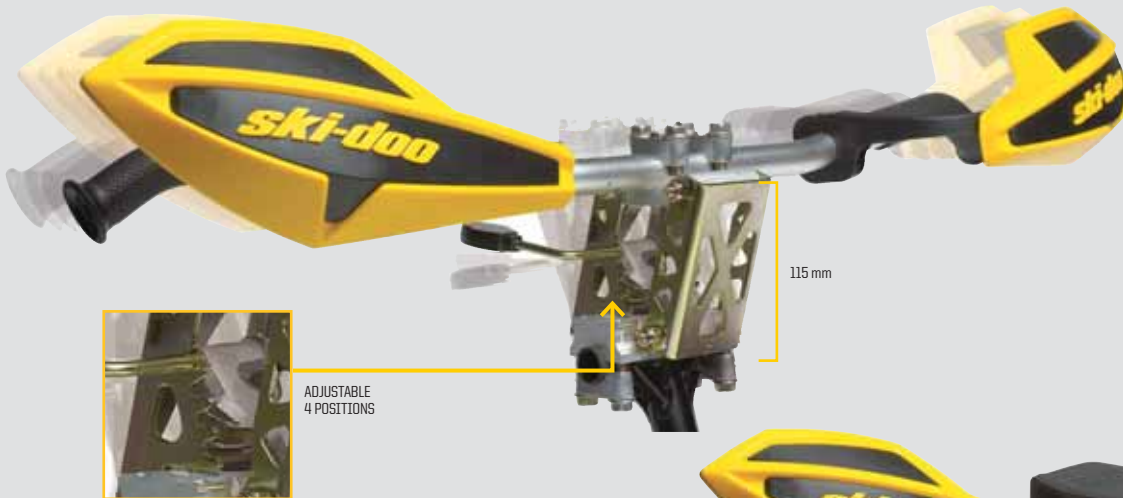

115 mm

ADJUSTABLE 4 POSITIONS

4-POSITION ADJUSTABLE HANDLEBAR RISER

- On-the-go adjustability for adapting handlebar positioning to riding conditions.
- Installs easily by replacing the stock riser block.
- Includes riser cover.

REV-XP (MX Z, GTX, GSX, Renegade) except E-TEC, REV-XR, REV-XU Tundra (Standard)
860200199 - 115 mm
\$204.99



INCLUDES RISER COVER



BRP ACCESSORIES ARE DEVELOPED ALONG WITH THE SNOWMOBILES TO ASSURE QUALITY, FIT AND PERFORMANCE.



EXTENSION KIT FOR STRAIGHT HANDLEBARS

- Adjustable handlebar extension kit to fit all riding styles.
- Works with all stock wiring and cables.

REV-XM, REV-XP Summit
860200821 • 205 mm
860200822 • 250 mm

\$59.99

REV-XS, REV-XR, REV-XP, REV-XU Tundra

860200819 • MX Z 115 mm

\$49.99

860200820 • MX Z 160 mm

\$59.99



EXTENSION KIT FOR TAPERED HANDLEBARS

- 175 mm extension.
- 45 mm higher than stock extension.
- Works with all stock wiring and cables (except Freeride 2011).

REV-XP Freeride 2011* and up, Summit X 2012 and up
860200758 • Black

\$69.99

860200818 • Aluminum

\$59.99

*Brake line (507032535) required for Freeride 2011 only. (To be ordered separately).



HANDLEBAR AIR DEFLECTOR EXTENSION KIT

- Semi-rigid manufacturing and design.
- Delivers additional hand protection from the elements.
- Can be installed and removed in seconds.
- Soft shell construction for unimpeded riding, yet strong enough to avoid collapsing at high speeds.
- Works in conjunction with 2011-2014 handlebar air deflectors.

Vehicles with 2011-2014 handlebar air deflectors

860200435 • Black

\$64.99



HANDLEBAR MUFFS

- Ultra warm handlebar muffs with fleece liner.
- Designed for extreme cold conditions.
- Can be used on handlebars with or without air deflectors and mirrors.
- Inner skeleton allows muff to keep its shape and gives more space for hand movement.
- Transparent section allows visibility and easy manipulation of control switches.

Does not fit GTX, Grand Touring

860200625 • Black

\$54.99



J-HOOKS

- Warmer than steel and provides better handling.
- Comes in 3 styles in 45° & 90°.

45° Short

415129516 • Yellow

415129520 • Black

90° Long

415129517 • Yellow

415129519 • Black

90° Short

415129518 • Black

\$20.99

90° Ultra Long

415129521 • Black

415129523 • Yellow

90° Ultra Short

415129522 • Black

415129524 • Yellow



HANDLEBAR AIR DEFLECTORS

- High performance.
- More rigidity, better wind protection and better visibility when used with optional mirrors.
- Made of resistant polypropylene.
- Compatible with low and extra low windshield.
- Sold in pairs.

REV-XP, REV-XS, REV-XM except vehicles with tapered handlebars, REV-XU Tundra, REV-XR

860200709 • Viper Red

860201036 • Lava Red

860200710 • Yellow

860201037 • Orange

860200711 • White

860200712 • Black

\$69.99





SUPERCLAMP

- Secure your sled with a simple pull of the handle.
- Durable composite construction.
- According to certain state or provincial laws, the use of both Superclamps may be required.



SUPERCLAMPS ARE THE FASTEST WAY TO SECURE YOUR SLED TO YOUR DECK.



SUPERCLAMP II

- Innovative trailer tie-down system.
- Silicone rubber pads to protect your skis.
- Front and middle handles allowing easy manoeuvrability.
- Pad lock compatible, becomes a theft deterrent.
- Tension adjustment knob, fits all snowmobiles.

860200950
\$199.99



SUPERCLAMP REAR

- (Not illustrated).
- Snowmobile tie-down system for rail.
- Silicone rubber pads to protect snowmobile suspension skid.
- Tension adjustment knob – fits all snowmobiles.
- Screw style deck hook comes standard with all Superclamps.
- Pad lock compatible, becomes a theft deterrent.

860200993
\$134.99



T-STYLE DECK HOOK

- (Not illustrated).
 - For trailers with a channel in the floor.
- 860200995**
\$16.99



SCREW STYLE DECK HOOK


- (Not illustrated).
 - Most common.
 - Comes standard with all Superclamps.
 - Screws into the existing hole where you would screw the old style bar and crank into.
- 860200994**
\$16.99



RATCHET TIE-DOWNS

- 400 lb (181 kg) safe working load.
- 1" x 10' (2.5 cm x 3 m) strap with Sea-Doo, Ski-Doo and Can-Am logos.
- Deluxe ratchet with rubber handle.
- Coated S hooks.
- Pack of 2.

860200447 • Black / Grey
\$14.99

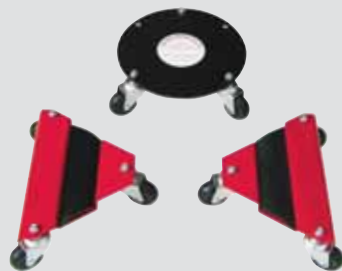

SLED SHOP WHEELS

- Non-slip rubber grips allow this steel 3-dolly system to move your sled easily throughout the garage.
- Works with both dual and single runner skis.

861002600
\$69.99



LOCKABLE VEHICLE FUEL CAP

- Lockable to protect your fuel.
 - Meets latest EPA requirements.
- 860200387 • Black**
\$39.99



SUPER-DUTY TIE-DOWN

- Heavy-duty strength, fingertip tension and quick-release handle.
- 1" (2.5 cm) wide nylon strap adjusts from 1" to 5" (0.3 m to 1.5 m).
- Hooks on both ends.

Cam Buckle
295100185 • Black
Ratchet
295100183 • Black
\$16.99



COUNTER STOOL

- Stool has classic chrome legs and seat with BRP or Ski-Doo X-Team logo.
- 415129015 • BRP**
415129292 • Ski-Doo X-Team
\$119.99



LICENSE PLATE

484800081 • Spark Plug Bee
484800227 • BRP Ski-Doo
\$11.99

**VINTAGE STICKER**

516006293 • 10" X 8"
(25 cm X 20 cm)
\$16.99

**SKI-DOO POP STICKER SERIES**

516006292 • Set of 2 decals:
10" X 8" (25 cm X 20 cm)
\$19.99

**VINTAGE STICKER SERIES**

516006294 • Set of 6 decals on two
10" X 8" (25 cm X 20 cm) sheets
\$23.99

**SKI-DOO TEAM RETRO**

516006295 • Set of 2 decals on
10" X 8" (25 cm X 20 cm) sheet
\$16.99

**SKI-DOO CARBON**

516006296 • Set of 3 decals on
10" X 8" (25 cm X 20 cm) sheet
\$16.99

**SKI-DOO PERFORMANCE**

516006297 • Set of 20 decals on two
10" X 8" (25 cm X 20 cm) sheets
\$23.99

**SKI-DOO LADIES DOTZ**

516006298 • Set of 2 decals:
11" X 6" (28 cm X 15 cm) decals
\$26.99

**SKI-DOO TECHNO X**

516006299 • Set of 2 decals:
10" X 8" (25 cm X 20 cm) decals
\$14.99

**SKI-DOO X-TEAM KIT**

516006300 • Set of 6 decals on two
10" X 8" (25 cm X 20 cm) sheets
\$23.99

**SKI-DOO SNOWCROSS GRUNGE**

516006291 • Set of 2 decals:
11" X 6" (28 cm X 15 cm) decals
\$26.99

**SKI-DOO X-TEAM BEE**

516006301 • Set of 2 decals:
11" X 6" (28 cm X 15 cm)
\$23.99

**SKI-DOO BEE**

516006302 • Set of 3 decals on
20" X 8" (50 cm X 20 cm) sheet
\$23.99

**SKI-DOO FREERIDE CAMO**

516006303 • 20" X 7"
(51 cm X 18 cm)
\$26.99

**SKI-DOO X-TEAM CAMO**

516006304 • Set of 6 decals on
two 10" X 8" (25 cm X 20 cm)
sheets
\$23.99

**SKI-DOO STOKED FOR WINTER**

516006305 • Set of 2 decals on
10" X 8" (25 cm X 20 cm) sheets
\$16.99

**SKI-DOO FREERIDE POP ART**

516006306 • Set of 6 decals
3" X 7" (8 cm X 18 cm) decals
\$26.99

**SKI-DOO FREERIDE SKULLS**

516006307 • Set of 3 decals on
10" X 8" (25 cm X 20 cm) sheet
\$16.99

THE PERFECT HEIGHT

FOR YOUR VEHICLE AND NEEDS

■ **ULTRA HIGH**

25" (63 cm)

■ **HIGH**

18" (46 cm)

■ **SPORT PERFORMANCE FLARED HIGH**

16" (41 cm)

■ **MEDIUM**

14" (35 cm)

■ **SPORT PERFORMANCE FLARED MEDIUM**

12" (30 cm)

■ **LOW**

9" (23 cm)

■ **ULTRA LOW**


6" (15 cm)

■ **WINDSHIELD SIDE DEFLECTORS**


for ultra low and low windshields (optional)

■ **WINDSHIELD SIDE DEFLECTORS**

for medium & High windshields (necessary)

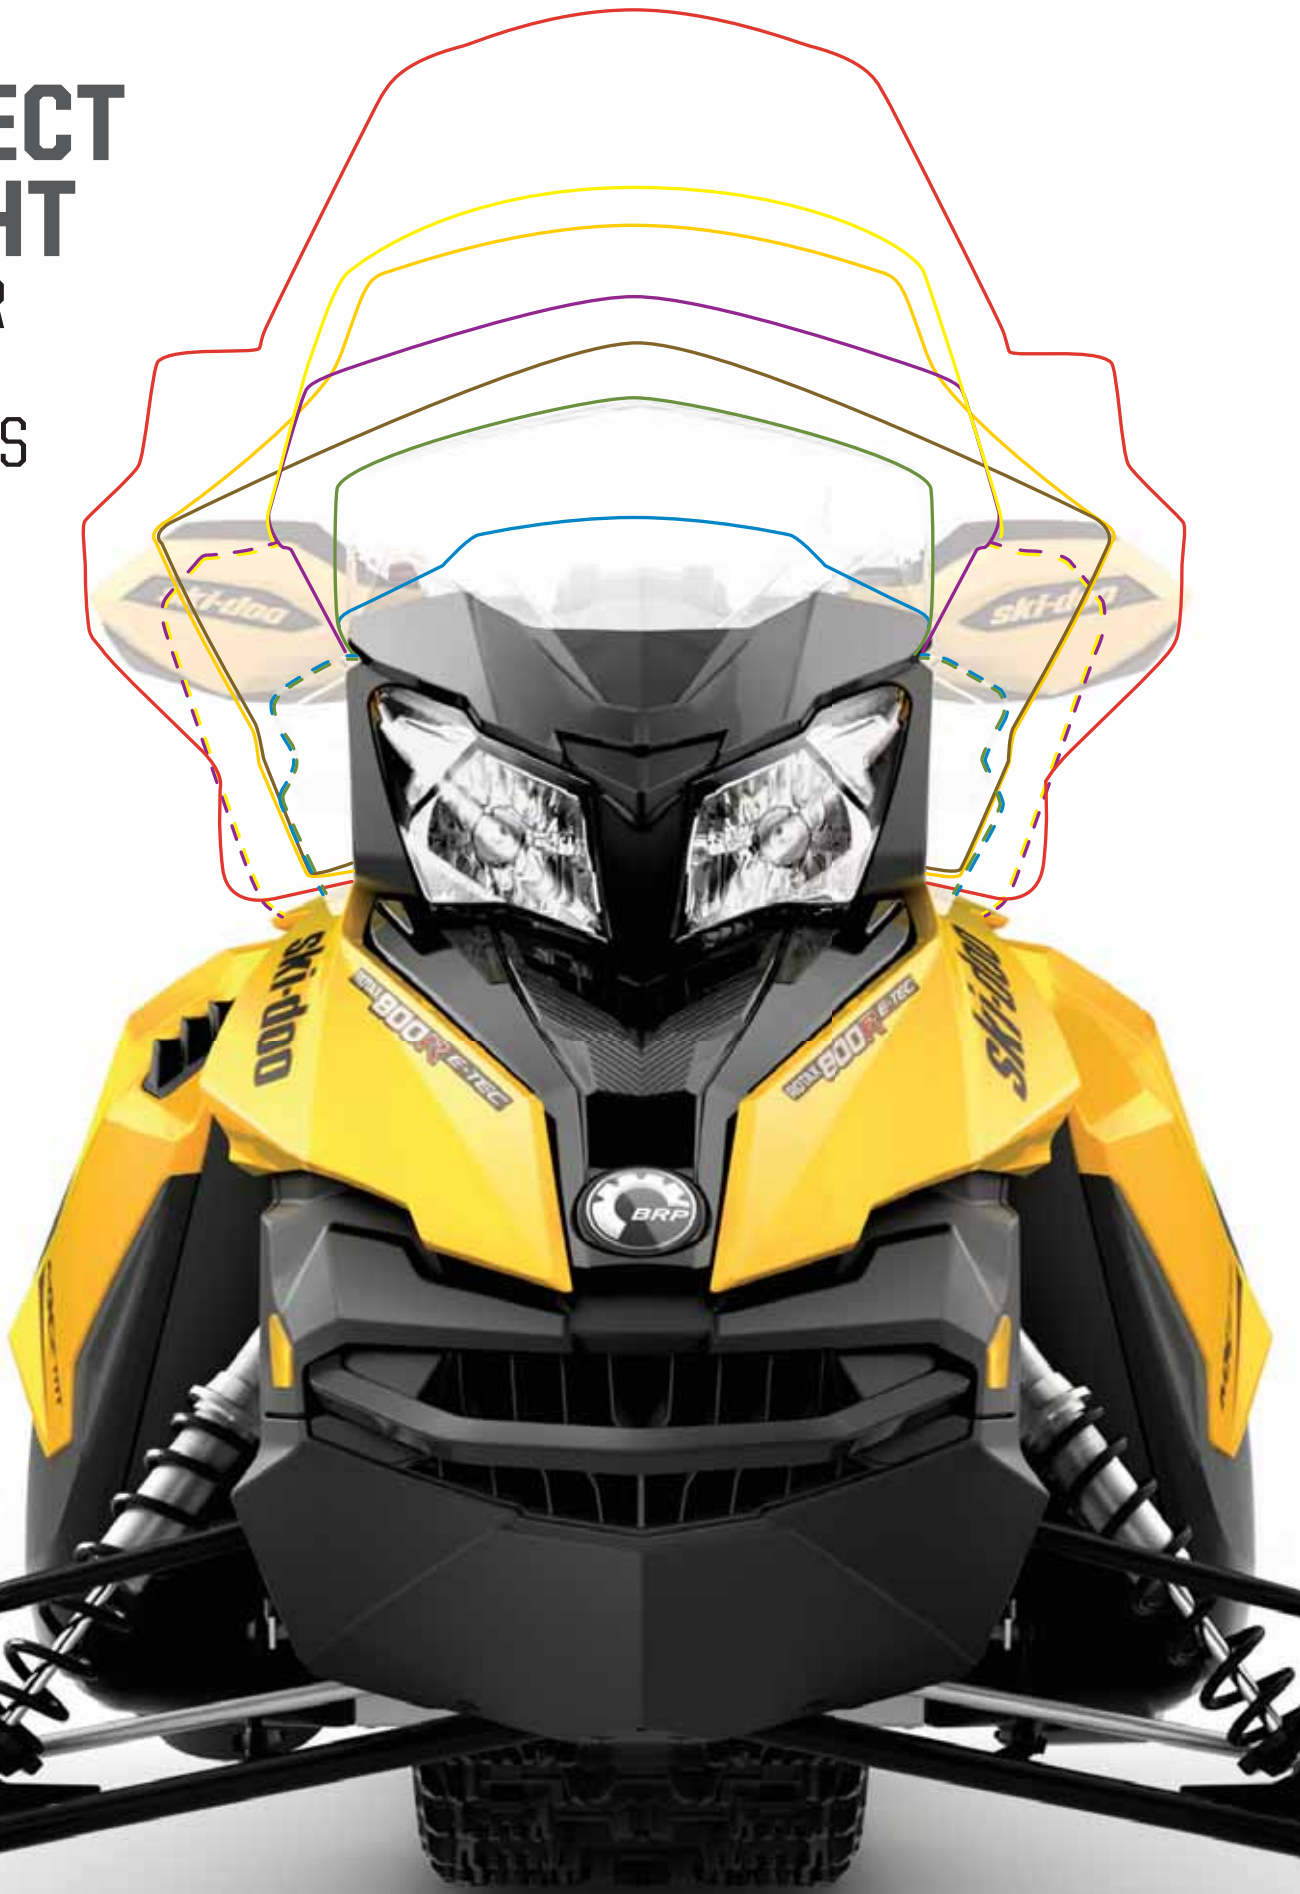

THE POWDER PLOW DIVERTS THE SNOW AWAY FROM THE CENTER OF THE VEHICLE, KEEPING THE RIDER DRIER AND INCREASING OVERALL VISIBILITY

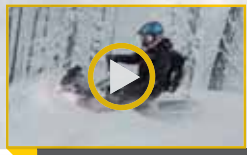

Watch the video of the POWDER PLOW FOR WINDSHIELD in action: store.ski-doo.com/video



POWDER PLOW® FOR WINDSHIELD

- Specifically designed for deep snow powder deflection.
- Deflects snow to sides instead of towards driver's face.
- Easily attaches underneath windshield support.
- Can be installed with or without REV-XM, REV-XS low and ultra low windshield.

REV-XM & REV-XS with low, ultra low or without windshield
 860200603 • Black
 \$119.99



ULTRA LOW WINDSHIELD*

• 6" (15 cm) in length.
REV-XM, REV-XS
 860200901 • Smoke
 \$89.99



MEDIUM INJECTED WINDSHIELD AND SIDE DEFLECTOR KIT

- 13.5" (34 cm) in length.
- Offers a generous amount of protection with integrated style.
- Medium side deflectors ready to receive mirrors (860200694).
- Includes medium windshield support.

REV-XM, REV-XS
 860200759 • Smoke
 \$134.99



SPORT PERFORMANCE FLARED WINDSHIELD - MEDIUM*

- 12" (31 cm) in length.
- One-piece with integrated deflectors.

REV-XM, REV-XS
 860200696 • Smoke
 \$119.99



SPORT PERFORMANCE FLARED WINDSHIELD - HIGH*

- 16" (41 cm) in length.
- One-piece with integrated deflectors.
- Top flare maximizes wind protection and redirects snow in deep powder conditions.

REV-XM, REV-XS
 860200602 • Smoke
 \$129.99



HIGH WINDSHIELD*

• 18" (46 cm) in length.
REV-XM, REV-XS
 860200928 • Smoke
 \$149.99

*Depending on your vehicle configuration, you may need corresponding windshield and side deflectors base kit to install this windshield. Ask your dealer for details.
 Note: When installing a windshield and/or side deflectors on your vehicle, make sure it does not - in any position - interfere with the operation of the steering and brake lever.




ULTRA HIGH WINDSHIELD*

Our largest sport windshield ever.

- 25" (63 cm) in length.
- One-piece with integrated deflectors.
- Maximum wind protection, for extreme cold conditions.
- Ready to receive windshield mount mirrors (860200947).

REV-XM, REV-XS
 860200782 • Clear
 \$179.99

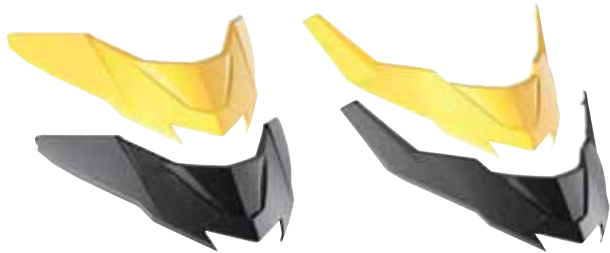

WINDSHIELD BASE KIT

- Colored plastic trim for ultra low, low, medium, high and one-piece windshields.

REV-XM, REV-XS
 860200944 • Black • Medium and high windshields
 860200957 • Yellow • Medium and high windshields
 \$24.99

REV XM, REV-XS
 860200937 • Black • Ultra low, low and 1-piece windshields
 860200956 • Yellow • Ultra low, low and 1-piece windshields
 \$19.99



WINDSHIELD SIDE DEFLECTOR KIT

- Increased wind deflection for windshields.



REV-XM, REV-XS
 860201012 • Smoke
 For low and ultra low windshields.
 \$24.99

• Required with medium or high windshields.
 • Ready for mirrors (860200694).
REV-XM, REV-XS
 860200912 • Smoke
 For medium and high windshields.
 \$49.99



*Depending on your vehicle configuration, you may need corresponding windshield base kit and side deflectors to install this windshield. Ask your dealer for details.
 Note: When installing a windshield and/or side deflectors on your vehicle, make sure it does not - in any position - interfere with the operation of the steering and brake lever.



ULTRA LOW FIXED WINDSHIELD*

• 6" (15 cm) in length.

REV-XP

**860200454 • Yellow Chrome with Ski-Doo logo

\$99.99

**860200456 • Grey Chrome with Ski-Doo logo

860200646 • Smoke with X graphic



LOW FIXED WINDSHIELD*

• 12" (31 cm) in length.

• Works with handlebar air deflectors.

REV-XP

**860200472 • Yellow Chrome with Ski-Doo logo

**860200474 • Grey Chrome with Ski-Doo logo

860200647 • Yellow with X graphic

860200648 • Smoke with X graphic
\$99.99



MEDIUM FIXED WINDSHIELD*

• 14 1/2" (37 cm) in length.

REV-XP

860200649 • Yellow with X graphic

860200650 • Smoke with X graphic

\$99.99



LOW WINDSHIELD AND SIDE DEFLECTOR KIT

• 12" (30 cm) in length.

• Same complete kit as found on the 2011-2012 X package models.

• Retrofittable on earlier REV-XP snowmobile models.

• Includes low windshield, side deflector and base kit.

REV-XP

860200545 • Smoke

\$99.99



MEDIUM INJECTED WINDSHIELD*

• 15" (38 cm) in length.

• Injected windshield with flared top.

• Increased wind protection.

REV-XP

517304395 • Smoke

\$104.99



MEDIUM WINDSHIELD KIT

• Includes medium injected windshield, dark smoke side deflector kit and base kit.

REV-XP

860200478 • Smoke

\$134.99



860200547



860200439



860200654

SPORT PERFORMANCE FLARED WINDSHIELD

• One piece with integrated side deflectors.

• Complete with base mounting kit.

REV-XP

860200654 • Smoke with X Graphic • 14" (35.6 cm)

\$139.99

860200439 • Smoke • 14" (35.6 cm)

860200547 • Smoke • 17 1/2" (44.5 cm)

\$119.99



ULTRA HIGH WINDSHIELD*

• 23" (58 cm) in length.

• Note: J-hooks need to be removed to install windshield.

REV-XP

860200225 • Clear with fading

\$119.99



Medium, High & Ultra High

Ultra Low & Low

WINDSHIELD BASE KIT

• Colored plastic trim for ultra low, low, medium, high and ultra high windshields.

REV-XP - Medium, High & Ultra High

860200091 • Black

860200092 • Yellow

\$19.99

REV-XP - Ultra Low & Low

860200089 • Black

860200090 • Yellow

\$14.99



WINDSHIELD SIDE DEFLECTOR KIT

• Increased wind deflection for windshields.

REV-XP - Low

860200498

• Smoke

\$24.99

REV-XP - Medium

860200084 • Dark Smoke

860200085 • Translucent Yellow

\$34.99

*Depending on your vehicle configuration, you may need corresponding windshield base kit and side deflectors to install this windshield. Ask your dealer for details.

** While supplies last

Note: When installing a windshield and/or side deflectors on your vehicle, make sure it does not - in any position - interfere with the operation of the steering and brake lever.



EXTRA HIGH ONE-PIECE WINDSHIELD

- 23" (58 cm) in length.
- One-piece with integrated deflectors.
- Maximum wind protection.
- For extreme cold conditions.
- Ready to receive windshield mount mirrors (860200947).
- No windshield base required.

REV-XU, REV-XR
860201000 - Clear
\$149.99



LOW WINDSHIELD*

• 11" (28 cm) in length.
REV-XR, REV-XU
860200651 - Smoke with X graphic
\$99.99



HIGH WINDSHIELD*

• 18" (46 cm) in length.
REV-XR, REV-XU
860200652 - Smoke with X graphic
\$119.99

EXTRA HIGH WINDSHIELD*

• 25 1/2" (65 cm) in length.
REV-XR, REV-XU, except MX Z and Renegade with J-hooks
860200226 - Clear with fading
\$119.99

ULTRA HIGH WINDSHIELD*

• 27 1/2" (70 cm) in length.
REV-XR, REV-XU, except MX Z and Renegade with J-hooks
860200227 - Clear with fading
\$119.99



SPORT PERFORMANCE FLARED WINDSHIELD

- One-pieces with integrated side deflectors.
- Top flare maximizes wind protection and redirects snow in deep powder conditions.
- Complete with base mounting kit.

REV-XR & REV-XU - High 17 1/2" (44.5 cm)
860200438 - Smoke
\$119.99
REV-XR & REV-XU - Medium 14" (35.6 cm)
860200453 - Smoke
****860200653 - Smoke with X Graphic**
\$139.99




WINDSHIELD SIDE DEFLECTOR KIT

• Increased wind deflection for windshields.
REV-XR, REV-XU
Fits extra high and ultra high windshields using base kit (860200230)
860200235 - Smoke
\$44.99
REV-XR, REV-XU
Fits medium and high windshields using base kits (860200229 & 860200232)
860200233 - Translucent Yellow
860200234 - Smoke
\$34.99



WINDSHIELD BASE KIT

• Colored plastic trim for low, medium, high, extra high, and ultra high windshields.
REV-XR, REV-XU
Extra High & Ultra High
860200230 - Black
\$24.99
REV-XR, REV-XU - Low
860200228 - Black
860200231 - Yellow
\$14.99
REV-XR, REV-XU
Medium & High
860200229 - Black
860200232 - Yellow
\$19.99

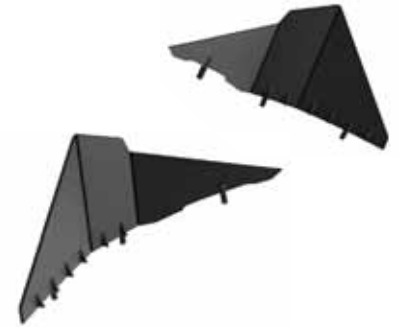

LATERAL AIR DEFLECTOR KIT

• Added winds protection.
REV-XU WT, SWT, Expedition SE, LE
860201039 - Black
\$59.99

* Depending on your vehicle configuration, you may need corresponding windshield base kit to install this windshield. Ask your dealer for details.

** While supplies last

Note: When installing a windshield and/or side deflectors on your vehicle, make sure it does not - in any position - interfere with the operation of the steering and brake lever.



 **LED HEADLIGHT INCREASES LIGHT OUTPUT MORE THAN 60% WHEN ADDED TO STANDARD HIGH BEAM**




AUXILIARY LED LIGHT

- An industry first: accessory lighting.
- Designed with the sled for an integrated style, plus simple plug and play hook-up.
- A complete 10 LED lamp providing over 2100 additional lumens.

- Securely attaches below the stock headlamp, providing an intense, super-wide foglight-type pattern.
- OFF-ON-On HI option.
- Say goodbye to sacrificing close range lighting when switching to high beams.

REV-XM, REV-XS, except Expedition Sport
860200576
\$299.99

Note: Vehicles with ACE engine require center hood (517304796) to be ordered separately.

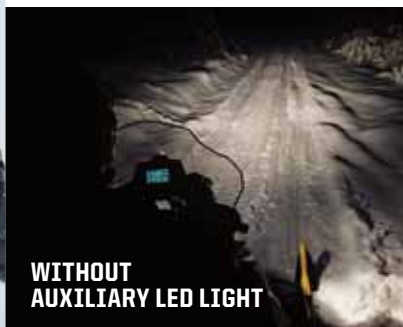

WITHOUT AUXILIARY LED LIGHT



WITH AUXILIARY LED LIGHT



WINDSHIELD-MOUNT MIRRORS

- Windshield mount design.
- 3" (7.6 cm) round reflector with adjustable angle.

Extra and ultra high one-piece windshields
860200947 • Black
\$39.99



HANDLEBAR AIR DEFLECTOR MIRROR KIT

- Handlebar mount air deflector.
- Sold in pairs.

Vehicles with 2011-2014 handlebar air deflectors
860200674 • Black
\$24.99

MIRROR KITS



• Side panel mount design.
• Sold in pairs.
• Premarked side panels make installation easier.
REV-XM, REV-XS
860200607 • Black
\$74.99



• Side panel body mount design.
• Sold in pairs.
REV-XP, REV-XR, REV-XU Tundra
860200693
\$69.99



• Windshield extension mount design.
• Sold in pairs.
REV-XM, REV-XS, REV-XP, REV-XR, REV-XU (with medium and higher windshield side deflectors)
860200694
\$59.99



• Windshield mount design.
• Sold in pairs.
860200103
\$39.99



• Handlebar wind deflector mount design.
• Sold in pairs.
Vehicle with 2010 & prior handlebar air deflectors
860200080
\$24.99

LINQ

SYSTEM™

- **FAST** - instantly “plug in” accessories
- **EASY** - no tools required
- **SECURE** - full-lock mechanism
- **UNIQUE** to Ski-Doo

The LinQ system is a sturdy full-lock mounting system, featured on a complete line of accessories. It provides an easier, faster and secure way to attach and remove accessories on your snowmobile. You can now instantly transform your sled to suit the need of the moment.



Watch the LinQ ACCESSORIES in multiple configurations video: store.Ski-doo.Com/video



LinQ PREMIUM TUNNEL BAG

- All the benefits of LinQ - simple, fast, secure with an integrated look.
- Semi-rigid expandable tunnel bag.
- Utilizes the patent-pending LinQ mounting system.
- Easy one-second on/off tool-less system.
- LinQ Cargo Base Kit included (860200583).

REV-XM, REV-XS, REV-XP & REV-XR (except GTX, Grand Touring).
Does not fit on REV-XU Tundra. 2008-2012: Drilling holes and LinQ Protective Decal (860200767) required.
2013 and up: Tunnel ready with decal and preperforated holes.



MEDIUM 19 + 3L

- Maximizes storage when used in conjunction with LinQ Premium Short Tunnel Bag on Tunnel 137" or longer.

860200620 • 19+3L
\$124.99



SUPERTRAX MAGAZINE SAID THE LINQ SYSTEM "IS THE BEST SYSTEM WE'VE SEEN SO FAR AND IT WOULD BE THE FIRST ACCESSORY WE'D BUY FOR OUR OWN SLED."



SHORT 10 + 3L

- Maximizes storage when used in conjunction with fuel caddy or LinQ Premium Medium Tunnel Bag on Tunnel 137" or longer.

860200622 • 10+3L
\$119.99



PREMIUM TUNNEL BAGS HAVE AN EXPANDABLE DESIGN SO YOU CAN CUSTOMIZE THE CAPACITY FOR YOUR ITEMS, AND THE LINQ SYSTEM KEEPS THEM SECURELY FASTENED.



REV-XM, REV-XS, REV-XP (except GTX, Grand Touring), REV-XR, REV-XU Tundra
2008-2012: Drilling holes and Protective LinQ Decal (860200767) required.
2013 and up: Tunnel ready with decal and preperforated holes. Does not fit with Luggage Rack Reinforcement Plates (860200798)



LinQ FUEL CADDY - 11L

- On/Off in a few seconds with all new LinQ system.
- LinQ Cargo Base Kit included (860200583).
- Cannot be installed with the Luggage Rack Reinforcement Plates (860200798).

860200585 • 11 L
\$124.99



LinQ CARGO BASE KIT

- Unique mounting fastener usable on any LinQ system accessory.
- Tool-less installation and removal.
- Included: 2 Cargo LinQ bases, hardware.

860200583 • Black
\$24.99



PROTECTIVE LINQ DECAL KIT

- Durable Lexan decals to protect your tunnel.
- Replacement item on model year 2013 and up, but required for utilizing the LinQ accessories on model years 2012 and prior.

860200767 • Black
\$9.99



LinQ (REPLACEMENT PART)

- Unique mounting fastener usable in any LinQ system accessory.
- Tool-less installation and removal.
- Sold in pairs.

715001707
\$19.99



THE LOW PROFILE DESIGN KEEPS THE SLED'S CENTER OF GRAVITY LOW TO MAINTAIN ITS EXCELLENT HANDLING.



OIL SUPPORT CADDY/GOGGLE BAG

- Multi purpose bag.
- Allows you to easily access and carry an extra liter of XPS 2 stroke oil or a spare set of goggles.
- Installs conveniently on top of the CVT cooling system (see image below).
- Models without E-TEC engine need the CVT cooling system (860200883).

REV-XM, REV-XS
860200614 • Black
\$44.99



FUEL CADDY

REV-XR Grand Touring,
REV-XP Grand Touring
860200589 • 11L
\$119.99



860200736



Back



860200664

TUNNEL BACKPACK

- Includes a compartment for the Ski-Doo shovel (860200574) (not included).
- Quick-disconnect system instantly transforms the bag into a backpack.
- LinQ Cargo base kit (2x) (860200583) not included but required to mount the bag on the tunnel.
- 28-liter (7.4 US gallons) capacity.

137" and longer with 1-up seat
860200664 • Black
860200736 • Orange
\$139.99



SHOVEL WITH SAW HANDLE

- Lightweight shovel with retractable saw handle.
- Can be disassembled and easily stored on your sled.

860200574
\$84.99

SAW & HANDLE REPLACEMENT FOR SHOVEL

- (Not illustrated)
- Replacement saw blade and handle for Ski-Doo shovel.

860200794
\$39.99

2.8 M AVALANCHE PROBE

- Lightweight, durable and strong 1/2" (12 mm) aluminum tubing construction.
- 7-16" (40 cm) color-coded sections.
- Weight: 13 oz. (370 g).

520000408
\$99.99



Expanded

TUNNEL BAG

- Includes a compartment for the Ski-Doo shovel (860200574) (not included).
- Chassis premarked for easier installation of bags on tunnel.
- 40-liter (10.6 US gallons) capacity.
- Extension provides more cargo space when required.

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM
860200824 • Black/White
\$129.99



EXTREME SUMMIT SEAT BAG

- A must for extreme mountain riding.
- Low profile bag lets you add storage without getting in the way of your riding needs.
- Fully integrated and allows for the REV-XM seat to easily clip on/off in seconds without taking away any tunnel space.
- Works in conjunction with REV-XM seat.
- 5 liters (1.2 US gallons).
- Inner zipper to access underseat compartment.

REV-XM
860200745
\$69.99



SLIM TUNNEL BAG

- Low profile, positioned flat on tunnel, for convenient out of the way storage.
- Easy access full wrap around zipper.
- Top mount shovel pocket.
- Utilizes LinQ mount with lightweight strap and buckle (included).
- LinQ cargo base kit included (860200583).

137" and longer with 1-up seat
860200935 • Black
\$129.99



TUNNEL BAG MEDIUM ROLL TOP 25L

- Compact roll-up polyester bag.
- Utilizes LinQ base mount with strap and buckle system (included).
- 0 to 25-liter (6.6 US gallons) capacity (expandable).
- Convenient, lightweight storage.
- LinQ cargo base kit included (860200583).

REV-XP, REV-XR, REV-XS, REV-XM
(except Grand Touring and GTX)
860200787 • Black
\$79.99



SEMI-RIGID TUNNEL BAG

- Versatile multi-configuration bag.
- High-quality hard topped for better protection.
- Use alone or with modular tunnel bag extension (860200173).
- Attaches to backrest when combined with fuel caddy.
- 31.3-liter (7.1 US gallons) capacity.

REV-XR GTX, Grand Touring
860200174 • Black

\$144.99

MODULAR TUNNEL BAG EXTENSION

- Versatile multi-configuration bag.
- Use alone, with or without fuel caddy, or with semi-rigid tunnel bag (860200174).
- Installs and removes easily, horizontally or vertically.
- 38-liter (10 US gallons) capacity.

REV-XR GTX, Grand Touring
860200173 • Black

\$134.99



1+1 BACKREST BAG

- Attaches itself on the backrest and easily on/off.
- Expandable 14 liter + 3 liter (3.7 US gallon + 0.8 gallon) capacity.
- Can be used in conjunction with the Fuel caddy or medium/short premium tunnel bag.

1+1 and Grand Touring backrest
860200621 • Black

\$149.99



MX Z TUNNEL BAG

- Utilizes our patent-pending cleat and bag retaining system.
- Innovative thermo-formed tunnel bag, designed for a slick look and rigid structure.
- Chassis premarked for easier installation of bags on tunnel.
- 25-liter (6.6 US gallons) capacity.

REV-XP, REV-XR, XF, REV-XU Tundra,
REV-XM, REV-XS

860200826 • Soft • 25-liter (6.6 US gallons) capacity

\$89.99



SADDLEBAGS

- Premium semi rigid saddlebags, utilizing the LinQ mounting system.
- Easy attach and remove.
- Can be used in conjunction with additional LinQ mounted accessories at the same time.
- 26L capacity (2 x 13L) (6.9 gallon (2 x 3.45 gallon)).
- Does not fit MX Z X-RS.
- LinQ cargo base kit not included (860200583).
- LinQ mounting system included (715001707).

REV-XP, REV-XR, REV-XS, REV-XM
(except Grand Touring and GTX)

860200624 • Black

\$229.99



A HEATING ELEMENT IN THE BAG KEEPS WATER BOTTLES FROM FREEZING AND EXTENDS ELECTRONICS BATTERY LIFE.



RISER BLOCK BAG

- Innovative 2-pocket carry bag for secure storage around the steering riser block.
- 3W heated insulated pocket design reduces the chance of water bottles freezing and increases the battery life of small electronic equipment.
- Includes RCA adaptor kit.
- Requires Heated Visor Kit (860200628) sold separately.

LONG

- Pockets fit up to two 24 oz. water bottles.

REV-XP Summit, REV-XU Tundra, REV-XM (For Risers 175 mm and up)
860200677 • 5-liter (1.32 US gallons)
\$89.99

SHORT

(Not illustrated).

REV-XM, REV-XS, REV-XP, REV-XR, REV-XU Tundra
860200676 • 3-liter (0.8 US gallons)
\$79.99



CARGO BOX

- 45-liter (11.88 US gallons) capacity.
- Provides additional secure storage.
- Convenient flip top provides easy access to stored goods.
- Standard on SE models.
- Made of durable polyethylene.

REV-XU Expedition, WT, SWT
860200395 • Black
\$229.99



CARGO CENTER BOX

- 20-liter (5.28 US gallons) capacity.
- Easily interchangeable with passenger seat.
- Provides additional storage space.
- Can be padlocked.
- Can be installed in conjunction with cargo box.

REV-XU Expedition, Skandic WT, SWT
860200732 • Black
\$249.99



SADDLEBAGS

- 30-liter (7.9 US gallons) capacity bag easily installs between the gas tank and seat.
- Fits either with or without the 1+1 seat.
- Includes a compartment for the Ski-Doo shovel (860200574).

REV-XM, REV-XS, REV-XP, REV-XR, REV-XU Tundra
280000299 • Black
\$104.99

RACK AND NET KIT FOR REAR CARGO BOX

(Not illustrated).

- Rack to carry additional items on top of cargo box.
- Net to better secure items inside cargo box cover.

Rear cargo box (860200395)
860201025 • Black
\$119.99



CARGO BAG

- Rugged all-purpose utility design.
- Sealed PVC construction.
- Large capacity (approx. 80 liters, 21 US gallons).
- Integrated attachment system.
- Includes rain cover for added resistance to the elements.
- Can also double as travel/duffle bag.

REV-XU Tundra 137", 154" and Summit models
860200801
\$149.99



Rain Cover



LinQ RETROFIT KIT FOR CARGO BAG

(Not illustrated).

- 4 straps to adapt the Cargo bag to LinQ system.
- LinQ Cargo base kit (2x) (860200583) not included but required to mount the bag on the tunnel.

Fit Cargo bag (860200801)
860200941 • Black
\$19.99



MONTANA⁺ GPS AND MOUNT KIT

- One of the best GPS systems available, designed to fit your sled perfectly with plug and play hook-up.

REV-XM, REV-XS with glovebox extension
860200631
\$649.99

MONTANA GPS MOUNT KIT

- (Not illustrated)
- Mounting kit and hardware for Garmin Montana GPS.
 - To be able to use GPS on more than 1 vehicle.

REV-XS, REV-XM with glovebox extension
860201029
\$99.99



YOU CAN DOWNLOAD MAPS FOR HUNDREDS OF SNOWMOBILE TRAILS INTO THE MONTANA GPS RECEIVER.



COMBO BAG

- Utilizes easy on/off clip system.
- No need to remove seat.
- Multiple pockets.
- 45-liter (11,9 US gallon) capacity.

REV-XP, REV-XR, REV-XS, REV-XU
860200623 • 45 L
\$119.99



GLOVEBOX EXTENSION

- Increases storage capacity by 50% (approx. 2 liters).
- Replaces stock storage compartment cover.
- Face door allows for perfect positioning and mounting of GPS.
- Note: GPS sold separately.

REV-XM, REV-XS
860200707 • Black
\$69.99



GLOVE BOX LINER

- Padded liner provides an inner bag within your glove box storage.
- Provides a finished interior, and additional protection to your items.
- Includes an organizer pocket for small items.
- Can be used with heating element (515176786) (not included).

REV-XM, REV-XS
860200678 • Black
\$49.99



TANK BAG

- Easy-access bag with full-length zipper.
- Access gas cap without removing bag.
- 11-liter (2.9 US gallons) capacity.

REV-XP

860200297 • Black

\$84.99



HEATED TANK BAG

- Easy-access bag with full-length zipper.
- Map pocket.
- Access gas cap without removing bag.
- 3W heated, insulated pocket for battery-powered electronics, e.g. cell, GPS.
- Access to the 12V plug-in port.
- 2.4-liter (0.6 US gallon) capacity.
- Includes RCA adaptor plug kit.
- Requires heated visor kit (860200628) (not included but required for installation).

REV-XR, REV-XU Tundra

860200172 • Black

\$84.99



DASHBOARD BAG

- Easy-access bag designed to provide extra storage.
- 2-liter (0.5 US gallon) capacity.

REV-XP

860200290 • Black

\$39.99

REV-XR, REV-XU Tundra

860200171 • Black

\$46.99



REAR CARGO RACK

- Provides mounting point for LinQ cargo base kit.
- Compatible with LinQ fuel caddy and tunnel bags.
- Easily interchangeable with passenger seat.
- Provides additional cargo space.
- Fits on model year 2012 and prior.

REV-XU WT, SWT, Expedition SE, LE

860200914 • Black

\$179.99



LinQ DECAL KIT

- Allows installation of LinQ cargo base on embossed REV-XU tunnels.

REV-XU WT, SWT, Expedition SE, LE

860200945 • Black

\$49.99



REAR RACK EXTENSION

- Delivers increased cargo space.

REV-XU WT, Expedition SE, LE

860200700 • Black

\$69.99



LUGGAGE RACK REINFORCEMENT PLATES

- Additional reinforcement for your long and short rear rack.
- Made of high strength steel.
- Sold in pairs.

REV-XM, REV-XP, REV-XR, REV-XU Tundra, REV-XS

860200798 • Black

\$39.99

LONG LUGGAGE RACK

- Rear light support included.
- REV-XP, REV-XU Tundra 154" and up** (can work in conjunction with 1+1 Seat), REV-XM Requires Tail Light (520000679) (not included but required for installation).

860200828 • Black

\$114.99

SHORT LUGGAGE RACK

- (Not illustrated).
- Rear light support included.

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM

Requires Tail Light (520000679)

(not included but required for installation).

860200827 • Black

\$104.99



XC BUMPER

- The ultimate front protection for your sled, providing additional front and lateral protection.
- Large center grab area for additional leverage.
- Heavy-duty performance with lightweight aluminum construction.

REV-XM, REV-XS
 860200932 • Black
 \$219.99



LATERAL BUMPERS

- Integrated extruded aluminum bumper system providing additional side panel protection.

REV-XU Tundra
 860200397 • Grey
 \$69.99



EXTRA FRONT BUMPER

- Made of heavy duty high-strength steel to protect front and side of body.

REV-XU WT, SWT
 860200561 • Black
 \$269.99



FULL WRAP-AROUND BUMPER

- Full 1.25" (3.8 cm) diameter heavy-duty steel wrap-around model.
- Delivers added protection to front of vehicle and side panels.
- Attaches to existing bumper and footrests.

REV-XU Tundra
 860200572 • Black
 \$219.99



REV-XM, REV-XS



REV-XP

FRONT BUMPER

• Easy-install bumper changes the appearance of your sled in minutes.

REV-XM, REV-XS
 502007370 • Lava Red
 502007275 • White
 502007276 • Yellow
 502007323 • Orange

REV-XP
 502006916 • Yellow
 502007065 • White
 502007116 • Black
 502007067 • Blue
 \$69.99

REAR BUMPER

• Easy-install bumper changes the appearance of your sled in minutes.

REV-XP, REV-XR, REV-XS (120" & 137")
 518325481 • Black
 518325575 • Yellow
 518326356 • White
 518326375 • Blue
 \$74.99

EXTRA BUMPER

• Heavy-duty front bumper.

REV-XU Expedition
 860200350 • Black
 \$199.99



HEAVY-DUTY REAR BUMPER

• Heavy-duty aluminum bumper for C-type hitch applications.
 • Designed in conjunction with the chassis, no sled modifications required.

REV-XP, REV-XM
 860200953 • Black • 146"
 860200954 • Black • 154"
 860200955 • Black • 163"
 \$79.99
 860200804 • Aluminum • 146"
 860200805 • Aluminum • 154"
 860200806 • Aluminum • 163"
 \$69.99

REV-XS, REV-XR, REV-XP
 860200952 • Black • 120"-137"
 \$69.99
REV, REV-XU Tundra, REV-XS, REV-XP, REV-XR (120" & 137")
 (standard on GTX, Grand Touring, except 550F)
 860200803 • Aluminum
 \$59.99



TONGUE TYPE HITCH

• Heavy-duty tongue type hitch works in conjunction with heavy-duty bumpers.

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM
 860200902
 \$49.99



C-TYPE HITCH

• Heavy-duty C-type hitch works in conjunction with heavy-duty bumpers.

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM
 860200829
 \$44.99



HITCH TONGUE

• Easily transforms the C-type hitch (860200829) into a tongue-type hitch.

511000521
 \$10.99

**1+1 SEAT**

- Quick, easy installation and ideal ergonomics for driver and passenger.
- Full tunnel capacity is maintained and allows additional accessories to be added.

**REV-XM, REV-XS, REV-XP & REV-XR (except GTX, Grand Touring),
REV-XU Tundra, (2008 and up)**
860200665
\$449.99

**1+1 BACKREST**

- Option for 1+1 seat when not sold as a kit.
- Can be locked using a padlock (not included).

**REV-XM, REV-XS, REV-XP & REV-XR (except GTX, Grand Touring),
REV-XU Tundra, (2008 and up)**
860200595
\$399.99

**1+1 COMPLETE SEAT SYSTEM***

- The ultimate in modular seating.
- Allows quick changes between 1-up and 2-up riding.
- Ergonomically correct positions for driver and passenger.
- Two easy tool-less steps:
1-Clip in seat. 2-Add LinQ backrest.

REV-XM, REV-XS, REV-XP & REV-XR (except GTX, Grand Touring), REV-XU Tundra, (2008 and up)
860200575
\$749.99

*For optimal riding experience, harder rear suspension springs are available. Ask your dealer for the proper parts for your vehicle.



Watch the video of the 1+1 COMPLETE SEAT SYSTEM in action:
store.ski-doo.com/video

**HEATED 1+1 GRIP WITH GUARD**

- Allows your passenger to ride in comfort in all conditions with 1+1 heated grips.

Fits on 1+1 Backrest (860200595)
860200584
\$149.99

1+1 BACKREST ANCHOR BASE KIT

- (Not illustrated).
- 1+1 backrest anchor base kit to be able to install 1+1 backrest on more than 1 vehicle.

REV-XM, REV-XS, REV-XP & REV-XR (except GTX, Grand Touring), REV-XU Tundra, (2008 and up)
860201024 - Black
\$154.99

**1 + 1 PASSENGER MUFFS**

- Muffs fit snugly around the passenger handles and provide total warmth even on the coldest days.
- Easy to install and remove.

Fits seat with handles only
860201028 - Black
\$29.99

Fits seat with handles and air deflectors
860200181 - Black
\$44.99

**PASSENGER FOOTREST KIT**

- REV-XP, REV-XR, REV-XU Tundra, REV-XS.
- Fits 137" and up.
- Does not fit with rMotion™ adjusters.

860200810 - Aluminum
\$39.99

**PASSENGER FOOTREST KIT FOR 1+1 SEAT**

- Does not fit REV-XM.
- 860200295 - Aluminum
\$59.99

2 + 1 SEAT

- 2 + 1 seat specifically designed for REV-XR GTX, Grand Touring platforms, allowing you to ride 3 up.
- Enables you to enjoy all the same benefits you have been accustomed to with previous models.

REV-XR GTX, Grand Touring
860200170

\$319.99

**2-UP SEAT**

- Extended seat providing convenient 2-up riding.
- Complete seat assembly with passenger strap.
- Replaces existing seat in seconds.

REV-XP, REV-XR, REV-XU Tundra, REV-XM, REV-XS
860200556 - Black

\$314.99

**ADJUSTABLE BACKREST**

- Adjustable, and works in conjunction with 2-up seat (860200556).
- Positionable for passenger or driver use.
- Rigid steel frame and integrated foam pad.
- Easy, tool-less removal when not needed.

REV-XP, REV-XR, REV-XU Tundra, REV-XM, REV-XS
860200823 - Black

\$264.99



Shown without
storage bag

EXTREME SUMMIT SEAT WITH REMOVABLE STORAGE BAG

- 30% lighter than regular seat.
- Summit seat bag included (860200745).
- A must for expert riders.
- Narrow profiled and shorter seat allows for optimal sidehilling and boondocking.

REV-XM, REV-XS, REV-XP, REV-XR, REV-XU Tundra
860200596 - Black

\$399.99

2-UP SEAT / BACKREST COMBO

- Extended seat with backrest providing convenient 2-up riding.
- Complete seat assembly with passenger strap.
- Replaces existing seat in seconds.
- Adjustable backrest enhances comfort level.
- Positionable for passenger or driver use.
- Easy, tool-less removal when not needed.

REV-XP, REV-XR, REV-XU Tundra, REV-XM, REV-XS
860200571

\$579.98



RAP-CLIP COVER

WITH "CLIP" ATTACHMENT SYSTEM

The all new strap-less snowmobile trauling cover that clips on to the tunnel intuitively with clips.

- No more kneeling in the snow.
- Easy installation steps.
- Cover installs in seconds.



EQUIVALENT CONFIGURATION AND POSSIBLE OPTIONS

PLATFORM	STOCK MODEL (2014)	1 UP SEAT	1 + 1 SEAT	2 UP SEAT	BACKREST	PASSENGER HANDGRIPS	PASSENGER WIND DEFLECTORS	ULTRA LOW WINDSHIELD	LOW WINDSHIELD	MEDIUM WINDSHIELD	HIGH WINDSHIELD	EXTRA HIGH WINDSHIELD	ULTRA HIGH WINDSHIELD	MIRRORS ON WINDSHIELD SIDE DEFLECTORS	HANDLEBAR AIR DEFLECTORS	MIRRORS ON HANDLEBAR AIR DEFLECTORS	MIRRORS ON SIDE PANEL	MX Z HI-RISER KIT	SUMMIT HI-RISER KIT	EXTRA FRONT BUMPER	LUGGAGE BOX
REV-XM	SUMMIT SP, SUMMIT X, FREERIDE	•						•	•										•		
	REV-XM WITH MED-HIGH WINDSHIELD	•								•	•			•					•		
REV-XS	MX Z X, MX Z X-RS, RENEGADE X, RENEGADE BACKCOUNTRY X	•						•	•						•	•	•	•			
	MX Z TNT, RENEGADE ADRENALINE, RENEGADE BACKCOUNTRY, GSX LE	•								•	•								•		
	EXPEDITION (SPORT)			•	•	•	•						•						•		
	REV-XS 1-UP WITH ULTRA HIGH WINDSHIELD	•											•	•					•		
REV-XS WITH 1+1 AND BACKREST		•	•	•	•	•			•	•			•					•			
REV-XP	REV-XP WITH ULTRA LOW / LOW WINDSHIELD	•						•	•						•	•	•	•	•		
	MX Z (SPORT), RENEGADE (SPORT), SUMMIT (SPORT)	•								•	•				•	•	•	•	•		
	GRAND TOURING (SPORT), EXPEDITION (SPORT)			•	•	•	•				•	•			•	•	•	•	•		
	REV-XP WITH 1+1 AND BACKREST		•	•	•	•	•			•	•			•	•	•	•	•	•		
REV-XR	MX Z (X), RENEGADE (X)	•						•	•						•	•	•	•	•		
	MX Z (TNT), RENEGADE (ADRENALINE), GSX (LE, SE)	•								•	•				•	•	•	•	•		
	GRAND TOURING (LE)			•	•	•	•					•	•						•		
	GRAND TOURING (SE)			•	•	•	•					•	•						•		•
REV-XR WITH 1+1 AND BACKREST		•	•	•	•	•			•	•			•					•			
REV-XU	TUNDRA (SPORT, LT, XTREME)	•	•					•	•	•				•					•	•	
	EXPEDITION (LE, SE), SKANDIC (WT, SWT)			•	•	•	•					•	•						•		•

X SYSTEM^{*} ATTACHMENT



CLIP ATTACHMENT SYSTEM

- The straps attach across the front of the vehicle in an “X”, eliminating the need to attach webbing underneath the sled.
- Not only does this system allow for a snug fit, it also reduces your chances of getting dirty while preparing your sled for the trailer.
- All covers feature an inner liner to protect your hood and windshield.

*Patent pending



RACING STORAGE COVER (UNIVERSAL)

- Provides protection for any snowmobile model.

All models
280000529 •
Black with graphics
\$99.99



INTENSE COVER


- 600-denier solution-dyed polyester.
- UV-resistant fabric replaces traditional canvas for bold bright colors that won't fade.
- Built-in underliner provides excellent protection from sand and ice.
- Offers premium protection from the elements.
- Easy clean and care with water-repellent and mildew-resistant fabric that will not bleed.
- Gas cap opening.



EXPEDITION COVER

- Lightweight durable 300-denier solution-dyed polyester trailering cover with a built-in underliner provides excellent protection from sand and ice.
- Custom fit complete with gas cap opening and safety ties for trailering.
- UV-resistant fabric.
- Easy clean and care with water-repellent and mildew-resistant fabric.

INTENSE		EXPEDITION	
280000624	\$209.99	NA	
280000625	\$209.99	NA	
280000628	\$209.99	NA	
280000621	\$249.99	NA	
280000630	\$264.99	NA	
280000627	\$209.99	NA	
280000626	\$264.99	NA	
280000549	\$229.99	NA	
280000568	\$209.99	NA	
280000566	\$209.99	NA	
280000590	\$264.99	NA	
280000575	\$264.99	NA	
280000578	\$264.99	NA	
280000576	\$264.99	NA	
280000577	\$264.99	NA	
280000594	\$264.99	NA	
280000552	\$209.99	NA	
NA		280000603	\$209.99
Rap-Clip cover			

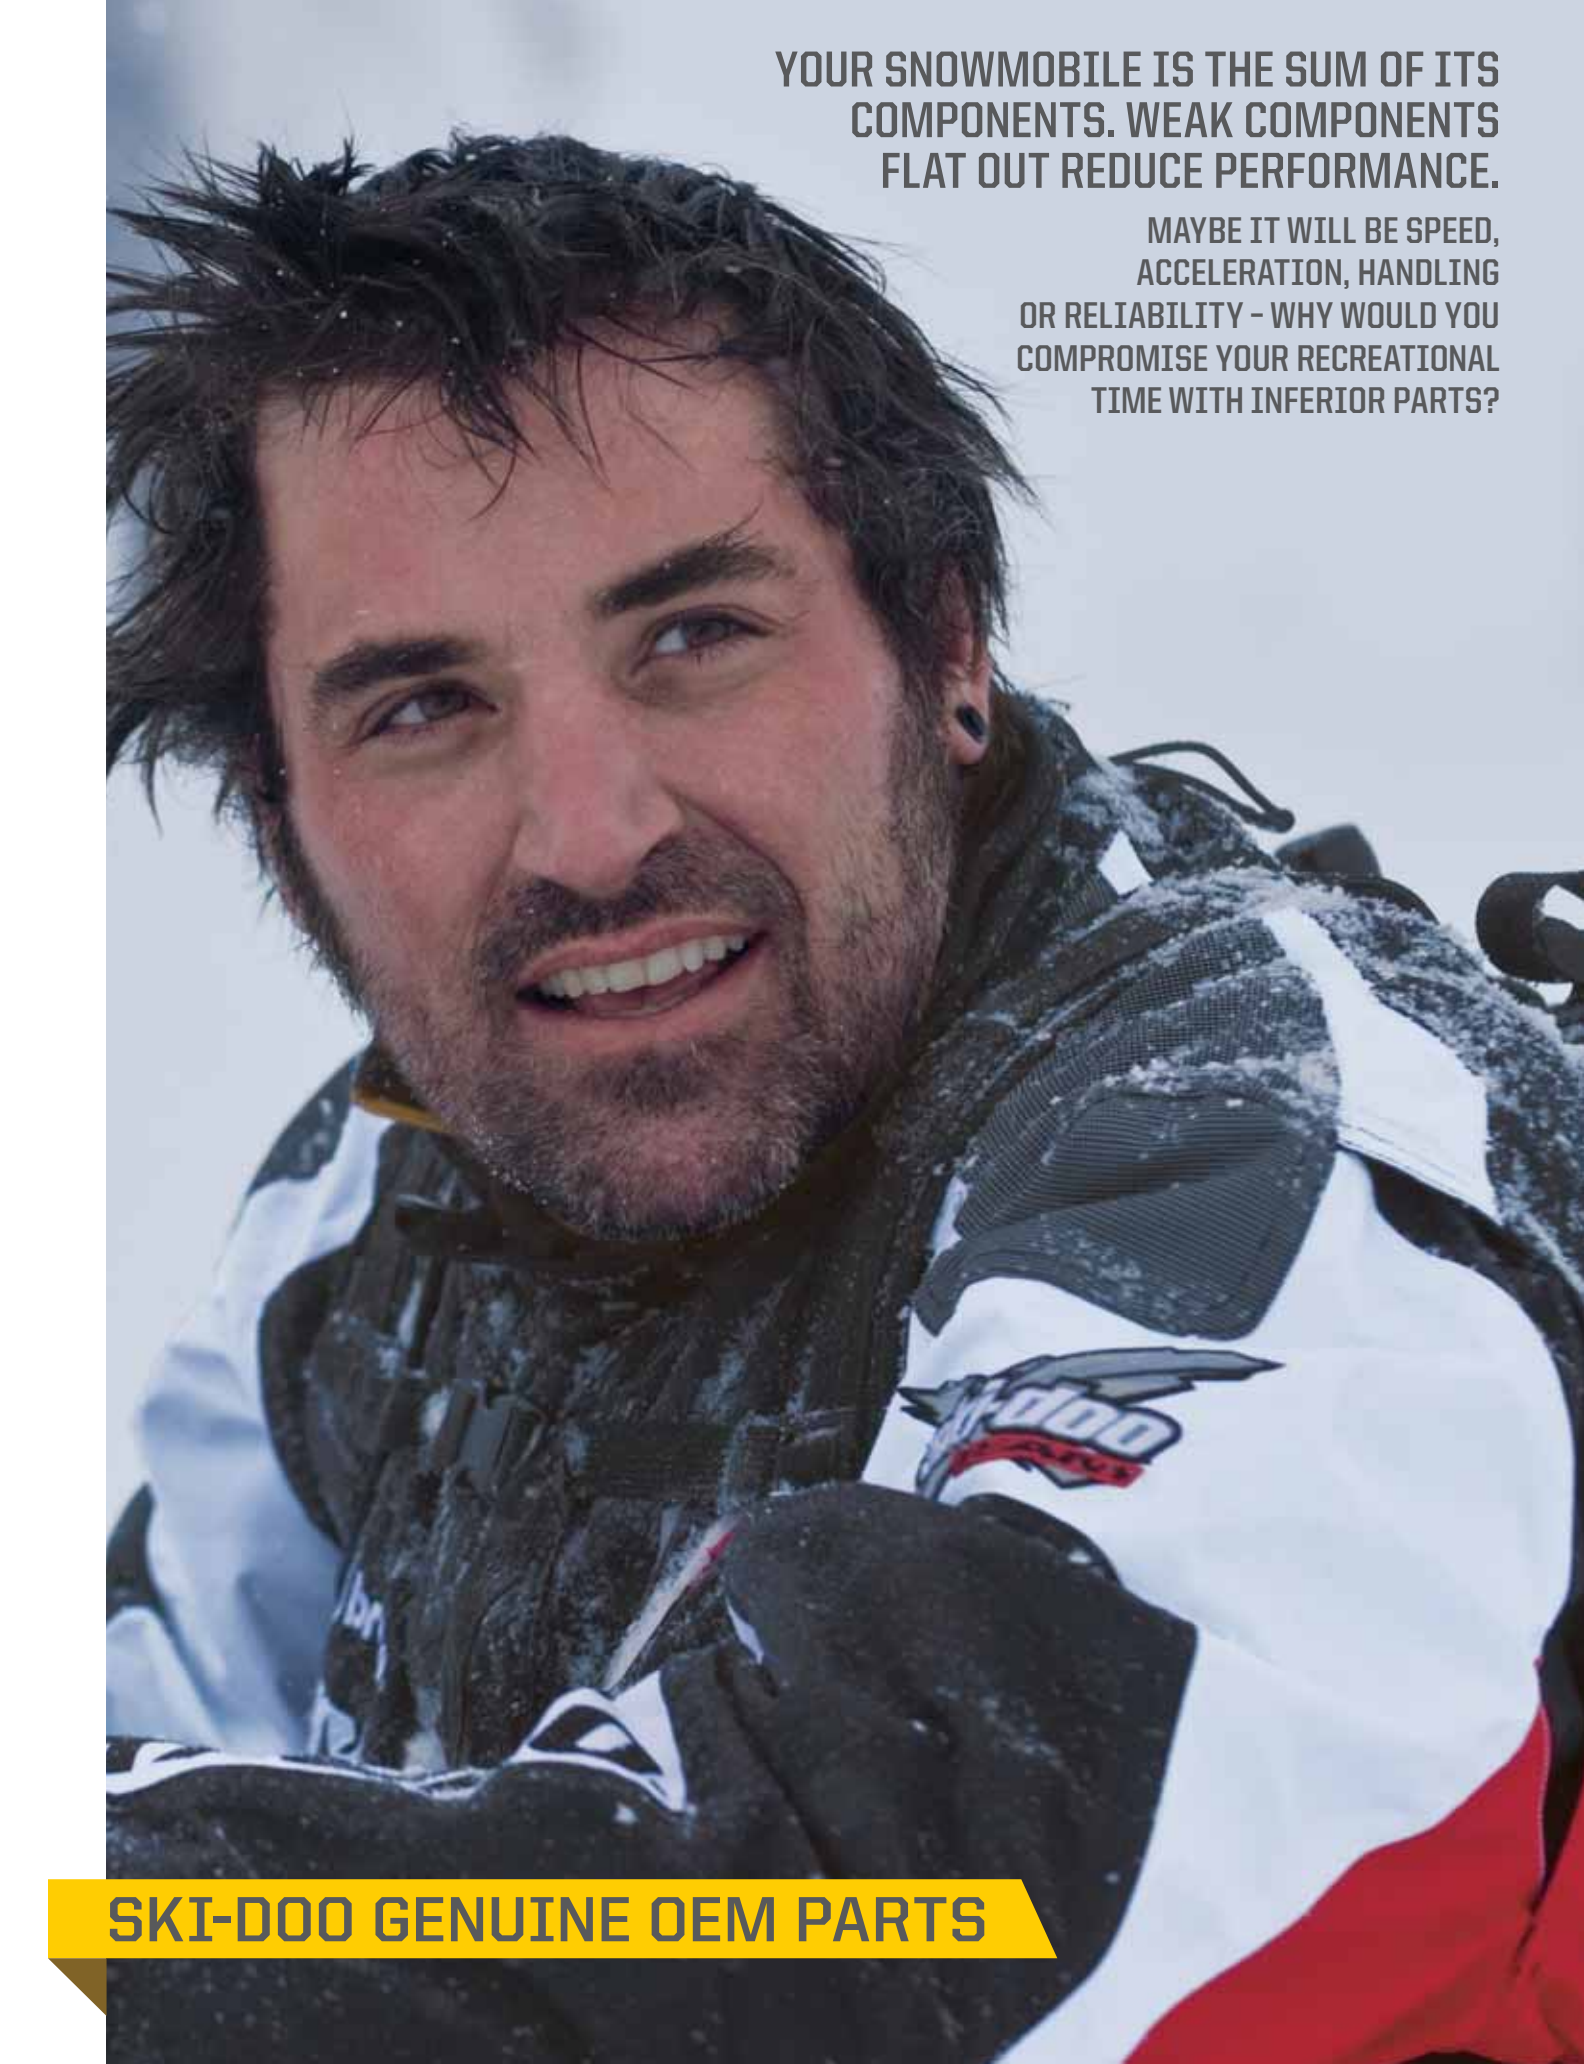A close-up photograph of a man with dark, slightly messy hair and a beard, smiling warmly. He is wearing a white and black snowmobile suit with a Ski-Doo logo on the chest. The background is a bright, snowy landscape.

**YOUR SNOWMOBILE IS THE SUM OF ITS
COMPONENTS. WEAK COMPONENTS
FLAT OUT REDUCE PERFORMANCE.**

**MAYBE IT WILL BE SPEED,
ACCELERATION, HANDLING
OR RELIABILITY - WHY WOULD YOU
COMPROMISE YOUR RECREATIONAL
TIME WITH INFERIOR PARTS?**

SKI-DOO GENUINE OEM PARTS





STUDS MATTER WHEN RIDING TRAILS!

Most of the time as a snowmobiler, we are riding on snow. But if you're riding on trails, you'll encounter icy sections once in a while, often in well-travelled areas, or where the trail uses a plowed road to connect sections. Adding studs to your track is the best way to sharpen your sled's control in these slippery situations. Studs also significantly improve braking and acceleration performance.

STUDS CAN HELP ANY RIDER

And studs aren't just for high performance riders. Any trail rider can benefit from the added peace-of-mind and control studs provide, whether they're on a Grand Touring or a Renegade. Even riders using their snowmobiles for work situations where they might be pulling loads can benefit.

DOES IT MATTER WHICH STUDS YOU USE ON YOUR SKI-DOO SNOWMOBILE?

Yes. Most new Ski-Doo sleds built on the REV-X platform use the RipSaw Lite track, which is a single-ply design to make it lighter and more responsive. This construction means the studs and backer plates need to be specially designed to grip the track effectively. The Woody's 286 Phantom stud and backer kits available through BRP are the only studs that have been tested by BRP and proven to provide the performance and durability required for use with this track design.

WHAT ABOUT THE STUD NUMBER AND PATTERN?

We recommend 84 studs for a 120" (305 cm) track and 96 studs for a 137" (348 cm) track to provide a good balance of additional traction and long life from your track. All the RipSaw Lite tracks that leave our factory with a pattern marked on the track itself, making it easy to achieve the ideal installation.

JUST INSTALL THE STUDS, IS THAT ALL THERE IS TO IT?

No. You need to make sure that the proper tunnel protectors are installed on your snowmobile also. On many Ski-Doo sleds it's a very simple operation to slide the original short protectors out, and the new taller protectors into the channels of your heat exchangers. Be sure to consult your dealer for the proper height protector to prevent any damage.

IS MY TRACK STILL WARRANTIED IF STUDS ARE INSTALLED?

Because the 286 Phantom studs and backer plates grip the track in a unique way and hold the assembly solidly, your warranty is maintained if the studs are installed properly on the pre-marked locations. These are the only traction products that maintain the warranty.

We recommend you have your authorized BRP dealer install your studs and on pre-patterned tracks only. If you do choose to do it

yourself, be sure to always use the proper installation tools, procedures and torque specified in the instructions. Proper installation provides maximum product longevity and helps prevent track damage.

HOW DO STUDS EFFECT MY SLED'S HANDLING?

You'll need to get used to this additional grip on your first few rides. Get a feel for it, especially in corners. You may need to also consider alternate carbide runners (see p. 160-1), adding more or less front end grip to get the traction balance the way you like. Consult with your dealer and the resources on the Woody's web site for advice on how to best match the studs and carbides.

WHAT ABOUT THE ICE RIPPER TRACKS?

These are a good alternative to studs. They won't provide the same level of traction that studs do, but will provide a noticeable improvement compared to no traction devices on those slippery surfaces.



LIMITED TIME OFFER

GET A
FREE TUNNEL PROTECTOR KIT*
when you stud your sled at your Ski-Doo Dealer.

*SKU 860200802

*Limited time offer. *Offer valid from August 1, 2013 to December 31, 2013

*At participating dealers only and while supplies last.



286 PHANTOM SERIES STUDS & SUPPORT PLATES BY WOODY'S

- A complete line of traction products developed specifically for Ski-Doo's REV-XP, REV-XR & REV-XS RipSaw Lite tracks.
- Due to the unique track design, this is the **only traction product** available to maintain track warranty and track life.
- Kit complete with stud, nut and support plate.
- The only traction product approved by BRP.

REV-XS, REV-XP, REV-XR

860200723 • 5/16 - 1.325" • Pack of 500

\$1,522.99

860200720 • 5/16 - 1.075" • Pack of 500

\$1,389.99

860200722 • 5/16 - 1.325" • Pack of 96 (for 137" track)

\$329.99

860200719 • 5/16 - 1.075" • Pack of 96 (for 137" track)

\$299.99

860200721 • 5/16 - 1.325" • Pack of 84 (for 120" track)

\$277.99

860200718 • 5/16 - 1.075" • Pack of 84 (for 120" track)

\$253.99



PHANTOM SHARP STUDS & SUPPORT PLATES BY WOODY'S

- All the benefits of 286 Phantom Series studs with sharper tips for enhanced aggressiveness.
- Unique track design makes it the only traction product available to maintain track warranty and track life.
- Kit complete with stud, nut and support plate.
- Only traction product approved by BRP.

REV-XS, REV-XP, REV-XR

860200731 • 5/16 - 1.325". Pack of 500

\$1,899.99

860200728 • 5/16 - 1.075". Pack of 500

\$1,699.99

860200730 • 5/16 - 1.325". Pack of 96 (for 137" track)

\$369.99

860200727 • 5/16 - 1.075". Pack of 96 (for 137" track)

\$334.99

860200729 • 5/16 - 1.325". Pack of 84 (for 120" track)

\$329.99

860200726 • 5/16 - 1.075". Pack of 84 (for 120" track)

\$299.99



TUNNEL PROTECTOR KIT

- Protects your bulkhead and heat exchangers in all conditions.

REV-XU Expedition (2011 & up),
REV-XU Skandic, SWT, WT
860200757

\$89.99

REV-XP Fan-cooled 120"
& 137", REV-XU Tundra 137"
860200381

REV-XP except fan-cooled,
REV-XR, REV-XS 120"-137"
860200802

\$49.99

DRILL BIT

415128884

\$13.99




- To install the studs, always use the installation tools, procedures and torque specified in the instructions. Proper installation provides maximum product longevity and helps prevent track damage. BRP recommends that studs be installed by authorized BRP dealers, and on approved pre-patterned tracks only. These tracks come standard on most 2014 Ski-Doo snowmobiles. Look for this symbol on your track. Woody's products are designed to fit and interact with each other. The stud nut and support plate form a complete unit.
- The use of aggressive skis, ski carbide runners or studs will alter the handling of your snowmobile, particularly in terms of manoeuvrability, acceleration and braking. Please refer to your Operators Guide for more details.



ICE ATTK+ TRACK

• Factory pre-studded Hacksaw¹ version provides superior handling and control on hard packed trails.

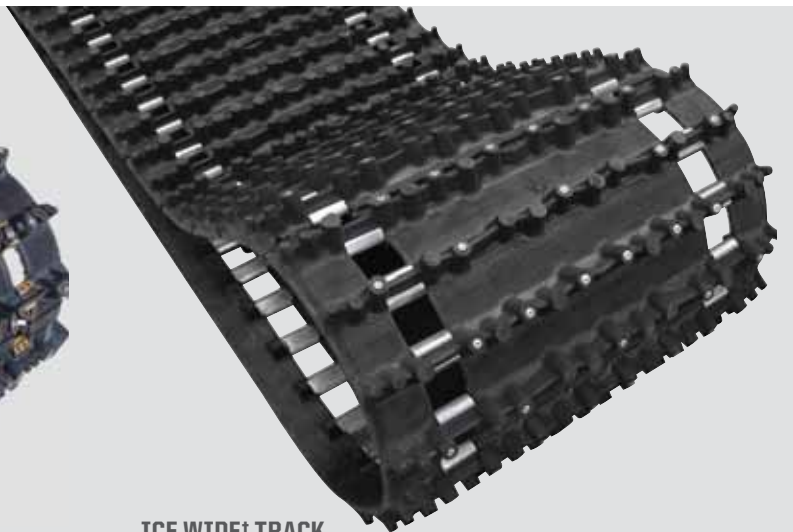

ICE WIDE+ TRACK

• Utility machine application for ice-hard packed conditions.




ICE RIPPER+ TRACK FOR SWT

• Factory pre-studded RipSaw variation uses new "sharp tip" studs for better bite.




POWDERMAX 2 / FLEXEDGE

• The track edges bend, making roll-up easy and predictable.

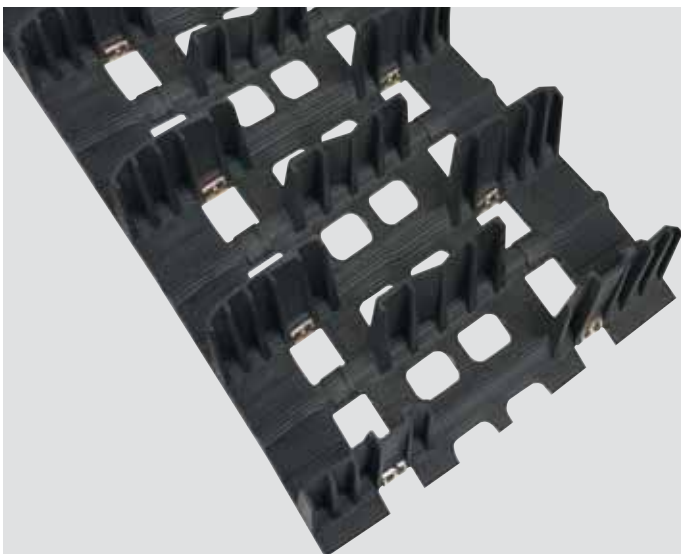

CHALLENGER LITE+ TRACK

• The lightest in mountain track technology.

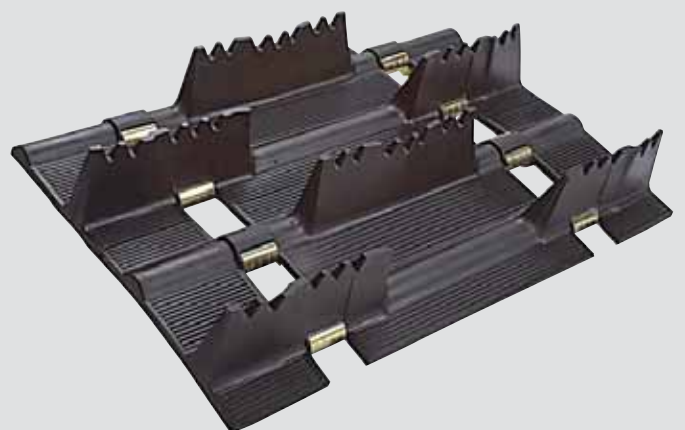

POWDER MAX+ TRACK

• The benchmark for mountain tracks.



ONLY A BRP REPLACEMENT TRACK KEEPS ITS ONE-YEAR WARRANTY WHEN INSTALLED BY A DEALER.

	TRACK	PROFILE	CLIP	SKU	PRICE
2.86" PITCH	15" x 120" x 0.88"	RipSaw ¹ Track	1 clip every 3 profiles	504153006	\$529.99
	15" x 120" x 0.88"	SilenTrack	1 clip every 3 profiles	504153007	\$536.99
	15" x 120" x 1.0"	RipSaw Track	Full clip	504152760	\$603.99
	15" x 120" x 1.25"	RipSaw Track	Full clip	504153100	\$854.99
	15" x 120" x 1.25"	RipSaw Track	1 clip every 2 profiles	504152772	\$638.99
	15" x 120" x 1.25"	RipSaw Track	Full clip	504152606	\$638.99
	15" x 137" x 1.0"	Track	1 clip every 2 profiles	504152755	\$723.99
	15" x 137" x 1.0"	Track	1 clip every 2 profiles	504152863	\$749.99
	15" x 137" x 1.25"	Cobra Track	1 clip every 2 profiles	504152838	\$621.99
	15" x 137" x 1.25"	ICE Ripper ¹ Track	Full clip	504153101	\$869.99
	16" x 137" x 1.25"	Cobra Track	1 clip every 4 profiles	504152907	\$638.99
	16" x 137" x 1.25"	RipSaw Track	1 clip every 2 profiles	504152734	\$621.99
	16" x 137" x 1.5"	WT Lite Track	1 clip every 2 profiles	504153102	\$782.99
	16" x 137" x 1.75"	Powder Max ¹ Track	1 clip every 2 profiles	504152803	\$775.99
	16" x 146" x 2.5"	PowderMax 2 / FlexEdge	1 clip every 2 profiles	504153198	\$869.99
	16" x 154" x 1.5"	WT Lite Track	1 clip every 2 profiles	504152761	\$828.99
	16" x 154" x 2.5"	PowderMax 2 / FlexEdge	1 clip every 2 profiles	504153199	\$949.99
	16" x 163" x 2.5"	PowderMax 2 / FlexEdge	1 clip every 2 profiles	504153200	\$999.99
	20" x 154" x 1.25"	ICE Ripper ¹ Track	Full clip	504153036	\$1,145.99
	20" x 154" x 1.5"	Extreme Utility Track	1 clip every 3 profiles	605613004	\$999.99
20" x 154" x 1.5"	ICE Ripper Track	Full clip	504153037	\$1,145.99	
20" x 156" x 1.25"	Track	1 clip every 3 profiles	504152817	\$988.99	
2.52" PITCH	15" x 120" x 0.88"	Track	1 clip every 3 profiles	504152485	\$545.99
	15" x 121" x 1.25"	ICE Ripper Track	Full clip	504152654	\$713.99
	15" x 121" x 1.25"	RipSaw Track	Full clip	504152558	\$699.99
	15" x 121" x 1.75"	Track	Full clip	504152517	\$707.99
	15" x 136" x 0.88"	Track	1 clip every 3 profiles	504152455	\$609.99
	16" x 136" x 1.25"	Track	1 clip every 3 profiles	504152456	\$700.99
	16" x 136" x 1.75"	Powder Max ¹ Track	1 clip every 3 profiles	504152644	\$748.99
	16" x 144" x 2.0"	Powder Max Track	1 clip every 2 profiles	504152528	\$867.99
	16" x 144" x 2.25"	Challenger Lite ¹ Track	1 clip every 2 profiles	504152730	\$877.99
	24" x 156" x 1.25"	ICE Ripper Track for SWT	Full clip	504153171	\$999.99
2.55" PITCH	10" x 69" x 0.625"	Track	Full clip	504152172	\$208.99



2.86" PITCH	15" x 120" x 1.25"	Cobra Track	Full clip	C9092H	\$699.99
	15" x 120" x 1.25"	ICE Ripper XT Track	Full clip	C9164H	\$919.99
	15" x 120" x 1.375"	ICE Attak ¹ Track	Full clip	C9136H	\$939.99
	15" x 120" x 1.5"	RipSaw Track	Full clip	C9159C	\$769.99
	15" x 137" x 1.25"	ICE Ripper XT Track	Full clip	C9191H	\$929.99
	15" x 137" x 1.25"	RipSaw Lite ¹ Track	Full clip	C9080H	\$799.99
	15" x 137" x 1.37"	ICE Attak Track	Full clip	C9134H	\$969.99
	15" x 137" x 1.5"	RipSaw Track	Full clip	C9076C	\$849.99
	15" x 137" x 1.75"	RipSaw Track	Full clip	C9096C	\$869.99
	16" x 120" x 1.75"	Powder Max Track	Full clip	C9069C	\$809.99
	16" x 146" x 2.25"	Powder Max Track	Full clip	C9064M	\$899.99
	16" x 154" x 2.25"	Challenger Non Ported	Full clip	C9065M	\$999.99
	16" x 163" x 2.25"	Challenger Non Ported	Full clip	C9066M	\$1,049.99
	15" x 120" x 1.75"	Backcountry X	Full clip	C9125C	\$759.99
	15" x 120" x 1.75"	Backcountry X	Full clip	C9126C	\$839.99
	20" x 154" x 1.50"	Cobra WT	Full clip	C9196U	\$999.99
	16" x 146" x 2.5"	PEAK 2.5	Full clip	C9179M	\$1,039.99
	16" x 154" x 2.5"	PEAK 2.5	Full clip	C9178M	\$1,099.99
	16" x 163" x 2.5"	PEAK 2.5	Full clip	C9177M	\$1,199.99
	15" x 120" x 1.00"	RipSaw II	Full clip	C9158H	\$649.99
15" x 120" x 1.00"	RipSaw II	Full clip	C9210H	\$679.99	
15" x 120" x 1.25"	RipSaw II	Full clip	C9156H	\$699.99	
15" x 120" x 1.25"	RipSaw II	Full clip	C9209H	\$729.99	
15" x 137" x 1.00"	RipSaw II	Full clip	C9224H	\$749.99	
15" x 137" x 1.25"	RipSaw II	Full clip	C9223H	\$799.99	
20" x 156" x 1.25"	Track	1 clip every 3 profiles	M13070	\$810.99	
2.52" PITCH	15" x 121" x 1.352"	Cobra	Full clip	C9052H	\$689.99
	15" x 121" x 1.352"	Cobra	Full clip	C9061H	\$759.99
	15" x 121" x 1.00"	Ernergy	1 clip every 3 profiles	C9793T	\$499.99
	15" x 121" x 1.00"	Ernergy	1 clip every 3 profiles	C9794T	\$599.99
	15" x 121" x 1.00"	HackSaw	1 clip every 3 profiles	C9147H	\$609.99
	15" x 136" x 1.25"	Ice Ripper XT	Full clip	C9079H	\$959.99
	15" x 121" x 1.50"	Intense	Full clip	C9930C	\$729.99
	15" x 121" x 1.0"	ICE Attak Track	Full clip	C9028H	\$769.99
	15" x 121" x 1.25"	RipSaw Track	Full clip	C9968H	\$699.99
	15" x 136" x 1.25"	RipSaw Track	Full clip	C9969H	\$759.99
	20" x 156" x 1.25"	ICE Wide ¹ Track	tFull clip	C9008U	\$1,199.99



SLIDER SHOES

- Custom color-matched slider shoes with built-in wear marker.
- Long-lasting, impact-resistant.
- For all slide rail lengths.
- Easy-cut to desired length.

146" SC-5 Mountain & tMotion

- 503191499 • Black
- 503191695 • Yellow
- 503191947 • White

120" SC-5 & rMotion

- 503191301 • Black
- 503191693 • Yellow
- 503191945 • White
- 503192562 • Red

154" SC-5 Mountain & tMotion

- 503191198 • Black
- 503191696 • Yellow
- 503191948 • White

137" SC-5 & rMotion

- 503191306 • Black
- 503191694 • Yellow
- 503191946 • White
- \$18.99

163" SC-5 Mountain & tMotion

- 503191501 • Black
- 503191697 • Yellow
- 503191949 • White

\$19.99



200 mm

180 mm



152 mm

141 mm

LIGHTWEIGHT WHEEL

- Color-matched lightweight snowmobile wheels.

REV-XM, REV-XS, REV-XP, REV-XR

141 mm	180 mm	200 mm
503191151 • Black	503191626 • Yellow	503191450 • Yellow
503191621 • Yellow	503191627 • Full Moon	503191625 • Full Moon
503191622 • Full Moon	503191742 • Black	503191741 • Black
503191942 • White	503191943 • White	503191944 • White
152 mm		\$38.99
503191755 • Black		

EXTRA IDLER WHEEL KIT

- (Not illustrated)
- Reduces drag and rolling resistance.
- Includes 2 wheels, brackets and hardware for rear suspension.

REV-XP Summit, except tMotion
860200109 • 152 mm
REV-XP, REV-XR, except rMotion
860200108 • 141 mm
\$69.99

4TH REAR WHEEL KIT

- (Not illustrated)
- 4th rear idler design reduces drag and rolling resistance.
- Works in conjunction with stock 3 wheel setup.

REV-XP Summit
860200357
REV-XP, REV-XR 120" & 137"
860200358
\$44.99

3RD REAR WHEEL KIT

- (Not illustrated)
- Third rear idler design reduces drag and rolling resistance.

REV-XP MX Z (TNT), REV-XR
860200118
\$44.99



Pilot DS-2
MOUNTAIN
PERFORMANCE



Pilot 5.7 SL Skis
TOURING



Pilot 5.7R Skis
PERFORMANCE



Pilot 5.7 Skis
TRAIL SPORT /
PERFORMANCE



Pilot DS SKIS
MOUNTAIN
PERFORMANCE



Pilot 6.9 Skis
MOUNTAIN SPORT

SKIS

REV-XP

REV-XR

REV-XU

TUNDRA

REV-XS

REV-XM

REV

PILOT 5.7 SL SKIS	TOURING	<ul style="list-style-type: none"> - Reduces steering effort and darting. - Specifically designed for Touring applications. - Skis sold individually. 	\$99.99
PILOT 5.7 SKIS	TRAIL SPORT / PERFORMANCE	<ul style="list-style-type: none"> - Lightweight single runner skis provide virtually effortless steering at low speeds, and constant grip without compromise at higher speeds. 	\$99.99
PILOT 5.7R SKIS	PERFORMANCE	<ul style="list-style-type: none"> - Same single keel ski equipped on the RS race sled. - Designed for aggressive riders. 	\$99.99
PILOT 6.9 SKIS	MOUNTAIN SPORT	<ul style="list-style-type: none"> - Specifically designed for mountain riding, this offset design improves flotation without compromising vehicle width. - Carbides sold separately. - Skis sold individually. 	\$104.99
PILOT DS SKIS	MOUNTAIN PERFORMANCE	<ul style="list-style-type: none"> - Designed specifically for mountain riding. - Vertical outer edge dramatically improves sidehilling bite. - Narrower and thinner, yet stiffer for dependable steering and carving. - Boot grips more effective than ever. - Carbides sold separately. - Skis sold individually. 	\$99.99
PILOT DS-2 SKIS		<ul style="list-style-type: none"> - New keel design offers unmatched steering performance when used in conjunction with new ski leg. - Lower steering effort, increased agility and predictability. - Color options available to customize your sled. 	\$99.99

		BLACK	YELLOW	BLACK/YELLOW	BLACK/WHITE	RED	ORANGE
TOURING	PILOT 5.7 SL (1 carbide/ski)	Left: 505072548 Right: 505072548	N/A	N/A	N/A	N/A	N/A
TRAIL SPORT / PERFORMANCE	PILOT 5.7 (1 or 2 carbides/ski)*	Left: 505072942 Right: 505072943	Left: 505073019 Right: 505073020	Left: 505073021 Right: 505073022	Left: 505073023 Right: 505073024	VIPER RED Left: 505073005 Right: 505073006	N/A
PERFORMANCE	PILOT 5.7R (1 carbide/ski)	Left: 505072205 Right: 505072205	N/A	N/A	N/A	N/A	N/A
MOUNTAIN SPORT	PILOT 6.9 (1 carbide/ski)	Left: 505073055 Right: 505073056	Left: 505073057 Right: 505073058	Left: 505073059 Right: 505073060	Left: 505073024 Right: 505073062	N/A	N/A
MOUNTAIN PERFORMANCE	PILOT DS (1 carbide/ski)	Left: 505073100 Right: 505073100	Left: 505073101 Right: 505073101	Left: 505073103 Right: 505073103	Left: 505073105 Right: 505073105	N/A	N/A
	PILOT DS-2 (1 carbide/ski)	Left: 505073281 Right: 505073281	Left: 505073278 Right: 505073278	N/A	Left: 505073280 Right: 505073280	LAVA RED Left: 505073508 Right: 505073508	Left: 505073509 Right: 505073509

*Second carbide can be added to ski by drilling marked additional holes.

Note: The use of aggressive skis, ski carbide runners or studs will alter the handling of your snowmobile, particularly in terms of manoeuvrability, acceleration and braking. Please refer to your Operators Guide for more details.



C&A SKI HANDLE KIT

- ISR approved.
- Works in conjunction with XT or XTX model skis.
- Sold individually.

C&A ski
860200961 - Black
860200962 - Yellow
\$52.99



C&A XT EXTREME SKI KIT

- The XT is the most aggressive ski in the C&A lineup.
- This ski features double outer keels and a 1 1/2" center drop keel for maximum edge control and penetration in tight turns.
- It is the choice of snocross champions around the world.
- Mounting kits and carbides are sold separately.
- Handle included.

860200963 - Black
860200964 - Yellow
\$459.99



C&A XTX EXTREME CROSSOVER SKI KIT

- The XTX ski has the same great features of the XT, such as a square outer keel for maximum edge control and penetration in tight turns.
- 1 1/4" wide ski profile to provide great flotation in deep powder.
- Great all around performance in any terrain.
- Mounting kit and carbides are sold separately.
- Handle included.

860200965 - Black
860200966 - Yellow
\$459.99



C&A SKI MOUNTING KIT

- Complete mount kit for C&A pro XT and XTX models.
- For 2 skis.

C&A ski
860200960
\$24.99



SKI SKIN

- Provides additional flotation and reduces ski wear.
- Made of durable polyethylene.
- Sold in pairs.

Pilot 6.9 skis
860200422 - Black
\$129.99

PILOT SKI LINER

- Provides additional flotation and reduces ski wear.
- Same durable material as DS Ski.

Pilot DS
860200636
\$149.99

Pilot DS-2
860201040 - Black
\$129.99

ADJ SKI SKIN

- Fits Yeti "ADJ-SKI".
- 860200388 - Black**
\$129.99



SKI HANDLE RIVET KIT

- Includes 2 long and 2 short aluminum rivets for repairing the handle on pilot skis.

REV-XP, REV-XR, REV-XU
860200525
\$9.99



Pilot R



Pilot DS

SKI HANDLE

- ISR legal race ski loop.
- High-density colored polyethylene loops.

Pilot (except DS), Precision, Flex, Mountain
505070917 - Yellow
505070963 - Black
505071032 - Blue
505071038 - Scarlet Red
505071048 - Orange
505071059 - Viper Red
505071556 - Full Moon
505072102 - White
\$21.99

Pilot DS, Pilot DS-2
505072976 - Black
505073107 - Yellow
505073108 - White
505073388 - Lava Red
505073513 - Orange
\$21.99

- ISR legal race ski loop.

Pilot R/Pilot
505071674 - Yellow
\$21.99

SKI-DOO PILOT* SKI CARBIDES TO SUIT ALL RIDING STYLES



MOUNTAIN PERFORMANCE PILOT DS-2 SKI CONVERSION KIT (INCLUDING SKI LEGS)

- Kit allows riders to update to Model Year 2014 steering configuration.
- The combined ski and ski leg allow for reduced steering effort and increased steering agility and predictability.
- Includes 2 skis, 2 handles with rivet kit, 2 ski legs, 2 Expedition carbides and all required hardware.

REV-XP, REV-XR, REV-XU Tundra

860200752 • Black

\$449.99



PILOT DS SKI KIT

- Complete kit for updating earlier models, including Summit, with latest ski technology.
- Includes 2 ski assemblies with pre-installed handles, 2 Expedition carbides and all required hardware.

REV-XP, REV-XR, REV-XU

860200559 • Black

\$249.99



PILOT 5.7 SKI UPGRADE KIT

- Complete kit for upgrading earlier snowmobile models.
- Includes 2 skis, 2 handles with rivet kit, 2 Expedition carbides and all required hardware.

REV, ZX, RF

860200524 • Black

\$249.99



PILOT 5.7 & 6.9 FASTENER KIT

- Mounting kit for Pilot & Pilot X skis.
- Includes 2 carbides.

RF, RT, REV, ZX

860510800

\$74.99



EXPEDITION (STOCK REPLACEMENT)

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM

860201042 • Pilot - Round 1/16" - Pack of 2

860200141 • Pilot - Square - Pack of 2

\$60.99



EXTREME (STOCK REPLACEMENT)

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM

860201045 • Pack of 4

\$129.99

860200031 • Round 1/2" - Pack of 2

\$64.99

*Protected under patent numbers US 7,413,198, US 7,389,995 and CA2535565.
 Note: The use of aggressive skis, ski carbide runners or studs will alter the handling of your snowmobile, particularly in terms of manoeuvrability, acceleration and braking (please refer to your Operators Guide for more details).

CARBIDES

REPLACEMENT FOR XP, XR, XU TUNDRA, XS and XM

		EXPEDITION	EXTREME
		SQUARE PREFORMED 4" 60°	1/2" ROUND PREFORMED 5" 60°
TOURING	PILOT 5.7 SL (1 carbide/ski)	N/A	860201045 (pack of 4)
TRAIL SPORT / PERFORMANCE	PILOT 5.7 (1 or 2 carbides/ski)	860200141 (pack of 2)	N/A
PERFORMANCE	PILOT 5.7R (1 carbide/ski)	N/A	860200031 (pack of 2)
MOUNTAIN SPORT	PILOT 6.9 (1 carbide/ski)	860200141 (pack of 2)	N/A
MOUNTAIN PERFORMANCE	PILOT DS, PILOT DS-2 (1 carbide/ski)	860200141 (pack of 2)	N/A

SKI-DOO BY *woody's* CARBIDES



BRP INVENTED AND PATENTED THE SKI CARBIDE IN 1973



CARBIDE RUNNER

- The Dooly™ by Woody's has two 7/16" Flat-top[†] runners mounted on a plate for each ski.
- Four contact lines on snow surface help decrease darting of sled as it makes own groove in a trail.
- When in a turn, only one of the Dooly bars is in

- contact with the snow or ice.
- A Dooly with 4", 6" or 8" of carbide on both runners provides the same turning power as a single runner with 4", 6" or 8" of turning carbide.
- Sold individually.

Pilot Skis, except DS & DS-2

860200443 • Preformed 4" 60°

\$54.99

860200513 • Preformed 6" 60°

\$63.99

860200514 • Preformed 8" 60°

\$84.99



C&A CARBIDE RUNNER

- 60 degree turning carbide for performance cornering.
- 3/8" mounting bolts fit tight to the ski.
- Steel host bar.
- For racing use only.

C&A ski - Race SCC-5000 (10")
860200967

\$129.99

C&A ski - Race SCC-5008 (8")
860200968

\$95.99


C&A ski - Race SCC-5006 (6")
860200969

\$75.99

C&A ski - Trail
860200970

\$69.99

- Woody's Trail - Carbide wear pads front & rear with hard weld between carbide 4" 60 degree with 7/16" host bar.

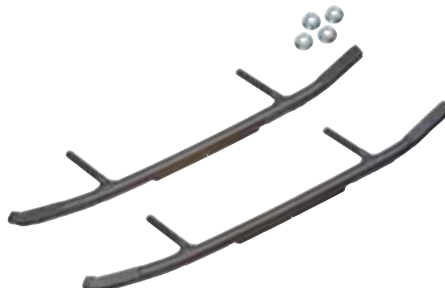

TRAIL BLAZER IV[†] CARBIDES

- 1/2" round preformed material swedged at each end to best fit ski contour.
- With 6" of 60° turning carbide, this runner is designed for trail riders looking for performance in cornering power and control.
- Pack of 2.

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM

860200579 • Pilot skis

\$75.99

EXTENDER TRAIL III[†] CARBIDES

- 1/2" round preformed material swedged at each end to best fit ski contour.
- 4" of 60° turning carbide provides positive cornering control.
- Pack of 2.

REV-XS, REV-XM, REV-XP, REV-XR, REV-XU Tundra

860200578 • Pilot skis

\$60.99

EXECUTIVE[†] CARBIDES

- 1/2" round preformed material swedged at each end to best fit ski contour fitted with 8" of 60° turning carbide.
- Performance trail riders are known to use this runner.
- Provides proper balance with a studded track.
- Pack of 2.

REV-XP, REV-XR, REV-XU Tundra, REV-XS, REV-XM

860200580 • Pilot skis

\$91.99





FRONT FOX® FLOAT II SHOCKS

- Lose up to 6 pounds (2.7 kg) over coil spring shocks.
- Calibrated for optimum performance on Summits.
- Negative spring.
- Infinitely adjustable main air chamber pressure.
- IFP (Internal Floating Piston).
- Advanced high-flow velocity-sensitive damping.
- Fully rebuildable and revalveable.
- Comes with Fox air pump for pressure adjustment.

(REV-XM, REV-XP) 36" front suspension
860200958

\$694.99



FOX FLOAT SHOCK GUARDS

- Protection for Fox Float II shocks.
- Protects shock body from root and brush damage.
- Sold in pairs with mounting hardware.

Fox Float II shocks
860201011 • Black

\$25.99



X-RS SHOCK CONVERSION KIT

- Front and rear.
- Includes front KYB PRO 40 R Easy-Adjust shocks with springs, center and rear KYB PRO 40 R Easy-Adjust shocks, hardware.

Fits rMotion 120" with quick adjust system only
860200922 • Black

\$2,499.99

tMOTION SUSPENSION CONVERSION KIT

- Revolutionary pivoting suspension kit allows for easier roll-up in mountain riding maneuvers.
- Combine with PowderMax 2 with Flexedge track for full benefit.

REV-XP Summit & Freeride with SC-5M and SC-5M2 suspension, except Summit Hillclimb*

860200938

\$349.99

*Need to change rear shock on Summit Hillclimb to non-reservoir version (P/N 503192208)

CURVED LOWER A-ARMS KIT

- Replace your stock lower A-arms with this curved lower A-arm kit.
- Rounded design increases ground clearance, reducing vehicle drag.

REV-XP, REV-XM with 36" front suspension
860200612 • Black

\$299.99



HPG SHOCK KIT - REAR SUSPENSION

Rear shock

- HPG clicker, aluminum, rebuildable.
- 2-way adjustable compression (low/high speed).
- Piggy-back reservoir.
- High capacity.
- No fading.

Center shock

- HPG, aluminum, rebuildable, lightweight.
- Adjust to your riding style or trail conditions.

REV 121"

860429400 • X Package SC-4 shocks

REV-XP 120"

860200105 • X Package SC-5 shocks

\$504.99

HPG SHOCK KIT - FRONT SUSPENSION

- X Package front shocks.
- HPG clicker, rebuildable, lightweight.
- Adjust to your riding style or trail conditions.
- Adjustable rebound.

REV

860429500

REV-XS, REV-XP

42" and 39" front suspension

860200104

\$434.99

FRONT SUSPENSION KITS

36" (91 cm) S-36 Handling Package

- Update your older Summit and boondock all day long with a sled that feels 20 pounds (10 kg) lighter.
- S-36 handling package gives you complete and effortless control over your mountain sled in deep powder.
- Narrower ski stance (36"/91 cm) and longer center shock significantly improve sidehilling and deep snow carving.
- HPG Plus shock absorbers.
- Ski stance easily adjustable from 35.7" (90 cm) to 37.4" (95 cm).

REV-XM, REV-XS, REV-XP

860200799

\$599.99

42" (107 cm)

S-36 Handling Package

- Complete conversion kit for wide stance performance trail-oriented suspension.
- MX Z ski stance 42" (107 cm).
- HPG Plus R shock absorbers with rebound clicker adjustment.

REV-XM, REV-XS, REV-XP

860200800

\$599.99



Watch video of the
ICE SCRATCHERS in action:
store.ski-doo.com/video

THESE ICE SCRATCHERS
CAN BE USED IN REVERSE



ICE SCRATCHERS

- Provides additional cooling and lubrication in hard and icy conditions.
- Double coil allows use in reverse.
- Can be stored along the tunnel when not in use.

REV-XM, REV-XP Summit

860200444

\$79.99



SC-5 LIMITER KIT

- Fully adjustable front arm limiter strap for optimum performance in all riding conditions.

REV-XP Summit SC-5

860200402

\$84.99



DISCONNECTING YOUR SWAY BAR
MAKES ROLL-UP EASIER
FOR MOUNTAIN MANEUVERS

SWAY BAR QUICK DISCONNECT LINK KIT

- Kit allows you to utilize the benefits of a sway bar on rough trails, and quickly disconnect it for sidehilling the mountains.
- Sold individually.

REV-XM, REV-XP Summit 2013 & up

860200811

REV-XP Summit 2012 and prior

860200667

\$69.99



THE SEA-DOO RX DI WATERCRAFT WAS THE FIRST VEHICLE TO HAVE LEARNING KEY TECHNOLOGY IN 2000.



LEARNING KEY 903 (PROGRAMMABLE)

• Ask your dealer to program you a spare key.

Vehicles with 900 ACE engine
860200907 • Green

\$49.99



DESS™ CORD

• Ask your dealer to program you a spare key.

515177057

\$36.99



REWIND STARTER KIT

• Complete rewind kit allows for a pull start on all 600 HO E-TEC and 800R E-TEC engines, except REV-XU Expedition, WT, ST.

860201053

\$154.99

XS, XM kits: rewind handle locates behind panel; instant handle access requires different side panel.



LED REAR LIGHT

• High tech look.
• Lower power use combined with higher resistance to vibration for longer product life.

REV-XP, REV-XP Fan, REV-XR
except GTX, Grand Touring SE and LE
860200423

\$99.99



12-VOLT POWER OUTLET

• 12V accessories port.
• Wiring harness is not included.

All models with battery (except REV-XM, REV-XS, REV-XP, REV-XR, REV-XU Tundra)
861507200

\$24.99

REV-XP, REV-XR, REV-XU Tundra
(except standard 2011-2012)
860200196

\$29.99

• Power up all your electronics with this easy to mount 12V plug.
• Installs inside storage compartment.
• Wiring harness included.

REV-XM, REV-XS 2013
860200632

\$29.99



HEATED PASSENGER VISOR KIT

• Enjoy fog-free riding with this visor kit option for your 1 + 1 seat.
• To be used in conjunction with heated passenger handgrips (860200061 + 860200584).

860200882

\$39.99



HEATED VISOR KIT


• Easy install plug-in for visor kit or heated bags.
• Wiring harness included.

REV-XP, REV-XR, REV-XU Tundra, REV-XM, REV-XS
860200628

\$31.99



Analog engine temperature

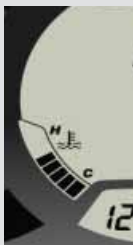


Engine temperature



ENGINE TEMPERATURE MODULE

- Easy plug & play into existing gauge cluster.
- Module plugs into the wire harness and activates the function on the gauge.
- Fits on REV-XP, REV-XR, REV-XS, REV-XM, analog and multi-function gauges.
- Activates engine temperature display on 2008-2013 models.
- Activates engine temperature display and lap record mode on 2013 & up XM & XS multifunction gauges.

REV-XP & REV-XU Tundra (except 550), REV-XR, REV-XM, REV-XS
 860200629
 \$99.99

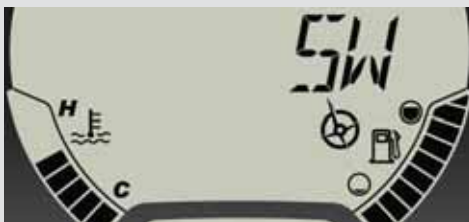

Engine temperature & compass



Lap mode recorder



Lap mode play



PREMIUM GAUGE MODULE

- Enjoy every function your cluster has to offer with this plug and play temperature, compass and lap recorder module.
- Module plugs into the wire harness and activates the functions on the gauge.
- Installation of the premium module does not require installation of the engine temperature module (860200076).
- Fits on multi-function gauge only.

REV-XP (except 550), REV-XR equipped with multi-function digital gauge. Not compatible with REV-XS, REV-XM
 860200592
 \$149.99



YUASA⁺ BATTERIE

- 515176151 • 30 Amps. Wet (YIX30L) \$156.99
- 410922962 • 21 Amps. Wet (YTX24HL-BS) \$138.99
- 296000295 • 18 Amps. Wet (YTX20HL-PW) \$124.99
- 710000283 • 13 Amps. Wet (YTX15L-BS) \$116.99

- 410301203 • 18 Amps. Wet (YTX20L-BS) \$112.99
- 410301204 • 3 Amps. Wet (YTX4L-BS) \$49.99
- M42215 • 14 Amps. Dry (12N14-3A) \$47.99



YUASA⁺ SMART SHOT AUTOMATIC BATTERY CHARGER

- The Yuasa Smart Shot automatic battery charger is available in 900 milliamp or 1.5 Amp charge capacity and ensures that optimum power is available from your battery when you need it.
- Charger is supplied with a fused-ring connector, in addition to the alligator clips that can be attached permanently to your battery, making charging and maintaining your battery a snap.

529035772 • Automatic 6/12V 1.5 Amp 5 Stage \$62.99

529035773 • 900 Automatic 12V 900MA \$41.99



BATTERY HEATER

- Designed specifically for Ski-Doo 1200 4-TEC™ models.
- Prevents battery performance loss, aiding starting during extremely cold weather.

860200276
 \$99.99



3W HEATER FOR BAGS

- Replacement or additional heater for heated bags.

515176786
 \$19.99



ELECTRIC ACCESSORIES WIRING HARNESS

- Electrical kit required when combining multiple accessories.

REV-XS, REV-XM, REV-XP, REV-XR, REV-XU Tundra (except Std 2011-2012)
 860200817
 \$34.99



RCA ADAPTOR PLUG KIT

- Y plug power splitter lets you connect 2 heating components or 1 heater and 1 electrical visor.

REV-XM, REV-XS, REV-XP, REV-XR
 515176794
 \$9.99



PRIMER KIT

- Provides hassle-free starting in extreme cold temperatures.

REV-XU Tundra
 860200416
 \$34.99



ELECTRIC STARTER KIT

• Start your sled with the simple push of a button.

REV-XP 500SS 2008
860200098

REV-XP 500SS, 600 Sport
2009-2012
860200265

REV-XP 600 E-TEC 2008
860200266

REV-XP 600 SDI
860200275

\$509.99

REV-XP 800R 2008
860200042

REV-XP, REV-XM, REV-XS 600
E-TEC 2009 and up, 800R,
800R E-TEC
860200627

REV-XP Fan, REV-XU Tundra
860200347

Note: kit components may vary per model.



AIR RADIATOR KIT

• Provides addition cooling in extreme conditions.

REV-XR 1200 4-TEC
860200448

\$504.99

Vehicles with 900 ACE engine
860200903

\$429.99



FUEL TANK CONVERSION KIT

• 10-gallon (38 liters) full size fuel tank kit for converting vehicles with 5-gallon racing fuel tank.
• All necessary hardware for installation included.

REV-XP & REV-XS with racing fuel tank (5-gallon)
860200936

\$374.99



ENGINE HEATER

• Improves starting in extreme cold temperatures.

600 ACE, 900 ACE
860200597

\$335.99





MAINTENANCE KIT FOR DRIVE PULLEY

Includes: 1 Spring Cover Ass'y, 3 Rollers Ass'y, 1 Bushing (Siding Flange), 6 Slider Shoes, 6 O-Rings, 1 Circlip, 3 Cotter Pins & 3 Lever Axles.

SKU	COMMENTS	PLATFORM	PRICE
415129624	2011 engine (550F) and 2011 and up with engines (600, 600 E-TEC (Sea-Level))	REV-XP REV-XR	\$119.99
415129708	2011 and less with engine (1200) and 2011 and less with engines (600 E-TEC High Altitude)		
415129625	2012 with engine (1200) and 2012 with engines (600 E-TEC High Altitude)		
415129626	2011 and up with engines (800 P-TEK, 800 E-TEC)		
415129627	2008-2010 engines (800 P-TEK, 800 E-TEC)		



eDRIVE 2 CLUTCH

• With double the number of rollers and arms compared to TRA designs, this clutch is designed for low maintenance and long life with 4-stroke powertrains.

4-TEC 1200 only (MY2010 and up)

415129789

\$499.99

MAINTENANCE KIT FOR DRIVE PULLEY eDRIVE 2

Includes: 6 Rollers Ass'y, 12 Slider Shoes, 3 O-Rings

SKU	COMMENTS	PLATFORM	PRICE
415129781	2013 with engine (1200) and Tundra with engine (ACE 600)	REV-XP REV-XR	\$119.99



FLOATING QRS SHORT SHAFT CONVERSION KIT

- Conversion kit allows installation of a removable floating secondary pulley.
- Also provides ability to remove driven pulley without removing countershaft.
- Includes gun-drilled lightweight shaft and all necessary parts and hardware for conversion.

Fits 600 CARB, 600 E-TEC, 800 P-TEK and 800 E-TEC engines

860200832

\$449.99



SEA-LEVEL CALIBRATION CLUTCH KIT

Summit & Freeride 800R E-TEC 860201007 - 146"	Summit 800R PowerTEK 860200394
\$99.99	\$89.99
860201008 - 154"	
860201009 - 163"	
\$149.99	

DRIVEN PULLEY CAM FOR QRS ROLLER SECONDARY CAM

- Specially designed for the QRS driven pulley.
- For optimal smooth performance and durability.

REV-XP

417126956 - 40°	417126975 - 44-33°
417126962 - 38°	417126976 - 46-42°
417126973 - 44-42°	417127011 - 44°
417126974 - 44-40°	417127012 - 42°
\$109.99	



QRS TECH LINK

- Designed for extreme use, this lightweight fully adjustable carbon fiber support helps maintain the driven pulley position through the most extreme loads.
- Mounts conveniently between the front bulkhead and secondary tower.

(REV-XM, REV-XS, REV-XP) except 550 Fan and ACE engines

860200783

\$184.99



PBO MATERIAL INCREASE THE DURABILITY OF YOUR HIGH PERFORMANCE DRIVE BELTS.



PERFORMANCE DRIVING BELTS

- High performance drive belts calibrated to maximize your sled's performance.
- Aramid tensile cords used in construction for extra long life and dependability, also delivers a consistent length with minimal belt shrinkage and minimal length adjustments.
- High tensile reinforced fiber elastomer undercords provide minimal dusting and long term flex life.
- Flexweave overcord for superior adhesion and crack resistance.
- Consistent performance during life of belt.
- Quality you can count on for optimum performance.
- Built with distinctive durability features for mountain, trail or fast tracks.

SKU	DESCRIPTION	PRICE
REV-XP, REV-XR, REV-XU, REV, REV-XM, REV-XS		
417300383	600 E-TEC, 800R PowerTEK, 1200 4-TEC	\$119.99
417300391	800 E-TEC and Summit	\$174.99
417300197	600	\$95.99
417300367	Tundra 550F	\$54.99
415060600	Fan	\$54.99
414860700	600 ACE	\$54.99
RT		
417300189	1000	\$164.99
ZX		
417300127	800	\$95.99
417300067	700 - 2001	\$95.99
415060600	Fan	\$54.99
417300197	V-1000 and 600 SDI (2004)	\$95.99
417300383	800 2004 models	\$119.99
SKANDIC		
605348425	All 2008 models, 2007 TUV and SWT V-800	\$109.99
414633800	All Fan Skandics except Tundra	\$54.99
417300326	Tundra RF 300	\$77.99
415060600	Tundra RF 500	\$54.99
417300197	Tundra RF V-800	\$95.99
414827600	Old Tundra 280 Fan	\$54.99
S-CHASSIS		
417300067	Semi-cogged	\$95.99
414860700	Not cogged	\$54.99

SAFETY TIP: IT'S ALWAYS GOOD TO CARRY A SPARE OEM BELT AND SPARK PLUGS ON EVERY RIDE.



NEW OWNER START-UP KIT

• Includes 1 drive belt, 2 spark plugs, 1 gallon of XPS 2-stroke semi-synthetic oil and 1 quick fix detailing kit (XPS spray cleaner and polish with two XPS microfiber towels) in a convenient box ready to go.

800 E-TEC

415129547

600 E-TEC Summit

415129558

\$224.99

800 PTEK

415129544

\$204.99

600 E-TEC, except Summit

415129543

\$174.99

550 F

415129545

\$104.99



NGK⁺ Iridium LX Spark Plug

• They're the spark plugs that high performance recreational vehicles respond to the best and serious riders depend on the most.
• NGK Iridium IX Spark Plugs ignite a whole new way of enjoying faster starting and quicker acceleration on demand, and drawing peak fuel efficiency and longer life from your engine under the most demanding riding environments.

515176726 • BR8ECSIX
515176728 • BR9ECSIX
515176729 • BR9ECSIX-5
\$16.28

415129449 • DCPR8EIX
515176727 • BR8EIX-SOLID
515176730 • BR9EIX-SOLID
515176734 • ZFR5FIX-11
\$11.03



NGK⁺ Spark Plug

• You'll see a difference with genuine NGK spark plugs.
• Solid steel terminal reduces the chance of arcing in the plug cap, which interferes with the M.P.E.M.
• A necessity in today's ignition systems.

415129375 • 600 E-TEC PZFR6F
\$15.99
415129429 • CR8EKP
\$9.48
415129484 • 800 E-TEC PFR74B
\$15.49

415128524 • BR9-ECS SDI
512059552 • BR9ECS5
512060029 • BR8ECS - SDI
\$6.72
414961100 • BR9-ES
\$2.63



PISTON KIT

• Kit includes: piston, rings, piston pin, needle bearing and circlips.

415129405 • (793 HO)

415129407 • (797 XP)

\$215.99

415129406 • (593 HO including SDI)

\$179.99

415129541 • (Ski 593)

415129542 • (Ski 552)

\$189.99



CVT COOLING SYSTEM

• Ensures superior air flow to reduce belt temperature by 45 °F (25 °C).

REV-XP, except 2008

860200883

\$49.99



NSK BEARING

• Advanced sealing technology featuring patented light-contact seals that resist contamination in the toughest environments, while delivering higher-level performance.
• Crown cage uniquely designed and made from advanced engineered plastics (polyamide) that help extend grease life, while.
• reducing noise and power loss in the bearing.
• Advanced lubricant technology that is synthetic, water-repellent, rust-resistant and eco-friendly.
• Superior steels vacuum-degassed and freed from impurities to extend bearing life by up to 80% over conventional steels.

REAR SUSPENSION WHEEL BEARING

PART NUMBER	DESCRIPTION	PRICE
293350055	NSK 6205T1XADDU2C3E ENRS	\$8.49
503190396	NSK 6004T1XDDU2C2E-H ENRS	\$8.49
503191982	NSK 6005T1XBDDU2-H-ENRS	\$8.49
503191778	NSK 6006T1XDDU ENRS	\$8.49



OIL FILTER

• Use on all Ski-Doo engines.
• See your dealer for details.



THE 800 E-TEC IS ITS OWN ANIMAL and riding style, break-in, altitude change, and more can cause oiling rates to vary from 50:1 to 100:1.



ALL OIL IS **NOT** EQUAL

E-TECS REQUIRE HIGH-TECH BLEND; HERE'S HOW XPS OIL IS DIFFERENT

BY MARK BONCHER, AMERICAN SNOWMOBILER

Do not, I repeat, do not listen to anyone who tells you that all 2-stroke sled oil is the same.

While some snowmobiles may actually start and run on many kinds of 2-stroke oil, Ski-Doo's more advanced E-TEC 2-stroke engine will not, at least it will not run as well, or as long, on lower grade oils.

We always try to use the recommended Ski-Doo XPS oil in our E-TEC-equipped sleds, but the importance of using this high-tech oil in these direct-injected engines did not hit home until we took a trip to BRP's XPS oil development lab.

BRP promotes that its XPS oils are "Engineered for your Rotax Engine," which we would expect. But we wanted to see just what this "engineering process" consisted of.

We got more than we bargained for!

XPS OIL DEVELOPMENT

We met with Dan Gregg, XPS Oil Director, and several other VIPs to discuss exactly how XPS was developed and why.

First we talked about the time, investment and money it takes to develop a high-tech oil that meets BRP and Rotax engineering standards. We learned that the days of "one-size-fits-all" oils are gone.

The XPS oil chemists, engineers, testers, and many support people went through hundreds of formulations, thousands of dyno hours and more than three years of development and testing directly with Rotax engineers to produce an oil that met Rotax specs. More than 1 million field test miles were ridden and more than \$3 million spent, just on testing to make sure this oil worked with the E-TEC engines.



TEST RESULTS: the first piston was used with the final formulation of XPS that passed testing. The others were used with competing oils and didn't pass dyno testing or the 300+ hour on-snow test.

A recent press release on the new XPS oil said, "With increasingly strict EPA regulations and ever-present inter-brand competition, engines such as Ski-Doo's direct-injected Rotax E-TEC mills are cleaner and quieter than ever. Though the E-TEC fuel system gets most of the attention, the E-TEC engines also boast perhaps the most sophisticated oiling system of any 2-stroke snowmobile ever built. The result is an engine that is as efficient with oil as it is with fuel."

So, oils that break down quicker or don't coat and protect parts as well will not keep the E-TECs running as long or as strong.

Ski-Doo's E-TEC oil pump uses an electronic solenoid that activates four pistons that pump oil through four lines - two lines lubricate the crankcase and two lubricate the 3D RAVE valves. Additionally, sophisticated engine software controls oil delivery for how the rider is using the sled and break-in and changes in altitude and oiling rates can vary from 50:1 all the way to 100:1, depending on how the engine is being run.

So the Rotax oiling system uses its own curve, not unlike a fuel curve. It's a far cry from systems of even a decade ago, and it has specific lubrication needs. The result, Gregg told and showed us, is XPS oil, one of the most technologically advanced snowmobile oils on earth.

OK, so we know E-TEC needs are different and very specific. How is that different than say, the needs of a 4-stroke?

Well, 2-stroke oils have basically 4 parts, an additive system, a solvent, a lubricity agent and a base stock. 4-stroke oils have 3 parts, an additive system, a viscosity modifier, and a base stock.

It's never OK to use 4-stroke oil in a 2-stroke, or vice versa, unless you're in a real life or death situation. Experts at the XPS development center told us that low-ash 2-stroke oils (what all non-marine applications require) are basically constructed the same way.

"Oil chemists start with a base stock - if the base stock is synthetic then the oil is considered full synthetic. Then a solvent is added. Solvents are important for snowmobile oils because they determine the pour point of the oil and most OEMs recommend a pour point of -40 °F, since we most often run our sleds in frigid conditions."

Then a lubricity agent is added that helps reduce friction and also helps the oil burn cleanly, reducing smoke.



THE OIL COCKTAIL LOUNGE is where chemists developed the correct additives, an "oil cocktail" package called XP-M05, that protects the critical duties inside Ski-Doo's high-tech E-TEC engines.

Finally, the additive package is determined. Additives are the most critical component. They are what make an oil "work," Gregg said. Having the right additives, which have been approved and tested by the manufacturer of your sled's engine is the most important thing to consider when choosing an oil.

NO STANDARDS

One of the most interesting things about snowmobile oil, that many consumers may not know, is that there is NO industry standard for snowmobile oils, unlike cars and trucks.

This means that aftermarket and OEM suppliers are not held to a uniform level of performance. Therefore, the top performance levels are dictated by the OEMs.

How do we figure this?

Well, in order to wear a badge such as the XPS / Rotax seal of approval the oil must meet BRP's standards. Random oil makers can claim that their formula works in an E-TEC, or any sled engine, and they likely do work fine in many other engines. Yet these oils have not been developed in cooperation with E-TEC engineers or adhere to any Rotax requirements.

"There are basic, unwritten requirements such as pour point and use of basic 2-stroke formulation principles, but basically any lubrication company can formulate an oil and sell it as snowmobile oil," said Gregg. "Because E-TEC engines have unique oiling demands, it's important to have precise, tailor-made formulations to provide the correct protection," he added.

XP-M05 is the Rotax-approved synthetic oil that is formulated specifically for its E-TEC engines. XP-M05 has specific additives that act as a solid lubricant with high wear protection, reduced friction, and some additives that actually bond to the engine's metal surfaces to create a protective barrier that functions as a dispersant in the ring zone area.

These additives, the XPS crew says, keep carbon from building up on the rings to prevent sticking. Finally, the additive acts as an anti-oxidant to protect the ring zone (critical in Rotax engines) and functions as a detergent that bonds to contaminants, effectively neutralizing them before they can cause damage.

CHEMICALLY, THEN PHYSICALLY TESTED

Physical testing is the only way to determine if oil actually works. After months of the chemists refining XPS, it was tested in the firm's dyno room. BRP developed a test to simulate the life of a snowmobile engine in a shortened time span. They first break-in the engines like you would with your own

Ski-Doo, and then conduct a "severe duty accelerated wear test" that is designed to equal driving 300 hours on snow or 12,000 miles (20,000 km).

We saw dozens of pistons and cylinders used in this test, and saw the failures that oils other than the synthetic XPS oil caused. It wasn't pretty.

That's not to say that XPS was perfect in its first formulation, far from it. Testing on the XPS oil lasted almost right up until the deadline needed to produce the sleds.

However, numerous other oils were run side-by-side with XPS and put through the same severe duty test and none held up to the E-TEC's needs.

"Some of the aftermarket oils failed to meet even basic lubricity tests," said Frédéric Desjardins, head engineer, Power Pack at BRP. "Others were basically good oils, just not good enough for an engine as sophisticated as the E-TEC. The test shows that using anything but XPS in the engine is a possible prelude to catastrophic failure and an expensive engine rebuild." After the dyno testing, more than 1 million miles (1.6 million km) of field tests were logged testing this oil.

OWN CONCLUSIONS AND EXPERIENCES

After having a couple near catastrophic engine experiences myself (that were linked to using less than adequate oil) and listening to the discussion of how this oil came to be, we are even more aware of the importance of matching oil with the engine it was designed for.

The E-TEC is the most high-tech 2-stroke stock sled engine ever made and it only makes sense that the oil used in it should be the most highly developed 2-stroke sled oil. Saving a few bucks and buying cheap oil and expecting it to work just fine in your Ski-Doo is not worth the headache and cost of rebuilding an engine. Just our opinion!

XPS



THE WINNERS, AND ALL RACERS ON ALL BRANDS, OF THE GRUELING ALASKAN IRON DOG RACE USED XPS FULL-SYNTHETIC OIL IN COMPETITION.

XPS 2-STROKE FULL SYNTHETIC OIL

- Full synthetic XPS 2-cycle oil provides the ultimate in wear protection - which is absolutely critical in E-TEC® applications where less oil is used.
- Full synthetic XPS has extra detergency to provide optimum engine cleanliness and anti-wear additives for longer engine life.
- The very best product for E-TEC engines, while providing superior performance in all BRP 2-cycle engines with this high performance, low smoke, low odor formula.

293600132 • 1 quart / 946 ml

293600133 • 1 US gallon / 3.785 L

FOR THE FULL XPS STORY, VISIT WWW.XPSLUBRICANTS.COM



XPS 2-STROKE SYNTHETIC BLEND OIL

- Premium 2-stroke synthetic blend.
- This 2-stroke synthetic blend new formulation was developed specifically for Rotax E-TEC, SDI and Power T.E.K.™ engines and delivers ultimate performance.
- It extends engine life and reduces smoke emissions and combustion deposits compared to conventional oils.

293600100 • 1 quart / 946 ml

293600101 • 1 US gallon / 3.785 L



XPS 2-STROKE MINERAL OIL

- Formulated and developed to work specifically in an oil injection environment.
- Flows at -40 °C (-40 °F) and offers optimal lubrication at all running temperatures for carbureted engines.
- Can also be used as a pre-mix.

293600117 • 1 quart / 946 ml

293600118 • 1 US gallon / 3.785 L



XPS 4-STROKE SYNTHETIC OIL - ALL CLIMATE GRADE

- Unlike other ordinary 4-stroke motor oils, XPS synthetic 4-stroke oil is specifically engineered to meet the particular lubrication requirements of Ski-Doo snowmobiles equipped with Rotax 4-TEC 4-stroke engines.
- Provides easier starting in very cold temperatures.

293600112 • 1 quart / 946 ml

293600115 • 1 US gallon / 3.785 L

TOP REASONS WHY YOUR BRP ROTAX ENGINE DESERVES XPS

We created hundreds of test oils and formula modifications before determining the ideal one.

The additives formulation is unique, designed specifically for the unique needs of E-TEC engines

Validated through thousands of dynamometer hours, and thousands of trail miles

We invested more than \$3 million and more than 1 million miles of field testing to develop both 2-stroke and 4-stroke oils over three years.

While the aftermarket spends millions marketing their oils, we are investing millions on developing the best oils to protect your investment. XPS is the only lubricant specifically engineered, developed, tested for your 2-stroke ROTAX engine.



MAINTENANCE AND OIL CHANGE KIT

- Kit includes: 1 gallon (3.785 liters) of XPS synthetic oil, oil filter, O-rings, 3 NGK spark plugs and instruction sheet.
- Please contact your nearest dealer for suggested retail prices of oil based products.

1200 4-TEC
415129404

600 ACE
415129725



XPS PREMIX OIL

- Superior performance 2-stroke oil developed especially for Rotax 2-stroke engines.
- Formulated for fast and easy mixing at very cold temperatures.

293600120 • 500 ml



XPS CARBON FREE FUEL TREATMENT

- Cleans valves, piston rings and combustion chamber.
 - Approved for use in ethanol blended fuels.
 - 1 oz. treats 1 gal. of fuel.
- 219702533 • 355 ml
\$8.99



XPS SYNTHETIC CHAINCASE OIL

- The best in multigrade chain lubrication, specifically developed for our high performance models.
 - Offers wide operating range of temperatures.
- 293600138 • 355 ml
\$11.99



FUEL STABILIZER

- Fuel additive to protect against fuel contamination and residue build-up in carburetors and gas lines.
 - Today's ethanol blended fuels are hard on a fuel system - Protect yours.
- 413408601 • 8 oz.
\$9.99



XPS STORAGE OIL

- This specialty oil is a must when putting your Ski-Doo snowmobile away in the spring.
 - Specially formulated to protect the engines internal parts from the hazards of rust and corrosion due to condensation during storage or prolonged periods of non-use.
- 413711900 • 350 g
\$9.99



XPS LUBE

- A multipurpose lubricant that prevents rust, corrosion and moisture intrusion.
 - Contains active extreme-pressure additives which provide excellent lubrication and antiwear properties.
 - Comes in a spray can that works upside down.
- 293600016 • 14 oz.
\$11.99



XPS DOT 4 BRAKE FLUID

- Exceeds DOT 3 and 4 requirements.
 - Unique low-moisture formulation providing maximum protection against vapor lock.
 - Recommended in Ski-Doo snowmobiles and Can-Am on-road vehicles.
- 293600131
\$9.99



HPG SHOCK OIL

- High quality shock oil for performance shocks used in severe conditions.
 - Impedes foaming to reduce fade.
- 293600035 • 1 L
\$73.99



XPS MINERAL CHAINCASE OIL

- Dependable mineral-base chaincase protection.
- 415129500 • 250 ml
\$7.99



PRE-MIXED ANTIFREEZE/ COOLANT

- Pre-mixed, ready to top up your coolant level.
 - Blended to perform best in our Rotax engines with anti-corrosive additive.
- 219700362
1 quart / 946 ml
\$8.99



XPS SUSPENSION GREASE

- Designed to protect and lubricate at extremely low temperatures.
 - Allows suspensions to perform regardless of conditions.
- 293550033 • 400 g
\$9.99



PULLEY FLANGE CLEANER

- Easy-to-use cleaner specifically developed to quickly remove gunk and grime from primary and secondary pulley flanges.
 - No rinsing required.
- 413711809 • 320 g
\$20.99



HEAVY-DUTY CLEANER

- Strong citrus cleaner for jobs such as engine degreasing to remove grease, oil and grime.
- 293110001 • 400 g
\$13.99



XPS PWC, SNOWMOBILE AND ROADSTER QUICK DETAILING KIT

- Kits includes: spray cleaner, polish and 2 microfiber towels.

219701714
\$17.99



XPS SPRAY CLEANER & POLISH

- Removes dirt, grease, road grime and water marks easily and quickly.

219701706 • 397 g
\$9.99



XPS MICROFIBER TOWELS

- Made of extremely fine fibers, their soft surfaces have been perfected for polishing painted, gelcoated and hard shiny surfaces.

219701759 • Pack of 2
\$8.99

7

ESSENTIAL BRP PRODUCTS TO ENSURE A PROPER TUNE-UP



MAKE THE RIGHT CHOICE

BRPs commitment to quality means that every snowmobile is engineered to the highest industry leading standards. Nevertheless, a lack of proper maintenance may cause even the best components to eventually fail.

By using original BRP maintenance parts, you are taking care of your investment.

1
DRIVE BELT
PAGE 168



2
XPS SYNTHETIC
CHAINCASE OIL
PAGE 174



3
CARBIDES
page 161



4
CLUTCH
MAINTENANCE
KIT
PAGE 167



5
PILOT SKIS
PAGE 158



6
IDLER WHEEL KIT
PAGE 157



7
MAINTENANCE
AND OIL
CHANGE KIT
PAGE 173



YOU MAY BE READY FOR SNOW, BUT IS YOUR SLED?

Going to your BRP dealership for regular maintenance can prevent unnecessary and more expensive repairs in the long run.

Just follow the check list below.

It was designed by experts who understand your Ski-Doo snowmobile and know exactly how to keep it in top form providing superior performance and reliability.

SYSTEM	✓ COMPONENT	ACTION	WHY	BEGINNING OF SEASON	MID SEASON	EVERY RIDE	END OF SEASON
FUEL	<input type="checkbox"/> Carburetor	Clean	A leading cause of engine failure upon start-up after extended storage is varnished or gummed up carburetor fuel passages, especially when fuel stabilizer is not used. Cleaning is essential.	✓			
	<input type="checkbox"/> Fuel filter	Replace	Today's high performance injection systems demand clean constant fuel flow. Today's gasoline blends can bring more contaminants on board.	✓			
	<input type="checkbox"/> Fuel	Add stabilizer	Protects against fuel damage over extended storage periods.				✓
REAR SUSPENSION	<input type="checkbox"/> Idler Wheels	Check bearings, inspect rubber	Essential for performance in low snow conditons - even short stretches. Worn or corroded bearings and missing rubber on wheels leads to more friction, premature track wear and reduced performance.	✓	✓		
	<input type="checkbox"/> Hyfax	Inspect/Replace	These allow your track to slide easily along your suspension. Worn hyfax lead to damage on both slide rails and track clips.	✓		✓	
	<input type="checkbox"/> Nuts and bolts	Check torque	To ensure proper function of all components the mounting fasteners must be torqued properly.	✓	✓		
	<input type="checkbox"/> Axles and pivots	Grease/lubricate	Reduce wear, prevent corrosion and increase suspension performance.	✓			
	<input type="checkbox"/> Shocks	Check compression and rebound performance	Shocks that don't work properly deliver a poor ride to your body. Handling in all conditions can be affected and wear transfers to other suspension components.	✓	✓		
	<input type="checkbox"/> Shocks and springs	Set up for rider	A suspension properly calibrated for your riding style and ability will reduce fatigue and improve vehicle performance. Take the time to make yours a great ride.	✓	✓		
TRACK	<input type="checkbox"/> Track clips	Inspect/Replace	Replace any severely worn twisted or broken clips to protect your track's integrity.	✓			
	<input type="checkbox"/> Lugs	Inspect Lugs, general condition	This is the equivalent to your car or truck tires. Good traction and performance starts here.	✓			
	<input type="checkbox"/> Track	Check alignment and tension	Poor alignment and innappropriate tension may cause premature track and hyfax wear. Also effects overal vehicle performance.	✓			
SKIS	<input type="checkbox"/> Carbides	Inspect ski bottoms and carbides	Steering control is crucial, worn skis or carbides have far less steering response and accuracy. New carbides is usually the answer.	✓		✓	
		Verify alignment	Proper alignment ensures easy and effective steering, eliminates darting and maintains good top speed.				
DRIVE PULLEY	<input type="checkbox"/> Sheave surface	Clean	Clean surfaces provide maximum belt grip and reduced heat.	✓	✓		
	<input type="checkbox"/> Roller/sliders	Inspect/replace for wear or flat spots	Properly working clutches deliver the power when you want or need it, increase fuel mileage, reliability and belt life.	✓	✓		
REAR PULLEY	<input type="checkbox"/> Roller/sliders	Inspect rollers for flat spots - check siders for excessive wear	The drive and rear pulleys work together to keep the engine RPM in the optimal range. If either is not working it effects the upshift and backshift.	✓	✓		
	<input type="checkbox"/> Helix and sheave surfaces	Clean	Clean surfaces allow for better, smoother shifting and cooler temperatures.	✓	✓		
CHAIN CASE	<input type="checkbox"/> Oil	Replace once a year	Moisture build-up may cause premature bearing/gear wear or failure. Best to do at year end before summer storage, but do it at least once a year.	✓			✓
BRAKING SYSTEM	<input type="checkbox"/> Brake pads	Inspect for wear	Worn pads decrease braking efficiency and performance.	✓	✓		
ENGINE	<input type="checkbox"/> Combustion chamber	Fog with storage oil	Prevents corrosion during extended storage. Super simple with E-TEC engines.				✓
	<input type="checkbox"/> Oil system 4-stroke	Change oil	Prevent wear on critical components and ensure long engine life.				✓

TAKE CARE OF YOUR SNOWMOBILE by maintaining it using quality OEM BRP and Rotax parts and products. You purchased the best vehicle available in the market, it deserves the best maintenance products.

RIDE IT HARD. TREAT IT RIGHT.



**XPS. THE ONLY OIL ENGINEERED BY BRP
FOR THE LEVEL OF PERFORMANCE YOU EXPECT.**

FOR OUR EXCLUSIVE OFFER,
VISIT XPSPROMOTION.COM AND ENTER THIS CODE: **XV3H3T7**



THE WORLD IS OUR PLAYGROUND

Nothing is more valuable than your playtime. That is why BRP is dedicated to continually finding new and better ways to help you enjoy your favorite power sports. From snow to water to both on- and off-road fun, our passion for adventure fuels the innovations that result in the ultimate power sports experience for our customers. We value



the land and water we play on and are committed to protecting it. Our desire to thrill is paired with an emphasis on rider responsibility, placing personal safety above all else. So that each outing can be the most enjoyable, memorable and thrilling experience possible. Because your free time should always be your best time.

www.brp.com



SKI-DOO® LYNX® SEA-DOO® EVINRUDE®
JOHNSON® ROTAX® CAN-AM®