

2001



*ski-doo*  
*ski-doo*

Grand Touring SE  
Mach Z STD/Tech Plus

Volume 2

Shop  
Manual

484 200 024

# ***2001 Shop Manual***

**VOLUME 2**

GRAND TOURING SE

MACH Z STD/TECH PLUS

**BOMBARDIER**  
*RECREATIONAL PRODUCTS*



Legal deposit:

National Library of Quebec

4<sup>th</sup> trimester 2000

National Library of Canada 2000

All rights reserved. No parts of this manual may be reproduced in any form without the prior written permission of Bombardier Inc.

©Bombardier Inc. 2000

Technical Publications

Bombardier Inc.

Valcourt (Quebec) Canada

Printed in Canada

®\*Registered trademarks of Bombardier Inc.

This document contains the trademarks of the following companies:

Crest® is a trademark of Crest Industries Inc.

Kimtowels® is a trademark of Kimberly-Clark

Loctite® is a trademark of Loctite Corporation

Molykote® is a trademark of Dow Corning Corporation

Silastic® is a trademark of Dow Corning Corporation

Snap-on® is a trademark of Snap-on Tools Corporation

Versilube® is a trademark of General Electric Company

Supertanium™ is a trademark of Premier Industrial Corporation

---

# TABLE OF CONTENTS

---

SECTION	SUBSECTION	PAGE
SAFETY NOTICE .....		III
WHAT'S NEW .....		IV
INTRODUCTION .....		V
<b>01</b>	<b>SERVICE TOOLS AND SERVICE PRODUCTS</b>	
	01 – Service tools.....	01-01-1
	02 – Service products.....	01-02-1
<b>02</b>	<b>LUBRICATION AND MAINTENANCE</b>	
	01 – Periodic maintenance chart .....	02-01-1
<b>03</b>	<b>TROUBLESHOOTING</b>	
	01 – Table of contents.....	03-01-1
	02 – Engine .....	03-02-1
	03 – Fuel and oil systems.....	03-03-1
	04 – Transmission and brake systems .....	03-04-1
	05 – Electrical system .....	03-05-1
	06 – Suspension and track .....	03-06-1
<b>04</b>	<b>ENGINE</b>	
	01 – Table of contents.....	04-01-1
	02 – 809 engine type.....	04-02-1
	03 – Leak test and engine dimension measurement .....	04-03-1
	04 – CDI system.....	04-04-1
	05 – Oil injection system.....	04-05-1
	06 – Liquid cooling system.....	04-06-1
	07 – Rewind starter.....	04-07-1
	08 – Carburetor and fuel pump .....	04-08-1
	09 – Fuel tank and throttle cable .....	04-09-1
<b>05</b>	<b>TRANSMISSION</b>	
	01 – Table of contents.....	05-01-1
	02 – Drive belt .....	05-02-1
	03 – Drive pulley.....	05-03-1
	04 – Driven pulley.....	05-04-1
	05 – Pulley distance and alignment.....	05-05-1
	06 – Brake .....	05-06-1
	07 – Chaincase .....	05-07-1
	08 – Drive chain.....	05-08-1
<b>06</b>	<b>ELECTRICAL</b>	
	01 – Table of contents.....	06-01-1
	02 – Ignition timing.....	06-02-1
	03 – Spark plugs.....	06-03-1
	04 – Battery .....	06-04-1
	05 – Electric starter .....	06-05-1
	06 – Testing procedure .....	06-06-1
<b>07</b>	<b>REAR SUSPENSION</b>	
	01 – Table of contents.....	07-01-1
	02 – SC-10 II suspension.....	07-02-1
	03 – Drive axle.....	07-03-1
	04 – Track.....	07-04-1

---

# TABLE OF CONTENTS

---

SECTION	SUBSECTION	PAGE
08	STEERING/ FRONT SUSPENSION	
	01 – Table of contents .....	08-01-1
	02 – Steering system .....	08-02-1
	03 – Suspension and ski system .....	08-03-1
09	BODY/FRAME	
	01 – Table of contents .....	09-01-1
	02 – Body .....	09-02-1
	03 – Frame .....	09-03-1
10	TECHNICAL DATA	
	01 – SI metric information guide .....	10-01-1
	02 – Engines .....	10-02-1
	03 – Vehicles .....	10-03-1
	04 – Technical data legends .....	10-04-1
11	WIRING DIAGRAMS	
	01 – Wiring diagrams .....	11-01-1

# SAFETY NOTICE

This manual has been prepared as a guide to correctly service and repair some 2001 Ski-Doo snowmobiles. See model list below.

This edition was primarily published to be used by snowmobile mechanical technicians who are already familiar with all service procedures relating to Bombardier made snowmobiles. Mechanical technicians should attend continuous training courses given by Bombardier Training Dept.

Please note that the instructions will apply only if proper hand tools and special service tools are used.

This *Shop Manual* uses technical terms which may be slightly different from the ones used in the *Parts Catalog*.

It is understood that this manual may be translated into another language. In the event of any discrepancy, the English version shall prevail.

The content depicts parts and/or procedures applicable to the particular product at time of writing *Service* and *Warranty Bulletins* may be published to update the content of this manual. Make sure to read and understand these.

In addition, the sole purpose of the illustrations throughout the manual, is to assist identification of the general configuration of the parts. They are not to be interpreted as technical drawings or exact replicas of the parts.

The use of Bombardier parts is most strongly recommended when considering replacement of any component. Dealer and/or distributor assistance should be sought in case of doubt.

The engines and the corresponding components identified in this document should not be utilized on product(s) other than those mentioned in this document.

Torque wrench tightening specifications must be strictly adhered to. Locking devices (ex.: locking tab, self-locking fasteners, etc.) must be installed or replaced with new ones. If the efficiency of a locking device is impaired, it must be renewed.

This manual emphasizes particular information denoted by the wording and symbols:

## **WARNING**

Identifies an instruction which, if not followed, could cause serious personal injury including possibility of death.

**CAUTION:** Denotes an instruction which, if not followed, could severely damage vehicle components.

**NOTE:** Indicates supplementary information needed to fully complete an instruction.

Although the mere reading of such information does not eliminate the hazard, your understanding of the information will promote its correct use. Always use common shop safety practice.

Bombardier Inc. disclaims liability for all damages and/or injuries resulting from the improper use of the contents. We strongly recommend that any services be carried out and/or verified by a highly skilled professional mechanic. It is understood that certain modifications may render use of the vehicle illegal under existing federal, provincial and state regulations.

---

## WHAT'S NEW

---

# WHAT'S NEW

## INTRODUCTION

- Procedure to change self-locking fasteners.

## CARBURETOR AND FUEL PUMP

- Procedure to check DPM manifold for leaks.
- New pilot screw adjustment on GT SE.

## STEERING SYSTEM

- Ski alignment specifications.

## INTRODUCTION

This *Shop Manual Volume 2* covers the following Bombardier made 2001 snowmobiles:

MODELS	MODEL NUMBER
MACH* Z STD (BLACK) (Canada) .....	1656
MACH* Z STD (BLACK) (U.S.) .....	1657
MACH* Z STD (YELLOW) (Canada) .....	1658
MACH* Z STD (YELLOW) (U.S.) .....	1659
MACH* Z STD (YELLOW) (Europe) .....	1660
MACH* Z TECH PLUS (YELLOW) (Canada) .....	1661
MACH* Z TECH PLUS (YELLOW) (U.S.) .....	1662
MACH* Z TECH PLUS (BLACK) (Canada) .....	1819
MACH* Z TECH PLUS (BLACK) (U.S.) .....	1820
GRAND TOURING* SE (BLACK) (Canada and U.S.) .....	1786
GRAND TOURING* SE (BLACK) (Europe) .....	1787
GRAND TOURING* SE (BLUE) (Canada and U.S.) .....	1788

\*Trademarks of Bombardier Inc.

### Grand Touring SE and Mach Z STD/TECH PLUS


These are CK3 Series models.



TYPICAL — CK3 SERIES

## VEHICLE IDENTIFICATION NUMBER

### Vehicle Identification Number Location

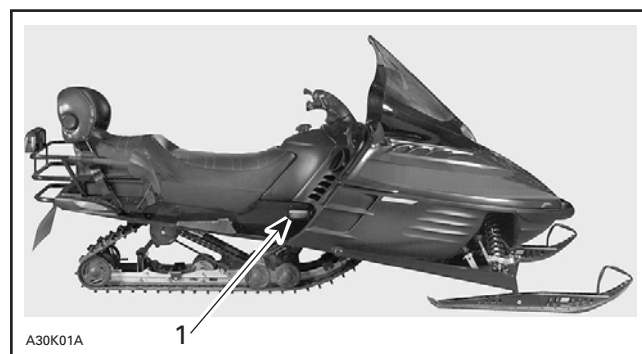

TYPICAL

1. Vehicle identification number

### Identification Number Meaning

2 B P S 1 5 9 2 9 Y 1 0 0 0 0 1											
Model number						Serial number					
						Model year: y = 2000					
						1 = 2001					
						2 = 2002					
						etc.					


A00A6EA



# INTRODUCTION

## ENGINE SERIAL NUMBER

### Engine Serial Number Location

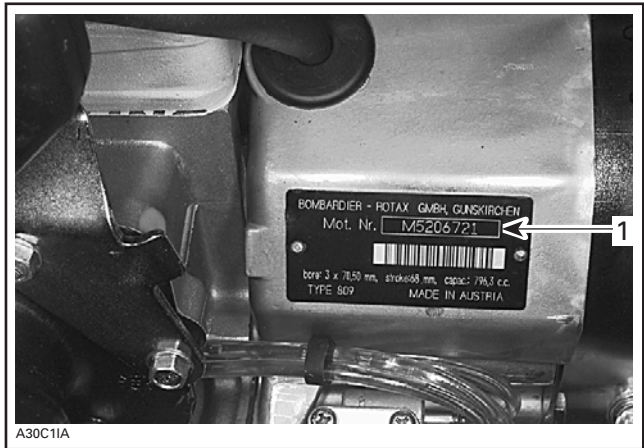

1. Engine serial number

## LIST OF ABBREVIATIONS USED IN THIS MANUAL

A	ampere
amp	ampere
A•h	ampere-hour
AC	alternate current
ACM	acceleration and control modulator
ADSA	advanced direct shock action
BDC	bottom dead center
BTDC	before top dead center
°C	degree Celsius
cc	cubic centimeter
CDI	capacitor discharge ignition
CTR	center
cm	centimeter
cm²	square centimeter
cm³	cubic centimeter
DC	direct current
DESS	digitally encoded security system
DPM	digital performance management
°F	degree Fahrenheit
FC	fan cooled
fl. oz	fluid ounce
ft	foot

GRD	ground
H.A.C.	high altitude compensator
hal.	halogen
HI	high
imp. oz	imperial ounce
in	inch
in²	square inch
in³	cubic inch
k	kilo (thousand)
kg	kilogram
km/h	kilometer per hour
kPa	Kilopascal
L	liter
lb	pound
lbf	pound (force)
lbf/in²	pound per square inch
LH	left hand
LO	low
LT	long track
m	meter
MAG	magneto
Max.	maximum
Min.	minimum
mL	milliliter
mm	millimeter
M.E.	millennium edition
MPEM	multi-purpose electronic module
MPH	mile per hour
N	newton
N.A.	not applicable
no.	number
00.0	continuity
O.L	open line (open circuit)
O.D.	outside diameter
OPT	optional
oz	ounce
P/N	part number
PSI	pound per square inch

PTO	power take off
R	rectangular
RH	right hand
RAVE	Rotax adjustable variable exhaust
RER	Rotax electronic reverse
RPM	revolution per minute
RMS	root mean square
RRIM	reinforced reaction injection molding
Sp. Gr.	specific gravity
ST	semi-trapez
TDC	top dead center
TRA	total range adjustable
U.S. oz	ounce (United States)
V	volt
Vac	volt (alternative current)

## ARRANGEMENT OF THE MANUAL

The manual is divided into 11 major sections:

**01 SERVICE TOOLS AND SERVICE PRODUCTS**

**02 LUBRICATION AND MAINTENANCE**

**03 TROUBLESHOOTING**

**04 ENGINE**

**05 TRANSMISSION**

**06 ELECTRICAL**

**07 REAR SUSPENSION**

**08 STEERING/FRONT SUSPENSION**

**09 BODY/FRAME**

**10 TECHNICAL DATA**

**11 WIRING DIAGRAMS**

Each section is divided in various subsections, and again, each subsection has one or more division.

# INTRODUCTION

This *Shop Manual* uses technical terms which may be slightly different from the ones in the parts catalog.

## TYPICAL PAGE

Page heading  
— indicates section  
and subsection  
detailed.

Subsection title indicates beginning of the subsection.

Italic subtitle above exploded view indicate pertaining models.

Exploded view assists you in identifying parts and related positions.

Drop represents a liquid product to be applied to a surface. In this case Loctite 271 to screw threads.

— Bold face number indicates special procedure concerning this part.

- Dotted box contains parts of a particular model in this case the short track models only.

Illustration number  
for publishing –  
process.

Tightening torque nearby fastener. In this case, nut must be torqued to 4 N•m or 35 lbf•in.

**CAUTION:** Pay attention to torque specifications. Some of these are in lbf·in instead of lbf·ft. Use appropriate torque wrench.

Page numbering system:  
07: REAR SUSPENSION section  
01: SUSPENSION SC-10 SPORT,  
TOURING AND MOUNTAIN subsection  
1: First page of this subsection



# INTRODUCTION

## GENERAL INFORMATION

The information and component/system descriptions contained in this manual are correct at time of publication. Bombardier Inc. however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured.

Due to late changes, it may have some differences between the manufactured product and the description and/or specifications in this document.

Bombardier Inc. reserves the right at any time to discontinue or change specifications, designs, features, models or equipment without incurring obligation.

## USEFUL PUBLICATIONS

Refer to *Parts Catalogs* to order the right parts.

PARTS CATALOG	
MODELS	P/N
MACH Z	484 400 173
GRAND TOURING SE	484 400 183

Use *Specification Booklet* to find rapidly the right specs.

1997-2001 SPECIFICATION BOOKLET (P/N 484 300 198).

## ILLUSTRATIONS AND PROCEDURES

Illustrations and photos show the typical construction of the different assemblies and, in all cases, may not reproduce the full detail or exact shape of the parts shown. However, they represent parts which have the same or a similar function.

**CAUTION:** Most components of those vehicles are built with parts dimensioned in the metric system. Most fasteners are metric and must not be replaced by customary fasteners or vice versa. Mismatched or incorrect fasteners could cause damage to the vehicle or possible personal injury.

As many of the procedures in this manual are interrelated, we suggest, that before undertaking any task, you read and thoroughly understand the entire section or subsection in which the procedure is contained.

A number of procedures throughout the book require the use of special tools. Before commencing any procedure, be sure that you have on hand all the tools required, or approved equivalents.

The use of RIGHT and LEFT indications in the text, always refers to driving position (when sitting on vehicle).



TYPICAL

- 1. Left
- 2. Right

## SELF-LOCKING FASTENERS PROCEDURE

The following describes the most common application procedures when working with self-locking fasteners.

Use a metal brush or a screwtap to clean the hole properly then use a solvent (Methyl-Chloride), let act during 30 minutes and wipe off. The solvent utilization is to ensure the adhesive works properly.


## LOCTITE APPLICATION PROCEDURE

The following describes the most common application procedures when working with Loctite products.

**NOTE:** Always use proper strength Loctite product as recommended in this *Shop Manual*.

## THREADLOCKER


### Uncovered Holes (bolts and nuts)

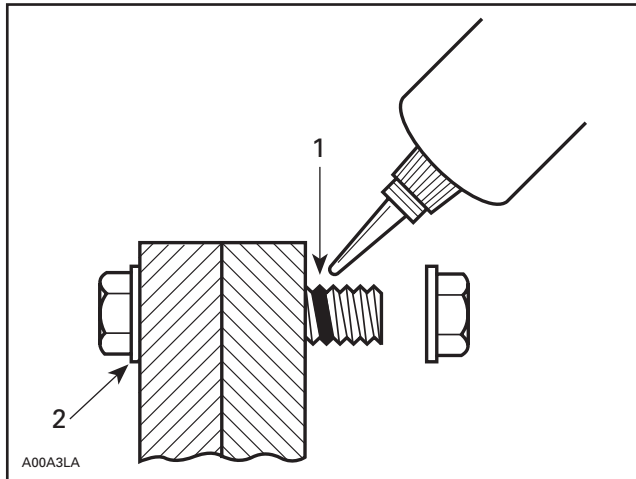

1. Apply here
2. Do not apply

1. Clean threads (bolt and nut) with solvent.
2. Apply Loctite Primer N (P/N 293 800 041) on threads and allow to dry.
3. Choose proper strength Loctite threadlocker.
4. Fit bolt in the hole.
5. Apply a few drops of threadlocker at proposed tightened nut engagement area.
6. Position nut and tighten as required.


### Blind Holes

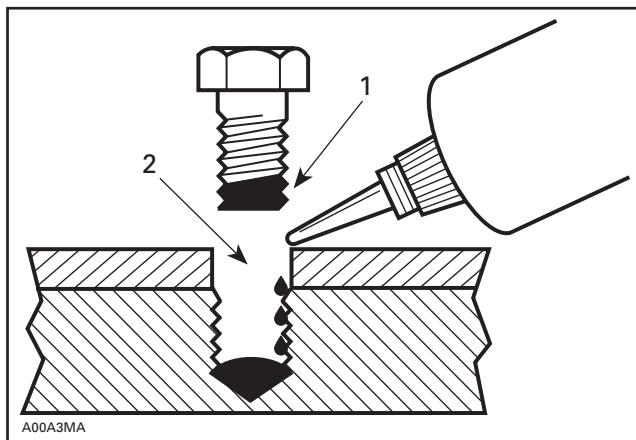

1. On threads
2. On threads and at the bottom of hole

1. Clean threads (bolt and hole) with solvent.
2. Apply Loctite Primer N (P/N 293 800 041) on threads (bolt and nut) and allow to dry for 30 seconds.
3. Choose proper strength Loctite threadlocker.
4. Apply several drops along the threaded hole and at the bottom of the hole.
5. Apply several drops on bolt threads.
6. Tighten as required.

### Stud in Blind Holes

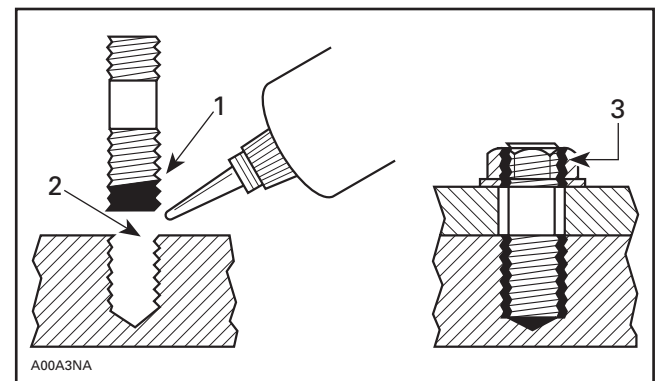


1. On threads
2. On threads and in the hole
3. Onto nut threads

1. Clean threads (stud and hole) with solvent.
2. Apply Loctite Primer N (P/N 293 800 041) on threads and allow to dry.
3. Put several drops of proper strength Loctite threadlocker on female threads and in hole.
4. Apply several drops of proper strength Loctite on stud threads.
5. Install stud.
6. Install cover, etc.
7. Apply drops of proper strength Loctite on uncovered threads.
8. Tighten nuts as required.

# INTRODUCTION

## Preassembled Parts

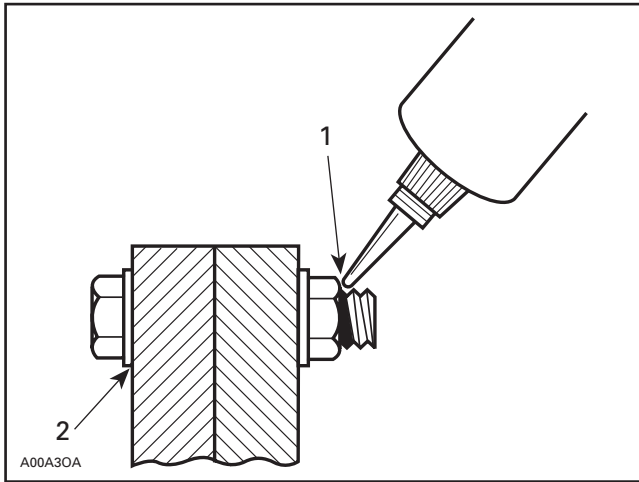


1. Apply here
2. Do not apply

1. Clean bolts and nuts with solvent.
2. Assemble components.
3. Tighten nuts.
4. Apply drops of proper strength Loctite on bolt/nut contact surfaces.
5. Avoid touching metal with tip of flask.

**NOTE:** For preventive maintenance on existing equipment, retighten nuts and apply proper strength Loctite on bolt/nut contact surfaces.

## Adjusting Screw

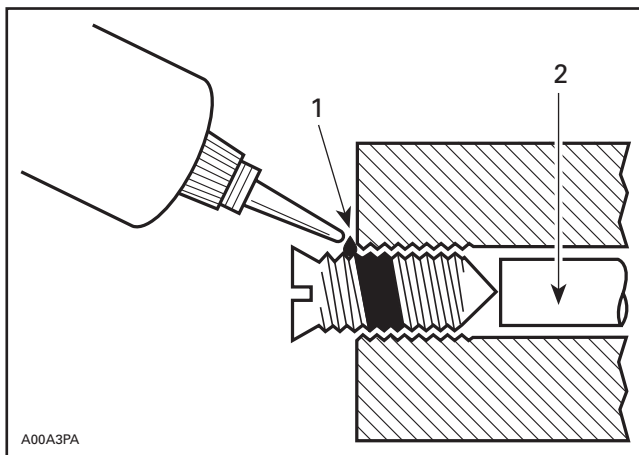


1. Apply here
2. Plunger

1. Adjust screw to proper setting.
2. Apply drops of proper strength Loctite thread-locker on screw/body contact surfaces.
3. Avoid touching metal with tip of flask.

**NOTE:** If it is difficult to readjust, heat screw with a soldering iron (232°C (450°F)).

## STRIPPED THREAD REPAIR

### Stripped Threads

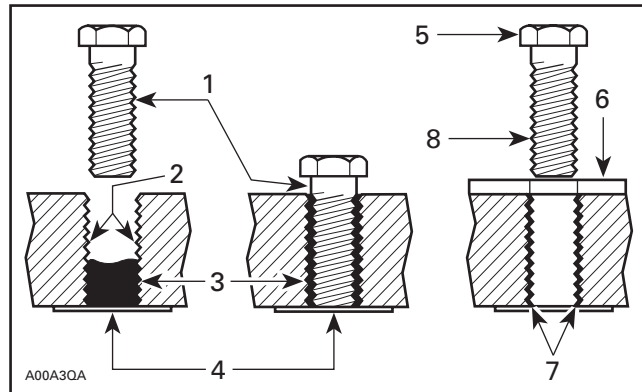

1. Release agent
2. Stripped threads
3. Form-A-Thread
4. Tape
5. Cleaned bolt
6. Plate
7. New threads
8. Threadlocker

### Standard Thread Repair

1. Follow instructions on Loctite FORM-A-THREAD 81668 package.
2. If a plate is used to align bolt:
  - a. Apply release agent on mating surfaces.
  - b. Put waxed paper or similar film on the surfaces.
3. Twist bolt when inserting it to improve thread conformation.

**NOTE:** NOT intended for engine stud repairs.

### Repair of Small Holes/Fine Threads

Option 1: Enlarge damaged hole, then follow **Standard Thread Repair** procedure.

Option 2: Apply FORM-A-THREAD on the screw and insert in damaged hole.


### Permanent Stud Installation (light duty)

1. Use a stud or thread on desired length.
2. DO NOT apply release agent on stud.
3. Do a **Standard Thread Repair**.
4. Allow to cure for 30 minutes.
5. Assemble.



## GASKET COMPOUND

### All Parts

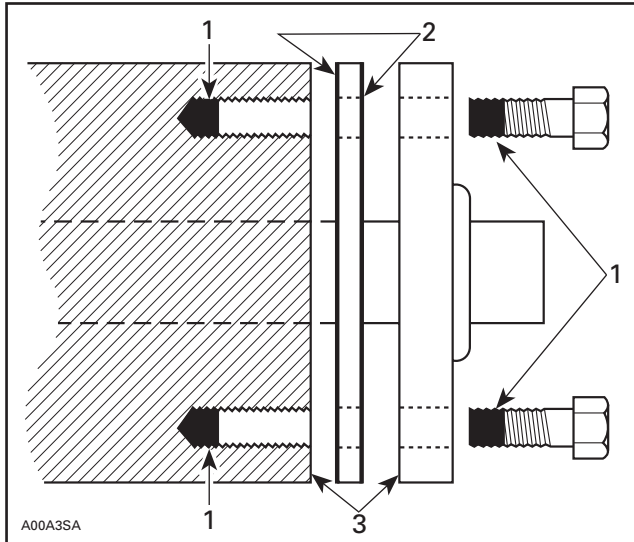

1. Proper strength Loctite
2. Loctite Primer N (P/N 413 708 100) and Gasket Eliminator 515 (P/N 413 702 700) on both sides of gasket
3. Loctite Primer N only

1. Remove old gasket and other contaminants with Loctite Chisel remover (P/N 413 708 500). Use a mechanical mean if necessary.

**NOTE:** Avoid grinding.

2. Clean both mating surfaces with solvent.
3. Spray Loctite Primer N on both mating surfaces and on both sides of gasket. Allow to dry 1 or 2 minutes.
4. Apply GASKET ELIMINATOR 515 (P/N 413 702 700) on both sides of gasket, using a clean applicator.
5. Place gasket on mating surfaces and assemble immediately.


**NOTE:** If the cover is bolted to blind holes (above), apply proper strength Loctite in the hole and on threads. Tighten.

If holes are sunken, apply proper strength Loctite on bolt threads.

6. Tighten as usual.

## MOUNTING ON SHAFT

### Mounting with a Press

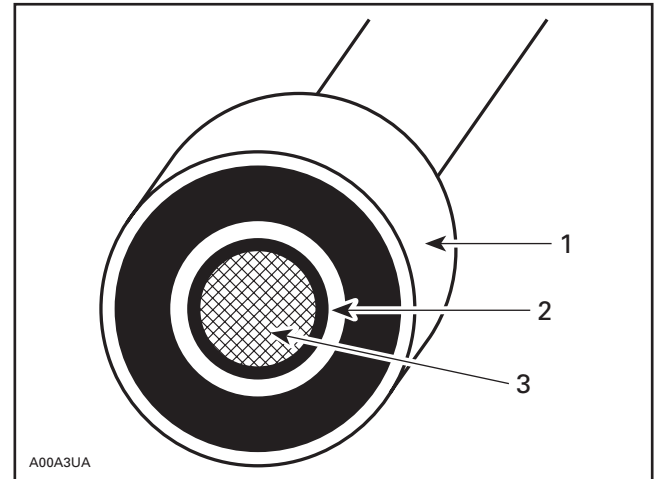

1. Bearing
2. Proper strength Loctite
3. Shaft

### Standard

1. Clean shaft external part and element internal part.
2. Apply a strip of proper strength Loctite on shaft circumference at insert or engagement point.

**NOTE:** Retaining compound is always forced out when applied on shaft.

3. DO NOT use anti-seize Loctite or any similar product.
4. No curing period is required.

### Mounting in Tandem


1. Apply retaining compound on internal element bore.
2. Continue to assemble as shown above.



# INTRODUCTION

## CASE-IN COMPONENTS

### Metallic Gaskets

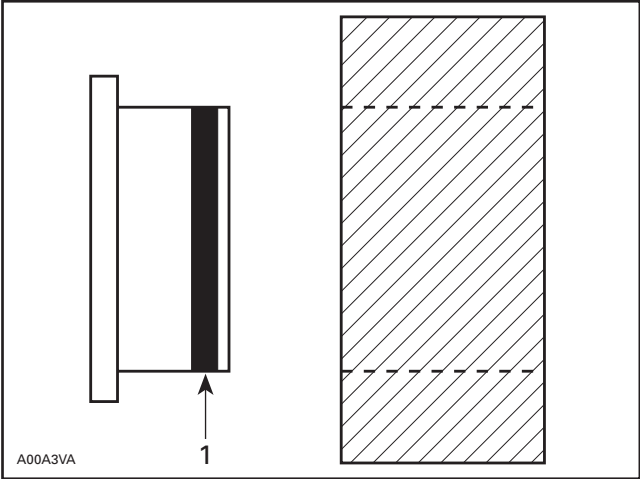

1. *Proper strength Loctite*

1. Clean inner housing diameter and outer gasket diameter.
  2. Spray housing and gasket with Loctite Primer N (P/N 293 800 041).
  3. Apply a strip of proper strength Loctite on leading edge of outer metallic gasket diameter.
- NOTE:** Any Loctite product can be used here. A low strength liquid is recommended as normal strength and gap are required.
4. Install according to standard procedure.
  5. Wipe off surplus.
  6. Allow it to cure for 30 minutes.

**NOTE:** Normally used on worn-out housings to prevent leaking or sliding.

It is generally not necessary to remove gasket compound applied on outer gasket diameter.

## TIGHTENING TORQUES

Tighten fasteners to torque mentioned in exploded views and text. When they are not specified refer to following table. Bold face size (e.g. **M4**) indicates nominal value (mean value).

N•m	FASTENER SIZE (8.8 GRADE)	Lbf•in
2	<b>M4</b>	18
3	M4	27
4	<b>M5</b>	35
8	M6	71
9	M6	80
10	<b>M6</b>	89
11	<b>M6</b>	97
12	<b>M6</b>	106

N•m	FASTENER SIZE (8.8 GRADE)	Lbf•ft
21	M8	15
22	M8	16
23	<b>M8</b>	17
24	M8	18
25	M8	18
43	M10	32
44	M10	32
45	M10	33
46	M10	34
47	M10	35
48	<b>M10</b>	35
49	M10	36
50	M10	37
51	M10	38
52	M10	38
53	M10	39
76	M12	56
77	M12	57
78	M12	58
79	M12	58
80	<b>M12</b>	59
81	M12	60
82	M12	60
83	M12	61
84	M12	62
121	M14	89
122	M14	90
123	M14	91

N•m	FASTENER SIZE (8.8 GRADE)	Lbf•ft
124	M14	91
125	M14	92
126	M14	93
127	M14	94
128	M14	94
129	M14	95
130	M14	96
131	M14	97
132	M14	97
133	M14	98
134	M14	99
135	<b>M14</b>	100
136	M14	100
137	M14	101
138	M14	102
139	M14	103
140	M14	103
141	M14	104
142	M14	105
143	M14	105
144	M14	106
145	M14	107
146	M14	108
147	M14	108
148	M14	109
149	M14	110
150	M14	111

*We would be pleased if you could communicate to Bombardier any suggestions you may have concerning our publications.*

## Bombardier SERVICE PUBLICATIONS REPORT

Publication title and year \_\_\_\_\_ Page \_\_\_\_\_

Machine \_\_\_\_\_ Report of error ☐ Suggestion ☐

---

---

---

---

---

---

Name \_\_\_\_\_

Address \_\_\_\_\_

City and State/Prov. \_\_\_\_\_ Date \_\_\_\_\_

Zip code/Postal code \_\_\_\_\_

---

## Bombardier SERVICE PUBLICATIONS REPORT

Publication title and year \_\_\_\_\_ Page \_\_\_\_\_

Machine \_\_\_\_\_ Report of error ☐ Suggestion ☐

---

---

---

---

---

---

Name \_\_\_\_\_

Address \_\_\_\_\_

City and State/Prov. \_\_\_\_\_ Date \_\_\_\_\_

Zip code/Postal code \_\_\_\_\_

---

## Bombardier SERVICE PUBLICATIONS REPORT

Publication title and year \_\_\_\_\_ Page \_\_\_\_\_

Machine \_\_\_\_\_ Report of error ☐ Suggestion ☐

---

---

---

---

---

---

Name \_\_\_\_\_

Address \_\_\_\_\_

City and State/Prov. \_\_\_\_\_ Date \_\_\_\_\_

Zip code/Postal code \_\_\_\_\_



AFFIX  
PROPER  
POSTAGE



**BOMBARDIER**  
*RECREATIONAL PRODUCTS*

Technical Publications  
After Sales Service  
565 de la Montagne Street  
Valcourt, Quebec, Canada J0E 2L0

AFFIX  
PROPER  
POSTAGE



**BOMBARDIER**  
*RECREATIONAL PRODUCTS*

Technical Publications  
After Sales Service  
565 de la Montagne Street  
Valcourt, Quebec, Canada J0E 2L0

AFFIX  
PROPER  
POSTAGE



**BOMBARDIER**  
*RECREATIONAL PRODUCTS*

Technical Publications  
After Sales Service  
565 de la Montagne Street  
Valcourt, Quebec, Canada J0E 2L0